

PURE

Sensia 200D Connect



Pure Warranty Statement for Australia

This statement replaces any reference to warranty which may be contained elsewhere within this manual.

What do you need to do now?

Option 1: You can register your purchase on-line at <https://www.pure.com/au/register/register.asp>

Option 2: Or you can do nothing other than keep your proof of purchase as evidence of your purchase date. This proof of purchase would need to be presented if warranty service was ever required.

If you have any questions about your warranty you can call us toll free 1800 988 268

What's covered by this warranty?

- Pure agrees to refund, repair or replace, at your election, without charge to you, any part found to be defective during the warranty period.
- If equipment has been used according to its accompanying instruction manual and is used in a domestic situation, a two year warranty period applies (excludes rechargeable ChargePAK where fitted. A one year warranty period applies to all ChargePAKs).

How do you make your claim?

Call 1800 988 268 for instructions on how to return your Pure product for warranty service or go to <http://support.pure.com/au/> and complete the contact us form.

What's NOT covered by this warranty?

Under this express warranty Pure will not be liable for loss or damage of any kind whatsoever, whether direct, indirect, incidental, consequential or otherwise.


- Replacement of parts due to normal wear and tear
- Products with serial number defacement, modification or removal
- Water damage or corrosion caused by dampness
- Any damage or deterioration due to shipment
- Any product which has been subjected to misuse, abuse or accident

Australian consumers — The benefits to the consumer given by this express warranty are in addition to other rights and remedies of the consumer under a law in relation to the goods or services to which this warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Pure is distributed and supported in Australia by PIONEER ELECTRONICS AUSTRALIA PTY LTD, 5 ARCO LANE, HEATHERTON, VICTORIA, 3202.

Sensia 200D Connect

Thank you for choosing Sensia 200D Connect. This manual will get you up and running in no time, and explains how to make the most of your Sensia 200D Connect. We're constantly improving and adding new features to our products. To take advantage of any enhancements made since your product was shipped, please update your software when prompted and visit support.pure.com/au where you can download the very latest version of this user guide in PDF format.

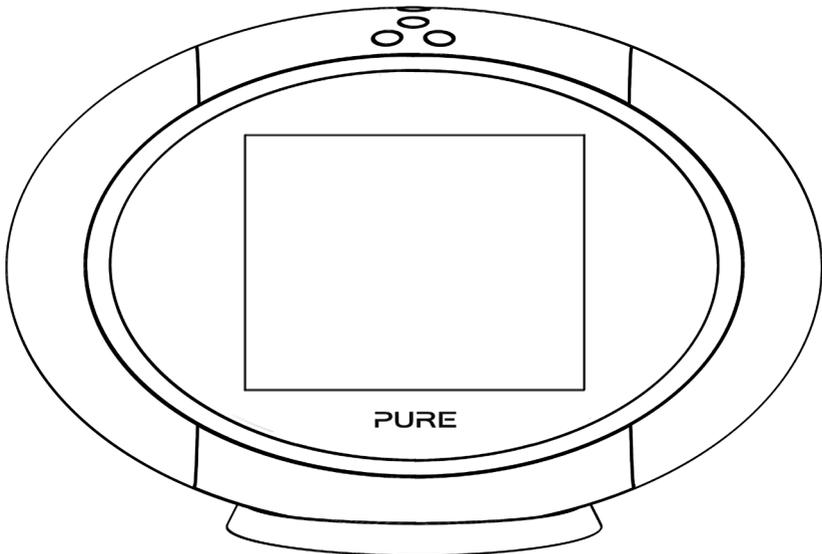

Safety Instructions



1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug the apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. Do not install this equipment in a confined or built-in space such as a bookcase or similar unit. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, tablecloths, curtains etc.
14. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus should not be exposed to dripping or splashing. Objects filled with liquids, such as vases, should not be placed on the apparatus.
15. **WARNING:** The direct plug-in adapter is used to disconnect the device and should remain readily operable.
16. **WARNING:** The remote batteries should not be exposed to excessive heat such as sunshine, fire or the like.
17. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
18. Separation distance of at least 20cm must be maintained between the antenna of the product and all persons.
19. The power rating marking is located on the rear of the main unit.



Damage to hearing can occur with consistent exposure to high volume when using headphones. Always check the volume level before inserting headphones into your ears.

Use of headphones while operating a vehicle is not recommended and is illegal in some areas. Stop listening to your Move if you find it distracting while operating any type of vehicle or performing any other activity that requires your full attention.

Contents

4 Getting started

- 4 Introduction
- 4 Network setup
- 4 Touchscreen interface
- 5 Controls and connectors
- 6 Control buttons
- 6 Remote Control
- 7 Switching on Sensia for the first time

8 Connecting Sensia to your network

- 8 Preparing Sensia for Wi-Fi Setup
- 8 Using the Wi-Fi wizard

9 Changing Sensia viewing modes

- 9 Browse mode
- 10 Play mode
- 11 View mode

12 Listening to digital or FM radio

13 Listening to Pure Connect content

- 13 Selecting Internet radio
- 14 Listening to other internet content

15 Music streaming

- 15 Accessing Pure Connect's music streaming on Sensia

15 Pure Connect tagging service

16 Media Panel options

- 16 Displaying a slide show of your pictures from a media server
- 16 Adjusting slide show settings

17 Listening to audio from a USB memory stick

17 Streaming audio from a Media Server

18 Controlling audio playback

18 Recording radio programmes

- 18 Instant recordings
- 18 Timed recordings

19 Streaming from the Pure Connect app

- 19 Download the Pure Connect app
- 19 Selecting Sensia or other Caskeid compatible device in the Pure Connect app

20 Setting alarms and timers

- 20 Setting an alarm
- 20 Switching an alarm on/off
- 20 Skipping an alarm
- 20 Snoozing a sounding alarm
- 20 Cancelling a sounding alarm
- 21 Changing the snooze time
- 21 Setting the sleep timer

22 Basic settings

- 22 Autotune
- 22 Display
- 22 Language
- 22 Changing time/date settings
- 22 Changing the time format/time zone

23 Advanced settings

- 23 Manual Wi-Fi setup
- 23 Connecting Sensia to the Internet with an Ethernet cable
- 24 Static IP address configuration
- 24 Clearing network settings

25 Updating the software

- 25 Software update options
- 25 Updating the software using the network connection
- 25 Updating the software using the USB port
- 25 Displaying details on the current software version

26 Installing the ChargePAK F1

27 Technical specifications

Getting started

Introduction

You can use Sensia 200D Connect to:

- Listen to FM and digital radio.
- Listen to music streamed from the Pure Connect app.
- Act as a media player by streaming music from your PC or network.
- Access Pure Connect for thousands of internet radio stations, podcasts and more.
- Connect a USB memory stick to record live radio or play any stored music.
- Access Pure Connect's music streaming service.*
- Identify and purchase songs by using the Pure Connect tagging service.*
- View photos from your network or the internet.
- Monitor and update Facebook and Twitter.
- View a news feed or the weather.

Note: Sensia 200D Connect will be referred to as Sensia throughout the rest of this user guide.


Network setup

In order to access the Pure Connect service or use media streaming you will need to connect Sensia to your network. You can connect Sensia to your network using a wireless (Wi-Fi) or wired connection. If you want to use the wired connection method, you will need to plug the optional USB Ethernet adapter into the USB port on the back of Sensia. See page 8.

We recommend using the wireless connection method, which allows you to position your Sensia anywhere within range of your wireless connection. The wireless connection method also has the advantage of leaving the USB port free, enabling you to carry out USB and playback. See page 18.

Touchscreen interface

The touchscreen on Sensia features a number of common controls:

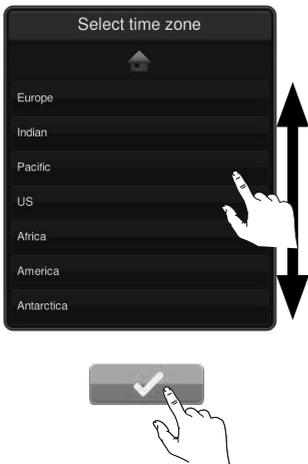

Options Lists




Use your finger to scroll up or down the list and tap the option that you want to choose.

Buttons


Tap the button with your finger to select the required option.

*Requires a Pure Connect subscription.

Controls and connectors

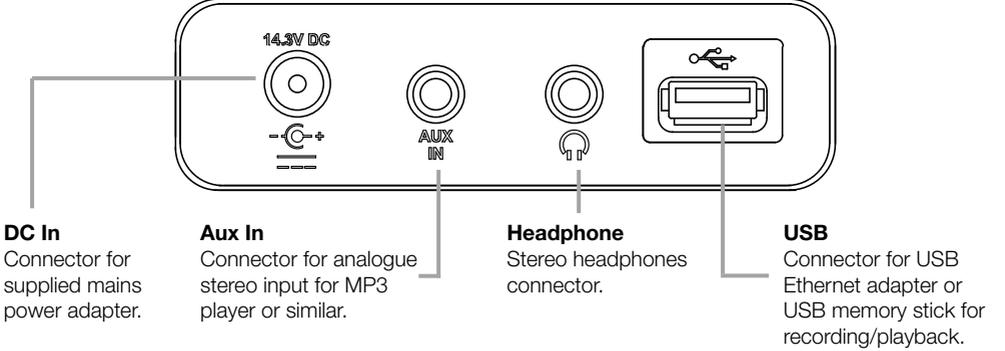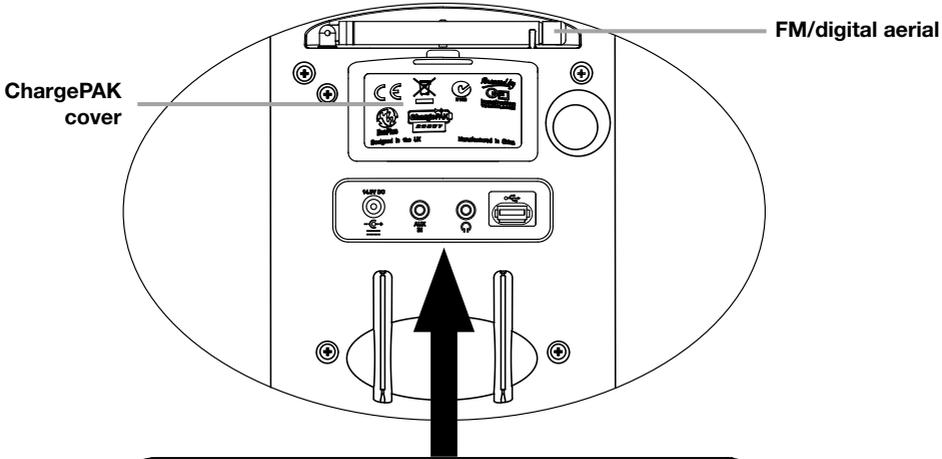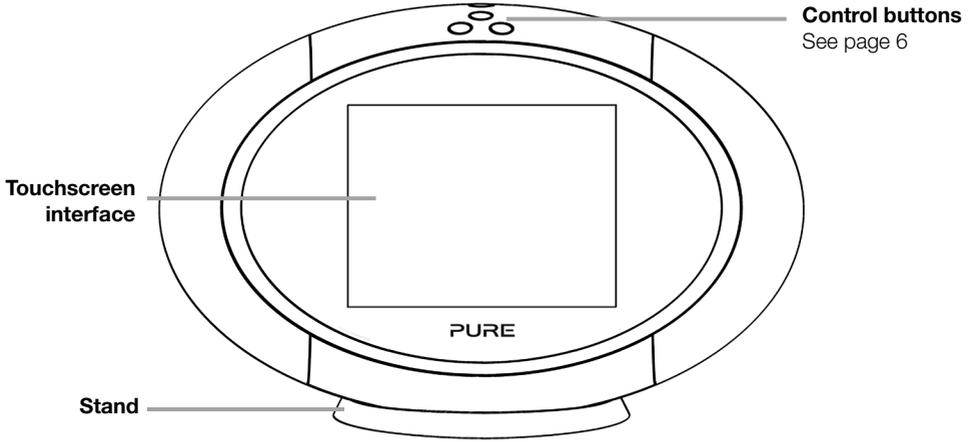


Control buttons

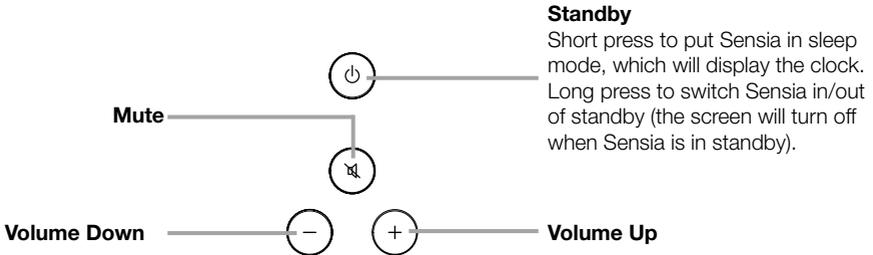

Standby
Short press to put Sensia in sleep mode, which will display the clock. Long press to switch Sensia in/out of standby (the screen will turn off when Sensia is in standby).

Remote Control

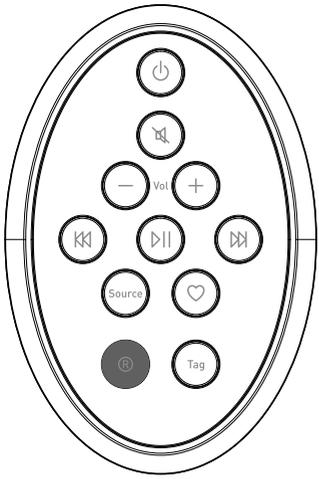

Standby
Short press to put Sensia in sleep mode, which will display the clock. Long press to switch Sensia in/out of standby (the screen will turn off when Sensia is in standby).

Mute
Press to mute volume.

- Vol +
Press to adjust volume up or down.

⏮ and ⏭
Skip to beginning of current track or go to previous or next track. Hold to rewind or fast forward.

⏸
Play/pause current track.

Source
Press to switch between Digital radio, Pure Connect, Network/USB media, FM radio and Auxiliary input.

♥ Favourites
Press to scroll through the stations in your favourites list for the selected radio source or your Pure Connect favourites.


Record
Press to record digital or internet radio to a USB memory stick. See page 18.

Tag
Press to use the Pure Connect tagging service to identify the song that is playing on a digital, FM or internet radio station. See page 15.

Switching on Sensia for the first time

Note: If you have a ChargePAK F1 rechargeable battery (sold separately) fit it now before plugging Sensia in. See page 26 for more information.

1. Connect the power lead into the power socket on the back of Sensia.
2. Plug the mains adapter into a live mains socket.
3. Sensia will switch on.

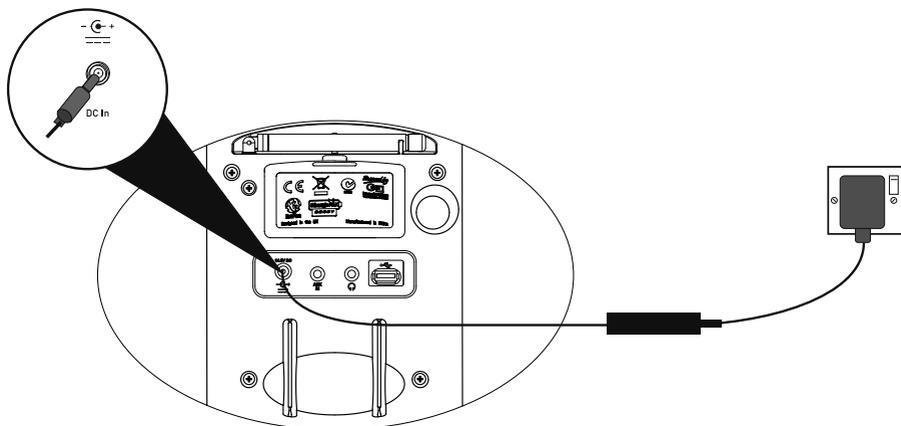

4. Tap the language that you want to use on the user interface.
5. Scroll down to the region you are in and tap to confirm the time zone for your region.
6. Scroll to your nearest city and tap to confirm the time zone for your city.
7. Tap an option to turn demo mode on/off. Demo mode is a screensaver that runs after two minutes of inactivity.
8. A Quick start guide will display, explaining how to use the view controls. Tap to continue.
9. Sensia will perform an autotune for digital stations and tune to a station when complete.
10. Sensia will display the Play view when the autotune has completed.

Connecting Sensia to your network

To listen to internet radio, connect to a media player, access Twitter, Weather, RSS Newsreader, Picasa and Facebook, you will need to connect Sensia to your network. We recommend using the Wi-Fi wizard to connect Sensia to your network. To setup your network manually see "Advanced settings" on page 23.

Note: The Wi-Fi wizard will automatically start if you have not set up your network settings and you select Pure Connect or Network/USB media as the audio source.



Preparing Sensia for Wi-Fi Setup

1. Tap the **Browse** button in the top right-hand corner of the screen to display the Browse view.
2. Position Sensia in range of your wireless network.
3. Tap **Settings** to display the Settings menu.
4. Tap **Network** to display the Network Settings menu.
5. Tap the icon next to Network type to display .
6. A summary of your wireless settings will display on Sensia.
7. To set up the wireless connection on Sensia using the wizard, tap the **Wizard** button and follow the steps outlined below.

Using the Wi-Fi wizard

1. Tap the name of the wireless network you want to connect to.
2. If your wireless network has security enabled, enter the security key using the on-screen keyboard.

Note: Your Wi-Fi key can normally be found on your router. If unsure, contact your Internet Service Provider.

Note: Your Wi-Fi key is case sensitive so you will need to enter it exactly as shown. To change between upper/lower case, tap the  key.


3. Wait while Sensia connects to your network.
4. Sensia will return to Browse view after connecting to your wireless network.



Changing Sensia viewing modes

Sensia has three main viewing modes, Browse, Play and View. The Browse mode allows you to select sources and browse for content, the Play mode shows the media panel and controls, the View mode maximises the media panel so that it takes up the whole screen. When you select a new source, Sensia defaults to the Play mode.

Browse mode

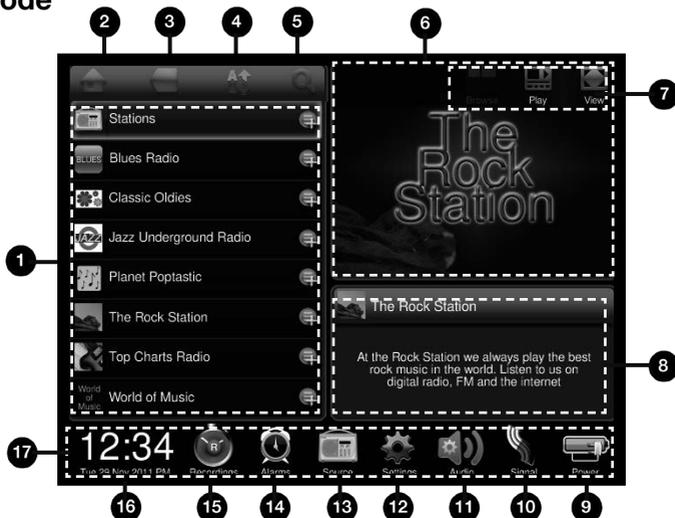

No.	Item	Description
1	List Panel	To navigate the list panel use your fingertip to scroll the list panel up or down and tap a station/track to begin listening.
2	Home	Tap the Home icon to go back to the home for the current source.
3	Back	Tap to return to the last view.
4	Quick Jump	Tap the Quick Jump icon to open the Quick Jump Box. Tap a letter to jump to the first station or track beginning with that letter.
5	Search	Tap the Search icon to search for stations or tracks.
6	Media Panel	Displays screens associated with the media playing, or other visuals of your choice such as photos, weather, Facebook, Twitter or a news feed. Slide left/right and/or up/down.
7	View controls	Tap these buttons to change the Sensia view (Browse mode, Play mode and View mode).
8	Information panel	Displays any data associated with the radio station or media file.
9	Power	Indicates if Sensia is connected to mains or if it is using a ChargePAK. If Sensia is using a ChargePAK, this indicates the amount of power left in the ChargePAK.
10	Signal Strength	Tap to display more information about the strength of the FM/Digital and Wi-Fi signal.
11	Audio	Tap to adjust the bass, treble and boost the auxiliary input volume.
12	Settings	Tap to view/change settings, including network, display and language.
13	Source	Tap to change the audio source.
14	Alarms	Tap to set the alarms and change the timer settings.
15	Recordings	Tap to set timed recordings.
16	Clock/Date	Tap to change the time and date settings on Sensia.
17	Icon Bar	Displays the time and icons that relate to the function being used.

Play mode

The controls in Play mode differ depending on the Source that has been selected.



No.	Item	Description
1	Icon Bar	Displays the time and icons that relate to the media being listened to.
2	Playback controls/ Recording space	Tap the icon of the control you want to use. These controls are only active if the media being played can be controlled, e.g. music files from a USB memory stick, Media Player or from Pure Connect's music streaming service, or Podcasts. If you are carrying out a timed recording to a USB memory stick, the amount of time left before the timed recording will end is indicated by the bar above the playback controls.
3	Media Panel	Displays screens associated with the media playing, or other visuals of your choice such as photos, weather, Facebook, Twitter or a news feed. Slide left/right and/or up/down.
4	Media Title	When playing music, displays the name of the track. When listening to a radio station, displays the name of the radio station.
5	View controls	Tap these buttons to change the view (Browse mode, Play mode and View mode).
6	Media Information	When playing music, displays information about the artist and album. When listening to a radio station displays information about the radio show.
7	Record	Tap to instantly record the live radio broadcast (digital and Internet radio only). See page 18.
8	Tag	Tap to use the Pure Connect tagging service to identify the name of the song that is being played. See page 15.
9	Favourites	Tap to add the radio station to your favourites. See page 14.
10	Clock/Date	Tap to change the time and date settings.

View mode



No.	Item	Description
1	View controls	Tap these buttons to change the view (Browse mode, Play mode, and View mode).
2	Media Panel	Displays any artwork associated with the radio station/music playing.

Listening to digital or FM radio

Digital radio

FM radio



Selecting digital/FM radio

1. Tap **Source** to display the Source menu.
2. Tap **Digital radio** or **FM radio**.

Changing digital stations

1. Tap **Browse** to display the Browse view.
2. Tap **Stations** to display a list of available digital radio stations.
3. Scroll to the radio station that you want to listen to and tap to tune into the station.

Changing FM stations

Tap the seek buttons  to automatically scan for the next station. The scan will stop when a station with a strong signal is found.

Alternatively, tap the manual tuning buttons  to manually scroll to the required frequency.



Saving your favourite stations

1. Tap the Play icon in the Media panel.
2. Tap the **Favourite** icon so that it highlights in red.
3. The radio station will be added to your favourites.

Selecting a favourite FM station

1. Tap **Source** to display the Source menu.
2. Tap **FM radio**.
3. Tap **Browse** to display the Browse view.
4. Tap the name of the radio station that you want to listen to in the list panel.

Selecting a favourite digital station

1. Tap **Source** to display the Source menu.
2. Tap **Digital radio**.
3. Tap **Browse** to display the Browse view.
4. Tap the **Digital radio favourites** folder.
5. Tap the name of the radio station that you want to listen to in the list panel.



Pure Connect allows you to explore thousands of radio stations, BBC listen again programmes, podcasts and Pure Sounds. To use Pure Connect, you will need to connect Sensia to your network. See page 8 for more information.

After connecting Sensia to your network, you can register your radio on the Pure Connect website. We recommend registering your radio as this allows you to manage your radio and Pure Connect favourites and access subscription services like Pure Connect's music streaming and Pure Connect's tagging service.

To register your Sensia:

1. Go to connect.pure.com on your PC or Mac.
2. Login with your account details or register for an account.
3. After logging in, click **Devices** to display your registration code. You will be asked to enter this code into your Sensia when you try to select Pure Connect as a source.

Pure Connect



Selecting Internet radio

1. Tap **Source** to display the Source menu.
2. Tap **Pure Connect**.

Searching for internet stations

1. Tap **Browse** to display the Browse view.
2. Tap the **Live radio** icon.
3. Tap the search icon  on the top right of the list panel. This will open the search options in the visual panel to the right. You can search for stations based on the criteria described below:

Name

Tap to search for a radio station by name. Type the name that you want to search for using the on-screen keyboard. Tap  to confirm.

Genre

Tap to search for a radio station based on the genre, e.g, station content. Tap the genre to confirm.

Language

Tap to search for a radio station based on its broadcasting language. Tap the language to confirm.

Country

Tap to search for a radio station based on the country that it is broadcasting from. Tap the country to confirm.

Quality

Tap to search for a radio station based on the audio quality. Tap the audio quality level that you want from one (low) to five (high).

4. Tap the **Search** button when you have finished specifying the search criteria. Any radio stations that have been found matching the specified criteria will display in the List Panel.

Using Quick Jump

Tap the Quick Jump icon  at the top left of the list panel to open the Quick Jump box. Tap a letter to jump to the first station or track beginning with that letter.

Saving your favourites stations/Pure Connect favourites

1. Tap the Favourite icon so that it highlights in red
2. The radio station will then be listed in the My favourites list. If you have multiple folders/devices in your Pure Connect account then your Pure Connect favourites will be saved under the folder associated with this Sensia (default name "Sensia 200D Connect")

Listening to other internet content

1. Tap **Source** to display the Source menu.
2. Tap **Pure Connect**.
3. Then tap on one of the following content types:

Listen again

Tap this option to access the BBC Listen Again service, which lets you catch up with any BBC radio shows that you might of missed. These archived radio programmes are available to listen to for a set period of time after the live broadcast.

Podcasts

Podcasts are pre-recorded audio shows on a wide variety of subjects such as comedy, arts, business and culture, for you to enjoy anytime.

Pure Sounds

Our library of sounds, from birdsong to cityscapes, rolling thunder to sports cars.

Pure Music (Pure Connect's music streaming service)

Pure Connect's music streaming service is a cloud-based on-demand subscription service that gives you instant access to millions of music tracks. You can only see this option when you have an active Pure Connect subscription. See the following page for more information.

Selecting a favourite internet station

1. Tap **Source** to display the Source menu.
2. Tap **Pure Connect**.
3. Tap the **My favourites** icon.
4. Tap the name of the folder that your favourite radio station is located in.
5. Tap the name of the radio station that you want to listen to in the list panel.

Pure Connect's music streaming service is a cloud-based on-demand subscription service that gives you instant access to millions of music tracks from one of the world's largest music catalogues covering almost every conceivable artist and genre. You can listen on our music streaming and radio systems, on an Apple or Android device running the Pure Connect app or on the Pure Connect website.

Pure Connect's music streaming is only available in certain countries. Please see <http://connect.pure.com> for details.

Accessing Pure Connect's music streaming on Sensia

1. Tap **Source** to display the Source menu.
2. Tap **Pure Connect**.
3. Tap **Pure Music**.
4. Tap one of the following icons:

My Tracks

Tap this icon to access the tracks that you have purchased from Pure Connect.

Catalogue

Tap this icon to browse or search the complete catalogue of Pure Connect's music streaming service on your Sensia.

By playlist

Tap this icon to listen to playlists created by you at connect.pure.com.

Pure Connect tagging service

The Pure Connect tagging service can be used to identify, bookmark and purchase tracks that are playing on a digital, FM or internet radio station. In addition to accessing your favourite music tracks, the Pure Connect tagging service also automatically back catalogues any music by similar artists that you might be interested in, allowing you to explore something completely new or rediscover forgotten favourites.

Note: To access your tagged tracks list, you will need to log in to your Pure Connect account at connect.pure.com.

1. Tap the **Tag** icon in the icon bar.
2. Sensia will identify the name of the song that is being played and allow you to buy it (or stream it if you have a subscription to Pure Connect's music streaming service).

Note: To use the Pure Connect tagging service, your Sensia will need to be connected to your network and you will need a Pure Connect account. See page 13 for more information on setting up a Pure Connect account.

Media Panel options

By default the Media Panel will display pictures related to the radio station you are listening to, or artwork related to the track being played. Alternatively you can choose to display a slide show of your own photographs from a media server or access internet content from Twitter, Weather, RSS Newsreader, Picasa or Facebook. Sensia needs to be connected to your network to access most of these options and you will need to be a member of Facebook, Twitter or Picasa if you want to use them.



Accessing Facebook, Twitter, Picasa and more

Swipe the Media Panel to the left or right until Twitter, Weather, RSS Newsreader, Picasa or Facebook is displayed then swipe up or down to choose which one you want to access.

Changing settings and getting help

To edit settings or the login details, tap the cog  icon in the bottom left hand corner of the Media Panel.

To view help information (where available) tap the help icon in the Media Panel.

Displaying a slide show of your pictures from a media server

You can view pictures on Sensia from a media server on your network. The pictures are displayed in the form of a slide show. To view pictures from a media server, carry out the following:

1. Tap the **Browse view** button.
2. Tap **Source**.
3. Tap **Network/USB media**.
4. Wait while Sensia searches for pictures on any available media servers on your network.
5. The list panel will display a list of the media servers that have been found on your network.
6. Tap the media server that you want to connect to.
7. Navigate to the area where the pictures are located.
8. Tap the play icon to start viewing the pictures.

Adjusting slide show settings

1. Tap the Media Panel.
2. Tap the cog icon  that appears in the bottom left hand corner.
3. Adjust the slide duration by tapping on the top and bottom of the photo timer to select the required number of seconds.
4. Tap  to save the slide show settings.

Listening to audio from a USB memory stick


Sensia can be used to play music by connecting a USB memory stick to the USB port on the back of Sensia. The audio file types that Sensia supports include WMA (Standard V9), AAC, MP3 and MP2. By default, Sensia looks for audio on your network if you have not connected a USB memory stick to the back of Sensia.

Network/USB media




To listen to tracks from a USB memory stick:

1. Tap **Source**.
2. Tap **Network/USB media**.
3. Wait while Sensia searches for available media servers.
4. The list panel will display a list of the media servers that have been found on your network.
5. The contents of your USB memory stick will be shown.
6. Navigate to your tracks and tap to play.

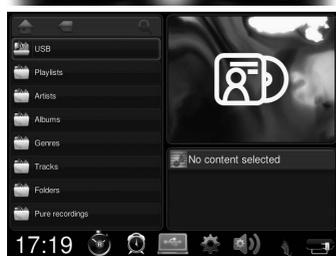

Streaming audio from a Media Server

You can stream music stored on your computer or on a UPnP-compatible Network Attached Storage device to Sensia. To stream music from your computer you will need to install media server software on it.

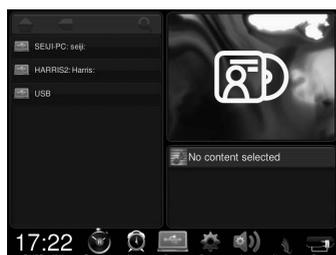

To listen to tracks from a media server, ensure that Sensia is in Browse view and carry out the following:

1. Tap **Source**.
2. Tap **Network/USB media**.
3. Wait while Sensia searches for available media servers.
4. The list panel will display a list of the media servers that have been found on your network.
5. Tap the server that you want to connect to.
6. Navigate to the area where the audio is located.

Controlling audio playback

If you are streaming audio on Sensia from either a USB memory stick or Media Server, you can control the playback using the remote or on Sensia as follows:

1. Tap the Play  icon in the information panel.
2. You will now be able to play, pause and skip tracks by clicking the respective icons.

Recording radio programmes

Sensia allows you to record live radio from Pure Connect and digital radio. You can either schedule recordings or record instantly. To record, you need to connect a USB memory stick to the USB port on the back of Sensia. The length of time that you can record depends on the amount of space available on your USB memory stick and the station that you are recording. A 2GB USB memory stick can record around 15 to 30 hours of digital or internet radio (based on the most common station data rates of 128kbps and 64kbps, respectively). If your USB memory stick runs out of space during a recording, Sensia will stop recording and display a message.



Instant recordings

To record instantly you will need to:

1. Tap **Source** to display the Source menu.
2. Tap **Pure Connect** or **Digital radio**.
3. Tune into the station that you want to record to and tap the **Record** icon in the icon bar or on the remote to begin recording.

Timed recordings

Note: To use timed recording, the radio station must be set up as a favourite. For more information on creating a favourite internet radio station, see page 14. For more information on creating a favourite digital station, see page 12.

1. Tap **Recordings** to display the Recordings menu and tap the icon of the timer that you want to set.
2. To record from a digital radio station, tap **Digital radio favourites** and select the station from the list. To record from an internet radio station, tap **Pure Connect favourites** and select the station from the list.
3. Tap the button at the top to toggle the recording on  or off .
4. Tap the **Occurrence** drop-down menu to specify how often the recording should occur.
5. Tap **Start** to specify the recording start time.
6. Adjust the recording start time by tapping on the top and bottom of the clock to flip through the minutes and hours.
7. Tap **End** to specify the recording end time.
8. Adjust the recording end time by tapping on the top and bottom of the clock to flip through the minutes and hours.
9. To exit and save the recording tap . To exit and discard all changes tap .

Note: When you are scheduling a recording, the amount of space that is currently available on your USB memory stick is indicated in black on the free space bar at the bottom of the Timed recording screen.



Streaming from the Pure Connect app

You can use the Pure Connect app to stream any music stored on your smartphone or tablet as well as all the content available on Pure Connect to Sensia and other Caskeid compatible devices (such as Jongo).

Note: Any devices that you want to use with the Pure Connect app will need to be on the same network.

Download the Pure Connect app

You can download the Pure Connect app on your smartphone or tablet from the Apple App Store or Google Play.



from the Apple App Store



from Google Play

Selecting Sensia or other Caskeid compatible device in the Pure Connect app


With the Pure Connect app you can stream to a single Caskeid device or multiple Caskeid devices simultaneously.

To start streaming content:

1. Select the content that you want to stream in the Pure Connect app.
2. Tap the  icon in the app player bar on your iOS or Android device to view a list of available devices on your network.
3. Tap the  icon next to the Caskeid compatible devices that you want to stream to.

Your selected content will start playing on the Caskeid devices that you selected.

See the help supplied with the app for more information on streaming to a Caskeid device.

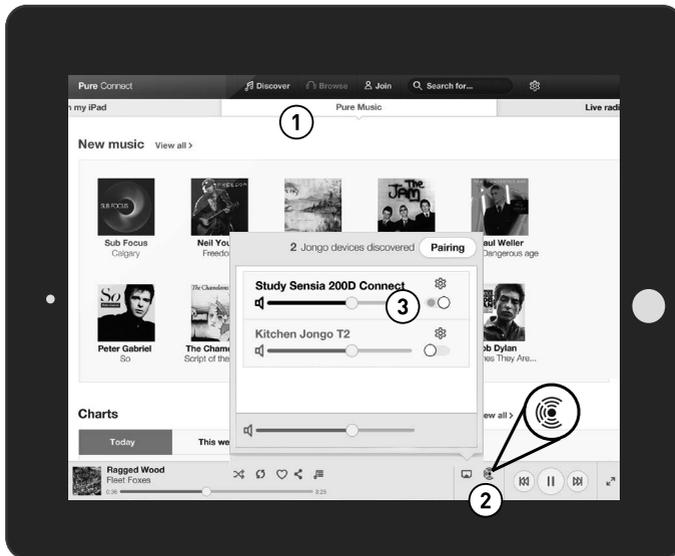

Pure Connect app


Setting alarms and timers



Setting an alarm

Sensia has two alarms. The alarms can tune into a digital or FM radio station, an internet radio station via Pure Connect or sound a tone.

1. Tap **Alarms** to display the Alarms menu.
2. Tap the Alarm 1 or Alarm 2 icon.
3. Tap to select the source you wish to play when the alarm is activated. For all sources except digital radio you can select from a favourite or the last item you listened to. For digital radio alarms, you can choose the last station you listened to, or any station from the list.
4. Tap the  button at the top to toggle the alarm on or off.
5. Tap the **Occurrence** drop-down menu to specify the alarm frequency.
6. Adjust the alarm time by tapping on the top and bottom of the clock to flip through minutes and hours.
7. To exit and save the alarm, tap . To exit and discard all changes tap .

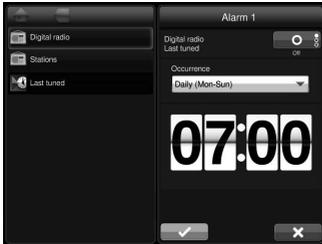

Note: Any alarms that are set will not go off if Sensia is being powered by a ChargePAK.

Switching an alarm on/off

1. Tap **Alarms** to display the Alarm icons.
2. Tap the Alarm 1 or Alarm 2 icon.
3. Tap the button at the top to toggle the alarm on  or off .
4. The alarm icon at the bottom of the screen will change to indicate that the alarm has been set.

Skipping an alarm

Tap the button at the top right of the screen until the skip icon  is shown to keep the alarm active but skip to the next occurrence of the alarm, e.g., If a public holiday is occurring the following day and you do not want the alarm to go off, you can tap **Skip** so that the alarm does not sound the next day and automatically resumes the following day.

Snoozing a sounding alarm

1. Tap **Snooze** to snooze a sounding alarm for the specified time (default 9 mins). See below for more information on changing the snooze time. The snooze icon will display on the screen.
2. The alarm will reactivate after the snooze time has expired.

Cancelling a sounding alarm

Tap the red button that appears on the screen to cancel the alarm and put Sensia in Sleep mode.

Tap the green button that appears on the screen to cancel the alarm and switch on Sensia.





Changing the snooze time

1. Tap Alarms to display the Alarms menu.
2. Tap the Snooze icon.
3. Adjust the snooze time by tapping on the top and bottom of the snooze timer to select the required number of minutes.
4. Tap  to start the timer.



Setting the sleep timer

You can use the sleep timer to put Sensia in sleep mode after a specified period of time.

Note: If Sensia is running on a ChargePAK, Sensia will turn off after the specified sleep time.

1. Tap **Alarms** to display the Alarm icons.
2. Tap the **Sleep** icon.
3. Adjust the sleep time by tapping on the top and bottom of the sleep timer to select the required number of minutes.
4. Tap  to save the settings.

Cancelling the sleep timer

Tap the  button to cancel the sleep timer.



Setting the kitchen timer


You can use the kitchen timer to make Sensia sound a tone after a specified period of time.

1. Tap **Alarms** to display the Alarms menu.
2. Tap the **Kitchen** icon.
3. Adjust the kitchen timer by tapping on the top and bottom of the kitchen timer to select the required number of minutes.
4. Tap  to start the timer.

Cancelling the kitchen timer

Tap the  button to cancel the kitchen timer.

Using the auxiliary input

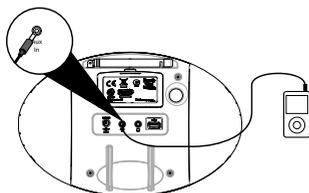


Connect an auxiliary device

Connect the line out or headphone socket of your auxiliary device to the Aux In socket on your Sensia using a suitable cable.

Selecting the auxiliary input

1. Tap **Source** to display the Source menu.
2. Tap **Auxiliary input**.
3. The Auxiliary input screen will display.

Basic settings

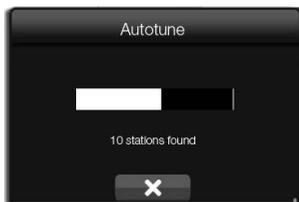


Autotune

You can use the autotune function to automatically scan for new digital radio stations and remove inactive ones.

Note: This setting is only visible when Digital Radio is selected as the audio source.

1. Tap **Settings** to display the Settings menu.
2. Tap the **Autotune** icon.
3. The number of stations found will be displayed during the autotune.
4. When the autotune has finished, Sensia will tune to the last station that you were listening to.

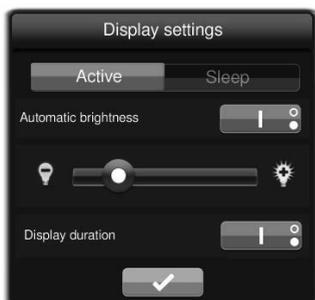

Display

You can use the display settings to change how the screen appears when Sensia is on and in sleep.

1. Tap **Settings** to display the Settings menu.
2. Tap the **Display** icon.
3. Tap **Active** to change the brightness level when Sensia is on. To change how the screen appears when Sensia is in Sleep mode, tap **Sleep**.
4. Tap the button to toggle Automatic brightness on  or off .
5. Use your fingertip to slide the Brightness slider to the left and right.
6. Tap the button to toggle the Display duration to on  or timed .
7. Tap  to save the brightness setting.



Language

To change the language:

1. Tap **Settings** to display the Settings menu.
2. Tap the **Language** icon.
3. Tap the required language.

Changing time/date settings


The time and date on Sensia are automatically set by Pure Connect or the FM or digital radio signal. You can manually change the time format and the time zone.

Changing the time format/time zone

1. Tap the time to display the time/date menu.
2. Tap the **Clock**  icon to toggle between 12 and 24 hours.
3. Tap the **Zone**  icon to display the time zone menu.
4. Scroll down to the region you are in and tap to confirm.
5. Scroll to your nearest city/country and tap to confirm.

Note: Any time or date updates received by an FM or digital radio broadcast will override manual settings





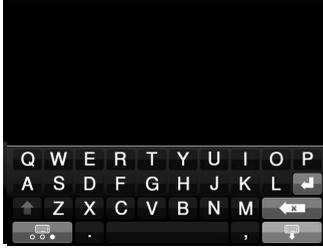


Manual Wi-Fi setup

1. Tap **Settings**.
2. Tap **Network**.
3. Tap the icon next to **Network type** so that is displayed.
4. A summary of your wireless settings will display on Sensia.
5. Tap the **Manual** button.
6. Enter the SSID of your network in the Network box.
7. Select the encryption type of your wireless network from the Encryption drop-down list below.
Note: Please check your wireless router configuration to find out the type of encryption that is being used on your wireless network.
8. Tap the button next to IP setup to choose the method that you want to use for IP setup. To use DHCP, toggle the button so that DHCP is displayed and tap and proceed to the next step. To use a static IP address, toggle the button until is displayed and tap . See page 24 for more information on how to configure a static IP address.
9. Wait while Sensia connects to the network.
10. Sensia will display the home screen after connecting to the wireless network.

 Connecting Sensia to the Internet with an Ethernet cable

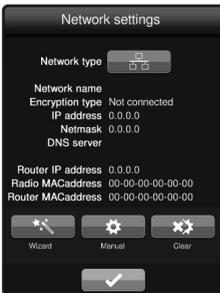

1. Connect the USB Ethernet adapter to the USB connector on the back of Sensia.
2. Connect an Ethernet cable to the USB adapter to an Ethernet port on your router.
3. Tap **Network** to display the Network Settings menu.
4. Tap the icon next to **Network type** so that is displayed.
5. A summary of your Ethernet settings will display on Sensia.
6. To setup the Ethernet connection on Sensia with a wizard, tap the **Wizard** button and follow the steps. To setup the Ethernet connection manually, tap the **Manual** button and configure a static IP address as described overleaf
7. Tap the button when you have finished setting up the Ethernet settings.

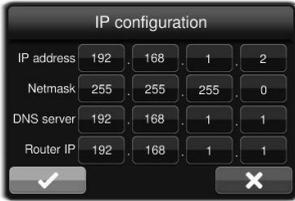

Static IP address configuration

1. Enter the IP address that you want to assign to Sensia into the IP Address box.
2. Enter the subnet mask that you want to assign to Sensia into the Net mask box.
3. Enter the IP address of the DNS server being used on your network.
4. Enter the IP address of your network's default gateway into the Router IP box.
5. Tap  to save any changes made.

Clearing network settings

If you are having problems with your network connection, you may need to reset your network settings. To do this, carry out the following:

1. Tap the **Clear**  icon.
2. The Clear network settings dialogue box will appear. Tap  clear the network settings back to default. Tap  to retain the current network settings.

Updating the software

Software update options

If an automatic software update is available for Sensia, a message will appear on the screen informing you that Sensia will update to the latest version. To proceed with the upgrade, tap the **OK** button.

Note: In order for automatic software updates to work, Sensia will need to be connected to your network.

Note: Do not switch off Sensia while a software update is taking place.

Sensia can also be updated manually by using either the network connection or the USB port.



Updating the software using the network connection

1. Tap **Settings** to display the Settings menu.
2. Tap the **Update** icon.
3. Tap the **Network update** icon.
4. Sensia will connect to the internet to search for available software updates.
5. If an update is available, Sensia will begin to update the software.

Updating the software using the USB port

Contact Pure technical support: (<http://support.pure.com>) for more information on how to update Sensia to the latest software version.

Displaying details on the current software version


To display more information about the software version that is currently loaded on Sensia:

1. Tap **Settings** to display the Settings menu.
2. Tap the  icon.
3. A dialogue box will open, which summarises the main features/fixes of the software version that is currently loaded on Sensia.
4. Tap  to return to the Settings menu.

Installing the ChargePAK F1

1. Switch Sensia off and disconnect from the mains power supply.
2. Open the battery compartment.
3. Position ChargePAK so that the contacts are facing the battery compartment and the tab is at the top and insert ChargePAK into the battery compartment.
4. Replace the battery cover and connect your product to a power supply.
5. ChargePAK will begin charging.

Note: When charging your ChargePAK for the first time or after an extended period of inactivity it is recommended that it is charged for around 24 hours to ensure full battery power. If ChargePAK is completely flat, there may be a slight delay before the battery charging indicator is displayed.

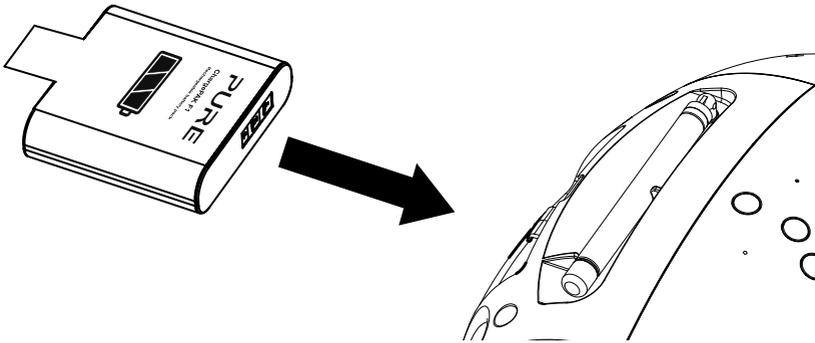

Note: It is normal for your ChargePAK to get warm, especially during charging. Your ChargePAK will give years of trouble-free use under normal circumstances, but like all rechargeable batteries its efficiency will gradually reduce with age.

Important: Sensia can only be powered with a Pure ChargePAK F1 and is not compatible with any other batteries, either disposable or rechargeable, or any other ChargePAK model.

Technical specifications

Radio	Digital (DAB/DAB+/DMB-Radio), FM and internet radio (Wi-Fi).
Network	Wi-Fi: 802.11b and 802.11g supported with WEP and WPA/WPA2 encryption. Ethernet (requires optional adapter): 10/100Mbps
Media streaming	Audio codecs supported include WMA (Standard V9), AAC, MP3, MP2. Media streaming requires UPnP server or PC/MAC running UPnP server software (supported upon registration to connect.pure.com).
Speakers	Two full-range 3" drive units.
Audio power output	30W RMS.
Input connectors	USB 2. 14.3V DC power adapter socket (230/110V supplied) ChargePAK connector. 3.5mm Line-in for auxiliary devices.
Output connectors	3.5mm headphone socket.
Controls	5.7" touchscreen display, standby button, mute button, volume up button, volume down button.
Remote	Infrared remote control.
Presets	30 digital, 30 FM and unlimited internet radio favourites.
Display	5.7" Capacitive sensing, 64k colour, 640 x 480 pixel TFT display.
Mains power supply	230/110V AC to 14.3V DC external power adapter.
ChargePAK	Optional ChargePAK F1 in-unit rechargeable battery pack.
Dimensions	166mm high x 280mm wide x 180mm deep (excluding stand).
Weight	1.9kg (excluding ChargePAK).
Aerial	Captive telescopic aerial; internal Wi-Fi aerial.
Approvals	CE marked. Hereby, Pure, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The Declaration of Conformity may be consulted at http://www.pure.com/R&TTE-DoC . ETSI EN 300 401 compliant. Australian C-Tick N1600 and Electrical Safety.



Warranty information

Imagination Technologies Limited warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Should you have a problem with your unit please contact your supplier or contact Pure Support at <http://support.pure.com>.

Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

Trademarks

Sensia 200D Connect, Pure, the Pure logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited. Version 3 March 2014.

Copyright

Copyright © 2014 Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited.

Disposal of Waste Electrical & Electronic Equipment



This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

Pure

Imagination Technologies Limited
Home Park Estate
Kings Langley
Herts, WD4 8LZ
United Kingdom
<http://support.pure.com>

Pure

Friedrich-Ludwig-Jahn-
Straße 2-14
64589 Stockstadt/Rhein
Deutschland
<http://support.pure.com/de>

**Pure - Vertrieb über:
TELANOR AG**

Unterhaltungselektronik
Bachstrasse 42
4654 Lostorf
Schweiz/Schweiz
info@telanor.ch
www.telanor.ch

Pure Australasia Pty Ltd

PO Box 5049
Wonga Park
Victoria 3115
Australia
sales.au@pure.com
<http://support.pure.com/au>

PURE

www.pure.com

connect.pure.com

www.facebook.com/pure