

USER GUIDE

UK

CORDLESS TELEPHONE

Voxtel S120




V1


AEG

perfekt in form und funktion


P1

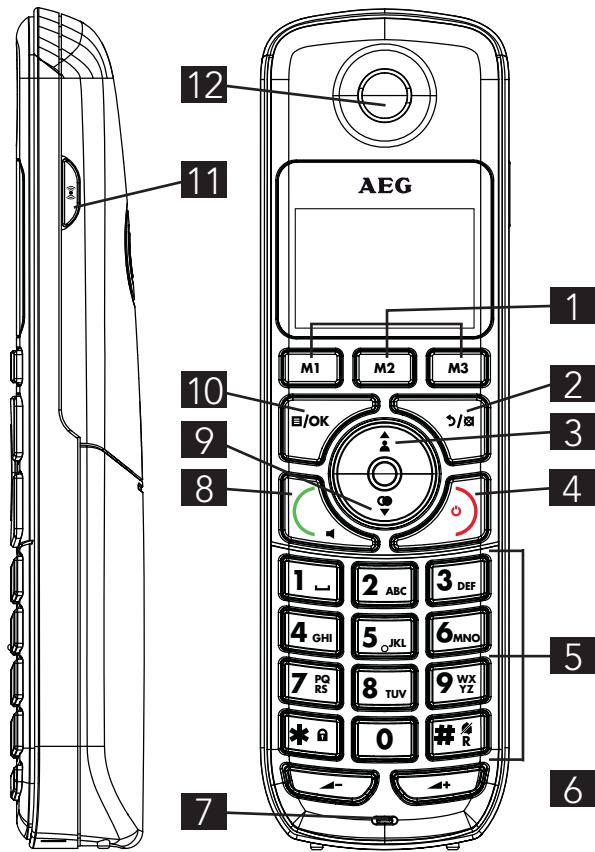


P2

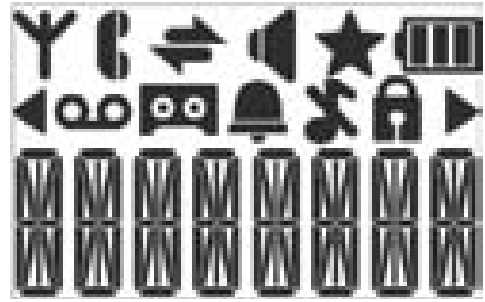


P3

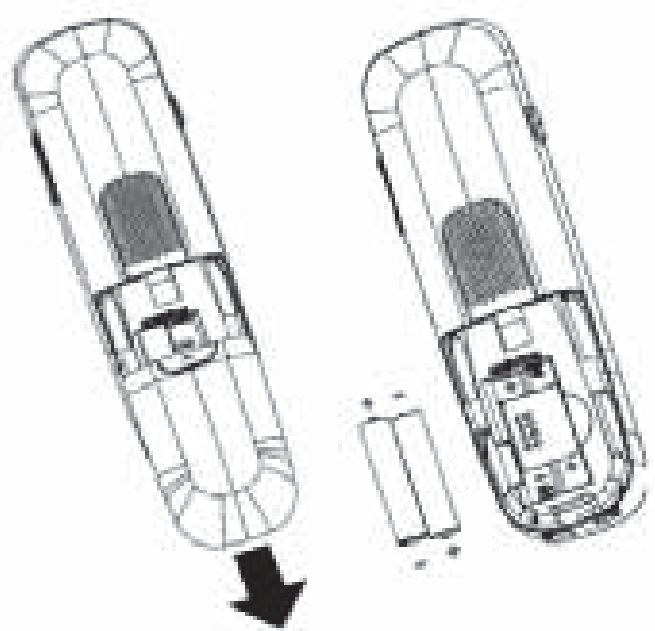

P4

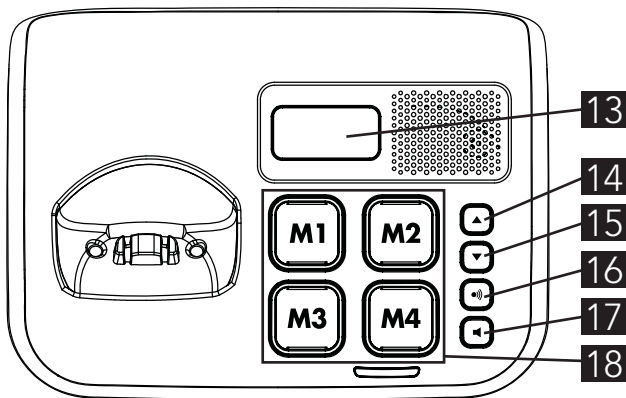

P5

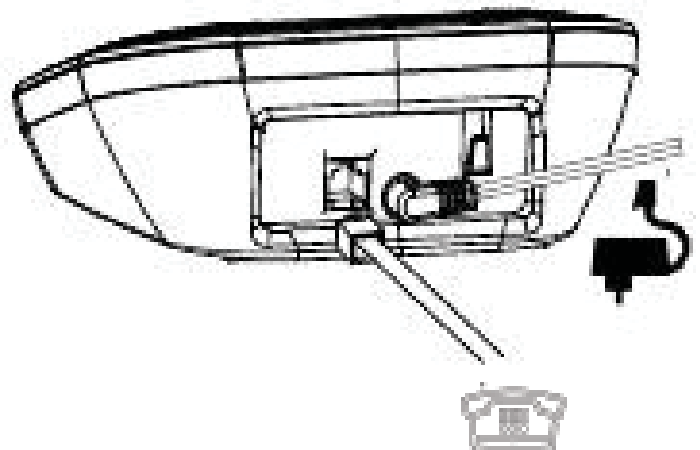

1 BECAUSE WE CARE

Thank you for purchasing this product. This product has been designed and assembled with utmost care for you and the environment. This is why we supply this product with a quick installation guide to reduce the number of paper (pages) and therefor save trees to be cut for making this paper.

A full and detailed user guide with all the features described can be found on our website www.aegtelephones.eu. Please download the full user guide in case you want to make use of all the advanced features of your product. To save the environment we ask you not to print this full user guide. Thank you for supporting us to protect our environment.

2 IMPORTANT SAFETY INSTRUCTIONS

When using your telephone, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug the power adapter from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Keep your phone away from hot, humid conditions or strong sunlight and don't let it get wet or use this product near water (for example, near a bath tub , kitchen sink, swimming pool).
5. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
6. Unplug this product from the wall outlet under the following conditions:
 - When the power supply cord or plug is damaged.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
7. NEVER use your phone outdoors during a thunderstorm-unplug the base from the telephone line and the mains socket when there are storms in your area. Damage caused by lightning is not covered by the guarantee.
8. Do not use the telephone to report a gas leak in the vicinity of the leak.

9. Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities.
10. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or damage to the unit or surroundings. The manufacturer will not be held liable for damage arising from such non-compliance.
11. Do not use third party charging bays. Damage may be caused to the batteries.
12. Please ensure the batteries are inserted in the correct polarity.
13. Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

3 Intended use

This telephone is intended to be connected to a public analogue telephone network or to an analogue extension of a compatible PBX system.

4 UNPACKING YOUR PHONE




In the box you will find:





- 1 Handset
- 1 Base station
- 1 Mains power adapter
- 1 Telephone line cord
- 2 Rechargeable batteries
- 1 User guide

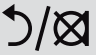
Keep the packing materials in a safe place in case you later need to transport the device.

5 GETTING TO KNOW YOUR PHONE

5.1 Handset overview (see P1)










#		Meaning
1	M1 M2 M3	M1/M2/M3 - Direct memory keys <ul style="list-style-type: none"> • In idle mode: press and hold to dial the stored number
2		Right Soft Key (CLEAR/BACK/MUTE/INTERCOM) <ul style="list-style-type: none"> • In main menu mode: Press to go back to idle screen. • In sub-menu mode: Press to go back to previous level. • In sub-menu mode: Press and hold to go back to idle screen. • In editing / predialing mode: Press to clear a character / digit. • In editing / predialing mode: Press and hold to delete all the characters / digits. • During a call: Press to mute / unmute the microphone. • In idle mode: Press to intercom another handset.
3		Up / call log <ul style="list-style-type: none"> • In idle mode: Press to access the call list. • In menu mode: Press to scroll up the menu items. • In Contacts list / Redial list / Call List: Press to scroll up the list.
4		Talk/Off <ul style="list-style-type: none"> • During a call: Press to end a call and go back to idle screen. • In menu / editing mode: Press to go back to previous menu. • In menu / editing mode: Press and hold to go back to idle screen. • In idle mode: Press and hold to power off the handset. • In idle mode (when the handset is powered off): Press and hold to power on the handset.






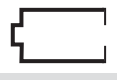

5		<p>Alphanumeric keypad, * (STAR), # (HASH)</p> <ul style="list-style-type: none"> • Press to insert a digit / character / * / # • * key in idle mode: Press and hold to enable or disable the keypad lock. • # key in Idle mode: Press and hold to turn on / off the ringer. • 0 key in idle / predialing / number editing mode: Press and hold to insert a pause. • # key in Call List mode: Press to review caller's number if applicable. • # key : In predialing / number editing mode or during a call: Press to insert a flash.
6		<p>Volume up / down</p> <ul style="list-style-type: none"> • During a call: press to increase or decrease the earpiece volume.
7		<p>Microphone</p>
8		<p>Talk On / Speakerphone</p> <ul style="list-style-type: none"> • In idle / predialing mode : Press to make a call. Press again to turn on the speakerphone. • In Redial list / Call List / Contacts entry: Press to make a call to the selected entry in the list. Press again to turn on the speakerphone. • During ringing: Press to answer a call. Press again to answer with speakerphone.
9		<p>Down / redial list</p> <ul style="list-style-type: none"> • In idle mode: Press to access the redial list. • In menu mode: Press to scroll down the menu items. • In Contacts list / Redial list / Call List: Press to scroll down the list.
10		<p>Left Soft Key (Menu / OK)</p> <ul style="list-style-type: none"> • In idle mode: Press to access the main menu • In sub-menu mode: Press to confirm the selection • During a call: Press to access Intercom/ Phonebook/ Redial List/ Call List.

11		Up / Down <ul style="list-style-type: none"> • During a call: Press to increase or decrease the earpiece volume.
12		Earpiece

5.2 Display icons and symbols (see P2)


The LCD display gives you information on the current status of the telephone.

	Meaning
	Steady on when the handset is within range of the base. Flashes when the handset is in marginal range of the base. Off when out of range of the base or cannot communicate with the base.
	Steady on when a call is in progress. Flashes when there is an incoming call.
	On when the speakerphone is turned on.
	Steady on when an intercom call is in progress. Flashes during intercom ringing.
	On when new call received. Off when no new call.
	On when the handset ringer is switched off.
	Steady on when an alarm is set. Flashes when the alarm time has been reached.
	On when the keypad is locked.
	On when you have a new Voice Mail message. (This is a caller display service from the network)










	Indicates when there are more characters or numbers in front of those being displayed.
	Indicates when there are more characters or numbers after those being displayed.
	Full battery power level.
	2/3 battery power level.
	1/3 battery power level.
	Flashes when low battery power level is detected, needs charging.
	Cycle, when battery is charging.

5.3 Base station overview (see P4)

#		Meaning
13		7-segment LED display <ul style="list-style-type: none"> • In idle: Show the clock status. "-- --" will flash if time is not set. " : " will flash when time is set and running. • In base speaker volume adjusting mode: The middle two digits show the base volume level (L1 ~ L8).
14	▲	Volume Up <ul style="list-style-type: none"> • In base speaker mode: Press to increase the speaker volume.
15	▼	Volume Down <ul style="list-style-type: none"> • In base speaker mode: press to decrease the speaker volume.
16	●)))	Find <p>Press the find button on the base station to find your registered handset(s). Press and hold to start registration process.</p>

17		<p>Speaker</p> <ul style="list-style-type: none"> • In idle: Press to turn on/off the speaker phone. • During ring: Backlight LED will flash, press to answer the incoming call. • During a call: Backlight LED will light on if speaker is activated. Press to hang off the call.
18		<p>M1/M2/M3/M4 - Direct Memory Keys</p> <ul style="list-style-type: none"> • Press to call the number stored in the memory key.

5.4 Menu Structure

Key press									
Main Menu	CONTACTS	CALL LOG	BS SET	HS SET	MEM KEY				
Sub-menu	Review contacts list Under a Contacts entry: ADD VIEW EDIT DELETE DEL ALL CAPACITY FASTDIAL	Review Call Log Under a selected Call Log entry: STORE DELETE DEL ALL DETAILS CATEGORY (Optional)	RINGER (Optional) RING VOL (Optional) DEL HS DIALMODE (Optional) FLASH (Optional) BARGE IN (Optional) CHG PIN RCID (Optional) FULL ECO (Optional) PBX CODE (Optional) AREA COD (Optional) CARR COD (Optional)	RINGER TONE EQLIZER (Optional) SEL BASE (Optional) LANGUAGE (Optional) HS NAME DISPLAY AUTO ANS (Optional) MAILBOX (Optional)	M1 M2 M3 M4				
Main Menu	CLOCK	ALARM (Optional)	CARE VOICE (Option for 8-digit LCD: CAREMEMO)	REGISTER	DEFAULT				
Sub-menu	DATE FMT (Optional) TIME FMT (Optional) SET TIME SET DATE	ON OFF	C VOICE 1 C VOICE 2 CHG PIN (Option for 8-digit LCD: C MEMO 1 C MEMO 2 CHG PIN)						

5.5 Text and digit entry

The following tables show you where each letter and punctuation character can be found, by using repeated presses of the alphanumeric keypad. This will be helpful when storing a name in the phonebook and renaming your handset.

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing tips:

- Once a character is selected, the cursor will move to the next position after a short pause.
- You can move the cursor within the text with the ▲/▼ keys to amend the text entry.
- Press ↵/⊗ to delete the last character.
- Press and hold ↵/⊗ to delete the entire text string.

5.5.1 Latin character set

Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone number editing, date/time editing)
	Key Press	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	
1	space	-	1								1
2	A	B	C	2							2
3	D	E	F	3							3
4	G	H	I	4							4
5	J	K	L	5							5
6	M	N	O	6							6
7	P	Q	R	S	7						7
8	T	U	V	8							8
9	W	X	Y	Z	9						9
0	0										0, or P (if press and hold)
*	*	?	/	\	()					*
#	#	'	,	-	&						#

6 INSTALLING YOUR PHONE

6.1 Connecting the base station (see P5)

- Plug the power adapter and line cord into the base station.
- Plug the power adapter into a 210 - 240 V ac, 50/60 Hz mains socket and the other end of the line cord into your telephone line socket.

Warning:

- Always use the line cord provided in the box. Other line cords may not be compatible and may not work.
- Only use the power adapter supplied.
- The base unit needs mains power for normal operation, not just for charging the handset batteries.



6.2 Installing and charging the batteries (see P3)

- Slide open the battery compartment cover.
- Place the 2 batteries with the correct polarity, as shown.
- Slide the battery compartment cover back.
- Put the handset on the base and charge for 14 hours before first time use. A beep indicates that the handset is properly placed on the base or charger.



Warning:

- Only use AAA size NiMH rechargeable batteries.
- If the handset will not be used for a long time, disconnect and remove the batteries to prevent possible leakage.





7 USING YOUR PHONE**7.1 Make a call****7.1.1 Preparatory dialling**

- Enter the phone number and press  to dial the number, press it again to turn on the speakerphone.
 >When entering the number, if you make a mistake, press  to delete digits.




7.1.2 Direct dialling

- Press  to connect to the line and then enter the phone number.
- Press  again to turn on the speakerphone.





7.1.3 Call from the contacts list

- Press  to access the contacts list and press / to select the desired contacts entry.
- Press  to dial out the selected entry. Press it again to turn on the speakerphone.

7.1.4 Call from the call log

- Press  to access the call log and press / to select the desired call log entry.
- Press  to dial out the selected call log entry. Press it again to turn on the speakerphone.
- Alternatively, press  and / to access the call log from the main menu.

7.1.5 Call from the redial list

- Press  to access the redial list and press / to select the desired redial number.
- Press  to dial out the selected redial number. Press it again to turn on the speakerphone.

7.1.6 Call timer

Your handset automatically times the duration of every call.


The call timer will display a few seconds after the call has made. It is shown in hours, minutes and seconds format (HH:MM:SS).

7.2 Make a call from direct access memory

Using the handset:

- In idle, press and hold M1/M2/M3 to dial the number pre-stored into the keys respectively.

OR

- Press , and then press and hold M1/M2/M3 to dial the number pre-stored into the keys respectively.

Note:

You need to set the direct access number first.

> If no number is stored, you will hear double beeps tone.

Using the base:

- In idle, press M1/M2/M3/M4 to dial the number pre-stored into the keys respectively.


Note:

You need to set the direct access number first.

7.3 Answer a call

Using the handset:


If the handset is not on the charging cradle:

- When the phone rings, press  to answer a call, press it again to turn on the speakerphone.

Note:





If the handset is on the charging cradle and if "AUTO ANS" is set to "ON": when the phone rings, pick up the handset to answer a call automatically, without having to press any button.

Using the base:

- When the phone rings, the base speaker LED will flash. Press  to answer the call.


7.4 Audio boost feature

The audio boost feature allows you to amplify the handset earpiece volume to compensate for the ear's limited sensitivity.

- To turn on the audio boost feature, press  at any time during a call.
 - > The handset top indicator turns on.
- When the audio boost feature is activated, press / to increase or decrease the handset volume within the specific frequency range set in equalizer.
- To turn off the audio boost feature and return the earpiece volume back to normal, press  again and the handset top indicator light turns off.
 - > The audio boost feature will be turned off automatically when the call is ended.

7.5 End a call

Using the handset:

- During a call connection on handset, press  to end the call.
- OR
- Put the handset on the base station to end the call.

Using the base:

- During a call connection on base, press  to end the call.

7.6 Adjust earpiece and handsfree volume

There are 5 levels ("VOLUME 1" to "VOLUME 5") to choose from for each of the earpiece and handsfree volumes.

Using the base:

During a call:

- Press ▲/▼ to select volume 1-8.
 - >The current setting is shown.
 - >When you end the call, the setting will remain at the last selected level.

Using the handset:



During a call:

- Press ▲+/▲- to select volume 1-5.
 - >When you end the call, the setting will remain at the last selected level.



7.7 Mute a call

You can talk to someone nearby without letting the caller hear you during a call.



During a call:

- Press  to mute the microphone and "MUTED" will display on the screen.
 - >Your caller cannot hear you.
- Press  again to unmute the microphone.


7.8 Set the silent mode

- In idle mode, press and hold # to turn off the handset ringer. The  icon is displayed on the screen.
- In silent mode, press and hold # to turn on the handset ringer. The  icon will disappear.

7.9 To turn the handset ringer off


- In idle mode, press and hold # to turn off the handset ringer.
 - >The ringer off  icon will be displayed.
- When the ringer is off, press and hold the # key to turn on the handset ringer.
 - >The ringer off icon  will turn off.

7.10 Turn on the keypad lock

- In idle mode, press and hold * to turn on the keypad lock.
 - >The keypad lock icon  will be displayed.

Note:

You can still use  to answer a call when the handset is ringing.

- In keypad lock mode, press and hold * to turn off the keypad lock.
> The keypad lock icon  will turn off.

7.11 Redial the last number

You can redial any of the 5 last numbers called. If you have stored a name in the contacts list to go with the number, the name will be displayed instead.




The most recent last number will display at the top of the redial list.

7.11.1 Redial a number from the redial list

- In idle mode, press  to access the redial list.

Note:










If the redial list entry shows a name, press # to view the number of this entry.

- Press / to browse the redial list.
- Press  to dial to the selected redial number.





Note:

If there are no numbers in the redial list, the display shows "EMPTY".

7.11.2 Store a redial number into the phonebook


- Follow Steps 1 and 2 in section 7.11.1.
- Press  and / to select "STORE".
- Press  to enter the name.
- Press  to store the redial number into the phonebook.
- Press  to select phonebook melody.
- Press / to browse the melody list. The respective melody will be played when browsing the melody list.
- Press  to confirm.

7.11.3 Delete a redial number


- Follow Steps 1 and 2 in section 7.11.1.
- Press  and / to select "DELETE".
- Press  to confirm.

7.11.4 Delete the entire redial list

- Follow Steps 1 and 2 in section 7.11.1.

- Press  and  to select "DEL ALL".
- Press  to confirm.
- Press  to confirm again.

7.12 Find the handset

You can locate the handset by pressing the find key  on the base station. All the handsets registered to the base will produce the paging tone and show "PAGING" on the screen.

You can stop the paging by pressing  or  on any handset or  on the base again.


Note:

If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.



7.13 Make an internal call

This feature is only applicable when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls. If the called handset is not answered within 60 seconds, the called handset will stop ringing and the calling handset will return to standby mode.


Note:

If only one handset is registered to the base station, press  will display "FAILED".


7.13.1 Intercom another handset

- In idle mode, press  and the registered handsets will display except the calling handset.
- Enter the desired handset number to intercom with.
- The called handset rings. Press  on the called handset to establish the internal call.

Note:






If two handsets are registered to the base station, press  will connect to another handset immediately.

7.13.2 Call all handsets

- In idle mode, press  and the registered handsets will display.
- Press 9 to ring to all registered handsets.

7.13.3 Transfer an external call from handset to handset

During an external call:



- Press  and  to select "INTERCOM".
- Press  to select the desired handset to intercom with.
- The external call is put on hold automatically and the called handset rings.
- Press  on the called handset to establish an internal call.
- Press  on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
- The external call is transferred to the called handset.

7.13.4 Transfer an external call from base to handset

During an external call on base:

- Grab off the handset from base cradle, the external call on base will be transferred to handset automatically, and base will go to idle.

Note:

Before lifting up the handset, please ensure the handset is in line use status (shows the  icon). If you lift up the handset before it showing the  icon, call transfer will be failed, you need to put back the handset on cradle and try again.

7.13.5 Make a 3-way conference call

The conference call feature allows one external call to be shared with base and handset or between two handsets (in intercom). The three parties can share the conversation and no network subscription is required.

Make a 3-way conference call with two handsets:

During an external call:

- Follow Steps 1 to 4 in section 7.13.3.
- Press and hold * on the calling handset to establish the conference call.


Note:

Any handset hangs up during a conference call will leave the other handset still in connection with the external call.

7.13.6 Make a 3-way conference call with Barge In

If you turn on the Barge in function (see section 11.7.6 for details to turn on/off barge in), you can conduct a conference call between handsets or handset and base easily as following.

During an external call:

- Press  on the base to establish the conference call if any handset has answered the call.

OR

- Press  on the handset to establish the conference call if another handset or the base has answered the call.

Note:



Any party (base or handset) hangs up during a conference call will leave the other party still in connection with the external call.

8 PRIVATE PHONEBOOK


You can store up to 20 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. (Note: the different ringtones only play if you subscribe to caller display and the incoming number matches the stored number.)

Phonebook entries are stored alphabetically by name.

8.1 Add a new contacts entry

- From idle model, press  to show "CONTACTS" and then press **OK** to enter the contacts list.
- Press **OK** to show "ADD".
- Press **OK** and then enter the name.
- Press **OK** and then enter the number.
- Press **OK** and  to select the desired ringtone for your contacts entry.
- Press **OK** to store the contacts entry.


8.2 Search for a contacts entry

- From idle mode, press  to show "CONTACTS" and then press **OK** to enter the contacts list.


- Enter the first letter of the name using the alphanumeric keys (e.g. if it begins with C, press the 2 key three times) and then ▲/▼ to scroll to the entry you want.

8.3 View a contacts entry

In idle:


- Press  to select "CONTACTS" main menu item and then press OK to access the contacts list.
- Press ▲/▼ to select the desired contact entry.
- Press OK and ▲/▼ to select "VIEW".
- Press OK and ▲/▼ to review the name, number and melody of the selected phonebook entry.

Note:

If number is more than 12 digits, press /OK or ↶/⊗ to view the remaining digits.


8.4 Edit a contacts entry

In idle:


- Press  to select "CONTACTS" main menu item and then press OK to access the contacts list.
- Press ▲/▼ to select the desired phonebook entry.
- Press OK and ▲/▼ to select "EDIT".
- Press OK and the current contents of the selected phonebook entry displays.
- Edit the name and press OK
- Edit the number and press OK
- Press ▲/▼ to select the ringtone and press OK to confirm.

8.5 Delete a contacts entry

In idle:

- Press  to select "CONTACTS" main menu item and then press OK to access the contacts list.
- Press ▲/▼ to select the desired phonebook entry.
- Press OK and ▲/▼ to select "DELETE".
- Press OK to confirm.

8.6 Delete the entire private phonebook

- Press  to select "CONTACTS" main menu item and then press OK to access the contacts list.

- Press **OK** and **▲/▼** to select "DEL ALL".
- Press **OK** to confirm.
- Press **OK** to re-confirm.

8.7 Check the phonebook usage

You can check how many phonebook entries have been occupied in your phone and how many phonebook entries are available for you to store in the phonebook.

- Press **☰** to select "CONTACTS" main menu item and then press **OK** to access the contacts list.
- Press **OK** and **▲/▼** to select "CAPACITY".
- Press **OK** to confirm.

8.8 Set the fast dial numbers

After setting the fast dial numbers, you can dial to the pre-set numbers by pressing and holding the respective digit keys from idle mode.

8.8.1 Add or edit the fast dial number

- Press **☰** to select "CONTACTS" main menu item and then press **OK** to access the contacts list.
- Press **OK** and **▲/▼** to select "FASTDIAL".
- Press **▲/▼** and **OK** to select one digit key from 2 to 9.

If there is no number stored in the selected key:

- Press **▲/▼** to select an entry from the contacts list.
- Press **OK** to confirm.

If there is already a number stored in the selected key:

- Press **OK** to select "EDIT".
- Press **OK** to select an entry from the contacts list.
- Press **OK** to confirm.

8.8.2 Delete the fast dial number

- Repeat the steps 1 to 3 in section 8.8.1.
- Press **▲/▼** to select an entry from the contacts list.
- Press **OK** and **▲/▼** to select "DELETE".
- Press **OK** to confirm.

9 CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed the Caller Line Identification service with your telephone service provider. Your phone can store up to 10 received calls with date/time information in the call log. The number will be shown on the screen when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternatively with the number. The handset will ring with the melody associated with that phonebook entry.

If the call is from someone who withheld their number, "WITHHELD" will display.




In standby, if three unanswered calls are received, "3 CALLS" will be displayed.

9.1 View the call log



All received calls are saved in the call log with the latest call at the top of the list. When the call log is full, the oldest call will be replaced by a new call. Any unanswered calls which have not been viewed are marked with a ★ at the top of the display.

- Press  to access the call log.

OR

- Press  and  to show "CALL LOG", then press **OK** to select it.
- Press  to select the desired entry.
- Press **#** to view the caller's number if applicable.

9.2 Store a call log number into the phonebook

- Follow Steps 1 and 2 in Section 9.1.
- Press **OK** and  to select "STORE".
- Press **OK** to enter the name.
- Press **OK** and the selected call list number is displayed.
- Edit the number if necessary.
- Press **OK** and  to select the melody.
- Press **OK** to confirm.

9.3 Delete an entry in the call log

- Follow Steps 1 and 2 in Section 9.1.
- Press **OK** and  to select "DELETE".
- Press **OK** to confirm.

9.4 Delete the entire list of the call log

- Follow Steps 1 and 2 in Section 9.1.
- Press **OK** and **▲/▼** to select "DEL ALL".
- Press **OK** to confirm.
- Press **OK** to re-confirm.

9.5 View the details of the call list entry

- Follow Steps 1 and 2 in Section 9.1.
- Press **OK** and **▲/▼** to select "DETAILS".
- Press **OK** to display the date and time of the selected call list entry.
- Press **OK** to go back to previous screen.

9.6 Set the category of call log (Optional)

- Follow Steps 1 and 2 in Section 9.1.
- Press **OK** and **▲/▼** to select "CATEGORY".
- Press **OK** and **▲/▼** to select the category ("ALL" or "MISSED").
- Press **OK** to confirm.

Note:

"ALL" means all received calls will be shown in the call log, while "MISSED" means only the missed calls will be shown.

10 PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalise your phone the way you like it to work.

10.1 Clock settings

You will need to set the correct time and date so that you know when you received call list entries.

10.1.1 Change the date format (Optional)


- Press **☰** and **▲/▼** to select "CLOCK".
- Press **OK** and **▲/▼** to select "DATE FMT".
- Press **▲/▼** to select your desired date format (DDMMYY or MMDDYY).
- Press **OK** to confirm.

10.1.2 Change the time format (Optional)

- Press **☰** and **▲/▼** to select "CLOCK".
- Press **OK** and **▲/▼** to select "TIME FMT".

- Press ▲/▼ to select your desired time format (12 HR or 24 HR).
- Press OK to confirm.


10.1.3 Set the time

- Press  and ▲/▼ to select "CLOCK".
- Press OK and ▲/▼ to select "SET TIME".
- Press OK to enter the time information. The time entered will be in the format you set in section 11.1.2
- Press OK to confirm.

Note:

If time has been set before, the current time will display, otherwise, "HH:MM" will display.



10.1.4 Set the date

- Press  and ▲/▼ to select "CLOCK".
- Press OK and ▲/▼ to select "SET DATE".
- Press OK to enter the date information. The date entered will be in the format you set in section 11.1.2.
- Press OK to confirm.


Note:


If date has been set before, the current date will display, otherwise, "DDMMYY" will display.

10.2 Alarm settings (Optional)

You can use this phone to set an alarm clock. When an alarm is set, the  displays on the screen. When the alarm time is reached, the  and "ALARM ON" flash on the screen ringing with the alarm melody for a duration of 45 seconds. You can press any key to disable the alarm. If snooze function is activated, the alarm will sound again at the end of the snooze period of 7 minutes.

Note:

- > Key press is still applicable if handset keypad is locked and when the alarm time is reached.
- > The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to "OFF", the alarm still sounds at VOLUME 1 level.
- > During an external call or internal call, if an alarm is set and when the alarm time is reached, the  and "ALARM ON" will still flash.

An alarm tone will be emitted from the earpiece to notify user the alarm time is reached. Once user press any key or press and hold  to disable the alarm, it will revert to the call duration screen.

> During paging or ringing, the alarm will not sound when the alarm time is reached. However, if snooze function is enabled, the alarm will sound again at the end of the snooze period provided that it's not ringing or in paging mode at the end of the snooze period.





10.2.1 Turn on/off the alarm

- Press  and  to select "ALARM".
- Press  and  to select "ON/OFF".
- Press  to confirm.

Note:






If "ON" is selected, you will be asked to set the alarm time.

10.2.2 Set the alarm time (if the alarm is set to be "ON")

- Follow Steps 1 to 4 in Section 11.2.1.
- Enter the alarm time.
- Press  to set the snooze function.
- Press  and  to select "ON" or "OFF".
- Press  to confirm.

10.3 Set the direct memory keys

There are four direct access memory buttons (from M1 to M4) on the corded base and three direct access memory buttons (M1 to M3) on the handset. The memory numbers on base and handset are linked, M1 to M3 share same number on handset and base. M4 can only be dialled from the base.

- Press  and  to select "MEM KEY".
- Press  and  to select the desired memory key.
- Press  to enter the number you want to store.

Note:








If a number has been saved into the selected memory key before, the last saved settings will be shown. You can use the dial keys to edit the number.

- Press  to confirm.

10.4 Care Voice

You can record voice messages. The voice message will be played automatically through the base speaker when the time reaches.








10.4.1 Play the Care Voice Message

- Press  and  to select "CARE VOICE".
- Press  and  to select "C VOICE 1" or "C VOICE 2".
- Press  and  to select "PLAYBACK".
- Press  to play the desired voice message.


Note:



If no message recorded before, display will show "EMPTY".

10.4.2 Record a Care Voice Message










- Press  and  to select "CARE VOICE".
- Press  and  to select "C VOICE 1" or "C VOICE 2".
- Press  and  to select "RECORD".
- Press  and speak to the phone after a beep to record the message.

Note:

If there is already a message recorded before, display will show "REPLACE?". Press  to record the new message.

- Press  to save and the recorded message will be played automatically.
- OR
- Press  to cancel, then the current message will not be recorded and the previous message will be removed as well.

10.4.3 Turn the Care Voice Message ON / OFF

- Press  and  to select "CARE VOICE".
- Press  and  to select "C VOICE 1" or "C VOICE 2".
- Press  and  to select "ON/OFF".
- Press  and  to select "DAILY", "ONCE" or "OFF".
- Press  to confirm.

If you selected "DAILY" or "ONCE", enter the time in 24 HR format to set the alert time.

Note:

If you selected "OFF" and if there is a message preset by user, the date/time setting will be removed, but the recorded message will be kept. You can turn it on for next use.

- Press **OK** to confirm.

Note:

You can also activate the Care Voice even if you have not recorded any message for it before. In this case, base will play the heading music without voice announcement when the set time arrives.

10.4.4 Change the Care Voice PIN

When you access the Care Voice line remote mode, you will need to enter the Care Voice PIN. You can change the PIN by menu.

- Press **☰** and **▲/▼** to select "CARE VOICE".
- Press **OK** and **▲/▼** to select "CHG PIN".
- Press **OK** and display will show "OLD PIN?".
- Press **OK** to enter the old PIN (default is 0000).

Note:

If the PIN entered is incorrect or invalid, display will return to the previous menu.

- Press **OK** and display will show "NEW PIN?".
- Press **OK** to enter the new PIN.
- Press **OK** and display will show "CONFIRM?".
- Press **OK** to repeat the new PIN.

Note:

If the new PIN re-entered is not matched with the new PIN, display will return to step 5.

- Press **OK** to confirm.

10.4.5 Care Voice line remote

If you are away from your home, you can use another telephone to call and access the Care Voice line remote mode, to set or listen to your messages remotely.

- Call the number and system will answer the call after 10 rings to allow user enter Care Voice line remote mode.
- Enter the Care Voice PIN code.
- Press the voice message number (e.g.1) you would like to access.
- Press the following keys to carry out your desired function.



Key	Function
1	Play the selected Care Voice message in step 3.
2	Record a Care Voice message.
3	Activate the Care Voice message.
4	Deactivate the Care Voice message.

Note:

- > If you press 2, start recording the message after a beep, and then press 2 to save. If there is already a Care Voice message recorded before, it will be replaced.
- > If you press 3, enter the time in 24 hour format (HH:MM), and then press 3 to confirm. The time will be played, and then you can press 3 to reconfirm or press * to cancel. If the Care Voice message is saved in this case, it will announce once only at the set time.





10.4.6 Change the CareMemo PIN

When you access the CareMemo line remote mode, you will need to enter the CareMemo PIN. You can change the PIN by menu.

- Press  and  to select "CAREMEMO".
- Press  and  to select "CHG PIN".
- Press  and display will show "OLD PIN?".
- Press  to enter the old PIN (default is 0000).

Note:

If the PIN entered is incorrect or invalid, display will return to the previous menu.

- Press  and display will show "NEW PIN?".
- Press  to enter the new PIN.
- Press  and display will show "CONFIRM?".
- Press  to repeat the new PIN.

Note:

If the new PIN re-entered is not matched with the new PIN, display will return to step 5.

- Press  to confirm.

10.4.7 CareMemo line remote

If you are away from your home, you can use another telephone to call and access the CareMemo line remote mode, to set or listen to your memos remotely

- Call the number and system will answer the call after 10 rings to allow user enter CareMemo line remote mode.
- Enter the CareMemo PIN code.
- Press the memo number (e.g.1) you would like to access.
- Press the following keys to carry out your desired function.









Key	Function
1	Play the selected CareMemo message in step 3.
2	Record a CareMemo message.
3	Activate the CareMemo message.
4	Deactivate the CareMemo message.

Note:

- > If you press 2, start recording the message after a beep, and then press 2 to save. If there is already a CareMemo message recorded before, it will be replaced.
- > If you press 3, enter the time in 24 hour format (HH:MM), and then press 3 to confirm. The time will be played, and then you can press 3 to reconfirm or press * to cancel. If the CareMemo message is saved in this case, it will announce once only at the set time.

10.5 Handset settings

10.5.1 Set the ringer melody for external calls






- Press  and  to select "HS SETT".
- Press  and  to select "RINGER".
- Press  and  to select "EXT RING".
- Press  and  to select the desired ringer melody (a total of 10 melodies for your selection) for setting ringer melody for external calls.

Note:

The respective ringer melody will be played while browsing the melody list.

- Press **OK** to confirm.

10.5.2 Set the ringer melody for internal calls






- Press  and  to select "HS SET".
- Press **OK** and  to select "RINGER".
- Press **OK** and  to select "INT RING".
- Press **OK** and  to select the desired ringer melody (a total of 10 melodies for your selection) for setting ringer melody for internal calls.

Note:


The respective ringer melody will be played while browsing the melody list.

- Press **OK** to confirm.

10.5.3 Set the ringer volume

- Press  and  to select "HS SET".
- Press **OK** and  to select "RINGER".
- Press **OK** and  to select "RING VOL".
- Press **OK** and  to select the desired ringer volume (a total of 6 ringer volume levels including "OFF").

Note:

The respective ringer volume will be played during your selection. If "OFF" is selected,  icon will display.

- Press **OK** to confirm.

10.5.4 Set alert tones

A single beep is emitted when you press a key. You can turn on or off the key tone. You can also turn on the alert tones when low battery and out of range are detected. Low battery tone will be emitted while you are talking with the phone to alert you that you need to charge up your battery.

- Press  and  to select "HS SET".
- Press **OK** and  to select "TONE".

- Press **OK** and ▲/▼ to select "KEY TONE" / "LOW BATT" / "OUTRANGE".
- Press **OK** and ▲/▼ to turn on or off these tones.
- Press **OK** to confirm.

10.5.5 Set the equalizer

The phone has three different frequency range filters to compensate for the ear's limited sensitivity in these ranges.

For more details about the amplify feature, please refer to section 7.4.

- Press **☰** and ▲/▼ to select "HS SET".
- Press **OK** and ▲/▼ to select "EQLIZER".
- Press **OK** and ▲/▼ to select the desired frequency range filter.
- Press **OK** to confirm.

10.5.6 Select base

If you have registered the handset to more than one base, you can select any one of them to use with your handset.

- Press **☰** and ▲/▼ to select "HS SET".
- Press **OK** and ▲/▼ to select "SEL BASE".
- Press **OK** and ▲/▼ to select the desired base.
- Press **OK** to confirm.

10.5.7 Set the handset language

- Press **☰** and ▲/▼ to select "HS SET".
- Press **OK** and ▲/▼ to select "LANGUAGE".
- Press **OK** and ▲/▼ to select the desired language.
- Press **OK** to confirm.

10.5.8 Rename the handset

- Press **☰** and ▲/▼ to select "HS SET".
- Press **OK** and ▲/▼ to select "HS NAME".
- Press **OK** and enter the name of your handset.
- Press **OK** to confirm.

10.5.9 Choose the information to be displayed in idle

You can choose to display time or handset name in your idle screen.

- Press **☰** and ▲/▼ to select "HS SET".

- Press **OK** and **▲/▼** to select "DISPLAY".
- Press **OK** and **▲/▼** to select "HS NAME" or "TIME".
- Press **OK** to confirm.

10.5.10 Set the auto answer

If you turn on the Auto Answer, you can pick up the call from the cradle without pressing any key.

- Press **☰** and **▲/▼** to select "HS SET".
- Press **OK** and **▲/▼** to select "AUTO ANS".
- Press **OK** and **▲/▼** to turn on or off the auto answer feature.
- Press **OK** to confirm.

10.5.11 Set the mailbox number

You can set the mailbox number manually if necessary. After saving the mailbox number, press and hold Key 1 in idle will dial out directly to the number stored in the mailbox.

- Press **☰** and **▲/▼** to select "HS SET".
- Press **OK** and **▲/▼** to select "MAILBOX".
- Press **OK** and edit the mailbox number.
- Press **OK** to confirm.

10.6 Base settings

The current settings are marked an asterisk which is displayed at the rightmost of the menu item.

10.6.1 Set the base ringer melody







- Press **☰** and **▲/▼** to select "BS SET".
- Press **OK** and **▲/▼** to select "RINGER".
- Press **OK** and **▲/▼** to select the desired ringer melody (a total of 5 melodies for your selection)

Note:

The respective ringer melody will be played while browsing the melody list.

- Press **OK** to confirm.

10.6.2 Set the ringer volume

- Press  and  to select "BS SET".
- Press  and  to select "RING VOL".
- Press  and  to select the desired ringer volume (a total of 6 ringer volume levels including "OFF").

Note:

The respective ringer volume will be played during your selection.









- Press  to confirm.

10.6.3 De-register a handset

You are requested to enter the 4-digit PIN in order to de-register a handset from the base station. The antenna icon on the de-registered handset will be off.








Note:

You cannot de-register the handset that you are currently using.

- Press  and  to select "BS SET".
- Press  and  to select "DEL HS".
- Press  and you are requested to enter the 4-digit system PIN.
- Enter the 4-digit system PIN.
- Press  and a list of registered handsets is displayed. The handset used in your hands will not be included. (Optional)
- Press  to select one of the handsets that you want to de-register.
- Press  to confirm.

10.6.4 Change the flash time

The flash time setting is country dependent. Please contact your local telephone service provider for the correct settings.

- Press  and  to select "BS SET."
- Press  and  to select "FLASH.
- Press  and  to select your desired flash time ("SHORT", "MEDIUM", "LONG").
- Press  to confirm.








10.6.5 Barge In

Barge in allows two handsets or one handset and base to share the same external call conveniently, instead of setting up a conference call by complex call transfer. Please refer to section 7.13.6 for the operation details.

- Press  and  to select "BS SET".
- Press  and  to select "BARGE IN".
- Press  and  to select "ON" or "OFF".
- Press  to confirm.

10.6.6 Change the system PIN Code

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorized use. The default system PIN code is 0000.

- Press  and  to select "BS SET".
- Press  and  to select "CHG PIN".
- Press  and you are requested to enter the 4-digit system PIN.
- Enter the old system PIN.
- Press  and enter the new system PIN.
- Press  and enter the new system PIN again.



Note:

If the new PIN entered in Step 6 is not matched with the new system PIN entered in Step 5, user is requested to enter the valid system PIN again in Step 5.

- Press  to confirm.

10.6.7 RCID settings (Optional)

10.6.7.1 Turn On/Off the RCID

- Press  and  to select "BS SET".
- Press  and  to select "RCID".
- Press  and  to select "ON" or "OFF".
- Press  to select "ON" or "OFF".
- Press  to confirm.

10.6.7.2 Set the number length

- Press  and  to select "BS SET".

- Press **OK** and **▲/▼** to select "RCID".
- Press **OK** and **▲/▼** to select "NUM LEN".
- Press **▲/▼** to select among 5, 6 and 7.
- Press **OK** to confirm.

10.6.7.3 Set the ring delay

- Press **☰** and **▲/▼** to select "BS SET".
- Press **OK** and **▲/▼** to select "RCID".
- Press **OK** and **▲/▼** to select "RINGS".
- Press **▲/▼** to select among "0 RING", "2" RINGS", "3 RINGS", to "9 RINGS", nine options are available in total.

Note:

If 0 RING is selected, the manual mode will be enabled.

10.6.8 Set the PBX access code (Optional)

- Press **☰** and **▲/▼** to select "BS SET".
- Press **OK** and **▲/▼** to select "PBX CODE."
- Press **OK** and then enter the PBX access code. Only one digit can be entered.
- Press **OK** to confirm.

10.6.9 Set the area code (Optional)

- Press **☰** and **▲/▼** to select "BS SET".
- Press **OK** and **▲/▼** to select "AREA COD".
- Press **OK** and then enter the area code. Only three digits in maximum can be entered.
- Press **OK** to confirm.







10.6.10 Set the carrier code (Optional)

- Press **☰** and **▲/▼** to select "BS SET".
- Press **OK** and **▲/▼** to select "CARR COD".
- Press **OK** and then enter the carrier code. Only three digits in maximum can be entered.
- Press **OK** to confirm.

10.7 Registration

Your handset and base station is pre-registered. Up to five handsets can be registered to a single base station.






If for some reason, the handset is not registered to the base station (Y flashes even when the handset is near the base station), register your handset according to the following procedure.

- Press and hold  on the base station for more than five seconds, to put the base station into registration mode. It will stay in registration mode for about 1 minute, so the following handset sequence must be completed within this time.
- Press  and  to select "REGISTER".
- Press  and select the destination base you would like to register to.
- Press  and you are requested to enter the 4-digit system PIN.
- Enter the 4-digit system PIN.
- Press  to confirm.


If the handset registration is successful, you will hear a confirmation tone and the Y will stop flashing. The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the Y will still flash.

10.8 Reset Your Phone

You can reset your phone to the default settings. After reset, all your personal settings and call log entries will be deleted, but your phonebook remains unchanged.

- Press  and  to select "DEFAULT".
- Press  and you are requested to enter the 4-digit pin (default 0000).
- Enter the 4-digit system PIN.
- Press  to confirm.
- Press  to re-confirm.

11 TROUBLESHOOTING

Problem	Cause	Solutions
No dialing tone when pressing  key	<ul style="list-style-type: none"> • The connection cord of the base station is not plugged in. • The adapter cord is not plugged in correctly in the base station. • The line is busy, as another handset is used. • Wrong connection cord. 	<ul style="list-style-type: none"> • Check the connections. Unplug and plug back in the mains. Check that the telephone line cord has been plugged into the base station and the phone socket. • Check the base station plug and the 220V plug (remove and plug-in). • Wait until the line is unoccupied. • Use the original connection cord.
When connect to a PBX, no and/or wrong connection after dialing.	Dialing prefix is needed.	Insert the dialing prefix.
"WAITING" is displayed.	<ul style="list-style-type: none"> • Handset loses the link with base. • Base station not connected to mains. 	<ul style="list-style-type: none"> • Reduce the range. • Connect base station to mains.
The call does not work.	Service not activated or wrong operator or wrong setting.	Check your Subscription with network or change the dial mode.
No display.	Empty battery.	Recharge battery.

Please contact the technical support of the telephone service provider for further information.

This telephone is not equipped with a grounding function! Therefore, some of the functions may be limited when used in PBX systems.

12 GUARANTEE AND SERVICE

The phone is guaranteed for 24 months from the date of purchase shown on your sales receipt. This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, faults on the telephone line, lightning, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

Please keep your sales (till) receipt this is your proof of guarantee.

12.1 While the unit is under Guarantee

- Disconnect the base unit from the telephone line and the mains electricity supply.
- Pack up all parts of your phone system, using the original package.
- Return the unit to the shop where you bought it, making sure you take your sales receipt.
- Remember to include the mains adapter.

12.2 After the Guarantee has expired

If the unit is no longer under Guarantee, contact us via

www.aegtelephones.eu

This product works with rechargeable batteries only. If you put non rechargeable batteries in the handset and place it on the base, the handset will be damaged and this is NOT covered under the warranty conditions.

13 TECHNICAL DETAILS

Standard	Digital Enhanced Cordless (DECT)
Frequency range	1.88 to 1.9 GHz (bandwidth = 20 MHz)
Channel bandwidth	1.728 MHz
Operating range	Up to 300 m outdoors; Up to 50 m indoors
Operating time	Standby: 100 hours, Talking: 10 hours Battery charge time: 15 hours
Temperature range	Operating 0° C to 40° C, Storage -20° C to 60° C

Electrical power	Base unit: input 100-240VAC 50/60Hz 150mA, output 6VDC 450mA
Handset battery Information	2 X 1.2V AAA size 400mAh NiMH

14 CE DECLARATION

This product is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC.

The Declaration of conformity can be found on: www.aegtelephones.eu

15 DISPOSAL OF THE DEVICE (ENVIRONMENT)



At the end of the product lifecycle, you should not throw this product into the normal household garbage but bring the product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user guide and/or box indicate this. Some of the product materials can be re-used if you bring them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection points in your area.

Batteries must be removed before disposing of the device. Dispose of the batteries in an environmental manner according to your country regulations.

16 CLEANING AND CARE

Do not clean any part of your phone with benzene, thinners or other solvent chemicals as this may cause permanent damage which is not covered by the Guarantee.

When necessary, clean it with a damp cloth.

Keep your phone system away from **hot, humid conditions or strong sunlight**, and **don't let it get wet.**

© 2012 Binatone Electronics International Limited

All rights reserved

Subject to availability. Rights of modification reserved.

AEG is a registered trademark used under license from AB Electrolux (publ)

www.aegtelephones.eu

