



*User Manual*

**Botech BC-9700 SERIES**

**Digital Satellite Receiver**

**BC 9700**

**BC 9700 X**

**BC 9700 USB**

**BC 9700 XUSB**



## ***Table of Contents***

■ SAFETY PRECAUTION .....	3
■ GLOSSARY .....	4
■ CONTENTS .....	5
■ MAIN FEATURES .....	5
■ FRONT / REAR PANELS .....	6
- Front panel figure	
- Rear panel figure	
■ REMOTE CONTROL UNIT .....	7
■ SET TOP BOX CONNECTION .....	8
■ GUIDE of FUNCTIONS .....	10
■ OPERATION of MAIN MENU .....	13
I. Edit Channels .....	13
- TV/Radio channel edit	
II. Installation .....	14
- Auto search, Satellite setup, Edit SAT/TP, DiSEqC motorized setting	
III. System Setting .....	20
- OSD control, A/V output setting, Local time setting, Set on/off timer, Password setting, Management-factory setting, Data transfer, Version	
IV. USB PVR .....	23
V. Network .....	25
■ CONNECTION DIAGRAM(DISH) .....	27
■ SPECIFICATION .....	29

## ***SAFETY PRECAUTION***

PLEASE READ THE FOLLOWING SAFETY INSTRUCTIONS CAREFULLY.:

### **MAIN POWER SUPPLY:**

~AC 95-250V, 50/60Hz, Max 30W, SMPS

### **OVER-LOADING:**

Do not overload wall outlets, extension cords or adapters as these can result in fire or electric shock.

### **LIQUIDS:**

Keep liquids away from the STB due to risk of electric shock and malfunctioning of the STB.

### **SMALL OBJECTS:**

Coins or other small objects must be kept away from the STB as they can fall through the ventilation slots of the STB and cause serious damage.

### **CLEANING THE STB:**

Disconnect the STB from the wall socket before cleaning it. Use a dry cloth, lightly dampened (no solvents) to clean the exterior of the STB.

### **VENTILATION:**

Do not block the decoder's ventilation slots. Ensure that a free air flow is maintained around the STB. NEVER stand the STB on soft furnishings or on carpet. Do not use or store the STB where it is exposed to direct sunlight or near a heater. NEVER stack other electronic equipment on top of the STB.

### **CONNECTION TO THE SATELLITE DISH LNB:**

Disconnect the STB from the main power before connecting the cable from the satellite dish. Failure to do so can damage the LNB.

### **SERVICING:**

Do not attempt to service this product by yourself as this will void your guarantee. Refer all servicing to qualified service agents.


## GLOSSARY

### ■ GLOSSARY

- STB- Set Top Box
- TP – Transponder
- RCU – Remote Control Unit

- **Ethernet** (10/100base-T)

Network connection used in the STB to access the Internet:

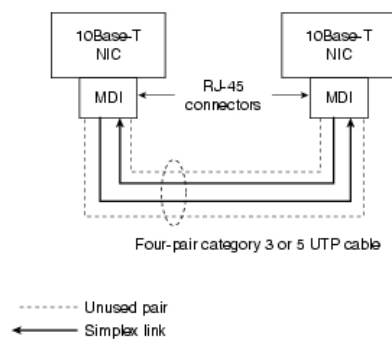

## **CONTENTS**


- SET TOP BOX
- REMOTE CONTROL UNIT
- POWER CABLE
- BATTERIES for RCU (size AAA)
- USER'S MANUAL

## **MAIN FEATURES**

- Ethernet Communication Port ( For 9700 X and 9700 XUSB models )
- 4000 TV & 1500 Radio Channels
- 32MB SDRAM & 2MB Flash
- 13 Multi Picture-In-Picture (PIP)
- USB 2.0 OTG ( For 9700 USB and 9700 XUSB models )
- MPEG2 & DVB-S Compliant
- Optical Digital Audio Output
- 0/12V
- Powerful EPG (Electronic Program Guide): Now/Next & 7 Days Program Guide
- DiSEqC 1.0, DiSEqC 1.2 & USALS Compatible
- OSD Teletext L1.5 (DVB ETS 200 706 / VBI Insertion / Arabic Teletext )
- Video Zoom on Screen
- Software & Data Upgrade via RS-232 (STB-STB, PC-STB)
- Games
- 8 Favorite Groups
- Multi-Event Timer
- 15 Languages Supported: Albanian, Arabic, Bulgarian, English, French, German, Italian, Macedonian, Persian, Romanian, Russian, Serbian, Spanish, Swedish, Turkish
- Fully compliant to DVB standards
- S/W Upgrade via USB H/D or USB memory stick

## FRONT / REAR PANELS

### ■ Front Panel

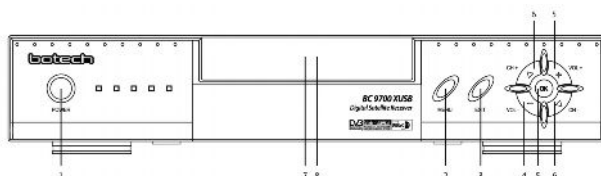

1. Power ON/Standby mode
2. Menu
3. Exit button
4. . Volume▼/▲ button
5. OK button
6. Channel ▼/▲ button
7. Front numeric display (LED)
8. Remote IR sensor


### ■ Rear Panel



1. LNB : Connects to satellite dish/antenna
- 2 RS-232 : Software download/upload
3. Audio L/R : Left & Right audio output
4. VIDEO : Video output
5. 0/12V : 0/12volt output
6. TV : Scart connector for TV
7. ANT. IN : TV RF antenna connection
8. TV OUT : TV RF feed connection
9. Main Power : ~AC 95-250V, 50/60Hz, Max 30W
10. Main Power Switch : On/Off
11. S/PDIF : Digital Audio Output
12. USB PORT
13. RJ45: LAN Port (Ethernet)

## REMOTE CONTROL UNIT

1. POWER : Standby / On
2. MUTE : Audio mute On/Off
3. SIGNAL : To view signal strength bar
4. COLOR : PAL/ NTSC/ AUTO Selection
5. NUMERIC Keys (1~0) : Numeric input
6. FAV : To see Favorite channel list
7. RCL : Press to recall last channel
8. MENU : To access main manu
9. SAT : To view Satellite list
10. CHANNEL ▲/▼ : Channel Down / Up
11. VOLUME ◀▶ : Volume Down/Up
12. OK/LIST : To view channel list (Enter)
13. EXIT : To exit from the menus
14. TV/RADIO : TV↔Radio mode select
15. AUDIO : For audio mode selection
16. INFO key : Press to view Information Box
17. EPG : To access EPG menu
18. TTX : To view teletext on TV Screen
19. MP3 : To view MP3 data
20. PIG : To view multi channels
21. ⏮ : For fast rewinding
22. ⏭ : For fast forwarding
23. ▶ PLAY/ List : To view PVR list / play
24. STOP : To stop function
25. TS(TIMESHIFT) : For timeshift function
26. REC : To view recording box
27. Zoom : Zoom IN/OUT

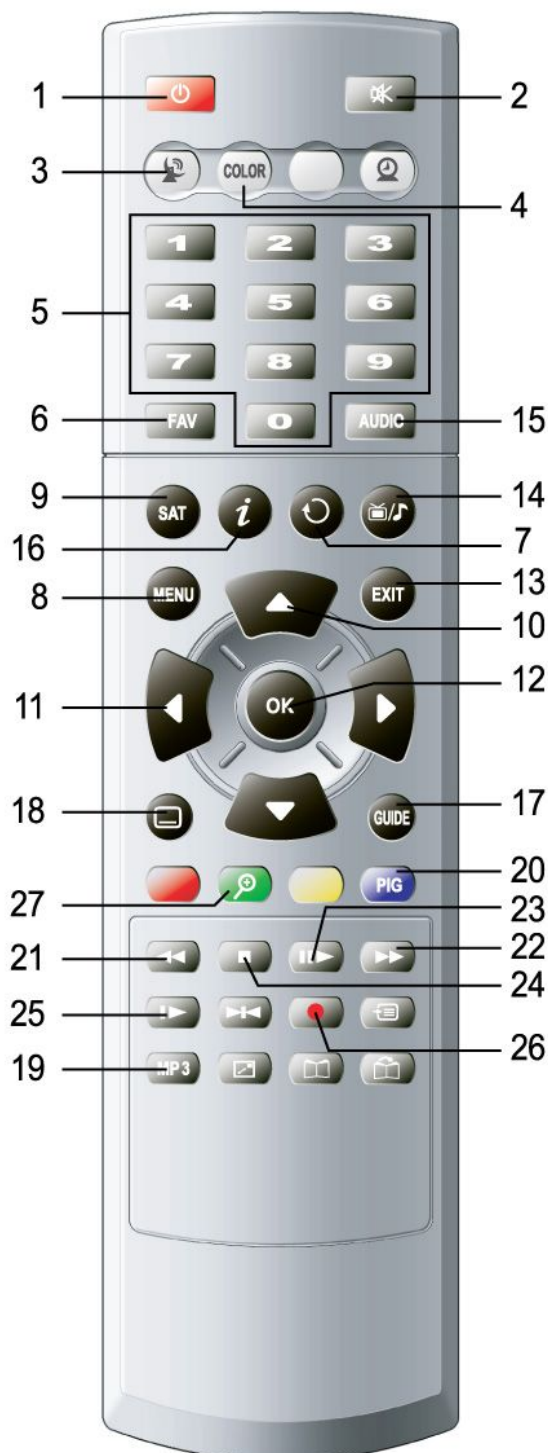

## SET TOP BOX CONNECTION

### ■ CONNECTIONS

- A. **Turn off the main power supply** of the STB before **connecting or disconnecting the LNB**. Connect the TV's RF antenna connector to the **ANT IN** socket of the STB.
- B. RF Connection:
  - a. Connect the RF cable from the **TV OUT** socket of the STB to the **RF IN** socket on the VCR.
  - b. Connect another RF cable from the **RF OUT** socket of the VCR to the **RF IN** socket of the TV.
- C. Connect the coaxial cable from the LNB into the **LNB** socket of the STB.
- D. To connect to another STB, use the **LOOP** socket of the STB.
- E. Use the **VCR / TV Scart** socket to connect to the scart socket of a TV / VCR.
- F. Use the **AUDIO L, R / VIDEO** socket to connect to the Line socket of the TV / VCR.
- G. Use the **0/12 Volt** socket to connect it with the 0/12 volt switch.
- H. **RS232** socket can be used to download and upgrade the software of the STB.
- I. Connect the main power plug of the STB to the mains wall socket. (**~AC 95-250V 50/60Hz, Max 30 watts**)
- J. Connect the **S/PDIF** output with the input connector of a device which is capable of receiving an optical digital Audio input.
- K. Connect the ETHERNET port of the STB to a HUB or xDSL Modem. A Direct LAN cable is required to connect to a HUB or a Modem.



NOTICE : If you are not a very skilled user, it is important that you carefully read this operating manual to get used to some of the essential technical settings required.

First, press the POWER button to turn on the STB from the Standby mode. Then, the Information Box will appear for a short time and disappear. By pressing the ① button, the Info Box will remain on the screen.

The display time of the Info Box is adjustable under the - System preference / OSD control / Info Box time out menu. If the current channel has EPG (Electronic Program Guide) information with it, press the GUIDE button to see not only the current channel's, but also the other channels' EPG as well.

- Press the MENU button on the RCU to make the Main menu appear.
- Go to the LNB setting menu under the Installation menu and press OK button.
- Plug LAN cable (Direct) for network applications
- The default PIN code is 0000
- Choose the right parameters for Satellite name, LNB frequency, 0/12V, 22KHz and DiSEqC 1.0 according to your LNB and satellite settings. If the desired satellite name and LNB frequency is not found in the given list, ask your local dealer for further information.
- When all the parameters are correctly chosen, you will be able to see the green level of the signal quality from the incoming LNB signal.
- Then, choose the Channel search mode in the same OSD page and press OK button.
- And select the Search mode as you desire by using the ◀ / ▶ keys.
- Then, choose the Start searching mode and press OK button.
- The complete searching procedure will take a while. When the searching process is done (100%), press the OK button to Confirm and Save the new channel list.
- For further guide of operations, please refer to the following of this User's manual.

## GUIDE OF FUNCTIONS

### ■ USEFUL TIPS




Information Box



Zoom Function(1)



Zoom Function(2)

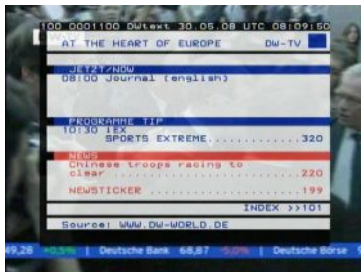

Teletext



CH List



Powerful EPG



Game



Audio




Radio Mode

- **Information Box:** While viewing the channel, press ① button of the RCU once, then the information of the current channel (channel number, name, associated satellite, time and etc.) will appear. By pressing ① button twice, you will be able to see the further details of

the program information and its running time. When you press this button for the third time, you will see the Encryption type of current channel.

- **Zoom function** : Press the Green color key to open the menu. You are able to zoom in the normal size of screen up to x2.
- **Volume control** : Use this volume down ▼ / up ▲ keys to control the audio Volume level.
- **Teletext & Subtitle** : Press the teletext key to view the teletext and subtitle information provided.
- **Channel move by numeric key** : While viewing the channel, use the numeric buttons to move directly to your next desired channel. For example, just press 1 2 0 then the channel 120 will be displayed.
- **Pause** : Press PAUSE button to pause the current channel screen
- **Channel list access (by OK/list button)** : Press OK/LIST Button to view the all TV/Radio channel list and use ▼ / ▲ keys to choose the channel, then press OK button to view that selected channel in the PIG screen.
- **VARIOUS SORTING functions in channel list menu** : In this menu, use the ▲ / ▼ and ◀ / ▶ keys to move & select the desired channel, and then press OK key to view the live channel in PIG screen. To see the list of channels in various sorting, use the color keys in the bottom of the RCU as follows;
  - RED for satellite / GREEN for CAS types / YELLOW for Alphabet / BLUE for All channels sorted list In the each chosen list above, use ▲ / ▼ keys to select and view the sorted lists as desired.
  - **Sorting for combination of two or more condition is possible**. For example, choosing a Hotbird by using RED key and choosing a Conax by GREEN key then choosing Alphabet P through Yellow key will give you the complete list of channel names starting with letter P, encrypted with Conax receiving from the satellite Hotbird.

- **Audio selection menu (by AUDIO key) :** You can choose the audio language of the channel, by pressing AUDIO key of the RCU when a current program supports the various soundtrack. First, you can choose the STEREO, LEFT and RIGHT by using ◀/▶ keys. And use ▼/▲ keys to select the desired audio track.
- **Radio channel mode (TV/Radio key) :** Use this TV/Radio button to toggle between the TV and Radio channel mode.
- **Multi-PIG:** 13 sub-pictures would be shown when press “Blue” button of RCU.
- **EPG (Electronic Program Guide) access by GUIDE key :** To see the information of current showing TV/Radio services as well as the next program schedules, press GUIDE button of the RCU. If any EPG is available on that program, you will see the details such as description, start/end time and schedules etc. To see the extended information of that program, press ⓘ button of the RCU.

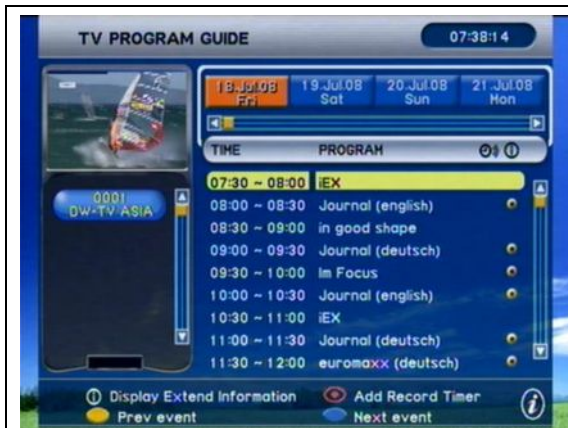

EPG supports 7-day schedules and reserved watching on EPG.

**Note)** If prefer to cancel the reserved event, please go to “SET ON/OFF Timer” MENU.

## OPERATION OF MAIN MENU

### I. CHANNEL ORGANIZE

#### A. TV / Radio channel edit



In this menu you can edit the TV/Radio channels in various ways. To edit the Radio channels, press TV/Radio button to change to Radio CH edit mode. Use ◀/▶ keys to select the desired edit mode and press OK button.

**\* While editing the channels, press RED key of the RCU to view the selected channel in the PIG screen.**

- **RENAME** : Select the channel you want to rename and press OK key, then the KEY PAD window will appear. Use the given keys from the pad to rename the new CH name. Press the BLUE key of the RCU to delete, and press RED key to Save & Quit when you are done with renaming.
  - **LOCK** : Select the channel you want to be locked and press OK button to LOCK. If you press OK button twice the selected channel will be UNLOCKED. Use EXIT key to get out from the menu when you are done.
- \* When you select the LOCKED channel while viewing, you will be asked for a password in order to access the channel. So, use this feature to **KEEP THE CERTAIN CHANNELS AWAY FROM YOUR CHILDRENS VIEW.****
- **SKIP** : Select the channel you want to be skipped and press OK button to skip. If you press OK button twice the selected channel will be UN-skipped again. Use the EXIT key to get out from the menu when you are done.

- **DELETE** : Select the channels which you want to be deleted and press OK key. And you will see the delete marking' indicated next to the channel names. The selected channels will be deleted when you exit the channel edit menu.
- **Deleting is different from skipping function as it removes the channel completely and permanently from the memory of the STB. The ONLY way of recovering the deleted channels are performing a new CH Search.**
- **MOVE** : Select the channel you want to be moved with OK key, and use ▲/▼ keys to relocate them.
- **SORT** : By pressing OK key, the list of sorting types will appear. Select the desired one and press OK to perform it.
- **FAVORITES** : Use the RED key to name the Favorite group name as you wish, then press the GREEN button to add or delete the channels from that favorite group. The YELLOW button is provided for deleting the selected group.

## II. INSTALLATION

### A. Channel search




- **Search Mode** : Press ◀/▶ keys or OK key to view and select the desired search mode
  - One satellite : Will search only one selected satellite.
  - Multi satellites : Will search more than two selected satellites by one searching procedure.
  - One transponder : Will search only one selected transponder.
  - Multi transponders : Will search more than two selected TPs within the same satellite.
  - PID search : Will search a certain channel with known Video, Audio, PCR PIDs.
- **Satellite Name** : Press OK button to display the complete list of satellites and choose the one which you want to perform the search. If the desired satellite name is not in the list, press the RED button to move to the LNB setting menu then **ADD a new satellite name. Refer to LNB setting menu for further details.**

- **LNB Frequency** : Press OK button to see the frequency list given and select the proper frequency according to the current LNB being used for the selected satellite. You can also enter the frequency by using the numeric keys of RCU.
- **DiSEqC 1.0 selection** : Press OK key to display the list and choose the proper selection for your DiSEqC switch.
- **Transponder** : Press OK button to view the transponders list of the selected satellite then again use OK button to select the desired one. If the desired TP frequency is not shown in the given list, then press GREEN button to go to SAT/TP Edit menu and edit a new TP frequency. **Refer to SAT/TP Edit menu for further details.**
- **Network Search** : Some of the new transponders being broadcasted in the satellite could be missing in the given TP list. In this case, there is a good chance that the information of those new transponders are being sent through the given TP. So, if you set the Network Search to 'ON' status and search that TP, then you will be able to catch the channels in those new transponders.
- **FTA/Scrambled** : Select 'FTA Only' to search the Free To Air channels only. Otherwise, select 'ALL' to perform the search for all the encrypted + FTA channels.
- **Start Searching** : If all of the above parameters are set correctly, you will be able to see both of the **Signal (RED bar) and Quality (Green bar) level** at the bottom of the menu. Now, press OK button(Blue key) to start searching.



## B. LNB Setting

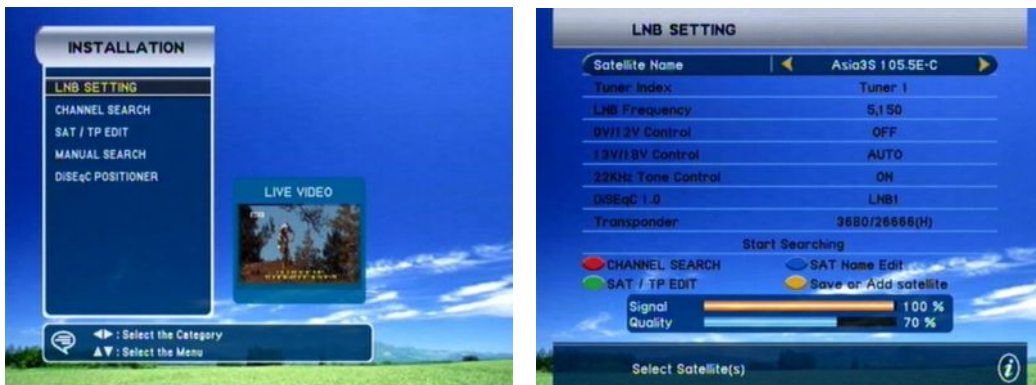

In this menu, you are asked to set the proper conditions for LNB and other switches such as DiSEqC, 0/12V, and 22KHz tone. Especially if you want to perform a multi-satellite search, it is required that you complete the settings for corresponding satellites in this menu.

- **Satellite Name** : Select a satellite which you want to set the conditions for. And if want to add a new satellite name, select the '**APPEND**' from the bottom of the given satellite list then press BLUE button of the RCU to name this new satellite.
- **LNB Frequency** : Select a desired LNB frequency from the list given, or add a new one by numeric key of RCU.
- **0 / 12 Volt control** : Select 'ON', if you are using a 0/12V switch for selected satellite. Otherwise choose 'OFF'.
- **13 / 18 Volt control** : Select 'AUTO', then this voltage control will apply automatically for the selected satellite.
- **22KHz Tone Control** : Select 'AUTO', then this tone control will apply automatically for the selected satellite.
- **DiSEqC 1.0 Selection** : Press OK key to display the list and choose the proper selection for your DiSEqC switch.
- **Transponder** : Select the desired transponder from the given TP list. If the desired TP frequency is not shown in the given list, then press GREEN button to go to SAT/TP Edit menu and edit a new TP frequency.

Refer to SAT/TP Edit menu for further details.

\*If all of the above parameters are set correctly, you will be able to see both of the Signal (RED bar) and Quality (Green bar) level at the bottom of the menu.

**Notice** : A minimum level of stable signal Quality is required to be able to search and view the channels.



Use the RED / GREEN / YELLOW / BLUE keys of the RCU to directly access the followings from this menu ;


**RED key** : Channel search menu

**GREEN key** : SAT/TP Edit menu

**YELLOW key** : DiSEqC Positioner menu

**BLUE key** : Save or Add Satellite

### C. SAT/TP Edit

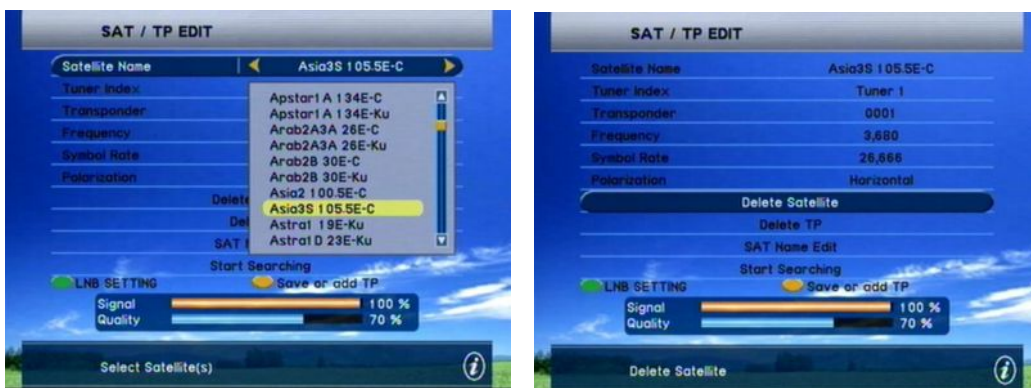

In this menu, you can delete the existing satellites and you can also add/delete the transponders. (If you want to ADD new satellites, Go to the LNB setting menu).

- **Satellite Name** : Select a satellite which includes the transponders you wish to edit (Add/Delete).
- **Transponder** : Select a transponder which you want to edit, and you will be able to edit its Frequency, Symbol Rate and a Polarization.
- If you want to **ADD** a new **TP** for the selected satellite, choose the '**NEW TP**' from the end of the given transponder list. Input the correct frequency, symbol rate and polarization then **press the BLUE key of the RCU to add this new TP.**
- **Frequency** : Input the desired new TP frequency by using the numeric buttons of RCU.
- **Symbol Rate** : Input the desired new Symbol rate by using the numeric buttons of RCU.
- **Polarization** : Select either the Vertical or Horizontal polarity for selected transponder above.  
**After setting all the above parameters, press the BLUE key of the RCU to SAVE the current edited TP.**
- **Deleting Satellite** : First, press OK button to open the Delete Satellite window. Then use ▲/▼ & ◀/▶ keys to move and press OK to select the satellites which you want to delete.  
**After selecting satellites, press RED button of the RCU to delete the satellites.**
- **Deleting TPs** : Also, press OK button to open the Delete Transponder window. Then use ▲/▼ & ◀/▶ keys to move and press OK to select the TPs which you want to be deleted.  
 After selecting transponders, press RED button of the RCU to delete the transponders.

## D. DiSEqC Positioner



### ■ DiSEqC Motor

If you have a DiSEqC 1.2 motorized system, you can use this DiSEqC 1.2 positioner functions.

- **Satellite Name** : A selection of this satellite names will be used to identify a motor antenna position.
- **Mode** : Choose 'DiSEqC Motor' to use this motorized system.
- **Transponder Frequency** : This selected frequency will be used to catch the strong level of signal.
- **Command Mode** : Choose between the User and Installer modes.
  - User : This mode is used to fine-tune the position of the motor antenna for better signal reception
  - Installer : This mode is used to search for the position of a **selected satellite manually**.
- **Movement**
  - In User mode** : The movement will be adjustable by fine tuning.
  - In Installer mode** : The movement will be adjustable by East / West going command.
- **Motor Control** : Go to - To select motor control
- **Store Position** : To store a new position, or Overwrite a position

## ■ USALS


- In order to use this USALS function, you need to have the Rotor installed to your Dish mount
- Select the desired satellite which you wish to perform the search, then the Sat Longitude will be automatically changed.
- Now, just put in the numeric data for your Longitude and Latitude of your Dish location.
- And wait for a short time, until the Dish automatically finds the desired satellite.
- Once you find the 1 satellite position, the others will also follow automatically.

**To use this USALS function, please refer to your local installer or distributor of our STB.**

**( You can also visit - [www.stab-italia.com](http://www.stab-italia.com) for your reference ).**

## III. SYSTEM SETTING

### A. OSD Control

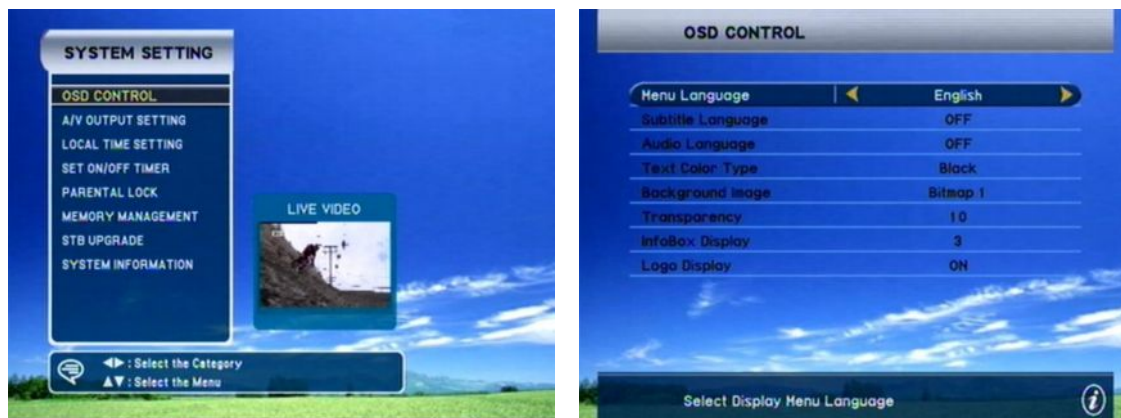


In this menu, you can set the preferences regarding the On Screen Display of your choice ;

- **Menu language** : Select the language which you want the OSD to be displayed in.
- **Transparency** : Higher the OSD transparency, you will be able to see the live picture more clearly on the back screen.
- **Info Box & Volume Bar Time out** :

## B. A/V Output Setting

Choose the TV type between PAL/NTSC/AUTO and if you have the TV supporting RGB, select RGB mode to get the **best picture quality**. Also, if you have a TV which supports the 16:9 format, choose the Letter Box. AUX mode is provided for a case when you connect the other IRD to a VCR scart of this STB, choose the IRD to view the video of the other IRD connected. Finally, choose required RF settings. The default is set for RF channel number 38.

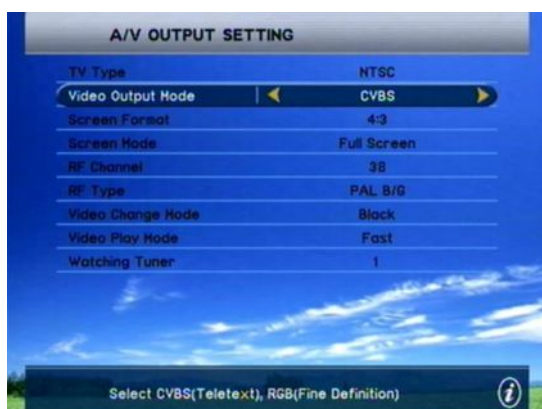

## C. Local Time setting

Select the GMT Usage as you desire. If you set the GMT Usage 'ON', this means you will get the time reference from the broadcasted stream of the satellite. Also, set the proper GMT time offset as you require. When you don't want to use the GMT time as a reference clock, use the Manual time by setting the Hour and Minute according to your local time.

## D. Set on/off Timer

In this menu, you can set 8 event timers for selected channels. Choose the event number first, and select the status for Usage of the timer.

On/Off Mode means whether you will turn On or Off the STB with the timer. Input the parameters of desired channel and the Time which you want the timer to start operate.

\* **Reference time for a Timer operation** is either the GMT time or a Manual time set, depends on a GMT usage status.



## E. Parental control

In this menu you can set the Locking status of several menus which will prohibit the accessing of those menus from the unwanted person (ex. Your children). And you can also set the desired age rating for channel accessing here.

If you wish to change the password, input the current PIN then new PIN, and verify to complete.



## F. Memory Management

- **Factory Setting**

Factory setting is required after a certain upgrade of the STB's software. In this case, you will be notified by your local installer or distributor in advance. And

**Performing a factory setting will DELETE ALL THE CHANNEL related data, so DO NOT perform this factory setting if you are not asked to do so.**

## IV. USB PVR (FOR 9700 USB & 9700 XUSB)

Before connecting USB H/D to STB, please format H/D on FAT 32.

### A. Recording

a. Recording: Press [REC] button while watching screen to display the recording box. Then, you can check the status and process time of recording at the left side of screen.

b. Stop Recording: Press [STOP] button to quit the recording. Then, the recording information bar will disappear.



## B. Playback

- a. PLAY / LIST : Press [PLAY / LIST] button to display the PVR LIST. Select the recorded channel at the list to
- b. Forward / Backward: Press [ forward / backward] button for moving playback position. With pressing again and again, you can go forward or backward as you like.
- c. Pause : Press [Pause] button to stop playing.
- d. Stop : Press [Stop] button to stop playback function. Then it will go back to the LIVE video watch.
- e. You can see the information of selected channel at the left top side

## C. Timeshift

- a. Timeshift On: Press [TS] button while watching LIVE to use timeshift function. It stores current channel for max. 4 GB. The duration time differs from 1 and half hour to two and half hour according to stream bit rate.
- b. Timeshift Off: To stop the Timeshift function, press [STOP] button.

## D. MP3

- a. MP3 LIST : Press [MP3] button to display the MP3 data downloaded from PC in the separate MP3 screen. If you cannot see the list, you should download MP3 files according to 'c' below. Move the MP3 files using [▲ ▼] button and to play the selected file, press [OK] button. Then, the list of selected MP3 files will be displayed at the left-bottom side.

- b. MP3 Play List: Press [◀▶] [▶▶] to move MP3 file in the MP3 Play List. Select MP3 files you



want to listen and press [ ► ] button to play the selected files. If you press [MP3] button again, a small screen which only shows the title of a song will appear. If you want to listen to other music, repeat the above process.

c. MP3 Data Download From PC: Connect USB H/D to PC and copy MP3 files of PC into USB H/D.





## V. NETWORK (FOR 9700 X & 9700 XUSB)

- Network Address Setting

For network applications, the STB should be set network addresses. Please follow the steps for setting network address;

- Step 1. Connect Ethernet(i.e., LAN cable) to the STB
- Step 2. Enter the Network Address Setting menu of Main MENU
- Step 3. Set the IP address of STB either Static or DHCP

Before setting to Network Address, the STB should be connected the Ethernet network with ADSL router (or HUB). If not connected, and enter the Network MENU, it shows a message of being not connected as below;



If LAN cable connected, Network Address Setting would be available as above figure, and press “OK” for entering it. There would be set the network IP address through either Static or DHCP method as below;

### **Static Method – Not recommended (Use for Professional usage)**

In this method, a user directly inserts the IP address of STB. Thus, select the Static, and all terms required network address would be highlighted;



This Static mode also purposes for TEST or Manufacturing of STB.  
*Not recommended.*

**DHCP Method – Recommended (Use for generic network applications)**

In this method, a user obtains the IP address of STB from DHCP server (i.e., ADSL router or HUB which has a IP sharing function). Thus, select the DHCP and some of terms required network address would be not highlighted as below. Press OK for obtaining IP address.

This DHCP mode is a factory default mode when factory reset of STB.



MENU for DHCP



Finding IP address

Note) On DHCP mode, IP address would be automatically obtained every time power is off and on.

## CONNECTION DIAGRAM(DISH)


### 1) One Dish



### 2) 2 dishes



### 5) 8 dishes and DiSEqC switches

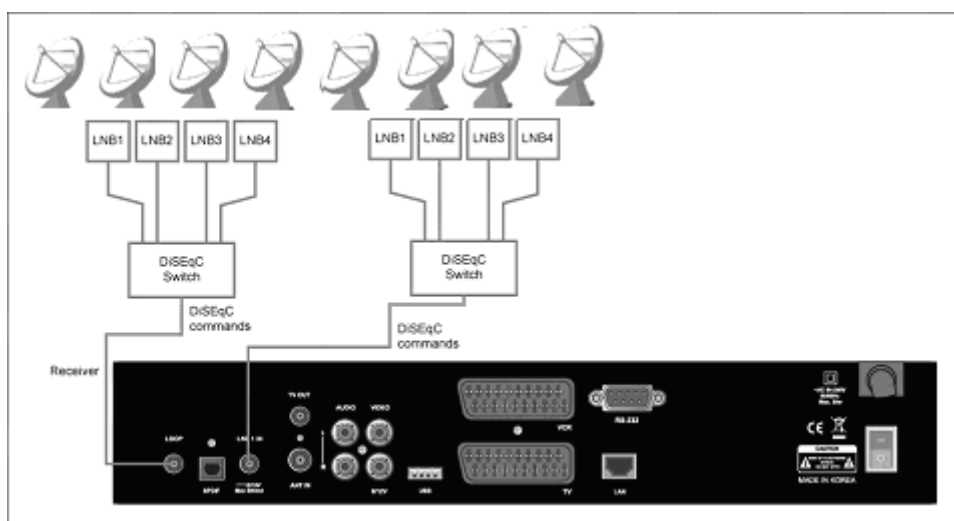

## **SPECIFICATION**

### I. STB Specifications

Specification	Description
Power	~AC 95 - 250V SMPS
Input Frequency	950~2150 MHz
Data Transfer	RS-232C, Male type, 115Kbps
SCART	2 SCART for TV / VCR
A/V Out	Video, Audio (left / right)
LNB Power	13 / 18 volt (500mA Max)
Modulation & FEC Type	QPSK / Multiple convolution coding
Digital Audio	S/PDIF Output (OPTION)
DiSEqC support	DiSEqC 1/2/3/4 & Compatible
Tone Switching	22KHz tone
RF Modulator	UHF CH 21~69 with PAL I/G/K
Video Spec.	MPEG-2 / DVB Compliant
Video Compression	MP@ML in MPEG-2
Network	RJ-45 connector for Ethernet Interface
USB PVR	USB 2.0, OTG

### II. Main processor & Memories

Specification	Description
Main CPU	32bits RISC CPU @133MHz
Flash Memory	2MB
SDRAM	32MB
Network IC	W3150A+

### III. Tuner & QPSK Channel

Specification	Description
Input frequency range	950~2150 MHz
Channel capacity	4000 TV and 1500 Radio Channels
Tuning system	PLL digital synthesis channels
Tuning step	500KHz Max
Modulation	QPSK (DVB Compliant)

Inner FEC	FEC Rates : 1/2, 2/3, 3/4, 5/6, 7/8 (DVB specification)
Outer FEC	Input Symbol Rate
Input Symbol Rate	2 ~ 45M symbols/sec
IF Bandwidth	27MHz
Connector Type	F type (IEC 169-24 female)

#### IV. MPEG Audio

Specification	Description
Operation mode	Stereo and Left/Right (Mono)
Sampling Rates	32, 44.1 and 48KHz
Resolution	16 bit digital to analogue Converters

#### V. MPEG Video

Specification	Description
Video spec.	Meets ETR 154 amended in ALM-95-021
TV System	PAL I/G/K
Video decoding	ISO / IEC 13818-2, MP@ML
Resolution - PAL	720 pixels x 576 lines x 25 frames /sec
Resolution - NTSC	720 pixels x 480 lines x 30 frames / sec

#### VI. RF Modulator

Specification	Description
Connection	IEC coaxial female 9.5mm (IEC 168-2)
Features	Input RF bypass supported
Channel range	CCIR UHF E21 - 69 adjustable
Pre-set channel	Channel 38

#### VII. Data Input & Output

Specification	Description
Serial Interface	9-pin D-sub Type Male RS-232
	Max. 115Kbps supported
Ethernet Interface(삭제)	RJ-45
	10base-T supported

#### VIII. Power Supply

Specification	Description
Input Voltage	~AC 95 - 250V, 50/60Hz
Type	SMPS
Power Consumption	Max. 30 Watt
Standby Power	10 Watt
Power protection	Internal fuse

#### IX. Others

Specification	Description
Physical figure (W x H x D)	340 x 60 x 252mm
Weight (net)	Approx. 2.5 Kg
Operation Temp.	0°C ~ 45°C