

User Guide



Transform™

www.sprint.com

©2010 Sprint. SPRINT and the logo are trademarks of Sprint.
Other marks are the property of their respective owners.

9/16/10



Consejo: Para encontrar esta guía para usuarios en español, por favor visita a www.sprint.com y haz clic en **Support > Devices**.

To find this user guide in Spanish, please visit www.sprint.com and click **Support > Devices**.

Important Privacy Message – Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

Open Source Software – Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://opensource.samsungmobile.com/index.jsp>.



This device uses open source software. Press  >  and tap **Settings > About phone > Legal information** on the device for more details

Table of Contents

Tip: Looking for something? If you don't see it in the headings listed here, try the Index on page 213.

Introduction	i
Your Device's Menu	i
Section 1: Getting Started	1
1A. Setting Up Service	2
Setting Up Your Device	2
Activating Your Device	4
Setting Up Your Voicemail	7
Sprint Account Passwords	8
Getting Help	9
Section 2: Your Device	11
2A. Device Basics	12
Your Device	13
Viewing the Display Screen	17
Turning Your Device On and Off	20
Battery and Charger	21
Device Function Keys	24
Navigation and Customization	28

Displaying Your Phone Number	42
Entering Text Using the Onscreen Keyboard ..	42
Entering Text Using the QWERTY Keyboard ..	46
Creating a Google Account	50
2B. Making and Answering Calls	51
Making Calls	51
Dialing Options	52
Answering Calls	52
Missed Call Notification	53
Calling Emergency Numbers	53
In-Call Options	55
End-of-Call Options	56
Additional Calling Options	56
Saving a Phone Number	57
Finding a Phone Number	58
Dialing From the Contacts List	58
Using Favorites	58
Plus (+) Code Dialing	59
2C. Settings	60
Sound Settings	60
Display Settings	63

Language Settings	66
Location Settings	66
Synchronizing Accounts	67
Search Settings	70
Call Settings	71
Airplane Mode	72
TTY Use With Sprint Service	72
Security Settings	74
2D. Call Log	81
Viewing Call Log	81
Call Log Options	82
Making a Call From Call Log	84
Saving a Number From Call Log	84
Altering a Number From Call Log	85
Erasing the Call Log	85
2E. Contacts	86
Creating a New Contacts Entry	86
Confirming Contact Synchronization	88
Contacts Menu Options	89
Contacts Entry Options	90
Editing a Contacts Entry	91

Adding a Number to a Contacts Entry	92
Editing a Contacts Entry's Number	92
Sending Contacts	93
Assigning a Picture to an Entry	93
Deleting Entries	94
Adding Entries to Your Favorites	94
2F. Calendar & Tools	95
Before You Begin	95
Calendar	95
Alarm Clock	101
Calculator	102
Updating Your Device Firmware	103
Updating Your Android Operating System ...	105
Updating Your Profile	105
Updating Your PRL	106
2G. Voice Services	107
Voice Dialing	107
Opening Menus With Voice Dialer	109
Text-to-Speech	109
Voice Search	110

2H. microSD Card	111
Your Device's microSD Card and Adapter	111
Connecting Your Device to Your Computer	113
microSD Card Settings	116
Important Connection Information	117
2I. Camera	118
Taking Pictures	118
Recording Videos	124
2J. Bluetooth	127
Turning Bluetooth On and Off	127
Using the Bluetooth Settings Menu	128
Pairing Bluetooth Devices	129
Sending Contacts via Bluetooth	131
Disconnecting Bluetooth Connection During an Active Call	132
Section 3: Sprint Service	133
3A. Sprint Service: The Basics	134
Visual Voicemail	134
Text Messaging (SMS)	139
Multimedia Messaging (MMS)	141
Caller ID	145

Call Waiting	145
Making a 3-Way Call	146
Call Forwarding	147
Roaming	147
3B. Web and Data Services	151
Getting Started With Data Services	151
Navigating the Web	153
Wi-Fi	160
Email	162
Using the Android Market	174
Sprint Applications	175
3C. Entertainment: TV and Music	180
Getting Started with Sprint TV and Music	180
Sprint TV	181
Music	181
Streaming Music	183
YouTube	184
3D. GPS Navigation	185
GPS Services	185
Google Maps	185
TeleNav GPS Navigator	187

Getting Driving Directions	189
Navigation	194
Section 4: Safety and Warranty	
Information	195
4A. Important Safety Information	196
General Precautions	196
Maintaining Safe Use of and Access to Your Phone	197
Using Your Phone With a Hearing Aid Device	198
Caring for the Battery	200
Radio Frequency (RF) Energy	201
Owner's Record	203
User Guide Proprietary Notice	203
4B. Manufacturer's Warranty	204
Manufacturer's Warranty	204
Index	213

Introduction

This **User Guide** introduces you to Sprint® service and all the features of your new device. It's divided into four sections:


- ◆ Section 1: Getting Started
- ◆ Section 2: Your Device
- ◆ Section 3: Sprint Service Features
- ◆ Section 4: Safety and Warranty Information







Note: Because of updates in phone software, this printed guide may not be the most current version for your phone. Visit www.sprint.com and sign on to **My Sprint** to access the most recent version of the user guide.


WARNING: Please refer to the **Important Safety Information** section on page 196 to learn about information that will help you safely use your phone. Failure to read and follow the Important Safety Information in this phone guide may result in serious bodily injury, death or property damage.

Your Device's Menu


The following table outlines your device's main menu structure. For more information about using your device's menus, see "Navigation and Customization" on page 28.






From the Home screen, press  to open the menu:


- Add ()
- Wallpaper ()
- Sprint ID ()
- Search ()
- Notifications ()
- Settings ()


Device menus with additional options ("sub-options") appear with  adjacent to the list entry.


Tap this onscreen button to reveal these additional options and features.


 > Add
1: Shortcuts
1: Applications 2: Bookmark 3: Contact 4: Direct dial 5: Direct message 6: Directions & Navigation 7: Gmail label 8: Latitude 9: Music playlist 10: Settings
2: Widgets
1: Analog clock 2: Latitude 3: Music 4: Picture frame 5: Power Control 6: Search 7: Sprint Tutorial Widget #1 8: Sprint Tutorial Widget #2 9: Sprint Tutorial Widget #3 10: Sprint Tutorial Widget #4 11: Sprint Tutorial Widget #5 12: Voicemail 13: YouTube
3: Folders
1: New folder 2: All contacts 3: Contacts with phone numbers 4: Google Contacts 5: Starred contacts
4: Wallpapers
1: ID wallpapers 2: Pictures 3: Wallpaper gallery




 > Wallpaper
1: ID wallpapers
2: Pictures
3: Wallpaper gallery
 > Sprint ID
1: My ID 2: Get New
 > Search
 > Notifications
 > Settings > Wireless & networks
1: Airplane mode (On/Off)
2: Wi-Fi (On/Off)
3: Wi-Fi settings
1: Wi-Fi (On/Off) 2: Network notification (On/Off) 3: Add Wi-Fi network
4: Bluetooth (On/Off)
5: Bluetooth settings
1: Bluetooth (On/Off) 2: Device name 3: Discoverable (On/Off) 4: Scan for devices



6: VPN settings
7: Mobile networks
1: Data roaming (On/Off) 2: Call Guard (On/Off) 3: Data Roaming Guard (ON/OFF) 4: System select (Home only/Automatic)
8: Dial Up Networking (On/Off)
 > Settings > Call settings
1: North American dialing (On/Off)
2: International dialing
3: DDTM
1: OFF 2: ON
4: TTY
1: TTY Off 2: TTY HCO 3: TTY VCO 4: TTY Full
5: Voicemail settings
1: Notifications 2: Pictures (On/Off) 3: Speakerphone (On/Off) 4: Change greeting 5: From name 6: Check for upgrade 7: About Voicemail



 > Settings > Sound & display
Sound settings:
1: Silent mode (On/Off)
2: Ringer volume
1: Use incoming call volume for notifications
3: Media volume
4: Phone ringtone
5: Phone vibrate (On/Off)
6: Notification ringtone
7: Audible touch tones (On/Off)
8: Audible selection (On/Off)
9: Haptic feedback (On/Off)
10: SD card notifications (On/Off)
Display settings:
1: Orientation (On/Off)
2: Animation
1: No animations 2: Some animations 3: All animations


3: Auto Brightness (On/Off)
4: Brightness
5: Screen timeout
1: 8 seconds 2: 15 seconds 3: 30 seconds 4: 1 minute 5: 2 minutes 6: 10 minutes 7: 30 minutes
6: Keyboard timeout
1: 3 seconds 2: 6 seconds 3: 20 seconds 4: 1 minute 5: Same as Screen timeout
 > Settings > Location & security
My Location:
1: Use wireless networks (On/Off)
2: Use GPS satellites (On/Off)
Screen unlock pattern:
1: Set unlock pattern
2: Require pattern (On/Off)
3: Use visible pattern (On/Off)
4: Use tactile feedback (On/Off)


Passwords:
1: Visible passwords (On/Off)
Credential storage:
1: Use secure credentials (On/Off)
2: Install from SD card
3: Set password
4: Clear storage
 > Settings > Applications
1: Unknown sources (On/Off)
2: Quick launch
3: Manage applications
4: Running services
5: Development
1: USB debugging (On/Off) 2: Stay awake (On/Off) 3: Allow mock locations (On/Off)


 > Settings > Accounts & sync
General sync settings:
1: Background data (On/Off)
2: Auto-sync (On/Off)
Manage accounts:
 > Settings > Privacy
Location:
1: Use My Location (On/Off)
Personal data:
1: Factory data reset
 > Settings > SD card & phone storage
SD card:
1: Total space
2: Available space
3: Unmount SD card
4: Format SD card

Internal phone storage:
1: Available space
 > Settings > Search
Web search:
1: Google search settings
1: Show web suggestions 2: Search history 3: Manage search history
Quick Search Box:
1: Searchable items
1: Browser (On/Off) 2: Apps (On/Off) 3: Contacts (On/Off) 4: Voicemail (On/Off) 5: YouTube (On/Off) 6: Music (On/Off)
2: Clear search shortcuts
 > Settings > Language & keyboard
1: Select locale
1: English 2: Español
Text settings:
1: Android keyboard (On/Off)

2: Android keyboard
1: Vibrate on keypress (On/Off) 2: Sound on keypress (On/Off) 3: Auto-capitalization (On/Off) 4: Voice input (On/Off) 5: Quick fixes (On/Off) 6: Show suggestions (On/Off) 7: Auto-complete (On/Off)
3: Device keyboard
1: Auto-replace (On/Off) 2: Auto-cap (On/Off) 3: Auto-punctuate (On/Off)
4: User dictionary
 > Settings > Accessibility
1: Accessibility (On/Off)
Accessibility services:
1: TalkBack (On/Off)
2: SoundBack (On/Off)
3: KickBack (On/Off)
 > Settings > Text-to-speech
1: Listen to an example
2: Install voice data

3: Always use my settings (On/Off)
4: Speak incoming caller ID (On/Off)
Default settings:
1: Speech rate
2: Language
1: American English 2: Spanish
 > Settings > Date & time
1: Automatic (On/Off)
2: Set date
3: Select time zone
4: Set time
5: Use 24-hour format (On/Off)
6: Select date format
1: Normal (12/31/2010) 2: 12/31/2010 3: 31/12/2010 4: 2010/12/31

 > Settings > About phone
1: System Updates
1: Update Firmware 2: Update Profile 3: Update PRL 4: Update Android
2: Status
1: Battery status 2: Phone number 3: MIN 4: PRL Version 5: MEID 6: Network 7: Signal strength 8: Mobile network type 9: Service state 10: Roaming 11: Mobile network state 12: Wi-Fi MAC address 13: Bluetooth address 14: Up time
3: Battery use
4: Legal information
1: Open source licenses 2: Google legal 3: Privacy Alert from Sprint
5: System tutorial
6: Model number
7: Firmware version
8: Baseband version
9: Kernel version

10: Build number
11: Hardware version
<i>In Use Menu</i>
While in an active call, press  to display the following options:
1: Show/Hide dialpad 2: Add call 3: End call 4: Mute/Unmute 5: Speaker (On/Off) 6: Bluetooth (On/Off)

WARNING: If your device has a touchscreen display, please note that a touchscreen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touchscreen may damage the tempered glass surface and void the warranty. See “Manufacturer’s Warranty” on page 204.

Section 1
Getting Started



1A. Setting Up Service

- ◆ Setting Up Your Device (page 2)
- ◆ Activating Your Device (page 4)
- ◆ Setting Up Your Voicemail (page 7)
- ◆ Sprint Account Passwords (page 8)
- ◆ Getting Help (page 9)

Setting Up Your Device

1. Install the battery.
 - Remove the battery from its packaging.
 - Grasp the device firmly and locate the cover release latch.
 - Place your fingernail in the opening and firmly “pop” the cover off the device (similar to a soda can).



- Insert the battery into the opening in the back of the device, making sure the connectors align. Gently press down to secure the battery.

- Position the battery cover over the battery compartment and press down until you hear a click.



2. Press and hold **⓪** to turn the device on.
 - If your device is activated, it will turn on, search for Sprint service and enter standby mode.



Unlocking Your Device Screen

- To unlock your phone from this screen, touch and drag the lock icon across the screen or slide the QWERTY keyboard out.

Note: The screens can be different and are based on the installed screen image that users pack

Activating Your Device

- If you purchased your device at a **Sprint Store**, it is probably activated and ready to use.
- If you received your device in the mail and it is for a **new Sprint account or a new line of service**, it is designed to activate automatically. To confirm your activation, make a phone call.
- If you received your device in the mail and you are **activating a new device for an existing number on your account**, (you're swapping phones), you can activate on your computer online or directly on your phone.
 - **Activate on your computer:**
 - Go to sprint.com/activate and follow the instructions.
 - **Activate on your phone:**

Important: For security reasons, you will need your Sprint phone number and PIN to use this activation method.

1. Turn on your new phone. (Make sure the old one is turned off.) Your phone will automatically attempt Hands-Free Activation.





Note: Your phone will need to complete one hands-free activation attempt before you can continue.

2. Tap **Activate** to override auto-activation and start the manual activation wizard.

Note: If you don't override Hands-Free Activation, your phone will attempt to auto activate five times. Wait for **Retry** to appear on your screen. Tap **Retry** and then tap **Activate**.

3. Follow the on-screen prompts to complete the activation process.
4. After you have completed the wizard, make a phone call to confirm your activation.

If your device is still not activated or you do not have access to the Internet, contact Sprint Customer Service at **1-888-211-4727** for assistance.

Tip: Do not press  while the device is being activated. Pressing  cancels the activation process.

Note: If you are having difficulty with activation, contact Sprint Customer Service by dialing **1-888-211-4727** from any other phone.

Sprint ID

Once your device is activated, the next thing you will need to do is to install an ID Pack. These ID Packs similar to a “device pack” that contains features and functions ranging from icons, wallpapers, menus, and applications.

More than a new User Interface skin for your device, this package of features and functions are each customized for different uses. These IDs can be downloaded directly from the device and purchased via the online Sprint Store.

ID Packs are installed using an application called Sprint ID. You can install as many ID Packs as you wish, and you can easily switch from one ID Pack to another without losing any applications already installed.



For example, when you install the Sprint pack, Sprint applications such as Sprint TV, TeleNav™ GPS Navigator, NASCAR Sprint Cup Mobile, and Sprint Football Live will remain in your applications.

Before you can begin using your newly activated device, you must first install a Sprint ID Pack.

Installing Your First ID Pack

Note: Your device must be activated, your battery should be fully charged, and you should be in a network coverage area before you install an ID Pack.

1. Tap **Install an ID** on the **Welcome to Sprint ID** screen.

- If your device is in PowerSave mode, press  to reactivate the screen.
- If the lock screen appears, unlock it by dragging the **Unlock** icon  to the right side of the screen.)

Note: You also have the ability to place an emergency call directly from the Welcome to **Sprint ID** screen.

2. Touch an ID Pack (such as **Sprint**) on the **Browse ID Packs** screen.


Note: The **Sprint ID** pack comes with wallpapers, ringtones, and applications such as **Sprint TV, Navigation, Music, Football, and NASCAR.**

3. Read the information screen for a description of the ID Pack and touch **Install**.
4. Touch **Agree** to accept the Terms & Conditions of the ID Pack.
5. If prompted, touch **Continue** on any following screens until you see the Downloading... progress icon in the upper-left corner of your screen.

WARNING: DO NOT interrupt the download process.

6. Press  >  and tap  (**Notifications**) and tap **ID ready to install** to install the ID Pack.






Switching ID Packs

1. Press  >  and tap  (**Sprint ID**).
2. Tap an ID Pack to replace your current pack.
– or –






Tap **Get New** to install a new ID Pack and follow steps 2–5 of “Installing Your First ID Pack” on page 6.

Note: Certain features of Sprint ID are subject to change. For the most up-to-date information about using Sprint ID, please visit www.sprint.com.

Getting a New ID Pack

1. Press  and tap  >  (**Sprint ID**).
– or –
Press  and tap .
2. Tap **Get New** to install a new ID Pack and follow steps 2–5 of “Installing Your First ID Pack” on page 6.

Making Your First Call



1. Press  to access the Home screen and tap  to access the onscreen dialpad.
 - If your device is locked, touch and drag the lock icon to the right.
2. Use the onscreen dialpad to enter a phone number and tap .
 - If your device is in PowerSave mode, press  or  to reactivate the screen.

WARNING: If your device has a touchscreen display, please note that a touchscreen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touchscreen may damage the tempered glass surface and void the warranty. (See “Manufacturer’s Warranty” on page 204.)

Note: Your device’s battery should have enough charge for your device to turn on and find a signal, set up your voicemail and make a call. You should fully charge your battery as soon as possible.

Setting Up Your Voicemail

Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off. You should set up your Sprint Voicemail and personal greeting as soon as your device is activated. Always use a password to protect against unauthorized access.

1. Tap  and then touch and hold .

2. Follow the system prompts to:

- Create your password.
- Record your name announcement.
- Record your greeting.

Note: Voicemail Password

Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

For more information about using your Visual Voicemail, see “Visual Voicemail” on page 134.

Sprint Account Passwords

As a Sprint customer, you enjoy unlimited access to your personal account information, your voicemail account, and your data services account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

Account Username and Password

If you are the account owner, you will create an account username and password when you sign on to www.sprint.com. (Click **Sign in** and then click **Sign up now!** to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at www.sprint.com.

Voicemail Password

You'll create your voicemail password (or passcode) when you set up your voicemail. See “Setting Up Your Voicemail” on page 7 for more information on your voicemail password.

Data Services Password

With your Sprint device, you may elect to set up an optional data services password to control access and authorize Premium Service purchases.

For more information, or to change your passwords, sign on to www.sprint.com or call Sprint Customer Service at **1-888-211-4727**.









Getting Help

Managing Your Account

Online: www.sprint.com

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint phones.
- View available Sprint service plans and options.
- Learn more about data services and other products like Sprint Picture Mail, games, ringtones, screen savers and more.

From Your Sprint Phone

- Tap  **4** GHI  to check minute usage and account balance.
- Tap  **3** DEF  to make a payment.
- Tap  **7** PQRS  to add a new line of service, upgrade your device, purchase accessories or access other account services.
- Tap  **2** ABC  to access a summary of your Sprint service plan or get answers to other questions.

From Any Other Phone

- Sprint Customer Service: **1-888-211-4727**.
- Business Customer Service: **1-800-927-2199**.

Sprint 411

Sprint 411 gives you access to a variety of services and information, including residential, business and government listings, movie listings or showtimes, driving directions, restaurant reservations and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

► Tap **4** GHI **1** **1** .

Sprint Operator Services

Sprint Operator Services provides assistance when you place collect calls or when you place calls billed to a local telephone calling card or third party.

► Tap **0** **+** .

For more information or to see the latest in products and services, visit us online at www.sprint.com.



Section 2
Your Device




2A. Device Basics

- ◆ Your Device (page 13)
- ◆ Viewing the Display Screen (page 17)
- ◆ Turning Your Device On and Off (page 20)
- ◆ Battery and Charger (page 21)
- ◆ Device Function Keys (page 24)
- ◆ Navigation and Customization (page 28)
- ◆ Displaying Your Phone Number (page 42)
- ◆ Entering Text Using the Onscreen Keyboard (page 42)
- ◆ Entering Text Using the QWERTY Keyboard (page 46)
- ◆ Creating a Google Account (page 50)

Tip: Device Software Upgrades – Updates to your device's software may become available from time to time. Sprint will automatically upload critical updates to your device.

- You can also use the menu to check for and download updates. Press  >  and tap **Settings > About phone > System Updates > Update Firmware** to search for and download available updates.

Your Device

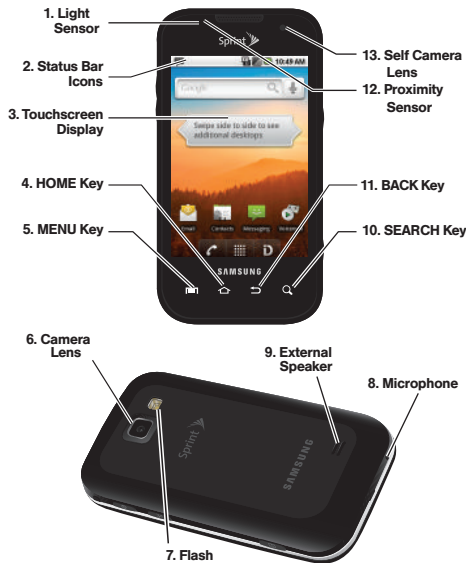


Key Functions

1. **Light sensor** lets you use the ambient light level to adjust the screen brightness/contrast.
 - In a bright light condition (outdoors), the sensors cause the device to increase the brightness and contrast for better viewing.
 - In dim light conditions, the device increases the screen brightness to compensate.
2. **Status Bar Icons** provide information about your device's status and options, such as signal strength, wireless technology, roaming, ringer setting, messaging, and battery charge.
3. **Touchscreen Display** displays all the information needed to operate your device, such as the call status, the Contacts list, and the date and time. Also provides one-touch access to all of your features and applications.
4. **HOME Key** returns you to the Home screen. Press and hold to open the recently-used applications window.

5. **MENU Key** allows you to access your device's main functions menu: Add, Wallpaper, Sprint ID, Search, Notifications, and Settings. While in a menu, press to open a list of actions available from the current screen or onscreen option.
 - During an active call, press to open additional call options such as Add call, Merge calls, Mute, or Bluetooth.
6. **Camera Lens**, as part of the built-in 3.0 megapixel camera, this lens lets you take pictures and videos.
7. **Flash**, as part of the built-in camera, provides an additional light source for pictures and videos during low-light conditions.
8. **Microphone** allows other callers to hear you clearly when you are speaking to them.
9. **External Speaker** lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing the volume button. The speaker also lets you hear the caller's voice in speakerphone mode.
10. **SEARCH Key** displays the Quick Search box that can be used to search for a key term both on the device and online (page 25).
 - For example, entering the word "Pa", will display any matching entries from your device's Contacts list, current device applications, online Android/Google apps, or from any online Web page via Google™ search.
 - Press and hold to launch **Voice Search** where you can initiate a Google™ search by verbally entering a text string. The device recognizes your spoken words and initiates a Web search.
11. **BACK Key** deletes characters from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu, closes a dialog box, or exits an onscreen menu/option.
12. **Proximity Sensor** detects how close an object is to the surface of the screen. This is typically used to detect when your face is pressed up against the screen, such as during a phone call.
 - While talking on the phone, the sensor detects talk activity and locks the dialpad to prevent accidental key presses.


- 13. **Self Camera Lens** allows you to take pictures while facing the screen.
- 14. **Earpiece** lets you hear the caller and automated prompts.
- 15. **Volume Button** allows you to adjust the ringer volume in standby mode, the voice volume during a call, and media playback volume.
- 16. **Camera Button** lets you activate the camera and camcorder and take pictures and videos.
- 17. **Charger/Accessory Jack** allows you to connect the phone charger or a USB cable (included).
CAUTION! Inserting an accessory into the incorrect jack may damage the device.
- 18. **microSD Card Slot** lets you use a microSD card to expand the memory of your phone. (A 2GB microSD card comes pre-installed in your Samsung Transform™.)

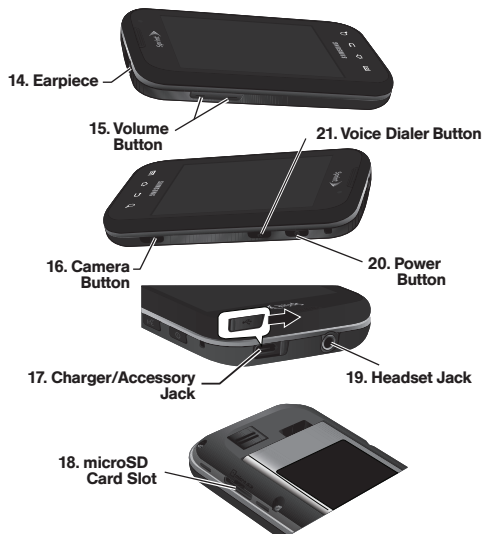


19. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations.
CAUTION! Inserting an accessory into the incorrect jack may damage the device.
20. **POWER Button** lets you turn the device on or off, or turn off the touchscreen display.
 - When the screen is turned off, press once to return to Screen lock mode.
 - While the device is unlocked and not on an active call, press and hold to display the Phone options menu (Silent mode, Airplane mode, Power off).
21. **Voice Dialer Button** activates the Voice Dialer (Voice Control) function that lets you dial phone numbers, launch applications and launch other actions by speaking a name, command, or a phone number.

Landscape Phone Features

1. **QWERTY Keyboard** provides an alphanumeric character keyboard layout. Lets you enter numbers, letters, and characters, as well as navigate within menus.











2. **Shift Key** lets you toggle alphabet characters between mixed case, uppercase, and lowercase. Character case remains as selected until the Shift key is pressed again.
3. **Fn Key** (Function) key  lets you enter the alternate character or symbol displayed on each key on the QWERTY keyboard.












4. **Smiley Key** () lets you access Smiley icons (Emoticons).
5. **Space Key** lets you add spaces between words and characters.
6. **Navigation Keys** allow you to navigate around your device's menu options while in Landscape mode.
7. **OK Key** lets you select or accept the currently highlighted option.
8. **Return Key** allows you to insert a new line within a text entry field.
9. **Delete Key** deletes characters from the display in text entry mode.









Viewing the Display Screen

Your device's display screen provides information about your device's status and options. This list identifies the symbols you'll see on your device's display screen:








<i>Status Bar – Service Icons</i>	
	Activation Not Completed – Your automatic device activation process failed, please retry.
	Signal Strength – Shows your current signal strength. (More bars = stronger signal.)
	No Service – Your device cannot find a usable signal.
	Airplane Mode On – Your device will not make or receive calls or provide data access. Local applications are still available.
	Roaming – Your device is “roaming” off the Nationwide Sprint Network.
	Data Service Available – Sprint 1xRTT data service is active.
	Data Service Communicating – Sprint 1xRTT data service is active and communicating. When active, the icon is animated.
	Data Service Dormant – Sprint 1xRTT data service is currently dormant.
	3G Available – Sprint 3G data service is available.
	3G Communicating – Sprint 3G data service is active and communicating (see page 152.)

<i>Status Bar – Service Icons</i>	
	3G Unavailable – Sprint 3G data service is currently unavailable.









<i>Status Bar – Status Icons</i>	
	Call in Progress – A voice call is in progress. Audio is routed through either the earpiece or external speaker.
	Bluetooth Call in Progress – A voice call is being routed through a Bluetooth headset.
	Missed Call – You have missed an incoming call.
	Call Muted – The device microphone has been muted.
	Speaker – Speakerphone feature is enabled.
	Battery Strength – Shows your current battery charge level. (Icon shown is fully charged.)
	Battery Charging – Shows your current battery charge level and indicates it is charging.
	Battery Low – Shows your current battery charge level is very low.





<i>Status Bar – Status Icons</i>	
	Battery Critical – Shows your current battery charge level requires attention and your device will soon shut off.
	Device Power Critical – Shows your current battery only has three percent power remaining and will immediately shutdown.
	Bluetooth Active – Bluetooth technology is active and enabled.
	Bluetooth Connected – Bluetooth technology is active and communicating with an external device.
	GPS Location On – Device location feature is on and available for location-based services such as GPS Navigation (see page 185).
	GPS Communicating – Device location feature is on and communicating.
	Wi-Fi Connected – Wi-Fi is connected, active and communicating with a Wireless Access Point (WAP).
	Wi-Fi Connection Issue – Wi-Fi is active but there is a communication issue with the target Wireless Access Point (WAP).

Status Bar – Status Icons

	microSD Unmounted – The internal microSD card has been disconnected from the device and is now ready for either removal or formatting.
	microSD Removed and Missing – The internal microSD card has been properly unmounted from device but is missing.
	microSD Unexpectedly Removed – The internal microSD card has been incorrectly removed and improperly unmounted.
	USB Connection – The device has detected an active USB connection.
	Sign-in/Sync Error – There has been an issue with your connection to the Google server or you were not properly signed into your account. In order to use Google application or sync features, you must set up and sign into an active Google account.
	Alarm Event – Shows you have an upcoming alarm event.
	Silence All – All incoming sounds are turned off.


Status Bar – Status Icons

	Vibrate Only – The ringer is set to vibrate only.
	Media Playback – A media file is currently being played back on the device.
	Data Synchronization – Application sync is active and synchronization is in progress for Gmail, Calendar and Contacts.
	Android OS Update Available – A new Android operating system update is available for download.
	System Updates Available – A new system update is available for download.
	Files Downloading – The device is downloading selected files.
	Download Successful – A recent software download was successfully downloaded.
	Calendar Reminder – Shows you have a reminder of an upcoming Calendar event.

<i>Status Bar – Messaging Icons</i>	
	Text Message – You have new text (SMS) or multimedia (MMS) messages.
	Voicemail Message – You have new voicemail messages.
	New Email message – Shows you have received either a new Internet email message or Outlook email message via an Exchange server.
	New Gmail message – Shows you have received a new Gmail message.

Turning Your Device On and Off

Turning Your Device On

- Press and hold .



Once your device is on, it may display “Searching for Service.” When your device finds a signal, it enters standby mode – the device’s idle state. At this point, you are ready to begin making and receiving calls.

If your device is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your device automatically returns to standby mode.

In Power Save mode, your device searches for a signal periodically without your intervention. You can also initiate a search for Sprint service by pressing any key (when your device is turned on).

Tip: The Power Save feature conserves your battery power when you are in an area where there is no signal.

Turning Your Device Off

1. Press and hold  for two seconds until you see the **Phone options** menu.
2. Tap  (**Power off**) and then tap **OK** to power off the device.

Your screen remains blank while your device is off (unless the battery is charging).


Battery and Charger

WARNING: Use only Sprint-approved or Samsung-approved batteries and chargers with your device. The failure to use a Sprint-approved or Samsung-approved battery and charger may increase the risk that your device will overheat, catch fire or explode, resulting in serious bodily injury, death or property damage.

Sprint-approved or Samsung-approved batteries and accessories can be found at Sprint Stores or through Samsung; or call 1-866-866-7509 to order. They're also available at www.sprint.com.

Battery Capacity

Your device is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 6.0 hours of continuous digital talk time.

At 10% of charge capacity, the battery icon blinks. At 3% of charge capacity, there are only a few minutes of talk time left, the device sounds an audible alert, displays a critical charge icon () , then turns off.

Note: Long backlight settings, searching for service, vibrate mode, browser use and other variables may reduce the battery's talk and standby times.

Tip: Watch your device's battery level indicator and charge the battery before it runs out of power.

Installing the Battery

- See "Setting Up Your Device" on page 2.

Removing the Battery

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Grasp the device firmly, locate the cover release latch, and then place your fingernail in the opening and firmly "pop" the cover off the device.
3. Carefully remove the battery from the device.

WARNING: Do not handle a damaged or leaking Li-Ion battery as you can be burned.




Charging the Battery

Keeping track of your battery's charge is important. If your battery level becomes too low, your device automatically turns off and you will lose any information you were just working on.

Note: Although the battery comes partially charged, it is recommended you fully charge the battery before using your device for the first time.


1. Connect the USB cable to the charging head.
2. Slide open the Charger/Accessory jack cover.
3. Insert the USB cable into the device's Charger/Accessory jack.
4. Plug the charging head into a standard AC power outlet.

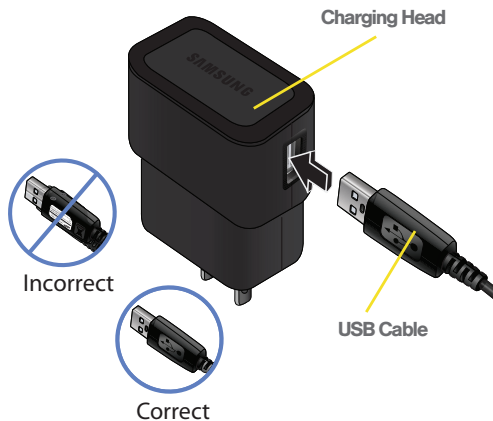

Always use a Sprint-approved or Samsung-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

- Plug the flat end of the charger into the device's charger jack and the other end into an electrical outlet. The device turns on with the screen locked and indicates both its charge state and percent of charge.

With the Sprint-approved Li-Ion battery, you can recharge the battery before it becomes completely run down.

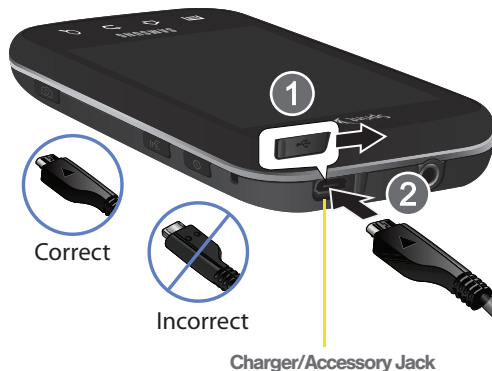

Extending Your Battery Life


Active applications, light levels, Bluetooth usage and GPS functionality all act to drain your battery. The following is a list of helpful tips that can help conserve your battery power:



- Reduce your backlight on time. (See “Changing the Backlight Time Length” on page 63.)
- Turn Bluetooth off when not in use. (See “Turning Bluetooth On and Off” on page 127.)
- Turn Wi-Fi off when not in use. (See “Turning Wi-Fi On and Off” on page 160.)
- Deactivate the GPS when not needed. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery. (See “Activating Location Mode” on page 185.)
- When taking pictures, do not use a flash unless you have to. (See “Camera Settings” on page 119.)
- Do not wait until your battery is completely depleted before charging your device. Repeating this process of a complete discharge and recharge can over time reduce the storage capacity of any battery.







Device Function Keys

The Samsung Transform™ comes equipped with four main function keys that can be used on any screen.

Menu Key

The **Menu** key () activates an available menu function for the current screen or application. When on the Home screen, the following menu options are available:


- **Add** () adds one of the following functions to a selected screen: Shortcuts, Widgets, Folders, and Wallpapers. (See “Customizing Your Home Screen” on page 34.)
- **Wallpaper** () lets you to customize the current screen's wallpaper image. You can obtain this image from your installed ID wallpapers, your Pictures folder, or from any of the available images within the device's Wallpaper gallery. (See “Changing the Display Screen” on page 64.)

- **Sprint ID** () lets you quickly change the ID packet you're currently using. Touch **Get New** to download and install a new ID. (See “Sprint ID” on page 5.)
- **Search** () displays the Quick Search box that you can use to search for a key term both on the phone and online. (See “Using the Search Key” on page 25.)
 - For example, entering the word “Pa”, will display any matching entries from your device’s Contacts list, current device applications, or from any online Web page via Google search.
- **Notifications** () allows you to expand the popup notifications area to provide more detailed information about the current notification icons. (See “Using the Notifications Panel” on page 41.)
- **Settings** () provides quick access to the device’s settings menu. (See “2C. Settings” on page 60.)
 - The Settings menu can also be accessed by pressing  and tapping .


Home Key

The **Home** key () takes you back to your Home screen.

Back Key

The **Back** key () returns you to the previously active screen. If the onscreen keyboard is currently open, this key closes the keyboard.


Using the Search Key

The **Search** key () displays the Quick Search box that can be used to search for a key term both on the phone and online. In some instances, this key opens a search box specific only to the current application.


- Press  to launch the **Quick Search** box.
- Press and hold  to launch the **Voice Search** function.

Using Your Device to Search

Use the **Quick Search** box to manually enter a term or number that is searched for automatically on both your device and on the Web.



Touching Voice Search () initiates the same search function but without the need to use the onscreen or QWERTY keyboards.

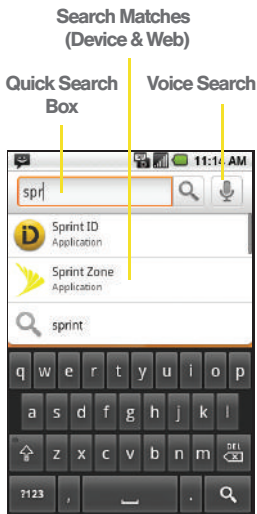You can also use this feature to dial a phone number and it is a supplement to the Automatic Speech Recognition (ASR) feature. (See “2G. Voice Services” on page 107.)



To search the phone and Web by entering text:

1. Press  to launch the **Quick Search** box.


Note: There might be instances within an application where pressing  reveals only an application-specific search. Press  twice to open the Quick Search box.

2. Use either the QWERTY or onscreen keyboard to enter your search term. (See either “Entering Text Using the Onscreen Keyboard” on page 42 or “Entering Text Using the QWERTY Keyboard” on page 46.)
 - As you type, matches from your device and from Google’s Web search are added to the list of previously chosen search results.
 - Search preferences and settings can be configured to display suggestions in a different manner. (See “Search Settings” on page 70.)

Note: To hide the onscreen keyboard and see more of your search matches, tap the search results screen.

3. Tap a match from the list of suggestions, phone search results, or previously chosen search matches. Once tapped, the item opens in the appropriate application.

– or –

If what you're searching for is not in the current list, tap the **Google Search** icon () in the **Quick Search** box or on the keyboard to initiate a new search on the Web.

To search the phone and Web via Voice Search:

1. Press  and tap  (microphone icon on the side of the **Quick Search** box).

Note: Tapping  in an application's search box searches the application by voice, not the Web.

2. From the open dialog, say what you want to search for.
3. Once complete, the Voice Search application analyzes your spoken words and displays a list of matching keyword terms.

Note: It is recommended that you use this feature in a quiet room. Loud ambient or background noises can confuse the application and result in inaccurate search results.

To use additional Voice Search functions:


- From an open Voice Search dialog, speak the following words to access additional features:
 - **Directions to** allows you to initiate a navigation session via Google maps. Use either an address, business name, business type, or other navigation information to get the desired directions.
 - **Navigate to** allows you to receive directions via Google maps™. Use either an address, business name, business type, or other navigation information to get the desired directions.
 - **Map of** allows you to view a map of an area via Google maps. Use either an address, business name, zip code, or other navigation information.

Navigation and Customization


The Samsung Transform™ is a touch-sensitive device which allows you to not only select an onscreen option with a single tap, but also scroll through long menu lists. Simply slide up and down through the display with your fingertip.



Tip: Some menu options are also accessed by pressing and holding an onscreen item, such as a Contact entry from the Contacts tab.


Home Screen Overview


The Home screen is the starting point for many applications and functions, and it allows you to add items like application icons, shortcuts, folders, or Google widgets to give you instant access to information and applications. This is the default page and accessible from any menu by pressing .

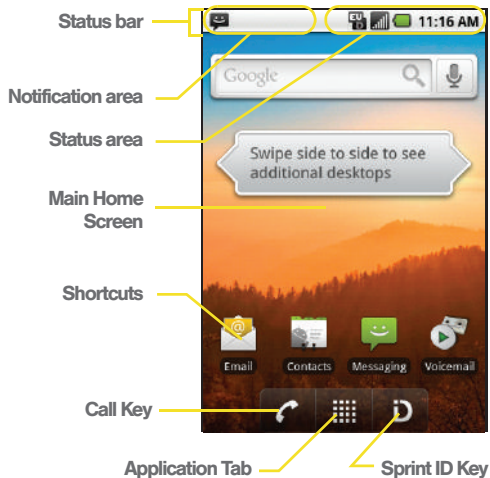- **Status bar**, located at the top of the screen, displays both Notification and Status icons.




- **Notification area** displays icons associated with end-user notifications such as: email messages, calls (missed, call in progress), new voicemail, upcoming events, a USB connection, and text/MMS messages. (See “Using the Notifications Panel” on page 41.)
 - These notifications appear at the top-left of the screen (within the Status bar) and display important user information.
 - This information can be accessed by either swiping down from the Status bar (page 41) or by accessing the Notifications panel  > **Notifications** ().
- **Status area** displays icons associated with the status of the device such as communication, coverage, Bluetooth and Wi-Fi communication, battery levels, GPS, etc.
- **Main Home Screen** is a customizable screen that provides information about notifications and device status, and allows access to application Widgets.


- **Extended Home Screens** allow you to see the rest of the Home screen. The device's screen extends beyond the current visible screen width to provide more space for adding icons, widgets, and more.
 - There are five available screens, each of which may be populated with its own shortcuts or widgets.
 - Press  to access the main Home screen (1) which appears as the default “page” on the device and then slide your finger horizontally across the screen to go to the left or right extended screens (2). There are four additional screens on either side of the main Home screen.
 - Think of it as having a desktop so wide that your screen can only display a portion at a time.


Tip: While on an extended Home screen, press  to return to the main Home screen.

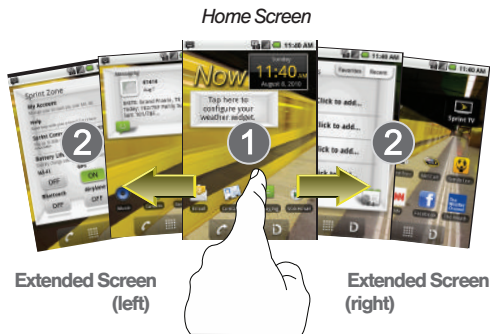


Note: The Status bar and Application tab are visible across all Home screens.



Note: Screen #1 is the Home screen.

- **Google search** is an onscreen Internet search engine powered by Google™. Tap  to access the Voice Search feature where you can verbally enter a search term and initiate an online search.





- **Widgets** are self-contained onscreen applications (not shortcuts). These can be placed onto any of the available screens (Home or Extended). (See “Adding and Removing Widgets” on page 36.)
- **Shortcuts** are icons that launch available device applications such as Voicemail, Contacts, Phone, Email, Alarm Clock, etc. These function the same as shortcuts on your computer.
 - Although some are already found on the Extended Home screens, the majority can also be found within the Applications tab.
 - Shortcuts can be pulled out from this tab or pulled into it (removed from an Extended Home screen). (See “Creating Shortcuts” on page 34.)
- **Application tab** () houses all of your available applications. Some of these applications also exist as Widgets that can be actively placed onto an available screen. Some sample shortcuts are:

- **Phone** () launches the phone-related screen functions (Dialpad, Call log, Contacts, and Favorites.)
- **Contacts** () launches the Contacts-related screens (Phone, Call log, Contacts, and Favorites).
- **Email** () launches the email application that manages both Internet-based and Corporate email accounts.

Using the Applications Tab

All of your device's applications are located within the Applications tab. This tab houses shortcuts to your currently available applications.

Note: This tab houses all default and downloaded applications (installed from Android Market or from the Web).






1. Press  and tap  to open the tab.
 - To close the Applications screen, tap  again or press .
2. Scroll through the list and tap an icon to launch the associated application.
 - The screen contains device applications such as Alarm Clock, Browser, Calculator, Camera, Email, Gallery, Market, Navigation, Phone, Settings, Voice Search, YouTube, and much more.


















Applications







The following is a listing of some sample applications available via the Applications tab.

Note: Applications that appear on the Home Screens will depend on which ID Pack you choose to install.

Application Icons	
	Alarm Clock – Accesses the Alarm Clock application (page 101).
	Browser – Launches the Web browser (page 154).
	Calculator – Launches the onscreen calculator application (page 102).
	Calendar – Launches the Calendar applications that syncs itself to either your Google or Outlook® Work calendar (page 95). Events can only be synced to a managed account (page 67).
	Camera – Launches the built-in camera (page 118).

Application Icons	
	Contacts – Displays the Contacts tab listing current contacts, synced from either your Google or Outlook account (page 86). Contacts can only be synced to a managed account (page 86).
	Email – Provides access to both your Outlook (Exchange Server-based) work email and Internet email accounts (such as Google, Yahoo, etc). (page 166).
	Gallery – Displays a Gallery of camera images and video stored in the microSD card (page 121).
	Gmail – Provides access to your Gmail account (page 163).
	Latitude – Lets you see your friends' locations and share yours with them. The application also lets you See your friends' locations on a map or in a list.
	Maps – Launches a Web-based dynamic map that helps you find local businesses, locate friends, view maps and get driving directions (page 185).

<i>Application Icons</i>	
	Market – Browse and search for applications on Android Market (page 174).
	Messaging – Provides access to your text messaging application (SMS) (page 139).
	Music – Launches the built-in Music Player (page 181).
	NASCAR – Launches the Web-based NASCAR Sprint Cup Mobile application (page 176).
	Navigation – Launches a built-in GPS feature, giving you access to a number of location-based services (page 185).
	Phone – Access the phone dialpad (page 52).
	Places – Allows others to find your business on local search results using either Google Search or Google Maps.
	Settings – Access the device's built-in Settings menu (page 60).
	Sprint Football Live – Launches the Sprint Football Live services (page 178).

<i>Application Icons</i>	
	Sprint ID – Launches the Sprint ID application from where you can replace a current ID or get a new one (page 5).
	TeleNav GPS Navigator – Launches a built-in GPS functionality, giving you access to a number of location-based services (page 187).
	Sprint TV – Allows you to watch live mobile TV and listen to streaming radio on your device (page 181).
	Sprint Zone – Access links to Sprint Zone services like Account Information, What's New, recommended Android applications, and other support and promotional content (page 176).
	Talk – Launches a Web-based Google Talk application that lets you chat with family and friends over the Internet for free.
	Voice Dialer – Launches your device's built-in automatic speech recognition (ASR) software, called Voice Control, to dial a phone number in your Contacts or to launch phone functions (page 107).

Application Icons



Voice Search – Launches your device's built-in automatic speech recognition (ASR) software and initiates a Google search based on the recognized text (page 110).



Voicemail – Launches Visual Voicemail (page 134).



YouTube – Launches the YouTube webpage via the browser.

Note: The Email application includes access to both Exchange Server-based email (also known as Corporate email) and other Internet-based email providers such as Yahoo! and Mail.

Customizing Your Home Screen

You can customize your Home screen by doing the following:

- **Creating Shortcuts**
- **Adding and Removing Widgets**
- **Repositioning Widgets**
- **Creating Folders**



● **Changing the Background (Wallpaper)**

Creating Shortcuts

Shortcuts are different than the current Home screen Widgets that only launch an application. Shortcuts activate a feature, action, or launch an application.

Note: To move a shortcut from one screen to another, it must first be deleted from its current screen. Activate the new screen, and then add the shortcut.

To add a shortcut from the Applications tab:


1. Press  to activate the Home screen.
2. Select a location (screen) for your new shortcut by scrolling across your available screens until you reach the desired one. (See “Home Screen Overview” on page 28.)
3. Tap the **Applications** () tab to reveal all your current applications. By default, the applications are listed in a Grid view.
4. Scroll down through the list and locate your desired application.
5. Touch and hold the onscreen icon. This creates an immediate shortcut of the selected icon and closes the Applications tab. The new shortcut then appears to hover over the currently active screen.




Note: The same shortcut can be added to any of the available screens (Home or Extended). The application you add to the screen will still appear within the **Applications** tab.

6. While still holding the onscreen icon, position it on the current screen. Once complete, release the screen to lock the shortcut into its new position.

To add a shortcut via the Add to Home screen:

1. Press  to activate the Home screen.
2. Touch and hold on an empty area of the screen.
3. From the **Add to Home screen** window tap **Shortcuts**.

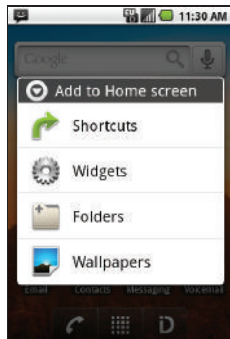




4. Tap a selection from the available list:

- Applications
- Bookmark
- Contact
- Direct dial
- Direct message
- Directions & Navigation
- Gmail label
- Latitude
- Music playlist
- Settings

5. Follow the onscreen instructions to add the new shortcut to your current Home screen.

To delete a shortcut:

1. Press  to activate the Home screen.
2. Touch and hold the desired shortcut. This unlocks it from its location on the current screen.
3. Drag the icon over the Delete tab () and release it.

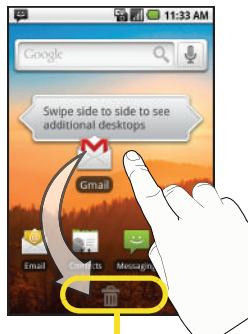


Adding and Removing Widgets


Widgets are self-contained applications that reside in either your Applications tab or on the Home or Extended screens. Unlike a shortcut, this Widget appears as an onscreen application.

Note: To move a Widget from one screen to another, it must first be deleted from its current screen. Activate the new screen, and then add the Widget.

To add a Widget:

1. Press  to activate the Home screen.
2. Touch and hold on an empty area of the screen.
3. From the **Add to Home screen** window tap **Widgets**.
4. Tap an available Widget to place it on your current screen.
 - Choices include: **Analog clock, Latitude, Music, Picture frame, Power Control, Search, Sprint Tutorial #1, Sprint Tutorial #2, Sprint Tutorial #3, Sprint Tutorial #4, Sprint Tutorial #5, Voicemail, and YouTube.**

To remove a Widget:

1. Touch and hold a Widget until you can move it around on the screen.
2. Drag the widget over the **Delete** tab () and release it.
 - As you place the Widget into the Trash, both items turn red.
 - This action **does not** delete the Widget, just removes it from the current screen.

To place a Widget onto a different screen:

1. Follow the steps to remove the Widget from the current screen (page 37).


Note: A Widget cannot be dragged from a current screen to an adjacent screen. It must first be removed from its current location, and then added back to a new current screen.

2. Touch and drag across your screen to view other available screens (page 30).
3. Follow the steps to add a Widget to the current screen (page 37).

Creating and Managing Folders

Folders are located on any of the five available screens and can contain both files (such as data and images) and Contact information or entries.


To create a folder onscreen:

1. Press  to activate the Home screen.
2. Touch and hold on an empty area of the screen.
3. From the **Add to Home screen** window tap **Folders**.
4. Tap an available folder type to place it on your current screen.
 - Choices include **New folder**, **All contacts**, **Contacts with phone numbers**, **Google Contacts**, or **Starred contacts**.

Note: Starred contacts are those Contact entries tagged as very important.

Accessing Recently-Used Applications

Your device keeps a running list of your six most recently used applications.


1. Press and hold  to open the recently-used applications window.
2. Tap an icon to open an application.


Changing the Screen Orientation

The Samsung Transform™ is capable of automatically changing the orientation of some onscreen content.

The device's built-in accelerometer senses movement and changes its angle/orientation.

This allows the device to change the onscreen content (images, video, Web pages) to properly display based on the current angle (some screens may not automatically change).

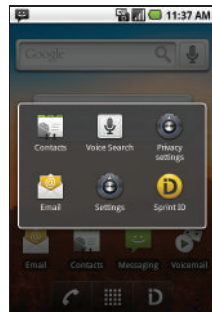

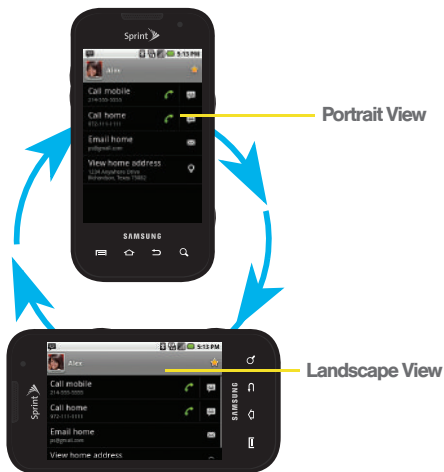

Although most screens will change orientation once the QWERTY keyboard is opened, this feature can be manually enabled to change the orientation for all applicable screens when rotation is detected.

Note: An example of a screen that does not automatically re-orient is the Home screen. This screen requires you slide out the QWERTY keyboard.

An example of a screen that automatically re-orient by moving the device is the Contacts screen. This only requires you to turn the device on its side.

To manually activate the auto-rotate feature:

1. Press > and tap > **Sound & display**.
2. Scroll down and tap **Orientation**. A checkmark indicates the feature is enabled.
 - Clear the **Orientation** checkmark to disable this automatic orientation adjustment.

Menu Navigation

There are two ways to navigate through a menu:

- Using your finger (page 40)
- Using the keyboard's navigation/arrow keys (page 40)


Selecting Menu Items Using Your Fingers

As you navigate through the menu, you activate menu options by tapping the onscreen entry. Select any option by tapping it.

1. Tap an onscreen icon to launch a menu or feature.
2. Scroll your finger across the screen to navigate through a menu list (bottom up or top down).
3. Tap a menu item to make a selection or activate a field.


To launch the dialpad:

- Tap  from the Home screen.

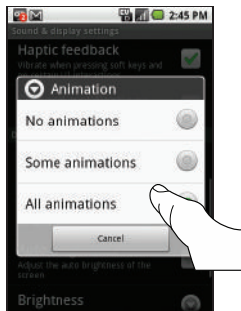

Selecting Menu Items Using Your Keyboard


Access the QWERTY keyboard and locate the navigation keys, located at the right of the keyboard.

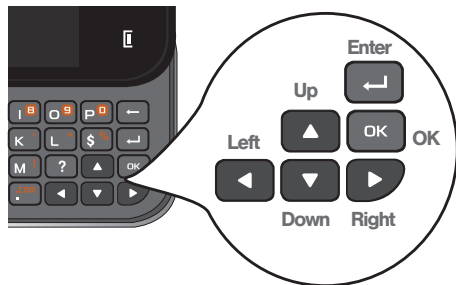

As you navigate through a menu with these navigation keys, options are highlighted. Select any option by pressing a directional arrow from the QWERTY keyboard and moving the onscreen selection, highlighting it and pressing **OK**.

- If the option is numbered, you can select it by pressing the corresponding number on the phone's dialpad.

To view your text messages using the directional keys:

4. Press the navigation keys until **Messaging** () is highlighted and press **OK**. (If you have any text messages, they are displayed.)
5. Press Up or Down to highlight an available message and press **OK** to view its content.

Backing Up Within a Menu

To go to the previous menu:

- Press .


To return to Home screen:

- Press .

Using Context Menus

Context menus (also called popup menus) contain tools that apply to a specific item on the screen. They function similar to those menu options available on your computer when you use a right-mouse click.

You open a context menu by touching and holding an onscreen item.

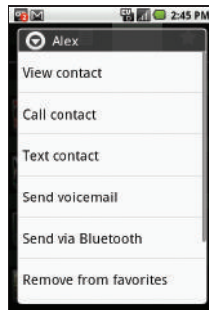




Note: Not all items have context menus. If you touch and hold an item that has no context menu, nothing happens.

Using the Notifications Panel



The Notification area indicates new message events (data sync status, new messages, calendar events, call status, etc). You can expand this area to provide more detailed information about the current onscreen notification icons.

1. Touch and hold the Status bar, and then slide your finger down the screen.
2. Tap a notification entry to open the associated application.

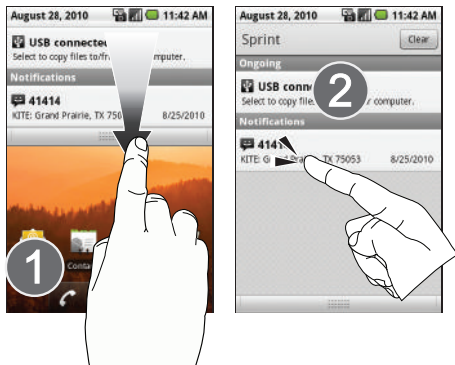Note: The Notifications panel can also be opened on the Home screen by pressing  and then tapping  (**Notifications**).



Displaying Your Phone Number

- Press  >  and tap **Settings > About phone > Status**. (Your phone number and other information about your device and account is displayed.)

Entering Text Using the Onscreen Keyboard

When you activate a field where you can enter text, numbers, symbols, etc., you can either use the onscreen keyboard or QWERTY keyboard.


Onscreen keyboard entry can be done in either Portrait or Landscape orientations. The Landscape orientation provides more space and results in slightly bigger onscreen keys. If you find that you prefer to enter text via the onscreen keyboard, and need bigger keys, use this orientation. (To use the onscreen keyboard in landscape mode, you will need to set your device to automatically change orientation when rotated. See “Changing the Screen Orientation” on page 63.)

Selecting a Text Input Mode

Note: Some characters and types, such as some symbols and emoticons, are not accessible from the onscreen keyboard.


1. From a screen where you can enter text, tap the input field to reveal the onscreen keyboard.
2. Select one of the following Text mode options:
 - **ABC** to use alphabetic characters from the onscreen keyboard (See page 44.)
 - **?123** to enter numbers by pressing the numbers on the onscreen keyboard. (See page 45.)

Tip: When entering text, tap  to change letter capitalization.

- **Voice Input**  allows the device to use its built-in voice recognition software to hear your voice and transcript it directly into text.

Onscreen Keyboard Overview

- **Entry field:** a field where text, numbers, or other characters can be entered.

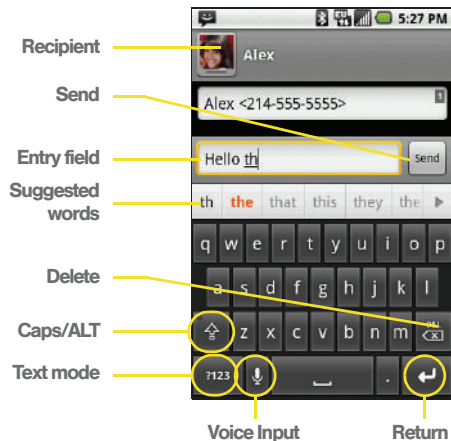


- **Suggested Word choices:** a row of selectable word choices based on the current set of entered text. Tap an onscreen choice to insert the selection into your text entry field at the current cursor position. Tap the grey left and right arrows on this field to reveal additional word choices.

Note: These suggested word choices only appear when using the onscreen virtual keypad and not with the physical QWERTY keyboard.

- **Delete:** deletes characters from the entry field.
- **CAPS/ALT:** When in **ABC** mode, this key changes the capitalization of the subsequent entered characters. When in **?123** mode, this key can show additional symbol characters.
 - Capitalization in **Abc** mode can be altered by using the Caps button. (See “ABC Mode” on page 44.)
 - Symbols used in **?123** mode can be enhanced by accessing additional symbol characters. (See “Entering Numbers and Symbols” on page 45.)

- **Text mode:** There are two available modes; **ABC** and **?123**.

- **ABC** mode contains only letters. Text mode button indicates **?123**.
- **?123** mode contains only numbers and symbols. Text mode button indicates **ABC**.

- **Voice Input mode:** Tapping  activates the built-in microphone and voice recognition software.
 - Speak clearly into the microphone. When complete, your spoken words are recognized, converted to text, and inserted into your current cursor position.

Note: It is recommend that to avoid incorrect conversions, you use this feature in an area relatively free from background noises.

ABC Mode

In **ABC** mode, you can enter only letters from the onscreen keyboard. The text mode key shows **?123**.

1. Tap **ABC** to enter the **ABC** mode. (See “Selecting a Text Input Mode” on page 43.)

- Capitalization in **ABC** mode can be altered by using the Caps button.



next character is lowercase.





only the next character is uppercase.



all subsequent characters are uppercase.


Note: A green circle on the shift key indicates the keyboard is set to “Shift-Lock” where all characters are entered in uppercase.

- Tap the corresponding onscreen keys to begin typing your word.


- If you make a mistake, tap  to erase a single character. Touch and hold  to erase all text.)

By default, the first letter of an entry is capitalized and the following letters are lower case. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.


Entering Numbers and Symbols

By using the onscreen keyboard in Portrait mode, some symbols are not available (such as Emoticons or Smileys). In **?123** mode, you can only enter numbers and symbols from the onscreen keyboard. The text mode key shows .



To enter numbers:

- Tap  to enter the **?123** mode.
- Tap the appropriate numeric key. (See “Selecting a Text Input Mode” on page 43.)

To enter symbols:

- Tap  to enter the **?123** mode.
- Tap the appropriate numeric key.

– or –

Tap  to select from additional symbol characters. The key shows  (indicated with a green circle) when the additional character set is active.

Entering Text Using the QWERTY Keyboard

Accessing the QWERTY Keyboard

The Samsung Transform™ has a full, slide-out QWERTY keyboard. The keyboard is located beneath the display screen and is accessed by sliding it open. This orients the device's display to Landscape (widescreen) mode.

With the QWERTY keyboard, you can type letters, numbers, punctuation, and other special characters into text entry fields or other applications as easily as with your computer.

To open the device and access the keyboard:

1. Rotate the device 90 degrees counter-clockwise.
2. Slide the top section of the device up to open, as shown in the illustration. When you slide the device open, the display rotates from a vertical viewing mode (Portrait) to a horizontal viewing mode (Landscape).



To reveal additional QWERTY text editing options:


1. Touch and hold an active text entry field.
2. From the **Edit text** context menu, tap an available function:
 - **Select all** highlights all characters in the text message field.
 - **Select text/Stop selecting text** lets you manually highlight characters in the text message field.
 - **Cut all** cuts all characters in the current text message field.







- **Cut** cuts selected characters from the current text message field.
- **Copy** copies selected characters in the current text message field.
- **Copy all** copies all characters in the current text message field.
- **Paste** inserts the previously cut or copied text into the message field.
- **Input method** provides additional text input methods, if available. The default is **Android keyboard**.

Using the Keyboard

In this section we'll cover the steps necessary to enter text using the QWERTY keyboard. Using your device's QWERTY keyboard is just like using any standard computer keyboard.

The following keys perform special functions when entering text:

	FN: Allows you to use alternate characters displayed at the top of the QWERTY keys. Examples: \$, @, #, !
-----------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------

	Shift: Changes the text input mode among Upper/Lower/Mixed case mode.
	Smiley: Launches the Smileys page. Scroll down and tap an entry from the extensive list of emoticons.
	Space: Inserts an empty space.
	OK/Enter: Selects or accepts a currently highlighted option.
	Delete: Deletes the previous character, similar to the backspace key on a computer keyboard.
	Return: Inserts a new line into the text field.

From a text entry screen, use the keyboard to enter different character types. Select one of the following character types:

- **Letters** to enter the alphabetic characters associated with each key. (See page 48.)
- **Numbers** to enter numbers by pressing the numbers on the keyboard. (See page 49.)

- **Symbols** to enter symbols. (See page 49.)
- **Smileys** to enter smileys or “emoticons.” (See page 49.)

Tip: When entering text, press **Shift** to change letter capitalization (Abc > ABC > abc).

The keyboard provides dual-use keys labeled with alphabetic characters on the lower half and numbers and symbols on the upper half. Press the key corresponding to the blue character you want to enter.

Entering Letters

The first letter entered (of a field or new sentence) is always an initial uppercase letter. By default, text is entered in lowercase characters unless altered by pressing **Shift**.

To enter uppercase and lowercase characters:

1. Press **Shift** to make the next character uppercase. Characters revert back to lowercase after the next character is typed.
– or –

Press **Shift** twice to make all subsequent characters uppercase (all new characters are in uppercase).

- Pressing **Shift** cycles through the capitalization modes (all lowercase, initial uppercase, and all uppercase).

2. Press the corresponding keys:

- For example, to enter the word “Bill” within a text field, type the keyboard sequence below.
- If you make a mistake, tap **DEL** to erase a single character. Touch and hold **DEL** to erase all text.)



Bill



- To enter all uppercase characters, quickly press **Shift** twice.



BILL


Entering Numbers


The keyboard's number keys are alternate characters located along the top on the QWERTY keyboard.

- ▶ Press  and then press the key corresponding to your desired number choice. (Press  twice to enter consecutive numbers or alternate characters.)
- For example, to enter “9:30,” you would use the keyboard sequence shown below.




Entering Symbols and Smileys

Most symbols and punctuation marks appear as alternate characters above the primary letters and numbers on the QWERTY keyboard. To access these symbols, press  and then press the appropriate key.

Smileys (emoticons) are accessed by pressing  and then selecting an image from the **Insert smiley** page that is then inserted at your current cursor position.

To enter symbols:

1. Position the cursor where you want the symbol to appear within your message.
2. Press  and then press the key corresponding to the symbol you want to insert.


– or –

Press  and tap an onscreen symbol.

- For example, to enter “I’m #1,” you would use the following keyboard sequence.



To enter “smileys” (emoticons):

1. Position the cursor where you want the symbol to appear within your message.
2. Press  to open the onscreen smiley page.
3. Select a smiley by tapping the onscreen icon.

Creating a Google Account

You will need a Google account to access several device features such as Gmail, Google Maps, Google Talk, and the Android Market applications. Before you are able to access Google applications, you must enter your account information. These applications sync between your device and your online Google account.

Note: A Google account can be created from either your device or from a computer.

1. From a computer, launch a Web browser and navigate to www.google.com.
2. On the main page, click **Sign-in > Create an account now**.
3. Follow the onscreen prompts to create your free account.

4. Look for an email from Google, and respond to the new email to both confirm and activate your new account.

Signing In to Your Google Account

1. Launch an application that requires a Google account (such as Android Market or Gmail).
2. Click **Next > Sign in**.

Note: If you do not already have a Google account, tap **Create** and follow the onscreen prompts to create your new account.










3. Tap the **Username** and **Password** fields and enter your information.
4. Tap **Sign in**. Your device then communicates with the Google servers to confirm your information.
5. Create a new Gmail username by entering a prefix for your **@gmail.com** email address.


For additional information about synchronizing accounts, see “Synchronizing Accounts” on page 67.

2B. Making and Answering Calls

- ◆ Making Calls (page 51)
- ◆ Dialing Options (page 52)
- ◆ Answering Calls (page 52)
- ◆ Missed Call Notification (page 53)
- ◆ Calling Emergency Numbers (page 53)
- ◆ In-Call Options (page 55)
- ◆ End-of-Call Options (page 56)
- ◆ Additional Calling Options (page 56)
- ◆ Saving a Phone Number (page 57)
- ◆ Finding a Phone Number (page 58)
- ◆ Dialing From the Contacts List (page 58)
- ◆ Using Favorites (page 58)
- ◆ Plus (+) Code Dialing (page 59)

Making Calls




1. Press  and then tap .
– or –
Press  and tap  > .
2. Enter a phone number using the onscreen dialpad and tap .
 - If you make a mistake while dialing, tap  to erase the numbers.
 - To make a call when you are roaming and Call Guard is enabled, select **Roam Call** and tap . (See “Call Guard” on page 149.)
3. Touch and drag  to the right when finished.

Tip: To redial your last outgoing call, tap  from the Call log list.

You can also place calls from your device by speed dialing numbers from your Contacts (page 58) and using your Call log listings (page 81).


Dialing Options

When you enter numbers within the dialpad, you will see three onscreen options.

- **Voicemail** () to place a call to your voicemail.
- **Call** () to place a new call to the current number.
- **Delete** () to delete the digits from the current number.

To see additional options, tap .

- **Add to contacts** to add the current number to a new or existing Contacts entry.
- **Add 2 sec pause:** to insert a two-second pause to enter a 2-second delay within a number string (the phone continues dialing after 2 seconds without any additional keys being pressed).

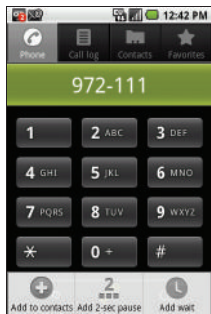

- **Add wait** to insert a hard pause within the number string (the phone waits for your input). A wait requires that any consecutive numbers be manually sent by tapping **Yes**.

Answering Calls

- ▶ Touch and drag  to the right to answer an incoming call.

Note: All incoming call options listed below require you to touch and hold the button to activate the function.

When unlocked, some functions can be activated by tapping the onscreen button.

Tip: To silence the ringer on an incoming call, press either the up or down Volume button.

Your device notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. You may also see the caller's phone number, if available.



Answering a Roam Call With Call Guard Enabled

Call Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Nationwide Sprint Network. (Please see "Roaming" on page 147 for more information.)


- ▶ Tap **OK** to answer the call. (See "Call Guard" on page 149 for additional information.)

Note: When your device is off, calls go directly to voicemail.



Ending a Call

- ▶ Touch and drag  to the right across the screen.
– or –
Press  and then tap **End call**.

Missed Call Notification





When you do not answer an incoming call, the Status bar indicates .

To display a Missed Call entry from the Home screen:


1. Touch and hold the Status bar, and then slide your finger down the screen.
2. Tap the Missed call entry (). This opens the **Call log** screen.
3. Tap  next to the entry to make the call.
– or –

Touch and hold an entry from the Call Log list and from the context menu, select **Call** [number]. (See "Using Context Menus" on page 41.)

Calling Emergency Numbers

You can place calls to 911 (from the dialpad, enter    ), even if your device is locked or your account is restricted.

Note: When you place an emergency call, your device automatically enters Emergency mode.

During an emergency call, press  to display your options. Select an option.

- **Speaker On** to activate speakerphone mode. (If you are in speakerphone mode, the option is displayed as **Speaker Off** to deactivate.)
- **Dialpad/Hide dialpad** to show or hide the onscreen dialpad.
- **End call** to end the current call.

To exit Emergency mode:

1. Touch and drag  across the screen to end a 911 call.
2. Tap **Exit** on the Emergency Call Back mode.

Note: When you end the 911 call, you are returned to the Emergency Call Back mode.

Within the Emergency Call Back mode, press the **Home** key to use another menu.

Enhanced 911 (E911) Information

This device features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.




When you place an emergency 911 call, the GPS feature of your device seeks information to calculate your approximate location.


Note: Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

Important: **Always report your location to the 911 operator when placing an emergency call.** Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your device.


In-Call Options

Once you initiate a call, you will see three onscreen options.

- **End call** () to end the current call. (Touch and drag to the right.)
- **Speaker** () to route the device's audio through the speaker (On) or through the earpiece (Off). (Touch and drag to the left.)
- **Dialpad** () to enter dial tones using the onscreen dialpad. (Touch and drag up.)

To see additional options, tap .

- **Show/Hide dialpad** to toggle the appearance of the onscreen dialpad.

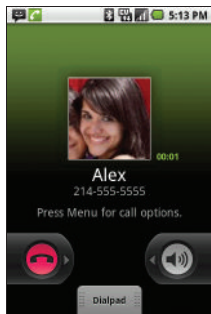


- **Add call** to initiate a 3-way call (page 146). This can take up to 20 seconds to become available.
- **Merge calls** to join two currently active calls (conference).
- **End call** to end the current call.
- **Mute/Unmute** to mute the microphone during an active call. Tap again to unmute the microphone.

Note: If Mute is activated, the speaker mode is deactivated.


- **Speaker** to route the device's audio through the speaker (**On**) or through the earpiece (**Off**).
 - ▶ Activate **Speaker** to route the device's audio through the speaker. (You can adjust the speaker volume using the volume buttons.)
 - ▶ Deactivate **Speaker** to use the device's earpiece.


WARNING: Because of higher volume levels, do not place the device near your ear during speakerphone use.

- **Bluetooth** to route the device's audio through a connected Bluetooth headset (**On**) or through the speaker (**Off**). (See “2J. Bluetooth” on page 127.)

- When the call is routed to a Bluetooth headset, the current call area shows the **Bluetooth** call icon ()


Note: The Headset button is activated to show the current call is routed to the connected Bluetooth headset.

- To route the current call back to the device, tap Headset to temporarily use the device. Tap **Bluetooth** again to route the call back to the connected Bluetooth headset.
- When Bluetooth or the Bluetooth headset is turned off, the call is routed through either the earpiece or speaker and shows ()

Touch and drag **Dialpad** () up to use the onscreen dialpad to enter additional numbers, for example, an extension or access code.




- For example: When you call your bank's 800 number, use your dialpad to enter your account number and PIN.

End-of-Call Options

1. After you receive a call from or make a call to a phone number that is not in your Contacts, locate the number in your Call log list.
2. Tap the number to view options, or tap  to call back the entry.

Additional Calling Options

To obtain additional options such as phone number and the duration of the call, you must access the Call log screen. (See “2D. Call Log” on page 81.)

1. Press  and then tap  > **Call log** ().
2. Touch and hold the entry to reveal an onscreen context menu where you can choose from the following options:
 - **Call [Number]** to redial the current phone number.
 - **Edit number before call** to make alterations to the current phone number prior to redial. (See “Altering a Number From Call Log” on page 85.)




- **Send text message** allows you to create a new text message to the selected entry.
- **Add to contacts** to save the number if it is not already in your Contacts. (See “Saving a Number From Call Log” on page 84.)
- **Remove from call log** to delete the entry from the Call Log list.

Note: The End-of-Call options are not displayed for calls identified as No ID, Restricted, or Unknown.


Saving a Phone Number

The number of Contacts entries you can store in your device is limited only by available memory space. Your device automatically sorts the Contacts entries alphabetically. Each entry's name can contain an unlimited number of characters. (For more information, see “2E. Contacts” on page 86.)

To save a new number from the Home screen:

1. Press  and then tap .
2. Enter the new number.
3. Press  and tap **Add to contacts**.
4. Tap **Create new contact**.
5. If prompted, tap a destination for your new contact to be synchronized.

- The new contact can be created under either your **Google** (Gmail) account, or **Corporate** (Outlook-Exchange Server account).

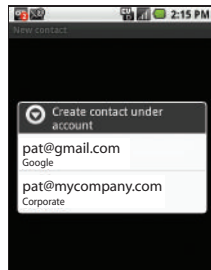








Note: You will not see the above option to select a destination unless you have previously established a Google or Corporate account on the device. (See “Synchronizing Accounts” on page 67.)

6. Tap the **Given name** and **Family name** fields and use the onscreen or QWERTY keyboard to enter the new contact name.
7. Populate any of the other fields.
8. Tap **Done** to store and update the new entry.


Finding a Phone Number

You can search Contacts for entries by name.

1. Press  and then tap  > **Contacts** ().
– OR –
Press  and tap  >  (**Contacts**).
2. Turn the device on its side and slide open the QWERTY keyboard.
– or –
Tap  to display the onscreen keyboard.
3. Enter the first letter or letters of an entry. (The more letters you enter, the more specific the search.)
4. To display contact details, tap an entry from the list.

Dialing From the Contacts List

1. Press  and tap  >  (**Contacts**).

Shortcut: From Phone screen, tap **Contacts** () to list entries.







2. Scroll through the list and tap the entry you want to call.
3. Tap a phone number.

Using Favorites

Dialing From Favorites

You can quickly dial contacts you call frequently by adding them to your Favorites list. Although not assigned to a speed dial number, this is a quick and easy way to dial your favorite Contacts. (See “Adding Entries to Your Favorites” on page 94.)

To dial a contact from Favorites:







1. Press  and then tap  > **Favorites** ().
2. Scroll through the list and tap the contact.
3. Tap  to place a call or  to send a text to the contact, or  to send an email.


Dialing a number from the **Favorites** tab is similar to dialing one from the **Contacts** tab. (See “Dialing From the Contacts List” on page 58.)

Assigning Favorites

Only an existing Contacts entry can be assigned as a Favorite contact.





To assign a Contacts entry as a Favorite:

1. Press  and tap  > .
– or –
Press  and then tap  > **Contacts** ().

2. Tap and hold a Contacts entry to display its onscreen context menu (page 41).
3. Tap **Add to favorites**.
4. Confirm your entry has been added by tapping the **Favorites** tab ().

Plus (+) Code Dialing

When placing international calls, Plus Code Dialing automatically enters the international access code for your location (for example, 011 for international calls made from the U.S.). (See “Activating Plus Code Dialing” on page 71.)

1. Press  and then tap .
2. Touch and hold  until you see a “+” on the display screen.
3. Dial the country code and phone number, and then tap . (The device automatically prepends the access code for international dialing, followed by the country code and phone number.)




2C. Settings

- ◆ Sound Settings (page 60)
- ◆ Display Settings (page 63)
- ◆ Language Settings (page 66)
- ◆ Location Settings (page 66)
- ◆ Synchronizing Accounts (page 67)
- ◆ Search Settings (page 70)
- ◆ Call Settings (page 71)
- ◆ Airplane Mode (page 72)
- ◆ TTY Use With Sprint Service (page 72)
- ◆ Security Settings (page 74)

The Settings menu can be accessed by one of two ways on the Transform:

► Press  >  and tap .

– or –

Press  and tap  > .




Sound Settings

Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.




Selecting Ringer Types for Voice Calls

Your device provides a variety of ringer options that allow you to customize your ring and volume settings.

1. Press  >  and tap  > **Sound & display** > **Phone ringtone**.
2. Tap a ringtone from the available list. The ringtone briefly plays when selected.
3. Tap **OK** to assign a ringtone.

Selecting Ringer Types for Notifications

The notification area displays icons associated with user notifications such as: email messages, missed calls, new voicemail, upcoming event, USB connections, text/MMS messages. You can select the ringtone that plays when your device receives new notifications.

1. Press  >  and tap  > **Sound & display**.
2. Tap **Notification ringtone**.
3. Tap a notification ringtone from the available list. The ringtone then briefly plays when selected.
4. Tap **OK** to assign a ringtone.

Activating Feature Sounds




You can select whether your device plays a sound when using the dialpad, when making an onscreen selection, and when an SD card notification occurs.

1. Press  >  and tap  > **Sound & display**.

2. Tap a feature to enable it. (If a green checkmark appears to the right of the feature, it is already enabled.)
 - **Audible touch tones** plays a tone while using the dialpad.
 - **Audible selection** plays a sound when making any onscreen selection.
 - **SD card notifications** plays a sound when an SD card notification event occurs.

Adjusting the Volume Settings

Adjust the volume settings to suit your needs and your environment.


1. Press  >  and tap  > **Sound & display**.
2. Tap **Ringer volume** or **Media volume**.
3. Touch and drag the onscreen slider to adjust the volume level, and tap **OK**.
 - Within Ringer volume, adjust the **Incoming call volume** and **Notification volume** fields to assign the volume settings.

Note: By default, the **Use incoming call volume for notifications** field is active, in this case, the **Notification** slider is not accessible until it is disabled.




Tip: You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the volume button on the left side of your device.

Vibrate

To set your device to vibrate for incoming calls and silent for notifications:

- ▶ Press the volume button down in standby mode until you see  on the screen.

To set your device to always vibrate for incoming calls:

1. Press  >  and tap  > **Sound & display**.
2. Tap **Phone vibrate**. (If you have already checked the option, tapping it again deselects the option.)

To set your device to vibrate while using the dialpad and making onscreen selections:

1. Press  >  and tap  > **Sound & display**.
2. Tap **Haptic feedback**. (If you have already checked the option, tapping it again deselects the option.)

Silence All

The Silence All option allows you to mute all sounds without turning your device off (except for Media volume).

To activate Silence All:

- ▶ Press and hold the volume button down in standby mode until you see  on the screen.

To deactivate Silence All:

- ▶ Press the volume button up repeatedly to select a volume level.

To set your device to silent mode:




1. Press  >  and tap  > **Sound & display**.

2. Tap **Silent mode**. This option silences all audio on the device except for media and alarms. (If you have already checked the option, tapping it again deselects this option.)

Display Settings




Changing the Screen Orientation

Although most screens will change orientation once the QWERTY keyboard is opened, this feature can be manually enabled to change the orientation for all screens when rotation is detected.

1. Press  >  and tap  > **Sound & display**.
2. Tap **Orientation** (enabled by default). A green checkmark indicates the feature is enabled.
 - Clear the **Orientation** checkmark to disable this automatic orientation adjustment.

Window Animation

This feature provides the use of animation when onscreen windows are opened and closed. If deactivated, windows pop on and off and no transitions are applied.

1. Press  >  and tap  > **Sound & display**.
2. Tap **Animation** and select **No animations**, **Some animations**, or **All animations**.

Changing the Backlight Time Length




Select how long the display screen remains lit after you press any key.

1. Press  >  and tap  > **Sound & display** > **Screen timeout**.
2. Tap a time setting (8 seconds - 30 minutes).

Note: Long screen backlight settings reduce the battery's talk and standby times.

Changing the Keyboard Backlight Time Length




Select how long the keyboard stays lit after you press any key.

1. Press  >  and tap  > **Sound & display** > **Keyboard timeout**.
2. Tap a time setting.

Note: Long keyboard backlight settings reduce the battery's talk and standby times.

Changing the Brightness




Adjust your screen's brightness to suit your surroundings.

1. Press  >  and tap  > **Sound & display**.
2. Scroll down and tap **Brightness**.
3. Touch and drag **Brightness** slider left or right to adjust the screen contrast and tap **OK**.

Note: Not available when the Auto Brightness is enabled.




Changing the Automatic Brightness

Automatically adjusts your screen's brightness to provide the best display within the current lighting condition.

1. Press  >  and tap  > **Sound & display**.
2. Tap **Auto Brightness**. A green checkmark indicates the feature is enabled.
 - Enabling this feature disables the manual **Brightness** option.

Changing the Display Screen

Choose what you see on the Home screen (behind your shortcuts and Widgets) while powering on or off the device, and when in standby mode.

1. Press  >  and tap  (**Wallpaper**).
2. Tap **ID wallpapers**, **Pictures**, or **Wallpaper gallery**.
 - **ID wallpapers** lets you choose from wallpapers available from the currently assigned ID pack.




■ **Pictures** lets you choose from pictures taken using the built-in camera or copied to your device as a wallpaper. You can crop the picture before setting it as a wallpaper. (See “Assigning a Picture to an Entry” on page 93 to learn how to crop the picture.)

■ **Wallpaper gallery** provides a selection of pre-loaded wallpaper images.





3. Scroll through available images and tap a selection to preview it.
4. Tap **Set wallpaper** to assign an preset image.
 - or –
 - Tap **Save** to assign a picture as a wallpaper.

Adjusting the Date and Time

Your device obtains its time and date information by using the network-provided date, time, and time zone. These values can be manually altered.

1. Press  >  and tap  > **Date & time**.
2. Tap **Automatic** to disable the feature.

Note: If enabled, you can not alter the date, time zone or time values.

3. Tap **Set date**. Adjust the date, month, and year by tapping  or . Tap **Set** when finished.
4. Tap **Select time zone**, and then select a time zone from the onscreen list. Scroll down the list to view additional time zones.
5. Tap **Set time**. Adjust the hour and minute by tapping  or . Tap the **am** or **pm** icon to change the value. Tap **Set** when finished.
6. Tap **Use 24-hour format** to toggle between using a 12-hour or a 24-hour format.
7. Tap **Select date format** to select how the date information is displayed on your device. The selected date format is also applied to the date displayed within the device's Alarm Clock.

Language Settings

To assign the default language used by the Android operating system.

1. Press  >  and tap  > **Language & keyboard** > **Select locale**.
2. Tap either **English** or **Español**. All menus are then updated to the new language.




Location Settings

Your device is equipped with a Location feature for use in connection with location-based services.




The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note: Turning Location on will allow the network to detect your position using GPS technology, making some Sprint applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable your device's GPS Location feature:

1. Press  >  and tap  > **Location & security**.
2. Tap **Use GPS satellites**. A green checkmark indicates the GPS location feature is enabled.

To enable Location via wireless networks:

1. Press  >  and tap  > **Location & security**.
2. Tap **Use wireless networks**. A green checkmark indicates the feature is enabled.
 - This service uses available wireless networks to pinpoint your location within certain applications such as Google Maps (page 185).




3. Tap **Agree**. Enabling this feature allows Google to collect anonymous location data whether or not any location application or other related feature is active or in use.
 - Tap **Use wireless networks** > **disagree** to disable the collection of data. Enabling this feature can utilize more resources and slow performance.

Synchronizing Accounts

Your device provides the ability to synchronize data from a variety of different sources or sites. These accounts can range from Google, a Corporate Exchange Email Server, and other social sites such as Facebook, Twitter, and MySpace.

Corporate and Google accounts provide the ability to synchronize Calendar events and Contacts.

To enable the auto-sync feature:




1. Press  >  and tap  > **Accounts & sync**.
2. Tap **Auto-sync**. A green checkmark indicates the feature is enabled.

- This feature enables the synchronization of data between your device and external sites or servers.
- The two main components are Contacts and Calendar Events. Before these can be synchronized, they must be added to the managed accounts list.

Synchronizing Your Google Account

By default, there are no accounts managed by the device. These must be manually added.

To add manage an existing Google account:

1. Press  >  and tap  > **Accounts & sync**.
2. Tap **Add account** > **Google**.
3. Click **Next** > **Sign in**.






Note: If you do not already have a Google account, tap **Create** and follow the onscreen prompts to create your new account.

4. Tap the **Username** (@gmail.com) and **Password** fields and enter your information.

5. Tap **Sign in**. Your device then communicates with the Google servers to confirm your information. Your existing Gmail account then appears within the **Managed accounts** area of the screen.

- Any changes or updates to your Gmail account are then automatically updated to your device.

To configure the Google management settings:




1. Press  >  and tap  > **Accounts & sync**.
2. Tap  within the Google account field to reveal the account's synchronization settings screen.
3. Tap the parameters you wish to synchronize (**Sync Calendar**, **Sync Contacts**, **Sync Gmail**). A green checkmark indicates the feature is enabled.
4. Press  to return to the previous screen.

Synchronizing Your Corporate Account





By default, there are no Corporate Calendar events managed by the device. These must be manually added. (See “Synchronizing Corporate Calendar Events” on page 95.)

Note: Once a corporate email account is created, it is automatically added as a managed account.

To add a new Corporate account:

1. Press  >  and tap  > **Accounts & sync**.
2. Tap **Add account > Corporate**.
3. Follow the onscreen prompts to create your new Corporate email account. See “Corporate Email (Outlook)” on page 169.
 - Any changes or updates to your Corporate/ Outlook account are then automatically updated to your device.

To configure the Corporate management settings:

1. Press  >  and tap  > **Accounts & sync**.
2. Tap  within the Corporate account field to reveal the account's synchronization settings screen.

3. Tap the parameters you wish to synchronize.


- **Account settings** allows you to configure the current email account settings such as:

- **General settings** allows you to configure:

- **Account name** displays the name used by the device to track the account.
- **Your name** displays the name used in the From field within your outgoing emails.
- **Email check frequency** configures the frequency which the device queries the remote server for new email changes. Choose from: **Automatic (Push)**, **Never**, **Every 5 minutes**, **Every 10 minutes**, **Every 15 minutes**, **Every 30 minutes**, or **Every hour**.
- **Amount to synchronize** to assign the sync range for your incoming and outgoing emails between your device and your external exchange server. How many days worth of emails should the device and server synchronize. Choose from: **One week**, **Two weeks**, or **One month**.
- **Advanced Settings** configures your **Out of Office Settings**.

- **Default account** assigns this account as the default used when sending out new emails.


- **Notification settings** allows you to configure:

- **Email notifications** enables the device to display a status bar icon  when new emails have been received.
- **Select ringtone** assigns an audible ringtone when a new or upcoming event is pending.
- **Vibrate** assigns a vibration when a new or upcoming event is pending.

- **Server settings** allows you to configure:

- **Incoming settings** provides access to the Domain, password, and exchange server parameter fields.
- **Sync contacts** synchronizes the contacts between your device and the remote exchange server. A green checkmark indicates the feature is enabled.
- **Sync calendar** synchronizes your exchange calendar entries between your device and the remote exchange server. A green checkmark indicates the feature is enabled.

■ **Common settings** allows you to configure:




- **Forward with files** causes any outgoing email replay to include any currently attached files. A green checkmark indicates the feature is enabled.
 - **Signature** allows you to create an outgoing email signature attached to new emails sent from your device.
 - **Sync calendar** synchronizes your exchange calendar entries between your device and the remote exchange server. A green checkmark indicates the feature is enabled.
 - **Sync Contacts** synchronizes the contacts between your device and the remote exchange server. A green checkmark indicates the feature is enabled.
4. Press  to return to the previous screen.

For more detailed Work/Corporate email information, see “Corporate Email (Outlook)” on page 169. For more information on Corporate Calendar synchronizing, see “Synchronizing Corporate Calendar Events” on page 95.

Search Settings

You can use the Transform’s search preferences to configure some aspects of Google Web search (for example, whether it makes suggestions below the Quick Search Box as you type), and what phone features you want to include in searches.

Configuring the Search Settings

1. Press  >  and tap  > **Search**.
2. Tap any of the following search parameters to then alter the settings:
 - **Google search settings** opens a screen where you can set your Google search preferences.
 - **Show web suggestions** also includes search matches from Google’s online search engine.
 - **Searchable items** opens a screen where you can choose the search categories included in device searches.
 - Categories include: **Browser, Apps, Contacts, Voicemail, YouTube, or Music.**



- **Clear search shortcuts** erases the history of recently selected search results.

Call Settings

Your device allows you to configure call settings such as Plus code dialing usage, other international dialing options, and TTY configuration.






Activating Plus Code Dialing

Plus Code dialing allows you to have the phone automatically dial the international access code for your location once you touch and hold **0+**. (See “Plus (+) Code Dialing” on page 59.)

1. Press  >  and tap  > **Call settings**.
2. Tap **North American dialing** to activate the feature (a green checkmark appears in the adjacent field).






Changing the International Dialing Code


By default, the international dialing prefix (code) is set to 011. This code can not be changed until the feature is temporarily disabled. Once disabled, the field becomes accessible and can be altered.

1. Press  >  and tap  > **Call settings**.
2. Tap **North American dialing** to deactivate the feature. This enables the **International Dialing** field.
3. Tap **International Dialing**.
4. Tap the entry field and press  from the onscreen keyboard to delete the previous value.
– or –
Press and hold  on the QWERTY keyboard to delete the current prefix.
5. Enter a new value and tap **OK**.
6. Tap **North American dialing** to reactivate the feature. This disables the **International Dialing** field.

Airplane Mode

Airplane Mode (Flight mode) allows you to use many of your device's features, such as Games, Market, and Music, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When you set your device to Airplane Mode, it cannot send or receive any calls or access online information.

1. Press and hold  to reveal the Phone options.
2. Tap  **Airplane mode (Airplane mode is OFF)**.
– or –
 1. Press  >  and tap  > **Wireless & networks**.
 2. Tap **Airplane mode** to place a checkmark in the adjacent field.

While in Airplane Mode, your device's Status area will display (.

To deactivate Airplane Mode:

1. Press and hold  to reveal the Phone options.

2. Tap  **Airplane mode (Airplane mode is ON)**.
– or –




1. Press  >  and tap  > **Wireless & networks**.
2. Tap **Airplane mode** to remove the checkmark.

TTY Use With Sprint Service

A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your device is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it is compatible with digital cell phones. Your device and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

To turn TTY Mode on or off:

1. Press  >  and tap  > **Call settings** > **TTY**. (You will see an informational message.)
2. Read the onscreen disclaimer and tap **Yes**.
3. Tap **TTY Off** to turn TTY mode off.
 - or –
 - Tap any of the following to enable the feature:
 - **TTY HCO**, **TTY VCO**, or **TTY Full**.

To access the state Telecommunications Relay Service (TRS) for assistance with TTY calls:

- ▶ Dial     to reach an operator.

For additional information about Sprint Relay Services and TTY compatibility, call Sprint Relay Customer Service at **800-676-3777** or visit www.sprintrelay.com.

For additional technical support you may call **1-888-987-4357**, or access the following website: www.samsung.com/us/consumer/learningresources/mobile/accessibility/pop_accessibility.html.

Note: In TTY Mode, your device will display the TTY access icon.

If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

WARNING: 911 Emergency Calling




Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

Security Settings

Unblocking Unknown Installations

There may be instances where you choose to install applications or packs from sources other than the Android Market.

Before these applications can be installed, you must allow the installation of "non-Market applications".

1. Press  >  and tap  > **Applications**.
2. Tap **Unknown sources** to enable it. (If a green checkmark appears to the right of the feature, it is already enabled.)
3. Tap **OK** to acknowledge the change in setting.

Accessing the Security Menu

All of your device's security settings are available through the Security menu. You can secure your data and limit phone access by requiring a screen unlock pattern every time your device is turned on or every


time it wakes up from sleep mode (screen where the screen turns off).

- Press  >  and tap  > **Location & security**.


Your Device's Screen Lock Feature

Locking Your Device Screen

When your device is locked, you can only receive incoming calls or make calls to 911.

- Press . Locking the screen prevents accidental screen touches from activating phone functions.




Unlocking Your Device

1. Press  to awaken the device.
2. Touch and drag the lock icon across the screen or slide the QWERTY keyboard out.

Your Device's Unlock Pattern Feature

You can increase your device's security by creating a screen unlock pattern (disabled by default). When enabled, you must draw the correct unlock pattern on the screen to unlock and regain access to the device.

Creating an Unlock Pattern

1. Press  >  and tap  > **Location & security**.
2. Scroll down to the menu list and tap **Set unlock pattern**.
3. Read the information on the screen, and then tap **Next**.
4. Review the onscreen tutorial on pattern creation, and then tap **Next**.

5. Draw your pattern by touching your first onscreen point. Then, **without removing your finger from the screen**, drag your finger over adjacent points until the grey trace line overlaps each point and they are highlighted with a green circle.

Important: You must slide your finger on the screen to create the pattern and not touch individual dots. If you make a mistake or a point is not properly selected, a red circle will appear.





6. When you have connected at least four dots in a vertical, horizontal or diagonal direction, lift your finger from the screen.
7. Tap **Continue** to record the pattern.
8. Confirm the new pattern by redrawing it and then tapping **Confirm**.




Once the feature is enabled, additional unlock pattern options are then enabled from within the **Security & location** menu list.

Configuring the Unlock Pattern Settings

To require the pattern for access:

1. Press  >  and tap  > **Location & security**.
2. Place a checkmark adjacent to the **Require pattern** field.

To remove the visible unlock pattern from the Lock screen:

1. Press  >  and tap  > **Location & security**.
2. Remove the checkmark adjacent to the **Use visible pattern** field.

- Removing this checkmark prevents the unlock pattern from displaying on the unlock screen.

What to do if you have forgotten your pattern:

If you fail to draw the correct unlock pattern on the screen after five attempts, you are prompted to wait for 30 seconds before you can try again.

- ▶ If you have forgotten your screen unlock pattern, tap **Forgot pattern**.
 - Sign in using your Google account name and password, and create a new screen unlock pattern before regaining access to the Home screen.

Changing the Unlock Pattern

1. Press  >  and tap  > **Location & security** > **Change unlock pattern**.
2. Draw the current pattern on the screen.
3. Draw a new pattern. (See “Creating an Unlock Pattern” on page 75.)

Calling in Lock Mode

When your device is locked, you can only receive incoming calls or make calls to 911 or Sprint Customer Service.

1. Press  to reveal the lock screen.




Note: The Unlock Pattern applies if the **Require Pattern** setting is enabled.

2. Tap **Emergency call** to reveal the Emergency dialpad to place your emergency call.
 - Draw your unlock pattern to regain access to the full dialer and unlock the device.

Using Visible Passwords

When enabled, this feature allows you to view the text being entered into a password field as you type it. So many times there are other applications that insert an asterisk (*) as your type. This can be confusing and can cause issues. What if you mistyped the password or used the wrong case? When enabled, you can see what you are entering. This feature is enabled by default.




To disable visible passwords:

1. Press  >  and tap  > **Location & security**.
2. Tap **Visible passwords** (to remove the checkmark on the option).

Managing Your Available Memory




You can manage the information and configuration related to both your microSD card and built-in device storage memory. The available device memory provided by these two locations is called **Internal phone storage**.

To view your device's total available memory:

1. Press  >  and tap  > **SD card & phone storage**.
2. Review the two memory sections for available space information:
 - **SD card** displays the memory information specific to an installed microSD card. This amount of space can be altered by replacing the current microSD card.

- **Internal phone storage** displays the memory information specific to the built-in device memory. This memory amount can not be altered because it is part of the device hardware.




To view your microSD card storage information:

1. Press  >  and tap  > **SD card & phone storage**.
2. Locate the **SD card** section.
3. Review both the **Total space** and **Available space** fields:
 - **Total space** indicates the total size of the currently inserted microSD card. This includes both available and used space information.
 - To determine the amount of memory currently used on the card, take the total space and subtract the remaining available space.

Note: Not all of the microSD card is registered in the available space, as a small percentage of the storage is unread.

- **Available space** indicates the amount of remaining free memory space available on the microSD card.




To view your device's storage information:

1. Press  >  and tap  > **SD card & phone storage**.
2. Locate the **Internal phone storage** section.

Manage Running Services

This service is an efficient method for managing power consumption and processor/memory resources. Processes can be stopped until the device is restarted.

To stop a currently running service:

1. Press  >  and tap  > **Applications > Running services**.
2. Tap an onscreen process entry.
3. Read the **Stop service?** dialog and tap **Stop**.






Note: These stopped processes are restarted once the device is restarted (power cycled).

Third-party Task Manager applications are also available from the Google Marketplace.

Erasing Device Content

Use the Manage applications menu to quickly erase selected content and uninstall third-party applications stored in your device.

To clear an application's cache:

1. Press  >  and tap  > **Applications > Manage applications.**
2. Press  and tap **Sort by size**. This option sorts the current **Manage applications** listing to display those applications by amount of memory or cache usage.
– or –
Press  and tap **Filter**. This option sorts the listed applications and processes based on one of three available filters: **All**, **Running**, or **Downloaded**.

Note: Those applications with the largest usage appear at the top of the sorted list. If not all applications or processes are visible, select **Filter > All**.

3. Tap the application whose cache you wish to delete.

4. From the Application info screen, tap **Clear cache** and/or **Clear defaults**.

To uninstall third-party applications:

1. Press  >  and tap  > **Applications > Manage applications.**




Important: Only third-party applications can be uninstalled. Applications preinstalled on the device can not be removed.

2. Tap the third-party application, and from the **Application info** screen, tap **Uninstall**.

Resetting Your Device

Resetting the device restores all the factory defaults, including the ringer types and display settings. All data, including downloaded applications are deleted.

Important: Back up your important data before you perform a factory reset of the device.

1. Press  >  and tap  > **Privacy** > **Factory data reset**. (You will see a disclaimer.)
2. Read the disclaimer and tap **Reset phone**.
3. If you are certain that you would like to restore all factory settings, tap **Erase everything**.



2D. Call Log

- ◆ Viewing Call Log (page 81)
- ◆ Call Log Options (page 82)
- ◆ Making a Call From Call Log (page 84)
- ◆ Saving a Number From Call Log (page 84)
- ◆ Altering a Number From Call Log (page 85)
- ◆ Erasing the Call Log (page 85)

Viewing Call Log

Call Log (History) is a list of the phone numbers (or Contacts entries) for calls you placed, accepted, or missed. Call log makes redialing a number fast and easy. It is continually updated as your device automatically adds new numbers to the beginning of the list and removes the oldest entries from the bottom of the list.

The Notification area of the Home screen (upper-left) displays phone notifications, status, or alerts such as:




	Call in progress: Indicates there is a call currently active and in progress.
	Missed Call: Indicates an incoming call was missed.

To access the Call log:

1. Press  and tap  > **Call log** ().
2. Tap an entry to view available options.

Note: Call log records only calls that occur while the device is turned on. If a call is received while your device is turned off, it will not be included in history.


From within the Call log screen, each entry contains the phone number (if it is available) and Contacts entry name (if the number is in your Contacts).



	Dialed: Indicates all outgoing calls made from your device.
	Received: Indicates any received calls that were answered.
	Missed: Indicates any missed calls. These are routed to your voicemail.

Accessing Call Log From Notifications

You can also access the Call log from a Missed Call notification. (See “Using the Notifications Panel” on page 41.)


To access these call notifications:


1. Locate  from the Notifications area of the Status bar.
2. Touch and hold the Status bar, and then slide your finger down the screen.
3. Tap the Missed call entry to open the Call log screen.

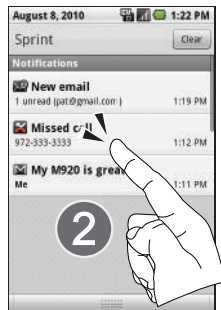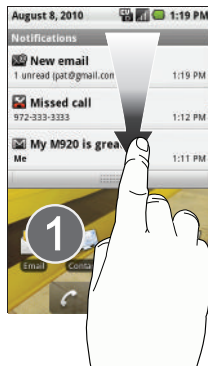

Call Log Options

This list provides easy access to redial an entry, or you can also choose to access two types of history entry lists depending on how they are touched.

- Highlight an entry from the list and tap  to quickly redial the selected entry. (See “Making a Call From Call Log” on page 84.)

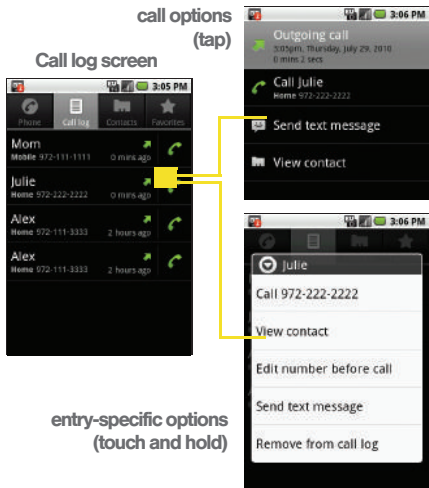


- Highlight a contact entry name and press **OK** or tap an entry to reveal the **call options** screen:

- **Call information** (Incoming/Outgoing call) provides the time and date of the call and its duration.
- **Call [Name or Number]** allows you to redial the entry by name or number.
- **Send text message** allows you to create a new text message to the selected entry.
- **View contact** provides information about the entry if it already exists in your Contacts list. Once the Contacts overview screen, press **[Menu]** to gain access to other options such as: **Edit contact**, **Share**, **Options** and **Delete contact**.
- **Add to contacts** to save the number if it is not already in your Contacts. (See “Saving a Number From Call Log” on page 84.)
- Touch and hold an entry to display the following **entry-specific options**:
 - **Call [Number]** to redial the current phone number.
 - **View contact** provides information about the entry if it already exists in your Contacts list.

- **Add to contacts** to save the number if it is not already in your Contacts. (See “Saving a Number From Call Log” on page 84.)
- **Edit number before call** to make alterations to the phone number prior to redialing it. (See “Altering a Number From Call Log” on page 85.)
- **Send text message** allows you to create a new text message to the selected entry.
- **Remove from call log** to delete the entry from the Call log list.

Making a Call From Call Log

1. Press  and tap  > **Call log** ().
2. Tap  adjacent to a desired entry.
– or –

Touch and hold an entry name/number from the list, and then tap **Call [Number]**.

Note: You cannot make calls from History to entries identified as **Unknown**, **No ID**, **Restricted** or **Private Number**.

Saving a Number From Call Log

1. Tap a Call log entry > **Add to contacts** > **Create new contact**.
– or –
Tap and hold an entry > **Add to contacts** and select an existing contact to save the number to an existing contact.
2. If prompted, tap a destination type (**Google** or **Corporate**).
3. Tap the **Given name** and **Family name** fields and enter a name for the contact.
4. Tap **Done** when you have finished entering information for the contact.






Note: The option to select a destination is only available if you have previously established a Google or Corporate account on the device.

After you have saved the number, your device displays the new Contacts entry in place of the previous number. (See “Contacts Entry Options” on page 90.)

Note: You cannot save phone numbers already in your Contacts or from calls identified as **Unknown**, **No ID**, **Restricted** or **Private Number**.

Altering a Number From Call Log

If you need to make a call from Call log and you need to alter the number prior to dialing, you can add the appropriate prefix by prepending the number.




1. Press  and tap  > **Call log** ().
2. Touch and hold an entry to access the entry-specific options menu.
3. Tap **Edit number before call**.
4. Edit the number using the onscreen dialpad or delete digits by pressing  to erase the numbers.
5. Tap  once the number has been changed.

Note: To edit a number and save it to Contacts, tap **View contact** in step 3 above, and then edit the number and tap **Save**. (See “Editing a Contacts Entry’s Number” on page 92.)

Erasing the Call Log

You can delete either an individual call log entry or all current entries from the Call log list.

To clear a single entry from the Call log list:

1. Press  and tap  > **Call log** ().
 2. Touch and hold an entry and tap **Delete**.
- or –

Touch and hold the entry from the Call log screen and select **Remove from call log**.

To clear all entries from the Call log list:

1. Press  and tap  > **Call log** ().
2. Press  and tap **Clear call log**.


2E. Contacts

- ♦ Creating a New Contacts Entry (page 86)
- ♦ Confirming Contact Synchronization (page 88)
- ♦ Contacts Menu Options (page 89)
- ♦ Contacts Entry Options (page 90)
- ♦ Editing a Contacts Entry (page 91)
- ♦ Adding a Number to a Contacts Entry (page 92)
- ♦ Editing a Contacts Entry's Number (page 92)
- ♦ Sending Contacts (page 93)
- ♦ Assigning a Picture to an Entry (page 93)
- ♦ Deleting Entries (page 94)
- ♦ Adding Entries to Your Favorites (page 94)

Important: To verify your Contacts appear on your device, you must sync your email accounts after setup (**Settings > Accounts & sync**). (See "Confirming Contact Synchronization" on page 88.)

Creating a New Contacts Entry

If existing Google and Corporate email accounts have been synchronized to your device, these will be made available to your device during the creation of new entries. New Contacts entries can be assigned or saved to synced accounts such as Google or Corporate.

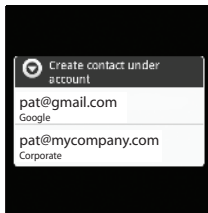




Your device automatically sorts the Contacts entries alphabetically. Each entry's name can contain an unlimited number of characters. You can create either a **Google** or **Corporate** contact.


WARNING: If the device is ever reset to its factory default parameters, locally stored contacts can be lost.

- **Google** contacts are shared with your existing Google account and can also be imported to your device after you have created a Google Mail account.

- **Corporate** (also known as Work or Outlook) contacts are those contacts that are intended to be shared with either an Exchange Server or from within Microsoft® Outlook®.

To add a contact:

1. Press  and tap  > **Contacts** ().
2. Tap  > **New contact**.

Shortcut: Enter a phone number from the dialpad and press  > **Add to contacts** > **Create new contact**.



3. If prompted, tap a destination type (**Google** or **Corporate**).

Note: You will not see the option to select a destination unless you have previously established a Google or Corporate account on the device.

4. Tap the **Given name** and **Family name** fields, and enter a name for the new entry.



Note: Use the predictive text row to shortcut a name selection by tapping the word.

5. Tap the **Phone number** field and enter a phone number using the onscreen dialpad.

- Tap  to enter additional phone numbers for the new Contacts entry.
- Tap  to remove a previously entered phone number.

6. Tap the label button (to the left of the **Phone** field) to select a category such as: **Home**, **Mobile**, **Work**, **Work Fax**, **Home Fax**, **Pager**, **Other**, **Custom** (to create your own unique category type), **Callback**, **Car**, **Company Main**, **ISDN**, **Main**, **Other Fax**, **Radio**, **Telex**, **TTY TDD**, **Work Mobile**, **Work Pager**, **Assistant**, or **MMS**.

7. Enter additional information into these categories: **Email**, **IM**, **Postal address**, **Organization**, **Notes**, **Nickname** and **Website**.

- Use your finger to slide the page up or down to see additional fields and categories.
- Tap  to enter additional categories.
- Tap  to remove a previously entered category.

8. Tap **Done** to complete and store the new entry.

After saving the number, your device displays the new entry within the Contact list. (See “Contacts Entry Options” on page 90.)

Tip: ICE – In Case of Emergency





To make it easier for emergency personnel to identify important contacts, you can list your local emergency contacts under “ICE” in your device’s Contacts list. For example, if your mother is your primary emergency contact, list her as “ICE–Mom” in your Contacts. To list more than one emergency contact, use “ICE1–___,” “ICE2–___,” etc.

Confirming Contact Synchronization

Syncing data from your managed accounts allows you to add and manage a new or existing contact from your online or remote accounts to your device. Prior to syncing, you must first have an active Google or Corporate account with current Contact entries, and be signed into your account via the device.

With syncing, any Contacts entries (with phone numbers, email addresses, pictures, etc.) are updated and synced with your Samsung Transform™.

For more information about syncing existing managed accounts, see “Synchronizing Accounts” on page 67.


1. Press  >  and tap  > **Accounts & sync**.
2. Tap  within the desired account field to reveal the account’s synchronization settings screen.
3. To synchronize Gmail Contacts, tap **Sync Contacts**. A green checkmark indicates the feature is enabled.
– or –
To synchronize Corporate Contacts, tap **Sync Contacts**. A green checkmark indicates the feature is enabled.

Note: Any change on either side (Gmail, or Corporate/ Outlook Contacts), is reflected on the other side after a sync process.



The process of updating your Contacts tab can take several minutes. If after 10-20 minutes, your list has not been updated, repeat step 2-3.

4. Your **Contacts** tab then reflects any updated Contact information.
 - This update process works both ways. For example, any changes on the device are updated to your Gmail Contacts list after sync.

Contacts tab

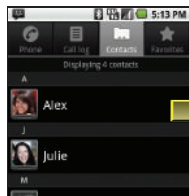

Contact entry's Overview page

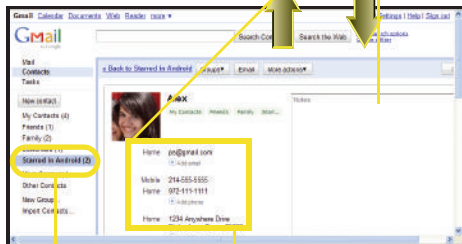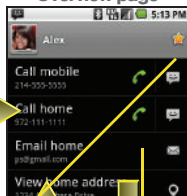

Contact Group

Contact Details

Note: Syncing of contacts requires you are logged into your Gmail and Corporate accounts via the device.

Contacts Menu Options

1. Press and tap




2. Touch and hold an entry and select from the available contact menu options:

- **View contact** to view the Contact's overview screen.
- **Call contact** to call a Contact's available number.

Remember this choice

marks the selected number as the primary one for use with this Contact.

- **Text contact** to send the Contact a new text message.
- **Send voicemail** to send the Contact a recorded voice message.

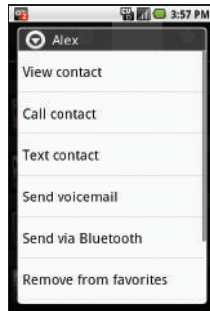





- **Send via Bluetooth** to send the current Contact entry's information to an external recipient via **Bluetooth**. (See "Sending Contacts via Bluetooth" on page 131.)
- **Add to favorites** to copy the current Contacts entry to the list within the Favorites tab (page 94).
- **Remove from favorites** to copy the current Contacts entry to the list within the Favorites tab (page 94).
- **Edit contact** to edit the currently selected Contacts entry. (See "Editing a Contacts Entry" on page 91.)
- **Delete contact** to erase the currently selected Contacts entry. (See "Deleting Entries" on page 94.)

Note: Prior to using the Bluetooth feature, it must first be enabled, and the recipient's device must be visible.

Only a Contact's information can be sent via Bluetooth. No other file type (video, image, or audio) can be sent using Bluetooth.

Contacts Entry Options


1. Press  and tap  > .
2. Tap an entry to display the Contact entry's overview screen. This screen contains Name, History, contacts numbers, email, and linked contact information.
3. Press  to reveal the context menu specific to this entry.
4. Tap an available option:
 - **Edit contact** to access the details page for the entry and begin editing its information (page 93).
 - **Share** to send the current Contact entry's information to an external recipient via either:
 - **Bluetooth** to transmit this contact to another bluetooth-compatible device.
 - **Email** to attach the contact card to a new outgoing email (Exchange or Internet).
 - **Gmail** to attach the contact card to a new outgoing Internet-based email.
 - **Options** to configure Contact-specific options such as:


- **Ringtone** where you can assign a custom ringtone for this entry.
- **Incoming calls** where calls from this Contact are automatically sent to voicemail. A green checkmark indicates this feature is active.
- **Delete contact** to erase the currently selected Contacts entry.

Note: Prior to using this feature, Bluetooth must first be enabled, and the recipient's device must be visible.




Only a Contact's information can be sent via Bluetooth. No other file type (video, image, or audio) can be sent using Bluetooth.

Editing a Contacts Entry



1. From the Contact's overview screen, press  and tap **Edit contact**. Tap an option to begin editing.
 - **[image icon]** to assign a picture to the entry. (See "Assigning a Picture to an Entry" on page 93.)
 - **Given name/Family name** to edit the current name.

- **Phone number** to add or delete a phone number to the entry. (See "Adding a Number to a Contacts Entry" on page 92.)
 - **Email** to add or delete an email address.
 - **IM** to assign an existing IM client contact name. Tap  > **label** button to access **AIM**, **Windows Live**, **Yahoo**, **Skype**, **QQ**, **Google Talk**, **ICQ**, **Jabber**, or **Custom**.
 - **Postal address** to enter a physical street address.
 - **Organization** to enter business information such as company name and position.
 - **More** to add additional categories such as: **Notes**, **Nickname**, and **Website**.
2. Tap **Done** to store your updates.




Adding a Number to a Contacts Entry


1. From the Contact's overview screen, press  and tap **Edit contact**.
2. From the phone numbers area, tap  to create a new empty **Phone number** field within the selected phone number category.
3. Tap the label button (to the left of the **Phone** field) to select a category such as: **Home, Mobile, Work, Work Fax, Home Fax, Pager, Other, Custom, Callback, Car, Company Main, ISDN, Main, Other Fax, Radio, Telex, TTY TDD, Work Mobile, Work Pager, Assistant**, or **MMS**.
 - If you have chosen **Custom**, enter your new label and tap **OK**.
4. Tap the **Phone** field and enter the new number.
5. Scroll to the bottom of the page and tap **Done** or press  > **Done** to update the new number to the existing Contacts entry.

Editing a Contacts Entry's Number

1. From the Contact's overview screen, press  and tap **Edit contact**.
2. Tap an existing phone number field.
3. Tap  to clear one digit at a time.
4. Re-enter or edit the number.
5. Tap **Done** to update the number to the existing Contacts entry.

Sending Contacts


1. Press  and tap .
2. Tap an entry to open its overview page.
3. Press  and tap **Share** to send the current Contact entry's information to an external recipient via either:
 - **Bluetooth** to transmit this contact to another Bluetooth-compatible device.
 - **Email** to attach the contact card to a new outgoing email (Exchange or Internet).
 - **Gmail** to attach the contact card to a new outgoing Gmail email message.

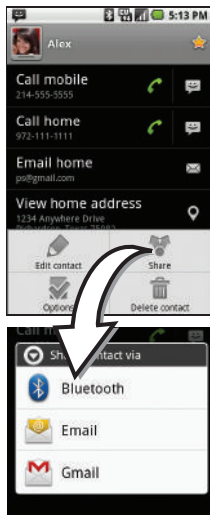

Assigning a Picture to an Entry

Assign a picture to display each time a certain contact calls you.

Assigning a picture via the device:

1. From the Contact's overview screen, press  and tap **Edit contact**.
2. Tap the image icon or current image (upper-left).
3. Tap an image to select it.
4. Touch and drag along the sides of the yellow border box to begin cropping the desired area, and then tap **Save** to assign the selected picture.
5. Tap **Done**.
 - If an image was already assigned, tap **Use this photo**, **Remove icon**, or **Change icon**.

Applying a picture from within your online Gmail:



1. Log into your Gmail account and go to your Contacts page.
2. Select your Contacts entry (with a checkmark) and click the image area (**Change Picture**).
3. Click **Browse** to locate a local copy of your image.
 - You can also choose an image from other sources such as Picasa® Web.
4. Crop the visible area of your selected picture and click **Apply Changes**.
5. Sync your new contact from your online Gmail to your device. See “Confirming Contact Synchronization” on page 88.

Deleting Entries

1. Touch and hold the entry name from the Contacts tab listing.
2. From the **Contacts Entry** context menu, tap **Delete contact**.
3. Tap **OK** to confirm the deletion.

Adding Entries to Your Favorites

The Favorites tab is a listing that can help you quickly access your most used or preferred Contacts entries.

1. Press  and tap .
2. Touch and hold the entry name from the Contacts tab listing.
3. From the **Contacts Entry** context menu, tap **Add to favorites**.

Note: Another method to add or remove an entry from your favorites is to toggle the state of the star icon on the Contact's details page (upper-right). Tap to add the entry to your favorites (star is lit), tap again to remove.

2F. Calendar & Tools

- ◆ Before You Begin (page 95)
- ◆ Calendar (page 95)
- ◆ Alarm Clock (page 101)
- ◆ Calculator (page 102)
- ◆ Updating Your Device Firmware (page 103)
- ◆ Updating Your Android Operating System (page 105)
- ◆ Updating Your Profile (page 105)
- ◆ Updating Your PRL (page 106)

Before You Begin

Prior to using Google applications such as calendar, you will need to have an active Google account (page 50).

Google Calendar is an application that synchronizes new and existing entries between your device and your online Google account.




Calendar


Synchronizing Corporate Calendar Events

Corporate calendars are not synchronized to your device by default; this account type must be manually added. Although we previously described how to add a corporate account to your list of managed accounts, this only allows your device to track that account type's email.

Calendar events must be added and tracked by your device separately.





To add corporate calendar events to your device's managed account tracking:

1. Press  >  and tap  > **Accounts & sync.**
2. Locate the corporate email account within the Managed accounts area of the screen.
 - If not present, you will have to add this account (page 68).





3. Tap  within the Corporate account field to reveal the account's synchronization settings screen.
4. Tap **Sync Calendar** to activate the synchronization of calendar events between your device and the remote exchange server. A green checkmark indicates the feature is enabled.

Note: It might be necessary to toggle the feature on and off to force a re-sync.

To manually sync your calendar events to a managed corporate account:

1. Press  >  and tap  > **Accounts & sync**.
2. Tap  within the Corporate account field to reveal the account's synchronization settings screen.
3. Tap the green checkmark to toggle it off then back on. (See "Synchronizing Your Corporate Account" on page 68.)

Configuring Calendar Settings

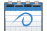
1. Press  and tap  >  (**Calendar**).
2. Tap  > **Settings**.
3. Tap an onscreen option:
 - **Calendars** displays the currently managed accounts. Tap an entry to change the sync state of the account.
 - **Calendar sync** provides access to the sync settings screen where you can enable/disable the sync status of your managed accounts and add more accounts.
 - **Default view** configures the current Calendar default view for events. **Month view** is the default. Choose from: **Month**, **Week**, **Day** or **List**.
 - **Day views** configures how the available events are displayed onscreen. Choose from **Time grid** or **Event list**.
 - **First day of week** sets the calendar week to start with either **Sunday** or **Monday**.
 - **Hide declined events** hides (checked) or displays (unchecked) those events that have been declined via the calendar application.



Adding an Event to the Calendar

Your Calendar helps organize your time and reminds you of important events.

1. Press  and tap  >  (**Calendar**).

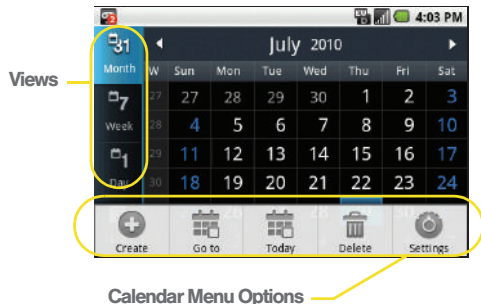Note: To synchronize calendar events among your Google and Corporate accounts, make sure they are being managed by your device (page 67).



2. Tap a day to which you would like to add an event.
 - The default view for the Calendar is the **Month** view.
 - To change the view, tap the available tabs along the top (in portrait view) or the left (in landscape view) of the Calendar screen. Choose from **Month**, **Week**, **Day**, and **List**.
3. Tap the **Event** field and enter a title for the event.
4. Select a **From/To** date and time for the event by tapping the corresponding fields, and adjusting the values by tapping  or .
- Tap the **AM** or **PM** button to change the value.
- Tap **Set** when finished.
5. Tap the **All day** field to assign this as an all day event. If assigned as an all day event, the time fields are removed as options.
6. Assign the new calendar event to a current account by tapping the **Calendar** field and then selecting an account.

Note: Some of the available options are dependant on the type of currently available email accounts.

- **My calendar** are calendar entries that are stored locally on the device and not part of an email account.
- **Google/Gmail** are calendar entries that are synchronized between your device and your online Google account.
- **Corporate** are calendar entries that are synchronized between your device and either an Exchange Server or available from within Microsoft® Outlook®.
- **Must Attend** are corporate calendar entries that are synchronized between your device and assigned to a must attend category.
- **default calendar** are corporate calendar entries that are synchronized between your device and your default email account.

Note: Additional corporate calendar categories can include: **Business**, **Red Category+**, **Important**, and **Personal**.

- Tap **OK** when finished.

7. Enter a location for the event in the **Location** field.


8. Assign participants by either entering the name directly into the **Participants** field or selecting from one of the three available sources:

- **Contact** allows you to choose participants from your current pool of available contacts (local and managed accounts). Tap entries and tap **Add**.
- **Search** allows you to search within your currently available exchange Contacts entries. Enter a name and tap **Look Up** to begin your search.
- **Recently** allows you to select from recent email recipients. Tap entries and tap **Send**.

Note: Some options are dependant on the type of available email accounts.


9. Select an alarm time by tapping the **Alarm** field.

- Select **None**, **On time**, **5 mins before**, **15 mins before**, **1 hour before**, **1 day before**, **2 days before**, **1 week before**, or **Customize**.
- **Customize** allows you to manually enter a desired number. Tap **Set** to complete the custom assignment.

10. Select a recurrence cycle for the event by tapping the **Repeat** field.
 - Select **One-time event**, **Daily**, **Every weekday (Mon-Fri)**, **Weekly (every [day])**, **Monthly (every [Number Day])**, **Monthly (on day [Number])**, and **Yearly (on [Month Day])**.
11. Enter a description for the event in the **Description** field.
12. Tap **Save** to store the new event and synchronize it with your selected account.
2. Tap the upcoming event name from the onscreen list to display the event within the Calendar notifications screen.
3. Tap an option:
 - **Snooze all** to snooze all event reminders for five minutes.
 - **Dismiss all** to dismiss all event reminders.
 - Press  to keep these reminders in place and close the Notifications panel.




Event Reminders

When your device is turned on and you have an event alarm scheduled, there are several ways your device alerts you to scheduled events:

- By playing a short beep.
- By illuminating the backlight.
- By indicating a  icon within the Status bar.

To view additional options:

Viewing Events

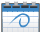1. Press  and tap  > . Once an event has been created, entries are shown in the default view.
2. To view a Calendar event farther out, tap either **Week** or **Month**.

Note: If in the Month view (tab), days containing calendar events are indicated by a blue triangle. Tap a day from this view to display a list of event within the Day tab.





3. Tap the day for which you would like to view events. (Your device lists events in chronological order.)

4. To display an event's details, tap it from the current screen.





Going to the Current Day's Calendar Menu

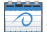- From Calendar view, press  and tap **Today**.

Editing an Existing Event

1. Press  and tap  > .
2. Tap an event to reveal its details.
3. Press  and tap **Edit**.
4. Make your modifications (event name, location, participants, alarm, repetition, etc).
5. Tap **Save** to store the new updates and synchronize them with your assigned account.

Erasing a Day's Events





1. Press  and tap  > .
2. Tap the **Day** tab on the Calendar screen.
3. Find the selected day and press  and tap **Delete**.

4. Tap **Select all** to delete all events on this day.
– or –

Place a checkmark only on those events you want deleted.

5. Tap **Delete > Yes** to erase the selected events and then synchronize this action with your managed account.

Erasing All Events

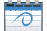1. Press  and tap  > .
2. From the main Calendar screen (Month tab view), press  and tap **Delete**.
3. Tap **Select all** to delete all events currently available for this managed account.
– or –

Place a checkmark only on those events you want deleted.

4. Tap **Delete > Yes** to erase the selected events and then synchronize this action with your managed account.


Alarm Clock



Your device comes with a built-in alarm clock that has multiple alarm capabilities. There is no limit to the number of alarm events you can create.

1. Press  and tap  >  (**Alarm Clock**).

Note: Upon your first launch of the Alarm Clock application, three alarm presets are set up by default and ready for you to customize. These alarms are turned off by default.

2. To activate an alarm, tap the checkmark to the right of the alarm.

Note: A new alarm can also be created from the Alarm page by pressing  > **Add alarm**.




3. To edit an alarm, tap the entry and then tap the **Time** field to adjust the alarm time.
 - Adjust the hour and minute by tapping either  or .
 - Tap the **AM** or **PM** button to change the value.
 - Tap **Set** when finished.

Note: The number of hours and minutes left before the alarm goes off is briefly displayed onscreen after you set the new alarm time.




4. Tap **Ringtone** to select an audio ringtone that will sound with the alarm.
 - Tap a ringtone to hear an audio sample.
 - Tap **OK** to accept the ringtone assignment.
5. Tap **Vibrate** to add a vibration feature to the alarm.
6. Tap the **Repeat** field to select a repeating status for the alarm.
 - Place a green checkmark adjacent to the desired repetition days and tap **OK**.
7. Select a unique name for this alarm event by tapping the **Label** field, entering a new label, and tapping **OK**.
8. Tap **Done** to store the new alarm event.

Note: To allow the alarm to sound even while the device is in silent mode, press  and tap **Settings**, then activate the **Alarm in silent mode** field.




To delete an Alarm event:

1. Press  and tap  > .
2. Touch and hold a desired alarm event.
3. From the onscreen context menu, tap **Delete alarm** and then tap **OK**.





To disable an Alarm event:

1. Press  and tap  > .
2. Touch and hold a desired alarm event.
3. From the onscreen context menu, tap **Disable alarm**.

To customize the onscreen clock:





1. Press  and tap  > .
2. Tap the large onscreen alarm clock (top of the Alarm Clock screen).
3. Scroll your finger across the bottom field to temporarily view each selection.
4. Tap the desired image to activate the new clock face.

To hide the onscreen clock:

1. Press  and tap  > .
2. Press  and tap **Hide clock**.

Calculator

Your device comes with a built-in calculator.

1. Press  and tap  >  (**Calculator**).
2. Enter numbers using your keyboard or by tapping an onscreen key.
 - Touch and hold **CLEAR** to clear all numbers.
 - Press  on the QWERTY keyboard to clear all numbers.

Note: Tapping **CLEAR** only deletes one number at a time.

- Press  and tap **Advanced panel** to access more advanced features such as **sin** (Sine), **cos** (Cosine), and **tan** (Tangent).

Updating Your Device Firmware

You can update your device's software using the **Update Firmware** option.




Before Updating Your Firmware


Updating your device firmware may erase all user data from your device. You must back up all critical information before updating your device firmware.

As an added precaution, to preserve any data on your microSD card, please remove it from your device prior to starting the update process. (See “Removing the microSD Card” on page 111.)





Back Up Your Data Prior to Update

To back up your Gmail information:




1. Press  >  and tap  > **Accounts & sync**. (See “Synchronizing Accounts” on page 67.)

2. Tap the **Auto-sync** option to enable the feature (green checkmark). (See “Synchronizing Your Google Account” on page 67.)
 - If the **Auto-sync** option is on, email, Calendar and Contacts automatically synchronize whenever a change is made.
 - If the **Auto-sync** option is off, simply tap  within the account field to reveal the account's synchronization settings screen.

To back up your Exchange Mail information:

1. Press  >  and tap  > **Accounts & sync**. (See “Corporate Email (Outlook)” on page 169. See “Synchronizing Accounts” on page 67.)
2. Tap  within the Corporate account field to reveal the account's synchronization settings screen.
3. Toggle the onscreen checkmark to manually synchronize the desired parameters (Contacts or Calendar).

To back up stored text messages:





1. Press  and tap  > .
2. Select the text message from the list to view the message thread.
3. Touch and hold on a portion of the text message from the string. The **Message options** context menu appears.

Note: You can back up stored text messages by forwarding them to your own phone number. Open the messages after you have updated your firmware.

4. Tap **Forward**.
5. Enter the recipient's phone number and tap **Send**.

To restore your Google applications:






Your Google™ application purchases are reloaded remotely and can be re-installed after the update is applied. (See “Using the Android Market” on page 174.)

1. Log into your Google account via the device.
2. Press  and tap  > .
3. Press  and tap **Downloads**.

4. Scroll through the list of previously downloaded Google applications and choose the one you wish to reinstall.
5. Follow the onscreen instructions.

Updating Your Device Firmware




Once you have backed up all your data, use the **Update Firmware** option to update your device firmware.

1. Press  >  and tap  > **About phone** > **System Updates**.
2. Tap **Update Firmware**. (Your device automatically downloads and installs any available updates. You may be required to power your device off and back on to complete the software upgrade.)
– or –
1. Locate the System Update Available icon () from the Status bar area.
2. Touch and hold the Status bar, then slide your finger down the screen.
3. Tap  to open the System Updates screen.

4. Tap **Download** and follow the onscreen instructions. ( appears within the Status bar to indicate the device is downloading the necessary files.)
5. Tap **Restart & install** to complete the process.





Note: The Notifications panel can also be opened on the Home screen by pressing  and then tapping **Notifications**.

Confirm Your Current Device Firmware

1. Press  >  and tap  > **About phone**.
2. Scroll to the bottom of the page and locate the **Baseband version** read-only field.




Updating Your Android Operating System

This option allows you to update the Android Operating System (OS) on your device via an over-the-air connection.

1. Press  >  and tap  > **About phone** > **System Updates** > **Update Android**.
2. Follow the onscreen instructions.
– or –
1. Locate the Android OS Update Available icon () in Notifications.
2. Touch and hold the Status bar, and then slide your finger down the screen.
3. Tap the **Android update available** field.
4. Tap **Download** and follow the onscreen instructions.

Updating Your Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your device.

1. Press  >  and tap  > **About phone** > **System Updates** > **Update Profile**.
2. Follow the onscreen instructions.

Note: If your data services or account syncing ever seem to go out unexpectedly, use this feature to reconnect with the network.

Updating Your PRL

This option allows you to download and update the PRL (preferred roaming list) automatically.

1. Press  >  and tap  > **About phone > System Updates > Update PRL.**
2. Follow the onscreen instructions.

2G. Voice Services

- ◆ Voice Dialing (page 107)
- ◆ Opening Menus With Voice Dialer (page 109)
- ◆ Text-to-Speech (page 109)
- ◆ Voice Search (page 110)

Important: The **Voice Control** (Speech to Action) feature will not launch if you are currently in an active menu.

Voice Dialing

You can use your device's built-in automatic speech recognition (ASR) software, called **Voice Dialer**, to dial a phone number in your Contacts or to launch phone functions. All you have to do is to talk into the phone, and ASR will recognize your voice and complete tasks by itself.

Activating Voice Dialer

- Press  and tap  >  (**Voice Dialer**).

The screen displays “**Listening**” and the phone prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts or tap an onscreen option.

Available ASR commands include:




- **Call** <Name> to call an entry in your Contacts list. (See “Calling a Contact With Voice Dialer” on page 108.)
- **Dial** <#> to call a spoken phone number.
- **Redial** to redial the last number called.



- **Open** <Menu> to jump directly to menu items or applications. (See “Opening Menus With Voice Dialer” on page 109.)




Tip: Use Voice Dialer in a quiet environment so it can accurately recognize your commands.

Calling a Contact With Voice Dialer

1. Press  and tap  >  (**Voice Dialer**).
2. When you see “**Listening**,” say “**Call**” followed by the name and the label for the contact you wish to call. For example, say “**Call John Smith Mobile**.” The device dials the number stored for the contact “**John Smith**” with the label “**Mobile**.”
 - If the location is not recognized or the name does not have a phone number stored in Contacts, you will see an onscreen list of possible options.
 - If a name has only a single number, or if you know the name but are not sure which number to call, say “**Call**” followed by the name only. For example, say “**Call John**.”

- If the name is recognized and there is only one phone number for the name, your device immediately places the call.
- If there are multiple numbers, you will see a list; tap a number to place the call.




Calling a Phone Number With Voice Dialer

1. Press  and tap  >  (**Voice Dialer**).
2. When you see “**Listening**,” say “**Dial**” followed immediately by a valid string of digits to be dialed, for example, say “**Call 555 555 5555**.”


Speak naturally and clearly and remember to speak one digit at a time—1-800 should be pronounced “One Eight Zero Zero.”

Opening Menus With Voice Dialer

You can jump directly to many menu items or applications by saying “Go to” followed by a menu option.

1. Press  and tap  >  (**Voice Dialer**).
2. When you see “Listening,” say “Open.” A list of valid actions is displayed.
3. Tap an option to open the selected menu.

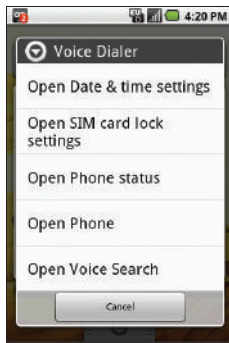


Tip: You can also say “Open” and the name of the item you want to open. You will see the item displayed. Tap **OK** to open it.



Text-to-Speech

Allows the device to provide a verbal readout of onscreen data such as messages and incoming caller information (based on Caller ID).

Text-to-Speech Settings




1. Press  >  and tap  > **Text-to-speech**.
2. Configure the available options to alter the settings associated with this feature.
 - **Listen to an example** plays a short example of what the text-to-speech feature will sound like on your device when activated.
 - **Install voice data** confirms the installation of necessary data required for voice synthesis. Tap this to download and install the free app from Android market.

Important: Before initial use, activate the **Install voice data** function to properly activate and use the text-to-speech feature.

- **Always use my settings** overrides any conflicting application settings with those you set up within this text-to-speech settings screen. If enabled, and available as a feature, your device will default to using the text-to-speech feature.
- **Speak incoming CallerID** enables the device to verbally read out incoming Caller ID information for known and current Contacts.
- **Speech rate** adjusts the rate at which onscreen text is spoken by the device. Choose from: **Very slow**, **Slow**, **Normal**, **Fast**, and **Very fast**.
- **Language** assigns the language used by the verbal readout. Choose from **American English** or **Spanish**.




3. Press  to return to the previous screen.

To enable verbal readout of an incoming call:

1. Press  >  and tap  > **Text-to-speech**.
2. Tap **Speak incoming CallerID** (to place a green checkmark on the option). Callers who are already in your Contacts list will be verbally announced.

Voice Search

Voice Search works similarly to the Voice Dialer. It uses built-in voice recognition software to listen to your spoken words, convert those to text, and then launch a Google search using that text.

1. Press  and tap  >  (**Voice Search**).
2. Speak clearly into the microphone. If an error occurs, tap **Try again**.
3. From the onscreen Google search page, tap a matching entry.

For more information, see “Using Your Device to Search” on page 26.

2H. microSD Card

- ◆ Your Device's microSD Card and Adapter (page 111)
- ◆ Connecting Your Device to Your Computer (page 113)
- ◆ microSD Card Settings (page 116)
- ◆ Important Connection Information (page 117)

Your Device's microSD Card and Adapter



The microSD Card

Your device is equipped with a preinstalled 2GB SDHC (Secure Digital High Capacity) memory card. It allows you to store images, videos, music, and voice data in your device.

Note: Not all of the microSD card is registered in the available space, as a small percentage of the storage is unread. For example, a 16GB microSD card will show approximately 14.73GB of total space.

Important: Camera, Camcorder, and Music playback features require that you have a microSD memory card installed. Although the Samsung Transform™ comes with a pre-installed 2GB card, it can support SDHC cards of up to 32GB.

Removing the microSD Card

Note: Before removing the microSD card, it is recommended you unmount it through the SD card & phone storage menu ( >  > **Settings** > **SD card & phone storage** > **Unmount SD card**).


1. Remove the battery cover.
 - Grasp the device firmly and locate the cover release latch.
 - Place your fingernail in the opening and firmly “pop” the cover off the device (similar to a soda can).
2. Firmly press the card into the slot and release it. The card should pop partially out of the slot.

3. Remove the card from the slot.
4. Replace the battery cover.

Note: You can easily damage the microSD card and its adapter by improper operation. Please be careful when inserting, removing, or handling it.

Note: Be sure to use only recommended microSD cards ($\leq 32\text{GB}$). Using non-recommended microSD cards could cause data loss and damage your device.

WARNING: The microSD card and its adapter can be easily damaged by improper operation. Please be careful when inserting, removing, or handling it.

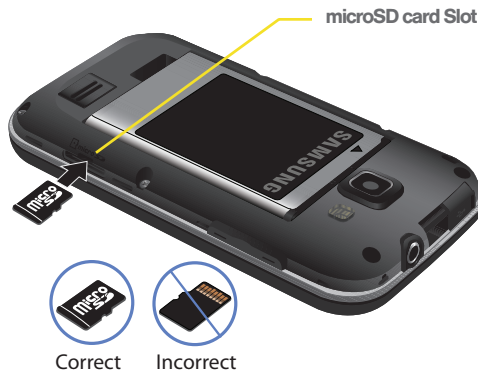

WARNING: Do not over-insert the card as this can damage the contact pins.

Re-inserting the microSD Card

1. Remove the battery cover.
2. Insert the microSD card into the microSD card slot and push in until you feel a click.
3. Replace the battery cover.

Note: Make sure the microSD card's gold contacts are facing down.

microSD Icon Indicators

The following icons show your microSD card connection status at a glance:



– card has been unmounted (released from use) from the device.



– card has been properly unmounted from device but is missing (card was removed).



– card has been incorrectly removed and improperly unmounted.

WARNING: **DO NOT** remove a microSD card while the device is accessing or transferring files. Doing so will result in loss or damage of data. Make sure your battery is fully charged before using the microSD card. Your data may become damaged or lost if the battery runs out while you are using the microSD card.

microSD Adapter

The supplied microSD adapter allows you to use microSD cards in other SD-compatible devices, like computers, cameras, and printers. Before using the microSD card with an SD-compatible device, you will need to insert the microSD card into the microSD adapter.

To insert the microSD card into the microSD adapter:

- ▶ With the label side of the microSD card facing up, insert the card into the supplied microSD adapter, and gently slide the card until it is fully inserted.

To remove the microSD card from the microSD adapter:

- ▶ Hold the front edge of the microSD card, and gently pull it out to remove it from the adapter.

Write Protection

The microSD adapter has a built-in Write Protection lock to prevent accidental overwriting or removal of your data when the microSD card and adapter are inserted in another device.

- ▶ Slide the Write Protection lock tab down into the “Lock” position to prevent overwriting of data. To allow data to be added or removed from the microSD card, slide the Write Protection lock tab up into the normal position.



Connecting Your Device to Your Computer

Before using your device’s mass storage capabilities, you need to prepare your device’s data services to synchronize with your desktop or laptop computer. Once you have connected the device to the computer, you can transfer your data to or from the microSD card.

Note: If you experience a setup issue, refer to the “Troubleshooting USB Connection” on page 114.

Before You Begin

Here is what you will need to have before you can successfully establish a connection between your Samsung Transform and a PC.

- microSD card (internally installed prior to start)
 - compatible USB cable (included)
1. With the microSD card installed, connect your device to your computer using a compatible USB cable. (Wait for the connection to be completed. When connected, the host computer will automatically detect your device.)
 2. The USB icon () now appears in the top left Notifications area on your device.
 3. Touch and drag down the Status screen to reveal the Notifications page (or from the Home screen press  and tap **Notifications**).

4. Tap **USB connected > Mount** to establish the connection and copy files between your computer and your device's microSD card.

Important: The microSD card **MUST BE MOUNTED** before your computer detects it and you are able to communicate with it.

5. Locate the newly created drive letter on your computer. You can now begin to use the microSD card as a storage device.

To remove the connection:

- ▶ When you have finished transferring data, click the USB device icon on your computer's taskbar, and follow the onscreen instructions to safely unplug the USB cable.

Troubleshooting USB Connection

If there is ever a circumstance where your setup of the device's USB connection has an issue, try these troubleshooting tips.

1. Verify your computer is able to access the Internet prior to connection and that this connection is not lost during these troubleshooting procedures.

- Some system connections might require additional setup data available online.
2. Touch and drag down the Status screen to reveal the Notifications page (or from the Home screen press  and tap **Notifications**).
 3. Tap **USB connected > Mount** to establish the connection and copy files between your computer and your device's microSD card.
 4. From the **Found New Hardware Wizard**, select **Install the software automatically** and click **Next**.
 5. Select a connection to the Internet and click **Next**.
 6. If a **Cannot install this Hardware** screen appears, follow these steps:
 - Click **Finish**.
 - From your Desktop, right-click on the **My Computer** icon and select **Properties** (from the onscreen context menu).
 - Click the Hardware tab and select the **Device Manager**.
 - Open the **? Other devices** section from the list. Confirm there is a **USB MMC Storage** item listed.

- This entry indicates an error occurred during the USB driver installation process.

- Using your mouse, right-click on **USB MMC Storage** and select **Update Driver...**
- From the **Found New Hardware Wizard**, select **Install the software automatically** and click **Next > Finish**.

Transferring Data Directly to and From the microSD Card

You can access the microSD card and use it just as easily as any other communicating storage device.

1. Connect the USB cable and tap **Connect to PC**.
2. From your Desktop, double-click **My Computer > [device drive letter]** to display the folders and files currently available on the internal microSD card.
3. Open a folder on your computer and begin the transfer process of files from your computer to the internal card's target folder.

Note: This process can be reversed from copying data from the microSD card back to the connected computer.

To remove the connection:

1. When you have finished transferring data, click the USB device icon on your computer's taskbar, and follow the onscreen instructions to safely unplug the USB cable.
2. To complete the disconnect process, touch and drag the **Disconnect** slider.

Creating Folders in the microSD Card





1. From your Desktop, double-click **My Computer > [device drive letter]**.
2. Right-click and select **New > Folder**.

WARNING: Do not alter or delete the four default folders. These are used by the phone to parse-out the different file formats and contents.

microSD Card Settings

Viewing Memory in the microSD Card


The Samsung Transform allows you to review the memory allocation of both your device's internal storage and that of the microSD card.

1. Press  >  and tap  > **SD card & phone storage**.
2. Review the available information.
 - The storage capacity page is divided into two sections: **SD card** and **Internal phone storage**.
3. Press  to return to the previous page.

Formatting the microSD Card

Formatting a microSD card permanently removes all files stored on the card.

1. Press  >  and tap  > **SD card & phone storage**.

2. Tap **Unmount SD card** to release the microSD card from its use by the device. The  icon appears within the Notifications area to indicate an unmounted internal microSD card.
3. Once released, tap **Format SD card > Format SD card > Erase everything**.
 - Once completely formatted, the card is automatically re-mounted (reconnected for use by the device).

Important: The formatting procedure erases all the data on the microSD card, after which the files **CANNOT** be retrieved. To prevent the loss of important data, please check the contents before you format the card.

Important Connection Information

- To avoid loss of data, DO NOT remove the USB cable, the microSD card, or the battery while accessing or transferring files.

- DO NOT use your computer to change or edit folder or file names on the microSD card, and do not attempt to transfer large amounts of data from the computer to the microSD card. Doing so may cause the microSD card to fail.
- DO NOT turn off or restart your computer, or put it into standby mode, while using a mass storage device. Doing so will result in loss or damage of data.
- The internal microSD card can only be mounted for use by either the device or a connected computer. Prior to accessing the card via a different method, it must first be unmounted from its current device (phone or computer-USB).

Important: The microSD card can only share a connection with one device at a time, either your device or your computer (via its USB connection), not both. You can not browse the contents of the card via your device if they are currently being browsed via your PC.


2l. Camera

- ◆ Taking Pictures (page 118)
- ◆ Recording Videos (page 124)





Note: The storage card that comes installed on your device allows you to use the camera and camcorder features. All pictures and videos are stored on the internal 2GB SDHC card. The Samsung Transform supports SDHC cards of up to 32GB.

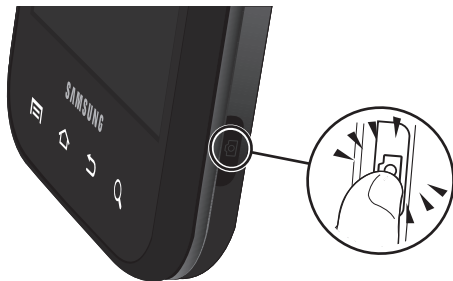

Taking Pictures

Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button.







To take a picture:

1. Press and hold the camera key () located on the side of the device.
– or –
Press  and tap  >  (**Camera**) to activate camera mode. (Additional camera options are available through the camera settings page. (See “Camera Settings” on page 119 for more information.)

2. Holding the phone in landscape mode, use the display screen as a viewfinder and aim the camera lens at your subject.
3. Press  or tap  until the shutter sounds. (Your device automatically saves the picture to the **DCIM** folder on the microSD card.)

Camera Settings

1. From camera mode () , press  and adjust any of the following options:
 - **Gallery** to access the Gallery of stored camera images.
 - Tapping **Gallery** while in the Camera mode opens the **Camera pictures** gallery.
 - Tapping **Gallery** and pressing  reveals gallery-specific options such as **Capture picture**, **Capture video**, **Slideshow**, **Multiselect** or **Settings**.
 - Tap an image to open it and press  for options such as **Share**, **Rotate**, **Delete**, **Crop**, **Set as** and **More**.

- Press  to return to the previous screen.

Note: Tapping the right side panel  also provides access to the camera's settings.

- **Settings** to access camera hardware settings:
 - **Camera mode** to activate the **Rear** or **Front** camera. (When the **Front** camera is selected, the only additional options available are **Store location** and **Picture quality**.)
 - **Flash mode** to activate the built-in flash and provide an additional light source for new pictures taken with the Samsung Transform. Set to **On**, **Off** or **Auto**.
 - **Scene mode** to select a camera setting for better image capture under different lighting environments. Choose from: **Auto** (default), **Against Light**, **Beach/Snow**, **Candlelight**, **Dawn**, **Fallcolour**, **Firework**, **Landscape**, **Night**, **Party/Indoor**, **Portrait**, **Sports**, **Sunset**, and **Text**.
 - **White balance** to compensate for color differences found within different lighting conditions. Choose from: **Auto** (default), **Incandescent**, **Daylight**, **Fluorescent**, or **Cloudy**.

- **Color effect** to apply different color effects onto images. Choose from: **None** (default), **Mono**, **Sepia**, **Negative**, **Aqua**, or **Whiteboard**.
- **Store location** to store the actual location (latitude and longitude) where the image was taken so the photo can later be displayed on Google Maps or used in other social applications.
- **Picture size** to set the size of your image. Choose from: **3M Pixels**, **2M Pixels**, **1M Pixel**, or **VGA Pixels**.
- **Picture quality** to set the image quality for your image. Choose from: **Super fine**, **Fine**, or **Normal**.
- **Focus mode** to set the focal properties of the camera lens. Choose from **Auto** (default), **Infinity**, or **Macro** (close up images).


2. Press  to return to the previous screen.


View Your Pictures



The Gallery is where you can access the Gallery of stored camera images.

1. Press  and tap  >  (**Gallery**).

2. Select a folder location (for example: **Camera pictures**) and tap an image to view your picture.

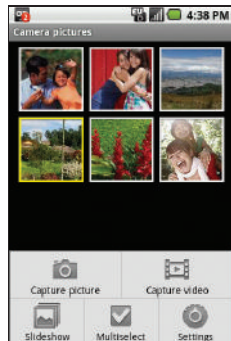



- Pressing  from the main Gallery screen reveals gallery-specific options such as **Capture picture**, **Capture video**, **Slideshow**, **Multiselect**, or **Settings**.




- Tap an image to open it, and press  for options such as **Share**, **Rotate**, **Delete**, **Crop**, **Set as**, and **More**.
- Press  to return to the previous screen.

Camera Gallery Options

Accessing the main gallery provides access to pictures.

1. Press  and tap  >  (**Gallery**) to view the gallery of images stored on the microSD card.
2. Press  to reveal gallery-specific options:
 - **Capture picture** to return to the camera mode and take another picture.
 - **Capture video** to switch to the camcorder mode and shoot a new video.
 - **Settings** to adjust general settings and make modifications to the slideshow settings.
 - **Display size** to change the size of the image or video preview images on the gallery page. Options include: **Large** (default) or **Small**.

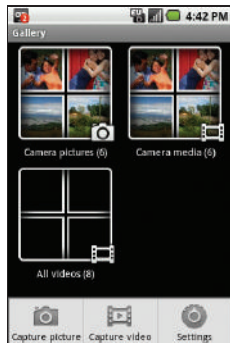


- **Sort order** to change the order in which the images or videos are displayed on the Camera pictures gallery page. Options include: **Newest first** (default) or **Newest last**.
- **Confirm deletions** to show confirmation before deleting a picture or video.
- **Slideshow interval** to change the length of time each slide appears onscreen during the slideshow. Options include: **2 seconds** (default), **3 seconds**, or **4 seconds**.



- **Slideshow transition** to change the transition used between each image displayed onscreen during the slideshow. Options include: **Fade in & out** (default), **Slide left - right**, **Slide up - down** or **Random selection**.
- **Repeat slideshow** to enable the repetition of the slideshow. Once the last image in the current gallery is displayed, the slideshow begins again with the first image in the list.
- **Shuffle slides** to display the slideshow images in a random fashion and not by the order in which they appear in the gallery.

3. Press  to return to the previous screen.


Camera Image Settings

1. Press  and tap  >  (**Gallery**).
2. From **Camera pictures** gallery, tap an image icon to open the image.
 - Use the zoom buttons (below the image) to zoom in or out.

Note: **Picture options** can also be accessed by touching and holding the image from the gallery. These options include: **View**, **Share**, **Rotate**, **Delete**, **Crop**, **Set as**, **Details**, **Show on Maps**, and **Slideshow**.

3. Tap the image and select **Set as**, **Share**, or **Delete**.

– or –





Press  to display the following image menu options:

- **Share** to activate the picture share menu from which you can choose to share the image via one of many options:
 - **Email** to attach your image to a new email message.
 - **Gmail** to attach your image to a new Gmail email message.
 - **Messaging** to insert your image into a new outgoing MMS message (multimedia text message).
 - **Picasa** to upload your current image to your Picasa account. Tap **Upload** to complete the process.

- **Rotate** to rotate the image. Options include:
Rotate left or **Rotate right**.
- **Delete** to delete the current image.
- **Crop** to crop the image. Crop the image and tap **Save** to a new version of the original.
- **Set as** to assign the current image to either a current **Contact icon** (display image) or as the **Wallpaper** (Home screen background).
- **More** to access additional image options such as:
Details, **Show on Maps**, and **Settings**.
 - **Details** to display image details such as file name, file size, resolution and date taken.
 - **Show on Maps** to display the image overlaid over a Google Map (only available if Map information was previously embedded).
 - **Slideshow** to activate the slideshow feature. (See “Camera Gallery Options” on page 121.)
 - **Settings** to adjust general settings for the picture gallery and make modifications to the slideshow parameters. (See “Camera Gallery Options” on page 121.)






Assigning Pictures

After taking a picture, assign it as a picture ID for a Contacts entry or as the Home screen background image (wallpaper).





1. Press  and tap  > .
2. From **Camera pictures** gallery, tap an image icon to open the image.
3. With the picture displayed, press , tap **Set as**, and select an option.
 - **Contact icon** to assign the picture to a Contacts entry as a picture ID. Tap an entry from the Contacts tab, crop the image and tap **Save** to assign the picture.
 - **Wallpaper** to assign the picture as a background image, crop the image and tap **Save** to assign the picture.

Recording Videos





In addition to taking pictures, you can record, view, and send videos with your device's built-in video camera.

1. Press and hold the camera key () located on the side of the device.
– or –
Press  and tap  >  (**Camera**) to activate camera mode. (Additional camera options are available through the camera settings page. See “Camera Settings” on page 119 for more information.)
2. Touch and slide the camera mode slider up to camcorder mode (). Using the device's display screen as a viewfinder, aim the camera lens at your subject.
3. Select a recording mode:
 - **Normal**: the file size limit is determined by the available storage space remaining in your SDHC storage card.

- **MMS**: the file size is limited by the restriction placed on video files that can be attached to MMS text messages. Depending on your settings, this can be up to 30 seconds.

4. Press  or tap  to begin recording.
5. Press  or tap  to stop recording. (Your device automatically saves the video within the **DCIM** folder on the microSD card.)

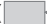Camcorder Settings

1. From the camcorder mode () , press  and adjust any of the following options:
 - **Gallery** to access the Gallery of stored camera videos.
 - Tapping **Gallery** while in the Camcorder mode opens the **Camera videos** gallery.
 - Tapping **Gallery** and pressing  reveals gallery-specific options such as **Capture picture**, **Capture video**, **Multiselect** or **Settings**.
 - Tap a video to begin playback.
 - Press  to return to the previous screen.

Note: Tapping the right side panel  also provides access to the camcorder's settings.

- **Camcorder settings** to access camcorder hardware settings:
 - **Recording Mode** to set the size limit for the recorded video. Choose from: **Normal** (limited by SD card) or **MMS** (limited by MMS size restrictions) .
 - **Video quality** to set the image quality for your video. Choose from: **Low (176x144)** or **High (352x288)**.

Note: The **Video quality** option is disabled when the **Recording mode** is set to **MMS**.

- **Video duration** to set the length for your video. Choose from: **30 seconds** (sending the video in an MMS/video message), **10 minutes** (SD card storage), or **30 minutes** (SD card storage).
- **Flash mode** to activate the built-in flash and provide an additional light source for new videos taken with the Samsung Transform. Set to **On**, **Off** or **Auto**.

- **White balance** to compensate for color differences found within different lighting conditions. Choose from: **Auto** (default), **Incandescent**, **Daylight**, **Fluorescent**, or **Cloudy**.
- **Color effect** to apply different color effects onto videos. Choose from: **None** (default), **Mono**, **Sepia**, **Negative**, **Aqua**, or **Whiteboard**.


2. Press  to return to the previous screen.

Camcorder Gallery Options

Accessing the gallery provides access to videos.


1. Press  and tap  >  (**Gallery**).

– or –

While in camcorder mode, press  and tap **Gallery**.

2. From **Camera videos** gallery, tap a video icon to playback the videos taken stored on your microSD card.




– or –

Highlight a video icon and press  to reveal gallery-specific options for the Camera videos:

- **Capture picture** to return to the camera mode and take another picture.
- **Capture video** to switch to the camcorder mode and shoot a new video.
- **Multiselect** to select multiple video files from the Gallery.
- **Settings** to adjust general settings and make modifications to the slideshow parameters. See “Camera Gallery Options” on page 121.

3. Press  to return to the previous screen.

Video Settings

1. Press  and tap  >  (**Gallery**).
2. From **Camera videos** gallery, tap a video icon to begin video playback.

– or –

Touch and hold the video icon to display the following video menu context menu options:

- **Play** to begin playback of the current video file.
- **Share** to activate the **Share video via** menu from which you can choose to share the current video via one of many options:

- **Email** to attach your video to a new email message.
- **Gmail** to attach your video to a new Gmail email message.
- **Messaging** to attach your video to a new MMS message.
- **YouTube** to upload your current video file to a YouTube page. Tap **Upload** to complete the process.
- **Delete** to delete the current video.
- **Details** to display image details such as File name, File size, Duration, Frame rate, Bit rate, Format, and Date taken.

2J. Bluetooth

- ◆ Turning Bluetooth On and Off (page 127)
- ◆ Using the Bluetooth Settings Menu (page 128)
- ◆ Pairing Bluetooth Devices (page 129)
- ◆ Sending Contacts via Bluetooth (page 131)
- ◆ Disconnecting Bluetooth Connection During an Active Call (page 132)

About Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices. The Bluetooth communication range is usually up to approximately 30 feet.





Turning Bluetooth On and Off

By default, your device's Bluetooth feature is set to **Off**. Turning Bluetooth on activates the internal Bluetooth antenna.

Note: Activating Bluetooth can drain your battery faster and reduce your available usage times. It is recommended that if you do not need it active, turn it off.

It is also recommended to turn off your Bluetooth within locations that prohibit its use.

To turn Bluetooth on:

1. Press  >  and tap  > **Wireless & networks**.
2. Tap **Bluetooth** to activate the feature (a green checkmark indicates it is active). When active,  appears within the Status area.

To turn Bluetooth off:

- ▶ Press  >  and tap  > **Wireless & networks > Bluetooth**.
 - Tap to remove the green checkmark and deactivate Bluetooth.

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



– Bluetooth is active



– Bluetooth is connected (paired) and communicating

[no icon] – Bluetooth is disabled (default status)


Using the Bluetooth Settings Menu

The **Bluetooth settings** menu allows you to set up many of the characteristics of your device's Bluetooth service, including:

- Entering or changing the name your device uses for Bluetooth communication and description
- Setting your device's visibility (or "discoverability") for other Bluetooth devices
- Displaying your device's Bluetooth address

To access the Bluetooth Settings menu:

1. Press  >  and tap  > **Wireless & networks > Bluetooth settings.**
2. Set your Bluetooth options: **Device name**, **Discoverable**, and **Scan for devices.**

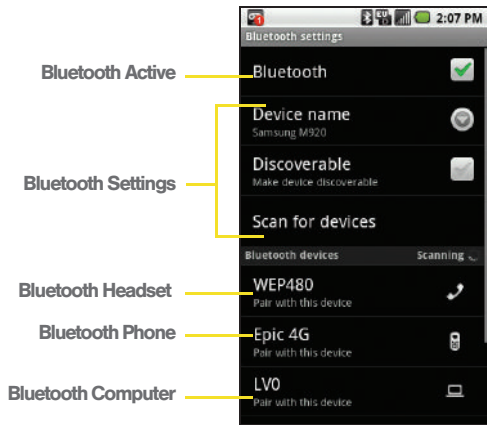

To change your Bluetooth name:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Device name**.
3. Tap the **Device name** field and enter a new name.
4. Tap **OK** to complete the rename process.

To make your device visible:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Discoverable**.
 - Making your device discoverable allows it to be detected by other devices for pairing and communication.

Note: Your device is visible for up to 120 seconds (2 minutes). This value appears as a countdown within this field.

To scan for Bluetooth devices:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Scan for devices** to search for visible external Bluetooth-compatible devices such as headsets, devices, printers, and computers.

Pairing Bluetooth Devices

Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your device with another Bluetooth device:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Discoverable**. Your device must be visible to successfully pair with an external device.
3. Tap **Scan for devices**. (Your device will display a list of discovered in-range Bluetooth devices, page 128.)
4. Tap a device from the list to initiate pairing.
5. Enter the passkey or PIN code and tap **Done > OK**.
– or –
Tap **Pair** from the onscreen pairing options popup.

6. The external device will then have to also accept the connection and enter your device's PIN code.

- Once successfully paired to an external device,



appears within the Status area.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Note: Pairing between two Bluetooth devices is a one-time process. Once a pairing has been created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode again.

To disconnect a paired device:

Disconnecting a paired device breaks the connection between the device and your Samsung Transform, but retains the knowledge of the pairing. At a later point when you wish to reconnect the device, there is no need to setup the connection information again.

1. Verify your Bluetooth is active.

2. From the Bluetooth settings page, tap the previously paired device (from the bottom of the page).

3. Tap **OK** to confirm disconnection.


Note: Disconnections are manually done but often occur automatically if the paired device goes out of range of your Samsung Transform or it is powered off.

To delete a paired device (unpair):

Deleting a device from your list removes its “connection record” and upon reconnection would require that you re-enter all the previous pairing information.

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, touch and hold the name of the previously paired device (from the bottom of the page). This opens the connected device's menu options.
3. Tap **Disconnect & unpair** (from the onscreen context menu) to confirm deletion.

To access a paired device's settings:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, **touch and hold** the name of the previously paired device.
3. Tap **Options...** (from the onscreen context menu) and configure the desired options.
4. Press  to return to the previous page.




Sending Contacts via Bluetooth


Depending on your paired devices' settings and capabilities, you may be able to send pictures, Contacts information, or other items using a Bluetooth connection.

Note: Prior to using this feature, Bluetooth must first be enabled, and the recipient's device must be visible.



Only a Contact's information can be sent via Bluetooth. No other file type (video, image, or audio) can be sent using Bluetooth.

Note: If no devices are detected, tap **Scan devices** to begin a new search.

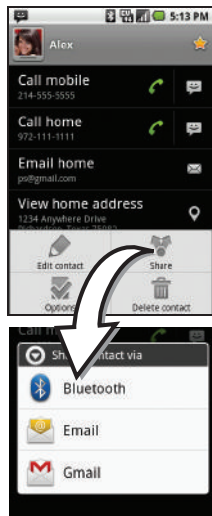1. Press  and tap .
2. Tap an entry to open its Contact's overview page (page 91).
3. Press  and tap **Share > Bluetooth**.
4. Tap a paired device.
 - The external Bluetooth device must be visible and communicating for the pairing to be successful.



Disconnecting Bluetooth Connection During an Active Call

- ▶ During an active call, where the audio is being routed through a connected Bluetooth device (headset or hands-free connection), tap **Bluetooth** to route the device's audio through the connected Bluetooth headset (On) or through the speaker (Off).
 - When the call is routed to a Bluetooth headset, the current call area is surrounded by a blue box, the **Bluetooth** button indicates it's on, and shows the **Bluetooth** call icon ().
 - When turned off, the call is routed through either the earpiece or speaker, the call area is surrounded by a green box, the **Bluetooth** button indicates its off, and shows (.

Note: Communication can be toggled between the Bluetooth headset and the device speaker by tapping the **Headset** button On or Off.

Section 3
Sprint Service



3A. Sprint Service: The Basics

- ◆ Visual Voicemail (page 134)
- ◆ Text Messaging (SMS) (page 139)
- ◆ Multimedia Messaging (MMS) (page 141)
- ◆ Caller ID (page 145)
- ◆ Call Waiting (page 145)
- ◆ Making a 3-Way Call (page 146)
- ◆ Call Forwarding (page 147)
- ◆ Roaming (page 147)

Visual Voicemail





Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first. This new feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails.

It then populates a list with the caller name and number, along with the length of time and priority level of the voicemail message.

Setting Up Your Visual Voicemail

Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off. You should set up your Sprint voicemail and personal greeting as soon as your device is activated.

Note: To set up your traditional voicemail box, see “Setting Up Your Voicemail” on page 7.


1. Press  and tap  >  (**Voicemail**).
2. Tap **Personalize now** and follow the system prompts to:
 - Create a password (part of standard voicemail).
 - Record your name announcement.
 - Record your greeting.
3. When prompted to enter information, tap  (**Dialpad**) to bring up the onscreen dialpad to enter your numeric responses.


Note: Voicemail Password





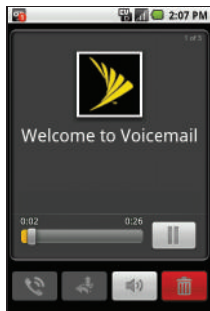

Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

4. Once you have completed the setup process, return to the voicemail page (see step 1).
5. Tap the **Welcome to Voicemail** message on the screen to play a brief explanation of the voicemail services.

The following is a description of the features available while reviewing a voicemail message.







Note: Press  > **Lock** to prevent the message from accidentally being deleted.





- **Timeline** provides a visual timeline for the current message. Touch and drag this bar to scrub through the message to different points.
 - Tap  to pause the playback, tap  to resume.
- **Call**  to call the person who left the voicemail message.
- **Reply**  to reply to the message. You can then reply to the sender or forward it to anyone with either an email or phone number. This allows you to send this voicemail message to several recipients at the same time. You can tag the reply message for both Urgency and Privacy.
 - Tap **Send** to deliver the new message.
- **Speaker Off/On**  to turn the speakerphone on or off during playback. If the speakerphone feature was enabled within the Voicemail Settings menu, the speakerphone will always be automatically enabled during voicemail playback (page 136).
- **Delete**  to delete the current voicemail message. Tap **OK** to confirm the deletion.

Configuring Voicemail Options

To access the voicemail menu options:





1. Press  and tap  > .
2. Press  and select from the following:
 - **Compose** to compose a new voicemail message.
 - **Play all new** to listen to all new messages.
 - **Undelivered** to list all undelivered voicemail messages.
 - **Delete** to delete selected messages from your current list of available voicemail messages.
 - **Search** to search through voicemail messages for keywords.
 - **Settings** to configure your voicemail application settings.

To access a voicemail message's options:



1. Press  and tap  > .
2. Tap a voicemail message and press  and select from the following:
 - **Lock/Unlock** to prevent deletion of the selected voicemail message.

- **Text message** to create and deliver a new text message to the sender's phone number.
- **Reply** to reply to the voicemail. You can then reply to the sender or forward it to anyone with either an email or phone number. This allows you to send this voicemail message to several recipients at the same time.
- **Forward** to forward the voicemail to another recipient.
- **Add to contacts** to add the sender's phone number to your Contacts list.

Configuring Voicemail Settings





1. Press  and tap  > .
2. Press  and tap **Settings**. From the Settings menu, you can:
 - Tap **Notifications** to determine how you are notified of new voicemails. Choose from: **Notifications**, **Select ringtone**, and **Vibrate**.
 - Tap **Pictures** to replace the default Visual Voicemail message icon with a specific Contacts entry's image. This image is pulled from the entry's Contacts details page (page 90).

- Tap **Speakerphone** to automatically activate speakerphone when you review your Visual Voicemail (page 137).
- Tap **Change greeting** to adjust your voicemail greeting (page 137).
- Tap **From name** to enter a name or number that is attached to your outgoing voicemails as part of an identification string (page 138).
- Tap **Check for upgrade** to search for an upgrade to your Visual message software.
- Tap **About Voicemail** to view build information about the current visual voicemail application.

Note: Voicemail settings can also be accessed by pressing  >  and tapping **Settings > Call settings > Voicemail settings**.





Automatically Enabling the Speakerphone

Every time you access a selected message from your Visual Voicemail list, you can configure the device to automatically launch the built-in speakerphone so that you can clearly hear the message.

1. Press  and tap  > .
2. Press  and tap **Settings** to make your alterations.
 - Tap **Speakerphone** to activate the feature. You will see a green checkmark on the right.
 - Tap **Speakerphone** field again to deactivate the speakerphone. The checkmark will be grayed out.





Changing Your Main Greeting via the Voicemail Menu

Your main greeting can be changed directly via the Visual Voicemail system. This direct access saves you from having to navigate within the voicemail menu.

1. Press  and tap  > .
2. Press  and tap **Settings > Change greeting**.
3. Tap **OK** to connect to the Sprint voicemail system and follow the prompts to change your current greeting.


Editing the From Name via the Voicemail Menu


From your Visual Voicemail menu, you can quickly change the name or number attached to your voice messages.

1. Press  and tap  > .
2. Press  and tap **Settings > From name**.
3. Tap the existing identification field and enter a new identifying name or number (used to identify you to recipients of your voice messages).
4. Tap **OK** to save your information.

Voicemail Notification

There are several ways your device alerts you to a new message:

- By playing the assigned ringtone or vibration.
- By displaying  within the Notifications area of the Status bar.




Note: When you are roaming off the Nationwide Sprint Network, you may not receive notification of new voicemail messages. Sprint recommends that you periodically check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, tap  and enter your password. Roaming rates apply when you access voicemail while roaming off the Nationwide Sprint Network.

Your device accepts messages even when it is turned off. However, your device notifies you of new messages only when it is turned on and you are in a Sprint service area.

Retrieving Your Voicemail Messages

You can review your messages directly from your wireless device (using either traditional voicemail or Visual Voicemail) or from any other touch-tone phone. To dial from your wireless device, either speed dial your voicemail or use the menu keys.

Using Visual Voicemail to Access Your Messages

1. Press  and tap  > .



2. Tap an entry to listen to your message.

– or –


Touch and hold a voicemail entry and tap **Play**.

Note: You are charged for airtime minutes when you are accessing your voicemail from your wireless device.




Using Traditional Voicemail to Access Your Messages

1. Press  and tap .
2. Touch and hold **1**. (If prompted, enter your password.)

Using Another Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, tap .
3. Enter your password.

Using Visual Voicemail Menu to Delete Your Messages

1. Press  and tap  > .


2. Touch and hold a voicemail entry and tap **Delete this message > OK**.

– or –

Tap the  > **OK** to delete the current voicemail.




Text Messaging (SMS)

With text messaging (SMS), you can send and receive instant text messages between your wireless device and another messaging-ready phone. When you receive a new message, it will automatically display on your device's screen.

Messaging is available via the Messaging application in your Applications screen. This icon () appears in Status bar area when a new text message is received.

Note: See your service plan for applicable charges for text and multimedia messaging.

Composing Text Messages

1. Press  and tap  > 
(**Messaging**) > **New message**.
2. Tap the **To:** field and enter a Contact's name, a mobile phone number, or an email address using either the onscreen or QWERTY keyboards.
 - **Contacts** as you enter either a phone number or email address, if the information matches a current contact's entry information, you will see a match. When you see a match, tap the associated name to complete the addressing.
 - **Mobile** to enter a wireless phone number directly.
 - **Email** to enter the recipient's email address.
3. If applicable, tap a matching entry from the onscreen drop-down list. This list is populated by matches found from your managed accounts.
4. Tap the **Type to compose** field and enter your message.
5. Review your message and tap **Send**.

Accessing Text Messages


To read a text message:

- When you receive a text message, you will see it listed within the Messaging screen. Tap the message to open it and then scroll down and view its entire content.

To reply to a text message:

1. While the message is open, tap the **Type to compose** field and then type your reply message.
2. Review your reply and tap **Send**.

– or –

You may select additional messaging options by pressing .)

- Options may include: **Call**, **Add subject**, **Attach**, **Send**, **Insert smiley**, **Discard**, or **All threads**.

Multimedia Messaging (MMS)




With multimedia messaging (MMS), you can send and receive instant text messages that contain text, pictures, audio, recorded voice, or a picture slideshow.


Messaging is available via the Messaging application in your Applications screen.

Note: See your service plan for applicable charges for text and multimedia messaging.

Composing MMS Messages

Composing MMS messages is exactly the same as composing text messages, except that you attach a picture, a video, or an audio file to the message.

1. Press  and tap  >  (Messaging) > **New message**.
2. Tap the **To:** field and enter a Contact's name, a mobile phone number, or an email address. As you enter the phone number or email address, matching contacts appear onscreen.

3. Tap the **Type to compose** field and enter your message.
4. Press  and tap **Attach**.
5. Select a multimedia attachment type:
 - **Pictures:** Opens the Gallery application. Use the onscreen navigation to select the picture you wish to send with the outgoing message.
 - **Capture picture:** Opens the camera application. Take a picture, and then tap **OK** to use this image in your message. (See "Taking Pictures" on page 118.)
 - **Videos:** Opens the Gallery application. Use the onscreen navigation to select a video and attach it to your outgoing message.
 - **Capture video:** Opens the camcorder application. Shoot a video, and then tap **OK** to use this video in your message. (See "Recording Videos" on page 124.)

- **Audio:** Opens the Select audio menu. Use the onscreen navigation to select an audio file and tap **OK**.




- **Record audio:** Opens the message recorder (shown above).
 - **Recording duration:** length of the recorded voice message.
 - **Volume Meter:** displays the volume level.
 - **Record:** starts recording your message.

- **Play:** plays back the recording.
- **Stop:** stops the recording. Once stopped, tap either **Use this recording** (attach it to your message), or **Discard** (delete the current recording and re-record).


- **Slideshow:** Opens the **Edit slideshow** menu.
 - Tap **Add slide** to create a new slide (this is a placeholder for new images to be added, similar to a playlist).
 - Tap the created slide (example, Slide 1), tap **Add picture**, and then select the picture you want to add to the slide.
 - Tap the text field below the image to enter a caption for the picture.
 - When finished, tap **Done** to attach the slideshow to your message.

Note: To remove or replace a picture or an audio attachment, on the Compose screen, tap the **Remove** button next to the attachment.

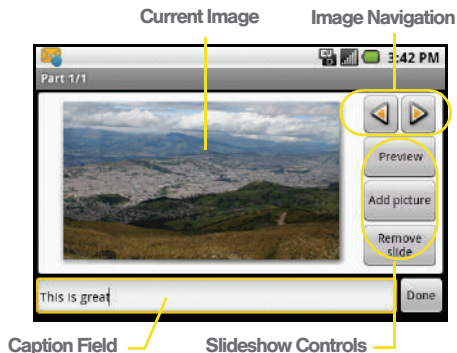

- When you are finished creating your new MMS message, tap **Send**.




To view and play a multimedia message:


- Press  and tap  > .
- From the message list, tap a multimedia message to open its contents.

- While the message is open, tap the play icon (on a video or audio file) to play back the file or tap an image to view a picture.




Tip: The file attachment on the MMS message can be saved to the microSD card. To save the attachment, touch and hold the file and tap **Copy attached to SD card** from the Message options context menu.

To reply to a multimedia message:





- Press  and tap  > .
- From the message list, tap a multimedia message to open its contents.
- While the message is open, tap the **Type to compose** field and then type your reply message.
- Once complete, tap **Send**.

Note: When replying to a text message with an MMS message, first open the text message, press  and tap **Add subject** or **Attach**. The original text message is then automatically converted into a multimedia message.

Deleting a Message or Message Thread

1. Press  and tap  > .
2. Touch and hold the message entry to display the context menu.
3. Tap **Delete thread** and once prompted, tap **OK** to complete the process.

Adjusting Message Settings


1. Press  and tap  > .
2. From within the Messaging screen, press  and tap **Settings**.
3. Adjust the following fields according to your needs:
 - **Delete old messages:** Enable this option to delete older text messages that exceed the defined maximum number of text messages limit set below.
 - **Text message limit:** Sets the maximum number of text messages that can be stored on the device (per conversation).

- **Multimedia message limit:** Sets the maximum number of multimedia messages that can be stored on the device (per conversation).
- **Auto-retrieve:** Enable this option to automatically retrieve the entire content of your MMS messages. When checked, the MMS message header, message body, and any attachments will automatically download to your device.
 - If you disable this option, only the MMS message headers will be retrieved and shown in the message list.
- **Roaming auto-retrieve:** Disable this option if you only want the MMS message headers to download while roaming. Enable this option to automatically download your complete multimedia messages even while roaming.
- **Notifications:** Enable this option if you wish to receive a notification in the status bar when a new text or multimedia message arrives.

- **Select ringtone:** Allows you to select a ringer to sound when a new message is received. Tap this option, and then select a ringtone that is specific to new text and multimedia messages. A sample will briefly be played upon selection.
- **Vibrate:** Enable this option if you want the device to vibrate when a new text or multimedia message is received.

Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.


1. Press  and tap  to access the onscreen dialpad.
2. Tap  **6** **MNO** **7** **PQRS**.
3. Enter a phone number and then press .


To permanently block your number, call Sprint Customer Service.



Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your device's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).


To respond to an incoming call while you're on a call:

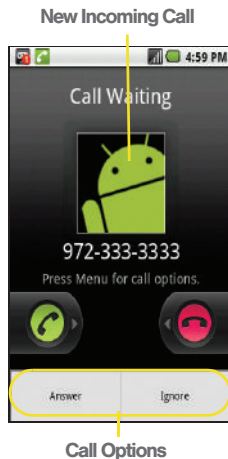

- ▶ Press  and tap a call option:
 - **Answer** to answer the new call. The first caller is placed on hold.
 - **Ignore** to send the call to your voicemail box.
- or –



Touch and drag  to the right to accept or to the left to ignore the incoming call. 



To switch back to the first caller:




- Press  and tap **Swap calls**.

Tip: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing  **7 PQRS**  before placing your call. Call Waiting is automatically reactivated once you end the call.


Making a 3-Way Call

With 3-Way calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Press  and tap  to access the onscreen dialer.

2. Make your call to the first recipient.
3. Once you have established the connection, press  and tap **Add call**.
 - It may take up to **20 seconds** for the button to become active.
4. Enter the second caller's phone number and tap  or select a number from your Contacts tab. (Your first call is automatically put on hold.)
5. When you're connected to the second party, press  and tap **Merge calls** to combine both calls into a single 3-way call.

Second caller

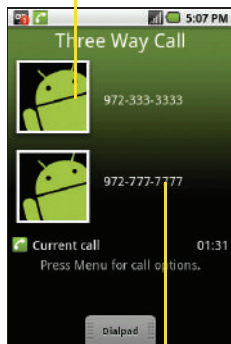





First caller

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your device is turned off. You can continue to make calls from your phone when you have activated Call Forwarding.

To activate Call Forwarding:

1. Press  and tap  to access the onscreen dialer.
2. Tap  **7** PQRS **2** ABC.
3. Enter the area code and phone number to which you want your calls forwarded.
4. Tap . (You will hear a tone to confirm the activation of Call Forwarding.)


To deactivate Call Forwarding:

1. Press  and tap  to access the onscreen dialer.
2. Tap  **7** PQRS **2** ABC **0** + . (You will hear a tone to confirm the deactivation.)

Note: You are charged a higher rate for calls you have forwarded.

Roaming

Roaming Icon

Your display screen always lets you know when you're off the Nationwide Sprint Network. Anytime you are roaming, the phone displays the roaming icon (). If you are roaming on a digital system, you will see the roaming icon along with the text – **Digital Roam** – .


Roaming on Other Digital Networks


When you're roaming on digital networks, your call quality and security is similar to the quality you receive when making calls on the Nationwide Sprint Network. However, you may not be able to access certain features, such as data services, depending on the available network.

Note: If you're on a call when you leave the Nationwide Sprint Network, and your call is dropped in an area where you think Sprint service is available, turn your phone off and on again to reconnect to the network.

Checking for Voicemail Messages While Roaming

When you are roaming off the Nationwide Sprint Network, you may not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.

1. Dial your area code and your phone number and tap .

2. When you hear your voicemail greeting, tap .
3. Enter your password at the prompt and follow the voice prompts.

When you return to the Nationwide Sprint Network, voicemail notification will resume as normal.

Setting Roam Mode

Your device allows you to control your roaming capabilities. By using the Roaming menu option, you can determine which signals your device accepts.


Choose from two different settings on your dual-band device to control your roaming experience.

1. Press  >  and tap  > **Wireless & networks** > **Mobile networks**.
2. Tap **Data roaming** to connect to data service while roaming.

Call Guard

Your device has two ways of alerting you when you are roaming off the Nationwide Sprint Network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the Nationwide Sprint Network.)


To turn Call Guard on or off:

1. Press  >  and tap  > **Wireless & networks > Mobile networks.**
2. Tap **Call Guard** to toggle the active state of this function. When active, an extra key press is required for dialing when in a roaming area.


Note: Call Guard is turned on by default on your device.

Voice dialing and speed dialing are not available when you are roaming with Call Guard enabled.

To place roaming calls with Call Guard on:

1. From standby mode, dial the area code and phone number and tap .
2. Tap **OK**.

To answer incoming roaming calls with Call Guard on:

1. Touch and drag  to the right. (A message is displayed notifying you that roaming charges will apply.)
2. Tap **OK**.

Note: If the Call Guard feature is set to **On**, you need to take extra steps (such as dialing 1 + area code) to make and receive roaming calls.

System Select

1. Press  >  and tap  > **Wireless & networks > Mobile networks.**

2. Tap **System select** to change the CDMA roaming mode.
 - **Home Only** to access only the home area mobile network, which is the Nationwide Sprint Network. This option also prevents roaming on other networks.
 - **Automatic** to seek service on the Nationwide Sprint Network. When Sprint service is unavailable, the device searches for an alternate system.




Data Roam Guard

Depending on service availability and roaming agreements, your device may be able to access data services while roaming on certain digital systems.

You can set your device to alert you when you are roaming off the Nationwide Sprint Network and try to use data services such as messaging.

Note: Data Roam Guard is turned on by default on your device.

To set your Data Roam Guard notification:

1. Press  >  and tap  > **Wireless & networks** > **Mobile networks**.
2. Tap **Data Roaming Guard**.
3. Tap an onscreen option: **ON** or **OFF**.

To use data services when Data Roam Guard is active:

- When a pop-up notification appears informing you that data roam charges may apply, tap **Connect** or **Always Connect** to connect.

3B. Web and Data Services

- ◆ Getting Started With Data Services (page 151)
- ◆ Navigating the Web (page 153)
- ◆ Wi-Fi (page 160)
- ◆ Email (page 162)
- ◆ Using the Android Market (page 174)
- ◆ Sprint Applications (page 175)

Getting Started With Data Services

With your Sprint service, you are ready to start enjoying the advantages of data services. This section will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your device.

Important: Certain data services requests may require additional time to process. While your device is loading the requested service, the touchscreen or QWERTY keyboard may appear unresponsive when in fact they are functioning properly. Allow the device some time to process your data usage request.




Your User Name

When you buy your device and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com." (For example, the third John Smith to sign up for Sprint data services might have [jsmith003@sprintpcs.com](#) as his user name.)

When you use data services, your user name is submitted to identify you to the Nationwide Sprint Network. Your user name is automatically programmed into your device. You don't have to enter it.

Updating Your User Name

If you choose to change your user name and select a new one online, you must then update the user name on your device.


1. Press  >  and tap  > **About phone** > **System Updates**.
2. Tap **Update Profile**.

Launching a Web Connection

- Press  and tap  >  (**Browser**).
(Your data connection starts and you see the home page.)

Note: Internet connections can be made either through the Sprint network or via Wi-Fi (configured via the **Settings** > **Wireless & networks** page).

While connecting, you may see an animation. Once complete, you are connected to the default home page.

Tip: To change the default launch page to a current page, press  and tap **More** > **Settings** > **Set home page**.

Note: The Browser automatically launches when a Web link is tapped from within either an email or text message.

Data Connection Status and Indicators

Your device displays the current status of your mobile data connection through indicators at the top of the screen. The following symbols are used:



Your device is connected to the high-speed Sprint Mobile Broadband Network (3G). When the arrows are animated, your device is transferring data (for example, when you are opening a Web page).



When the arrows are gray, your device is connected to the network but is not currently transferring data.



When the arrows are replaced with a D, data service is available but currently dormant.



Your device is on and is connected to the Sprint 1xRTT data network. When the arrows are animated, your device is transferring data.



When the arrows are gray, your device is connected to the network but is not currently transferring data.

If you do not see an indicator, your phone does not have a current data connection. To launch a connection, see “Launching a Web Connection” on page 152.

Note: If you have a Wi-Fi connection, the mobile status indicators typically will not be displayed. See “Wi-Fi Status Indicators” on page 161.

Navigating the Web

Navigating through menus and websites during a data session is easy once you have learned a few basics.

Note: Prior to gaining access to SprintWeb home page, you may be asked to enter your 10-digit wireless phone number and tap **Go**. Entering your phone number is not required for access to other Web pages.

Scrolling

As with other parts of your device’s menu, you’ll have to drag up and down to see everything on some websites.

To scroll line by line through websites:

- Use the navigation keys on the QWERTY keyboard to scroll over each available line within a Web page.

To scroll through a website’s page:

- In a single motion, touch and drag across or up and down a page.

Selecting

To select onscreen items or links:

- Drag across a page, and then either touch or tap an onscreen link to select it.

Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

Pinching and Zooming

Zooming in and out on a Web page can be done now without the need of an onscreen zoom tool. Just use your fingers to pinch in or spread out on the screen.

To zoom in:


1. Place your thumb and index finger on the screen.
2. Expand them outward (spread) to zoom in.


To zoom out:

1. Place your thumb and index finger on the screen.
2. Bring them together (pinch) to zoom out.

Going Back

To go back one page:

- ▶ Press  on your device. Repeat this process to keep going back through your Web page history of recently visited pages.

Note: You can use  for deleting text when you are entering text.

Going to a Web Page


1. Tap the **Address** field (top of the browser window) and enter a new Web address.
 - As you enter the address, possible matches are displayed within an onscreen list. Tap an entry to launch the desired website.
2. Tap **Go** to launch the new page.

Browser Menu

The browser menu offers additional options to expand your use of the Web on your device.


Opening the Browser Menu

The browser menu may be opened anytime you have an active data session, from any page you are viewing.


- From any open Web page, press . (You will see the browser menu.)

Options available within the browser menu include:


- **New window:** Launches a new Internet window while maintaining the current Web page active.
- **Bookmarks:** Allows you to access and manage your bookmarks.
- **Windows:** Displays the currently active browser windows as an onscreen list. Tap a window entry to launch that window.
- **Refresh:** Reloads the current Web page.
- **Forward:** Returns you to a previously viewed page.

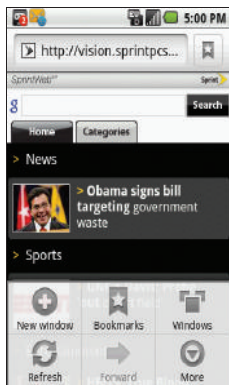


- **More:** Provide additional browser options:
 - **Add bookmark (Menu+a):** Assigns the current Web page as a new bookmark.
 - **Find on page (Menu+f):** Searches the current Web page for a word.
 - **Select text (Menu +e):** Selects text from the current Web page.
 - **Page info (Menu+g):** Displays the Name and URL (website address) of the site you're currently viewing.
 - **Share page (Menu +s):** Allows you to send a URL via Gmail, SMS, or Work Email (Outlook).
 - **Downloads (Menu+d):** Keeps a list of previously downloaded content.
 - **Settings (Menu+p):** Lets you configure and manage your browser settings.

Note: These additional options can also be accessed via the QWERTY keyboard by using a combination of the Menu button () and the specified key combination.

Selecting Text on a Web Page

1. While on an active Web page, press  to open the browser menu.
2. Scroll to the area of the webpage containing the desired text.
3. Tap **More > Select text**.
4. Touch and drag across the screen and highlight the desired text. Any selected text will appear highlighted and then be copied to the device's clipboard.

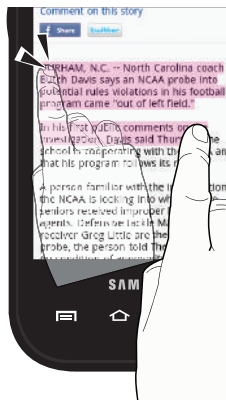

Going to a Specific Website

To go to a particular website by entering a URL (website address):


1. Tap the **URL** field and enter a website address.

- As you type the address, if your desired website appears within the suggested sites list, tap the entry to begin surfing.

2. Tap **Go**.

Note: Not all websites are viewable on your device.


Adjusting Browser Page Settings


1. Press  to open the browser menu.
2. Tap **More > Settings**.
3. Navigate to the **Page content settings** area and select from one of the following page settings:
 - **Text size:** Adjusts the current onscreen text size. Options include: **Tiny**, **Small**, **Normal**, **Large**, or **Huge**.
 - **Default zoom:** Sets the default browser viewing size. Choose from: **Far**, **Medium**, or **Close**.
 - **Open pages in overview:** Provides an overview of recently opened pages.
 - **Text encoding:** Adjusts the current text encoding.

- **Block pop-up windows:** Prevents popup advertisement or windows from appearing onscreen. Remove the checkmark to disable this function.
- **Load images:** Allows web page images to be loaded along with the other text components of a loaded website.
- **Auto-fit pages:** Allows web pages to be resized to fit as much of the screen as possible.
- **Landscape-only display:** Displays pages only in the wider landscape screen orientation.
- **Enable JavaScript:** Enables JavaScript for the current Web page. Without this feature, some pages may not display properly. Remove the checkmark to disable this function.
- **Enable plug-ins:** Enables browser plugins for the current Web page. Some pages may require plugins to properly display or function.
- **Open in background:** New pages are launched in a separate page and displayed behind the current one. Remove the checkmark to disable this function.



- **Set home page:** Sets the current home page for the Web browser (page 158).

Adjusting Browser Privacy Settings


1. Press  to open the browser menu.
2. Tap **More > Settings**.
3. Navigate to the **Privacy settings** area and select from one of the following privacy settings:
 - **Clear cache:** Deletes all currently cached data. Tap **OK** to complete the process.
 - **Clear history:** Clears the browser navigation history. Tap **OK** to complete the process.
 - **Accept cookies:** Allows sites, that require cookies, to save and read cookies from your device.
 - **Clear all cookie data:** Clears all current browser cookie files.
 - **Remember form data:** Allows the device to store data from any previously filled out forms. Remove the checkmark to disable this function.
 - **Clear Form data:** Deletes any stored data from previously filled out forms. Tap **OK** to complete the process.

- **Enable location:** Allows sites to request access to your current location (using the built-in GPS).
 - **Clear location access:** Clears location access for all websites.
4. Press  to return to the browser.


Adjusting Browser Security Settings

1. Press  to open the browser menu.
2. Tap **More > Settings**.
3. Navigate to the **Security settings** area and select from one of the following privacy settings:
 - **Remember passwords.** Stores usernames and passwords for visited sites. Remove the checkmark to disable this function.
 - **Clear passwords.** Deletes any previously stored usernames or passwords. Tap **OK** to complete the process.
 - **Show security warnings.** Notifies you if there is a security issue with the current website. Remove the checkmark to disable this function.
4. Press  to return to the browser.


Creating Website Settings

1. Press  to open the browser menu.
2. Tap **More > Settings > Website settings**. These are advanced settings that can be configured for individual sites.
3. Tap **OK** to complete the process.


Resetting the Browser to Default


1. Press  to open the browser menu.
2. Tap **More > Settings > Reset to default**.
3. Tap **OK** to complete the process.

Setting the Browser Home Page

1. Press  to open the browser menu.
2. Tap **More > Settings > Set home page**.
3. Delete the current address and enter a new Web page.
4. Tap **OK** to complete the process.


Creating Bookmarks

1. From any open Web page, press . (You will see the browser menu.)
2. Tap **Bookmarks**. Three tabs are revealed:
 - **Bookmarks**: Displays a list of your current Web bookmarks.
 - **Most visited**: Displays a list of your most frequently visited websites. Tap an entry to launch the selected page.
 - **History**: Displays a record of your browsing history. These records are organized into folders such as: **Today**, **Yesterday**, **5 days ago**, and **1 month ago**.
3. Tap **Add** (first entry in the Bookmarks tab).

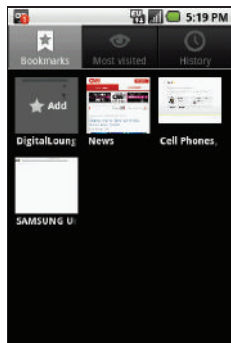


4. Enter a descriptive name for the new bookmark and tap **OK** to store the new entry to your Bookmarks list.

Creating Bookmarks From Other Tabs


1. From any open Web page, press  > **Bookmarks**.
2. Tap either **Most visited** or **History** tab.
3. Touch and hold an entry from the list to display an onscreen popup menu.
4. Tap **Add bookmark** to add the selected entry to your current list of bookmarks.
 - or –
 Repeat steps 1 and 2.
5. Tap the star icon adjacent to a website address. The star now turns gold. This adds the “starred” website to your current Bookmarks list.

Creating a New Home Page

1. From any open Web page, press  > **Bookmarks**.
2. Tap either **Most visited** or **History**.

3. Touch and hold an entry from the list to display an onscreen popup menu.
4. Tap **Set as homepage** to assign the selected entry as your new home page.

Adding Bookmarks to Your Home Screen

1. From any open Web page, press .
2. Tap the **Bookmarks** tab.
3. Touch and hold an existing entry from the list to display an onscreen popup menu.
4. Tap **Add shortcut to Home** to add the selected entry to your Home screen.

Wi-Fi

About Wi-Fi


Wi-Fi is a term used for certain types of wireless local area networks (WLAN). These device types use an 802.11 wireless specification to transmit and receive wireless data.

Wi-Fi communication requires access to an existing and accessible Wireless Access Point (WAP). These WAPs can either be Open (unsecured) as within most Hot Spots, or Secured (requiring knowledge of the router name and password).

Turning Wi-Fi On and Off

By default, your device's Wi-Fi feature is turned off. Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.

To turn Wi-Fi on:

1. Press  >  and tap  > **Wireless & networks > Wi-Fi.**
2. Tap the **Wi-Fi** field to activate the feature (green checkmark indicates active). The device scans for available in-range wireless networks.

To turn Wi-Fi off:

1. Press  >  and tap  > **Wireless & networks > Wi-Fi.**
2. Tap to remove the green checkmark and deactivate Wi-Fi.

Note: Use of wireless data connections such as Wi-Fi and Bluetooth can cause an added drain to your battery and reduce your use times.

To connect to a Wi-Fi network:

1. Press  >  and tap  >

Wireless & networks > Wi-Fi settings.

- The network names and security settings (Open network or Secured with xxx) of detected Wi-Fi networks are displayed in the Wi-Fi networks section.

Note: When you select an open network, you will be automatically connected to the network.

2. To manually add your new network connection:
 - Tap **Add Wi-Fi network**.
 - Enter the Network SSID. This is the name of your Wi-Fi network.
 - Tap the **Security** field and select a security option. This must match the current security setting on your target network.

- If secured, you will also need to enter your WAP's password. The **show password option**, reveals the password as you type it instead of only showing asterisks (****).
- Tap **Save** to store the new information and connect to your target network.

Note: The next time your device connects to a previously accessed or secured wireless network, you are not prompted to enter the wireless password again, unless you reset your device back to its factory default settings.

To manually scan for a Wi-Fi network:

1. Press  >  and tap  >
- Wireless & networks > Wi-Fi settings.**
2. Press  and tap **Scan**.

Wi-Fi Status Indicators

The following icons show your Wi-Fi connection status at a glance:



– Wi-Fi is connected and active.



– Wi-Fi active but there is a communication issue with the target Wireless Access Point (WAP).

Using the Wi-Fi Settings Menu

The **Wi-Fi settings - Advanced** menu allows you to set up many of your device's Wi-Fi service, including:

- Setting your Wi-Fi sleep policy
- Viewing your device's MAC Address
- Configuring use of either a DHCP or Static IP

To access the Wi-Fi Settings menu:

1. Press  >  and tap  > **Wireless & networks > Wi-Fi settings.**
2. Press  and tap **Advanced.**

Email

Your device's Email applications let you access and manage multiple email accounts simultaneously in one convenient location.

Although there is a separate Gmail application, the main email application can manage both Internet-based email services (Gmail™ and Yahoo™) and Corporate Work Email (Outlook®).

The device can also be manually configured to connect to other email systems.

Note: If you have multiple email accounts, you must configure each account with its own settings.

If you want to send and receive email messages through an ISP (Internet Service Provider) account (such as Outlook), or if you wish to use your device to access your corporate email through a VPN (Virtual Private Network), you will first need to set up an IMAP or POP account.

- **IMAP** (Internet Message Access Protocol) - This mail retrieval protocol is frequently used in large networks and commercial and institutional settings. IMAP4 is the current standard.
- **POP** (Post Office Protocol) - This protocol is supported by most ISPs and is currently more common among consumer applications. POP3 is the current standard.

Note: For more information, review your email carrier's literature or contact your IT administrator.

Email Icons/Shortcuts



– IMAP/POP3 Internet Mail shortcut (such as Yahoo! and Outlook).



– Gmail shortcut

Status Bar - Notifications



– New email message received



– New Gmail message received

Gmail (Google Mail)

This email client is Google's Web-based email service. A Gmail/Google Mail account is created once you sign-up for a new Google account online. (See "Creating a Google Account" on page 50.)




- From a computer, launch a Web browser and navigate to www.google.com.

Depending on your synchronization settings, Google Mail messages (along with calendar events, phone numbers and other contact information) on your device are automatically synchronized between your device and your Gmail/Google Mail account on the Web.

Note: You must have a valid and active Google account prior to using this email client.

Important: You must log into Google after every power cycle of your device. Logging into Gmail (via the device) does not sign you into your Google account. Gmail logging and access are separate from your main Google account.

Setting Up a Gmail Account via the Device

1. Press  and tap  >  (Gmail).
2. Follow the onscreen prompts.
 - The first time you connect, you are asked to give your Gmail account a unique onscreen name and enter a From name (displayed in your outgoing emails within the **From** field).
3. Tap **Done** to store the account information and complete setup.

Note: You must have a valid and active Google account (xxxxxx@gmail.com) prior to Gmail setup and configuration.

Your Gmail address is then used to log into your account via the device.

Signal interruptions or incorrect username or password information can cause completion issues.

Opening Gmail

1. Press  and tap  >  (Gmail).


2. Tap an email message.

To refresh your Gmail messages:

► Press  and tap **Refresh**.

Composing Gmail

1. Press  and tap  >  (Gmail).

2. Press  and tap **Compose**.

3. Enter the message recipient's email address in the **To** field.


- If you are sending the email to several recipients, separate the email addresses with a comma.

- You can add as many message recipients as you want.


Note: To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, press  and tap **Add Cc/Bcc**.

4. Tap the **Subject** field and enter the email subject.

5. Tap the **Compose Mail** field and compose your email.

- To add a file attachment, press  and tap **Attach** (from the bottom of the screen).


- Select the picture you want to attach.

- Tap  to delete a selected attachment from your current email.


6. Once complete, tap **Send**.

- Tap **Save as draft** to save the current email as a draft. To later view your draft email messages, from the Inbox, tap the **Drafts** folder.
- To delete the current email message, tap **Discard**.




Creating a Gmail Signature


1. From the Gmail inbox, press  and tap **Settings > Signature** field.
2. Enter a signature and tap **OK**.

Accessing Gmail Messages

A new Gmail message  icon appears within the Notifications area of the Status bar to notify you of a new email.

To view a new email:

1. Press  >  and tap .
– or –
Touch and hold the Status bar, then slide your finger down the screen. (See “Using the Notifications Panel” on page 41.)
2. Tap the new email from the **Notifications** list to launch the **Inbox** tab.
3. Scroll up and down the email by dragging your finger up and down the screen.

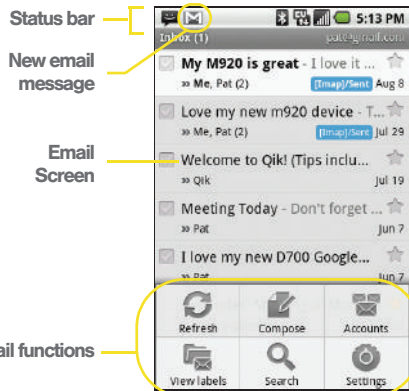





To reply to an email message:

1. With the email message displayed, tap **Reply** or **Reply to all**.
2. Enter a new message body and tap **Send**.

To delete an email message:

- With the email message displayed, tap **Delete**.




Configuring Gmail Settings

1. Press  and tap  > .
2. Press  and tap **Settings**.
3. This menu provides both field information and settings:
 - **Signature**: Allows you to create an email signature for your outgoing Gmail emails.
 - **Confirm delete**: Shows a dialog whenever you delete an email.
 - **Batch operations**: Allows label operations.
 - **Clear search history**: Removes all the searches you have performed.
 - **Labels**: Selects which labels are synchronized.
 - **Email notifications**: Activates the email notification icon to appear within the Notifications area of the Status bar when a new email message is received.
 - **Select ringtone**: Plays a selected ringtone once a new email message is received.

- **Vibrate**: Activates a vibration once a new email message is received.





Email

Setting Up an Email Account

1. Press  and tap  >  (**Email**).
2. Follow the onscreen instructions to setup an email account.
 - Tap **Manual** setup to configure your connection settings manually (POP3 or IMAP). Follow the onscreen prompts and enter the information specific to your carrier.
 - The first time you connect, you are asked to give this Internet mail account a unique onscreen name and enter a From name (displayed in your outgoing emails within the **From** field).
 - The unique account name is used to differentiate this account from other email accounts accessed by your device. (See “Adding Additional Internet Email Accounts” on page 168.)

Note: Signal interruptions or incorrect username or password information can cause completion issues.






Opening Email

1. Press  and tap  >  (**Email**).
2. Press  and tap **Accounts**.
3. Select an email account.
4. Tap an email message.

To refresh your Email messages:


- Press  and tap **Refresh**.


Composing Email

1. Press  and tap  >  (**Email**).
2. Press  and tap **Accounts**.
3. Select an email account.
4. Tap **Inbox** to open your inbox.
5. Press  and tap **Compose**.
6. Enter the message recipient's email address in the **To** field.
 - If you are sending the email to several recipients, separate the email addresses with a comma.






- You can add as many message recipients as you want.
- Choose recipients from the following sources:
 - **Recent** to access your list of recent contacts.
 - **Contacts** to access your current Contacts page.
 - **Group** to access any available Groups (within which are associated Contacts entries).
 - **Search** to search for a contact from within your device.

Note: To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, tap the **Cc/Bcc** fields.





7. Tap the **Subject** field and enter the email subject.
8. Tap the **Compose Mail** field and compose your email.
 - To add a file attachment, tap **Attach** (from the bottom of the screen), select a file, and tap **OK**.
 - Select the picture you want to attach.
 - Tap  to delete a selected attachment from your current email.

9. Once complete, tap **Send**.
 - Tap  > **Save as draft** to save the current email as a draft. To later view your draft email messages, from the Inbox, tap the **Drafts** folder.
 - To delete the current email message, tap **Discard**.


Adding Additional Internet Email Accounts

1. Press  and tap  > .
2. Press  and tap **Accounts** >  > **Add account**.
3. Follow the onscreen prompts to add additional Internet-based email accounts such as Yahoo!, Gmail, AOL, or other POP or IMAP accounts.

Configuring Email Settings


1. Press  and tap  > .
2. Tap the email account from the Accounts area of the Email screen.
3. Tap **Inbox** to open the contents of your inbox.
4. Press  and tap **Account settings**. (See “Synchronizing Your Corporate Account” on page 68.)

5. This menu provides both field information and settings:

- **General settings** allows you to configure:
 - **Account name** displays the name used by the device to track the account.
 - **Your name** displays the name used in the From field within your outgoing emails.
 - **Email check frequency** configures the frequency which the device queries the remote server for new email changes.
 - **Default account** assigns this account as the default used when sending out new emails.
- **Notification settings** allows you to configure:
 - **Email notifications** enables the device to display a status bar icon  when new emails have been received.
 - **Select ringtone** assigns an audible ringtone when a new or upcoming event is pending.
 - **Vibrate** assigns a vibration when a new or upcoming event is pending.





- **Server settings** allows you to configure:
 - **Incoming settings** provides access to the Domain, password, and exchange server parameter fields.
 - **Outgoing settings** Adjusts the outgoing parameters, such as username, password and other outgoing connection parameters such as SMTP server.
- **Common settings** allows you to configure:
 - **Forward with files** allows you to include attachments when forwarding an email.
 - **Signature** allows you to create an outgoing email signature attached to new emails sent from your device.

Corporate Email (Outlook)

The main Email application () also provides access to your Outlook Exchange server via your device. If your company uses Microsoft Exchange Server 2003 or 2007 as the corporate email system, you can use this email application to wirelessly synchronize your email, Contacts, and Task information directly with your company's Exchange server.

Important: This Outlook application does not utilize Microsoft® ActiveSync to synchronize the device to your remote Exchange Server. This synchronization is done wirelessly over the air (OTA) and not via a direct connection.

Setting Up a Corporate Email

1. Press  and tap  >  (**Email**).
2. Press  and tap **Accounts > Add account**.
3. Enter your **Email address** and **Password** information, and then tap **Next**. Consult your Network Administrator for further details.
 - **Email address:** your Outlook work email address.
 - **Password:** typically your network access password (case-sensitive).
4. Tap **Exchange account** (from the add new email account screen).
5. When prompted to provide additional detailed information, scroll down the screen and tap **Next**.
6. Enter a **Domain\Username**, **Password**, and **Exchange Server** information.

- **Domain\Username:** enter your network domain\desktop login username.
- **Password:** typically your network access password (case-sensitive).
- **Exchange Server:** your exchange server remote email address. Typically starts with **mail.XXX.com**. Obtain this information from your company network administrator.
- If your network requires SSL encryption, tap the **Use secure connection (SSL)** field to place a checkmark in the box and activate this additional level of security.
- **If your exchange server requires this feature, leaving this field unchecked can prevent connection.**

Note: Signal interruptions or incorrect username or password information can cause completion issues.







7. Read the onscreen activation disclaimer and, if prompted, tap **Next**.
8. Configure your **Email check frequency**, **Amount to synchronize** (days to synchronize between your device and server), and activate any other email settings, and then tap **Next**.

9. Identify your new account with a unique name and provide the outgoing name text then tap **Done**.


Important: You can synchronize over the air (not directly) with an Exchange Server running Microsoft Exchange Server 2003 Service Pack 2 (SP2) or Microsoft Exchange Server 2007.

Note: You can have multiple Work Email (Microsoft Exchange ActiveSync) accounts active on your device.

Opening Corporate Email

1. Press  and tap  >  (**Email**).
2. Press  and tap **Accounts** and select the corporate account.
3. Tap a message to read, manage, and reply to your email messages.
 - From your Inbox screen, press  to select options, such as **Refresh**, **Compose**, **Accounts**, **Account settings**, **Sort**, or **Search**.
 - While in a message, press  to select messaging options, such as **Add to Contacts**, **Save to Calendar** or **Display Mode** (Original or Positive mode).

Composing Corporate Email

1. From the Inbox, press  and tap **Compose**.
2. Enter the message recipient's email address in the **To** field.
 - Choose recipients from the following sources:
 - **Recent** to access your list of recent contacts.
 - **Contacts** to access your current Contacts page
 - **Group** to access any available Groups (within which are associated Contacts entries).
 - **Search** to search for a contact from within your device.
 - If you are sending the email to several recipients, separate the email addresses with a comma.
 - You can add as many message recipients as you want.

Note: To send an additional carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, tap the **Cc/Bcc** fields.

3. Tap the **Subject** field and enter the email subject.

4. Tap the **Body** field and compose your email.
 - To add a file attachment, tap **Attach** (from the bottom of the screen), select a file, and tap **OK**.

To reply to an email message:

1. From the Inbox, tap an email message.
2. With the email message displayed, tap either **Reply** or **Reply all**.
 - If you select **Forward**, you must specify the message's recipients.
3. Enter a new message body and tap **Send**.

To delete an email message:

- Touch and hold an email (from your inbox list) and select **Delete** from the onscreen context menu.
 - or –
 With the email message displayed, tap **Delete**.


Configuring Corporate Email Settings

After your initial setup, you are taken to the Settings menu for your new Work Email account.


Account Settings: configures send and receive settings, such as email signature, notifications, syncing, etc.

1. Press  >  and tap  >

Accounts & sync.

2. Tap  within the Corporate account field to reveal the account's synchronization settings screen.
3. Toggle either the **Sync Calendar** or **Sync Contacts** fields to force the device to manually resync either the exchange Contacts or Calendar entries.



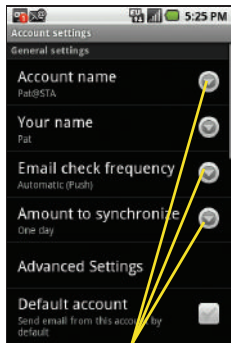

– or –




Setting Options


Tap **Account settings** and configure any other email parameters you wish to synchronize. See “Synchronizing Accounts” on page 67.

To configure Corporate Email settings:

1. Press  >  and tap  > **Accounts & sync.**
2. Tap  within the Corporate account field to reveal the account's synchronization settings screen.
3. Tap the Account settings parameters you wish to synchronize.
 - **General settings** allows you to configure:
 - **Account name** displays the name used by the device to track the account.
 - **Your name** displays the name used in the From field within your outgoing emails.
 - **Email check frequency** configures the frequency which the device queries the remote server for new email changes. Choose from: **Automatic (Push)**, **Never**, **Every 5 minutes**, **Every 10 minutes**, **Every 15 minutes**, **Every 30 minutes**, or **Every hour**.

- **Amount to synchronize** to assign the sync range for your incoming and outgoing emails between your device and your external exchange server. How many days worth of emails should the device and server synchronize. Choose from: **One day, Three days, One week, Two weeks, or One month.**
- **Default account** assigns this account as the default used when sending out new emails.
- **Email notifications** enables the device to display a status bar icon  when new emails have been received.
- **Select ringtone** assigns an audible ringtone when a new or upcoming event is pending.
- **Vibrate** assigns a vibration when a new or upcoming event is pending.
- **Incoming settings** provides access to the Domain, password, and exchange server parameter fields.
- **Sync contacts** synchronizes the contacts between your device and the remote exchange server. A checkmark indicates the feature is enabled.

- **Sync calendar** synchronizes your exchange calendar entries between your device and the remote exchange server. A checkmark indicates the feature is enabled.
- **Forward with files** causes any outgoing email replay to include any currently attached files. A checkmark indicates the feature is enabled.
- **Signature** allows you to create an outgoing email signature attached to new emails sent from your device.


4. Press  to return to the previous screen.

For more detailed Corporate email information, see “Corporate Email (Outlook)” on page 169. For more information on Corporate Calendar synchronizing, Synchronizing Corporate Calendar Events (page 95).

To create a Corporate Email Signature:

This signature can differ from any current Email signature on your local Outlook client. This signature is applied to any outgoing emails originating on your device.




1. Press  >  and tap  >
Accounts & sync.

2. Tap  within the Corporate account field to reveal the account's synchronization settings screen.
3. Scroll to the bottom of the list and tap **Signature**.
4. Delete the current default text and enter your new email signature.
5. Tap **OK** to store the new signature.




Using the Android Market

The Android Market provides direct access to a large selection of applications which you can download and install on your device.



Accessing the Market

1. Press  and tap  >  (**Market**).
2. If not already logged in with your Google account, tap **Next**.
3. Tap **Sign in** and enter your Google account information.
4. Tap **Accept** to agree to the Android Market terms of service.



Selecting and Installing a Google Application

1. Press  and tap  > .
2. Browse through the categories, find an application you're interested in, and tap the name.
3. Read the application descriptions.
4. Tap **Install** (for free applications) or **Buy**.

Note: Use caution with applications which request access to any personal data, functions, or significant amounts of data usage times.

5. If prompted, follow the onscreen instructions to pay for the application.
6. Check the progress of the current download by opening the Notifications panel.
7. After the item is downloaded and installed on your device, the content download icon  appears in the notification area of the status bar.
8. On the Android Market screen, press  and tap **Downloads**, tap the installed application in the list, and then tap **Open**.





Launching an Installed Google Application

1. Press  and tap .
2. Tap the newly installed application.
3. Read the application descriptions.

Reinstalling a Google Application

If the Android operating system is ever updated, any data contained on the device will be erased. The only data stored on the device are Google applications available via the Android Market.

Note: Pictures and music are stored on the microSD card. Contacts and Calendars are stored remotely on with your remote Google or Outlook servers.






1. Log into your Google account via the device.
2. Press  and tap  > .
3. Press  and tap **Downloads**.
4. Scroll through the list of previously downloaded Google applications and choose the one you wish to reinstall.
5. Follow the onscreen instructions.

Sprint Applications

You can access a wide variety of Sprint applications in many different categories with your phone and data service. Currently, various applications, such as NASCAR, Sprint Football Live, TeleNav GPS Navigator, Sprint Music Plus, and Sprint TV are available when you download and install the Sprint ID pack.




Note: Some Sprint data applications may not work with a Wi-Fi connection present. If prompted, disable your device's Wi-Fi feature while using these applications.

Download the Sprint ID Pack

- Press  and tap . On the **Choose your ID screen** tap **Get New > Sprint**. Follow the onscreen prompts to install the **Sprint ID Pack**.
- or –
- Press  and tap  >  (**SprintZone**) > **Sprint Applications**. Follow the onscreen prompts to install the **Sprint ID Pack**.

Note: Once you download and install the Sprint pack, Sprint applications such as **NASCAR Sprint Cup Mobile**, **Sprint Football Live**, **Sprint Music Plus**, and **TeleNav™ GPS Navigator** will appear on your applications screen. When you switch from the Sprint pack to another ID pack, or choose a new ID pack, the Sprint applications will remain installed and visible on your applications screen (page 5).

To download and install Sprint apps:




1. Press  and tap  > [application name].
The browser will start and take you to the download menu for the application.
2. Follow the instructions to customize your application (such as selecting a favorite team or driver) or press  to explore your options.

Important Privacy Message – Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

Note: Some Sprint data applications may not work with a Wi-Fi connection present. If prompted, disable your device's Wi-Fi feature while using these applications.

Sprint Zone


Sprint Zone is a free application which helps you manage your account, get tips and tricks for your device, find recommended apps, and more.


1. Press  and tap  >  (**SprintZone**).
2. From the Sprint Zone Web page, scroll up or down and tap an item to check your account, read the latest news about your device, load an application, and more.

NASCAR Sprint Cup Mobile

Now you have the ability to get every bit of NASCAR coverage, news, and stats right on your device.





1. Press  and tap  >  (**NASCAR Sprint Cup Mobile**).

2. If prompted, read the permission check disclaimer, make a selection and tap **OK**. Follow the onscreen instructions until you reach the main NASCAR Sprint Cup Mobile page.
3. Navigate the main page by scrolling around using the touchscreen.
4. Tap an onscreen option to activate features that include:
 - **Home** is the main NASCAR homepage where you can view stats on a current race, choose to follow a specific driver, view special NASCAR promotions and other NASCAR-specific multimedia content.
 - Press  and tap **Home** to return to the main NASCAR page. This applies to each of these options.
 - **Leaderboard** launches a an onscreen board showing the ranking of leaders in the competition.
 - **Race Recap** provides overviews of the current races, pictures, commentary, additional photos, and race stats.
 - **SPEED** displays a list of selectable multimedia video clips from the SPEED channel that are specific to NASCAR.
 - **Point Standings** displays race stats, driver info, news, photos, etc. for the All-Star race.
 - **My Driver** to customize your NASCAR experience by following specific drivers. Information includes driver-specific stats and NASCAR RSS feeds. You can also get additional stats, review other driver info, or change drivers.
 - **Stats/Sched** lets you track race information such as: **NSCS Recap**, **NNS Recap**, **Point Standings**, **Season Stats**, and **Schedule**.
 - **Miss Sprint Cup** is your insider to NASCAR by providing news, information, blogs and twitter updates to the goings-on within NASCAR.
 - **Videos** displays a list of selectable multimedia content. Other features include streaming multimedia content from NASCAR radio stations or other racing radio shows.

- **News & Alerts** provides you with quick access to NASCAR-specific news, photos, and driver stats. You can also customize alerts for new information such as ALL NASCAR News, Sprint Cup News, etc.
- **Community** lets you take part in online fantasy racing, access **Games, News, Videos**, take part in **Polls**, and access other **Special Promotions**.
- **Fantasy** lets you connect with other NASCAR enthusiasts. You will have to login using a NASCAR.COM Community login. If you do not have this information, visit community.nascar.com to get an account.
- **FanZone** displays a list of selectable content available to Sprint subscribers such as Sweepstakes, Video clips (footage and music) and Screensavers.
- **Settings and Help** displays help information for usage of the NASCAR application and features.
- **Exit** to quit the NASCAR application.
 - Press  and tap **Exit**.

Sprint Football Live

Get Sprint Football live on your phone. It lets you be right in the middle of your favorite game by being a part of previews, blogs, discussions groups, fantasy football, etc.

1. Press  and tap  >  (**Sprint Football Live**).
2. Tap **Continue** and follow the onscreen instructions to customize your football experience by choosing your favorite team.
3. Access any of the following features by pressing  (menu):

Note: Use the directional keys to move around the application's menu features.

- **2010 Draft** (default home page) displays a screen full of draft information such as Draft Insider, Exclusive Blog, Draft Tracker, Pick'Em, Mock Draft, and Draft Prospects.
- **Favorite Team** launches a team-specific page with content such as top stories, RSS feeds, Rumor information, Schedules, Team Alerts, and the ability to change your favorite team selection.

- **News** provides AP league news, Rumor and News, PFTV, Injury Info, Transactions, Legal, and other football related information, photos and videos.
- **Tweets** launches an onscreen Twitter page specific to the NFL. Also included onscreen is a real-time RSS new feed.
- **Team Pages** allows you select from wither the AFC or NFC conferences, and then display content such as top stories, RSS feeds, Rumor information, Schedules, Team Alerts, and the ability to change your favorite team selection.
- **Help/About** displays help information for Sprint Football Live topics such as: General, Home, News, Twitter, Team Page, About, or Alerts.
- **Exit** allows you to exit the Sprint Football Live application. Tap **YES** to exit.

3C. Entertainment: TV and Music

- ◆ Getting Started with Sprint TV and Music (page 180)
- ◆ Sprint TV (page 181)
- ◆ Music (page 181)
- ◆ Streaming Music (page 183)
- ◆ YouTube (page 184)

Sprint TV gives you the ability to listen to audio clips and to view video clips right from your device's display. Watch live TV and catch up on episodes of your favorite shows – anywhere on the Nationwide Sprint Network.*

Sprint Music Plus lets you preview, purchase, download, and listen to over a million songs right on your device. You can even add songs from your own library to round out your on-the-go playlist.

* Sprint TV coverage not available everywhere. Content and lineup subject to change. Select channels also available for casual usage. Visit www.sprint.com/tvguide for more information.

Getting Started with Sprint TV and Music

In order to access Sprint applications on your device, such as Sprint TV and Sprint Music Plus, you must first download and install the Sprint ID Pack. Once you have installed the Sprint pack, you can switch back to any other pack or install a new pack. The Sprint applications will always be stored on your applications screen.

► Press  and tap . On the **Choose your ID screen** tap **Get New > Sprint**. Follow the onscreen prompts to install the **Sprint ID Pack**.

– or –

Press  and tap  >  (**SprintZone**) > **Sprint Applications**. Follow the onscreen prompts to install the **Sprint ID Pack**.

Sprint TV

Your Sprint TV Channel Options

The Sprint TV application offers a wide variety of accessible channels. Subscription options include comprehensive basic packages as well as a full menu of “a la carte” channels. Visit www.sprint.com/tvguide for more information on channels and pricing.

Note: Available categories and content are subject to change.

Watching TV

1. Press  and tap  >  (**SprintTV**).

Depending on your settings, your device may prompt you to accept a data connection.

Note: SprintTV can only be viewed over a cellular connection. Turn off your Wi-Fi communication prior to using this application. If prompted, tap **Disable Wi-Fi** to continue.

2. Select **TV**, **Radio**, **Favs**, or **More** to display channel options.
3. Tap an entry to select a channel from the Sprint TV listings or to select an available category.

Note: The first time you access a channel, the system will prompt you to purchase access (unless the channel doesn't have a monthly fee). Tap **Subscribe** to purchase access, or tap **Preview** to view a preview of the selected channel.

4. Tap a desired clip to view the program. The clip will automatically load and begin playing.




Tip: Scroll through the channels to view more selections. Once you find a channel that you want to watch or listen to, simply tap it and wait approximately three seconds, and the channel begins loading.

Music




The Sprint Music Plus store lets you purchase and download digital music files to play on your device or computer.

Note: You must install the Sprint ID Pack in order to access the Sprint Music application. See “Getting Started with Sprint TV and Music” on page 180.




Accessing Sprint Music Plus

1. Press  and tap  >  (**Sprint Music Plus**). Depending on your settings, your device may prompt you to accept a data connection.
2. Follow the onscreen instructions to install the application.




Purchasing Music from the Sprint Store

1. Press  and tap  >  (**Sprint Music Plus**).
2. Tap **Music Store**, **Ringtone Store**, or **Ringback Tone Store** to begin your music selection.
 - **Music Store** provides access to New Releases, Top Downloads, or Genres of music.
 - **Ringtone Store** provides access to New Ringtones, Top Ringtones, or Genres of music.
 - **Ringback Tone Store** provides access to New Ringback Tones, Top Ringback Tones, or Genres of music.

Accessing the Music Player







1. Press  and tap  >  (**Music**).
2. From the Music display, select an option:
 - **Artists** to display your music sorted by artist.
 - **Albums** to display your music sorted by album.
 - **Songs** to browse through all of your downloaded music and any additional songs you have loaded onto your microSD card from your computer.
 - **Playlists** to select a customized playlist you've created to organize your music.
3. Once you've displayed a list of songs, you can browse through your available titles.
 - To listen to a song or playlist, tap it to begin playing from the selected song. (You can also highlight the playlist to begin listening.)

Creating a Playlist

1. Press  and tap  >  > **Songs**. Your device searches through your device and microSD card for compatible music files and then displays them onscreen.







2. Touch and hold a song you'd like to add to a playlist. This action reveals an onscreen popup menu.
3. Tap **Add to playlist** and select either a **Current playlist** or select **New** (to create a new playlist).
 - If you select **New**, delete the current default name, enter a name for your new playlist, and tap **Save**.

Assigning a Song as a Ringtone

1. Press  and tap  >  > **Songs**.
2. Touch and hold a song you'd like to use as your new ringtone. This action reveals an onscreen popup menu.
3. Tap **Use as phone ringtone** to store the selected song as your new default ringtone.
4. Confirm the song has been successfully assigned by navigating to your Phone ringtone menu.
 - Press  >  and tap  > **Sound & display** > **Phone ringtone**.
5. Confirm the new song is selected.

Streaming Music

Sprint offers a variety of musical options through the Radio category in the Sprint TV menu, including SIRIUS Music, Music Choice, VH1, and many others. Choose from rock, pop, hip-hop, and R&B, and access exclusive video clips, music industry news, performances, and interviews with your favorite artists.





1. Press  and tap  >  (**SprintZone**) > **Sprint Applications**. Follow the onscreen prompts to install the **Sprint ID Pack**.
2. Press  and tap  >  (**SprintTV**) > **Radio** > [selection].
3. Select **Preview** to see and hear a preview of your selected channel (if available).
 - or –
 - Select **Subscribe** to purchase a monthly subscription to your selected channel.

Once you have purchased access to a music or radio channel, you can select from a variety of stations to listen to your favorite music or get caught up on what's new in music.

YouTube

YouTube™ is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts and other original videos.

Note: YouTube is a data-intensive feature. Sprint recommends that you upgrade to an unlimited data plan to avoid additional data charges.

1. Press  and tap  >  (**YouTube**).
2. Read the disclaimer regarding data usage and tap **Continue**.
3. Press  to open the onscreen keyboard, or open the QWERTY keyboard and tap the **Search** field to search for specific videos, scroll down to browse through the main page thumbnails, or scroll to the bottom to explore additional options.
4. To view a video, tap an available preview thumbnail or tap the title link.

5. Press  to return to the previous page.

Note: It is not necessary to sign in to the YouTube site to view content. However, if you wish to sign in to access additional options, access the page via the Web browser and tap **Sign in** at the top right corner, enter your YouTube or Google username and password, and tap **Sign in**.

3D. GPS Navigation

- ◆ GPS Services (page 185)
- ◆ Google Maps (page 185)
- ◆ TeleNav GPS Navigator (page 187)
- ◆ Navigation (page 194)

GPS Services

Your device's built-in GPS capability gives you access to a number of location-based services, including **Maps**, **Navigation**, and **TeleNav™ GPS Navigator**.

Activating Location Mode




Before using any of the location-based services, you must turn on your device's location mode.

- ▶ Press  >  and tap  > **Location & security > Use GPS satellites.**

Note: Enabling GPS will drain your battery faster.

Activating Using Wireless Networks

This additional location feature uses open Wi-Fi and mobile network connections to assist in providing additional location accuracy.






1. Press  >  and tap  > **Location & security > Use wireless networks.**
 - Since this feature is based on Google's location service, you will need to agree to allow Google to collect anonymous information.
2. Tap **Agree** to accept the terms of service.

Google Maps

Use this application to find directions, location information, business addresses, etc., all right from your Samsung Transform. Determine your current location with or without GPS, get driving and transit directions, and get phone numbers and addresses for local businesses.

Before you begin using this feature you must activate your GPS hardware and agree to share location information with Google.





To enable your device's GPS Location feature:

1. Press  >  and tap  > **Location & security**.
2. Tap **Use GPS satellites**. A checkmark indicates the GPS location feature is enabled. (For additional location information, see "Location Settings" on page 66.)
 -  appears in the Notification area when the GPS is active.
 -  appears in the Notification area when the GPS is communicating.




To launch the Google Maps application:

- Press  and tap  >  (**Maps**).

To find your location:

1. Press  and tap  >  (**Maps**).
2. Press  and tap **My Location**.


To use Google Maps:

1. Press  and tap  >  (**Maps**).
 - If prompted, read the "What's new" message and tap **OK**.
2. Tap the magnification icons to zoom in or out of the current map view.



– or –

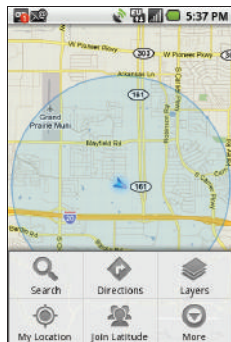

Press  for other Google Map features.

- Choose from: **Search**, **Directions**, **Layers**, **My Location**, **Join Latitude**, and **More** (**Clear map**, **Starred Items**, **Labs**, **Help**, **Terms**, **Privacy & Notices**, and **About**).



To search for a keyword:

1. Press  and tap  >  (**Maps**).
2. Press  and tap **Search**.

3. Tap the search field (at the top of the screen), enter a keyword, and tap .
 - This keyword can be a category name (such as pizza, steak, burger), a business name (Samsung, Sprint), or a Google friend who is sharing their location.
4. Tap  (bottom left) to reveal a detailed list of information corresponding to those matches now displayed on your screen with lettered pins.

TeleNav GPS Navigator

TeleNav GPS Navigator gives you turn-by-turn directions onscreen and over speakerphone.

Note: Depending on your service plan, TeleNav may require a monthly subscription. Contact Sprint for information and pricing.

Note: Some features may be available only with a subscription to TeleNav GPS Navigator Premium.

Getting Started with TeleNav GPS Navigator


Before you can use TeleNav GPS Navigator, you must first install the Sprint ID pack.

- ▶ Press  and tap . On the **Choose your ID** screen tap **Get New > Sprint**. Follow the onscreen prompts to install the **Sprint ID Pack**.

– or –

Press  and tap  >  (**SprintZone**) > **Sprint Applications**. Follow the onscreen prompts to install the **Sprint ID Pack**.

To install the TeleNav GPS Navigator application:

1. Press  and tap  >  (**TeleNav GPS Navigator**).




Note: Some application might also be located within **Sprint Zone > Suggested Apps > More...**

2. Tap **Install**.
3. Tap the **NAV.pak** file from the download history screen.




4. If prompted to allow installation of blocked content, tap **Settings** and select **Unknown sources**. (See “Unblocking Unknown Installations” on page 74.)
5. Tap **Install**.

Registering TeleNav GPS Navigator

Before you can use the TeleNav GPS Navigator, your device and service must be registered.

1. Press  and tap  >  (**TeleNav GPS Navigator**).
2. Read the disclaimer and touch **Accept** to acknowledge the terms of use.
3. Tap each of the onscreen registration fields and enter the required information.
 - **First Name**, **Last Name**, and **Email** (optional).
 - If using the onscreen keyboard, tap Next to store your information.
4. Tap **Continue** to register your information.
5. Tap **Yes** to take a brief tour of the Navigation features and functionality, or **No**, **Skip Tour** to continue to the main navigation screen.

Using TeleNav GPS Navigator

1. Press  and tap  > .
2. Select an option and follow the onscreen instructions to take advantage of TeleNav's full suite of features.
 - **Drive To** lets you get driving directions from wherever you are to wherever you're going. Choices include:
 - **My Favorites**: user-defined favorite locations.
 - **Recent Places**: recently entered locations.
 - **Address**: manually entered street addresses.
 - **Intersection**: map based on manually a entered street intersection.
 - **City**: display a city map based on selected city.
 - **Business**: locations based on business categories.
 - **Airports**: local airports based on current GPS location.
 - **Contact**: those local addresses assigned to previously entered Contacts.




- **Search** lets you search for locations from dozens of names or category options such as **Food/Coffee, Gas Stations, Gas by Price, Banks/ATMs, WiFi Spots, Parking Lots, Hotels & Motels, Movie Theaters**, etc.
- **Maps & Traffic** provides access to a 2D map of your current location, access to real-time traffic information, and other additional features.
- **Share & More** offers additional options, such as sharing your location with contacts, creating and storing My Favorites locations, accessing the product tour, looking for movies and movie theaters, and setting detailed application preferences.

Note: For more information about Sprint Navigation powered by TeleNav, visit www.sprint.com/navigation.


Getting Driving Directions

The built-in GPS hardware (when enabled) allows you to get driving directions to selected locations or establishments based on your current location.

Using a Physical Address

1. Press  and tap  >  > **Drive To** > **Address**.
2. Manually enter the new address and receive driving directions from the GPS network.
– or –

Tap **Say It** to place a call to the TeleNav™ operator where you will speak the desired address. This is similar to calling 411 for directory assistance. (A fee may be incurred.)

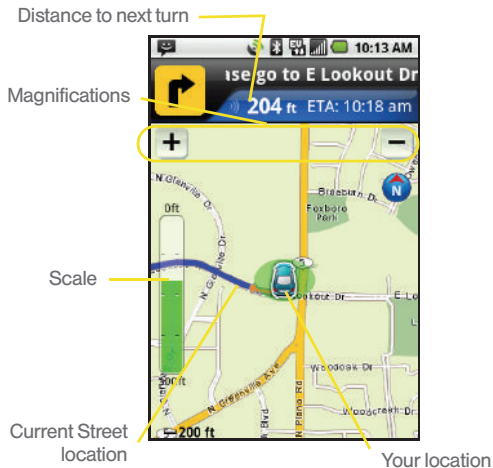

3. Tap **Address** and then enter information (Address, City, State/ZIP, and Country) into any of the address fields.

4. Tap **Done > Get Route** to initiate your search. If prompted to select from a list of matches, tap the correct address.

5. Follow both the onscreen and audio directions.


After you enter the location and receive driving directions, you can alter the information being displayed by using one of three other driving options: **Traffic**, **Summary**, and **Search**.

To receive turn by turn directions (2D):





1. Press  and tap  >  > **Drive To > Address**.

Note: A 2D map is a flat representation of your projected driving directions. A 3D map represents the driving directions with a representation of depth.

2. Enter the physical address information, and tap **Done**.




3. Press  and tap **Summary** to receive a detailed turn by turn description for navigating to your desired location.

To search nearby locations based on type:

1. Press  and tap  >  > **Drive To > Address.**
2. Enter the physical address information, and tap **Done.**
3. Press  and tap **Search** to search for a location based on a category such as Food/Coffee, etc.

Using a Local Business Category

The Transform can also cross-reference your current location with local business and points of interest, such as Grocery Stores, Gas Stations, Wi-Fi Spots, Malls, Hospitals, etc.

1. Press  and tap  >  > **Drive To > Businesses.**
2. Enter the physical address information, and tap **Done.**

3. Tap the **Category** field and then choose from one of the available category entries by touching an onscreen entry such as: **Food/Coffee, Gas Stations, Gas by Price, Banks/ATMs, WiFi Spots, Hospitals, etc..**




– or –

Enter a keyword into the **Where** field to begin retrieving matches. Once you see a matching business name, touch the entry.

- Entries with more than one available category (a subcategory) appear with an adjacent gray arrow. These entries can be expanded and then closed.

4. Tap **Search** to store your information and begin the search.
5. Tap a matching entry based on star ratings and distances.

To search for the nearest gas station in your area:





1. Press  and tap  >  > **Drive To > Businesses > Category > Gas Stations.**
2. Tap **Search** to begin the search.

3. Tap an entry from the list to display a new route to the selected gas station.

Creating a My Favorites Location





Once you have begun using TeleNav GPS Navigator to find your destination, you can then either recall those locations and add them to your list of favorite destinations or create a new entry from one of the available location categories (Address, Business, Airport, or Contacts).

To create a My Favorites location from a Recent Place:




1. Press  and tap  >  > **Drive To** > **Recent Places**.
2. Use the directional arrow keys to highlight a recent place from the list.
3. Press  and tap **More** > **Save as Favorite**.
 - **Save as Favorite:** to save the current location to your My Favorites list.

Sharing a Recent Location with Others

Recently queried locations can be saved to your My Favorites list and also shared with other cellular devices.

1. Press  and tap  >  > **Drive To** > **Recent Places**.
2. Use the directional arrow keys to highlight a recent place from the list.
3. Press  and tap **Share Address**.
4. Tap the **Send To:** field and then enter a mobile number or email address.
5. Tap **Send Now** to complete the delivery process.

Configuring Your Navigation Preferences

1. Press  and tap  >  > **Share & More** > **Preferences**.

2. Touch an entry to change its current setting:

- **General:** allows change general settings, including:

- **First Name/Last Name:** allows you to alter the current first and last name registered with the service, as well as email address.
- **Email:** allows you to create an associated email account for this application.
- **Region:** allows you to assign a current region. Default is **North America**.
- **Language:** allows you to assign a current language. Default is **English(US)**.
- **Distance Units:** allows you to alter the descriptions used for distances: **Km/Meters** or **Mi/Ft**.
- **Tips:** allows you to display onscreen tips: **Always On** or **Always Off**.
- **GPS Source:** allows you to assign a current GPS connection source. Default is **Internal**.
- **Exit after (minutes):** assigns the default application timeout. This is the timeout interval when no activity is detected: **Never**, **5**, **10**, **20**, or **30**.

- **Init Volume:** allows you to alter the initial volume level for the readouts: **Very Soft**, **Soft**, **Normal**, **Loud**, or **Very Loud**.

- **Map Colors:** allows you to alter the appearance of the onscreen map: **Daytime**, **Nighttime**, or **Auto**.

- **Navigation:** lets you change navigation settings, including:

- **Route Style:** allows you to choose the method which is used to provide you directions from Point A to Point B. The default is **Always use fastest**.
- **Avoid:** allows you to setup obstacles that should be avoided when determining travel routes: **HOV Lanes**, **Tools**, and **Traffic Delays**. Tap **Done** to set these parameters.
- **Moving Maps:** allows you to setup a preferred traffic display view: **2D Maps** or **3D Maps** (default).
- **Backlight:** allows you to assign the backlight settings: **On**, **Off**, or **On at Turns**.




- **Traffic Alerts:** allows you to setup a traffic alert notification when these appear on your current travel route. Choose from **On** or **Off**.
- **Navigation Audio:** lets you change the audio read out given during your navigation session:
 - **Settings:** allows you to setup the level of detail used for the directions when spoken: **Full Audio**, **Instructions Only**, or **No Audio**.
 - **Language:** allows you to select the language used for the directions when spoken: **Sara (English US)** (default) or **Maria (Spanish)**.
 - **During Phone Call:** allows you to setup if directions are spoken during a phone call: **Suspend** (default) or **Play**.

Launching the Product Tour

- Press  and tap  >  > **Share & More** > **Product Tour**.

Navigation

Another Google Maps navigation application is available on your device. It uses your current location (provided by GPS communication to your device) to provide various location-based services.

1. Press  and tap  >  (**Navigation**).
2. Read the onscreen disclaimer and tap **Accept**.
3. Choose from the following onscreen options:
 - **Speak Destination** to use the voice recognition feature to search for matching locations in your area.
 - **Type Destination** to manually enter a destination address (via either QWERTY or onscreen keyboard).
 - **Contacts** to receive turn-by-turn directions to the address stored for a selected Contacts entry.
 - **Starred Items** to obtain directions to locations that have been starred within Google maps (maps.google.com).

Section 4

***Safety and Warranty
Information***



4A. Important Safety Information

- ◆ General Precautions (page 196)
- ◆ Maintaining Safe Use of and Access to Your Phone (page 197)
- ◆ Using Your Phone With a Hearing Aid Device (page 198)
- ◆ Caring for the Battery (page 200)
- ◆ Radio Frequency (RF) Energy (page 201)
- ◆ Owner's Record (page 203)
- ◆ User Guide Proprietary Notice (page 203)

This phone guide contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the bottom portion of your phone where the internal antenna is located while using the phone.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

Note: For the best care of your phone, only Sprint-authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

Maintaining Safe Use of and Access to Your Phone

Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Tip: Purchase an optional hands-free accessory at your local Sprint Store, or call Sprint at 1-866-866-7509. You can also dial # 2 2 2 on your phone.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in healthcare facilities, and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your Sprint invoice.

Please Note the Following Information When Using Your Handset

1. WARNING REGARDING DISPLAY

- The display on your handset is made of glass or acrylic and could break if your handset is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

2. WARRANTY DISCLAIMER: PROPER USE OF A TOUCH SCREEN HANDSET

- If your handset has a touchscreen display, please note that a touchscreen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touchscreen may damage the tempered glass surface and void the warranty. For more information, please refer to the "4B. Manufacturer's Warranty" on page 204.

Using Your Phone With a Hearing Aid Device

A number of Sprint phones have been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones that have been rated have a label located on the box. **Your SPH-M920 has an M4 and T3 rating.**

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise; even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the

better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

Note: New Technologies, Including Wi-Fi

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be newer wireless technologies (including Wi-Fi) used in this phone that have not been tested for use with hearing aids.

Hearing aid devices may also be measured for immunity to interference noise from wireless phones and should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.



Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for "excellent use." This is synonymous for T ratings.

Sprint further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after purchasing your phone, promptly return it to the store within 30 days of purchase. (A restocking

fee may be applied to exchanges. Visit www.sprint.com/returns for details.) More information about hearing aid compatibility may be found at: www.fcc.gov, www.fda.gov, and www.accesswireless.org.

Getting the Best Hearing Device Experience With Your Phone

To further minimize interference:

- Set the phone's display and keyboard backlight settings to ensure the minimum time intervals.
 1. Press  >  and tap **Settings > Sound & display > Brightness** or **Screen timeout**.
 2. Tap the minimum time interval setting.
- Position the phone so the internal antenna is farthest from your hearing aid.
- Move the phone around to find the point with least interference.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire, or exploding. It

appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Sprint is not aware of similar problems with Sprint phones resulting from the proper use of batteries and accessories approved by Sprint or the manufacturer of your phone. Use only Sprint-approved or manufacturer-approved batteries and accessories found at Sprint Stores or through your phone's manufacturer, or call 1-866-866-7509 to order. They're also available at www.sprint.com — click **Accessories**. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.

- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:
 - Less than one month:
-4° F to 140° F (-20° C to 60° C)
 - More than one month:
-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Li-Ion) Batteries

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

For safe disposal options of your Li-Ion batteries, contact your nearest Sprint authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Radio Frequency (RF) Energy

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watt to 0.2 watt in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this

updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use a Sprint-supplied or Sprint-approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least **7/16 inch (1.5 centimeters)** from your body when transmitting. Use of non-Sprint-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC website at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR value corresponds to the relative amount of RF energy absorbed into the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than

the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the SPH-M920 are:

Cellular CDMA mode (Part 22):

Head: 0.75 W/kg; Body-worn: 0.82 W/kg

PCS mode (Part 24):

Head: 0.73 W/kg; Body-worn: 0.71 W/kg

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines.

FCC ID number: A3LSPHM920.

More information on the phone's SAR can be found from the following FCC website: <http://www.fcc.gov/oet/ea/>.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the direction of the internal antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

T9 Text Input is licensed by Nuance Communications, Inc. and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

User Guide template version 9a_FM (April 2009)

Owner's Record

The model, regulatory, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This is helpful if you need to contact us about your phone in the future.

Model: Samsung Transform™

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

5,267,262	5,416,797	5,506,865	5,544,196
5,657,420	5,267,261	5,414,796	5,504,773
5,535,239	5,600,754	5,778,338	5,228,054
5,337,338	5,710,784	5,568,483	5,659,569
5,490,165	5,511,073		

4B. Manufacturer's Warranty

◆ Manufacturer's Warranty (page 204)

Your phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your phone, please visit www.sprint.com or call Sprint Customer Service at **1-888-211-4727**.

Note: In addition to the warranty provided by your phone's manufacturer, which is detailed on the following pages, Sprint offers a number of optional plans to cover your equipment for non-warranty claims. **Sprint Total Equipment Protection** provides the combined coverage of the **Sprint Equipment Replacement Program** and the **Sprint Equipment Service and Repair Program**, both of which are available separately. Each of these programs may be signed up for within 30 days of activating your phone. For more details, please visit your nearest Sprint Store or call Sprint at **1-800-584-3666**.

Manufacturer's Warranty

STANDARD LIMITED WARRANTY

What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case	90 Days
Other Phone Accessories	1 Year

What is Not Covered?

This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, neglect, unusual physical, electrical or electromechanical stress, or defects in appearance, cosmetic, decorative or structural items, including framing, and any non-operative parts unless caused by SAMSUNG; (b) defects or damage resulting from excessive

force or use of a metallic object when pressing on a touch screen; (c) equipment that has the serial number or the enhancement data code removed, defaced, damaged, altered or made illegible; (d) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (e) malfunctions resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (f) defects or damage from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (g) defects or damage from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake, or from exposure to weather conditions, or battery leakage, theft, blown fuse, or improper use of any electrical source; (h) defects or damage caused by cellular signal reception or transmission, or viruses or other software problems introduced into the Product; (i) any other acts which are not the fault of SAMSUNG; or (j) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations?

During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the original date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are The Limits On Samsung's Warranty/liability?

SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED

WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED

WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional

statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, LLC

1301 E. Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG

Phone: 1-888-987-HELP (4357)

©2010 Samsung Telecommunications America, LLC. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice. [021710]

End User License Agreement for Software

IMPORTANT. READ CAREFULLY: This End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, "online" or electronic documentation ("Software"). BY CLICKING THE "I ACCEPT" BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE "I ACCEPT", AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE

THE SOFTWARE), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS IN THIS EULA, YOU MUST CLICK THE "DECLINE" BUTTON, DISCONTINUE USE OF THE SOFTWARE.

1. GRANT OF LICENSE. Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.

2. RESERVATION OF RIGHTS AND OWNERSHIP. Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual property laws and treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.

3. LIMITATIONS ON END USER RIGHTS. You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative works

based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.

4. CONSENT TO USE OF DATA. You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may use this information solely to improve its products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.

5. UPGRADES. This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.

6. SOFTWARE TRANSFER. You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the

transfer, the end user receiving the Software must agree to all the EULA terms.

7. EXPORT RESTRICTIONS. You acknowledge that the Software is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.

8. TERMINATION. This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you shall cease all use of the Software and destroy all copies, full or partial, of the Software.

9. DISCLAIMER OF WARRANTIES. You expressly acknowledge and agree that use of the Software is at your sole risk and that the entire risk as to satisfactory quality, performance, accuracy and effort is with you. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE SOFTWARE IS PROVIDED "AS IS" AND WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND SAMSUNG AND ITS LICENSORS (COLLECTIVELY REFERRED TO AS "SAMSUNG" FOR THE PURPOSES OF SECTIONS 9, 10 and 11) HEREBY DISCLAIM ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE SOFTWARE, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, OF SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, OF

FITNESS FOR A PARTICULAR PURPOSE, OF RELIABILITY OR AVAILABILITY, OF ACCURACY, OF LACK OF VIRUSES, OF QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE, THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE SOFTWARE WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY SAMSUNG OR A SAMSUNG AUTHORIZED REPRESENTATIVE SHALL CREATE A WARRANTY. SHOULD THE SOFTWARE PROVE DEFECTIVE, YOU ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON APPLICABLE STATUTORY RIGHTS OF A CONSUMER, SO THESE EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU.

10. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL SAMSUNG BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, OR FOR LOSS OF PROFITS, LOSS OF DATA, BUSINESS INTERRUPTION, OR FOR ANY PECUNIARY DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO YOUR USE OR INABILITY TO USE THE SOFTWARE, THE

PROVISION OF OR FAILURE TO PROVIDE SUPPORT OR OTHER SERVICES, INFORMATION, SOFTWARE, AND RELATED CONTENT THROUGH THE SOFTWARE OR OTHERWISE ARISING OUT OF THE USE OF THE SOFTWARE, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS EULA, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF LIABILITY FOR PERSONAL INJURY, OR OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION MAY NOT APPLY TO YOU.

11. LIMITATION OF LIABILITY. Notwithstanding any damages that you might incur for any reason whatsoever (including, without limitation, all damages referenced herein and all direct or general damages in contract or anything else), the entire liability of Samsung under any provision of this EULA and your exclusive remedy hereunder shall be limited to the greater of the actual damages you incur in reasonable reliance on the Software up to the amount actually paid by you for the Software or US\$5.00. The foregoing limitations, exclusions and disclaimers (including Sections 9, 10 and 11) shall apply to the maximum extent permitted by applicable law, even if any remedy fails its essential purpose.

12. U.S. GOVERNMENT END USERS. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

13. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

Important: Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Samsung Telecommunications America, LLC:

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG (726-7864)

Phone: 1-888-987-HELP (4357)

Important: If you are using a handset other than a standard numeric dialpad, dial the numbers listed in brackets.

©2010 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Index

Numerics

3-Way Call 55, 146

A

Activation 4

Adapter

microSD Card 113

Add 2 Sec Pause 52

Add Account 68

Add to Home screen 35

Add Wait 52

Airplane Mode 72

Activating 72

Deactivating 72

Alarm

Customizing the Onscreen

Clock 102

Delete an Existing Alarm 102

Disable an Existing Alarm

102

Hiding the Onscreen Clock
102

Alarm Clock 101

Creating a New Alarm 101

Amount to Synchronize 69

Android Market 174

Accessing 174

Downloads 104

Installing a Google

Application 174

Launching a Google

Application 175

My Downloads 175

Reinstalling a Google

Application 175

Selecting a Google

Application 174

Android OS

Update 105

Animation 63

Answering Calls 52

Applications 32

Sprint 175

Applications Tab

Using 31

Assigning Pictures 123

Audible Touch Notifications 61

Audible selection 61

Audible touch tones 61

SD card notifications 61

Auto Brightness 64

Auto-Rotate Feature 39

Auto-sync

Enabling 67

B

Back Key 25

Backing Up Text Messages

104

Backlight 63

Keyboard 64

Backup Your Data 103

- Battery 21–24
 - Capacity 21
 - Charging 22
 - Disposal 201
 - Extending Battery Life 24
 - Installing 21
 - Bluetooth 127–132
 - Accessing the Paired
 - Device's Settings 131
 - Changing Your Bluetooth
 - Name 129
 - Deleting Paired Devices 130
 - Device Name 129
 - Disconnecting Paired
 - Devices 130
 - Discoverable 129
 - Making Your Device Visible
 - 129
 - Pairing 129
 - Scan for Devices 129
 - Scanning for Bluetooth
 - Devices 129
 - Sending Items 131
 - Settings 128
 - Turning Off 127
 - Turning On 127
 - Brightness 64
 - Browser
 - Adding Bookmarks to Home
 - Screen 160
 - Clear cache 157
 - Clear history 157
 - Cookies 157
 - Creating Bookmarks 159
 - Creating Bookmarks from
 - other Tabs 159
 - Creating Website Settings
 - 158
 - Default zoom 156
 - Enable JavaScript 157
 - Enable Plug-ins 157
 - Home Page 158
 - Landscape-Only Display 157
 - Navigation 156
 - Page Settings 156
 - Passwords 158
 - Pop-up Windows 157
 - Privacy Settings 157
 - Resetting to Default 158
 - Security Settings 158
 - Select Text 155
 - Selecting Onscreen Text 156
 - Text Size 156
 - Browser Menu 154–160
- C**
- Calculator 102
 - Advanced panel 102
 - Calendar 95–100
 - Adding Events 95
 - Event Reminders 99
 - Call
 - Add call 55
 - Conference 55
 - Merge Calls 55
 - Three-way call 55
 - Call Forwarding 147

- Call Guard 149
- Call Log 81–85
 - Altering a Number 85
 - Erasing 85
 - Making a Call 84
 - Options 82
 - Saving a Number 84
- Call Waiting 145
- Caller ID 145
 - Spoken 110
- CallerID
 - Tect-to-Speech 110
- Calling in Lock Mode 77
- Camcorder
 - Flash Mode 125
 - Gallery 124
 - Gallery Options 125
 - Recording Mode 125
 - Settings 124, 125
 - Share 126
 - Video Duration 125
 - Video Quality 125
- White Balance 125
- YouTube 126
- Camcorder Gallery
 - Capture Picture 126
 - Capture Video 126
 - Options 125
 - Settings 126
- Camera 118–126
 - see also Pictures
 - Camera mode 119
 - Flash Mode 119
 - Front Camera 119
 - Gallery 119, 120
 - Gallery Options 121
 - Image Settings 122
 - Picture Quality 120
 - Picture Size 120
 - Rear Camera 119
 - Settings 119
 - Share 122
 - Store location in pictures 120
 - Taking Pictures 118
- Camera Gallery
 - Capture Picture 121
 - Capture Video 121
 - Confirm deletions 121
 - Display size 121
 - Options 121
 - Repeat slideshow 122
 - Settings 121
 - Shuffle slides 122
 - Slideshow interval 121
 - Slideshow transition 122
 - Sort order 121
- Cannot install this Hardware 115
- Clear Cache 79
- Clear Defaults 79
- Contact Icon 123
- Contacts 86–94
 - Adding a Number 92
 - Adding an Entry 86
 - Adding Entries to Your Favorites 94

- Assigning a Picture 93
- Assigning a Picture from Device 93
- Assigning a Picture from online Gmail 94
- Contact Menu Options 89
- Deleting Entries 94
- Dialing From 58
- Editing 91
- Editing a Number 92
- Entry Options 90
- Sending Via Bluetooth 131
- Sending via Bluetooth 93
- Sending via Email 93
- Sending via Gmail 93
- Context Menus 41
- Corporate Email 169
 - Account Management Settings 68
 - Account Settings 172
 - Account Synchronization 68
 - ActiveSync Settings 172

- Adding a Sync Account 68
- Amount to Synchronize 173
- Backup 103
- Celendar Event Synchronization 95
- Check Frequency 172
- Composing 171
- Configuration 172
- Configuring Settings 172
- Creating a Signature 173
- Creation 169
- Deleting 171
- Email Signature 70, 169
- Opening 170
- Replying 171
- Signature 173
- Sync Calendar 173
- Sync Contacts 173

D

- Data Roam Guard 150

- Data Services 151–179
 - see also Web
 - Launching the Web 152
 - Password 8
 - User Name 151
- Date & Time 65
 - Automatic 65
- Device (illus.) 13
- Device Settings 60–80
 - Airplane Mode 72
 - Display Settings 63–66
 - Location Settings 66
 - Sound Settings 60–63
 - TTY Use 72
- Device Updates 103, 105, 106
- Dialing Options 52
- Disconnecting a Bluetooth Device 130
- Display Screen 17, 64
- Downloads 175

E

- Edit Sync Groups
 - Assigning a Picture to Device 94
- Email 162
 - Account Settings 168
 - Composing 167
 - Creation 166
 - Icons/Shortcuts 163
 - Notifications 163
 - Opening 167
 - Refresh 167
- Email Check Frequency 69, 168
- Emergency call 77
- Emergency Numbers 53
- Emoticons 17, 47
- End-of-Call Options 56
- Enhanced 911 (E911) 54
- Entering Text 42–50
 - ABC Mode 44

Additional QWERTY Text

- Options 46
- Emoticons 50
- Numbers 45, 49
- Onscreen Keyboard 42
- QWERTY Keyboard 46
- Selecting Mode 43
- Smileys 49, 50
- Symbols 45, 49
- Erasing Device Content 79
- Event Reminders 99
- Events
 - Erasing a Day's 100
 - Erasing All Events 100
- Exchange Account 169
- Exchange Mail
 - Backup 103

F

- Factory data reset 80
- Favorites 58, 94
 - Assigning 59
- FCC Notice 202

Flight Mode 72

Folders

- Creating and Managing 37
- Forgot My Unlock Pattern 76

G

Gmail 88

- Accessing Email Messages 165
- Account Settings 166
- Assigning a Contacts Image 94
- Backup 103
- Create and Send 164
- Creation 163
- Deleting 166
- Opening 164
- Refresh 164
- Replying 165
- Signature 165, 166
- Viewing a New Email 165

- Google
 - Account Management
 - Settings 68
 - Account Signin 50
 - Account Synchronization 67
 - Adding a Sync Account 67
 - Creating an Account 50
 - Synchronizing an Account 67
 - Google Applications
 - Backup 104
 - Google Maps 185
 - Enabling the GPS 186
 - Find My Location 186
 - Launching 186
 - Searching 186
 - Where Am I? 186
 - Google Search 27
 - Google Search Settings 70
 - Google Talk 33
 - GPS Satellites
 - Usage 66
 - GPS Services 185
- H**
- Haptic Feedback 62
 - History 81
 - Home Key 25
 - Home Screen
 - Adding Web Bookmarks 160
 - Customizing 34
 - Extended Screens 29
 - Overview 28
 - Homepage
 - Creating 159
- I**
- ID Pack 5
 - Getting a New Pack 7
 - Installation of First Pack 6
 - Installing Your First ID Pack 6
 - Overview 5
 - Sprint ID 5
 - Switching Packs 6
- ID**
- ID wallpapers 64
- In-Call**
- In-Call Options 55
- Insert**
- Insert Smiley 49
- International**
- International Dialing 71
 - International Dialing Code
 - Changing 71
- Internet**
- Internet
 - see Web
 - Internet Email
 - Adding Additional Accounts 168
- K**
- Key Functions 13
 - Keyboard Backlight 64
 - Keyboard Timeout 64
- L**
- Language
 - Settings 66
 - Location Mode
 - Activating 185
 - Location Settings 66

- Lock Mode
 - Calling 77
- Locking Device 75
- Locking Your Device Screen 74

M

- Making Calls 51
- Market
 - Downloads 175
- Media volume 61
- Memory
 - Clearing Application Cache 79
 - Internal phone storage 77, 78
 - Management 77
 - SD card 77
 - Uninstalling Third-Party Applications 79
- Menu i
 - Navigation 28

- Menu Key 24
 - Add 24
 - Notifications 25
 - Search 25
 - Settings 25
 - Sprint ID 25
 - Wallpaper 24
- Menu Navigation 39
 - Using Your Fingers 40
 - Using your Keyboard 40
- Message
 - Settings 144
- Message Threads
 - Deleting 144
- Messaging
 - Email 162
 - Multimedia Messaging 141
 - Text Messaging 139
 - Visual Voicemail 134
- microSD 111, 112
 - Available space 78
 - Before You Begin 114

- Total space 78
- Troubleshooting Connection 114
- microSD Card 111–117
 - Adapter 113
 - Formatting 116
 - Re-insertion 112
 - Removal 111
 - Viewing Memory 116
 - Write Protection 113
- Missed Calls 53
- MMS Text Messaging 141
- Multimedia Messaging 141
 - Composing 141
 - Opening 143
 - Replying to 143
 - Settings 144
- Music 181–183
 - Assigning a New Ringtone 183
 - Creating a Playlist 182
 - Getting Started 180

- Player 182
- Playlist 182
- Streaming Music 183
- Using a Song as a Ringtone 183

- My Driver 177

N

NASCAR

- Community 178
- Exit 178
- Fantasy 178
- FanZone 178
- Leaderboard 177
- Miss Sprint 177
- News & Alerts 178
- Point Standings 177
- Race Recap 177
- Settings and Help 178
- SPEED 177
- Stats/Sched 177
- Videos 177

- Navigating the Menus 28

- Navigating the Web 153
- Navigation 194
- Non-Market Installations 74
- North American Dialing 71

O

- Orientation 39, 63
- Out of Office Settings 69
- Outlook

- Account Management
 - Settings 68
 - Synchronizing 68

- Outlook Email 169
- Owner's Record 203

P

- Pairing Bluetooth Devices 129
- Phone Book
 - see Contacts
- Phone Number
 - Displaying 42
 - Finding 58
 - Saving 57
- Phone vibrate 62

- Picasa 122
- Picture ID 123
- Pictures 64
 - Sending Via Bluetooth 131
 - Taking Pictures 118
- Plus Code Dialing 59, 71
- PRL Updates
 - Downloading 106
- Profile Updates
 - Downloading 105

Q

- Quick Search 25
 - Using Text 26

R

- Recently-Used Applications
 - Accessing 38
- Resetting Your Device 80
- Ringer volume 61
- Ringers
 - Setting for Messages 61
 - Setting for Notifications 61
 - Setting for Voice Calls 60

- Silence All 62
- Types 60
- Vibrate 62
- Roaming 147–150
 - Call Guard 149
 - Data Roam Guard 150
 - Roam Mode 148
 - System Select 149
- Running Services
 - Managing 78
 - Stop Service 78

S

- Safety Information 196–203
- Saving a Phone Number 57
- Screen Orientation 63
- Screen Timeout 63
- Search Key 25
- Searching
 - Using Text 26
 - Using Voice 27
- Security 74–77
 - Menu 74

- Select Locale 66
- Set Wallpaper 65
- Setting the Language
 - English 66
 - Español 66
- Settings 60–80
- Shortcuts
 - Adding via Home screen 35
 - Creating 34
 - Deleting 36
 - Via Applications Tab 35
- Signature 70, 166, 169, 173, 174
- Silence All 62
- Silent mode 63
- Slideshow
 - Interval 121
 - Repeat 122
 - Transition 122
- Smiley 17
- Smileys 47
- SMS Text Messaging 139

- Software Updates
 - Downloading 103
 - Firmware 103
- Speed Dialing 58
 - Favorites 58
- Sprint Football Live
 - Draft 178
 - Exit 179
 - Favorite Team 178
 - Help/About 179
 - News 179
 - Team Pages 179
 - Tweets 179
- Sprint ID 5
- Sprint Service
 - Account Passwords 8
 - Activation 4
 - Operator Services 10
 - Sprint 411 10
- Sprint TV 181
 - Getting Started 180
- Status bar 28

- Stop 78
- Stop Service 78
- Streaming Music 183
- Suggested Word Choices 44
- Sync Calendar 173
- Sync Contacts 173
- Synchronizing Accounts 67
- System Update 104

T

- Taking Pictures 118
- Talk 33
- TeleNav GPS Navigator
 - Configuring Preferences 192
 - Creating a My Favorites Location 192
 - Drive To 188
 - Getting Driving Directions 189
 - Launching the Product Tour 194
 - Loading 187
 - Maps & Traffic 189

- Overview 187
- Registering 188
- Search 189
- Search for Nearest Gas Station 191
- Share & More 189
- Sharing a Recent Location 192
- Turn by Turn Directions 190
- Using 188
- Using a Local Business Category 191
- Using a Physical Address 189

Text

- Selecting on Web Page 156
- Text Entry
 - see Entering Text 46
- Text Message
 - Backup 104
- Text Messaging 139
 - Settings 144

- Text-to-Speech 109
 - Language 110
 - Settings 109
- Third-Party Applications
 - Uninstalling 79
- Three-Way Calling 146
- TRS 73
- TTY Use 72
- Turning Your Device On and Off 20
- TV 181

U

- Unknown 74
- Unknown Installations 74
- Unlock Pattern 75
 - Changing the Pattern 76
 - Configuring Settings 76
 - Creating 75
 - Forgotten Your Pattern 76
 - Require pattern 76
 - Use visible pattern 76

Unlocking Your Device Screen
74

Unpairing a Bluetooth Device
130

Update Android 105

Update Firmware 103

Updating Firmware
OTA 104

Updating Your Device
Firmware 103

Updating Your PRL 106

Updating Your Profile 105

Use GPS satellites 186

Use Wireless Networks 66
Activating 185

User Name 151
Updating 152

Using Favorites 58

V

Verbal Readout 110

Vibrate 62
Haptic Feedback 62

Videos

Recording 124

Settings 126

Visible Passwords 77
Disable 77

Visual Voicemail

Changing your Main
Greeting 137

Editing the From Name 138
Enabling the Speakerphone
137

Options 136

Setting Up 134

Settings 136

Voice Dialer 107

Activation 107

Calling a Number 108

Making a Call 108

Voice Dialing 108

Voice Input 43

Voice Search 14, 25, 27
Additional Functions 27

Voicemail

Notification 138

Retrieving 138

Setting Up 7

Volume

Media 61

Ringer 61

W

Wallpaper 64, 123
Assigning from Picture 123
Home screen 123

Wallpaper Gallery 64

Warranty 204

Web 151–160

see also Data Services

Browser Menu 154–160

Email 162

Going to a Web page 154

Launching 152

Navigating 153

User Name 151

Web Bookmarks 159

Wi-Fi

Connecting to a Network

161

Manually Scanning 161

Settings 161, 162

Status Indicators 161

Turning Off 160

Turning On 160

Window Animation 63

Wireless Networks 66

Write Protection 113

Y

YouTube 184