




RPW120X

Electric Pressure Washer

OPERATOR'S MANUAL (Original Instructions)

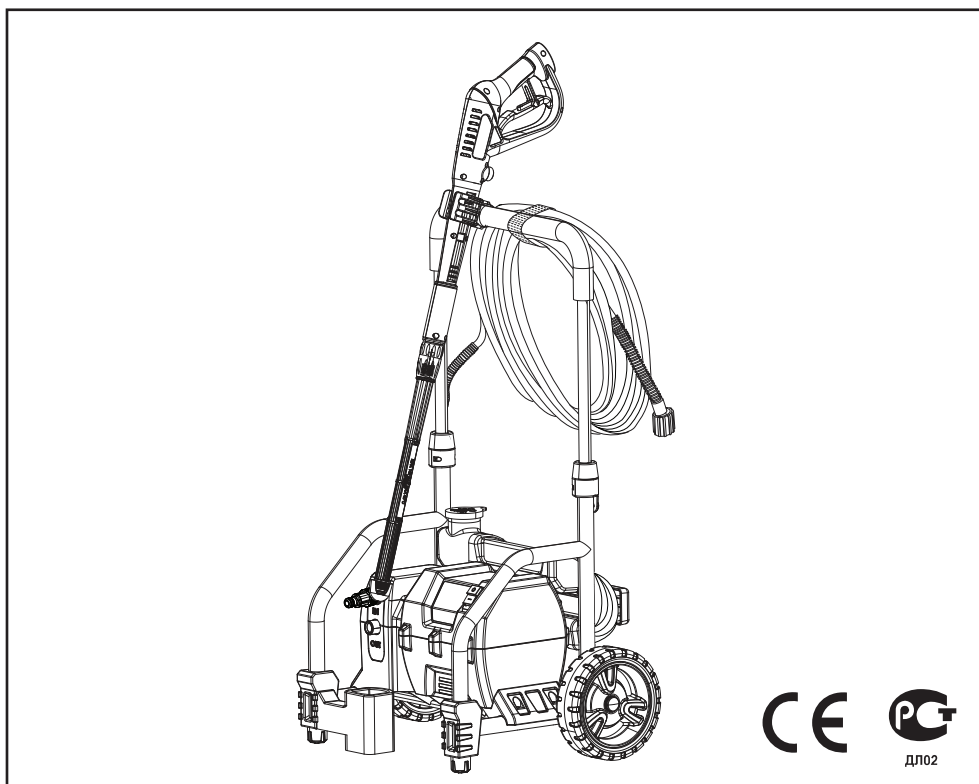

WARNING! To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

Thank you for your purchase.

ENGLISH(Original Instructions)

INTENDED USE

- The cleaner is intended only for the cleaning of vehicles, boats, buildings, etc, by the removal of stubborn dirt using clean water and chemical detergents. .
- For domestic use only, not for professional use, and only for operation at temperatures above 0° C .

INTRODUCTION

This product has many features for making its use more pleasant and enjoyable. Safety, performance, and dependability have been given top priority in the design of this product making it easy to maintain and operate.

When using power tools, basic safety precautions should always be taken to reduce the risk of fire, electric shock and personal injury. Also, please read and heed the advice given in the additional safety instructions.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT SAFETY INSTRUCTIONS



WARNING:

Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

- Learn the machine's applications and limitations as well as the specific potential hazards related to this tool by studying this manual. **Follow the maintenance instructions specified in this manual.**
- Never operate the pressure washer with any guard or cover removed or damaged.
- Do not operate the product while under the influence of drugs, alcohol, or any medication.
- Do not wear loose clothing, gloves, neckties, or jewellery. They can get caught and draw you into moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Also wear protective hair covering to contain long hair. Wear footwear that will protect your feet and improve your grip on slippery surfaces.
- **Always wear safety glasses with side shields.**
- Don't overreach or stand on unstable support. Keep proper footing and balance at all times.



WARNING:

High pressure jets can be dangerous if subject to misuse. The jet must not be directed at persons, animals, electrical devices, or the machine itself.



WARNING:

When using power tools, basic safety precautions should always be taken to reduce the risk of fire, electric shock and personal injury.



WARNING:

This Appliance has been designed for use with the cleaning agent supplied or recommended by the manufacturer. The use of other cleaning agents or chemicals may adversely affect the safety of the appliance.



WARNING:

Don't use the appliance within range of persons unless they wear protective clothing

- The electric supply connection shall be made by a qualified electrician and comply with IEC60364-1.
- Only connect this machine only to a supply circuit protected by a residual current device (RCD) with a tripping current of not more than 30mA.
- Use only extension cords that have watertight connections and are intended for outdoor use. Use only extension cords having an electrical rating not less than the rating of the product. Examine extension cord before using and replace if damaged. Do not abuse extension cord and do not pull on any cord to disconnect. Keep cord away from heat and sharp edges. Always disconnect the extension cord from the receptacle before disconnecting the product from the extension cord.
- Do not direct the jet against yourself or others in order to clean clothes or foot-wear.
- Disconnect from the electrical power supply before carrying out user maintenance.
- To ensure appliance safety, use only original spare parts from the manufacturer or approved by the manufacturer.
- Do not use the appliance if a supply cord or important parts of the appliance are damaged, e.g. safety devices, high pressure hoses, trigger gun.

If an extension cord is used, the plug and socket must be of watertight construction



WARNING:

Inadequate extension cords can be dangerous.

ENGLISH(Original Instructions)



WARNING:

To reduce the risk of electrocution, keep all connections dry and off the ground. Do not touch plug with wet hands.

- To reduce the risk of injury, High pressure cleaners shall not be used by children or untrained personnel. keep children and visitors away. All visitors should wear safety glasses and be kept a safe distance from work area.
- Use correct product. Don't force product or attachment to do a job it was not designed for. Don't use it for a purpose not intended.
- Use only recommended accessories. The use of improper accessories may cause risk of injury.
- Never leave product running unattended. Turn power off. Don't leave product until it comes to a complete stop.
- **Keep the motor free of grass, leaves, or grease** to reduce the chance of a fire hazard.
- Keep product dry, clean, and free from oil and grease. Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any solvents to clean product.
- Check the work area before each use. Remove all objects such as rocks, broken glass, nails, wire, or string which can be thrown or become entangled in the machine.
- Do not use product if switch does not turn it off. Have defective switches replaced by an authorized service centre.
- Avoid dangerous environments. Don't expose to rain. Keep work area well lit.
- Do not abuse the cord. Never use the cord to carry the product or to disconnect the plug from an outlet. Keep cord away from heat, oil, sharp edges, or moving parts. Replace damaged cords immediately. Damaged cords increase the risk of electric shock.
- **Inspect extension cords periodically and replace if damaged.** Keep handles dry, clean, and free from oil or grease.
- **Before starting any cleaning operation**, close doors and windows. Clear the area to be cleaned of debris, toys, outdoor furniture, or other objects that could create a hazard.
- Do not use acids, alkalines, solvents, flammable material, bleaches, or industrial grade solutions in this product. These products can cause physical injuries to the operator and irreversible damage to the machine.
- Keep the motor away from flammables and other hazardous materials.
- Check bolts and nuts for looseness before each use. A loose bolt or nut may cause serious motor problems.

- **Before storing**, allow the motor to cool.
- When servicing use only identical replacement parts. Use of any other parts may create a hazard or cause product damage.
- **ONLY** use cold water.
- Make sure minimum clearance of 1 metre is maintained from combustible materials.
- **Connect pressure washer only to an individual branch circuit.**
- **Hold the gun and lance securely with both hands.** Expect the gun to move when the trigger is pulled due to reaction forces. Failure to do so could cause loss of control and injury to yourself and others.
- Save these instructions. Refer to them frequently and use them to instruct other users. If you lend someone this product, lend them these instructions also.



WARNING:

High pressure hoses, fittings and couplings are important for the safety of the appliance. Use only hoses, fittings and couplings recommended by the manufacturer.

ENGLISH(Original Instructions)

SYMBOLS

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
	Safety Alert	Indicates a potential personal injury hazard.
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watt	Power
min	Minutes	Time
~	Alternating Current	Type of current
no	No Load Speed	Rotational speed, at no load
	Class II Construction	Double-insulated construction
.../min	Per Minute	Revolutions, strokes, surface speed, orbits etc., per minute
	Wet Conditions Alert	Do not expose to rain or use in damp locations.
	Read The Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Eye Protection	Always wear safety goggles or safety glasses with side shields and, as necessary, a full face shield when operating this product.
	Risk of Injection	To reduce the risk of injection or injury, never direct a water stream towards people or pets or place any body part in the stream. Leaking hoses and fittings are also capable of causing injection injury. Do not hold hoses or fittings.
	Kickback	To reduce the risk of injury from kickback, hold the spray lance securely with both hands when the machine is on.
	Electric Shock	Failure to use in dry conditions and to observe safe practices can result in electric shock.
	Risk of Explosion	Fuel and its vapours are explosive and can cause severe burns or death.
	Risk of injury	Warning! Never point the gun to human, animals, the machine body, power supply or any electric appliances
	Do not connect to drinking water supply	Appliance not suitable for connection to the drinking water mains without backflow preventer.

ENGLISH(Original Instructions)

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER:	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION:	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	CAUTION:	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

SERVICE

Servicing requires extreme care and knowledge and should be performed only by a qualified service technician. For service we suggest you return the product to the nearest AUTHORIZED SERVICE CENTRE for repair. When servicing, use only identical replacement parts.



WARNING:

To avoid serious personal injury, do not attempt to use this product until you read thoroughly and understand completely the operator's manual. If you do not understand the warnings and instructions in the operator's manual, do not use this product. Call Ryobi customer service for assistance.



WARNING:

The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and, when needed, a full face shield.

SAVE THESE INSTRUCTIONS

ELECTRICAL

DOUBLE INSULATION

Double insulation means that exposed metal parts are isolated from the internal metal motor components with protecting insulation. Double insulated products do not need to be grounded.



WARNING:

The double insulated system is intended to protect the user from shock resulting from a break in the product's internal insulation. Observe all normal safety precautions to avoid electrical shock.

NOTE: Servicing of a product with double insulation requires extreme care and knowledge of the system

and should be performed only by a qualified service technician. For service, we suggest you return the product to your nearest authorized service centre for repair. Always use original factory replacement parts when servicing.

ELECTRICAL CONNECTION

This product has a precision-built electric motor. It should be connected to a **power supply that is 220-240 volts, 50 Hz, AC only (normal household current)**. Do not operate this product on direct current (DC). A substantial voltage drop will cause a loss of power and the motor will overheat. If the product does not operate when plugged into an outlet, double-check the power supply.

EXTENSION CORDS

See Figure 1.

The cross-section of any extension cables used must be proportional to their length, i.e. the longer the extension cable, the greater the cross-section; cables with a protection level of "IPX5" must be used.

Use the chart to determine the minimum wire size required in an extension cord.

Motor	Voltage	Extension cable up to 25m	Extension cable up to 50m
	220-240v	section 3 x 1.5mm ²	section 3 x 2.5mm ²



WARNING:

Keep the extension cord clear of the working area. Position the cord so that it will not get caught on lumber, tools, or other obstructions while you are working with a power tool. Failure to do so can result in serious personal injury.



WARNING:

Check extension cords before each use. If damaged replace immediately. Never use the product with a damaged cord since touching the damaged area could cause electrical shock resulting in serious injury.

ENGLISH(Original Instructions)

PRODUCT SPECIFICATIONS

PRODUCT SPECIFICATIONS

Description	Unit	RPW120X(RATED DESC.)
Rated voltage	V~/Hz	220-240/50
Rated Pressure (P)	Bar (Mpa)	100(10)
Allowable Pressure (Pmax)	Bar (Mpa)	140(14)
Power Rating	W	1800
Rated water flow (Q)	L/min	6.67
Maximum Water Inlet pressure (Pin max)	Bar (Mpa)	7(0.7)
Maximum Water Temperature	°C	40
Protection Degree	IEC 529	IP25
LWA (sound power level)	dB(A)	88.6; K=3dB(A)
LPA (sound pressure level)	dB(A)	75.8; K=3dB(A)
Vibration	m/s ²	0.851; K=1.5m/s ²

DESCRIPTION

Figure 2

1. On/Off switch
2. Gun storage
3. Gun/Lance
4. Detergent tank
5. Lance storage
6. Trigger lock-out
7. Trigger
8. Hose
9. Telescopic handle
10. Power cord storage

Figure 3

11. Hitch pin
12. Wheel
13. Axle

Figure 4

14. Handle assembly
15. Button
16. Collar

Figure 5

17. Lance connection
18. Locking collar
19. Adapter

Figure 6

20. High pressure hose

Figure 7

21. Water intake coupler
22. Pump outlet coupler

Figure 11

23. Spray nozzle

Figure 13

24. Handle release button

KNOW YOUR PRESSURE WASHER

See Figure 2.

The safe use of this product requires an understanding of the information on the product and in this operator's manual as well as a knowledge of the task you are attempting.

Before using this product, familiarize yourself with all operating features and safety rules.

DETERGENT TANK

Remove the cap from the detergent tank to add detergent to the pressure washer.

TRIGGER

Depressing this trigger allows you to dispense water at high pressure.

TRIGGER LOCK-OUT

The trigger lock-out prevents accidental use of the trigger.

ON/OFF SWITCH

This switch turns the pressure washer on and off.

ENGLISH(Original Instructions)

TELESCOPIC HANDLE

Lower the telescopic handle for convenient storage.

ASSEMBLY

UNPACKING

This product requires assembly.

- Carefully cut the box down the sides then remove the product and any accessories from the box.



WARNING:

This new product has been shipped in a partially assembled condition as described below.

If in doubt, call Ryobi Customer Service for assistance. Operation of a product that may have been improperly preassembled could result in serious personal injury.

- Inspect the product carefully to make sure no breakage or damage occurred during shipping.
- Do not discard the packing material until you have carefully inspected and satisfactorily operated the product.
- If any parts are damaged or missing, please call Ryobi Customer Service for assistance.



WARNING:

If any parts are damaged or missing do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury.



WARNING:

Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.



WARNING:

Do not connect to power supply until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.

INSTALLING THE WHEELS

See Figure 3.

- Locate the axles, hitch pins, and wheels.
- Slide the axle through the hole in the centre of the wheel.
- Lift the machine and slide the axle into the wheel mounting hole in the machine base as shown.
- Push the hitch pin into the hole on the end of the axle to secure the wheel assembly.

NOTE: The hitch pin should be pushed into the axle until the centre of the pin rests on top of the axle.

- Repeat with the second wheel.

ATTACHING THE HANDLE ASSEMBLY

See Figure 4.

- Line up the handle assembly with the holes.
- Depress the button on the handle assembly and insert into the holes on the pressure washer. Press down on the handle assembly until the button on the handle clicks into place.
- Lower both collars on the handle and rotate clockwise until secure.

ASSEMBLING THE GUN/LANCE

See Figure 5.

- Push the two ends of the gun/lance together so that the holes inside each end are aligned.
- Lower the locking collar and rotate counter clockwise to tighten securely.

CONNECTING HIGH PRESSURE HOSE TO GUN

See Figure 6.

- Insert the connector on the end of the high pressure hose collar into the gun.
- Slide the collar over the coupler turning the collar clockwise to tighten securely.
- Pull on the hose to be certain it is properly secured.

CONNECTING THE HIGH PRESSURE HOSE TO THE PUMP

See Figure 7.

- Insert the connector on the end of the high pressure hose collar into the pump outlet coupler.
- Slide the collar over the coupler turning the collar clockwise to tighten securely.
- Pull on the hose to be certain it is properly secured.

The TSS will activate when user releases the spray gun trigger and will automatically shut the unit off.

CONNECTING THE GARDEN HOSE TO THE PRESSURE WASHER

See Figure 7.

Before connecting the garden hose to the pressure washer:

- Run water through the garden hose for 30 seconds to clean any debris from the hose.
- Inspect the filter screen in the end of the pressure washer intake.
 - If the filter is damaged, do not use the machine until the screen has been replaced.

ENGLISH(Original Instructions)

- If the filter is dirty, clean it before connecting the garden hose to the machine.



CAUTION:

When connecting the appliance to the water supply mains (not public drinking water supply mains), please observe the local regulations of local boards or local water supplier.

To ensure that there is no feedback of contaminant into the water supply, the appliance must not be connected directly to the public drinking water supply mains.

If the appliance is connected to potable water mains, backflow prevention devices should be incorporated in or fixed to the water supply system. The installation should be accepted by local boards or water supplier and should be conducted by professional technical personnel. The backflow prevention devices should be appropriate to fluid categories and comply with the requirement to avoid back siphonage according to EN 60335-2-79/A2: 2007.

To connect the garden hose to the pressure washer:

- Uncoil the garden hose.

NOTE: There must be a minimum of 3 metres of unrestricted garden hose between the pressure washer intake and the garden tap.

- With the garden tap turned completely off, attach the end of the garden hose to the coupler on the pressure washer water intake. Tighten by hand, water that has flown through backflow preventers is considered to be non-potable.

HOW TO DRAW WATER FROM A WATER TANK, BUCKET, POND, ETC.

- **To draw water from a water tank, bucket, pond, etc. you must first get a suction hose kit, which is made up of a compatible hose and water filter. Ryobi recommends the Expand-it™ Suction Hose Kit.**
- Connect the suction hose to the water inlet on the pressure cleaner and drop the other end into a water tank, bucket, pond, etc. (Fig.14)
- Ensure your water container is full of water (Fig.15)
- Connect the power cord to an electricity source & turn on at power point. Make sure the high pressure nozzle is not connected & turn the unit on at the on/off switch. Press the trigger on the gun-the unit is ready for use once there is a constant water stream. (Fig.16)
- Connect the high pressure nozzle & press the hand trigger to begin cleaning. (Fig.17)

OPERATION

Applications

This pressure washer can be used for the purposes listed below:

- Removing dirt and mould from decks, cement patios, and walls.
- Cleaning cars, boats, motorcycles, outdoor furniture and barbeques.

ADDING DETERGENT TO THE PRESSURE WASHER

See Figure 8.

Use only detergents designed for pressure washers; household detergents, acids, alkalines, bleaches, solvents, flammable material, or industrial grade solutions can damage the pump. Many detergents may require mixing prior to use.

Prepare cleaning solution as instructed on the solution bottle.

- Disconnect pressure washer from power supply.
- Place pressure washer upright on a flat surface.
- Remove cap from detergent tank.
- Pour detergent into tank until it reaches the maximum fill level located on the unit.

NOTE: Use a funnel, if needed, to prevent accidental spilling of the detergent outside the tank. If any detergent is spilled during the filling process, make sure the unit is cleaned and dried before proceeding.

- Reinstall cap.

STARTING AND STOPPING THE PRESSURE WASHER

See Figure 9.



CAUTION:

Do not run the pump without the water supply connected and turned on.

- Connect the garden hose.
- Turn the garden hose on then squeeze the high pressure trigger to relieve air pressure. Once a steady stream of water appears, release the trigger.
- After ensuring the switch is in the OFF position, connect the pressure washer to the power supply.
- Press **ON (I)** on the switch to start the motor.
- To stop the motor, release the trigger and press **OFF (O)** on the switch.

USING THE GUN/LANCE

See Figures 10.

Attach 25° spray nozzle(green) to end of lance.

For the most effective cleaning, the spray nozzle should be between 20cm and 60cm from the surface to be cleaned. If the spray is too close it can damage the cleaning surface.

ENGLISH(Original Instructions)

NOTE: For greater control and safety, keep both hands on the unit at all times.

Several different methods of cleaning are available. Choose the method best suited for your cleaning project.

High Pressure Cleaning:

Squeeze the high pressure trigger on the gun. This will provide a spray of water at high pressure.

When using the high pressure spray alone, detergent is not dispensed.

Low Pressure Rinsing:

Attach soap/rinse nozzle(black) to end of lance. Squeeze the trigger on the gun.

- To dispense soap, turn the detergent dial to the ON position.
- To revert back to water only rinsing at low pressure, turn the detergent dial to OFF.

USING THE NOZZLES

See Figure 11.

Before starting any cleaning job, determine the best nozzle for the job. The 25° nozzle is for general purpose or large surfaces.



CAUTION:

NEVER change nozzles without engaging the lock out on the gun and NEVER point the lance at your face or at others. The Quick Connect collar contains small springs that could eject the nozzle with some force. Failure to heed this may cause personal injury.

Using the Quick Connect collar, changing nozzles is easy.

To connect a nozzle to the lance:

- Turn off the pressure washer and shut off the water supply. Pull trigger to release water pressure.
- Engage the lock out on the gun by pulling down on the lock out until it clicks into the slot.
- Push the nozzle into the Quick Connect collar until it clicks in place and is secured properly.

To disconnect a nozzle from the lance once the cleaning job is complete:

- Turn off the pressure washer and shut off the water supply. Pull trigger to release water pressure.
- Engage the lock out on the gun by pushing down on the lock out until it clicks into the slot.
- Remove the nozzle by placing hand over nozzle then pulling back the Quick Connect collar. Place nozzle in the nozzle storage area .

OPERATING THE PRESSURE WASHER

See Figures 12.

To clean:

- Place the detergent dial in the ON position and attach soap/rinse nozzle.
- Start the pressure washer and spray the detergent on a dry surface using long, even, overlapping strokes. To prevent streaking, do not allow detergent to dry on the surface.
- Switch to 25° spray nozzle and engage trigger to clean the area.

To rinse:

- Turn the detergent dial to the OFF position and attach soap/rinse nozzle.
- Spray away from the rinsing surface for approximately 10 seconds to allow any remaining detergent to be flushed from the hose.
- Start at the top of the area to be rinsed and work down, overlapping the strokes.

STORING THE PRESSURE WASHER

See Figure 13.

Store in a dry, covered, frost-free area where the weather can't damage it. Always empty water from gun, hose and pump.

Depress the telescopic handle release button. This will allow the handle to retract. If the handle does not lower on its own, apply a light pressure to push the handle down.

NOTE: Do not loosen the locking collar when retracting or extending the handle.

- When the pressure washer is needed again, depress and hold the handle release button while pulling up on the handle to restore it to normal operating position.

NOTE:

The use of a pump protector is recommended to prevent cold weather damage during storage over the winter months.

MAINTENANCE



WARNING:

When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage.



WARNING:

Before inspecting, cleaning, or servicing the

ENGLISH(Original Instructions)

machine, shut off motor, wait for all moving parts to stop, and disconnect plug from power source. Failure to follow these instructions can result in serious personal injury or property damage.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.



WARNING:

Do not at any time let brake fluids, petrol, petroleum based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury. Only the parts shown on the parts list are intended to be repaired or replaced by the customer. All other parts should be replaced at an authorized service centre.

POWER SUPPLY CORD REPLACEMENT

If replacement of the power supply cord is necessary, this must be done by an authorized service centre in order to avoid a safety hazard.

NOZZLE MAINTENANCE

Excessive pump pressure (a pulsing sensation felt while squeezing the trigger) may be the result of a clogged or dirty nozzle.

- Unplug the pressure washer.
- Turn off the pressure washer and shut off the water supply. Pull trigger to release water pressure.
- Remove the nozzle from the lance.

NOTE: Never point the spray lance at your face.

- Using a straightened paper clip or nozzle cleaning tool, free any foreign materials clogging or restricting the nozzle.
- Using a garden hose, clear/flush debris out of nozzle.
- Reconnect the nozzle to the lance.
- Turn on the water supply.

ENGLISH(Original Instructions)

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pressure washer does not start when trigger is depressed	Power cord not connected to power source Switch is off House circuit breaker is tripped	Connect the power cord to a live 220-240V AC, 50 Hz AC plug. Turn switch on. Reset house breaker. Make sure pressure washer is connected to an individual branch circuit only. If using an extension cord, make sure it is heavy enough to carry the current of the pressure washer.
Pump doesn't produce pressure	Inadequate water supply Spray lance leaks Nozzle is clogged Pump is faulty Air in line Water inlet filter is clogged or dirty	Provide adequate water flow. Check connections and / or replace lance. Clean nozzle. Contact authorized service centre. Squeeze trigger on gun to remove air from line. Remove the water inlet filter, rinse with warm water, then replace in unit.
Machine doesn't reach high pressure	Diameter of garden hose is too small Water supply is restricted Not enough inlet water	Replace with 12mm garden hose. Check garden hose for kinks, leaks, and blockages. Open water source full force.
No detergent	Detergent tank is empty The detergent dial is not completely in the ON position Water supply is inadequate or clogged	Add additional detergent to tank. Turn the detergent dial fully to the ON position. Check garden hose for kinks, leaks and blockages.

DISPOSAL



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



LIMITED WARRANTY (Original Instructions)

TTI warrants this outdoor product to be free of defects in material and workmanship for 24 months from the date of purchase by the original purchaser, subject to the limitations below. Please keep your invoice as proof of date of purchase.

This warranty is only applicable where the product is used for personal and non-commercial purposes. This warranty does not cover damage or liability caused by / due to misuse, abuse, accidental or intentional acts by user, improper handling, unreasonable use, negligence, failure by end user to follow operating procedures outlined in the user's manual, attempted repair by non-qualified professional, unauthorised repair, modification, or use of accessories and/or attachments not specifically recommended by authorised party. Please see your local dealer for list of authorised service centres in your area.

This warranty does not cover belts, brushes, bags, bulbs or any part which ordinary wear and tear results in required replacement during warranty period. This warranty does not cover transportation cost or consumable items such as fuses and batteries.

This limited warranty is void if the product's original identification (trade mark, serial number, etc.) markings have been defaced, altered or removed or if product is not purchased from an authorised reseller or if product is sold AS IS and / or WITH ALL FAULTS.

Where permitted, the provisions of this limited warranty are in lieu of any other written warranty, whether express or implied, written or oral, including any warranty of MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL WE BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES. OUR MAXIMUM LIABILITY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID BY YOU FOR THE PRODUCT.

This warranty is valid only in the European Union, Australia and New Zealand. Outside these areas, please contact your authorised Ryobi dealer to determine if another warranty applies.



EC DECLARATION OF CONFORMITY FOR MACHINERY (Original Instructions)
(Machinery Directive 2006/42/EC, Annex II., sub. A)

Manufacturer: Homelite Far East Co.,Ltd
Address: 24/F, CDW building, 388 Castle Peak Road, Tsuan Wan, HongKong.
Name and address of the person authorised to compile the technical file:
Name: Simon Del-Nevo (Director of Outdoor Power Equipment)
Address: Techtronic Industries Europe, Middle East and Africa, Medina House,
Fieldhouse Lane, Marlow,Bucks, UK,SL7 1TB.

Herewith we declare that the product
Category.....Electric Pressure Washer
Model.....RPW120X
Serial number.....See product rating label
Year of Construction.....See product rating label

- is in conformity with the relevant provisions of the Machinery Directive 2006/42/EC.
- is in conformity with the provisions of the following other EC-Directives
2006/95/EC(LVD-Directive)
2004/108/EC(EMC-Directive), and
2000/14/EC(Noise-Directive) incl. modifications

And furthermore, we declare that

- the following (parts/clauses of) European harmonised standards have been used
EN 60335-2-79, EN 60335-1, EN 62233, EN 55014-1:2006, EN 55014-2/A1:2001, EN 61000-3-2:2006,
EN 61000-3-11:2000.
- the following (parts/clauses of) other technical standards and specifications have been used
EN ISO 3744:2009

Measured sound power level LwA= 88.6dB(A) KwA=3dB(A)
Guaranteed sound power level 91dB(A)
Conformity assessment method to Annex V/ Directive 2000/14/EC

Place, date: HongKong, 10/11/2009

Signature: Sven Eschrich
Director of Engineering



TECHTRONIC INDUSTRIES EMEA

Medina House, Fieldhouse Lane, Marlow,
Buckinghamshire,
SL7 1TB, UNITED KINGDOM

RYOBI TECHNOLOGIES (UK) LIMITED.

Medina House,
Fieldhouse Lane, Marlow,
Buckinghamshire,
SL7 1TB,
UNITED KINGDOM
Tel: + 44 (0) 1628 894400
Fax: + 44 (0) 1628 894401
Technical Helpline : + 44 (0) 800 389 0305

TECHTRONIC INDUSTRIES FRANCE SAS

Immeuble Le Grand Roissy
Z.A. du Gué - 35 rue de Guivry
77990 LE MESNIL AMELOT FRANCE
Phone: + 33(0)1 60 94 69 70
Fax: + 33(0)1 60 94 69 79

RYOBI BELGIUM

Avenue des Pâquerettes, 55
Zoning artisanal - bâtiment 5
B - 1410 Waterloo
BELGIQUE
Tel : + 32(0) 2357 8140
Fax : + 32(0) 2357 8149

TTI ITALIA SRL

Via Fratelli Gracchi, 39
20092 Cinisello Balsamo (MI)
Italia
Tel : + 39(0) 5923 8408
Fax : + 39(0) 5924 6960

TECHTRONIC INDUSTRIES IBERIA S.L

Av. De la Industria, 52
Coslada – Madrid – España
Tel: 91 485 12 10

**TECHTRONIC INDUSTRIES SOUTH AFRICA
CO. (PTY) LTD**

P.O Box 83888, South Hills, Johannesburg, 2136
South Africa

TECHTRONIC INDUSTRIES (ASIA) CO., LTD.

24/F, CDW Building,
388 Castle Peak Road,
Tsuen Wan, Hong Kong.
Tel : + 852 2402 6888

RYOBI TECHNOLOGIES GMBH

Itterpark 4
D-40724 Hilden
DEUTSCHLAND
Tel: + 49 (0) 2103 2958-0
Fax: + 49 (0) 2103 2958-29

RYOBI TECHNOLOGIES GMBH

Vertriebsbüro Österreich
Schinitzgasse 13
A-8605 Kapfenberg
Tel.: + 43 (0) 3862 23590-0
Fax: + 43 (0) 3862 23590-25

TECHTRONIC INDUSTRIES AUSTRALIA PTY LIMITED.

Building B, Rosehill Industrial Estate,
3 Shirley Street,
Rosehill NSW 2142
AUSTRALIA
Tel: (02) 8892 1800 or 1300 361 505
Fax: 1800 807 993

TECHTRONIC INDUSTRIES (NZ) LIMITED.

27 Clemow Drive, Mt Wellington
PO Box 12-806, Penrose, Auckland
NEW ZEALAND
Tel: + 64 (0) 9 573 0230
Free Call: +64 0800 279 624
Fax: + 64 (0) 9 573 0231

A&M MIDDLE EAST FZCO

P.O.Box 61254
Jedel Ali, Dubai,
UNITED ARAB EMIRATES
Tel.: + 9714 8861399
Fax: + 9714 8861400

TECHTRONIC INDUSTRIES DENMARK APS

Stamholmen 147, 4.
DK-2650 Hvidovre
Denmark
Tlf 43 56 55 55, Fax 43 56 55 56
E-mail: kundeservice@tti-emea.com

TECHTRONIC INDUSTRIES NORWAY AS

Tlf.: 800 12 493, Faks: 800 12 492
E-mail: kundetjeneste@tti-emea.com

TECHTRONIC INDUSTRIES SWEDEN AB

Tel (+46) 08 24 60 30. fax (+46) 08 24 60 31.
E-mail: kundtjanst@tti-emea.com

TECHTRONIC INDUSTRIES FINLAND OY

Tel. 0800 1 09000, Fax 0800 1 09001
Email: asiakaspalvelu@tti-emea.com