ALCATEL

Versatis E100 combo Versatis E150 combo



USER'S GUIDE



Alcatel Logo and Alcatel name are trademarks of Alcatel and used under license by Atlinks.

1 Phone Function Keys

7 Menu kev

8 Redial key

10 Hash kev

11 Mute kev

9 Star kev

Press to access the main menu

Press to access the Redial list

Press and hold to lock/unlock keypad.

Press and hold to turn the ringer on/off.

Press and hold to initiate a conference call.

2 Call transfer/Intercom key

ress to initiate an internal call

Handset Display Icons:

Indicates battery is fully charged.

Indicates that an external call is connected or held. Icon blinks when receiving an incoming call.

Displays when handsfree is activated (Versatis E150 only).

OK Displays when in menu mode to confirm your selection.

Indicates you have a new Voice Mail message*.

Displays when the phonebook is accessed

Displays when the alarm clock is activated.

Displays when ringer volume is turned off.


■■ Indicates that more options are available. Use the UP / DOWN keys to scroll up/down

Displays when in menu mode.
Select BACK to return to the previous menu level.

Press and hold to insert a pause during a call.

Press to mute / unmute the handset microphone

Press to hold the line and page another handset during a call.

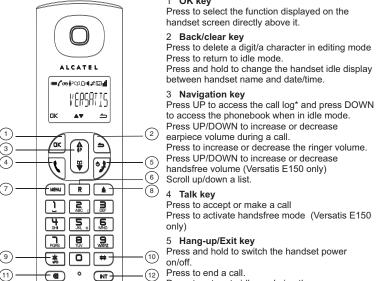

Press to return to idle mode in other menus

6 Recall (Flash) key

Press and hold to toggle between the external and internal calls when both are set up.

*Subject to subscritption and availability of the service from the fixed line operator

B D D Displays when in menu mode.

? Indicates you have new missed calls*, or the call log is being viewed.

Indicates that the handset is registered and within range of the base station. Icon blinks when the handset is out of range or is searching for a base.

Access to operator services

A Display Icons

your selection.

B Displays when in menu mode to confirm

C Indicates that more options are available.

Use the UP / DOWN keys to scroll up/down

level. Select BACK to delete the last digit/

ATLINKS Europe, 22 quai Gallieni 92150 Suresnes – France

The signal quality will depend on the location and environment of the base and handset, Position your Versatis E100 Combo / Versatis E150 Combo away from sources of excessive heat (radiators, direct sunlight, etc.) and protect it from vibrations and dust. Never allow your telephone to come into contact with water or other liquids, or with aerosols. To reduce the risk of interference and optimize reception, take particular care not to install the base in the immediate vicinity of windows, large metal objects, reinforced concrete, televisions, music centres, VCR or DVD players, halogen lamps or heating devices, fluorescent lighting, burglar alarms, microwave ovens, computers, etc.


This telephone requires an electrical power supply in order to function.

NB: Your Versatis E100 Combo / Versatis E150 Combo is a DECT™* standard appliance designed to receive and transmit telephone calls. It is designed for connection to the public telecommunications network.

Select BACK to return to the previous menu Fit the rechargeable batteries in each handset

1) Install the AAA batteries (Brand name: High power, Capacity: Ni-MH 1.2V/ 400mAh, or Brand name: SANIK, Capacity: Ni-MH 1.2V/400mAh) into handset in accordance with the polarity marked in the battery compartment.

2) Close the battery compartment cover, sliding it into place and pressing firmly to make sure it is secure.

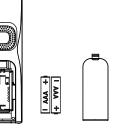

Only use rechargeable batteries with exactly the same specifications as those supplied with the product.

Using non-rechargeable or non-conforming batteries can damage the product and could pose a health hazard (see "Technical Specifications").

Batteries can split or leak if incorrectly inserted, opened or exposed to heat

Displays when reviewing the phonebook.

Telephone Base Display Icons:

(🛭 🕯 P 00 🗅 🗶 🗝

◄ [[:5]^{AM} |[]⁰/ | |^M#[]]**▶**

Displays when keypad lock is turned on. lashes when there is an incoming call.

 
isplays when there is a new voice mail message. (This feature is available only if

Displays when there are old calls in the call list

Press to activate handsfree mode (Versatis E150 Displays when the mute function is turned on (i.e., the microphone is turned off).

Displays when the ringer is turned off.

2 Base station



3 Installation and Set-up

To clean your Versatis E100 Combo / Versatis E150 Combo, use an antistatic cloth lightly moistened with water.

Failure to comply with this recommendation will invalidate the manufacturer's

Never dispose of batteries in a fire: they could explode.

4 Telephone Base Settings

Base ringer volume

when in dial mode.

You can set the ringer volume on the telephone base from level 0 to level 5. Level 0 means the ringer is off.

To adjust the ringer volume, press \triangle or ∇ when in idle mode.

Corded handset receiver volume You can set the corded handset receiver volume from level 1 to level 5. To adjust the corded handset receiver volume, lift the handset and press A or

Setting date and time You can set the date and time on the telephone base.

1. Press and hold [OK]: Enter time (HH:MM) and date (DD-MM) -> To correct your input, press **f**/**⊗**.

Handset Settings

2. Short press [□K].

Ringer volume

Display language To change the display language:

1. Press [MENU] to enter in the menu.

2. Press [♣]/[♥]: to select **PERSONAL SET** and then press [□K].

3. Press $\left[\stackrel{\triangle}{\Rightarrow} \right] / \left[\stackrel{\square}{\Rightarrow} \right]$: to select **LANGUAGE** and then press $\left[\square K \right]$.

4. Press $\left[\frac{\Delta}{4P} \right] / \left[\frac{\Box}{\Psi} \right]$: Select the desired setting and then press $\left[\Box K \right]$.

You can set the handset ringer volume from level 1 to level 4 or turn the ringer

1. Press [MENU] to enter in the menu.

2. Press $[\stackrel{\triangle}{i}] / [\stackrel{\square}{\nabla}]$: to select **PERSONAL SET** and then press [OK]. 3. Press $\left[\frac{\Lambda}{4P} \right] / \left[\frac{\Omega}{\Psi} \right]$: to select **HANDSET TONE** and then press $\left[\Omega K \right]$.

4. Press $\left[\frac{A}{5}\right]/\left[\frac{B}{2}\right]$: to select **RINGER VOLUME** and then press $\left[\frac{A}{5}\right]$.

5. Press $\left[\frac{A}{k_B}\right]/\left[\frac{A}{k_B}\right]$: Select the desired setting and then press $\left[\frac{A}{k_B}\right]$.

You can select from 10 ringer tones (Melody 1 to 10).

1. Press [MENU] to enter in the menu

Press [♣]/[♥]: to select PERSONAL SET and then press [□K].

3. Press $[\stackrel{\triangle}{\bullet}] / [\stackrel{\square}{\Box}]$: to select **HANDSET TONE** and then press $[\square K]$. 4. Press $\left[\stackrel{\triangle}{\underset{i \in \mathbb{Z}}{\longrightarrow}} \right] \left[\stackrel{\square}{\overset{\square}{\Downarrow}} \right]$: to select **RING TONES** and then press [OK].

5. Press $[\stackrel{\triangle}{\downarrow}] / [\stackrel{\square}{\Downarrow}]$: Select the desired setting and then press $[\square K]$.

The handset can be programmed to emit a tone with each key press To change the key tone setting:

1. Press [MENU] to enter in the menu

2. Press $[\stackrel{\triangle}{\Rightarrow}] / [\stackrel{\square}{\forall}]$: to select **PERSONAL SET** and then press $[\square K]$.

3. Press $\left[\stackrel{\triangle}{\longrightarrow} \right] / \left[\stackrel{\square}{\heartsuit} \right]$: to select **HANDSET TONE** and then press $\left[\square K \right]$. 4. Press [♣]/[♥]: to select **KEY BEEP** and then press [OK].

5. Press $\left[\frac{\Lambda}{k^2} \right] / \left[\frac{M}{M} \right]$: Select the desired setting and then press $\left[\square K \right]$.

To change the name of the handset:

1. Press [MENU] to enter in the menu.

2. Press [♣]/[♥]: to select **PERSONAL SET** and then press [□K].

3. Press $\left[\frac{\Lambda}{42} \right] / \left[\frac{\Box}{\Psi} \right]$: to select **HANDSET NAME** and then press $\left[\Box K \right]$.

4. Enter the handset name and then press [OK]. Auto hang-up

To set Auto Hang-Up "ON" or "OFF":

1. Press [MENU] to enter in the menu.

2. Press $[\stackrel{\triangle}{\mapsto}] / [\stackrel{\square}{\subsetneq}]$: to select **PERSONAL SET** and then press $[\square K]$. 3. Press $[\stackrel{\triangle}{\mapsto}] / [\stackrel{\square}{\uplus}]$: to select **AUTO HANG-UP** and then press [\square K].

4. Press [♣]/[♥]: Select the desired setting and then press [□κ].

Clock & Alarm (Cordless Handset Only)

You can set the display format of time to be either 12-hour or 24-hour 1. Press [MENU] to enter in the menu.

2. Press $\begin{bmatrix} \stackrel{\triangle}{\bullet} \end{bmatrix} / \begin{bmatrix} \stackrel{\square}{\Psi} \end{bmatrix}$: to select **CLOCK & ALARM** and then press [OK]. 3. Press [♣]/[♥]: to select **SET FORMAT** and then press [□K].

4. Press $[\stackrel{\triangle}{\models}]/[\stackrel{\square}{\Downarrow}]$: to select **TIME FORMAT** and then press [DK].

5. Press $[\frac{\Delta}{iP}] / [\frac{\omega}{\Psi}]$: Select the desired setting and then press [OK]. **Date format**

To change the date format:

1. Press [MENU] to enter in the menu.

2. Press $[\frac{\Delta}{i}]/[\frac{\omega}{2}]$: to select **CLOCK & ALARM** and then press $[\square K]$.

B. Press $\left[\frac{A}{i p} \right] / \left[\frac{\omega}{\nabla} \right]$: to select **SET FORMAT** and then press $[\Box K]$

4. Press [♣]/[♥]: to select **DATE FORMAT** and then press [□K].

If you cannot make calls, change this setting according to your telephone line

service. The default setting is "TONE". 1. Press [MENU] to enter in the menu.

2. Press [♣]/[♥]: to select CLOCK & ALARM and then press [□K].

3. Press [♣]/[♥]: to select **DATE/TIME** and then press [□K]. 4. Enter the current year, month, and date by modifying 2 digits for each. For

example, if the date you want is May 25, 2011, press [1][1][0][5][2][5].

5. Enter the current hour and minute by modifying 2 digits for each. If the time is 3:34 p.m. and you have chosen the 24-hour time format, press

If the tims is 3:34 p.m., and you have chosen the 12-hour time format, press

Press $\left[\frac{A}{4\pi}\right]/\left[\frac{W}{2}\right]$: Select **AM** or **PM** and then press $\left[\square K\right]$.

6. Press [♣]/[♥]: Select the desired setting and then press [□κ]. **NOTE**: To display date and time, long press **(S)** on handset when in idle mode.

The alarm can be programmed to sound once or daily for one minute. The alarm setting is independent to each handset.

1. Press [MENU] to enter in the menu.

2. Press [♣]/[♥]: to select CLOCK & ALARM and then press [□K]. 3. Press [♣]/[♥]: to select ALARM and then press [□K].

4. Press [♣]/[♥]: Select the desired alarm option and then press [□κ]. **OFF:** Turn alarm off (settings completed).

ON ONCE: The alarm sounds once at the set time.

ON DAILY: The alarm sounds daily at the set time. 5. Enter the desired hour and minute ,then press [♣]/[♥]: select **AM** or **PM** for 12-hour time format.

You can select from 3 alarm melodies. 1. Press [MENU] to enter in the menu.

2. Press $\begin{bmatrix} \triangle \\ \vdots \end{bmatrix}$ / $\begin{bmatrix} \square \\ \nabla \end{bmatrix}$: to select **CLOCK & ALARM** and then press $[\square K]$.

3. Press $[\stackrel{\triangle}{\mapsto}] / [\stackrel{\square}{\lor}]$: to select **ALARM TONE** and then press [OK]. 4. Press $\left[\frac{\Delta}{2} \right] / \left[\frac{\omega}{\Psi} \right]$: Select the desired alarm tone and then press $\left[\square K \right]$.

If you cannot make calls, change this setting according to your telephone line service. The default setting is "TONE".

1. Press [MENU] to enter in the menu.

2. Press $\left[\stackrel{A}{\underset{i}{\triangleright}} \right] / \left[\stackrel{\Box}{\Psi} \right]$: to select **ADVANCED SET** and then press $[\Box K]$.

3. Press $\left[\stackrel{\triangle}{\Longrightarrow} \right] / \left[\stackrel{\square}{\Longrightarrow} \right]$: to select **DIAL MODE** and then press $\left[\square K \right]$. 4. Press $\left[\frac{A}{k_{\text{P}}} \right] / \left[\frac{\varpi}{\nabla} \right]$: Select the desired setting and then press $[\square K]$.

Registering a handset

The telephone system can support up to a total of 4 cordless handsets. Handsets that were included with your main base are pre-registered. To add or re-register a handset:

Telephone Base: Press and hold INT/ for 5 seconds.

Cordless Handset:

2. Press [MENU] to enter in the menu.

3. Press [♣]/[♥]: to select ADVANCED SET and then press [□K].

4. Press [♣]/[♥]: to select **REGISTRATION** and then press [□K]. 5. Enter the PIN (default: 0000) and then press [DK].

Handset displays "WAITING". Cordless Handset:

7. You will hear a beep sound if the handset registration is successful. The handset screen displays "Handset X", where X is a number from 1 to 4. NOTE: An error tone will sound if the registration is not successful

Deregistering a handset

1. Press [MENU] to enter in the menu.

2. Press $[\stackrel{\triangle}{\bowtie}] / [\stackrel{\square}{\triangledown}]$: to select **ADVANCED SET** and then press $[\square K]$. 3. Press $[\stackrel{\triangle}{\blacktriangleright}] / [\stackrel{\square}{\blacktriangledown}]$: to select **UNREGISTER** and then press [OK].

4. Enter the PIN (default: 0000) and then press [DK].

5. Press $[\begin{tabular}{l} \begin{tabular}{l} \$

Changing the PIN The phone has a PIN (Personal Identification Number) associated with it. The default PIN is 0000. If you change your PIN, please make note of the new PIN.

If you forget your PIN, you must reset your phone.

1. Press [MENU] to enter in the menu.

2. Press $\begin{bmatrix} \Lambda \\ \vdots \end{bmatrix} / \begin{bmatrix} \Omega \\ \end{bmatrix}$: to select **ADVANCED SET** and then press [OK].

3. Press [♣]/[♥]: to select **CHANGE PIN** and then press [□κ]. 4. Enter the current **PIN** (default: **0000**) and then press [DK].

5. Enter the new **PIN** and then press [OK].

This feature allows you to restore all system settings, except the phonebook, to default settings. This feature can be useful, for example, if you have forgotten

2. Press $[\stackrel{\triangle}{\mapsto}] / [\stackrel{\square}{\Downarrow}]$: to select **ADVANCED SET** and then press $[\square K]$.

1. Press [MENU] to enter in the menu.

3. Press $[\stackrel{A}{\mapsto}] / [\stackrel{\Box}{\uplus}]$: to select **RESET** and then press $[\Box K]$. 4. Press [□K].

Area code

If you program your area code, the caller ID history displays the telephone numbers with the area code filtered.

To set the area code: 1. Press [MENU] to enter in the menu.

2. Press $\begin{bmatrix} \stackrel{\triangle}{\bullet_E} \end{bmatrix} / \begin{bmatrix} \stackrel{\square}{\Psi} \end{bmatrix}$: to select **ADVANCED SET** and then press $[\square K]$.

3. Press [♣]/[♥]: to select **AREA CODE** and then press [□K].

4. Press [□K].

This setting allows you to choose between **SHORT**, **MEDIUM** or **LONG** to accommodate the setting of your telephone service provider for using customer

calling service, such as call waiting. To change the recall time:

1. Press [MENU] to enter in the menu.

2. Press $[\stackrel{\triangle}{\mapsto}] / [\stackrel{\square}{\nabla}]$: to select **ADVANCED SET** and then press $[\square K]$. 3. Press [♣]/[♥]: to select **RECALL TIME** and then press [□K].

4. Press [♣]/[♥]: Select the desired setting and then press [□K]. 6 Telephone Operations

To make a call Cordless handset

> 1. Press [****]. 2. Dial the phone number after you hear the dial tone.

Telephone base 1. Lift the corded handset, or press [

2. Dial the phone number. To predial a call

Cordless handset 1. Dial the phone number using the dial key pads. If you make an error when dialing, press [) to erase the digit entered

2. Press [🚺]. Telephone base

1. Dial the phone number using the dial key pads. If you make an error when dialing, press [ຓ/⊗] to erase the digit entered.

NOTE: The screen shows the elapsed time as hours, minutes, seconds (hh--mm--ss) after

2. Lift the corded handset, or press [1]. To answer a call

Press [1 to answer an incoming call.

Cordless handset When there is an incoming call, the LCD will light up.

you end the call.

Telephone base
When there is an incoming call, the LCD will light up. Lift the corded handset, or press [II] to answer an incoming call.

To end a call

Telephone Base

call waiting alert tone.

Voice mail service.

telephone service provide

Press [☐/❷]: to mute a call.

2. Press [**□**/**⊗**]: to resume conversation.

Call waiting or call waiting with caller ID service

1. Press [**R**]: answer the second incoming call.

Pause (for PBX / long distance service users)

2. Press [**R**]: to switch between calls.

message from your service provider

Cordless handset

Press [] or place the handset in the charger to end a call.

Press [or return the corded handset to the telephone base.

The mute function allows you to turn off the microphone while on a call. You

NOTE: The mute icon [**()**] is displayed on the LCD when mute feature is activated.

A pause is sometimes required when making calls using a PBX or long distance

When storing a calling card access number and/or PIN in the phonebook, a

EXAMPLE: If you need to dial the line access number "9" when making outside calls with

1. Press [9], then long press [#] on handset or [#] on telephone base.

IMPORTANT: In order to use the voice mail service, you must subscribe to it from your

NOTE: A 3-second pause is inserted each time and a character P is displayed.

To use call waiting, you must subscribe to call waiting service from your

can hear the other party but the other party cannot hear you. 1. Press [**A**].

1. Press [🛇]: to mute a call. 2. Press [🛇]: to resume conversation.

NOTE: The screen shows MUTE ON when mute feature is activated.

2. Press $\left[\stackrel{\triangle}{\bullet} \right] / \left[\stackrel{\square}{\nabla} \right]$: select the desired phone number and then press $\left[\square K \right]$.

4. Enter the name by using the dial key pad and then press [DK].

7 Redial List

To make a call using the redial list

3. Press and hold [11]

4. Press [DK]: you hear a beep sound confirming that the number has been

saved to the first available memory location in the phonebook.

Cordless handset

1. Press [A].

3. Press $[\stackrel{\Delta}{\models}] / [\stackrel{\omega}{\blacktriangledown}]$: to select **DELETE** and then press [$\square K$] twice to delete the

all the numbers.

1. Press [🛕].

3. Press $\left[\bigcap/\bigotimes\right]$: to **delete** the selected phone number -> $\left[---\right]$ appears on

appears on LCD screen.

been deleted.

On the handset, the phonebook can store up to 50 entries. Each number can be up to 24 digits long and each name can be up to 12 characters long. The phonebook on each handset is independent of each other. Changes made to the phonebook on one handset does not apply to another handset. On the telephone base, the phonebook can store up to 30 entries. Each number can be up to 24 digits long. You cannot store a name on the telephone base phonebook

Adding a phonebook record

1. Press [MENU] to enter in the menu. 2. Press [♣]/[♥]: to select **PHONEBOOK** and then press [□K].

ENTER NAME: Enter the name (max. 12 characters) and then press [DK]. ENTER NUMBER: Enter the number (max. 24 digits) and then press [OK].

If you need a pause between digits, press and hold the # until a P appears in

the display. This will insert a 3-second pause in the dialing sequence. **Note:** Press \rightleftharpoons to correct an error.

A phonebook record on the telephone base consists only of the phone number, not the name.

3. Lift the corded handset, or press **I** to make the call. Saving a phone number from the redial list to the phonebook Cordless handset

The last 5 telephone numbers previously dialed are stored in the redial list.

2. Press $[\stackrel{\triangle}{\downarrow}] / [\stackrel{\square}{\forall}]$: select the desired phone number and then press $[\stackrel{\diagdown}{\backslash}]$ to dial.

1. Press [🛕].

1. Press [🛕].

3. Press $\begin{bmatrix} \triangle \\ i \in \end{bmatrix} / \begin{bmatrix} \square \\ \nabla \end{bmatrix}$: to select **SAVE NUMBER** and then press $[\square K]$.

To make a call using a phone number in the redial list:

2. Press [♣]/[▼]: select the desired phone number.

Telephone base

1. Press [11] telephone service provider. This feature allows you to receive calls while you are 2. Press [♣]/[▼]: select the desired phone number. already talking on the phone. You will hear a call waiting alert tone when there is

a second incoming call. If you subscribe to both caller ID and call waiting with caller ID services, the second caller's information is displayed after you hear the

Deleting phone number(s) from the redial list

2. Press $[\stackrel{\triangle}{\downarrow}] / [\stackrel{\square}{\blacktriangledown}]$: select the desired phone number and then press [$\square K$].

Press [♣]/[♥]: to select **DELETE ALL** and then press [OK] twice to delete

2. Dial the phone number and press [() on handset or [•) on telephone base.

2. Press [♣]/[▼]: select the desired phone number. The coicon flashes on the screen when you have received a new voice mail

Press and hold $\left[\Box / \bigotimes \right]$: to **delete all** the phone numbers -> $\left[- - - - - - \right]$

4. Press [DK]: you hear a beep sound confirming that the number(s) has/have

<u>Cordless handset</u> You can add a phonebook record.

3. Press [♣]/[♥]: to select **NEW ENTRY** and then press [□K].

Telephone base

1. Press and hold [].

2. Enter the phone number.

3. Press [DK]: you hear a beep confirming that the number has been saved to the first available memory location in the phonebook.

Viewing a phonebook record Cordless handset

You can use the menu to access the list of phonebook records.

1. Press [MENU] to enter in the menu.

2. Press $[\stackrel{\triangle}{\downarrow_P}]/[\stackrel{\square}{\Downarrow}]$: to select **PHONEBOOK** and then press $[\square K]$.

3. Press $[\frac{A}{42}]/[\frac{C}{42}]$: to select **LIST** and then press [OK].

4. Press [♣]/[♥]: view the **name** of the desired record and then press [□K]: view the **number** of the desired record.

5. Press []: to dial the number.

Press []: to return to idle mode.

Telephone base

2. On the scroll wheel, press $\left[\begin{array}{c} \bullet \\ \bullet \end{array}\right]/\left[\begin{array}{c} \bullet \end{array}\right]$: select the desired phone record.

3. Press [←]: go back to idle mode.

Viewing a phonebook record using scroll wheel

You can also use the scroll view to view the list of phonebook records directly. This is a shortcut method to access the phonebook.

2. Press $\left[\frac{A}{i \pi} \right] / \left[\frac{\Box}{\nabla} \right]$: view the **name** of the desired record and then press $[\Box K]$:

view the **number** of the desired record. 3. Press []: to dial the number.

Press []: to return to idle mode.

Editing a phonebook record Cordless handset

You can edit the name and/or the number of a phonebook record.

1. Press [MENU] to enter in the menu.

2. Press [♣]/[♥]: to select **PHONEBOOK** and then press [□K].

3. Press $\begin{bmatrix} \triangle \\ i \in \end{bmatrix} / \begin{bmatrix} \square \\ \mathbf{y} \end{bmatrix}$: to select **EDIT ENTRY** and then press $[\square K]$.

4. Press $\left[\stackrel{\triangle}{\Longrightarrow} \right] / \left[\stackrel{\square}{\Longrightarrow} \right]$: edit the **name** of the desired record and then press $\left[\begin{array}{c} \square K \end{array} \right]$.

The new name is displayed and then press [DK].

5. Edit the **number** of the desired record and then press [DK]. Telephone base

1. Press [**M**].

2. Press [♠]/[▼]: select the desired phone record.

3. Press and hold [on the scroll wheel of the telephone base.

4. Edit the phone number.

Press [] to clear all the digits.

Press [Ū/⊗] to clear the last digit.

5. Press [DK]: you hear a beep sound confirming that the number has been

Deleting a phonebook record

Cordless handset You can delete a selected record in the phonebook.

1. Press [MENU] to enter in the menu

2. Press [♣]/[♥]: to select **PHONEBOOK** and then press [□K].

3. Press $\left[\frac{A}{5}\right]/\left[\frac{C}{7}\right]$: to select **DELETE** and then press $\left[\frac{C}{5}\right]$. 4. Press [♠] [♥]: select the desired record and then press [□K] twice to delete 1. Press [♥]: -> start conversation.

the selected number.

1. Press [1]

2. Press [♠]/[▼]: select the desired phone record.

3. Press $\left[\overbrace{\mathbf{D}} / \mathbf{\otimes} \right]$: the display shows [---].

4. Press [OK]: you hear a beep confirming that the number has been deleted.

Deleting all the phonebook records

Cordless handset

You can delete all the records in the phonebook. 1. Press [MENU] to enter in the menu.

2. Press $\begin{bmatrix} \triangle \\ i \in \end{bmatrix} / \begin{bmatrix} \square \\ \nabla \end{bmatrix}$: to select **PHONEBOOK** and then press $[\square K]$. 3. Press $\left[\frac{A}{2} \right] \left[\frac{A}{2} \right]$: to select **DELETE ALL** and then press [DK] twice to delete

Telephone base

1. Press [] on the scroll wheel of the telephone base.

2. Press [♣]/[▼]: select the desired phone record.

10 Conference call

The conference call feature allows one external call to be shared with two

handsets (in intercom) To answer an incoming call during an intercom call (telephone base)

Telephone Base 1. Press [1] or lift the corded handset to answer the incoming call and end the

intercom call.

2. Press and hold [INT/ 1 to establish a conference call.

Cordless Handset

The LCD displays "CONFERENCE" on the cordless handset.

Telephone Base

1. Press [INT/ 🕻] during an outside call to intercom all cordless handsets. The

call is placed on hold while an intercom call is established

To initiate an intercom call during an outside call (telephone base)

Cordless Handset

2.Press [[] to answer the intercom call at the desired cordless handset. u can program 2 phone numbers into the memory location called **Key 1** and Telephone Base

3. Press and hold [ਜ਼/ຝ]: the display shows [-----].

have been deleted.

Cordless handset

are searching for Wendy

Key 2 for quick dialing.

the dial key pad directly.

the dial key pad directly.

Intercom

Telephone Base:

Cordless Handset

1. Press [INIT].

Cordless Handset:

Telephone base

2. Press [1]: start conversation

3. Press []: end conversation.

Handset 0 when using intercom.

2. Press [] -> end conversation.

1. Press [MENU] to enter in the menu.

assigned, "NO NUMBER" is displayed.

another handset and make conference calls.

Making an intercom call from telephone base

1. Press [INT/ 1: page all registered handsets.

Making an intercom call from a cordless handset

1. Press [\parallel] or lift the corded handset -> start conversation.

2. Press [📢] or return the corded handset to the telephone base -> end

NOTE: The handset that initiates the intercom call can establish an intercom call with either the telephone

base only or one handset only. It cannot establish intercom with all the handsets and the telephone base at

Direct memory

Searching for a phonebook record

1. Press [MENU] to enter in the menu.

4. Press [DK]: you hear a beep sound confirming that all the phone numbes

You can search a phonebook record by the first characater of its name.

4. Press the dial key pad to search for the first character of the name in the

phonebook. For example, press [2] if you are searching for Amy, press [9] if you

2. Press [♣]/[♥]: to select **PHONEBOOK** and then press [□κ].

2. Press $\left[\frac{A}{4a} \right] / \left[\frac{A}{a} \right]$: to select **PHONEBOOK** and then press $\left[\Box K \right]$.

3. Press $\left[\frac{A}{2} \right] / \left[\frac{B}{2} \right]$: to select **DIRECT MEM** and then press $\left[OK \right]$.

6. Press [MENU]: to select EDIT NUMBER and then press [DK].

7. The name and number of the phone record is now stored

4. Press [♣]/[♣]: selected the desired key memory location and then press

5. The name of the currently assigned phone number displays. If no number is

ENTER NAME: Enter the name (max. 12 characters) and then press [OK].

ENTER NUMBER: Enter the number (max. 24 digits) and then press [OK].

in the display. This will insert a 3-second pause in the dialing sequence.

NOTE: Only one of the handsets can establish intercom call with the telephone base

The system supports up to 4 registered handsets. The telephone base is labelled

2. Select the handset you want to page by pressing the desired handset number

[1] to [4], or you can page all handsets and the base by pressing [*]. Press [0] to

3. Press [♣]/[♥]: to select **LIST** and then press [□K].

5. Press [DK]: view the number of the desired record.

NOTE: You can also search a phonebook record using the scroll wheel.

3. Press and hold [INT/&] to establish a conference call between the incoming call and the intercom call

Cordless Handset

4. The LCD displays "CONFERENCE" on the cordless handset.

1. Press [INT/&] at telephone base to toggle between 2 calls.

2. Press [] to terminate the intercom call on a cordless handset. The call will

continue on the other handset(s).

Transferring calls

Cordless Handset If you need a pause between digits, press and hold the # until a P appears 1. During an outside call: Press [INT].

2. Select the handset you want to page by pressing the desired handset

If you have stored a number in **Key 1**, long press [1] to dial the number from number [1] to [4], or you can page all handsets and the base by pressing [🟂]. Press [0] to page the telephone base. If you have stored a number in **Key 2**, long press [2] to dial the number from

3. Press [] on the paged handset.

4. Press [INT] on the handset initiating the transfer.

Conference call This feature is only applicable when there are at least two registered handsets.

Cordless Handset It allows you to make internal calls, transfer external calls from one handset to 1. During an outside call: Press [INT].

2. Select the handset you want to page by pressing the desired handset

number [1] to [4], or you can page all handsets and the base by pressing [...]. Press [0] to page the telephone base.

3. Press [] on the paged handset and then long press [INT] on the initiating

4. LCD on both handsets shows "CONFERENCE".

Caller ID (CID) is a call log that shows the phone numbers of the incoming

The system can store up to 20 Caller ID records on the telephone base and 10 Caller ID records in the cordless handset. Each record has a maximum length of 24 digits.

Caller ID record displays the time, date and telephone number of the incoming call. The CID name is not displayed. In case the CID number cannot be

displayed (such as a private number), only the time and date are displayed.

IMPORTANT: In order to use this unit's Caller ID features, you must subscribe to either the standard 4. Press [OK]: a confirmation tone is emitted and the telephone base returns to Name/Number Caller ID Service or Call Waiting Caller ID Service. To know who is calling while you are on the phone, you must subscribe to Call Waiting Caller ID Service.

Receiving CID records

Caller ID records are stored in the order they are received.

Storing CID records in CID memory

If you are not at home or cannot answer, your telephone's Caller ID memory stores the most recent calls. When it reach the maximum size, the oldest Caller

ID record (1st call) is automatically deleted

Receiving CID records and call back

Cordless Handset

As calls are received and stored, the display is updated to let you know how many calls have been received. To scroll CID records:

1. Press [🚣].

2. Press $\begin{bmatrix} \frac{A}{b^2} \end{bmatrix}$ | $\begin{bmatrix} \frac{A}{b^2} \end{bmatrix}$: select the desired record and then press [$\frac{A}{b^2}$].

3. If the desired record is a name, press [OK] to show the number. For long numbers, press [OK] to show additional digits.

To call back, press []. To exit, press [] in idle mode.

Telephone Base

2. Press [♣]/[▼]: select the desired Caller ID record.

3. Lift the corded handset, or [1] for handsfree talking. To exit, press [🗂] in idle mode

Editing a phone number in the call log Cordless Handset

2. Press $\left[\stackrel{\triangle}{\Longrightarrow} \right] \left[\stackrel{\square}{\Longrightarrow} \right]$: select the desired record and then press [MENU].

3. Press $\left[\frac{A}{\bullet}\right]/\left[\frac{\Box}{\bullet}\right]$: to select **EDIT ENTRY** and then press $\left[\Box K\right]$.

4. Enter the number if necessary.

5. Press [🚣]: save the new number in the record.

Press []: to dial out the number.

Deleting a CID record

Cordless Handset

l. Press [🚓]. 2. Press $[\stackrel{\triangle}{\Rightarrow}] / [\stackrel{\square}{\Rightarrow}]$: select the desired record and then press [MENU].

3. Press $[\stackrel{\wedge}{\blacktriangleright}]/[\stackrel{\Box}{\blacktriangledown}]$: to select **DELETE** or **DELETE ALL** and then press [\bigcirc K]. 4. You hear a beep sound confirming that the Caller ID record(s) has/have

Telephone Base

1. Press [🛖] .

2. Press [♣]/[▼]: select the desired Caller ID record.

3. [☐/❷]: delete the selected Caller ID record and then press [□K] to confirm.

NOTES: If you wish to cancel the delete or delete all operations, press [\frown]. Storing a CID record

Cordless Handset

1. Press [♣].

2. Press $[\stackrel{\triangle}{\downarrow_F}]/[\stackrel{\square}{\Downarrow}]$: select the desired record and then press [MENU]. 3. Press $[\stackrel{\triangle}{\bullet}] / [\stackrel{\square}{\forall}]$: to select **SAVE NUMBER** and then press [OK].

Saving CID record to phonebook

1. Press []: view CID memory to be saved. 2. Press and hold []. The CID number is displayed and can be edited. 3. Key in the number to add digits, or press [==] to delete.

NOTE: Press [🗂] to cancel if you do not want to save the CID number. The telephone base returns to

12 Technical details

Up to 300 meters*

Free field range

Indoor range Handset battery life (average values) Number of handsets	Up to 50 meters* 7 hours talktime**		
(average values)	7 hours talktime**		
Nii f l d t.	7 hours talktime** 100 hours standby**		
Number of nandsets	Up to 4		
Intercom mode	Yes		
Three -way conference (1 outside correspondent + 2 internal correspondents)	Yes		
Electrical connection / Base mains adapter / Charger	Base: \$003IV0600050 \$003IB0600050 Charger: \$003IV0600015 \$003IB0600015 Input: 100-240 V / 50-60 Hz Output: 6V DC / 500mA (BASE) 6V DC / 150mA (charger)		
	Only use the adapters supplied with the telephone. Single-phase AC, excluding IT installations defined by the EN 60950 standard. Caution: the network voltage is classified as a hazard by the criteria of this standard.		
Telephone connection	Appliance designed for connection to a TNV3 class (telecommunications network voltage) analogue telephone line as defined by the EN 60950 standard.		
Batteries	High Power / Sanik – AAA – 1.2 V – 400 mAh Only use the batteries supplied with the telephone. Using any other type of battery presents a risk of explosion. Used batteries must be disposed of in compliance with current environmental protection regulations.		
Operating temperature	From 5 to 40° C		

** Depending on initial battery charge.

13 Troubleshooting guide

Put the handset back on its base to recharge the batteries. Put the handset back on its base to recharge the batteries. Put the handset back on its base to recharge the batteries. Put the handset back on its base to recharge the batteries. See Section 5 "Registering handsets". Put the handset back on its base to recharge the batteries. The batteries are flat. The device is not connected to the telephone network. The device is not connected to the telephone network. The handset is out of range of the base. The line cord is incompatible. You are out of range of the base or in an environment subject to interference. You have ADSL. For handset is ont of range of the base or in an environment subject to interference. You have ADSL. For handset is out of range of the base or in an environment subject to interference. You have ADSL. For handset is out of range of the base or in an environment subject to interference. You have ADSL. For handset is out of range of the base or in an environment subject to interference. You have ADSL. For handset is not registered on the base. Or move the base or in an environment in which we live! Move nearer to the base, or move the base or move the base or in an environment in which we live! Move nearer to the base, or move the base or move the base or in an environment in which we live! Move nearer to the base, or move the base or one of the base or in an environment in which we live! Move nearer to the base, or move the base or in an environment in which we live! Would be base or in an environment in which we live! For handset doesn't guide. See Section 4 & 5 "Ringer volume". Check your power supply ocnnections. Check that the phone contains the base or charger is not properly connected with the telephone off) of the user's guide. See Section 5 "Registering handsets" or properly connected to the telephone off) of the user's guide. For handset doesn't guide in the proper supply of the same than the conventions. Check your power supply of the previous range. T			Ocidation		
The handset is not dial tone. The handset is not registered on the base. The batteries are flat. The device is not connected to the telephone network. The device is not connected to the telephone network. The handset is out of range of the base. The line cord is incompatible. The reception ality is poor, deteriorates ring a call. Ture correspondent not hear you. The microphone is off. the Secrecy/ Mute function is active. The handset doesn't g. The handset tone the base or charger is not powered up. The handset batteries are defective. The handset batteries are defective. The handset doesn't g. The handset batteries are defective. The handset doesn't g. The handset batteries are doesn't g. The handset batteries are defective. The handset doesn't g. The batteries are defective. The handset doesn't g. The base or charger is not powered up. The handset doesn't g. The handset batteries are defective. The handset doesn't g. The handset batteries are defective. The handset doesn't g. The handset batteries are defective. The handset doesn't g. The handset batteries are defective. The handset doesn't g. The handset batteries are defective. The handset doesn't g. The handset batteries are defective. The handset batteries are lat. The device is not connected to recharge the batteries are defective. The handset batteries are lat. The device is not connected to recharge the batteries are defective. The handset batteries are lat. The device is not connected to recharge the batteries are defective. The thandset batteries are lat. The device is not connected to the batteries are defective. The batteries are lat. The device is not connected to the batteries are defective. The thandset batteries are lat. The device is not connected. The device is not connected. The batteries are lat. The device is not connected. The dev	othing appears on e display		connection. Put the handset back on its base	 If the appliance is rented to you or left in your care, please contact your service provider. Keen to preserve the environment, ATLINKS has equipped this appliance with a switching power supply, offering better energy efficiency. The advantages include not only very low electricity consumption, but also a more compact format than the conventional power suppl units used by the previous range. The used batteries from your telephone (if it has batteries) must be disposed of in compliance with current environmental protection regulations. Comply with your local regulations. Return your batteries to your reseller or dispose of them at an approved recycling centre. 	- If the appliance is rented to you or left in your care, please contact your service provider. Keen to preserve the environment, ATLINKS has equipped this appliance with a switching power supply, offering better energy efficiency. The advantages include not only very low
ality is poor, deteriorates vipiged to interference. You have ADSL. The microphone is off: the Secrecy/ Mute function is active. The handset doesn't g. The base or charger is not powered up. The base or charger is not powered up. The handset batteries are defective. The base or charger is not powered up. The handset batteries are defective.	nere is no dial tone.	on the base. The batteries are flat. The device is not connected to the telephone network. The device is not connected to the telephone network. The handset is out of range of the base.	handsets". Put the handset back on its base to recharge the batteries. Check that the phone cord is properly connected. Move nearer to the base. Use the cord supplied with the		
n't hear you. Secrecy/ Mute function is active. Secrecy/ Mute function is active. (microphone off)" of the user's guide. See A Section 4 & 5 "Ringer volume". See Section 4 & 5 "Ringer volume". The base or charger is not powered up. The handset batteries are defective. The handset batteries are defective. Check your power supply connections. Contact our Technical service if the telephone is under warranty, or ask your reseller to supply you	ne reception lality is poor, deteriorates liring a call.	base or in an environment subject to interference.	move the base 1 m. Connect an approved ADSL filter between the phone connector		
g. Volume". The base or charger is not powered up. The handset batteries are defective. Volume". Check your power supply connections. Contact our Technical service if the telephone is under warranty, or ask your reseller to supply you	our correspondent n't hear you.	Secrecy/ Mute function is	(microphone off)" of the user's		
Il flat after several urs on charge. The handset batteries are defective. Contact our Technical service if the telephone is under warranty, or ask your reseller to supply you	ne handset doesn't ng.	The handset ringer is off.	· ·		
	ne batteries are Il flat after several surs on charge.	powered up. The handset batteries are	connections. Contact our Technical service if the telephone is under warranty, or ask your reseller to supply you		

As a general rule, if a problem occurs, remove the batteries from all the handsets in your installation for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries. The store where you bought your telephone can also provide you with information and after-sales support.

14 SAFETY

In the event of an electrical hazard, the mains adapter acts as 230V power isolating device. accessible. To disconnect the device from the primary power source, the mains adapter must be removed from the 230V AC/50 Hz socket. If the mains adapter fails, it must be replaced by an identical model.

If not connected to the mains power or if there is a mains power failure, telephones that use cordless handsets will not work.

You will then be unable to make or receive calls in the event of an emergency. This is why we recommend that you also keep a conventional telephone - one that doesn't require a power supply – as a backup.

! Do not use your telephone to notify a gas leak when standing in the vicinity of the

It is recommended that you avoid using this device during electrical storms. Do not attempt to open the batteries, as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes, nose and mouth. In the event of contact, rinse the affected part for about twenty minutes with running water and seek urgent medical attention. Clean the product with absorbent paper or a dry cloth and contact you reseller for replacement batteries.
ATLINKS hereby declares that the following models conform to the essential requirements

and other applicable provisions of European directive 1999/5/EC Versatis E100 Combo / Versatis E100 Combo Duo / Trio

15 CONFORMITY

This unit conforms to the following rules and regulations: 1995/5/EC Radio frequency and telecommunication equipment and the mutual acceptance of conformity. The CE mark proves the above.



16 ENVIRONMENT

This symbol means that your inoperative electronic appliance must be collected

separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers are This appliance has been designed and manufactured with high quality materials and

components that can be recycled and reused. Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste.

If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.



ATLINKS. 22 quai Gallieni 92150 Suresnes - France S.A.S. (Simplified Joined Stock Company) with capital of 500 000 Euros Registration number: 508 823 747 R.C.S. Nanterre.

in order to make technical improvements or comply with new regulations. ALCATEL, VERSATIS and ATLINKS are registered trademarks. The Alcatel logo and Alcatel name are trademarks of Alcatel and used under

The manufacturer reserves the right to modify the specifications of its products

© ATLINKS 2011 - Reproduction prohibited

Model E100 Combo E150 Combo CG3 A/W No.: 10000372 Rev.1 (EN) Made in China