

Cuisinart®

INSTRUCTION BOOKLET

Recipe
Booklet
Reverse Side



Cuisinart® Oven Central™

CBO-1000

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

1. READ ALL INSTRUCTIONS.
2. **Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.**
3. Do not touch hot surfaces; use handles or knobs.
4. To protect against fire, electric shock, and injury to persons, **DO NOT IMMERSE CORD OR PLUG** in water or other liquids.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any manner. Return the appliance to the nearest Cuisinart repair center for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Cuisinart may result in fire, electrical shock, or risk of injury to persons.
8. Do not use outdoors.
9. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near hot gas or electric burner, or in a heated oven.
11. Unplug the unit when finished using.
12. Do not use appliance for other than intended use.
13. Extreme caution must be exercised when moving an appliance containing hot oil or other hot liquids.
14. To disconnect, turn Temperature Knob to OFF setting, then remove plug from wall outlet.
15. This appliance is not intended for deep frying.
16. **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, ONLY AUTHORIZED PERSONNEL SHOULD DO REPAIRS.**

17. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use.

If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or animals, or tripped over.

NOTICE


This appliance has a polarized plug (one blade is wider than the other) to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

CONTENTS

Important Safeguards.....	2
Parts and Features	3
Before the First Use.....	3
Assembly Instructions	4
Operating Instructions	4
Cleaning and Care	5
User Maintenance.....	5
Storage.....	5
Warranty.....	6

PARTS AND FEATURES

- 1. Adjustable Temperature Control Knob**
Select temperatures from Warm to 450°F.
- 2. ON/OFF/Timer Knob**
Set the 30-minute countdown timer or turn ON for continuous cooking.
- 3. Top Heater Control Switch**
Turn off heater in top plate to save energy when using oven as a skillet or griddle.
- 4. Nonstick Baking Pan**
Measures 8¼" x 8¼" – perfect for cakes and pasta dishes.
- 5. Nonstick Cupcake Pan**
Makes 4 cupcakes or muffins.
- 6. Roast/Steam Rack**
Stainless steel rack is specially designed for roasting and steaming. Can also be used to toast and melt.
- 7. 4-Piece Skewer Set**
Stainless steel skewers fit into the grooves of the baking pan for perfect kebabs.

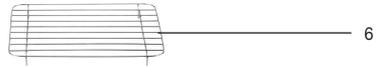

All accessories are dishwasher safe.

All materials that come into contact with food are BPA free.



BEFORE THE FIRST USE

Remove all packaging materials and any promotional labels or stickers from your oven. Be sure all parts (listed under **Parts and Features**) of your new appliance have been included before discarding any packaging materials. You may want to keep the box and packing materials for use at a later date.

Before using your Cuisinart® Oven Central™ for the first time, remove any dust from shipping by wiping the base, cover and controls with a damp cloth. Thoroughly clean all accessories. The baking pan, cupcake pan, skewers and roasting/steaming rack are dishwasher safe. Refer to **Assembly Instructions** for plate removal.

COOKING FUNCTIONS

Bake: Removable baking pan or cupcake pan

Roast: Removable baking pan and roast/steam rack

Steam: Removable baking pan and roast/steam rack

Brown: Fixed pan or removable baking pan

Saute: Fixed pan or removable baking pan

Skewer: Removable baking pan and skewers

Toast: Removable baking pan and roast/steam rack

Melt: Removable baking pan and roast/steam rack

Griddle: Fixed pan or removable baking pan

ASSEMBLY INSTRUCTIONS

Place oven on a clean, flat surface where you intend to cook with the controls directly in front of you.

Using the Baking Pan

Place the removable baking pan in the oven. Use this pan to bake, sauté, and griddle.

NOTE: You can also cook directly in the bottom fixed pan of the oven for more direct heat.



Using the Cupcake Pan

Place the cupcake pan in the oven. Use for cupcakes, muffins, and individual crisps and cobblers.



Using the Roast/Steam Rack

Place the baking pan in the oven, then set the roasting rack on the pan. The rack can be placed in either the upper or lower position, depending on the type of food being cooked. When the rack is in the upper position, the four feet are pointed downward so that the rack is elevated. When the rack is in the lower position, the four feet are pointed upward so that the

rack is in contact with the pan. Use to roast, steam, toast and melt.



Using the Skewers

Place the baking pan in the oven, then set the skewers on the pan. Use the skewers to make satays and kebabs.



OPERATING INSTRUCTIONS

1. Assemble the oven according to Assembly Instructions.
2. Plug the cord into a standard electrical outlet.
3. Set the timer by turning the ON/OFF/Timer knob. The timer can be set for timed or continuous cooking. The timer must be ON for the oven to operate. A red indicator light will illuminate to indicate that the power is on.



- a. **Continuous Cooking.** Set timer to ON. To turn off the oven, you will need to turn Timer knob to OFF.



- b. **Timed Cooking.** Set timer for up to 30 minutes. At the end of cooking time, a bell will ring once and the oven will turn off.



NOTE: When setting the timer for less than 10 minutes, turn the timer past the 10-minute mark and then turn it back to desired time.

4. Turn the Temperature Control knob to the desired temperature for cooking. Settings range from Warm to 450°F.



5. We recommend you preheat with the oven closed. When the thermostat has reached operating temperature, the red indicator light will change to green, signaling that the oven is ready to cook. It may take up to 8 minutes to reach the highest temperatures.

NOTE: During operation, the light will turn from green to red as the thermostat regulates the temperature. This is normal.

6. To adjust the temperature at any time while cooking, simply change the setting on the Temperature Control knob. If a higher temperature is selected, the red indicator light will illuminate to signify preheating. The light will turn green when temperature is reached.
7. When you are using the Oven Central™ as a skillet or griddle, you can save energy by turning the Top Heater Control switch to OFF.

CLEANING AND CARE

CAUTION: BEFORE CLEANING APPLIANCE, MAKE SURE IT HAS COOLED DOWN COMPLETELY.

1. Once you have finished cooking, make sure the ON/OFF/Timer knob is in the OFF position. Unplug the power cord from the wall outlet. Allow the unit to cool down for at least 30 minutes.
2. Dispose of any grease, fats or crumbs from the removable baking pan if used.
3. The baking pan, cupcake pan, roasting rack and skewers can be cleaned by hand or in the top shelf of the dishwasher. The housing base, fixed upper and lower plates, cover and control panel can be wiped clean with a moist cloth. Never use an abrasive cleaner or harsh pad.

NOTE: If food residue sticks to oven surface, fill oven with warm soapy water and allow to soak before cleaning. If scouring is necessary, use a nonabrasive cleanser or liquid detergent with a nylon pad or brush. Never immerse the oven in water.

4. Any other servicing should be performed by an authorized service representative.

USER MAINTENANCE

- The first time you use the Oven Central™, it may have a slight odor and may smoke a bit. This is normal for appliances with nonstick surfaces.
- Always exercise caution when handling the oven during cooking, as it can become hot. Use only the handle to open and close the oven. We recommend you use oven mitts when handling the oven to prevent burns.
- Never use metal utensils, as they will scratch the nonstick plates. Instead, use wooden or heat-proof plastic utensils.
- Never leave plastic utensils in contact with the hot grill plates.
- After each use and before proceeding to the next recipe, allow the unit to cool and wipe any residue with a paper towel.
- Allow the oven to cool down completely (at least 30 minutes) before cleaning.

STORAGE

- Wrap the power cord around the cord storage clips at the back of the base.



- Store the removable pans, roasting rack and skewers in the unit.

WARRANTY

LIMITED THREE-YEAR WARRANTY

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® Oven Central™ that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Cuisinart® Oven Central™ will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase. We recommend that you visit our website, www.cuisinart.com for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store that sells Cuisinart® products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If neither of the above two options results in the appropriate relief to the consumer, the consumer may then take the product to an

independent repair facility, if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement by calling our Consumer Service Center toll-free at 800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.

BEFORE RETURNING YOUR CUISINART® PRODUCT

If your Cuisinart® Oven Central™ should prove to be defective within the warranty period, we will repair or, if we think necessary, replace it. To obtain warranty service, please call our Customer Service Center toll-free at 1-800-726-0190 or write to: Cuisinart, 7811 North Glen Harbor Blvd. Glendale, AZ 85307. To facilitate the speed and accuracy of your return, enclose \$10.00 for shipping and handling. (California residents need only supply a proof of purchase and should call 1-800-726-0190 for shipping instructions.) Please be sure to include your return address, description of the product's defect, product serial number, and any other information pertinent to the return. Please pay by check or money order. NOTE: For added protection and secure handling of any Cuisinart® product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty.

Your Cuisinart® Oven Central™ has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you.

You may also have other rights, which vary from state to state.

Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and to ensure that the product is still under warranty.

©2012 Cuisinart
150 Milford Road
East Windsor, NJ 08520
Printed in China

11CE127428

IB-11177

Other trademarks or service marks referred to herein are the trademarks or service marks of their respective owners.