



**BLUE[®]
CLEAN**

Owner's Manual

Model AR112



www.arblueclean.com



**BLUE[®]
CLEAN**



INTRODUCTION

Congratulations on the purchase of your **BLUE CLEAN POWER WASHER!**

Your **BLUE CLEAN POWER WASHER** is a power tool in every sense of the word that may be used inside your house and out. It is one of the finest most powerful home-use power washers in the marketplace today.

AR112 features include:








- A proprietary all-aluminum water pump.
- A full 12-month “bumper to bumper” warranty on the power washer and all parts/ accessories.
- A quick release Garden Hose Adapter with an incorporated water filter and water check valve.
- A high-pressure lance: Adjustable spray lance
- A Total Stop System (TSS) which turns the washer on only when the spray gun trigger is pressed
- Industry-leading customer service with one goal “Happy Customers!”

Please familiarize yourself with the following assembly, operating safety information. Read this manual before using the power washer. Failure to follow these instructions could cause personal injury, property damage, or both. Save this manual for other users to read prior to using the washer.

If you have any questions about or problems with your power washer please call our toll-free number **1-866-235-5112** and talk with our Customer Service Support Team at AR North America Inc. We are available to talk with you Monday through Friday from 8 a.m. to 5 p.m. Central Standard Time (CST). We can help you with questions regarding operation, warranty, replacement or optional parts at info@ar-blueclean.com.

For more information 24/7 on **BLUE CLEAN POWER WASHERS** go to www.arblueclean.com. Power washers, parts, and accessories can be ordered online 24 hours a day, 7 days a week for your convenience.

QUICK START

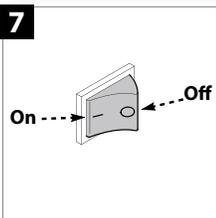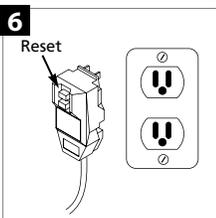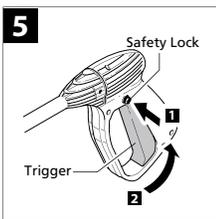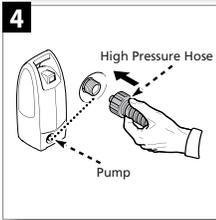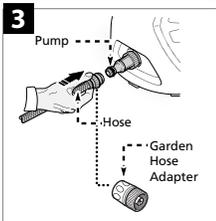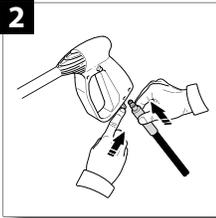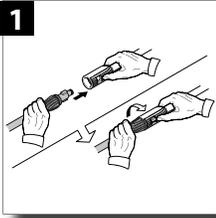

1. Insert lance adapter into the gun by pushing together and turning clockwise to a positive stop. Remove the same way by pushing together and turning counter-clockwise.
2. Press release button on bottom of gun toward back of the gun, then insert high pressure hose.
3. Install the garden hose adapter (GHA) and quick connect filter. Attach the clear plastic adapter by screwing it into the water inlet on the back of the machine, screw the blue/black collar attachment to your garden hose. Slide the GHA onto the clear adapter.
4. Attach the high pressure hose onto the pump water outlet by turning clockwise and hand tightening on the front of the machine.
5. Activate the lock by holding the gun and push the lock from left to right. Squeeze trigger to make sure the trigger does not move. The safety trigger lock should be locked at all times when power washer is not in use.
6. Plug the power cord into a grounded 120V outlet and press the reset button as shown, this must be done each time the unit is plugged in.
7. Press to (-) for on Press (o) for off.

IMPORTANT

This power washer is equipped with a microswitch sensitive to water flow. This Total Stop System (TSS) senses water flow in the pump. When the trigger is released, water stops flowing through the pump. The TSS then automatically turns the motor off to protect the pump from overheating.

TABLE OF CONTENTS	Page
Introduction	2
Quick Start	3
Safeguards, Warnings, and Safety Tips	4, 5, 6
Package Contents	7
Unpacking & Assembly	8, 9
Operating Instructions	9
Operating Tips & Maintenance	10, 11
Pump Saver	12
Troubleshooting	13
Replacement Parts	14
Specifications	15
Limited Warranty & Warranty Returns	15



SAFEGUARDS, WARNINGS AND SAFETY TIPS

- To avoid personal injury and/or damage to property and to maximize your power washing experience, carefully follow all of the safety tips, instructions, warnings and safeguards and become familiar with all of the controls. Be sure you know how to quickly bleed off the pressure from all parts of your power washer, and how to turn off the pressure.
- This power washer conforms to CSA and other safety and consumer standards. Do not modify or rebuild any part of your power washer.
- Do not use your power washer when you are under the influence of alcohol or drugs. Use this power tool carefully and only when you are alert.
- Watch your balance and footing while using your power washer. Surfaces become slippery when wet and are extra slippery when using a detergent or cleaner.



- Never operate the power washer in bare feet, sandals, or open-toe shoes.
- When using the power washer near children make sure they are closely supervised by an adult to avoid injury. Never let a child use the power washer.
- Keep fingers, hands, feet and any part of your body clear of the stream of high-pressure water. The powerful spray can cause blindness or blast holes in the skin. It can break a window if you are too close when you pull the trigger.
- Always wear eye protection to prevent injury to eyes when operating the power washer
- To avoid mishaps or injury always use the trigger safety lock when not using the power washer even if the spraying stops for a moment.
- The power washer is equipped with a Ground Fault Circuit Interrupter (GFCI) which greatly reduces the chance of electric shock while the unit is in use.
- Point the spray gun in a safe direction when beginning a power wash cleaning session.
- When first using the spray gun, hold the spray gun and lance with two hands when pulling the trigger until you get used to the “kick back” from the spray gun (one hand to pull the trigger and the other to stabilize the spray gun assembly).
- When you press the power switch to turn of the power washer, water pressure may remain in the system. To discharge the pressure, point the spray gun in a safe direction and pull the trigger.
- Never spray flammable liquids.
- Never use the power washer in areas that contain combustible dust, liquids or vapors.
- Avoid contact of the pressure hose with sharp objects and examine the hose regularly. Replace if damaged. Due to the high pressure involved, it cannot be repaired if cut or damaged.
- Use only detergent specifically formulated for power washers and follow instructions on the detergent’s label. We have a selection of power washer detergents to choose from. Go to **www.arblueclean.com** for more information and to order the detergents. Power washer detergents are also available at your local hardware store.
- Protect eyes, lungs, and skin from exposure to detergent. Dish or laundry soap is too thick and will clog the nozzle of your lance and detergent bottle.




- **IMPORTANT:** Store the power washer indoors to prevent the water in the unit from expanding under freezing conditions. When the water freezes and expands, your power washer will be damaged and become inoperable. Or, if storing outdoors it is recommended you use Pump Saver. Pump Saver can be purchased on our website: www.arblueclean.com. See details in the Pump Saver section of this manual.
- Never use hot water with your power washer. It will overheat and damage the high-pressure pump.
- Never leave the power washer unattended while it is powered “on”.
- Always turn the water supply “on” before turning the power washer “on”. Running the pump dry will cause damage to the internal components.
- Never use a water supply to your power washer that exceeds 150 psi maximum.
- Never disconnect the high pressure hose from the power washer while the system is pressurized.
- Never permanently engage the trigger mechanisms on the spray gun.
- Never operate the power washer unless all components are properly and securely connected.
- Never allow the power washer pump to run for more than one minute after you have turned off the water. This can cause the motor and pump to overheat and fail.
- Never use lances or other parts that have not been supplied with your power washer.
- Never use an extension power cord since it defeats the effectiveness of the GFCI and increases the chance of electrocuting the operator.
- Never spray any electric outlet with your power washer.
- Inspect the power cord before using and do not use it if it is damaged.

Servicing of a Double-Insulated Appliance

In a double-insulated product, two systems of insulation are provided instead of grounding. Grounding means are not provided for a double-insulated product, nor should grounding means be added to the product.


Servicing a double-insulated product requires extreme care and knowledge of the system, and should only be done by qualified service personnel.

Replacement parts for a double-insulated product must be identical to the original parts. A double-insulated product is marked with the words “Double Insulation” or “Double Insulated”. Product may also be marked with symbol shown here.

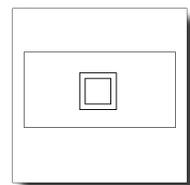

PACKAGE CONTENTS

1. Power washer unit
2. Manual
3. Nozzle cleaning wire - taped to the manual for safe keeping
4. Accessory holders
5. Spray gun (D shows trigger lock button)
6. Adjustable spray lance
7. High pressure hose
8. Garden hose adapter (blue/black)
9. Quick Connect Filter (clear)
10. Detergent bottle

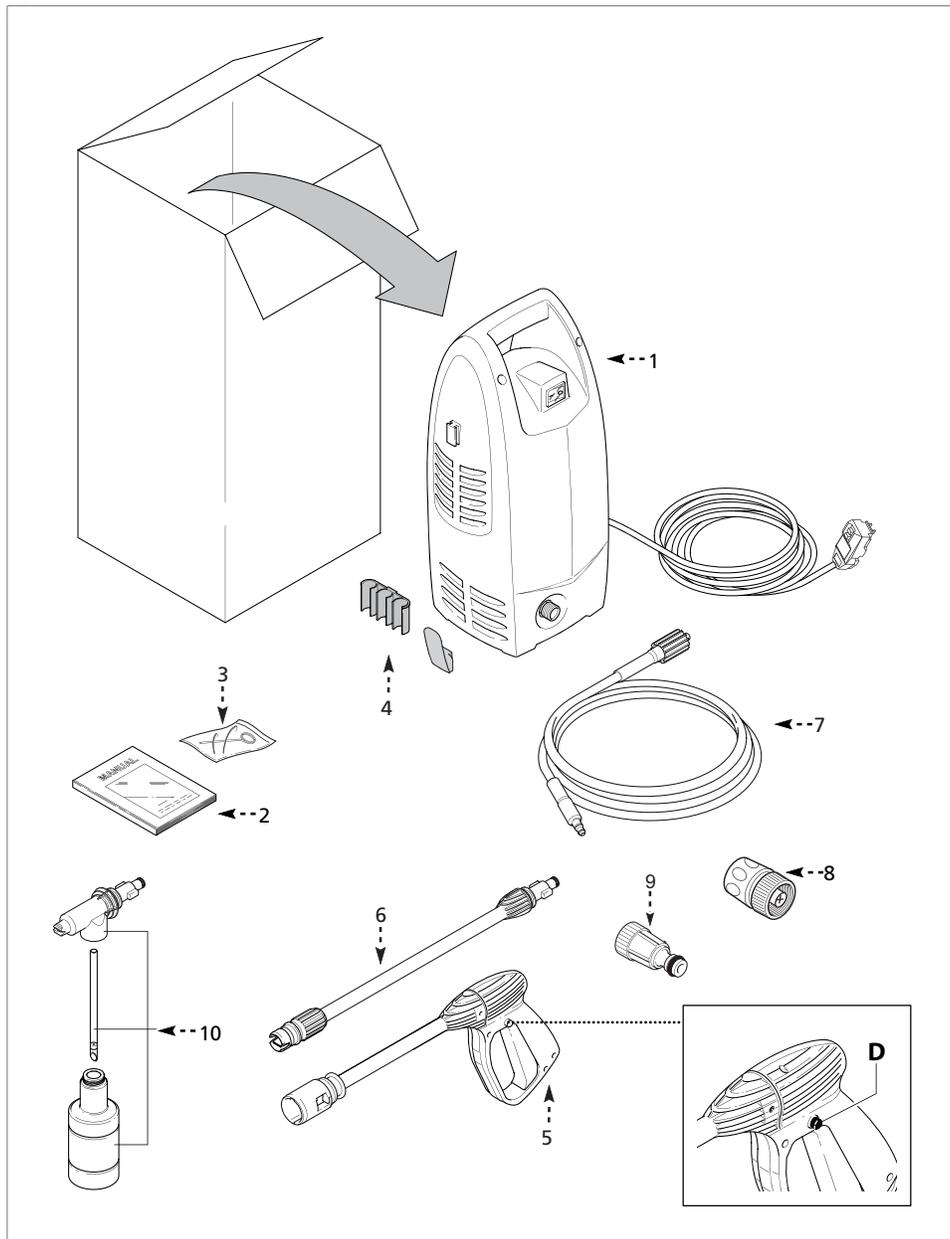

UNPACKING & ASSEMBLY INSTRUCTIONS

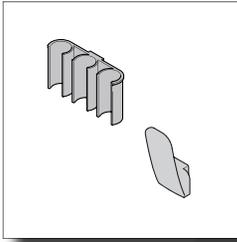


Fig. 1

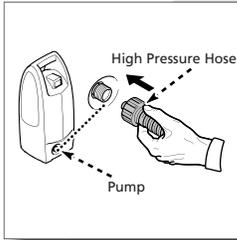


Fig. 2

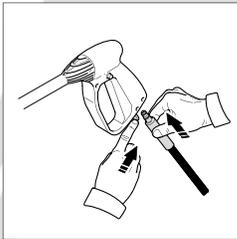


Fig. 3

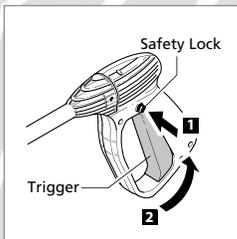


Fig. 4


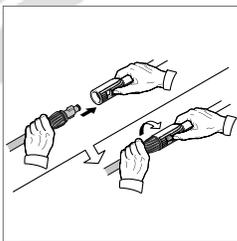


Fig. 5

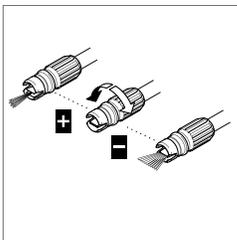

8 Fig. 6

- After unpacking the BLUE CLEAN POWER WASHER, lay out the parts and accessories. Familiarize yourself with the parts in the package by comparing them to those listed on the "PACKAGE CONTENTS" page.
- The BLUE CLEAN POWER WASHER requires some minor assembly, the accessory holder and the electric power cord holder. (Fig. 1) Slide these pieces onto the grooves on the either side of the power washer.

High Pressure Hose

- Screw the high pressure hose (clockwise) on the front of the unit at the bottom (Fig. 2). The end of the hose must be inserted into the water outlet far enough so the collar can thread onto the outlet threads until hand tight. Do not use pliers or vice grips to tighten. If it takes fewer than six or so turns you have not properly tightened the high pressure hose fitting. It is easier to position the power washer in front of you to ensure that the threads are started correctly. Failure to properly tighten the high pressure hose will result in the hose slipping or popping off immediately upon turning the unit on. Do not worry about damage if this occurs - just reinstall and take extra care at screwing on the high pressure hose fitting.
- Connect the other end of the high pressure hose to the spray gun by inserting the silver metal tip of the high pressure hose into the fitting under the trigger guard. It will lock into the spray gun with a "click" (Fig. 3). Confirm the hose is locked into the spray gun by pulling slightly on the hose. The hose is now securely attached to the spray gun.
- To release the hose from the spray gun, press the thumb tab on the underside of the gun toward the trigger guard. The hose will slide out from the connection.

Spray Gun

- To lock the trigger of the spray gun aim the gun away from you and push the lock button from left to right, (Fig. 4) after doing so, squeeze or pull the trigger to make sure it is locked and will not move. Get in the habit of leaving the lock button in the "locked" position when the power washer is not in use. This ensures the gun is in "safe" mode until it is ready for use.

Lance and Detergent bottle

- While the spray gun is in the locked position, insert the adjustable lance or the detergent bottle directly into the end of the spray gun by inserting, pushing together and turning clockwise simultaneously (Fig. 5). To remove push together and turn counter clockwise. Push the safety lock button to lock the trigger when changing the lance or the detergent tank, to ensure that they do not accidentally eject with force during removal (Fig. 4).
- When using the adjustable spray lance, the spray pattern and intensity can be controlled according to power of water needed for each task by twisting the spray nozzle at the far end of the lance (Fig. 6). This can be used for sweeping leaves or debris from flat surfaces or curbing. This lance has the widest variety of applications as the fan degree allows for good impact pressure and cleaning coverage.

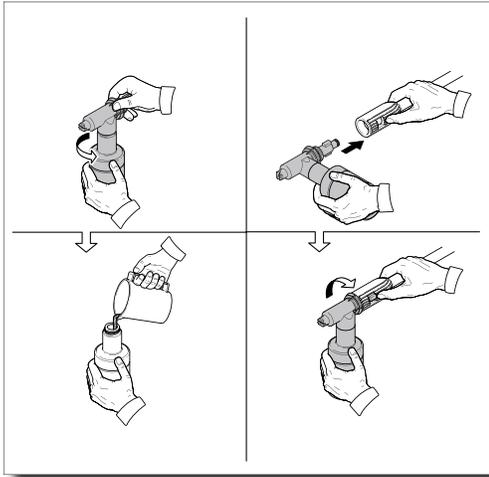


Fig. 7

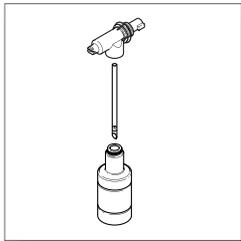


Fig. 8

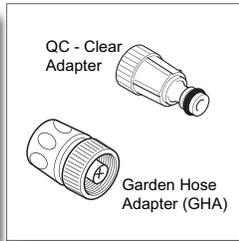


Fig. 9

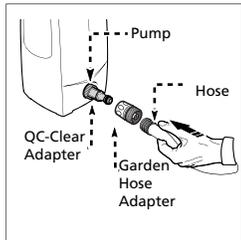


Fig. 10

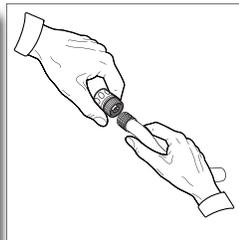


Fig. 11

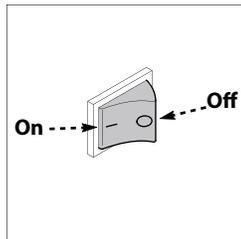


Fig. 12

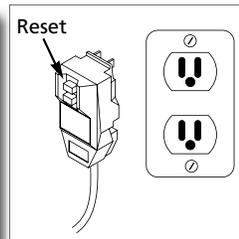


Fig. 13

- When using the detergent bottle, fill it with a properly formulated detergent or cleaner with a water ratio according to instructions on the container (Fig. 7). The detergent bottle comes with a straw which is fitted into the screw-on top. If you do not see the straw, look inside the bottle and attach it to the screw-on top (Fig. 8).

Note: the ratio of water to detergent is 10:1 or 10 parts water to 1 part detergent.

Garden Hose Adapter

- Install the garden hose adapter (GHA) and quick connect filter. It is made up of two separate pieces. (1) A clear plastic adapter with a screen filter (about 3 inches long) and (2) a blue/black collar attachment (Fig. 9).
- First, remove the plastic shipping cover on the water inlet on the back of the power washer. Attach the clear plastic adapter by screwing it into the water inlet (Fig. 10). Hand tight is fine. Next screw on the blue/black collar attachment to your garden hose (Fig. 11). Slide the blue/black collar onto the clear adapter, it will “click” into place. The water is now connected to your power washer.
- To remove the water hose, simply pull back on the blue collar and it will slide off the clear adapter. Note: this can be done at any time. Water will not come out of the garden hose as the blue/black collar has a water check valve. Water will only flow from the garden hose when it is connected to the clear adapter.

You have now completed the assembly of your BLUE CLEAN POWER WASHER and are now ready to begin using your electric power washer. Read and observe all safety instructions.

OPERATING INSTRUCTIONS

- Turn on the water supply at the faucet.
- Make sure the “ON/OFF” switch is in the “OFF” position. The power switch has international symbols for ‘on’ and ‘off’: On (–) Off (O), (Fig. 12).
- Unwind the power cord completely and plug the GFCI into a grounded 120 volt outlet. Press the ‘reset’ button on the GFCI box (Fig.13). The indicator window should show a red color. This must be done each time the unit is plugged in.
- Release the safety lock button on the spray gun by pressing the safety lock button from right to left. While pointing the spray gun in a safe direction, squeeze the trigger on the spray gun until there is a steady stream of water, letting the water and air out of the hose.
- Press the ‘ON’ button. The motor and pump should now be running and providing a powerful spray.

OPERATING TIPS AND MAINTENANCE

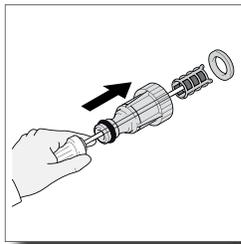


Fig. 14

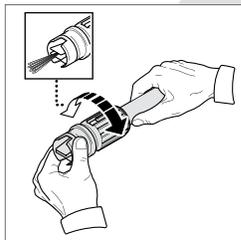


Fig. 15

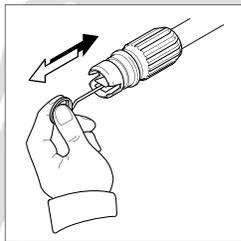


Fig. 16

- If you hear the motor run intermittently when the trigger is not being squeezed, that is normal. The pump is priming itself so it is ready to operate when the trigger is squeezed. Turn off the power washer if not being used after five minutes.
- The o-rings on the bayonet end of the adjustable lance and detergent bottle should be cleaned regularly and lubricated with non-water soluble grease.
- The screen inside the clear adapter should be cleaned periodically. Insert a pen or pencil in the small hole at the end of the adapter. The screen filter will slide out (Fig. 14). Rinse it with clean water, and then place it back in the adapter.
- Keep the nozzle cleaning wire that is taped to this manual, to unclog the nozzle on the lance. If you lose the cleaning wire an unbent paper clip will work.

Cleaning nozzles

- A clogged or partially clogged nozzle can cause significant reduction of water pressure coming out of the nozzle and/or cause the unit to pulsate while spraying.
- Turn off the unit.
- Turn off the water supply to the unit.
- Relieve any pressure trapped in the high pressure hose by squeezing the trigger 2-3 times, and then lock the spray gun by pushing the lock button from left to right.
- Take off the adjustable lance. Rotate the nozzle on the adjustable lance to the narrow stream setting which opens up the fan blades (Fig. 15).
- Using the nozzle tip cleaner provided (or an unfolded paper clip), insert the wire into the nozzle hole and move back and forth until debris is dislodged (Fig. 16). Back flush water through the nozzle using garden hose and highest pressure available (either standard water nozzle or use your thumb over the nozzle to create water pressure for back flush).

How to Avoid Damaging Surfaces

- Damage to surfaces being cleaned occurs because the impact force of the water pressure exceeds the durability of the surface. Bare wood can be penetrated; paint can be peeled off, etc. You can vary the force of your power washer by controlling:
 - o the fan pattern of the nozzle (when using the adjustable nozzle)
 - o the angle of the water spray to the surface being cleaned
 - o the distance of the nozzle from the surface being cleaned
- Never use a narrow high pressure stream of water from the lance on soft surfaces susceptible to damage.
- Use the adjustable spray lance when cleaning windows. Be sure to adjust the nozzle to a wide fan spray pattern and place the nozzle approximately four to five feet away from the window with the nozzle at a forty five degree angle. Squeeze the trigger and vary the fan spray pattern and angle until optimum cleaning efficiency is achieved.

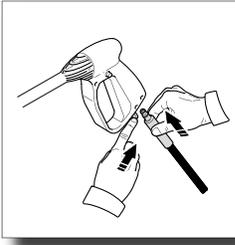


Fig. 17

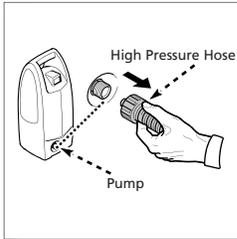


Fig. 18

Detergent Bottle

- Use detergents designed for power washers. We offer four power washer detergents. They are Auto, Motorcycle, Boat and Universal. These can be purchased online at our website www.arblueclean.com. Hardware stores or home centers also have power washer detergents. The cleaning solution should be the consistency of water in order to prevent clogging your detergent bottle nozzle.
- When using the detergent bottle, the application ratio of water to detergent is 10:1 or 10 parts water to 1 part detergent.
- This system applies detergent under low pressure. The cleaning power of the detergents is enhanced when applied with low pressure; when time is allowed to penetrate and break down dirt and grime. The combination of low pressure and chemical action is very effective and can be better than scrubbing if applied properly. Always spray detergent on a dry surface, do not pre-soak area. Wetting the surface first dilutes the detergent and reduces its cleaning ability. Do not allow detergent to dry on surface. On vertical surfaces being cleaned, apply detergent to lower surfaces and work your way up to prevent detergent from causing streaks in the dirt and grime. Rinse detergent by power washing from bottom up for same reason.
- If a stain is particularly tough, it may be necessary to reapply the detergent and use a stiff bristled brush to scrub the stain. Subsequent power washing after brushing should successfully complete your cleaning job.

Storage

- When your power washing session has been completed, turn off the power switch located on the front of the power washer. Unplug the power cord from the outlet. Turn off the water supply. Pull the trigger on the spray gun 2-3 times to drain out the excess water and to release any remaining water pressure. Disconnect the garden hose from the water inlet. **Do not allow the power washer to run with no water flowing through it.**
- Remove high pressure hose from the spray gun (Fig. 17) and unscrew the other end of the high pressure hose from the power washer (Fig. 18).
- Remove lance or detergent bottle from the gun. Make sure to discard any remaining detergent from the bottle. Flush the bottle and nozzle head with fresh water to prevent clogging.
- Store power washer and accessories in an area that does not reach freezing temperatures. Do not store near furnace or any sources of heat, it may dry out the pump seals.

DO NOT store the power washer where it is exposed to freezing temperatures unless you use Pump Saver. It is recommended that you use Pump Saver for storing in freezing temperatures. Freezing will damage the pump unless Pump Saver is added to the power washer. If not using or if storing your power washer for more than one month, run Pump Saver through it. See the section on Pump Saver for more information.

PUMP SAVER




Pump Saver is a product that protects and prolongs the life of the pump. This will keep the internal parts of the pump lubricated and protected from freezing while being stored in ALL climates. It also assists with protection from internal corrosion. The Blue Clean part # is: PW64511 (16oz.bottle).

Pump Saver Instructions

Follow the previous storage instructions for your power washer. To prevent staining, protect the surface under the power washer from any excess fluid. Wear eye protection when using this product.


1. Turn off your power washer.
2. Disconnect all hoses.
3. Shake the bottle well before connecting to the power washer.
4. Screw the dispensing valve on the bottle of the Pump Saver into the water inlet on your power washer.
5. Turn the valve on the bottle to the open position.
6. Turn the power washer on. Turn the power washer off as soon as the Pump Saver fluid begins to exit the water outlet.
7. Turn the valve on the bottle to the off position and remove the Pump Saver bottle valve assembly from the power washer.

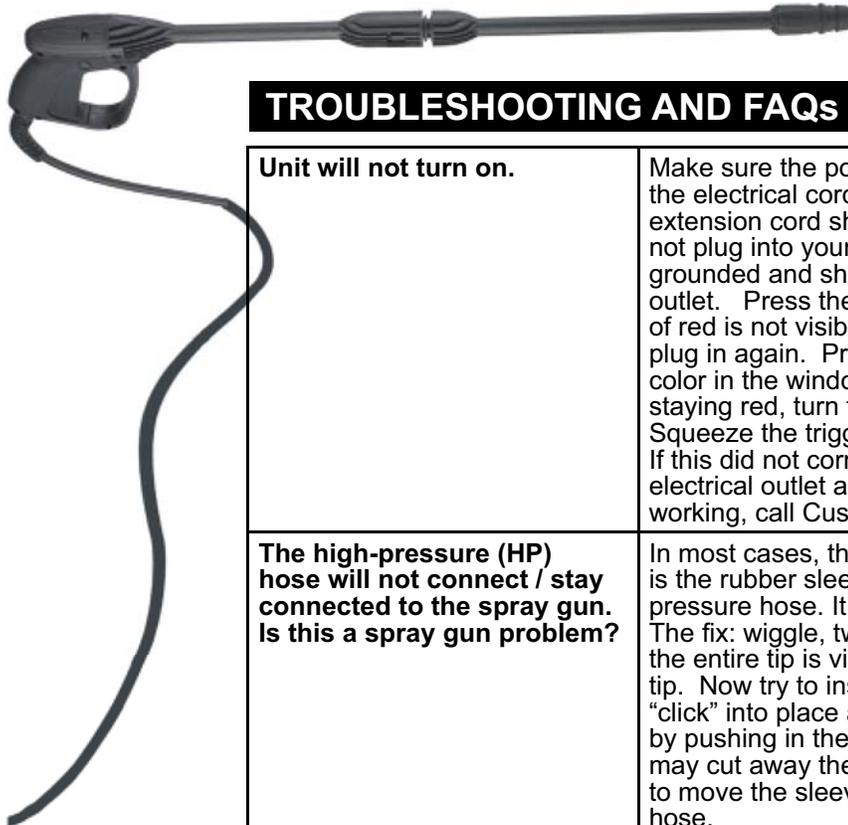

TROUBLESHOOTING AND FAQs

<p>Unit will not turn on.</p>	<p>Make sure the power washer is in the “OFF” position. Plug in the electrical cord to a grounded 120 volt outlet (no electrical extension cord should be used). If the electrical cord will not plug into your outlet, your electrical outlet is not properly grounded and should not be used. Use another electrical outlet. Press the reset button on GFCI power box. If the color of red is not visible in the little window on the GFCI, unplug and plug in again. Press reset, and look for the red contact. The color in the window should remain the red color. If the color is staying red, turn the power switch on the power washer to “ON”. Squeeze the trigger and try again. If this did not correct the problem, try plugging into another electrical outlet and repeat the above procedure. If it is still not working, call Customer Service at 1-866-235-5112.</p>
<p>The high-pressure (HP) hose will not connect / stay connected to the spray gun. Is this a spray gun problem?</p>	<p>In most cases, the spray gun is not the problem. The problem is the rubber sleeve covering the fitting at the end of the high pressure hose. It has likely slipped up toward the metal tip. The fix: wiggle, twist and/or pull the rubber sleeve down until the entire tip is visible plus an 1/8” of the metal fitting below the tip. Now try to insert the hose tip into the spray gun. It should “click” into place and will not come out until the hose is released by pushing in the lever on the underside of the spray gun. You may cut away the end of the sleeve with a sharp knife if unable to move the sleeve down. Be careful not to cut or puncture the hose.</p>
<p>The unit is running but there is not water flow.</p>	<p>Check the water source. Unclog the nozzle on the lance. (See nozzle cleaning instructions under “Cleaning nozzles”). Or take off the lance and just spray out of the spray gun. This will indicate if the problem is with the lance.</p>
<p>Why is water leaking where the high-pressure hose connects to the spray gun?</p>	<p>Make sure there is an o-ring at the end of the metal tip of the high pressure hose. If no o-ring is present, the connection between the hose and spray gun will leak. O-Ring Kits are available online at www.arblueclean.com or call Customer Service at 1-866-235-5112 to place an order.</p>
<p>I can't remove the lance from the spray gun. What should I do?</p>	<p>The lance and the detergent tank are attached and removed from the spray gun in the same manner. Insert the quick-release end of the lance/detergent bottle into the spray gun. Press the spray gun and lance together (about a 1/8”) and turn clockwise. The lance will lock in place. Remove the lance by reversing this procedure. Press the spray gun and lance together and turn counter clockwise. The lance will slide out. Or, hold the spray gun and lance in an upright position with the nozzle end on the floor. Push the whole assembly straight down to loosen the connection, and then follow the removal process again. You may also spray soapy water or a lubricant in the area where the lance connects to the spray gun.</p>
<p>The power washer turns on for 2 seconds, shuts off, and will not turn back on. Do I have a defective unit?</p>	<p>It sounds like your power washer is working just fine. When the water is connected, the accessories are assembled properly, and the power switch is turned on, the power washer will turn on for 1 to 2 seconds to prime the pump. Then it automatically shuts off and waits for the spray gun trigger to be squeezed. When the trigger is squeezed water starts flowing through the power washer, the water sensor (TSS) in the pump “senses” the moving water and automatically turns the power washer pump on. The water coming out of the spray gun and lance will be under high pressure. The pump has a Total Stop System (TSS) which means the pump will not turn on if there is no water flow. Aim carefully and begin cleaning. Or, turn the power off on the power washer. Hold the trigger on the spray gun, so you have a steady stream of water. While holding the trigger on the spray gun, at the same time, turn the power switch to on.</p>

REPLACEMENT PARTS

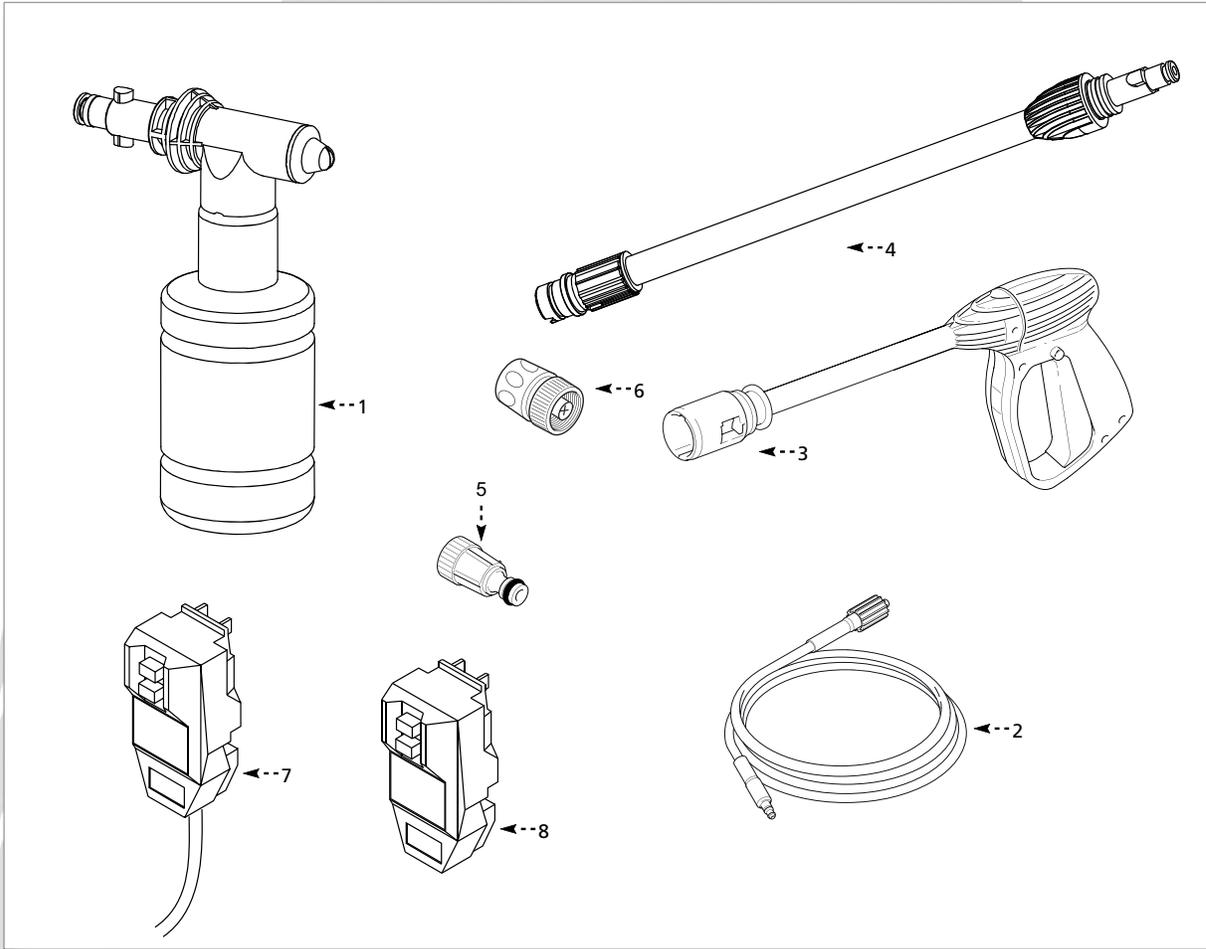

Pos.	Description	Part Number	Qty.
1	Detergent Bottle	PW50954	1
2	Hose (QC)	PW3083450	1
3	Spray Gun	PW3082280	1
4	Adjustable Lance/Nozzle	PW50955	1
6	Quick Connect Adapter (clear plastic)	PW3082130	1
7	Garden Hose Adapter (blue/black)	PW3082301	1
8	Electric Cord w/GFCI	DX2761401100	1
9	GFCI Assembly	PW2761401110-1	1

Pump Spare Part Kits

Water Seals & Valves	PW3081290	1
Pre-Assembly TSS	PW3082350	1
O-Ring Kit	PW909104K	1

SPECIFICATIONS

Model	Max PSI (lbs/sq/in)	Max GPM (gal/per/min)	Max Temp	Volts	Amps	Weight (lbs)
AR112	1,600	1.58	122° F	120	11	12

LIMITED WARRANTY

This product is under warranty to the original retail consumer against defects in material and workmanship for a period of 1 (one) year and is a complete “bumper to bumper” warranty including the spray gun, the high-pressure hose and all accessories from the date of purchase. The warranty is not transferable or assignable. This warranty covers replacement parts. This limited one year warranty applies only to products used in consumer applications and is void in rental or any commercial application. Reasonable care must be used in conformity with operation and maintenance instructions in the owner’s manual and quick start guide. Failure to follow these instructions will void this warranty.

WARRANTY RETURNS

Keep your original receipt of purchase in case of warranty claim. Any power washer or parts returned for a warranty claim must have a “RETURNED MERCHANDISE AUTHORIZATION (RMA) NUMBER.” You must obtain an RMA number by calling A.R. NORTH AMERICA, INC. at 1-866-235-5112 Monday through Friday, 8 a.m. to 5 p.m. (CST), or e-mail info@ar-blueclean.com. Any return without an RMA NUMBER will be considered unauthorized and will be shipped back at the expense of the sender. Freight costs to the company for warranty work must be paid by the purchaser.

Cleaning and troubleshooting tips, manuals and other helpful information are available on our website. For parts and accessories for your Blue Clean washer, visit www.arblueclean.com. Ordering is easy and all major credit cards are accepted.

A.R. NORTH AMERICA, INC.
Attn: Power washer Warranty Department
140 81st. Avenue NE, Fridley, MN 55432
Phone: 1-866-235-5112
Fax: 1-866-331-2762
Email: info@ar-blueclean.com
Website: www.arblueclean.com



**BLUE[®]
CLEAN**

Model AR112

www.arblueclean.com



**BLUE[®]
CLEAN**

Modèle AR112

www.arblueclean.com