



## Instruction Manual RB2200



**Caution: Please read this manual carefully before using this product**

## Safety Warning

**This cleaner is for domestic use only commercial use will void warranty**

**When using your *Vacuum*, basic safety precautions should always be observed, including the following:**

**Read all instructions before using this vacuum.**

**WARNING: To reduce the risk of fire, electrical shock, or injury:**

1. **Do not** leave vacuum cleaner unattended when it is plugged in.
2. **Do not** immerse the vacuum cleaner into water or other liquids.
3. **Do not** pickup building materials such as plaster dust, wood shavings, Sand etc.
4. Use only as described in this manual. Use only manufacturer's recommended attachments and filters.
5. **Do not** use with damaged cord or plug. Do not use vacuum cleaner if it has been dropped, damaged, left outdoors, or dropped into water. Return appliance to *GODFREYS* for examination, repair or adjustment.
6. **Do not** pull or carry by cord. Do not use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
7. **Do not** unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. **Do not** handle plug or vacuum cleaner with wet hands.
9. **Do not** use the vacuum cleaner to pick up large objects or objects that are likely to damage or block the vacuum cleaner.
10. Keep hair, loose clothing, fingers, feet and all parts of body away from openings, rotating agitator and other moving parts. Do not operate cleaner in bare feet or when wearing open toe shoes.
11. **Do not** pick up hot coals, cigarette butts, matches or any hot, smoking, or burning objects.
12. **Do not** pick up hard or sharp objects such as glass, nails, screws, coins, etc.

13. **Do not** use without all filters in place. Use **ONLY** filters and accessories provided by **GODFREYS**. Failure to do so will void the warranty.
14. Turn off all controls before plugging or unplugging vacuum cleaner into electrical outlet.
15. Use extra care when vacuuming on stairs.
16. **Do not** pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapor.
17. **Do not** pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
18. **Do not** use in an enclosed space filled with vapors given off by oil based paints, paint thinner, moth proofing substances, flammable dust, or other explosive or toxic vapors.
19. ***Use only on dry, indoor surfaces.***
20. **Do not** use for any purpose other than described in this user's guide.
21. The use of an extension cord is not recommended.
22. **Do not** put any objects into openings. **Do not** use with any opening blocked. Keep free of dust, lint, hair and anything else that may reduce air flow.
23. **Always store your appliance indoors in a cool, dry area.**
24. Keep your work area well lit.
25. Keep end of hose, wands and other openings away from your face and body.
26. **Not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.**
27. **Young children should be supervised to ensure that they do not play with the appliance**

Names of Parts and Components



1. Power plug
2. Cord rewind pedal
3. Cyclone dust container
4. Hose
5. Accessory bracket
6. Handle
7. Air escape pushbutton
8. Metal extension pipe
9. Switch Pedal
10. Air outlet grill and HEPA filter
11. Floor tool

**Accessories:**

1. Crevice nozzle



Figure (1)

2. Combination brush



Figure (2)

## Assembly Instructions

1. Before assembling the cleaner, please check the packing, the vacuum cleaner and accessories for any signs of damage .Do not use damaged appliance it could be dangerous. Confirm all parts and components for the cleaner are received by referring to Parts and Components List.
2. Please remember do not connect to power before assembly.

### **Assembly of hose**

1. As is shown in Figure (3), insert the hose into the inlet of the machine  
Please pay attention to the alignment of two projecting parts. Turn the hose right to click in to place



Figure (3)



Figure (4)

## **2. Assembly and Removal of dust container**

As is shown in Figure (4), place the bottom of the dust container on the base of the machine body, and press down the dust container to lock in to place. To remove the dust container, press down the handle of the dust container and pull away from the cleaner.

## **Assembly of accessories**

### **1. Figure (5) Crevice tool and Combination brush holder**



Figure (5)

## **Assembly of metal extension pipe and floor tool**

Insert the handle into the metal extension pipe, then insert the other end of the metal extension pipe into the floor brush, and adjust to the pipe to desired height.



Figure (6)

### **Operation Instructions**

#### **How to start**

1. Pull out the mains cable to the yellow mark insert the power plug into the power socket, and press down the power switch button.
2. The yellow mark on the power cord indicates its desired length. Never pull out the power cord to the length exceeding the red mark.



## **Suction Control**

To reduce the suction slide the suction control up as is shown in Figure (7).

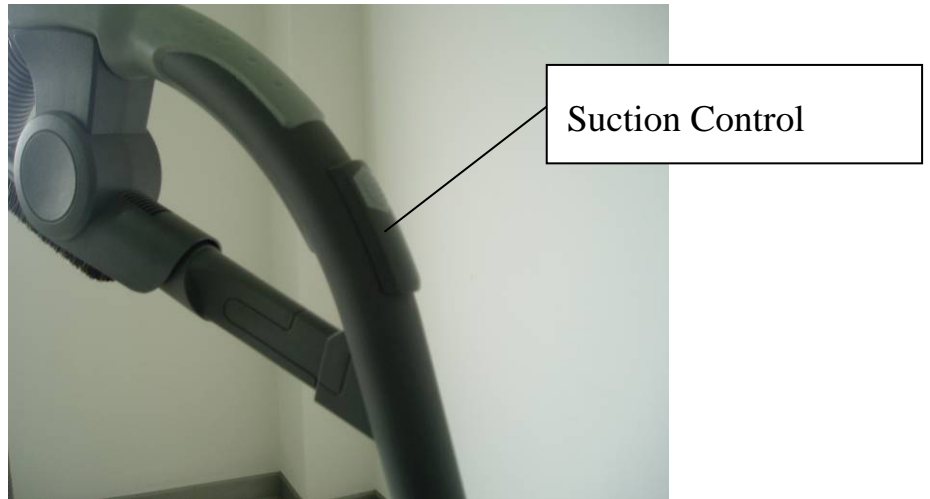


Figure (7)

## **Protective devices for motor**

1. A temperature limiter switches the vacuum cleaner off automatically if it gets too hot. This can occur if for instance hose, pipe or filters are blocked. Switch the vacuum cleaner off immediately using the switch on the cleaner  
Disconnect the power plug from the wall outlet
2. Remove the hose and pipe check for blockage, if they are not blocked clean or replace filters and empty dust container
3. After cooling for about 30 minutes it can be switch on a gain

## Maintenance of the Cleaner

1. Switch off cleaner and disconnect power before any maintenance
2. Empty dust container after every use
3. Clean front filter every 3 months by washing it in mild dishwashing solution and rinse well. Dry for 24 to 36 hours before refitting to the cleaner refer to (Fig 10) Replace filter every 6 months
4. Wash dust container assembly every 6 months. It must be completely dry for 2 to 3 days before reassembling back to gather.

## Storage of the Cleaner

1. Upon the completion of the operation of the cleaner, turn off its power supply, and pull the power plug out of the power socket, then step on the cord reeling button to reel in the power cord fully. Hang the floor brush onto the floor brush hook, as is shown in Figure (8).



Figure (8)

2. Place the cleaner in the dry indoor environment.

## Cleaning of the Dust Container

Empty dust container after every use

1. To remove the dust container refer to Fig 4
2. To empty the dust container Place the container over the rubbish bin press down the releasing button at the bottom of the dust container as is shown in Figure (9). And tap the container gently to release the fine dust



Figure (9)

### **Cleaning of front filter for motor:**

Warning: please make sure the power supply to the cleaner has been disconnected before carrying out the following steps:

1. Remove the dust container from the cleaner refer to Fig 4
2. Remove the grill of the front motor filter then remove the filter as is shown in Figure (10). Refer to maintenance for cleaning Replace filter every 6 months



Figure (10)

### **Replacement of HEPA Filter**

HEPA is installed behind the air outlet grill. It is not washable. When the surface is clogged by dust, the filter should be replaced by a new one to maintain good suction (Figure 11) and to prevent over heating and cutting out.



Figure (11)

Replace this filter every 6 months to 12 months depending on the usage. Please remember to confirm that all filters have been correctly installed before turning the cleaner on.

Fault	Treatment
The cleaner cannot operate.	<ol style="list-style-type: none"> <li>1. Check whether the power plug is inserted securely; pull out the plug and then reinsert it in the power socket;</li> <li>2. Check whether the power socket is turned ON</li> <li>3. Check whether the switch on the cleaner is in “ON” position.</li> </ol>
Poor suction. Getting too hot. Cleaner stopped when in use.	<ol style="list-style-type: none"> <li>1. Check whether the floor brush, the hose and the pipes are blocked, and remove any blockage immediately;</li> <li>2. Check filters clean or replace filters Refer to Fig 10&amp;11</li> </ol>