


GES-242NX-R
24VDC UPS

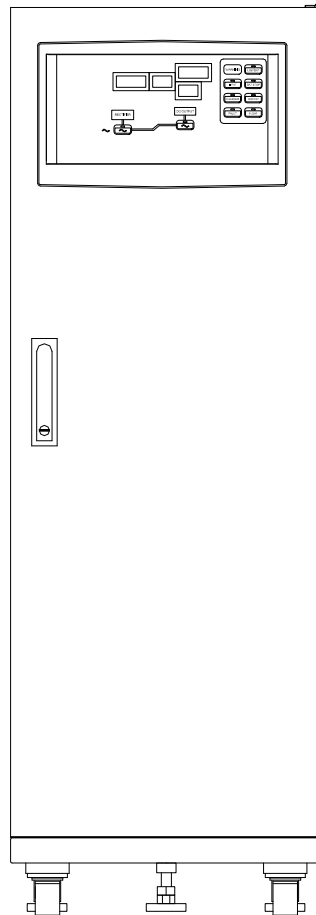

Installation and Operators Manual

Table of Contents

- 1. **CAUTION 1**
- 2. **IMPORTANT SAFETY INSTRUCTIONS..... 2**
- 3. **UNPACKING 5**
 - 3.1. *Transport* 5
 - 3.2. *Delivery*..... 5
 - 3.3. *Storage*..... 6
 - 3.4. *Site & Environment Consideration* 7
 - 3.5. *Unpacking*..... 8
 - 3.6. *Cable Selection*..... 9
- 4. **80KVA DC UPS SYSTEMS LAYOUT DRAWINGS 10**
- 5. **DC UPS WIRING DIAGRAMS..... 11**
- 6. **TERMINAL STRIP LAYOUT 13**
- 7. **C-CHANNEL INSTALLATION 14**
- 8. **OPERATION INSTRUCTIONS..... 15**
- 9. **FRONT PANEL 16**
- 10. **RELAY CONTACTS..... 19**
- 11. **DIMENSIONAL DRAWING 20**
- 12. **CONTACT INFORMATION..... 21**

1. CAUTION

This is a manual for Installation purposes only.

Do not attempt the start up of the DC UPS or apply power to the input terminals.

Factory authorized personnel shall inspect installation prior to start up and commissioning to validate warranty.

Failure to follow this directive will result in void warranty.

2. IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

This manual contains important safety instructions that should be followed during installation and maintenance of the N Series DC UPS system and optional packages. Before the installation process begins, we recommend that the installer read through the safety precautions, operators manual and the option installation instructions, taking all necessary safety precautions to protect themselves and the equipment being installed.

GENERAL

- Move the DC UPS in an upright position, in its original packaging, to its final destination. To lift the cabinets, use a forklift or lifting belts with spreader bars.
- Check for sufficient floor and elevator loading capacity.
- Check the integrity of the DC UPS equipment carefully.
If visible damage is evident, **do not** attempt to install or start the DC UPS. Contact the transport delivery company immediately, file a claim with the transport company and inform Always On directly.
- Do not use outdoors
- The use of accessory equipment not recommended by Always On may cause an unsafe condition
- **WARNING! RISK OF ELECTRICAL SHOCK:** use extreme caution when removing covers.
- All maintenance and service work should be performed by qualified and trained service personnel. The DC UPS may contain its own energy source, (batteries) which can be dangerous to the untrained person. This DC UPS contains potentially hazardous voltages
- The field-wiring terminals may be electrically live, even when the DC UPS is not connected to the utility.
- Use caution when servicing batteries. A battery can present a risk of electrical shock, burn from high short-current. Battery acid can cause burns to skin and eyes. If acid is spilled on skin or in eyes, flush with fresh water and contact physician immediately.
- When replacing batteries use the same number and type (sealed-cell lead acid).
- Proper disposal of batteries is required. Refer to your local codes for disposal requirements.
- Dangerous voltages may be present during battery operation. The batteries must be disconnected during maintenance or service work. (Open battery breaker or fuses)
- Be aware that the inverter can restart automatically after the utility voltage is restored.
- Do not use this equipment for other than intended use.

INSTALLATION

- This DC UPS is intended for use in a controlled indoor environment free of conductive contaminants and protected against any type of intrusion.
- Do not install the DC UPS in an excessively humid environment or near water.
- Avoid spilling liquids and/or dropping any foreign object(s) onto the DC UPS.
- The unit must be placed in a sufficiently ventilated area; the ambient temperature should not exceed 40°C (104°F).
- Optimal battery life is obtained if the ambient temperature does not exceed 25°C (77°F).
- HIGH GROUND LEAKAGE CURRENT: ground connection completed before connecting the AC voltage wires on the input!
- Switching OFF the DC UPS does not isolate the DC UPS from the utility as the utility supply is still *HOT* at the input terminal strip. Supply breaker needs to be opened.
- It is important that air can move freely around and through the unit. Do not block the air vents.
- Avoid locations in direct sunlight or near heat sources (gas or electric heaters).

STORAGE

- Store the DC UPS in a dry location free of contaminants;
- Storage temperature must be within -25°C (-13°F) to 55°C (131°F).
- If the unit is stored for a period exceeding 3 months, the batteries must be recharged periodically (time depending on storage temperature).

WARNING!

LETHAL VOLTAGES MAY BE PRESENT WITHIN THIS UNIT EVEN WHEN IT IS APPARENTLY NOT OPERATING. OBSERVE ALL CAUTIONS AND WARNINGS IN THIS MANUAL. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY OR DEATH. REFER UNIT TO QUALIFIED SERVICE PERSONNEL IF MAINTENANCE IS REQUIRED. NO ONE SHOULD WORK ON THIS EQUIPMENT UNLESS THEY ARE FULLY QUALIFIED TO DO SO. AN INSTALLER SHOULD NEVER WORK ALONE.

WARNING!

WHEN REMOVING POWER FROM THE DC UPS, ALLOW FIVE MINUTES FOR CAPACITORS TO DISCHARGE BEFORE WORKING ON THE EQUIPMENT.

CAUTION!

This equipment complies with the requirements in Part 15 of FCC rules for a Class A computing device. Operation of this equipment in a residential area may cause interference to radio and TV reception, requiring the operator to take whatever steps necessary to correct the interference.

CAUTION!

Do not put option control wiring in the same conduit as the DC UPS input or output power cables.

THIS SAFETY NOTICE IS ADDRESSED TO THE ALWAYS ON CUSTOMER ENGINEERS WHO PERFORM MAINTENANCE OF THE UNINTERRUPTIBLE POWER SUPPLY (UPS) SYSTEMS.

Electrical Safety

- Maintenance work to be performed by factory trained customer engineers, or qualified personnel. Extremely dangerous voltage levels can exist within the DC UPS system. Extreme caution must be used.
- Ensure system is in maintenance DC UPS mode or external wrap-around DC UPS mode before work is started.
- This manual is designed as an aid tool in diagnosing problems that may arise. Always On does not assume responsibility if information causes injuries.
- Apart from the front door, do not open any other part of the DC UPS without consulting the factory first. Before removing the protection screens, be sure that the unit is completely powered off.
- Be aware that dangerous voltage can be supplied by the internal battery or electrolytic capacitors.
- When system is in DC UPS mode and all fuses have been opened dangerous voltages may exist within the DC UPS system. Use extreme caution when exchanging boards and working inside the unit.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
SAVE THESE INSTRUCTIONS.

3. UNPACKING

3.1. Transport

The DC UPS is packaged on a pallet, suitable for handling with a forklift.

Pay strict attention to the center of gravity. The DC UPS must be moved in upright position. Do not tilt cabinets more than +/- 10° during handling.

Move the DC UPS in its original package to the final destination site.

Do not stack other packages on top.

If the DC UPS must be lifted by crane, use suitable lifting straps and spreader bars.

3.2. Delivery

Upon receiving the DC UPS system, inspect the packaging integrity and the physical condition of the cabinets carefully.

In the event that physical damage is visible, the carrier must be informed immediately and a claim filed with them. Inform Always On as soon as the claim has been filed and a copy of claim should be faxed to Always On at (250) 491-9775.

A detailed report of the damage is necessary for carrier insurance claim.

WARNING

A damaged DC UPS system **must never be installed** or connected to the utility or batteries without written instruction from Always On Engineering.

3.3. Storage

STORAGE OF THE DC UPS

The DC UPS is carefully packed for transport and storage.

Never leave a DC UPS outside the building exposed to the elements and **do not** place other packages on the top of the DC UPS.

Storing: It is recommended to store the DC UPS in its original package in a dry, dust-free room, away from chemical substances, and with a temperature range of -25°C (-13°F) to 55°C (131°F). Exceeding this temperature range may cause damage.

STORAGE OF BATTERIES

Although this system includes maintenance free batteries, keep in mind that they are subject to self-discharge and therefore must be recharged.

The storage time without battery recharge depends on the temperature of the storage site. The optimal temperature for battery storage is 20°C (68°F) to 25°C (77°F).

Recharge of the stored maintenance free battery every:

6 months when the ambient storage temperature is 20°C (68°F)

3 months when the ambient storage temperature is 30°C (86°F)

2 months when the ambient storage temperature is 35°C (95°F)

3.4. Site & Environment Consideration

Usually the life expectancy of the DC UPS system is 8 to 10 years. The optimal life expectancy of the DC UPS system can be achieved by careful consideration of the site and environment.

The following precautions and recommendations should be checked when considering the site and environment for the DC UPS:

- a.** The DC UPS should be located in a place with adequate ventilation (refer to the specification of the heat dissipation of the DC UPS). Should the DC UPS be installed in a sealed room, care must be taken to ensure adequate heat evacuation is provided.
- b.** Void space is not required on all sides of the DC UPS system, but adequate space, a minimum of 1m (3'), should be allowed at the front for the door to open and a minimum of 60cm (2') should be allowed on the right side to allow for the door to open and removal of the side panels for operation or maintenance purposes (exceptions to space requirements would occur with approved layouts). Adequate space, a minimum of 60cm (2') [recommended 1m (3')], should also be allowed at the top of the DC UPS system to allow for proper heat dissipation and ventilated through the top openings (optional ventilation booth is available upon request).
- c.** Do not place any objects on the top of the DC UPS that might obscure the ventilation. Do not place the DC UPS near any heat source, or machinery, which may produce metallic particles, dust or powder. Do not place the DC UPS near equipment that will produce corrosive substances or vapor.
- d.** Do not place the DC UPS below the shower of a fire extinguishing system (optional drip shield available). Abnormal conditions of the DC UPS should be protected by a cutoff from the power supply.
- e.** The user is required to guarantee the temperature and humidity values of the site into which the DC UPS will be installed, meet the required and published manufacturer specifications. The DC UPS should be installed within the range allowed by these specifications. The DC UPS is capable of continuous normal operation within a temperature range of 0°C (32°F) to 40°C (104°F). For optimal performance and reliability the recommended environment temperature is best at 25°C, with humidity < 80% non-condensing.
- f.** The floor loading capacity should be sufficient to endure the weight of the DC UPS and its internal batteries.
- g.** Walls, ceilings, floors or anything near to the DC UPS should be constructed of non-combustible materials. A portable fire extinguisher should be accessible nearby.

- h. Avoid accumulating litter or trash of any sort in or around the DC UPS system. The floor area surrounding the DC UPS should be kept clean, free from metallic powder and/or filings.
- i. Access to the DC UPS room should be limited to operation and maintenance personnel. The doors should be kept locked and the keys should be available only to authorized personnel.
- j. Personnel who operate or maintain the DC UPS system should be proficient in normal and emergency operational procedures. New personnel should be trained and qualified prior to operation of the equipment.

3.5. Unpacking

Once in room of final destination, carefully remove all the packaging material from the DC UPS and place the DC UPS in its final position.

This DC UPS system has passed all stages of production testing and final QC testing prior to shipment from the factory (report enclosed). The DC UPS should be in full operating condition upon receipt. Upon receiving **visually check the DC UPS for any physical damage** that may have occurred during transport. If damage is noticed file a damage report immediately with the transport company and inform Always On directly. Also check to ensure all of the accessories and/or options ordered are received.

- DOOR KEY
- INSTALL AND OPERATOR'S MANUAL

Check and verify the specifications of the DC UPS are identical to the specifications of the system ordered. The key items in the specifications you must check are:

- RATED POWER OF THE DC UPS
- INPUT VOLTAGE & FREQUENCY
- OUTPUT VOLTAGE & FREQUENCY

3.6. Cable Selection

The cabling of the DC UPS system has to be sized according to the UPS power rating.

Sizing of circuit breakers, fuses and cables for input utility, output load and battery must meet the requirements of local and national electrical codes.

WARNING

Inadequate cable size and over sized breakers can increase the risk of fire or damage connection cables and internal components.

4. 24VDC UPS SYSTEMS LAYOUT DRAWINGS

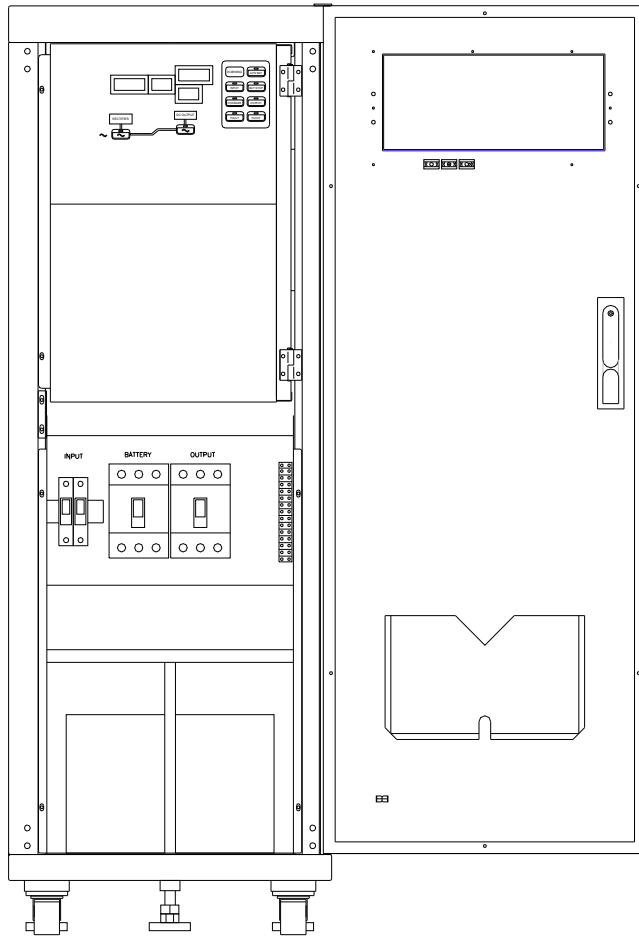


Figure 4.1
Front View of System with Door Open
Single Wide

5. DC UPS WIRING DIAGRAMS

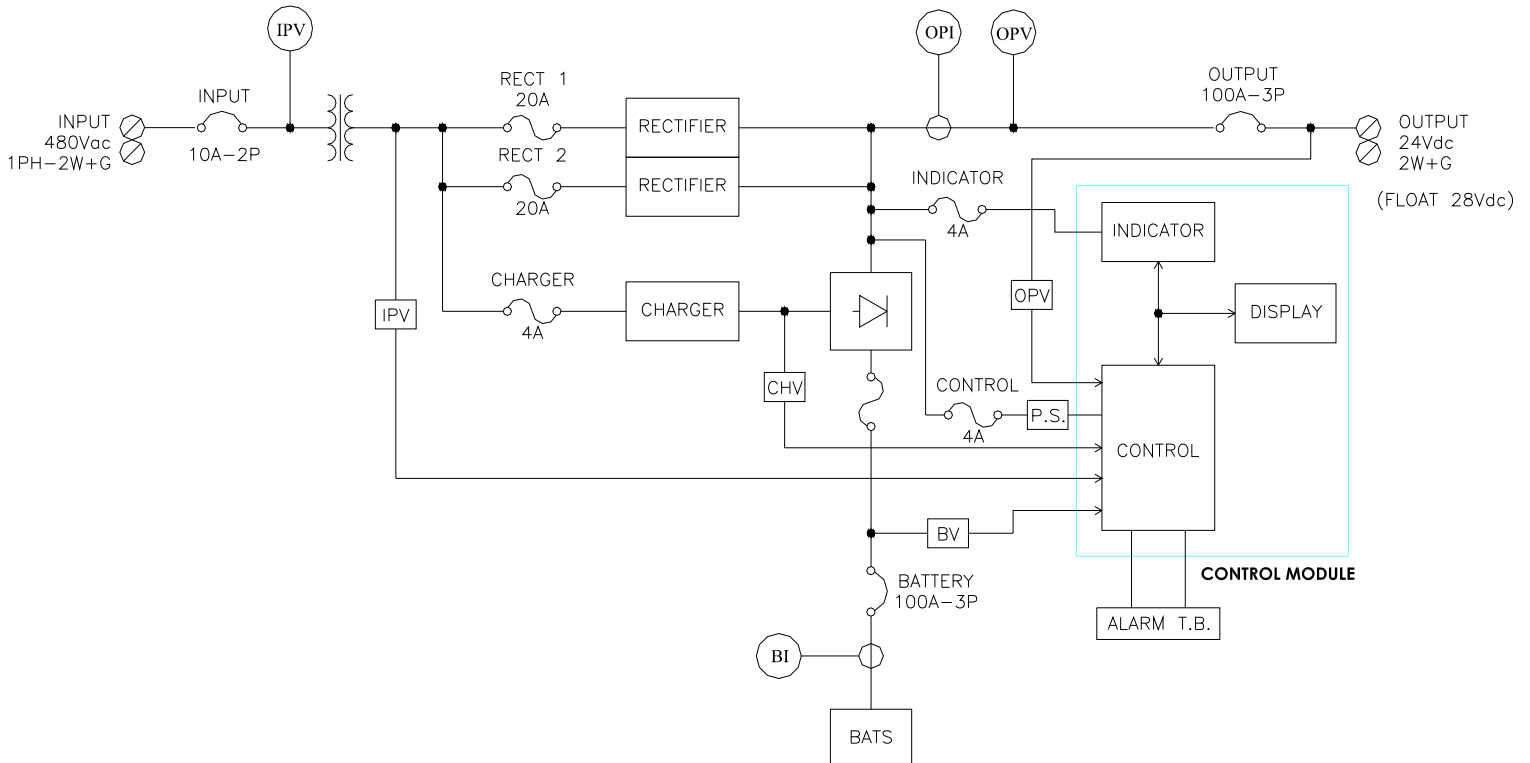 


Figure 5.1
DC-UPS Single Line

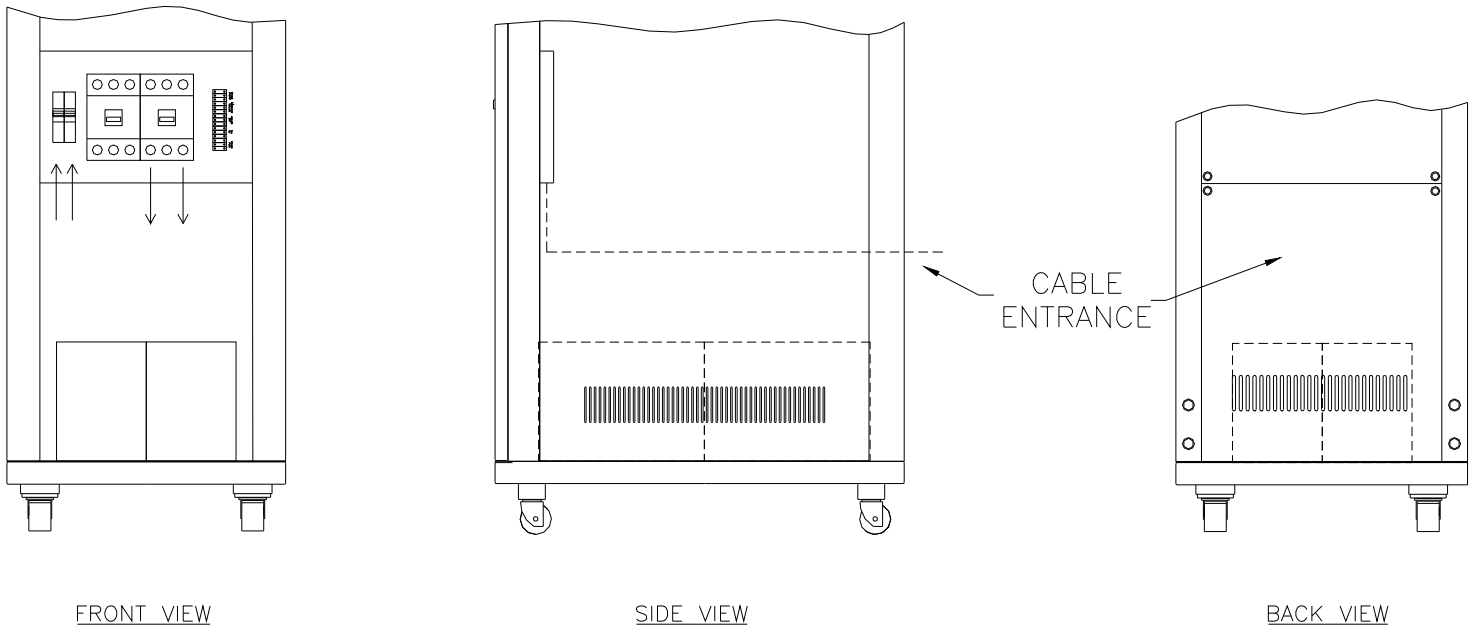


Figure 5.2
DC UPS Power Cabling Diagram

6. TERMINAL STRIP LAYOUT



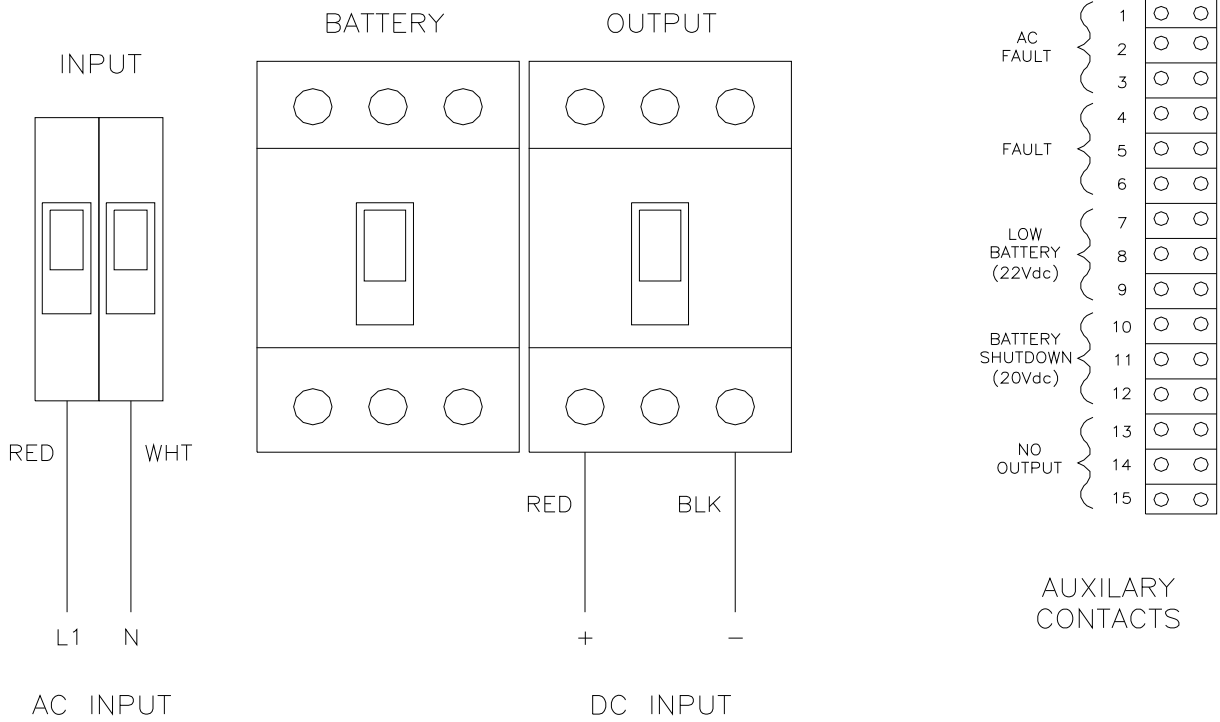 


Figure 6.1
Terminal Strip Layout


7. C-CHANNEL INSTALLATION

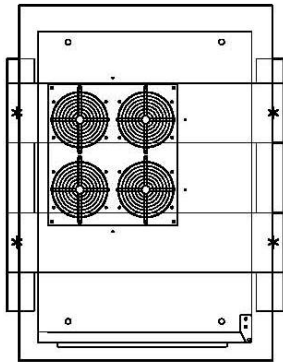


TOP VIEW

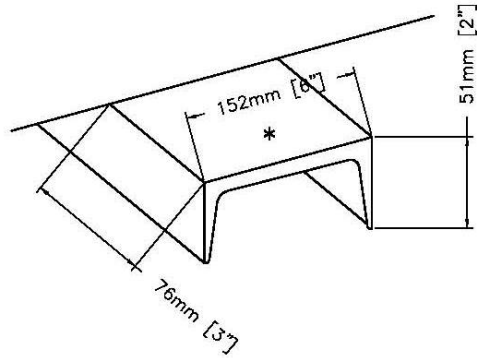

CHANNEL DETAIL
(ALL LOCATION)

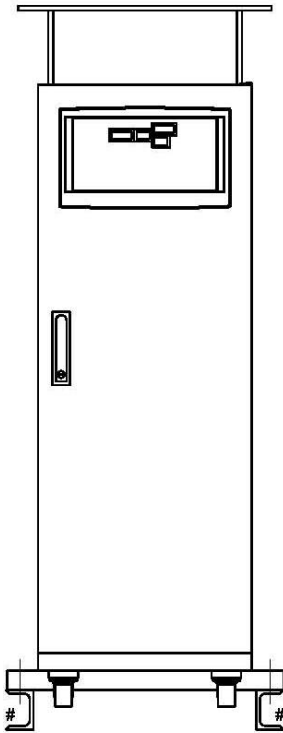

FRONT VIEW

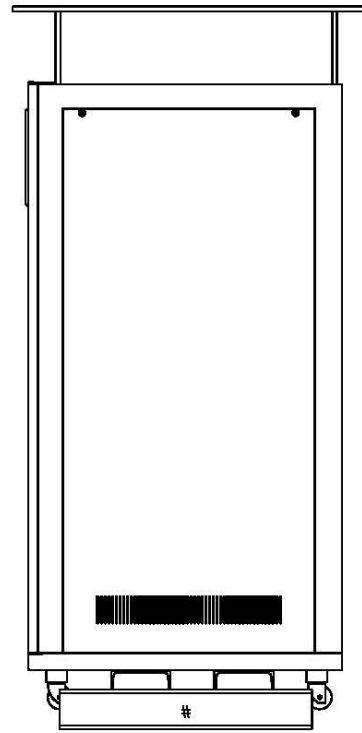

SIDE VIEW

* SECURING CHANNELS TO BE
DRILLED AS REQUIRED BY INSTALLER

NOT SUPPLIED

8. OPERATION INSTRUCTIONS

1.1. Startup Procedure

- a. Turn ON the INPUT breaker.
- b. Wait 5 seconds for the “Charger LED” to start flashing.
- c. Turn ON the BATTERY breaker.
- d. Turn ON the OUTPUT breaker.

1.2. Shutdown Procedure

- a. Turn OFF the OUTPUT breaker.
- b. Turn OFF the BATTERY breaker.
- c. Turn OFF the INPUT breaker.

CAUTION: Batteries will become damaged upon over-discharge. Upon “BATTERY STOP ALARM”, shutdown loads and the DC UPS System.

9. FRONT PANEL


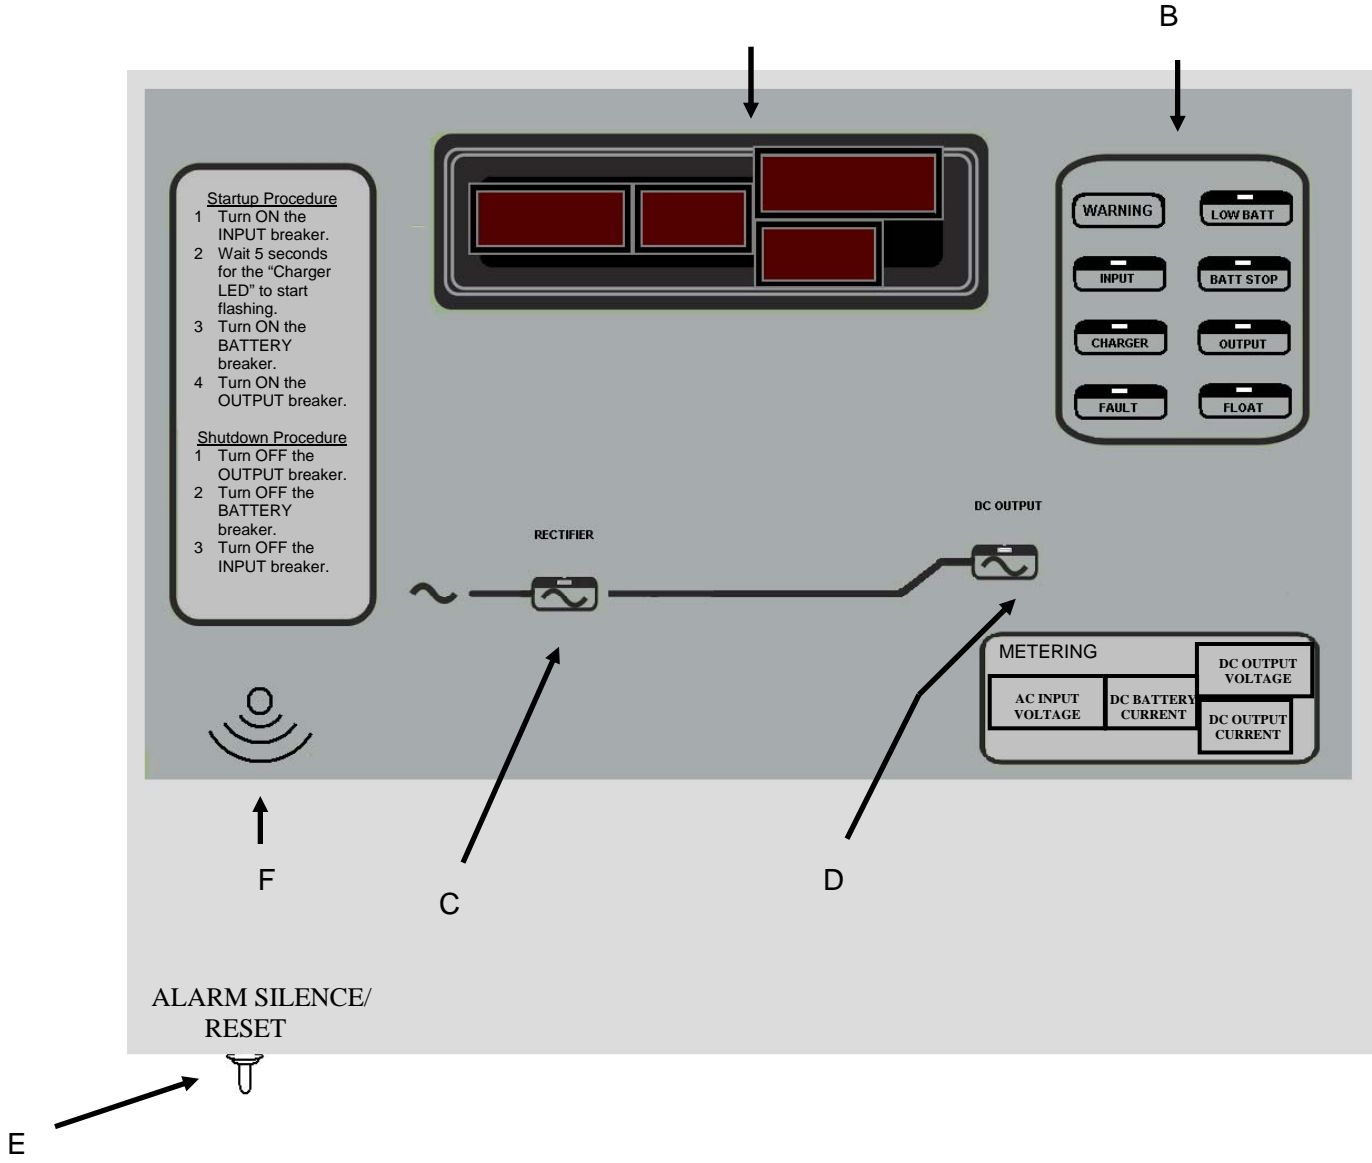


Figure 7.1
Front Panel Display

A: Metering- The GES-242N-R incorporates 4 digital displays for the user to monitor their Voltages and Currents.

 1. **Input AC voltage:** Detects the input AC, allowing the user to monitor the 480 VAC required to power the UPS.
2. **Battery Current:** This ammeter detects both charge and discharge current of the batteries. The ammeter has a range of +/- 200 ADC.
3. **DC Output Voltage:** Detects the DC output voltage supplied to the Load.
4. **DC Output Current:** This ammeter detects the output current on the main bus bar. The ammeter has a range of +/- 200 ADC.

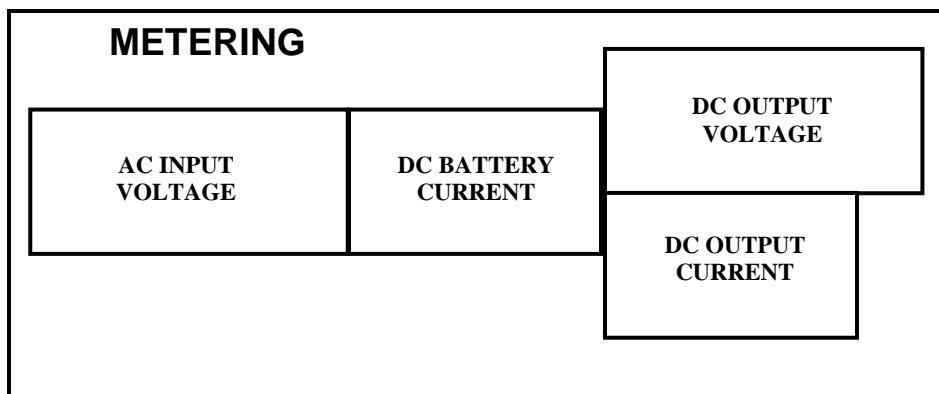

B: Warning LED's-When an abnormal condition occurs, these LED's will illuminate allowing the user to identify the fault. This will also allow the service personnel the ability to troubleshoot the system. These LED's are described below:

- **INPUT** – No AC Voltage is detected on the input of the UPS.
- **CHARGER** - The LED will illuminate continuously when the charger fails to deliver the necessary voltage to charge the batteries. The LED will flash if the Battery Breaker is open.
- **FAULT** - tells the operator that one or both DC rectifiers have failed and to immediately shut the UPS down
- **BAT LOW** - This alert is designed to inform the operator that the battery voltage is below 22.0 VDC and serve as a reminder to shut the system down if the UPS is no longer needed.
- **BAT LOW STOP** – This alert is designed to inform the operator that the battery voltage is below 20.5 VDC and that the UPS system should be shut down immediately to prevent damage to the batteries.
- **OUTPUT** - The output status indicator is designed to inform the operator of the status of the output breaker. If the breaker is open the red LED will illuminate. Once the breaker is closed, the LED will go out.
- **FLOAT** – The Batteries are fully charged.

C. Rectifier LED: This LED is lit when the rectifier is operating, the supply is within operating parameters, and the input breaker is closed.

D. Output LED: This LED is lit when there is DC power present at the output terminals.


E: Callback Switch:

Is installed to allow the user to silence the buzzer when a fault arises while they are working on the unit. Once the system is repaired and functioning properly the buzzer will re-activate letting the user know to put the toggle switch back into the normal operating mode.

F: Buzzer outlet: There is a buzzer located behind the LCD Display. The buzzer will allow for a continuous audible notification during an abnormal condition. The buzzer will be activated under one of the following conditions: (During some conditions, the buzzer is mutable. These functions are described for your reference.)

- | | |
|---------------------------------------|-------------|
| • INPUT BREAKER IS OPEN | Mutable |
| • ABNORMAL CHARGER CONDITION | Un-Muteable |
| • ABNORMAL RECTIFIER CONDITION | Un-Muteable |
| • LOW BATTERY | Mutable |
| • BATTERY SHUTDOWN | Un-Muteable |
| • OUTPUT BREAKER IS OPEN | Mutable |

 10. RELAY CONTACTS

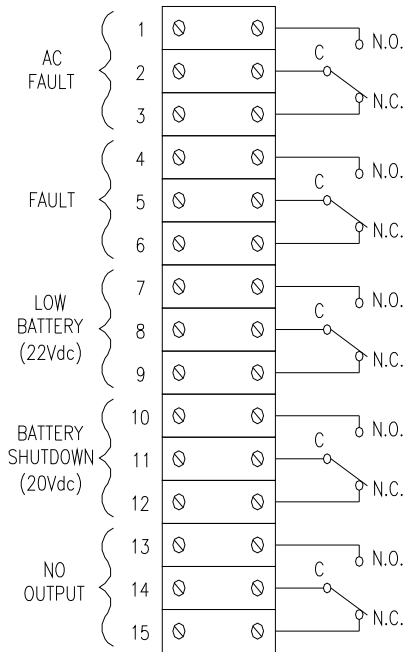

AC FAULT: Tells the end user that no AC Voltage is present on the input of the DC UPS.

FAULT: Is designed to inform the operator when the charger fails to deliver the necessary voltage to charge the batteries. It is also designed to inform the operator that one or both DC rectifiers have failed and that the DC UPS should be immediately shut down.

LOW BATTERY: This alert is designed to inform the operator that the battery voltage is below 22.0 VDC and serve as a reminder to shut the system down if the UPS is no longer needed.

BATTERY SHUTDOWN: This alert is designed to inform the operator that the battery voltage is below 20.5 VDC and that the DC UPS system should be shut down immediately to prevent damage to the batteries.

NO OUTPUT: The output status indicator is designed to inform the operator of the status of the output breaker.

11. DIMENSIONAL DRAWING

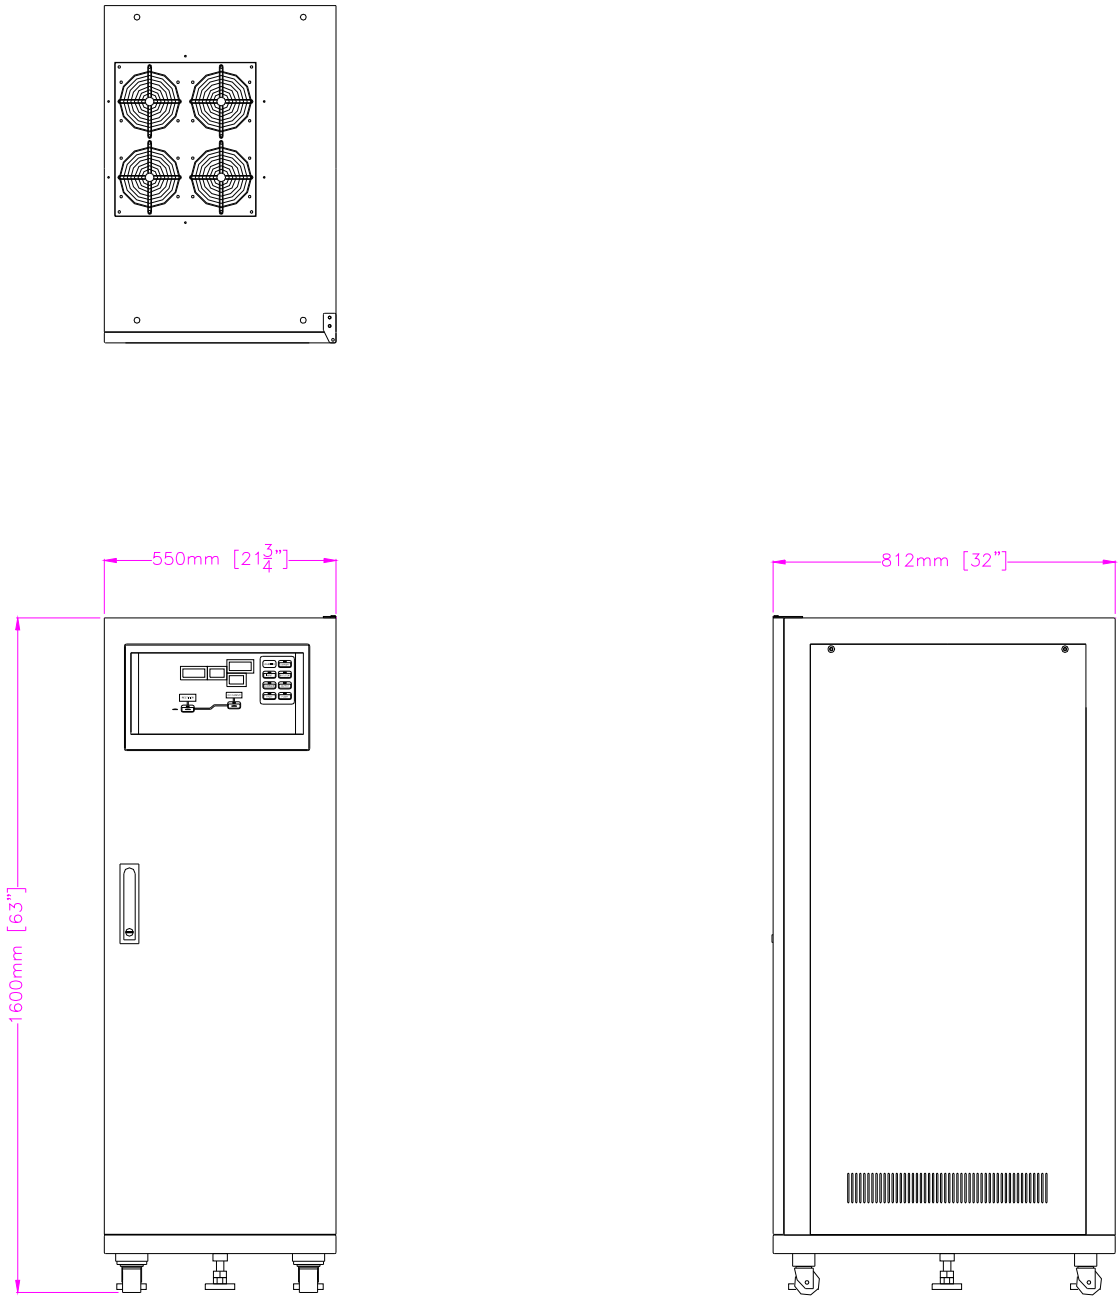


Figure 8.1
24VDC DC UPS Exterior Layout

12. CONTACT INFORMATION

QA / Warranty Questions

Always On UPS Systems Inc.

1 – 150 Campion Road,
Kelowna, BC, Canada, V1X 7S8
Phone: (250) 491-9777 Ext 209
Fax: (250) 491-9775
Email: qa@alwayson.com
Website: www.alwayson.com

Software Questions

Always On UPS Systems Inc.

1 – 150 Campion Road,
Kelowna, BC, Canada, V1X 7S8
Phone: (250) 491-9777 Ext 204
Fax: (250) 491-9775
Email: webmaster@alwayson.com
Website: www.alwayson.com

Additional Purchases or Upgrades

Always On UPS Systems Inc.

1 – 150 Campion Road,
Kelowna, BC, Canada, V1X 7S8
Phone: (250) 491-9777 Ext 451
Fax: (250) 491-9775
Email: sales@alwayson.com
Website: www.alwayson.com