 




7" Dual Screen Portable DVD Player

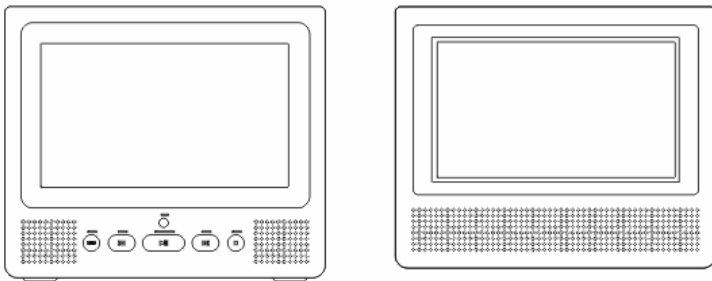

AXN-6979

Content

A. Cautions and Warning.....	3
B. Unit View.....	4
C. Monitor View.....	7
D. Powering and Installation.....	8
E. Remote Control View.....	10
F. Setup.....	13
G. Connecting to Headphones.....	17
H. Specifications.....	18
I. Trouble Shooting.....	18

What's included:

- 1 x 7" LCD Screen with DVD Player**
- 1 x 7" Extra LCD Screen for Dual Display**
- 1 x AC to DC Adapter**
- 1 x Remote Control with Battery (CR2025)**
- 1 x Instruction Manual**
- 1 x AV Cable**
- 1 x Car Cigarette Lighter Adapter**
- 2 x Straps**
- 1 x Din Cable**
- 1 x Carrying Bag**

A. Cautions and Warnings

1. Placement

To prevent fire or electric shock, do not expose this appliance to rain or moisture. Do not place the set on an unstable cart, stand, tripod, bracket or table to prevent it from falling. Keep the unit away from strong magnets, heat sources, direct sunlight, excessive dust. If the unit is brought directly from a cold to a warm location, moisture may condense inside the unit. When you move it from a cold to a warm location, wait for about one hour till the moisture evaporates before operating the unit.

2. Installation

Ensure that the portable DVD player is installed in accordance with the instructions and illustrations provided in this manual.

3. Caution

 
Do not push objects of any kind into the unit through openings; do not spill or spray liquid of any kind on or in the system (this may result in a fire or electric shock). Do not place anything heavy on the unit. To ensure proper ventilation and proper operation, never cover or block openings with a cloth or other material. Keep the unit away from an open flame such as fire, candle etc. Do not use the unit in temperatures higher than 104 degrees Fahrenheit or 40 degrees Celsius.

4. Disc

Do not use irregularly shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction. Do not stick paper, tape or glue on the disc. Do not expose the disc to direct sunlight or heat sources. Do not touch the surface of disc. Handle the disc by its edge. Clean the disc by wiping the disc from the center out with a cleaning cloth. Remove the disc from the unit and store it in its case after playing. Some playback operations of discs may be intentionally fixed by software producers. Since this unit plays discs according to the disc contents the software producers designed, some playback features may not be available. Also refer to the instructions supplied with the discs.


B. Unit View

1. Front

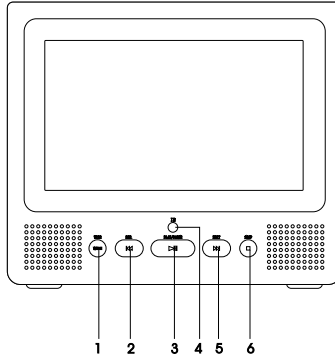


- 1). Wide Button: Switches the LCD screen between the 16:9 and 4:3 screen displays.
- 2). PREV. Button: Skip to the previous titles, chapters, or tracks.
NOTE: Press this button for 3 seconds to scan backward at 2, 4, 8, 16 or 32 times normal playback speed.
- 3). Play/Pause Button: Press to start playback. When a disc is playing, press to pause playback. Press again to resume playback.
- 4). Remote Sensor: Receives signals from remote control.
- 5). Next Button: Skip to the next titles, chapters, or tracks.
NOTE: Press this button for 3 seconds to scan forward at 2, 4, 8, 16 or 32 times normal playback speed.
- 6). Stop Button: Stop the playback of the DVD or CD.

 2. Back

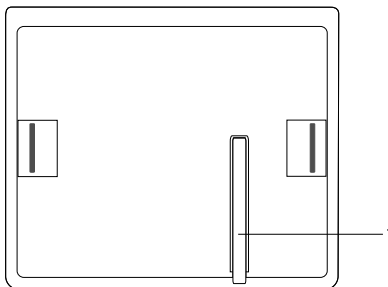


- 1). Kickstand

 3. Right

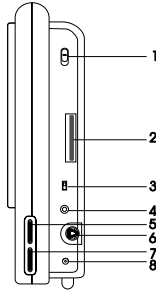

- 1). Power On/Off Switch
Turns the player on or off.
- 2). Column for Binding
- 3). AV In/Out Switch
Switches the A/V jack between input and output.
- 4). A/V Jack
Connects to an external audio/video source (A/V in) or player (A/V out) like a monitor or amplifier.
- 5). Brightness Control
Adjust the brightness.
- 6). DVD Port
Connects to the monitor with the DIN cable.
- 7). Volume Control
Adjust the Volume.
- 8). DC Input Jack
Connects to the AC to DC adapter or car cigarette lighter adapter.

 4. Left

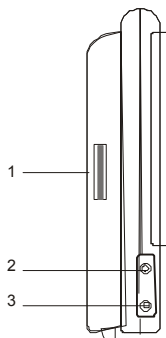

1). Column for Binding

 
2). Headphone Jack 1

Connect a set of headphones here. Disable the internal speakers.

3). Headphone Jack 2

Connect a set of headphones here. Disable the internal speakers.


5. Top

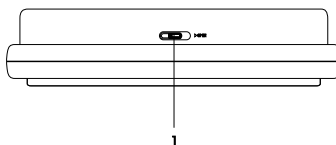

1). Open Switch: Opens the disc tray.


C. Monitor View

 LEFT

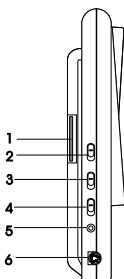

- 1). Strap Connector: Attach one end of a carrying strap here.
- 2). Power On/Off Switch
Turns the player on or off.
- 3). 16:9 4:3 Button
Switches the LCD screen between the 16:9 and 4:3 screen displays.
- 4). AV DIN Switch: Switches between A/V and DIN mode.
- 5). AV IN Jack
Connects to an external audio/video source.
- 6). Monitor Port
Connects to the DVD port with the Din cable.

 RIGHT

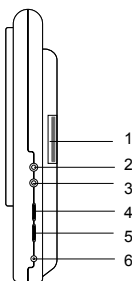

- 1). Strap Connector: Attach one end of a carrying strap here.
- 2). Headphone Jack 1
Connect a set of headphones here. Disable the internal speakers.
- 3). Headphone Jack 2
Connect a set of headphones here. Disable the internal speakers.
- 4). Brightness Control
Adjust the brightness.
- 5). Volume Control
Adjust the Volume.
- 6). DC Input Jack
Connect to the AC to DC adapter.

D. Powering and Installation

1. Powering the system indoors

 
Plug one end of the AC to DC adapter into the DC jack on the side of the main unit, then plug the other end into the 100~240V AC power outlet.

2. Powering the system in a car

Plug one end of the cigarette lighter adapter into the DC jack on the unit, then plug the other end into the cigarette lighter socket.


Note: Unplug the apparatus from the power source when not in use for an extended period of time.

3. Connection with DVD player and monitor

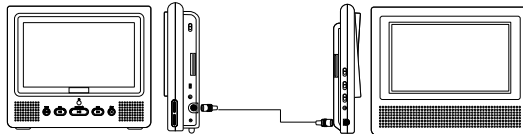

Note: Connect the DVD player and Monitor with the attached Din Cable

 4. Positing the DVD Player/Monitor on Headrest

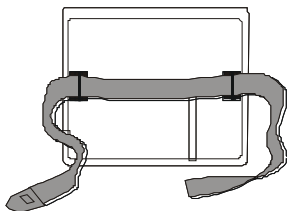


Step 1



Step 2

Note: Install the DVD player/Monitor according to the above steps

 E. Remote Control View

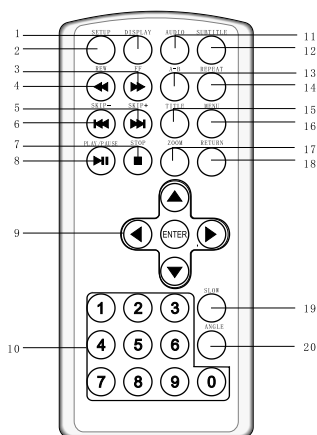

1) Display

Display information about the DVD, such as title, chapter number, track number and time.

2) Setup

Enter or exit the setup menu.

3) Fast Forward

Scan forward at 2,4,8,16,or 32 times normal playback speed.

4) Rewind

Scan backward at 2,4,8,16,or 32 times normal playback speed.

5) Skip+

Move forward to previous title or chapter.

6) Skip-

Move back to the next title or chapter.

7) Stop

Press once to stop playback. The player remembers where you stopped playback and you can restart playing at this point.

Press twice to stop playback. The player dose not remember where you stopped playback.

8) Play/Pause

Start playback or pause playback.

9) Up/Down/Enter/Right/Left

Navigate in the menus and confirm your selection.

10) Numbers

Use to select an item in a menu or enter a password.

11) Audio

Select the audio language for the DVD.

12) Subtitle

Select the subtitle language or turn on subtitles.

13) A-B Repeat

Repeat a specific portion of a disc.

14) Repeat

Repeat playing the title, chapter or track.

15) Title

Show the DVD title menu.

16) Menu

Press once to show the DVD root menu. Press twice to show title menu.

17) Zoom

Enlarge the image 2, 3, or 4 times the original size.

18) Return

Press once to return to the previous menu.

19) Slow

Play forward or backward at 1/2, 1/4, 1/8 and 1/16 times speed.

20) Angle

Change the viewing angle of a scene.

F. Setup

1. General Setup Page

- 1) Press 'SETUP' to display the Main screen of the Setup Menu on the screen and "General Setup Page" appears. At the same time, " " is highlighted. Press 'SETUP' again to exit the Setup Menu and the unit will resume its last playback mode.
 - 2) Press the ENTER button, "TV Display" is highlighted.
 - 3) Press the ▲ or ▼ button to select the other menus in general setup page.
 - 4) Press ► to enter the sub menu.
 - 5) Press the ▲ or ▼ button to select the sub menu and press the ENTER to confirm your selection.
 - 6) Repeat steps 3-5 for other menus.
- Note: Press ◀ to return the previous menu.

a) TV Display

- * Normal/PS: When the player outputs signal to a normal TV, Wide-screen images are shown on the screen. but with some parts cropped automatically.
- * Normal/LB: When the player outputs signal to a normal TV, a normal picture is shown on the screen with a black strip at both the top and bottom of the screen.
- * Wide: When the player outputs signal to a wide screen TV, a wide picture is shown on the full screen.

b) Angle Mark

- * On: The screen will show the angle mark icon. (*If an angle option is available).
- * Off: The screen will not display the Angle Mark

NOTE: Not all discs contain above features. The above features are disc dependent.

c) OSD Lang

You can choose one out of several different languages as the OSD setup language

d) Screen Saver

*On: Enables screen saver

NOTE: The DVD player will enter the Screen Saver mode after approximately five minutes if the same image remains on the screen.

*Off: Disables screen saver (off)


e) Last Memory

*On: The unit will return to the last position on the disc.

*Off: The unit will not return to the last position on the disc.

NOTE: The Last position memory function only effect when the DVD tray is open.

2. Video Quality Setup

1) In Setup menu, Press the ◀ or ▶ button to select "Video Quality Setup" and  is highlighted. Press ENTER to enter the video quality setup page.

2) Press the ENTER button, "Brightness" is highlighted.

3) Press the ▲ or ▼ button to select the other menus in the video quality setup page.

4) Press ▶ to enter the sub menu.


5) Press the ◀ or ▶ button to adjust the quantity and press the ENTER to confirm your selection.

6) Repeat steps 3-5 for other menus.

Note: Press **ENTER** to return the previous menu.


a) Brightness b) Contrast c) Hue d) Saturation

3. Password

In Setup menu, Press the ◀ or ▶ button to select "Password Setup Page" and  is highlighted. Press ENTER to enter the password page. Press ENTER twice to enter the Password Change Page. Input the Old Password or the Default Password, the New Password, and Confirmed the New Password. Press ENTER to confirm the change.

Note: The default password is 3308.

4. Preference Page (with no disc on the player)

- 1) In Setup menu, Press the ◀ or ▶ button to select "Preference Page" and  is highlighted. Press ENTER to enter the Preference Page.
- 2) Press the ENTER button, "Audio" is highlighted.
- 3) Press the ▲ or ▼ button to select the other menus in preference page.
- 4) Press ▶ to enter the sub menu.
- 5) Press the ▲ or ▼ button to select the sub menu and press the ENTER to confirm your selection.
- 6) Repeat steps 3-5 for other menus.

Note: Press ◀ to return the previous menu.

- a) Audio
- b) Subtitle
- c) Disc Menu

Note: Language and subtitle selection are only available for discs that are recorded in the above listed languages. If the selected language is not available, the player will play and display on the screen the original recorded language contained in the disc.

d) Parental

Select 'Parental' by pressing the ▲ or ▼ button in the preference page. And Press ► to enter the sub menu. Select the parental level you desire using ▲ or ▼ button for discs with lock-out function or multiple rating levels. These are listed from the lowest level (1 Kid Safe) to the highest level (8 Adult). Press ENTER and input 4 digit password, then press ENTER again to confirm the parental level setting.

- 1 KID SAFE
- 2 G
- 3 PG
- 4 PG-13
- 5 PG-R
- 6 R
- 7 NC-17
- 8 ADULT

NOTE: The level of 8 Adult is the factory default.

e) Default

Select 'Default' by pressing the ▲ or ▼ button in preference page. And Press ► to enter the sub menu. Press ENTER to make the setting return to the factory-set mode.

 
NOTE: The parental setting is not affected by the default reset function. The master password is **3308**. This password is always effective even after you have selected your own password and changed it. To avoid the possibility of others using the default password to set the parental level and change the password, you can record this master password in another area and delete it from this manual. Some discs can be limited depending on the age of users while some discs cannot.

5. Exit Setup Menu


Press Enter to Exit the Setup menu.

G. Connecting to Headphone

Wired headphone may be used with the DVD or Monitor, Simply plug in the headset to either Headphone 1 Jack or 2 jack on the Right DVD or Left Monitor.

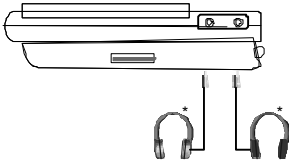

DVD

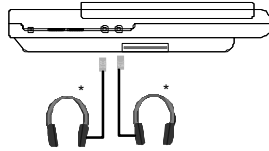 

Monitor

Plugging into Headphone jack 1/2 disable the internal speakers.

H. Specifications

DVD Player

Compatible DISC:	DVD/CD/MP3
Signal system:	NTSC
Panel size:	7 Inches
Audio S/N:	Better than 60 dB
Dynamic range :	Better than 85 dB
Power source:	DC 9-12V
Operating temperature:	5°C~35°C
Weight :	0.73Kg
Dimensions (W x D x H):	8.19 X 6.93 X1.89 inches 208 X 176 X 48 mm

Single Monitor

Colour System:	NTSC
Screen Size:	7 Inches
Power Supply:	DC 9-12V
Operating Temperature:	41~95°F(5~35°C)
Operating Humidity:	10-75%
Storage Temperature:	14~140°F(-10~60°C)
Dimensions (W x D x H):	8.19 X 6.69 X1.26 inches 208 X 170 X 32 mm
Weight:	0.41Kg

Design and Specifications are subject to change for product improvement without notice

I. Trouble Shooting

No sound or distorted sound?

Make sure your DVD is connected properly. Make sure all cables are securely inserted into the appropriate jacks.

Can't advance through a movie?

You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.

Trouble Shooting

The icon () appears on screen?

The feature or action cannot be completed at this time because:

1. The disc's software restricts it.
2. The disc's software doesn't support the feature (e.g., angles)
3. The feature is not available at the moment.
4. You've requested a title or chapter number that is out of range.

Picture is distorted?

1. The disc might be damaged. Try another disc.
2. It is normal for some distortion to appear during forward or reverse scan.

No forward or reverse scan?

1. Some discs have sections that prohibit rapid scanning or title and chapter skip.
2. If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movies often programmed to prohibit skipping through it.

IR sensor inoperative?

1. Verify that the batteries in the remote are fresh.
2. Verify that the remote sensor eye is not obstructed.
3. Verify that the infrared transmitter is affixed over the sensor eye of the component to be controlled.

Disc won't play?

1. Insert a disc with the label side facing up.
2. Check the type of disc you put into disc tray. This DVD only plays digital video discs, audio CDs and MP3s.

Play starts, but then stops immediately?

1. Both the unit and the disc are coded by region. If the regional codes don't match, the disc can't be played. This DVD is Region Number 1.
2. The disc is dirty. Clean it.
3. Condensation has formed. Allow player to dry out.

America Action, Inc. (“AXN”) Product Warranty Information

What the warranty covers:

America Action, Inc. (“AXN”) warrants your AXN products against defects in material and workmanship during the warranty period from the original date of purchase, subject to the following terms and conditions. If a product proves to be defective in material or workmanship during the warranty period, AXN will, at its discretion, repair or replace the product with a similar product provided the purchaser adheres to certain return authorization procedures and guidelines.

How long the warranty is effective:

AXN products are warranted for one (1) year for parts and ninety (90) days for labor, starting from the original date of purchase/invoice.

What brand(s) can be covered under the warranty:

Any “ACTION” and “AXION” branded products sold by America Action, Inc.

Whom the warranty protects:

The warranty is valid only for the original purchaser within the continental of USA.

What the warranty does not cover:

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - A. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - B. Repair or attempted repair by anyone not authorized by AXN.
 - C. Any damage of the product due to shipment.
 - D. Removal from or installation to the product.
 - E. Causes external to the product, such as electric power fluctuations or failure.
 - F. Use of supplies or parts not meeting AXN's specifications.
 - G. Normal wear and tear.
 - H. Battery Leakage.
 - I. Any other cause which does not relate to a product defect.
3. Cosmetic damage by purchaser, such as markings, discoloration, scratches, dents, gouges or any other defacement.
4. Physically damaged products by purchaser, such as broken PCB, Housing, damaged LCD Module.
5. No Defect Found (product returned to AXN as defective but failure is not duplicated by AXN's test method).
6. Customer instruction, installation, set up adjustments, or signal reception problems.
7. Rechargeable batteries.
8. Product without proof of purchase. (The proof of purchase should be one of the following documents: purchase receipt, gift receipt, sales invoice, and packing list that contains the product model number, price, vendor, and purchase date.)
9. Ninety (90) days after the original purchase date of the AXN product, the customer is responsible for the shipping fees incurred for the product delivery to and from AXN service center.

How to get service:

1. For additional information on obtaining an extended warranty service, contact your AXN dealer or AXN's Customer Service Department by e-mailing to customerservice@axionzone.com

To obtain warranty service, you will be required to do one of the following: fill out an online [RMA Request Form](#), print the form, fill it out and fax it to 1-909-869-5545, or call AXN's Customer Service number at 1-909-869-6600. You will be asked to provide the following information:

- A. Customer information (name, day-time phone number, and/or residential address).
 - B. Proof of your purchase (purchase receipt, gift receipt, sales invoice, and/or packing list).
 - C. Product model number.
 - D. Product serial number.
 - E. A description of the problem.
 - F. Payment information (If any payment is required, you will be asked to provide this information beforehand. Currently, we only accept personal check, money order or cashier's check. The time for us to clear a personal check is approximately 20 days; 10 days for any money order or cashier's check.
2. AXN will contact the customer upon receipt of the RMA Request Form, and will issue an RMA number if the RMA Request Form is completed and delivered as requested.
3. Please take or ship RMA product to AXN or any AXN authorized service center with RMA number clearly and marked on the outside of the packing. All RMA products should be returned in secured packaging, preferably in the original package, with the complete set of accessories. We recommend that you insure the package in case of loss or damage during shipping.
4. Upon receiving the RMA product, if the correct RMA number is clearly marked on the packaging, and if the repair payment is pre-paid or is enclosed with the package, depending on the condition of the defects, AXN will repair or replace all RMA products, and ship the product back to the customer.
5. For additional information or the name of the nearest AXN service center, please contact your AXN dealer or AXN Customer Service.

Before contacting us:

In many cases, your product may not need repair. Before contacting us, please consult the troubleshooting section in your user's guide or AXN's FAQ webs page to see if you can easily remedy the problem yourself.

AXN technical support services:

During the period of product warranty, we support your basic configuration, setup and troubleshooting questions; and when necessary, we will provide you with all the instructions on how to return your product for repair.

For customer service and support inquiries, please call 1-909-869-6600 or e-mail us at customerservice@axionzone.com

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AXN SHALL NOT BE LIABLE FOR ANY

INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

AMERICA ACTION INC.
100 EXCHANGE PL
POMONA, CA 91768
PH: (909) 869-6600
FAX: (909) 869-5545
CONTACTUS@AXIONZONE.COM
[HTTP://WWW.AXIONZONE.COM](http://WWW.AXIONZONE.COM)