


# Canon

## Direct Print User Guide

Printing Using a Direct Camera/Printer Connection

ENGLISH

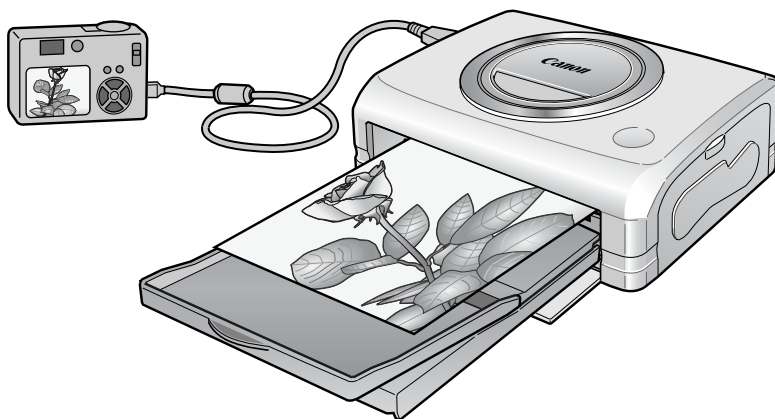











Depending on your camera model, some printing instructions may also be included in the *Camera User Guide*. However, you must read this guide as well for complete printing instructions.

# Confirm Your Printer Model

The following printers can be connected to your camera. Printing operations may vary depending on your printer model. After you have connected the camera to the printer, check the icon that appears in the upper left corner of the camera's LCD monitor and refer to the relevant pages accordingly.

- For camera and printer connection instructions, please refer to page 5.

| Printer                   | Canon Printer  |   |   |   | Non-Canon<br><i>PictBridge</i><br>Compliant<br>Printers   |
|---------------------------|--|---|---|---|---|
|                           | CP Printer   |   | BJ Printer  |   |   |
|                           | <i>PictBridge</i><br>Compliant*  | <i>Canon</i><br><i>Direct Print</i><br>Compatible | <i>PictBridge</i><br>Compliant*   | <i>Canon</i><br><i>Direct Print</i><br>Compatible |   |
|                           |   |   |    |   |    |
| Cable                     | USB Interface Cable<br>IFC-300PCU**<br>(Supplied with the camera)  |   | USB Interface<br>Cable<br>IFC-300PCU<br>(Supplied with the<br>camera)   | See your<br>BJ printer's user<br>guide.           | USB Interface<br>Cable<br>IFC-300PCU<br>(Supplied with the<br>camera)   |
| LCD<br>Monitor<br>Display |   |   |    |   |   |
|                           |  <b>Canon Direct<br/>Printing with<br/>CP Printers</b><br>p. 6 – 12 |   |  <b>PictBridge<br/>Printing with<br/>BJ Printers</b><br>p. 13 – 21 |   |  <b>Canon Direct<br/>Printing with<br/>BJ Printers</b><br>p. 22          |
|                           |  |   |   |   |  <b>PictBridge<br/>Printing with<br/>Non-Canon<br/>Printers</b><br>p. 23 |

\* When connecting a Non-Canon *PictBridge* Compliant camera, please refer to the camera's user guide.

\*\* CP-100/CP-10: Direct Interface Cable DIF-100 (Supplied with the printer)

## PictBridge Compliance

This camera complies with the industry standard "PictBridge"\*. This allows you to also connect your camera to non-Canon *PictBridge* compliant printers and print images with simple operations using the camera buttons.

\* *PictBridge*: *PictBridge* is a new industry standard for direct printing that allows you to print images without using a computer by directly connecting digital cameras and digital camcorders (hereafter "camera") to a printer, regardless of the devices' brand and model.



## Printing Selected Images with DPOF Settings





This option allows you to select images for printing and print settings, such as the number of copies, with the camera (DPOF\* print settings). This is very convenient when you want to print several images at once or have them printed at a photo lab.

\* *Digital Print Order Format*

Please see the *Camera User Guide* for details on how to select DPOF print settings. This guide explains how to print images that have already been selected.

# Table of Contents

---

|   |    |
|---|----|
| Read This First .....   | 4  |
| Camera/Printer Connection .....   | 5  |
|  <i>Canon Direct</i> Printing with CP Printers .....      | 6  |
|  <i>PictBridge</i> Printing with BJ Printers .....        | 13 |
|  <i>Canon Direct</i> Printing with BJ Printers .....      | 22 |
|  <i>PictBridge</i> Printing with Non-Canon Printers ..... | 23 |
| Settings that Can Be Set with the Camera .....  | 24 |



## Disclaimer

- No part of this guide may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without the prior written permission of Canon.
- Canon reserves the right to change the specifications of the hardware described herein at any time without prior notice.
- While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions.
- Canon makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the camera, the software, the memory cards, personal computers, peripheral devices, or use of non-Canon memory cards.

## Trademark Acknowledgements

- Canon, PowerShot and Bubble Jet are trademarks of Canon, Inc.
- Other names and products not mentioned above may be registered trademarks or trademarks of their respective companies.

Copyright ©2003 Canon Inc. All rights reserved.

# Read This First

---

## Printing Procedures

### 1 Preparing the Camera and the Printer

---

**Camera** When printing, the use of the compact power adapter\* (separately sold and/or included with the camera) is recommended. If a battery pack or batteries are used, be sure to use a fully charged battery pack or new batteries. For details, see the *Camera User Guide*.

---

**Printer** Please refer to the user guide that came with your printer and make the necessary preparations (paper, ink cassette, cartridge, etc.).

---

\* Some camera models do not come with a compact power adapter.



### 2 Connecting the Camera to the Printer

Please refer to page 5 to correctly connect your camera.

- For details regarding the printer connection settings, refer to the user guide that came with it.





 
### 3 Printing

Use the camera controls to select settings and start printing. Some printers may be equipped with an operation panel, but printing cannot be performed from the panel. Printing operations may vary depending on your printer model. Please refer to the reference pages in the *Confirm Your Printer Model* section (p. 2).

For the latest information regarding connections between Canon printers and cameras, please refer to the following URL:  
<http://web.canon.jp/Imaging/BeBit-e.html>

# Camera/Printer Connection


Connect the camera to the printer using the following procedures. (Please refer to your printer user guide for details about the printer connection.)

- Once the camera and printer are ready for printing, the ,  or  icon appears on the camera's LCD monitor.
- Printing procedures differ according to the icon that appears on the LCD monitor (p. 2).

## ■ Before You Connect the Camera

- Prepare the printer. (Refer to the printer's user guide.)
- Confirm which connection cable should be used (see page 2).

### 1 Connect the camera to the printer.

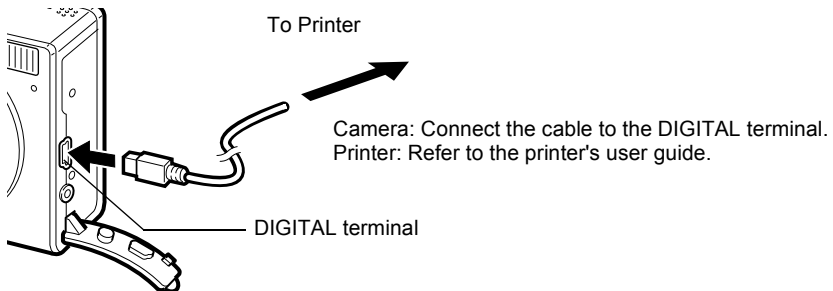

This illustration shows the PowerShot S400 DIGITAL ELPH/  
DIGITAL IXUS 400 as an example.

### 2 Turn the printer's power on.

### 3 Set the camera to Playback mode and turn the power on. Some camera models power up when the printer's power is turned on.

### 4 , or appears on the upper left corner of the LCD monitor. You can now print.



- The following operations are not available during a camera/printer connection.
  - Movie playback.
  - Language settings that use the **SET** button and the **MENU** button.

#### Disconnecting the Camera and the Printer

1. Detach the cable from the printer.
2. Turn the camera's power off.
3. Detach the cable from the camera.
  - When you detach the cable, hold the plug and do not pull by the cable.

# **Canon Direct Printing with CP Printers**

## Printing

- 1 Make sure that  displays in the upper left corner of the LCD monitor.



- 2 Display the images you wish to print and press the SET button.

The print order screen appears.

- Setting the Print Style (p. 7)* —
- Selecting the Number of Copies (p. 7)* —
- Setting the Printing Area (Trimming) (p. 8)* —



Print Order Screen

- 3 Select print settings as required.
- 4 Select [Print] and press the SET button.



You cannot print movies or images recorded in the RAW format.



### Cancel Printing

- To cancel printing between images printed, press the **SET** button. Once the current print is finished, a confirmation dialog appears. Select [OK] and press the **SET** button.

### Printing Errors

- An error message appears if an error occurs for some reason during the printing process. Select [Stop] or [Resume] and press the **SET** button. The [Resume] option may not appear with some types of errors. In that case, select [Stop].

## Selecting Print Settings

### ■ Selecting the Number of Copies

**1** In the print order screen, select [Copies] and specify the number of copies.

You can specify from 1 to 99 prints.

### ■ Setting the Print Style


You can select from among the following print styles.

|         |            |  |
|---------|------------|--|
| Image   | Standard   | Prints one image per page.                         |
|         | Multiple*  | Prints eight copies of the same image on one page. |
| Borders | Borderless | Prints right to the edges of the page.             |
|         | Bordered   | Prints with a border.                              |
| Date    | On         | Adds the date to the print.                        |
|         | Off        | Prints without the date.                           |


\* This option can be selected when printing on card size paper.

**1** In the print order screen, select [Style] and press the SET button.

**2** Select [Image], [Borders], or [Date].

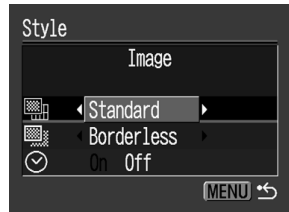


**3** Select settings as needed.

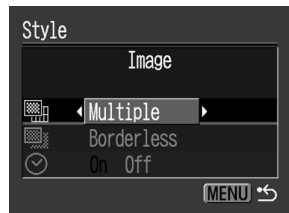

## 4 Press the MENU button to end the setting selection process.

With borderless or multiple prints, the top, bottom and sides of the image may be cropped slightly. If you have not specified a trimming setting, a frame will appear around the area of the image that will be printed, allowing you to check the portion that will be cropped.

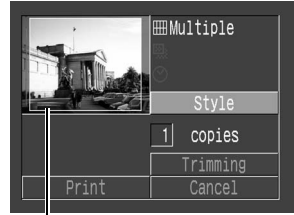

Print Area Frame



- When printing multiple prints, the borders and the date cannot be set. (Images are printed without any date or borders)
- Practically all of the image area displayed on the LCD monitor is printed on bordered prints.

## ■ Setting the Printing Area (Trimming)

You can specify which portion of an image gets printed. Please set the Print Style (Image, Paper, Borders and Date) first before setting the trimming settings. If the print style is changed after having made trimming settings, you must select the settings again.


With the PowerShot A60, the printing area settings differ. Please refer to the *Specifying the Printing Area (PowerShot A60)* section in the *Camera User Guide*.

## 1 In the print order screen, select [Trimming] and press the SET button.

The trimming frame will appear at the center of the image. If a trimming setting has already been selected for the image, the frame will appear around the previously selected portion.



The trimming setting screen differs depending on the camera model. Check which of the following screens appear before selecting settings.

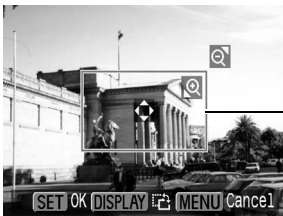

➔ Steps 2a and 3a

Trimming Frame



➔ Steps 2b and 3b



## 2a Trim the image.

### Changing the Size of the Trimming Frame

- Press the zoom lever or the zoom button to adjust the size of the trimming frame.
- The trimming frame can be changed to a minimum selection of approximately half the displayed image or a maximum selection that is virtually the same size as the image.
- Expanding the trimming frame beyond its maximum size cancels the trimming setting.
- When printing an image that has been magnified using the trimming option, the image quality may become coarser and grainier depending on the level of magnification. If this happens, the trimming frame displays in red.

### Moving the Trimming Frame

- Move the trimming frame using the multicontroller or the up, down, right and left buttons.

### Rotating the Trimming Frame

- You can rotate the trimming frame by pressing the **DISP.** button or the **DISPLAY** button.

## 3a Press the SET button to close the setting menu.

Pressing the **MENU** button cancels the settings.

## 2b Trim the image.

### Changing the Size of the Trimming Frame

- Press the up and down buttons to adjust the size of the trimming frame.
- The trimming frame can be changed to a minimum selection of approximately half the displayed image or a maximum selection that is virtually the same size as the image.
- Expanding the trimming frame beyond its maximum size cancels the trimming setting.
- When printing an image that has been magnified using the trimming option, the image quality may become coarser and grainier depending on the level of magnification. If this happens, the trimming frame displays in red.

### Rotating the Trimming Frame

- You can rotate the trimming frame using the left and right buttons.

### Moving the Trimming Frame

- Press the **SET** button and use the up, down, right and left buttons to move the trimming frame. Pressing the **SET** button again allows you to change the size of the frame and to rotate it.

## 3b Press the MENU button, select [OK] and press the SET button.

Selecting [Cancel setting] cancels the selected trimming setting. If [Edit] is selected, the display returns to the previous screen.





- The trimming setting only applies to one image.
- The trimming setting is canceled with the following operations.
  - When you set the trimming settings for another image.
  - When you close the Print mode (when you turn the camera power off, change the camera mode, or detach the connection cable).




- The selected image, paper and border settings determine the shape of the trimming frame.
- Please use the LCD monitor to set the trimming settings. The trimming frame may not display correctly on a TV screen.


## Printing with DPOF Print Settings

For instructions on how to set DPOF print settings, please refer to the **DPOF print settings section of the *Camera User Guide***. In this section, we will explain how to print several images already specified with DPOF print settings.

**1** In the [ (Play)] menu, select [**Print Order**] and press the SET button.

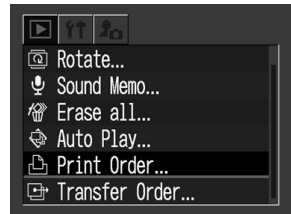

**2** Select [**Print**] and press the SET button.

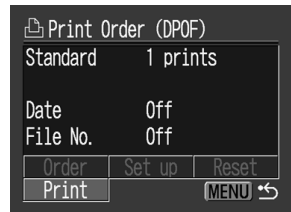

**3** Set the print style settings as required.

- See *Setting the Print Style* (p. 7).
- A print style cannot be set if the print type is set to [Index] in the DPOF print setting.



## 4 Select [OK] and press the SET button.

The image will start to print and, when it is completely finished, the display will revert to the standard playback mode.



- To print the date, set the [Date] setting in the print order menu in Step 2 to [On]. You cannot set the date to print with the [Style] menu in Step 3.
- When the print type is set to Index, the date cannot be printed.
- When the print type is set to Standard, the file number cannot be printed.



- The maximum number of images printed on one page in the Index print type depends on the selected paper size.
  - Card Size: 20 images
  - L Size: 42 images
  - Postcard Size: 63 images

### Cancel Printing

- To cancel printing between images printed, press the **SET** button. Once the current print is completed, a confirmation dialog appears. Select [OK] and press the **SET** button.

### Restarting Printing

- In the print order menu, select [Resume] and press the **SET** button. The remaining images can be printed.
- Printing cannot be restarted under the following circumstances.
  - If the print settings have been changed before restarting.
  - If the image for which the print settings were set has been deleted before restarting.
  - If there was very little free space on the memory card when the printing was canceled.

If these circumstances apply, you can select [OK] in the print order menu and reprint starting from the first image.

- If printing is canceled because the camera battery is depleted, you are recommended to power the camera with a compact power adapter\* (sold separately and/or included). If you are using a battery pack or batteries, please use either a fully charged battery pack or new batteries. After replacing the spent battery pack or batteries, turn the camera power on again.

\* Some camera models do not come with a compact power adapter.

### Printing Errors

- An error message appears if an error occurs for some reason during the printing process. Select [Stop] or [Resume] and press the **SET** button.
- The [Resume] option may not appear with some types of errors. In that case, select [Stop].

## List of Messages

The following messages may appear on the camera's LCD monitor when an error occurs during a camera and CP printer connection. (Depending on the CP printer model, some messages may not display.)



● Please refer to the CP printer's user guide for solutions.

|                                     |  |
|-------------------------------------|--|
| <b>No Paper</b>                     | Paper cassette is incorrectly inserted or out of paper. Or the paper feed is not operating correctly.  |
| <b>No Ink</b>                       | The ink cartridge has not been inserted or has run out of ink.   |
| <b>Incompatible paper size</b>      | Wrong paper size is loaded in the printer.   |
| <b>Incompatible ink size</b>        | Wrong ink cassette size is loaded in the printer.  |
| <b>Ink Cassette Error</b>           | The ink cassette is experiencing a problem.  |
| <b>Paper and ink do not match</b>   | The paper and ink are from different sets.   |
| <b>Paper Jam</b>                    | The paper jammed during printing.  |
| <b>Paper has been changed</b>       | Paper was changed after the print menu was displayed.  |
| <b>Recharge the printer battery</b> | The printer's battery pack is depleted.  |
| <b>Communication Error</b>          | The printer is experiencing a data transmission error.   |
| <b>Readjust trimming</b>            | You attempted to print the image with a different style than the one used when the trimming settings were set.   |
| <b>Cannot Print!</b>                | You attempted to print an image from another camera, one recorded in a different format, or one that has been edited on a computer.  |
| <b>Could not print xx images</b>    | You attempted to use the DPOF print settings to print xx images that are from another camera, that have been recorded in a different format, or that have been edited in a computer. |

# PictBridge Printing with BJ Printers

## PictBridge Printing

### 1 Make sure that displays in the upper left corner of the LCD monitor.

If  appears on the LCD monitor, please refer to  *Canon Direct Printing with BJ Printers* (p. 22).



### 2 Display the images you wish to print and press the SET button.

The print order screen appears.

Depending on the BJ printer model, some setting options may not display.

Sets the **date** On or Off (p. 14)



Sets the **print effect** (p. 15)

Sets the **number of copies** (p. 15)

Sets the **trimming portion** (p. 16)

Sets the **paper size, type and layout** (p. 18)

Starts the printing process

### 3 Select print settings as needed.

### 4 Select [Print] and press the SET button.

The image will start to print and, when it is completely finished, the display will revert to the standard playback mode.



You cannot print movies or images recorded in the RAW format.



### Cancel Printing

- To cancel printing between images, press the **SET** button. A confirmation dialog will display. Select [OK] and press the **SET** button. The printer will stop printing the current image and eject the paper.

### Printing Errors

- An error message appears if an error occurs for some reason during the printing process. Select [Stop] or [Continue] and press the **SET** button. Depending on the type of error, printing may resume once the problem is solved. See *List of Messages* (p. 21) for details.
- On BJ printers equipped with an operation panel, an error number displays on the panel. Please refer to the Bubble Jet printer user guide for the remedies corresponding to the error numbers.

## Selecting Print Settings



Available settings differ depending on the BJ printer model. Some settings are not available (they will not appear in the menu). For details, refer to the user guide that came with your BJ printer.

### Default Setting

- The Default option is a fixed setting of the BJ printer.
- The [Date], [Print Effect], paper setting [Paper Type] and [Layout] options are available. When [Default] is selected, images are printed with the BJ printer's settings.
- The setting contents of the Default option differ depending on the BJ printer model. For details, please refer to the BJ printer user guide.

## ■ Setting the Date Printing Option

- 1 Select [☉] and set [On], [Off] or [Default].



## ■ Setting the Print Effect

This function uses the camera's shooting information to optimize the image data, yielding high quality prints. You can select the following print effects.

|          |   |
|----------|---|
| On       | Uses the camera's shooting information to deliver beautiful prints.   |
| Off      | Prints without any effects.   |
| VIVID    | Prints more vibrant colors, such as the green of trees or the blue of the sea or sky, than the [On] option. |
| NR       | Prints with a noise reduction effect.   |
| VIVID+NR | Prints using both the [VIVID] and [NR] options.   |
| Default  | Print settings differ according to your BJ printer model.   |

### 1 Select [] and choose a print effect option.



## ■ Setting the Number of Copies

### 1 Select [] and set the number of prints.

1 to 99 copies can be set.



## ■ Setting the Printing Area (Trimming)

Please set [Paper Settings] first (p. 18) before setting the trimming settings. If the print style is changed after having made trimming settings, you must select the settings again.

### 1 Select [Trimming] and press the SET button.

The trimming frame will appear at the center of the image. If a trimming setting has already been selected for the image, the frame will appear around the previously selected portion.



The trimming setting screen differs depending on the camera model. Check which of the following screens appear before selecting settings.



➔ Steps 2a and 3a

Trimming Frame



➔ Steps 2b and 3b

### 2a Trim the image.

#### Changing the Size of the Trimming Frame

- Press the zoom lever or the zoom button to adjust the size of the trimming frame.
- The trimming frame can be changed to a minimum selection of approximately half the displayed image or a maximum selection that is virtually the same size as the image.
- Expanding the trimming frame beyond its maximum size cancels the trimming setting.
- When printing an image that has been magnified using the trimming option, the image quality may become coarser and grainier depending on the level of magnification. If this happens, the trimming frame displays in red.

#### Moving the Trimming Frame

- Move the trimming frame using the multicontroller or the up, down, right and left buttons.

#### Rotating the Trimming Frame

- You can rotate the trimming frame by pressing the **DISP.** button or the **DISPLAY** button.

### 3a Press the SET button to close the setting menu.

Pressing the **MENU** button cancels the settings.



## 2b Trim the image.

### Changing the Size of the Trimming Frame

- Press the up and down buttons to adjust the size of the trimming frame.
- The trimming frame can be changed to a minimum selection of approximately half the displayed image or a maximum selection that is virtually the same size as the image.
- Expanding the trimming frame beyond its maximum size cancels the trimming setting.
- When printing an image that has been magnified using the trimming option, the image quality may become coarser and grainier depending on the level of magnification. If this happens, the trimming frame displays in red.

### Rotating the Trimming Frame

- You can rotate the trimming frame using the left and right buttons.

### Moving the Trimming Frame

- Press the **SET** button and use the up, down, right and left buttons to move the trimming frame. Pressing the **SET** button again allows you to change the size of the frame and to rotate it.

## 3b Press the MENU button, select [OK] and press the SET button.

Selecting [Cancel setting] cancels the selected trimming setting. If [Edit] is selected, the display returns to the previous screen.



- The trimming setting only applies to one image.
- The trimming setting is canceled with the following operations.
  - When you set the trimming settings for another image.
  - When you close the Print mode (when you turn the camera power off, change the camera mode, or detach the connection cable).




- The selected image, paper size and border settings determine the shape of the trimming frame.
- Please use the LCD monitor to set the trimming settings. The trimming frame may not display correctly on a TV screen.

## ■ Selecting the Paper Settings

### 1 Select [Paper Settings] and press the SET button.

The paper size setting screen appears.

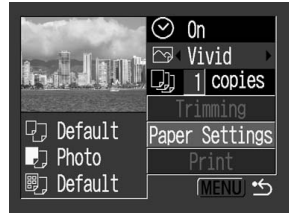


### 2 Select a paper size and press the SET button.

The following paper sizes\* are available: 8.5" × 11" or A4, 5" × 7" or 13 × 18 cm, 4" × 6" and Default.

- Some sizes are not available with certain BJ printer models.
- The paper type setting screen appears.

\* Paper sizes vary according to region.

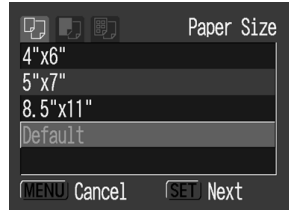

### 3 Select a paper type and press the SET button.

The following paper types can be selected.

|            |   |
|------------|---|
| Photo      | Prints on Photo Paper Plus Glossy paper*.                 |
| Fast Photo | Prints on Photo Paper Pro paper*.                         |
| Default    | Print settings differ according to your BJ printer model. |

\* Canon brand paper


The Page Layout screen appears.



### 4 Select a layout.

The following print effects can be selected.

|            |   |
|------------|---|
| Borderless | Prints right to the edges of the page.                    |
| Bordered   | Prints with a border.                                     |
| Default    | Print settings differ according to your BJ printer model. |

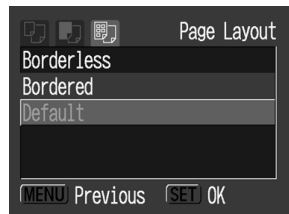

### 5 Select a layout and press the SET button. This ends the paper settings operations.

The display returns to the print order screen.




With BJ printers, when [Plain Paper] is selected with the printer and [Default] is selected in the camera's [Paper Type], images will print with borders, even if [Borderless] was selected with the camera.


## Printing with DPOF Print Settings

For instructions on how to set DPOF print settings, please refer to the **DPOF print settings** section of the *Camera User Guide*. In this section, we will explain how to print several images already specified with DPOF print settings.

**1** In the [▶] (Play) menu, select [Print Order] and press the SET button.

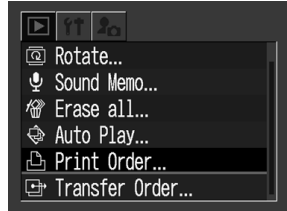


**2** Select [Print] and press the SET button.

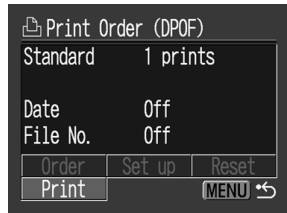

**3** Set the print effect and paper settings as required.

Setting the Print Effect (p. 15) ———→  
 Selecting the Paper Settings\* (p. 18) ———→

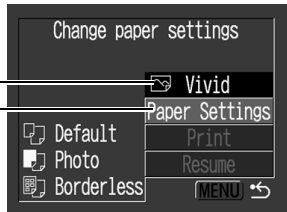

\* The [Layout] option is not available with the index printing type.

**4** Select [Print] and press the SET button.

The image will start to print and, when it is completely finished, the display will revert to the standard playback mode.



- To print the date, set the [Date] setting in the print order menu in Step 2 to [On]. You cannot set the date to print with the [Style] menu in Step 3.
- When the print type is set to Index, both the date and file number cannot be printed.
- When the print type is set to Standard, the file number cannot be printed.



### Cancel Printing

- To cancel printing between images printed, press the **SET** button. A confirmation dialog appears. Select [OK] and press the **SET** button. The printer will stop printing the current image and eject the paper.

### Restarting Printing

- Select [Resume] and press the **SET** button. The remaining images can be printed.
- Printing cannot be restarted under the following circumstances.
  - If the print settings have been changed before restarting.
  - If the image for which the print settings were set has been deleted before restarting.
  - If there was very little free space on the memory card when the printing was canceled.

If these circumstances apply, you can select [OK] in the print order menu and reprint starting from the first image.

- If printing is canceled because the camera battery is depleted, you are recommended to power the camera with a compact power adapter\* (sold separately and/or included). If you are using a battery pack or batteries, please use either a fully charged battery pack or new batteries. After replacing the spent battery pack or batteries, turn the camera power on again.

\* Some camera models do not come with a compact power adapter.

### Printing Errors

- An error message appears if an error occurs for some reason during the printing process. Select [Stop] or [Continue] and press the **SET** button. Depending on the type of error, printing may resume once the problem is solved. See *List of Messages* (p. 21) for details.
- On BJ printers equipped with an operation panel, an error number displays on the panel. Please refer to the Bubble Jet printer user guide for the remedies corresponding to the error numbers.

## List of Messages

The following messages may appear on the camera LCD monitor if an error occurs during a camera and BJ printer connection. (Depending on the BJ printer, some messages may not appear.)

- Please refer to the BJ printer's user guide for the appropriate remedies.


**Low ink level**: Printing restarts if you select [Continue] and press the **SET** button. For the remedies to other messages that might appear, refer to your BJ printer's user guide.

|                           |   |
|---------------------------|---|
| <b>No Paper</b>           | There is no paper in the auto sheet feeder. In the case of a BJ printer equipped with a photo paper cassette, the cassette may be incorrectly inserted or out of paper.   |
| <b>Paper Jam</b>          | The paper jammed during printing.   |
| <b>Paper Error</b>        | The paper is not correctly set in the printer.  |
| <b>No Ink</b>             | The ink tank has run out of ink.  |
| <b>Low ink level</b>      | The ink tank needs to be replaced soon. Prepare a new ink tank. If you select [Continue] in the error screen, you can restart printing.   |
| <b>Waste tank full</b>    | You can restart printing by pressing the <b>RESUME/CANCEL</b> button on Bubble Jet Printer. Please request replacement of the waste tank to the shop where you purchased the printer or your nearest Canon Customer Support center listed in the Contact List provided with the Bubble Jet Printer or in the Bubble Jet user guide. |
| <b>Ink Error</b>          | Check the level of the printer's ink and the condition of the waste tank.   |
| <b>Printer error</b>      | Turn off the printer, then turn it on again. If the error persists, please consult the dealer where you purchased your printer or your nearest Canon Customer Support center (listed in the Contact List provided with the Bubble Jet Printer).   |
| <b>Printer in use</b>     | The printer is printing the data from the memory card inserted in the computer or printer. The printer automatically starts printing the images from the camera after completing the current printing.  |
| <b>Paper lever error</b>  | Adjust the paper thickness lever to the proper position.  |
| <b>Printer cover open</b> | Close the printer cover securely.   |
| <b>No print head</b>      | No print head is installed in the printer.  |
| <b>Hardware Error</b>     | Check whether or not an error other than a paper or ink error has occurred. Also check the printer's battery charge.  |
| <b>File Error</b>         | You tried to print an image that is not compatible with PictBridge. Some images that have been recorded with another camera or modified using a computer cannot be printed.   |

## Printing

### 1 Make sure that displays in the upper left corner of the LCD monitor.

If  appears, refer to  *PictBridge Printing with BJ Printers* (p. 13).

After this step, follow the procedures in the section  *Canon Direct Printing with CP Printers* (p. 6) to print your images.

**However, please note that some menus and precautions differ, as listed below.**



p. 6, 11



### Cancel Printing

- To cancel printing between images printed, press the **SET** button. Once the current print is finished, a confirmation dialog appears. Select [OK] and press the **SET** button.

The printer will stop printing the current image and eject the paper.






### Printing Errors

- An error message appears if an error occurs for some reason during the printing process. Select [Stop] or [Continue] and press the **SET** button.
- The print will automatically restart if the error is resolved.
- The error number is displayed on the operation panel of Bubble Jet printer. Please refer to the Bubble Jet printer user guide for the remedies corresponding to the error numbers.

p. 7

## ■ Setting the Print Style

You can select from among the following print styles.

|   |  |  |
|---|--|--|
|  Paper   |  | Select the paper size from the following.<br>[Card #1], [Card #2], [Card #3], [LTR] or [A4]<br>For the usable paper type, please refer to the Bubble Jet Printer User Guide. |
|  Borders |  Borderless | Prints right to the edges of the page.   |
|   |  Bordered   | Prints with a border.  |
|  Date    | On   | Adds the date to the print.  |
|   | Off  | Prints without the date.   |

p. 11




- To print the date, set the [Date] setting in the print order menu in Step 2 to [On]. You cannot set the date to print with the [Style] menu in Step 3.
- When the print type is set to Index, both the date and file number cannot be printed.
- When the print type is set to Standard, the file number cannot be printed.

# **PictBridge Printing with Non-Canon Printers**

---

## Printing

**1** Make sure that  displays in the upper left corner of the LCD monitor.

After this step, follow the procedures in the section  *PictBridge Printing with BJ Printers* (p. 13) to print your images.

However, please note that some menus and precautions differ, as listed below.



p. 15

---

### **Setting the Print Effect**

[VIVID], [NR] and [VIVID+NR] are not available.

# Settings that Can Be Set with the Camera


## Canon CP Printers/ Canon BJ Printers

(When  or  appears on the camera's LCD monitor during a connection)

| Print Options Selectable with the Camera |         |   | CP Printers           | BJ Printers           |
|--|---------|---|-----------------------|-----------------------|
| Number of Prints                         | 1 to 99 |   | <input type="radio"/> | <input type="radio"/> |
| Style                                    | Image   | 1 image                                       | <input type="radio"/> | –                     |
|  |         | Multiple                                      | <input type="radio"/> | –                     |
|  | Paper   | Card #1, Card #2, Card #3, Letter (LTR) or A4 | –*                    | <input type="radio"/> |
|  |         | Borders                                       | Bordered              | <input type="radio"/> |
|  |         | Borderless                                    | <input type="radio"/> | <input type="radio"/> |
| Date                                     |         | <input type="radio"/>                         | <input type="radio"/> |                       |
| Trimming                                 |         | <input type="radio"/>                         | <input type="radio"/> |                       |

\* The paper size is set with the printer.

## Canon BJ Printer

(When  appears on the camera's LCD monitor during a connection)

Some settings are not available with certain BJ printers.

| Print Options Selectable with the Camera |             |                       |
|--|-------------|-----------------------|
| Date                                     | Off         |                       |
|  | On          |                       |
|  | Default     |                       |
| Print Effect                             | Off         |                       |
|  | On          |                       |
|  | Default     |                       |
|  | VIVID       |                       |
|  | NR          |                       |
|  | VIVID+NR    |                       |
| Number of Prints                         | 1 to 99     |                       |
| Trimming                                 |             |                       |
| Paper Settings                           | Paper Size* | 8.5" × 11" or A4      |
|  |             | 5" × 7" or 13 × 18 cm |
|  |             | 4" × 6"               |
|  |             | Default               |
|  | Paper Type  | Photo                 |
|  |             | Default               |
|  |             | Fast Photo            |
|  | Layout      | Borderless            |
|  |             | Bordered              |
|  |             | Default               |

\* Paper sizes vary according to region.



**Canon**