



# CIRCULAR SAW

■ STOCK No.57855 110V    ■ PART No.CS184  
57856 240V

## • INSTRUCTIONS •

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY TO ENSURE THE SAFE AND EFFECTIVE USE OF THIS TOOL.



## GENERAL INFORMATION

This manual has been compiled by Draper Tools and is an integrated part of the power tool equipment, which should be kept with the machine.

This manual describes the purpose for which this tool has been designed and contains all the necessary information to ensure its correct and safe use. We recommend that this manual is read before any operation of the machine, before performing any kind of adjustment to the machine, and prior to any maintenance tasks. By following all the general safety instructions contained in this manual, it will ensure both machine and operator safety, together with longer life of the tool itself.

All photographs and drawings in this manual are supplied by Draper Tools to help illustrate the operation of the machine.

Whilst every effort has been made to ensure accuracy of information contained in this manual, the Draper Tool policy of continuous improvement determines the right to make modifications without prior warning.



# CIRCULAR SAW

■ STOCK No.57855 (110V)  
57856 (240V)

■ PART No.CS184

## CONTENTS:

	Page No.
Declaration of Conformity.....	1
Specification/Guarantee .....	2
Power Supply .....	3
General Safety Instructions.....	4
Getting to Know Your Circular Saw .....	5
Operation & Use .....	6 - 8
Maintenance & Parts Replacement.....	9
Optional Accessories .....	10



## DECLARATION OF CONFORMITY

We  
Draper Tools Ltd. Hursley Road, Chandler's Ford, Eastleigh, Hampshire.  
SO53 1YF. England.

Declare under our sole responsibility that the product:

**Stock Number:-** 57855 & 57856.

**Part Number:-** CS184.

**Description:-** Circular Saw.

To which this declaration relates is in conformity with the following directive(s) 98/37/EC 73/23/EEC & 89/336EEC.

With reference to:

EN50144-2-5, EN55014, EN61000-3 and 50144-1.

JOHN DRAPER  
Managing Director

10/99



## SPECIFICATION

Part No. ....	CS184
Stock No. ....	110V = 57855
.....	240V = 57856
Input .....	110V = 1400W
.....	240V = 1200W
Blade diameter .....	184mm
Bore size .....	16mm
Cutting capacities	
90° .....	65mm
45° .....	44mm
Speed (no load) .....	3800RPM
Sound pressure level.....	95dbA
Sound power level .....	108dbA
Vibration level .....	2.7M/S <sup>2</sup>
Weight .....	4.5kg

### WEAR EAR PROTECTION



## GUARANTEE (Hand held professional electric power tools)

Draper hand held professional electric power tools have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship for a period of 12 months from the date of purchase except where tools are hired out when the guarantee period is ninety days from the date of purchase.

Should the machine develop any fault where warranty applies, arrangements will be made for the tool to be returned free-of-charge to the Service Centre at Draper Tools Limited.

Please contact: **DRAPER HELPLINE – (023) 8049 4344**

A proof of purchase must be provided with the tool.

If upon inspection it is found that the fault occurring is due to defective materials or workmanship the product will be repaired and tested as soon as possible free of charge, normally within five working days. This guarantee does not apply to normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accident, or repairs attempted by any personnel other than the Service Centre at Draper Tools Limited or other authorised agent.

**Note:** If the tool is found not to be within the Terms of Warranty, repair and carriage charges will be quoted and made accordingly.

This guarantee applies in lieu of any other guarantee expressed or implied and variations of its terms are not authorised.


Your Draper guarantee is not effective unless you produce a dated receipt or invoice to verify your proof of purchase within the 12 month period.

Please note that this guarantee is an additional benefit and does not affect your statutory rights.

Draper Tools Limited.

## POWER SUPPLY

### CONNECTING YOUR MACHINE TO THE POWER SUPPLY: (240V)

To eliminate the possibility of an electric shock your machine has been fitted with a BS approved, non rewirable moulded plug and cable which incorporates a fuse, the value of which is indicated on the pin face of the plug. Should the fuse need to be replaced an approved BS1362 fuse must be used of the same rating, marked thus .

The fuse cover is detachable, never use the plug with the cover omitted. If a replacement fuse cover is required, ensure it is of the same colour as that visible on the pin face of the plug (i.e. red). Fuse covers are available from your Draper Tools stockist. If the fitted plug is not suitable, it should be cut off and destroyed. \*The end of the cable should now be suitably prepared and the correct type of plug fitted. See below.

#### \*WARNING:

A plug with bare flexible wires exposed is hazardous if engaged in a live power socket outlet.

### WARNING: THIS APPLIANCE IS DOUBLE INSULATED.

Blue – Neutral, Brown – Live.

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black or blue.

The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red or brown.

### CONNECTING YOUR MACHINE TO THE POWER SUPPLY (110V)


To eliminate the possibility of an electric shock your machine has been fitted with a BS approved, rewirable plug and cable. If the fitted plug is not suitable, it should be removed, the end of the cable should be suitably prepared and the correct type of plug fitted. See below.

### WARNING: THIS APPLIANCE IS DOUBLE INSULATED.

Single phase 110 volt machines must be connected using the relevant coding and matching the colour of the flexible cable to that of the plug. The procedure is as follows:

1. Connect brown coloured core to plug terminal marked letter 'L' (live).
2. Connect blue colour core to plug terminal marked letter 'N' (neutral).

## WIRING DIAGRAM

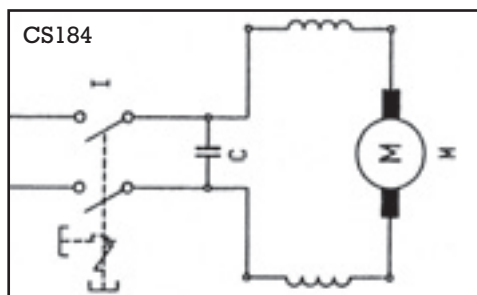



# GENERAL SAFETY INSTRUCTIONS FOR POWER TOOLS

## WARNING

Please read the following instructions carefully, failure to do so could lead to serious personal injury.

## IMPORTANT

Draper Tools Limited recommends that this machine should not be modified or used for any application other than that for which it was designed. If you are unsure of its relative applications do not hesitate to contact us in writing and we will advise you.

### 1. KNOW YOUR POWER TOOL

Read and understand the owner's manual and labels affixed to the tool. Learn its application and limitations as well as the specific potential hazards peculiar to this tool.

### 2. KEEP WORK AREA CLEAN

Cluttered areas and benches invite accidents. Floors must not be slippery due to oil or sawdust.

### 3. AVOID DANGEROUS ENVIRONMENTS

Do not use power tools in damp or wet locations, or expose them to rain. Keep work area well lit. Provide adequate space surrounding the work area. Do not use in environments with a potentially explosive atmosphere.

### 4. KEEP CHILDREN AWAY

All visitors should be kept at a safe distance from work area.

### 5. STORED TOOLS

When not being used, all tools should be stored in a dry, locked cupboard or out of the reach of children.

### 6. WEAR PROPER CLOTHING

Do not wear loose clothing, neckties or jewellery (rings, wristwatches) to catch in moving parts. NONSLIP footwear is recommended. Wear protective hair covering to contain long hair. Roll long sleeves above the elbow.

### 7. USE SAFETY GOGGLES (Head Protection)

Wear CE approved safety goggles at all times. Normal spectacles only have impact resistant lenses, they are NOT safety glasses. Also, use face or dust mask if application is dusty and ear protectors (plugs or muffs) during extended periods of operation.

### 8. NOISE LEVELS

Some types of machines may have high noise levels when working. In such cases ear protection must be worn.

### 9. VIBRATION LEVELS

Hand held power tools produce different vibration levels. You should always refer to the specifications and relevant Health and Safety guide.

### 10. DUST EXTRACTION

If your tool is fitted with a dust extraction fitting, always ensure that it is connected and being used with a dust extractor. Vacuum cleaners can be used if suitable for the material being extracted.

### 11. PROTECT YOURSELF FROM ELECTRIC SHOCK

When working with power tools, avoid contact with any earthed items (e.g. pipes, radiators, hobs and refrigerators, etc.). If you are using a power tool in extreme conditions (e.g. high humidity or generating metal dust), always use an RCD (residual current device) at the power socket.

### 12. STAY ALERT

Always watch what you are doing and use common sense. Do not operate a power tool when you are tired or under the influence of alcohol or drugs.

### 13. WHEN WORKING OUT OF DOORS

Only use extension leads designed for that purpose.

### 14. ACCESS TO MAINS SOCKET

If a stationary machine is fitted with a moulded plug and cable, the machine should not be positioned so that access to the mains socket is restricted.

### 15. DISCONNECT POWER TO THE TOOL

When not in use, before servicing and when changing accessories such as cutters, etc.

### 16. AVOID ACCIDENTAL STARTING

Make sure the switch is in the OFF position before plugging the machine into the power supply.

### 17. NEVER LEAVE MACHINE RUNNING UNATTENDED

Turn power off. Do not leave machine until it comes to a complete stop.

### 18. DO NOT ABUSE THE CORD

Never carry the tool by the power cable or pull it from the socket. Keep the power cable away from heat, oil and sharp edges.

### 19. NEVER STAND ON TOOL

Serious injury could occur if the tool is tipped or if the cutting tool is accidentally contacted. Do not store materials above or near the tool, so that it is necessary to stand on the tool to reach them.

### 20. CHECK DAMAGED PARTS

Check for damage to parts, breakage of parts, mountings and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.

### 21. KEEP GUARDS IN PLACE

And in working order.

### 22. MAINTAIN TOOLS WITH CARE

Keep tools sharp and clean for the best and safest performance. Follow instructions for lubricating and changing accessories. All extension cables must be checked at regular intervals and replaced if damaged. Always keep the hand grips on the tool clean, dry and free of oil and grease.

### 23. USE RECOMMENDED ACCESSORIES

Consult the owners manual for recommended accessories. Follow the instructions that accompany the accessories. The use of improper accessories may cause hazards.

### 24. REMOVE ADJUSTING KEYS AND WRENCHES

Form a habit of checking to see that keys and adjusting wrenches are removed from the tool before turning it on.

### 25. SECURE WORK

Use clamps or a vice to hold work. This frees both hands to operate the tool.

### 26. DO NOT OVERREACH

Keep proper footing and balance at all times.

### 27. USE RIGHT TOOL

Do not force the tool or attachment to do a job for which it was not designed.

### 28. DO NOT FORCE TOOL

It will do the job better and safer at the rate for which it was designed.

### 29. DIRECTION OF FEED

Feed work into a blade or cutter against the direction of rotation of the blade or cutter only.


### 30. WHEN DRILLING OR SCREWING INTO WALLS

Always make sure there is no danger of hitting any hidden power cables, water or gas pipes in the wall.


## IMPORTANT NOTE

**Residual Risk.** Although the safety instructions and operating manuals for our tools contain extensive instructions on safe working with power tools, every power tool involves a certain residual risk which can not be completely excluded by safety mechanisms. Power tools must therefore always be operated with caution !


# GETTING TO KNOW YOUR CIRCULAR SAW

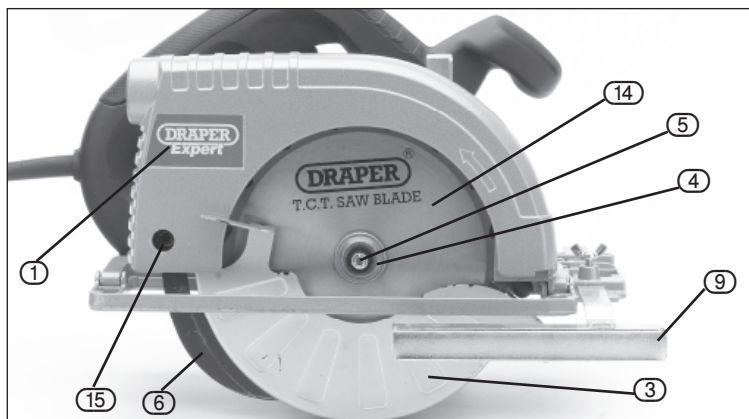

1. Draper Logo
2. Rating Plate
3. Mobile Lower Blade Guard
4. Saw Blade Flange
5. Flange Screw
6. Riving Knife
7. Depth Setting Knob
8. Cutting Guide Setting Knob
9. Parallel Cutting Guide

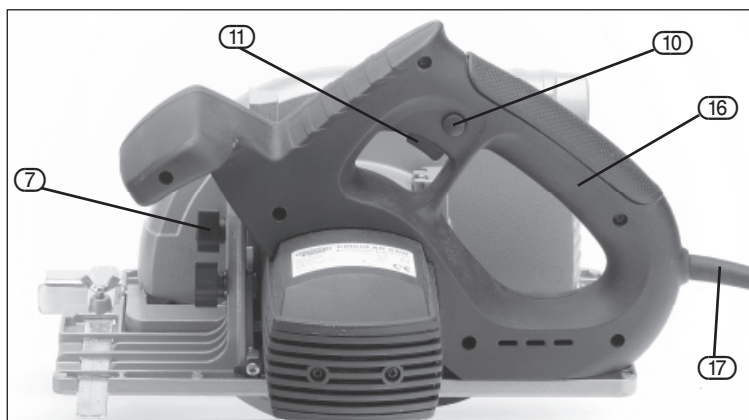

10. Switch Safety Button
11. On/Off Switch
12. Angular Cutting Wing Nut
13. Cutting Line Guide
14. Saw Blade
15. Riving Knife Setting Screw
16. Hand Grip
17. Power Cable

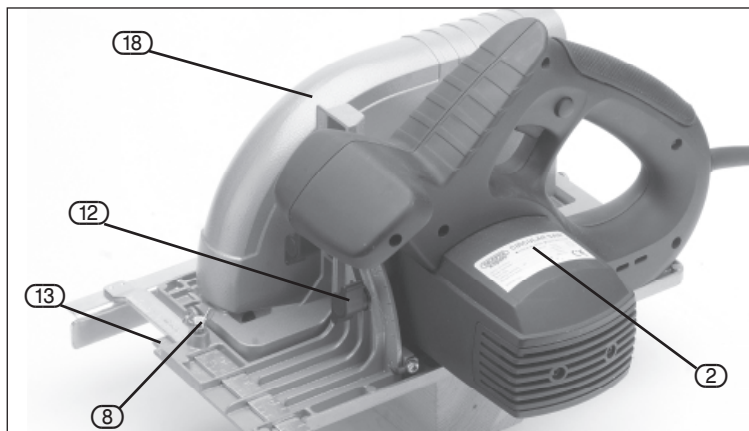

## OPERATION & USE

**Make sure that the mains voltage matches the voltage stated on the machine's rating plate.**

### FITTING THE SAW BLADE (Fig.2)

Switch the machine off and disconnect it from the power supply.

Set the base plate to the highest position (maximum depth of cut).

Open the mobile lower blade guard (A).

Rotate the blade until the hole can be seen below the base plate. Insert a suitable pin through the hole and using the hex key supplied (D), undo and remove flange screw (C) and blade flange (B).

Change the blade ensuring that the arrow on the blade points in the same rotation as the arrow on the upper blade guard.

Refit the blade flange (B) and flange screw (C) and tighten.

Before replacing the new saw blade, make sure that the contact surfaces of the setting discs are clean.

Saw teeth must be wider than the riving knife (F). (The arrow printed on the fixed guard of the machine indicates the cutting direction of the teeth).

**IMPORTANT:**

**When changing or fitting a blade always have the depth of cut set at maximum.**

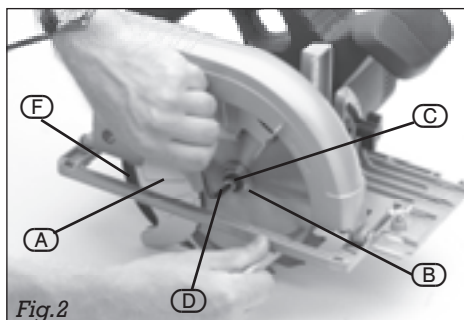


Fig. 2

## OPERATION & USE

### SWITCH

The on/off switch (G) is fitted with a safety button (H) so that it is not possible to start the saw by accident. To start the saw press the safety button (H) then depress switch (G) and hold. The saw will stop when switch (G) is released (Fig.3).

### SETTING CUTTING DEPTH

For a clean perfect cut, it is recommended to adjust the cutting depth according to the wood thickness by having the saw blade protrude through the material.

In order to adjust the cutting depth, loosen the wing nut (J) and move the machine upwards or downwards (Fig.4), to the desired position and tighten the wing nut (J).

### SETTING CUTTING ANGLE

It is possible to cut vertically and with an inclination of up to 45°. Angle is set by loosening wing nut (K), tilt the base using the scale as a guide and retighten wing nut (K) (Fig.5).

### RIVING KNIFE

The riving knife (L) avoids the saw blade from binding/seizing during cutting operations and it must always be used for safety purposes. The machine is supplied with the riving knife adjusted.

When mounting a new saw blade, the riving knife must be adjusted:

Raise the mobile guard (A) and loosen screw (M). Move the riving knife so the arc of the knife is 2-3mm (5mm max.) from the saw blade tips (Q) and is 2-3mm (5mm max.) higher than the base of the blade (R). Tighten screw (M) (Fig.6).

### PARALLEL CUTTING GUIDE




For parallel cuts, use cutting guide (N). Cutting width is adjusted by loosening knob (P) sliding guide to required position indicated by the scale on the guide. Tighten wing nut (P) (Fig.7).

### CUTTING INDICATOR

Item 13 (Fig.1) is used as a cutting indicator with the blade in horizontal position.

### NOTE:

It is advisable to perform test cuts after any adjustment.

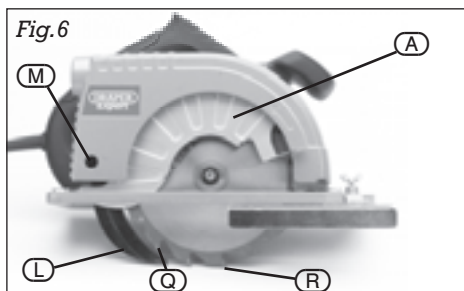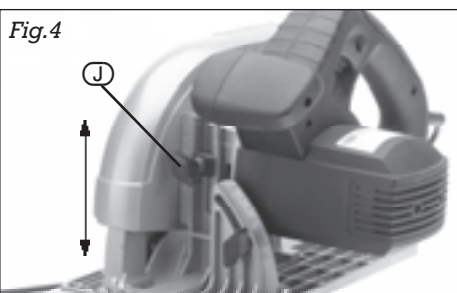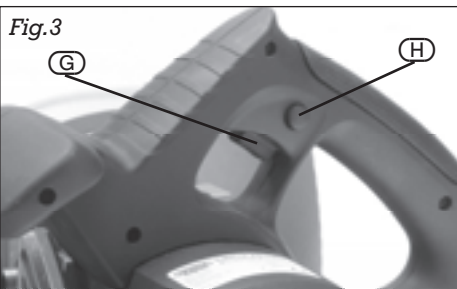



## OPERATION & USE

### IMPORTANT - DUST EXTRACTION FACILITY

Draper Tools recommends that the dust extraction facility is used in conjunction with a suitable vacuum cleaner or dust collector (*Fig.8*).

Recommended Draper models: WDV24, WDV1100, SWD1100, DE2000, DE1045 & DE1030.

**ALWAYS DISCONNECT FROM THE POWER SUPPLY BEFORE CLEANING OR MAINTAINING YOUR CIRCULAR SAW.**

### IMPROPER USE

The functions and use of this tool are those exclusively indicated in this manual. **Any other use of the tool is explicitly forbidden!**





## MAINTENANCE & PART REPLACEMENT

Regular inspection and cleaning reduces the necessity for maintenance operations and will keep your tool in good working condition. The tool bearings and gears are life-long lubricated, however it is advised to check the condition of the grease in the gearbox every 100 hours, if necessary replace the grease. The motor must be correctly ventilated during tool operation. For this reason avoid blocking the air inlets with hands. After use disconnect the tool from the power supply and clean carefully, use compressed air through ventilation slots.

### DISPOSAL

At the end of the machine's working life, or when it can no longer be repaired, ensure that it is disposed of according to the standard regulations of the country in which it is being used, and that the disposal operation is carried out by specialized personnel following authorized guidelines.

In all circumstances:

- Do not abandon in the environment;
- Do not dispose of together with solid urban waste products;
- Contact the special recycling centres.

### WARNING

Disconnect the plug from the power supply socket before replacing any parts.

### BRUSHES

The brushes must be replaced after approx. 150-200 working hours, or if they are less than 5-6mm in length.

### WARNING

For correct tool operation always change the brushes in pairs, not separately. The use of original Draper spare parts is recommended. After having fitted new brushes allow the motor to run for at least five minutes without load for the brushes to bed in.

### IMPORTANT:

This operation should only be performed by an authorized person.

### REPLACING THE POWER SUPPLY CABLE

Check that the power supply cable is in good condition, if not have it replaced by an authorized person.



## OPTIONAL ACCESSORIES

### **Circular Saw Blades**

Part No. CSB184

Stock No. 58669

Specification: 184mm Saw Blade 14 Teeth (supplied with machine).

Part No. CSB184N

Stock No. 56057

Specification: 184mm TCT Nail Cutting Blade 14x16.



**DRAPER TOOLS LIMITED,**  
Hursley Road, Chandler's Ford,  
Eastleigh, Hants. SO53 1YF. England.  
Tel: (023) 8026 6355.  
Fax: (023) 8026 0784.

---

**HELPLINE (023) 8049 4344**

---

YOUR DRAPER STOCKIST

©Published by Draper Tools Ltd.  
No part of this publication may be reproduced,  
stored in a retrieval system or transmitted in  
any form or by any means, electronic, mechanical  
photocopying, recording or otherwise without prior  
permission in writing from Draper Tools Ltd.