SL2020 / SL2929 / SL3131 Installation/Operator Manual

WARNING: For your safety the information in this manual must be followed to minimize the risk of fire or explosion and to prevent property damage, personal injury or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- WHAT TO DO IF YOU SMELL GAS:
 - Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Clear the room, building or area of all occupants.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

AVERTISSEMENT: Assurez-vous de bien suivre les instructions données dans cette notice pour réduire au minimum le risque d'incendie ou d'explosion ou pour éviter tout dommage matériel, toute blessure ou la mort.

- —Ne pas entreposer ni utiliser d'essence ni d'autres vapeurs ou liquides inflammables à proximité de cet appareil ou de tout autre appareil.
- —QUE FAIRE SI VOUS SENTEZ UNE ODEUR DE GAZ:
 - Ne pas tenter d'allumer d'appareils.
 - Ne touchez à aucun interrupteur. Ne pas vous servir des téléphones se trouvant dans le bâtiment.
 - Évacuez la pièce, le bâtiment ou la zone.
 - Appelez immédiatement votre fournisseur de gaz depuis un voisin. Suivez les instructions du fournisseur.
 - Si vous ne pouvez rejoindre le fournisseur de gaz, appelez le service des incendies.
- —L'installation et l'entretien doivent être assurés par un installateur ou un service d'entretien qualifié ou par le fournisseur de gaz.



American Dryer Corporation

88 Currant Road Fall River MA 02720-4781 USA Telephone: +1 (508) 678-9000 / Fax: +1 (508) 678-9447 e-mail: techsupport@amdry.com

www.amdry.com

Retain This Manual in a Safe Place for Future Reference

This product embodies advanced concepts in engineering, design, and safety. If this product is properly maintained, it will provide many years of safe, efficient, and trouble free operation.

Only qualified technicians should service this equipment.

OBSERVE ALL SAFETY PRECAUTIONS displayed on the equipment or specified in the installation manual included with the dryer.

The following "FOR YOUR SAFETY" caution must be posted near the dryer in a prominent location.

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

POUR VOTRE SÉCURITÉ

Ne pas entreposer ni utiliser d'essence ni d'autres vapeurs ou liquides inflammables à proximité de cet appareil ou de tout autre appareil.

We have tried to make this manual as complete as possible and hope you will find it useful. The manufacturer reserves the right to make changes from time to time, without notice or obligation, in prices, specifications, colors, and material, and to change or discontinue models. The illustrations included in this manual may not depict your particular dryer exactly.

IMPORTANT

For your convenience, log the following information:

DATE OF PURCHASE	MODEL NO.
RESELLER'S NAME	
Sorial Number(s)	
Serial Number(s)	

Replacement parts can be obtained from your reseller or the ADC factory. When ordering replacement parts from the factory, you can FAX your order to ADC at +1 (508) 678-9447 or telephone your order directly to the ADC Parts Department at +1 (508) 678-9000. Please specify the dryer model number and serial number in addition to the description and part number, so that your order is processed accurately and promptly.

"IMPORTANT NOTE TO PURCHASER"

Information must be obtained from your local gas supplier on the instructions to be followed if the user smells gas. These instructions must be posted in a prominent location near the dryer.

A WARNING

Proposition 65

Use of this product could expose you to substances from fuel combustion that contain chemicals known to the State of California to cause cancer, birth defects and other reproductive harm.

IMPORTANT

You must disconnect and lockout the electric supply and the gas supply or the steam supply before any covers or guards are removed from the machine to allow access for cleaning, adjusting, installation, or testing of any equipment per OSHA standards.

Please observe all safety precautions displayed on the equipment and/or specified in the installation manual included with the dryer.

Before installation, check that the local distribution conditions, nature of gas and pressure, and adjustment of the appliances are compatible.

CAUTION

Dryer(s) should never be left unattended while in operation.

"Caution: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper operation."

«Attention: Au moment de l'entretien des commandes, étiquetez tous les fils avant de les débrancher. Des erreurs de câblage peuvent entraîner un fonctionnement inadéquat et dangereux.»

WARNING

Children should not be allowed to play on or near the dryer(s). Children should be supervised if near dryer(s) in operation.

Under no circumstances should the dryer door switch(es), lint door/drawer switch(es), or heat safety circuit(s) ever be disabled.

The dryer must never be operated with any of the back guards, outer tops, or service panels removed. Personal injury or fire could result.

The dryer must never be operated without the lint filter/screen in place, even if an external lint collection system is used.

FOR YOUR SAFETY

Do not dry mop heads in the dryer. Do not use dryer in the presence of dry cleaning fumes.

The dryers must not be installed or stored in an area where it will be exposed to water and/or weather.

The wiring diagram for the dryer is located behind the control panel.

Table of Contents

Safety Precautions4
SL2020 Specifications6
SL2929 Specifications8
SL3131 Specifications10
Installation Procedures12Location Requirements12Unpacking/Setting Up12Dryer Enclosure Requirements12Fresh Air Supply Requirements13Exhaust Requirements13Electrical Information15Gas Information18Converting from One Family of Gas to Another21Gas Pressure Testing23Steam Information23Water Information24Preparation for Operation/Start-Up25Preoperational Test25Preoperational Instructions26Shutdown Instructions26
Service/Parts Information
Parts
Warranty Information
Routine Maintenance
Data Label Information29

List of Acronyms _____

HVAC Heating, Ventilating, and Air-Conditioning

in WC Inches of Water Column

L.C.D. Liquid Crystal Display

L.E.D. Light Emitting Diode

L.P. Liquid Propane

OSHA Occupational Safety and Health Administration

R.M.A. Return Material Authorization

UL Underwriters Laboratory

Safety Precautions _____

Warning

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion and to prevent property damage, personal injury, or loss of life.

The dryer must never be operated with any of the back guards, outer tops, or service panels removed. Personal injury or fire could result.

Failure to properly install, maintain, and/or operate dryer according to this manual and operator's manuals included with dryer may result in conditions, which can cause serious injury, death and/or property damage.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

Purchaser and user should consult the local gas supplier for proper instructions to be followed in the event the user smells gas. The instructions should be posted in a prominent location.

What To Do If You Smell Gas:

- · Do not try to light any appliance.
- · Do not touch any electrical switch.
- Do not use any phone in your building.
- · Clear the room, building, or area of all occupants.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency, or gas supplier.

Dryers must be exhausted to the outdoors.

Although the manufacturer produces a very versatile dryer, there are some articles that, due to fabric composition or cleaning method, should not be dried in it.

Warning

Dry only water washed fabrics. Do not dry articles spotted or washed in dry cleaning solvents, combustible detergents, or "all purpose" cleaner. Explosion could result.

Do not dry rags or articles coated or contaminated with gasoline, kerosene, oil, paint, or wax. Explosion could result.

Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a tumble dryer.

Do not dry mop heads. Contamination by wax or flammable solvents will create a fire hazard.

Do not use heat for drying articles that contain plastic, foam, sponge rubber, or similarly textured rubber materials. Drying in a heated tumbler may damage plastics or rubber and also may be a fire hazard.

A program should be established for the inspection and cleaning of lint in the burner area, exhaust ductwork, and area around the back of the dryer. The frequency of inspection and cleaning can best be determined from experience at each location.

Do not operate steam dryers with more than 150 psi (10.34 bar) steam pressure. Excessive steam pressure can damage the steam coil and/or harm personnel.

Replace leaking flexible hoses or other steam fixtures immediately. Do not operate the dryer with leaking flexible hoses. Personal injury may result.

N

Warning

The collection of lint in the burner area and exhaust ductwork can create a potential fire

hazard.

For personal safety, the dryer must be electrically grounded in accordance with local codes and/or the National Electrical Code ANSI/NFPA NO. 70-LATEST EDITION or in Canada, the Canadian Electrical Codes Parts 1 & 2 CSA C22.1-1990 or LATEST EDITION.



Note

Failure to electrically ground the dryer properly will void the warranty.

NN

Warning

Personal injury or fire could result should the dryer door switch, lint door/drawer, or heat safety circuit ever be disabled.

Remove articles from the dryer as soon as the drying cycle has been completed.



Warning

Articles left in the dryer after the drying and cooling cycles have been completed can create a fire

hazard.

For safety, proper operation, and optimum performance, the dryer must not be operated with a load less than 66% of its rated capacity.



Warning

You must disconnect and lockout the electric supply and the gas supply or the steam supply before any covers or guards are removed from the machine to allow access for cleaning, adjusting, installation, or testing of any equipment per OSHA standards.

Important

The dryer must be installed in a location/ environment, which the ambient temperature remains between 40° F (4.44° C) and 130° F (54.44° C).

The operation of this appliance may affect the operation of other types of gas appliances, which take their air for safe combustion from the same room. If in doubt, consult the appliance manufacturer(s).


Use this dryer only for its intended purpose, drying fabrics.	
The "cool down" cycle of tumble dryers should be used to reduce the temperature of the items. They should not be removed from the tumble dryer or piled or stacked while hot.	NOTES
Fabric softeners or similar products should not be used in a tumbler dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.	
♦ Warning	
To reduce the risk of personal injury, install lockable doors to prevent public access to the rear of the dryers.	
Exhaust duct outlet should be checked periodically for blockages, and if any found, removed.	
▲ Important	
A means of restraint must be used to prevent straining of the gas supply when the appliance is	
moved.	
An external means of power removal (disconnect device) must be provided by the installer.	
CE ONLY	
★ Important	
This appliance must only be installed and operated in the country of destination indicated on the dryer's data plate. If the appliance is to be installed and operated in a country other than the one indicated on the data plate, a data plate amendment must be obtained from American Dryer Corporation.	
♦ Warning	
This appliance must only operate with the gas type indicated on the dryer's data plate. If the	
appliance is converted (gas type is changed), a data plate amendment must be obtained from American Dryer Corporation.	
This appliance may cause spillage of products of combustion from an open-flue appliance fitted in the same	
room, and that such an appliance shall be tested for clearance of products with the appliance in operation and	
all windows and doors closed.	
NOTES	

MAXIN	IIIM CAPAC	CITY (DRY WEIGHT) PER	DOCKET	20 lb	9.07 kg	
	LER DIAME		POCKET	25-3/4"	65.41 cm	
	LER DEPTH			24"	60.96 cm	
		/E PER POCKET		7-1/2 cu ft	212.38 L	
		MOTOR PER POCKET	т	1/4 hp	0.19 kW	
		TOR PER POCKET	'	1/3 hp	0.25 kW	
	OPENING			19-3/8"	49.21 cm	
-	,	T TOP POCKET/BOTTO	M POCKET	49" / 13"	124.46 cm / 33.02 cm	
-	R CONNEC				(North America)	
					itside North America)	
DRYE	RS PER 20'	/40' CONTAINER		42	/ 84	
DRYE	RS PER 48'	/53' TRUCK		96 /	/ 108	
	VOLTAGE A	AVAILABLE		120-240V 1ø	2w 50/60 Hz	
	APPROXIM	MATE NET WEIGH	Т	460 lb	208.65 kg	
	APPROXIM	MATE SHIPPING W	/EIGHT	485 lb	219.99 kg	
10	AIRFLOW I	PER POCKET	60 Hz	230 cfm	6.51 cmm	
5			50 Hz	191 cfm	5.40 cmm	
Ū		JT PER POCKET		40,000 Btu/hr	10,080 kcal/hr	
Gas	l	CONNECTION (DIA	· · · · · · · · · · · · · · · · · · ·	4"	10.16 cm	
		SED AIR CONNE			/ A	
		SED AIR VOLUM			/ A	
	INLET PIPE	CONNECTION P	ER POCKET		M.N.P.T.	
	V(O) TA OF	A) / A III A D.I. E		,	CE and Australia Only)	
		AVAILABLE	-	200-416V 1,3ø	2,3,4w 50/60 Hz	
	APPROXIMATE NET WEIGHT APPROXIMATE SHIPPING WEIGHT			460 lb	208.65 kg 219.99 kg	
	AIRFLOW PER POCKET 60 Hz		485 lb 230 cfm	6.51 cmm		
	AIRFLOW	PER POCKET	50 Hz	191 cfm	5.40 cmm	
EXHAUST CONNECTION (DIAMETER) PER POCKET			METER) DER DOCKET	1 "	10 16 cm	
()				4" N	10.16 cm	
ပ	COMPRES	SED AIR CONNE	CTION	N	/ A	
ric	COMPRES		CTION E	N		
tric	COMPRES	SED AIR CONNE SED AIR VOLUM	CTION E	N	/ A	
ctric	COMPRES	SED AIR CONNE SED AIR VOLUM OVEN SIZE PER F	CTION E	N	/ A	
ectric	COMPRES COMPRES	SED AIR CONNE SED AIR VOLUM OVEN SIZE PER F Btu/hr	CTION E COCKET KCAI/hr	N	/ A	
lectric	COMPRES COMPRES kW 4.1	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btw/hr 13,843	CTION E POCKET kcal/hr 3,488	N	/ A	
Electric	COMPRES COMPRES kW 4.1 5.0	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065	CTION E POCKET kcal/hr 3,488 4,300	N	/ A	
Electric	COMPRES KW 4.1 5.0 5.4	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065 18,430	CTION E POCKET kcal/hr 3,488 4,300 4,644	N	/ A	
Electric	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065 18,430 19,112	CTION E POCKET kcal/hr 3,488 4,300 4,644 4,816	N	/ A	
Electric	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208	CTION E **COCKET** **Kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848	N	/ A	
Electric	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255	CTION E **CCKET** **Kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364	N	/ A	
Electric	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4 7.5	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255 25,597	CTION E COCKET kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364 6,450	N	/ A	
Electric	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4 7.5 8.1	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btw/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255 25,597 27,644	CTION E **CCKET** **Kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364	N N	/ A / A	
Electric	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4 7.5 8.1 VOLTAGE	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255 25,597 27,644 AVAILABLE	CTION E ROCKET kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364 6,450 6,966 6,966	120-240V 1ø	/ A / A 2w 50/60 Hz	
Electric	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4 7.5 8.1 VOLTAGE	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255 25,597 27,644 AVAILABLE	CTION E COCKET kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364 6,450 6,966 T	120-240V 1ø 476 lb	/ A / A 2w 50/60 Hz 215.91 kg	
Electric	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4 7.5 8.1 VOLTAGE	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255 25,597 27,644 AVAILABLE MATE NET WEIGH	CTION E COCKET kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364 6,450 6,966 T KEIGHT	120-240V 1ø 476 lb 501 lb	/ A / A / A 2w 50/60 Hz 215.91 kg 227.25 kg	
	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4 7.5 8.1 VOLTAGE	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255 25,597 27,644 AVAILABLE MATE NET WEIGH	CTION E COCKET kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364 6,450 6,966 T KCAL/hr K	120-240V 1ø 476 lb 501 lb 230 cfm	2w 50/60 Hz 215.91 kg 227.25 kg 6.51 cmm	
	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4 7.5 8.1 VOLTAGE APPROXIM AIRFLOW	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255 25,597 27,644 AVAILABLE MATE NET WEIGH MATE SHIPPING W	CTION E COCKET kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364 6,450 6,966 T /EIGHT 60 Hz 50	120-240V 1ø 476 lb 501 lb 230 cfm 191 cfm	2w 50/60 Hz 215.91 kg 227.25 kg 6.51 cmm 5.40 cmm	
	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4 7.5 8.1 VOLTAGE APPROXIM AIRFLOW STEAM CO	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255 25,597 27,644 AVAILABLE MATE NET WEIGH MATE SHIPPING WEIGHT ONSUMPTION PER	CTION E ROCKET kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364 6,450 6,966 T /EIGHT 60 Hz 50 Hz POCKET	120-240V 1ø 476 lb 501 lb 230 cfm 191 cfm 45 lb/hr	2w 50/60 Hz 215.91 kg 227.25 kg 6.51 cmm 5.40 cmm 20.41 kg/hr	
	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4 7.5 8.1 VOLTAGE APPROXIM APPROXIM AIRFLOW STEAM CO	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255 25,597 27,644 AVAILABLE MATE NET WEIGH MATE SHIPPING W	CTION E COCKET Kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364 6,450 6,966 T CEGHT 60 Hz 50	120-240V 1ø 476 lb 501 lb 230 cfm 191 cfm	2w 50/60 Hz 215.91 kg 227.25 kg 6.51 cmm 5.40 cmm 20.41 kg/hr 10.34 bar	
	KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4 7.5 8.1 VOLTAGE APPROXIM APPROXIM APPROXIM OPERATINE EXHAUST	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255 25,597 27,644 AVAILABLE MATE SHIPPING WERPPOCKET DINSUMPTION PER	CTION E COCKET Kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364 6,450 6,966 T /EIGHT 60 Hz 50 Hz FOCKET SURE METER) PER POCKET	120-240V 1ø 476 lb 501 lb 230 cfm 191 cfm 45 lb/hr 150 psi max 4"	2w 50/60 Hz 215.91 kg 227.25 kg 6.51 cmm 5.40 cmm 20.41 kg/hr	
Steam Electric	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4 7.5 8.1 VOLTAGE APPROXIM APPROXIM APPROXIM COMPRES COMPRES	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btu/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255 25,597 27,644 AVAILABLE MATE NET WEIGH MATE SHIPPING WEIGH OF THE POCKET DINSUMPTION PER G STEAM PRESS CONNECTION (DIA	CTION E COCKET Kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364 6,450 6,966 T /EIGHT 60 Hz 50 Hz FOCKET CURE METER) PER POCKET CTION	120-240V 1ø 476 lb 501 lb 230 cfm 191 cfm 45 lb/hr 150 psi max 4"	2w 50/60 Hz 215.91 kg 227.25 kg 6.51 cmm 5.40 cmm 20.41 kg/hr 10.34 bar 10.16 cm	
	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4 7.5 8.1 VOLTAGE APPROXIM APPROXIM AIRFLOW STEAM CO OPERATIN EXHAUST COMPRES COMPRES	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btw/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255 25,597 27,644 AVAILABLE MATE NET WEIGH MATE SHIPPING WEIGH POCKET DINSUMPTION PER G STEAM PRESS CONNECTION (DIA SED AIR CONNE	CTION E COCKET Kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364 6,450 6,966 T /EIGHT 60 Hz 50 Hz FOCKET SURE METER) PER POCKET CTION E	120-240V 1ø 476 lb 501 lb 230 cfm 191 cfm 45 lb/hr 150 psi max 4"	2w 50/60 Hz 215.91 kg 227.25 kg 6.51 cmm 5.40 cmm 20.41 kg/hr 10.34 bar 10.16 cm	
	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4 7.5 8.1 VOLTAGE APPROXIM APPROXIM AIRFLOW STEAM CO OPERATIN EXHAUST COMPRES BOILER HO	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btw/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255 25,597 27,644 AVAILABLE MATE NET WEIGH MATE SHIPPING WERPOCKET ONSUMPTION PER G STEAM PRESS CONNECTION (DIA SED AIR CONNE	CTION E POCKET Kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364 6,450 6,966 T /EIGHT 60 Hz 50 Hz FOCKET SURE METER) PER POCKET CTION E MALLOAD) PER POCKET	120-240V 1ø 476 lb 501 lb 230 cfm 191 cfm 45 lb/hr 150 psi max 4" N	2w 50/60 Hz 215.91 kg 227.25 kg 6.51 cmm 5.40 cmm 20.41 kg/hr 10.34 bar 10.16 cm	
	COMPRES KW 4.1 5.0 5.4 5.6 6.1 6.5 6.8 7.4 7.5 8.1 VOLTAGE APPROXIM AIRFLOW STEAM CO OPERATIN EXHAUST COMPRES BOILER HC SUPPLY C	SED AIR CONNE SED AIR VOLUM OVEN SIZE PERF Btw/hr 13,843 17,065 18,430 19,112 20,819 22,184 23,208 25,255 25,597 27,644 AVAILABLE MATE NET WEIGH MATE SHIPPING W PER POCKET ONSUMPTION PER G STEAM PRESS CONNECTION (DIA SED AIR CONNE SED AIR CONNE	CTION E POCKET Kcal/hr 3,488 4,300 4,644 4,816 5,246 5,590 5,848 6,364 6,450 6,966 T /EIGHT 60 Hz 50 Hz FOCKET SURE METER) PER POCKET CTION E MALLOAD) PER POCKET COKET CO	120-240V 1ø 476 lb 501 lb 230 cfm 191 cfm 45 lb/hr 150 psi max 4" N N 1.2 Bhp	2w 50/60 Hz 215.91 kg 227.25 kg 6.51 cmm 5.40 cmm 20.41 kg/hr 10.34 bar 10.16 cm	

10/17/05



The manufacturer reserves the right to make changes in specifications at any time without notice or obligation.

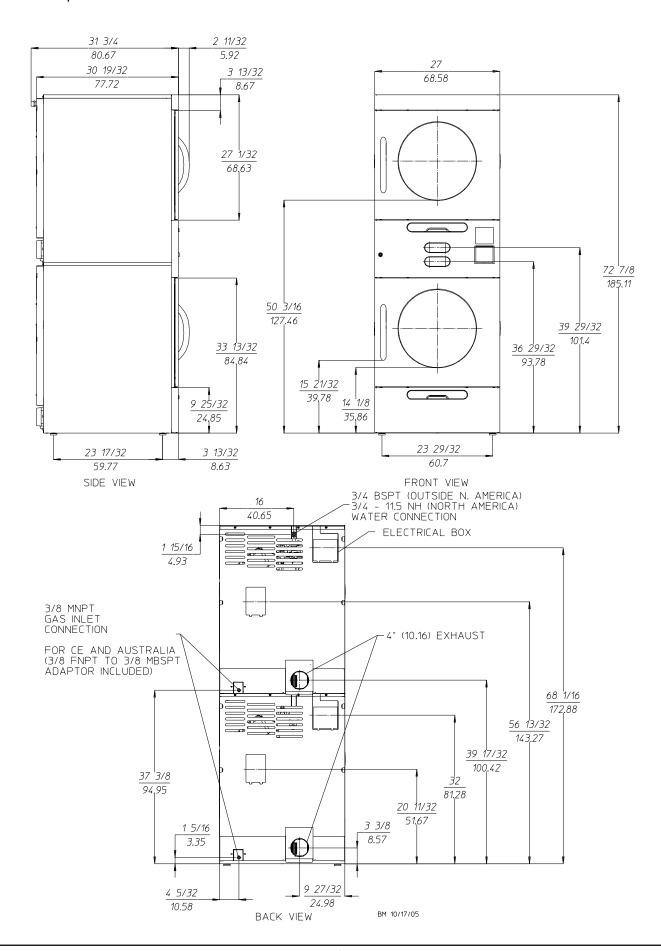



MAXIN	// DRY WEIGHT) PER P	OCKET	30 lb	13.61 kg	
	LER DIAMETER	JCKET	25-3/4"	65.41 cm	
	LER DEPTH		34"	86.36 cm	
	LER VOLUME PER POCKET		10-1/4 cu ft	290.25 L	
	LER/DRIVE MOTOR PER POCKET		1/4 hp	0.19 kW	
	ER/FAN MOTOR PER POCKET		1/2 hp	0.37 kW	
	OPENING (DIAMETER)		19-3/8"	49.21 cm	
	SILL HEIGHT TOP POCKET/BOTTOM	POCKET	49" / 13"	124.46 cm / 33.02 cm	
—	R CONNECTION	POCKET		(North America)	
***	TO OTTIVE OTHER	-		side North America)	
DRYFI	RS PER 20'/40' CONTAINER		,	/ 28	
	RS PER 48'/53' TRUCK			/ 38	
DIVIE	VOLTAGE AVAILABLE		120V 1ø	2w 60 Hz	
	APPROXIMATE NET WEIGHT		535 lb	242.67 kg	
	APPROXIMATE SHIPPING WI		560 lb	254.01 kg	
$ \alpha $	AIRFLOW PER POCKET		240 cfm	6.80 cmm	
<u>jas</u>	HEAT INPUT PER POCKET		52,500 Btu/hr	13,230 kcal/hr	
1,0	EXHAUST CONNECTION (DIAN	METER) PER POCKET	6"	15.24 cm	
$ \bigcirc $	COMPRESSED AIR CONNEC	· · · · · · · · · · · · · · · · · · ·	N	/ A	
	COMPRESSED AIR VOLUME	:	N / A		
	INLET PIPE CONNECTION PE	R POCKET	3/8" M.N.P.T.		
			3/8" M.B.S.P.T. (C	E and Australia Only)	
	VOLTAGE AVAILABLE				
	APPROXIMATE NET WEIGHT	•			
Electric	APPROXIMATE SHIPPING W	EIGHT			
 	AIRFLOW PER POCKET				
$\mid \bigcirc \mid$	EXHAUST CONNECTION (DIAM	METER) PER POCKET	N	/ A	
l ás l	COMPRESSED AIR CONNEC	CTION			
<u> </u>	COMPRESSED AIR VOLUME				
ш	OVEN SIZE PER P	OCKET			
	kW Btu/hr	kcal/hr			
	VOLTAGE AVAILABLE				
	APPROXIMATE NET WEIGHT				
_	APPROXIMATE SHIPPING WI	EIGHT			
$ \leftarrow $	AIRFLOW PER POCKET				
STEAM CONSUMPTION PER POCKET					
Steam	OPERATING STEAM PRESSURE		N	/ A	
$ \Psi $	EXHAUST CONNECTION (DIAN		.,		
),t	COMPRESSED AIR CONNEC				
(V	COMPRESSED AIR VOLUME				
	BOILER HORSEPOWER (NORM	· · · · · · · · · · · · · · · · · · ·			
	SUPPLY CONNECTION PER PO				
	RETURN CONNECTION PER PO	OCKET			


9/20/05




The manufacturer reserves the right to make changes in specifications at any time without notice or obligation.

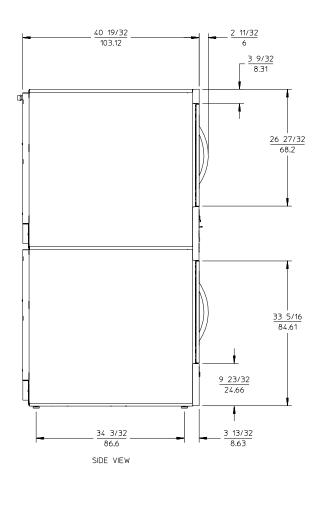

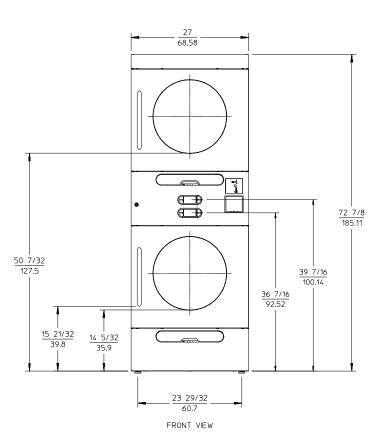

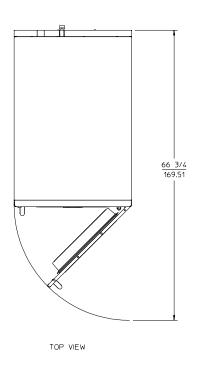

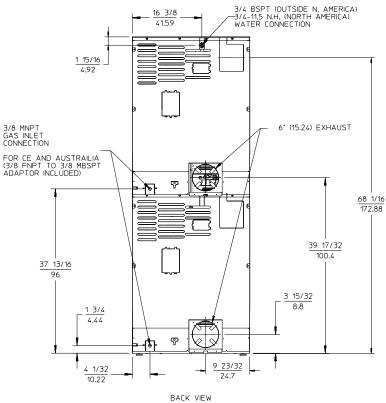


NAA VIII	41 IN 4 C A D A C	TTV/		00 lb	40.04 1	
MAXIMUM CAPACITY (DRY WEIGHT) PER POCKET				30 lb	13.61 kg	
	LER DIAME			30"	76.20 cm	
	LER DEPTH			27"	68.58 cm	
	LER VOLUM			11.04 cu ft	312.62 L	
TUMB	LER/DRIVE	MOTOR PER POCKET		1/4 hp	0.19 kW	
BLOW	/ER/FAN MO	TOR PER POCKET		1/2 hp	0.37 kW	
DOOF	R OPENING (I	DIAMETER)		19-3/8"	49.21 cm	
DOOF	R SILL HEIGH	T TOP POCKET / BOTTOM	I POCKET	54-11/16" / 14-7/8"	138.91 cm / 37.78 cm	
WATE	R CONNECT	ΓΙΟΝ		3/4"-11.5 NI	┤ (North America)	
				3/4" B.S.P.T. (0	utside North America)	
DRYE	RS PER 20'/	40' CONTAINER		12	2 / 28	
DRYE	RS PER 48'/	53' TRUCK		34	/ 38	
	VOLTAGE /	AVAILABLE		120-240V 1ø	2w 50/60 Hz	
	APPROXIM	ATE NET WEIGHT	Г	550 lb	249.48 kg	
	APPROXIM	ATE SHIPPING W	EIGHT	580 lb	263.08 kg	
1,0	AIRFLOW F	PER POCKET	60 Hz	360 cfm	10.19 cmm	
S			50 Hz	300 cfm	8.49 cmm	
Ga	HEAT INPU	T PER POCKET		55,000 Btu/hr	13,860 kcal/hr	
()	EXHAUST	CONNECTION (DIAN	METER) PER POCKET	6"	15.24 cm	
	COMPRES	SED AIR CONNEC	CTION	N	I / A	
	COMPRES	SED AIR VOLUME		N	I / A	
	INLET PIPE	CONNECTION PE	R POCKET	1/2"	M.N.P.T.	
				3/8" M.B.S.P.T. (CE and Australia Only)		
	VOLTAGE /	AVAILABLE		200-416V 1,3ø 2,3,4w 50/60 Hz		
	APPROXIMATE NET WEIGHT		550 lb	249.48 kg		
		ATE SHIPPING W		580 lb	263.08 kg	
	AIRFLOW PER POCKET 60 Hz			360 cfm	10.19 cmm	
			50 Hz	300 cfm	8.49 cmm	
	FXHAUST	CONNECTION (DIAN		6"	15.24 cm	
Electric		SED AIR CONNEC			I / A	
		SED AIR VOLUME			I / A	
	00	OVEN SIZE PER P			. , , , .	
	kW	Btu/hr	kcal/hr			
ΙΨ	7.9	26,962	6,794			
<u> </u>	8.3	28,327	7,138			
ΙШ	9.0	30,716	7,740			
	11.3	38,566	9,719			
	12.4	42,320	10,665			
	12.5	42,661	10,751			
	13.5	46,074	11,611			
	VOLTAGE A	·	,	120-240V 1ø	2w 50/60 Hz	
		ATE NET WEIGHT	Γ	580 lb	263.08 kg	
		ATE SHIPPING W		610 lb	276.69 kg	
	AIRFLOW F		60 Hz	360 cfm	10.19 cmm	
⊢	, LOW F	EN FOORE I	50 Hz	300 cfm	8.49 cmm	
Steam	STEAM CO	NSUMPTION PER P		63 lb/hr	28.58 kg/hr	
I (i)		G STEAM PRESS		150 psi max	10.34 bar	
\Box		CONNECTION (DAN		6"	15.24 cm	
1						
S		SED AIR CONNEC			I / A	
•		SED AIR VOLUME			I / A	
	BOILER HORSEPOWER (NORMAL LOAD) PER POCKET			1.75 Bhp		
				4 /0"	- N D T	
	SUPPLY CO	ONNECTION PER PO			F.N.P.T. M.N.P.T.	

9/30/05



The manufacturer reserves the right to make changes in specifications at any time without notice or obligation.

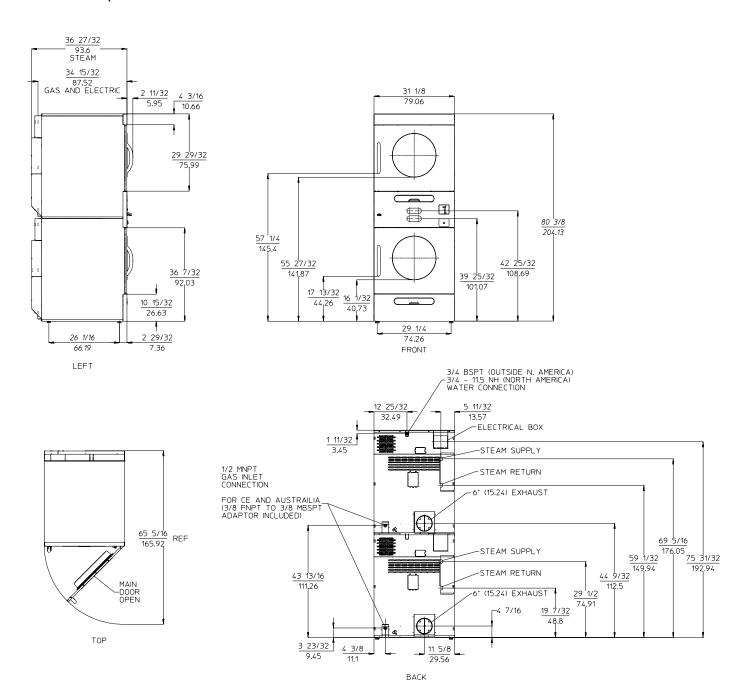

5/16/07

Installation Procedures

Installation should be performed by competent professional in accordance with local, state, and country codes. In the absence of these codes, the installation must conform to applicable American National Standards: ANSI Z223.1-LATEST EDITION (National Fuel Gas Code) or ANSI/NFPA NO. 70-LATEST EDITION (National Electrical Code) or in Canada, the installation must conform to applicable Canadian Standards: CAN/CGA-B149.1-M91 (Natural Gas) or CAN/CGA-B149.2-M91 (L.P. Gas) or LATEST EDITION (for General Installation and Gas Plumbing) or Canadian Electrical Codes Parts 1 & 2 CSA C22.1-1990 or LATEST EDITION (for Electrical Connections).

Location Requirements

Before installing the dryer, be sure the location conforms to local codes and ordinances. In the absence of such codes or ordinances the location must conform with the National Fuel Gas Code ANSI.Z223.1 LATEST EDITION, or in Canada, the installation must conform to applicable Canadian Standards: CAN/CGA-B149.1-M91 (Natural Gas) or CAN/CGA-B149.2-M91 (L.P. Gas) or LATEST EDITION (for General Installation and Gas Plumbing).

The dryer must be installed on a sound level floor capable of supporting its weight. Carpeting must be removed from the floor area that the dryer is to rest on.

The dryer must not be installed or stored in an area where it will be exposed to water and/or weather.

Provisions for adequate air supply must be provided as noted in this manual (refer to Fresh Air Supply Requirements section).

Clearance provisions must be made from combustible construction as noted in this manual (refer to Dryer Enclosure Requirements section).

Provisions must be made for adequate clearances for servicing and for operation as noted in this manual (refer to Dryer Enclosure Requirements section).

The dryer must be installed with a proper exhaust duct connection to the outside as noted in this manual (refer to Exhaust Requirements section).

The dryer must be located in an area where correct exhaust venting can be achieved as noted in this manual (refer to Exhaust Requirements section).



Important

The dryer should be located where a minimum amount of exhaust ducting will be necessary.

The dryer must be installed with adequate clearance for air openings into the combustion chamber.



Caution

This dryer produces combustible lint and must be exhausted to the outdoors. Every 6 months, inspect the exhaust ducting and remove any lint buildup.

Important
 The driver miles

The dryer must be installed in a location/ environment, which the ambient temperature remains between 40° F (4.44° C) and 130° F (54.44° C).

Unpacking/Setting Up __

Remove protective shipping material (i.e., plastic wrap and optional shipping box) from the dryer.



Important

Dryer must be transported and handled in an upright position at all times.

The dryer can be moved to its final location while still attached to the skid or with the skid removed. To remove the skid from the dryer, locate and remove the 2 bolts securing the base of the dryer to the wooden skid. One is located at the center rear and the other is at the center front.

With the skid removed, use caution and assure all four leveling legs are fully retracted, if the dryer is to be slid into its final position.

Leveling Dryer

The dryer is equipped with 4 leveling legs, 1 at each corner of the base. For optimum performance the dryer should be level front-to-back and side-to-side.


Dryer Enclosure Requirements _____

Bulkheads and partitions should be made of noncombustible material.



Note

Allowances must be made for opening the control door.

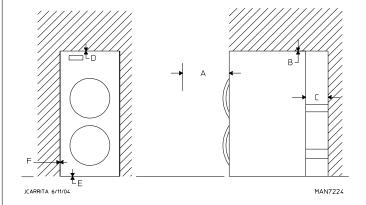


- A The requirement to allow the door to open completely for the SL2020/SL2929 is 30-inches (76.2 cm), and for the SL3131 is 33-inches (83.8 cm).
- B A minimum overhead clearance of 6-inches (15.24 cm) is required.
- C Dryer should be positioned a minimum of 12-inches (30.48 cm) away from the nearest obstruction. 24-inches (60.96 cm) is recommended for ease of installation, maintenance, and service.
- D 1/16" (1.5875 mm) minimum is required.
- E Flooring should be level or below dryer cabinet for ease of removing panels during maintenance.
- F Dryers may be positioned sidewall to sidewall, however a 1/16" (1.5875 mm) minimum allowance must be made for the opening and closing of the control door, along with the removal of panels during maintenance.

Fresh Air Supply Requirements ____

When the dryer is operating, it draws in room air, heats it, passes this air through the tumbler, and exhausts it out of the building. Therefore, the room air must be continually replenished from the outdoors. If the make-up air is inadequate, drying time and drying efficiency will be adversely affected. Ignition problems and sail switch "fluttering" problems may result, as well as premature motor failure from overheating. The dryer must be installed with provisions for adequate combustion and make-up air supply.

Air supply (make-up air) must be given careful consideration to ensure proper performance of each dryer. Fresh air ventilation openings shall not be blocked and/or sealed. As a general rule, an unrestricted air entrance from the outdoors of 110 inch² (710 cm²) is required for each SL3131, 105 inch² (678 cm²) for each SL2929, and 80 inch² (516 cm²) for each SL2020. (Based on 1 inch² [6.5 cm²] per 1,000 Btu [252 kcal].)

It is not necessary to have a separate make-up air opening for each dryer. Common make-up air openings are acceptable. However, they must be set up in such a manner that the make-up air is distributed equally to all the dryers.

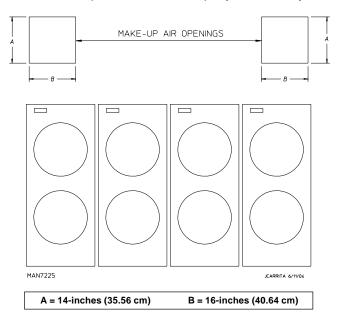

EXAMPLE: For a bank of 4 SL3131 dryers, 2 unrestricted openings measuring 14-inches by 16-inches (35.56 cm by 40.64 cm) are acceptable.

To compensate for the use of registers or louvers used over the openings, this area must be increased by approximately 33%. Make-up air openings should not be located in an area directly near where exhaust vents exit the building.

Allowances must be made for remote or constricting passageways or where dryers are located at high altitudes or predominantly low pressure areas.

Important

Make-up air must be free of dry cleaning solvent fumes. Make-up air that is contaminated by dry cleaning solvent fumes will result in irreparable damage to the motors and other dryer components.



Note

Component failure due to dry cleaning solvent fumes will void the warranty.

Exhaust Requirements ___

Exhaust ductwork should be designed and installed by a qualified professional. Improperly sized ductwork will create excessive back pressure, which results in slow drying, increased use of energy, and shutdown of the burner by the airflow (sail) switch, burner hi-limits, or lint chamber hi-limit protector thermostat. The dryer must be installed with a proper exhaust duct connection to the outside.



Caution

This dryer produces combustible lint and must be exhausted to the outdoors.

Improperly sized or installed exhaust ductwork can create a potential fire hazard.

The ductwork should be laid out in such a way that the ductwork travels as directly as possible to the outdoors with as few turns as possible. There should be a minimum 6-inch (15.24 cm) clearance between the back guard and the first bend in the ductwork for ease of servicing. Single or independent dryer venting is recommended. It is suggested that the use of 90° turns be avoided; use 30° and/or 45° bends instead. The radius of the elbows should preferably be 1-1/2 times the diameter of the duct. All ductwork should be smooth inside with no projections from sheet metal screws or other obstructions, which will collect lint. When adding ducts, overlap the duct being connected. All ductwork joints must be taped to prevent moisture and lint from escaping into the building. Back draft dampers must be installed in all commonly ducted systems. Inspection doors should be installed at strategic points in the exhaust ductwork for periodic inspection and cleaning of lint from the ductwork.



Important

It is recommended that exhaust or booster fans not be used in the exhaust ductwork system.

Exhaust back pressure measured by a manometer/ magnehelic in the exhaust duct must be no less than 0 and must not exceed 0.6 in WC (1.48 mb).

Note

When the exhaust ductwork passes through a wall, ceiling, or roof made of combustible materials, the opening must be 2-inches (5.08 cm) larger than the duct (all the way around). The duct must be centered within this opening.

As per the National Fuel Gas Code, "Exhaust ducts for type 2 clothes dryers shall be constructed of sheet metal or other noncombustible material. Such ducts shall be equivalent in strength and corrosion resistance to ducts made of galvanized sheet steel not less than 26 gauge (0.0195-inches [0.50 mm]) thick."

The ductwork for this appliance must be suitable for the appliance category in accordance with national installation regulations of the country of destination.

Outside Ductwork Protection

To protect the outside end of the horizontal ductwork from the weather, a 90° elbow bent downward should be installed where the exhaust exits the building. If the ductwork travels vertically up through the roof, it should be protected from the weather by using a 180° turn to point the opening downward. In either case, allow at least twice the diameter of the duct between the duct opening and the nearest obstruction (refer to the diagram).




Important

Do not use screens, louvers, or caps on the outside opening of the exhaust ductwork.

Single Dryer Venting

Important


For extended ductwork runs, the cross-sectional area of the ductwork can only be increased to an extent. When the ductwork approaches the maximum limits as noted in this manual, a professional HVAC firm should be consulted for proper venting information.

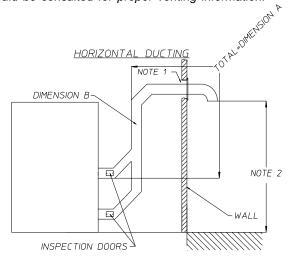

A = SL2020/SL2929 - 20 feet (6.10 meters) SL3131 - 12 feet (3.66 meters)

B = 8-inches (20.32 cm)

VERTICAL DUCTING

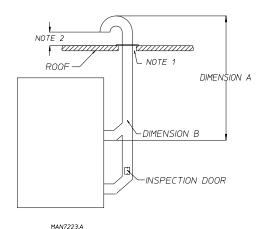

NOTE 1 Opening from combustible materials must be 2-inches (5.08 cm) larger than the duct (all the way around). The duct must be centered within this opening.

NOTE 2 Distance should be 2 times the diameter of the duct to the nearest obstruction.

The length of the ductwork from the dryer to the outside exhaust outlet, must not exceed 12 feet (3.66 meters) for the SL3131 and 20 feet (6.10 meters) for the SL2020 and SL2929. The minimum diameter of this ductwork must be at least 8-inches (20.32 cm) even though the dryer exhaust duct connection is smaller. Including tumbler/dryer elbow connections or elbows used for outside protection from the weather, no more than 4 90° elbows should be used in the exhaust duct run. If more than the equivalent of four 90° elbows are used, the cross-sectional area of the ductwork must be increased.

Multiple Dryer (Common) Venting

Important

For extended ductwork runs, the cross-sectional area of the ductwork can only be increased to an extent. When the ductwork approaches the maximum limits as noted in this manual, a professional HVAC firm should be consulted for proper venting information.

If it is not feasible to provide separate exhaust ducts for each dryer, ducts from individual dryers may be channeled into a "common main duct." The individual ducts should enter the bottom or side of the main duct at an angle not more than 45° in the direction of airflow. The main duct should be tapered, with the diameter increasing before each individual duct is added. The minimum diameter of the individual ductwork must be at least 8-inches (20.32 cm).

Λ					
L	!	7			

Important

No more than 4 dryers should be connected to 1 main common duct.

NO 169	 	

The illustration below shows the minimum cross-sectional area for multiple dryer round or square venting. These figures must be increased if the main duct run from the last dryer to where it exhausts to the outdoors is longer than 12 feet (3.66 meters) or has more than 1 elbow in it.

SL2020/SL2929


Multiple Dryer Venting with 8-Inch (20.32 cm) Diameter 460/480 cfm (13.02/13.59 cmm) Exhaust Connections at Common Duct

	NUMBER OF DRYERS		4	3	2	1
Γ	MINIMUM CROSS-	SQ IN	120	80	80	54
	SECTIONAL AREA	SQ CM	774.2	516.1	516.1	348.4
	MINIMUM ROUND	IN	12	10	10	8
	DUCT DIAMETER	CM	30.48	25.4	25.4	20.32

SL3131

Multiple Dryer Venting with 8-Inch (20.32 cm) Diameter 720 cfm (20.38 cmm) Exhaust Connections at Common Duct

NUMBER OF DRYERS		4	3	2	1
MINIMUM CROSS-	SQ IN	164	120	80	54
SECTIONAL AREA	SQ CM	1058	774.2	516.1	348.4
MINIMUM ROUND	IN	14	12	10	8
DUCT DIAMETER	CM	35.56	30.48	25.4	20.32

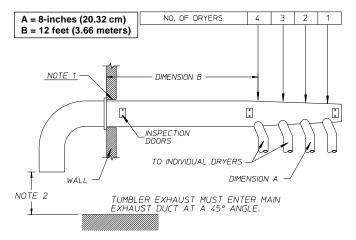

JCARRITA 04/21/04

MAN7212

NOTE 1 Opening from combustible materials must be 2-inches (5.08 cm) larger than the duct (all the way around). The duct must be centered within this opening.

NOTE 2 Distance should be 2 times the diameter of the duct to the nearest obstruction.

Electrical Information

Electrical Requirements

All electrical connections must be made by a properly licensed and competent electrician. This is to ensure that the electrical installation is adequate and conforms to local, state, and national regulations or codes of the country of origin. In the absence of such codes, all electrical connections, materials, and workmanship must conform to the applicable requirements of the National Electrical Code ANSI/NFPA NO. 70-LATEST EDITION or in Canada, the Canadian Electrical Codes Parts 1 & 2 CSA C22.1-1990 or LATEST EDITION.

Important

Failure to comply with these codes or ordinances, and/or the requirements stipulated in this manual can result in personal injury or component failure.

Note



Component failure due to improper installation will void the warranty.

Each pocket should be connected to an independently protected branch circuit. The dryer must be connected with copper wire only. Do not use aluminum wire, which could cause a fire hazard. The copper conductor wire/cable must be of proper ampacity and insulation in accordance with electric codes for making all service connections.

Note

The use of aluminum wire will void the warranty.

An individual ground circuit must be provided to each pocket, do not daisy chain.

Component failure due to improper voltage application will void the warranty.

The manufacturer reserves the right to make changes in specifications at any time without notice or obligation.

 \triangle

Important

A separate protected circuit must be provided to each pocket.

It is necessary to have a power disconnect for each pocket. These disconnects must be located within 9 meters of the unit and also be identified as being one of two power sources supplying a dryer.

The dryer must be connected to the electric supply shown on the data label. In the case of 208 VAC or 230/240 VAC, the supply voltage must match the electric service specifications of the data label exactly.

The wire size must be properly sized to handle the related current.

Warning

208 VAC and 230/240 VAC are not the same. Any damage done to dryer components due to improper voltage connections will automatically void the warranty.

Warning (Gas Models Only)

Dryers built for use with a voltage between 200 and 230/240 must verify the input voltage during installation. If the nominal voltage is outside of the medium tolerances shown on the diagram below, adjust the autotransformers, located near the burner assemblies. To adjust the autotransformer wiring, place the red wire on the appropriate tap (HIGH, MED, LOW) of the autotransformer. For additional wiring details, refer to the electrical diagram located on the inside of the control panel.

TERM	LINE VOLTAGE			
. =	50 Hz	60 Hz		
HIGH	260 226	283 249		
MED	239 208	260 230		
LOW	217 189	236 208		

Electrical Service Specifications Gas and Steam Models Only

ELECTRICAL SERVICE SPECIFICATIONS (PER POCKET)

IMPORTANT: 208 VAC AND 230/240 VAC ARE NOT THE SAME. When ordering, specify exact voltage.

NOTES: A.

- When fuses are used they must be dual element, time delay, current limiting, class RK1 or RK5 ONLY. Calculate/determine correct fuse value, by applying either local and/or National Electrical Codes to listed appliance amp draw data.
- Circuit breakers are thermal-magnetic (industrial) motor curve type ONLY. For others, calculate/verify correct breaker size according to appliance amp draw rating and type of breaker used. Circuit breakers for 3-phase (3ø) dryers must be 3-pole type.

					,,	
SERVICE VOLTAGE	PHASE	WIRE SERVICE	APPROX. AMP DRAW		CIRCUIT BREAKER	
10217.02		02.(1.02	60 Hz	50 Hz	DILLARLIN	
		SL2020	Gas			
120	1ø	2	8.9	_	15	
200	1ø	2	7.7	7.8	15	
208	1ø	2	7.6	_	15	
220	1ø	2	_	7.4	15	
230	1ø	2	_	7.3	15	
240	1ø	2	7.2	7.0	15	
		SL2929	Gas			
120	1ø	2	8.9	_	15	
		SL3131 (Gas			
120	1ø	2	10.3	_	15	
200	1ø	2	8.7	8.8	15	
208	1ø	2	8.4	_	15	
220	1ø	2	8.1	8.1	15	
230	1ø	2	_	7.4	15	
240	1ø	2	7.7	7.0	15	
	;	SL3131 S	team			
120	1ø	2	9.3	_	15	
208	1ø	2	6.2	6.0	15	
220	1ø	2	5.6	5.5	15	
230	1ø	2	_	5.4	15	
240	1ø	2	5.1	_	15	

7/10/08

Electric Models Only

All electrically heated dryers must be connected to the electric service shown on the dryer's data label. The connecting wires must be properly sized to handle the rated current.

ELECTRICAL SERVICE SPECIFICATIONS (PER POCKET)

IMPORTANT: 208 VAC AND 230/240 VAC ARE NOT THE SAME. When ordering, specify

NOTES: A.

- When fuses are used they must be dual element, time delay, current limiting, class RK1 or RK5 ONLY. Calculate/determine correct fuse value, by applying either local and/or National Electrical Codes to listed appliance amp draw data.
- Circuit breakers are thermal-magnetic (industrial) type ONLY. For others, calculate/verify correct breaker size according to appliance amp draw rating and type of breaker used.

 C. Circuit breakers for 3-phase (3ø) dryers must be 3-pole type.

SERVICE VOLTAGE	kW	PHASE	WIRE SERVICE	APP	ROX. DRAW	CIRCUIT BREAKER			
SL2020									
200	5.6	1ø	2	32.7	32.7	45			
208	4.1	1ø	2	24.2	_	35			
208	6.1	1ø	2	34.0	_	45			
220	6.8	1ø	2	35.6	_	45			
230	5.0	1ø	2	_	26.4	35			
230	7.4	1ø	2	_	36.8	50			
240	5.4	1ø	2	27.1	_	35			
240	8.1	1ø	2	38.4	38.4	50			
208	6.5	3ø	3	22.7	_	30			
240	7.5	3ø	3	22.6	_	30			
380	6.8	3ø	4	_	15.0	20			
400	7.5	3ø	4	_	15.5	20			
416	8.1	3ø	4	_	15.8	20			
			SL3131						
200	12.5	1ø	2	68.4	67.7	90			
208	7.9	1ø	2	43.8	1	60			
208	13.5	1ø	2	70.7	_	90			
230	8.3	1ø	2	_	41.3	60			
230	12.4	1ø	2	_	59.1	80			
240	9.0	1ø	2	42.7		60			
240	13.5	1ø	2	61.5		80			
208	13.5	3ø	3	43.3	ı	60			
220	11.3	3ø	3	35.3		50			
230	12.4	3ø	3	_	36.5	50			
240	13.5	3ø	3	37.7	_	50			
380	11.3	3ø	4	22.8	22.6	40			
400	12.4	3ø	4	_	23.1	40			
416	13.5	3ø	4	_	23.7	40			

7/10/08

Grounding

A ground (earth) connection must be provided and installed in accordance with local, state, and national regulations or codes of the country of origin. In the absence of these codes, grounding must conform to applicable requirements of the National Electrical Code ANSI/NFPA NO. 70-LATEST EDITION, or in Canada, the installation must conform to applicable Canada Standards: Canadian Electrical Codes Parts 1 & 2 CSA C22.1-1990 or LATEST EDITION. The ground connection may be to a proven earth ground at the location service panel.

For added personal safety, when possible, it is suggested that a separate ground wire (size per local codes) be connected from the ground connection of the dryer to a grounded cold water pipe. Do not ground to a gas pipe or hot water pipe. The grounded cold water pipe must have metal-to-metal connection all the way to the electrical ground. If there are any nonmetallic interruptions, such as, a meter, pump, plastic, rubber, or other insulating connectors, they must be jumped out with a wire (size per local codes) and securely clamped to bare metal at both ends.



Important

For personal safety and proper operation, the dryer must be grounded.

Provisions are made for ground connection in each dryer at the electrical service connection area.

Electrical Connections

A wiring diagram is located behind the control panel for connection data.

If local codes permit, power to the dryer can be made by the use of a flexible UL listed power cord/pigtail (wire size must conform to rating of dryer), or the dryer can be hard wired directly to the service breaker panel. In both cases, a strain relief must be installed where the wiring enters the dryer.

For CE Models Only

The means for disconnection from the supply must be incorporated into wiring having a minimum contact separation of 3.0 mm in all poles.


Single-Phase (1ø)

Wiring Connections/Hookup


The electrical input connections are made into the rear service box located at the upper right area of the dryer. The ground connection is made to the copper lug, also provided in this box. To gain access, the service box cover must be removed.

Gas and Steam Models Only

120-240V Application with Neutral

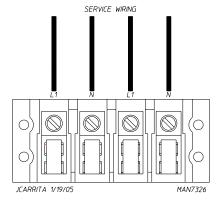

208-240V Application without Neutral

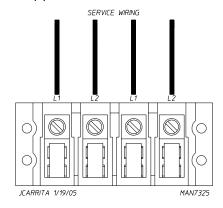



Caution

The dryer must be grounded. A ground lug has been provided for this purpose.

Input connection wiring must be sized properly to handle the dryer's current draw. This information is printed on the dryer's data label.



Important

A strain relief must be used where the input wiring enters the oven assembly.

Electrically Heated Models Only

The electrical input connections are made at the rear service box located at the right upper section of the dryer. The ground connection is made to a copper lug also provided in this area. To gain access, remove rear service cover.

The only electrical input connections to the dryer are the 3-phase ($3\emptyset$) power leads (L1, L2, L3, and sometimes neutral) and ground. Single-phase ($1\emptyset$) power for the control circuit and for any single-phase ($1\emptyset$) motors (if present) is done internally to the dryer by the factory at the oven contactor. No single-phase ($1\emptyset$) input connection is required on a 3-phase ($3\emptyset$) dryer.

The neutral will only be used on 4-wire service. This is typical for 380-416V, 50 Hz.




Caution


The dryer must be grounded. A ground lug has been provided for this purpose.

Input connection wiring must be sized properly to handle the dryer's current draw. This information is printed on the dryer's data label.


Electric Models Only

Single-Phase (1ø) Wiring Connections/Hookup

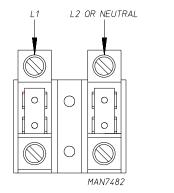

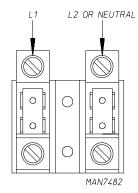

3-Phase (3ø) Wiring Connections/Hookup

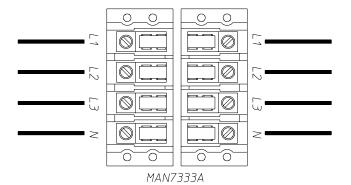

Gas Information

It is your responsibility to have all plumbing connections, materials, and workmanship conform to local and state regulations or codes of the country of destination. In the absence of such codes, all plumbing connections, materials, and workmanship must conform to the applicable local requirements. In the USA this is the National Fuel Gas Code ANSI Z223.1-LATEST EDITION, or in Canada, the Canadian Installation Codes CAN/CGA-B149.1-M91 (Natural Gas) or CAN/CGAB149.2-M91 (L.P. Gas) or LATEST EDITION.

In Australia, the fuel gas code is AS 5601 / AG 601, local authority, gas, electricity, and any other relevant statutory regulations.

It is important that gas pressure regulators meet applicable pressure requirements, and that gas meters be rated for the total amount of all the appliance Btu being supplied.

Important

Failure to comply with these codes or ordinances, and/or the requirements stipulated in this manual, can result in personal injury and improper operation of the dryer.

For ease of service, the individual gas supply line of each dryer must have its own manual shutoff valve.

Failure to isolate or disconnect the dryer from supply as noted can cause irreparable damage to the gas valve, voiding the warranty.

The dryer and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psig (3.5 kPa) for non-CE dryers or 50 mb for CE dryers.

Note

The dryer must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure test of the gas supply system at test pressures equal to or less than 1/2 psig (3.5 kPa) for non-CE dryers or 50 mb for CE dryers.

 Λ

Warning

Fire or explosion could result due to failure of isolating or disconnecting the gas supply as noted.

Note

Undersized gas piping will result in ignition problems, slow drying, increased use of energy, and can create a safety hazard.

The dryer must be connected to the type of heat/gas indicated on the data label and pressure must be confirmed. If this information does not agree with the type of gas available, do not operate the dryer. Contact the reseller who sold the dryer or contact the manufacturer.

The input ratings shown on the data label are for elevations up to 2,000 feet (610 meters), unless elevation requirements of over 2,000 feet (610 meters) were specified at the time the dryer order was placed with the factory. The adjustment or conversion of dryers in the field for elevations over 2,000 feet (610 meters) is made by changing each burner orifice. If this conversion is necessary, contact the reseller who sold the dryer or contact the manufacturer.

Important

If connection to this appliance is made with a flexible hose, it must be suitable for the appliance category in accordance with national installation regulations of the country of destination, and if in doubt the installer must contact the supplier. The manufacturer of this appliance does not recommend the use of flexible gas supply line/hose. An external gas supply shutoff must be provided.

CE and Australian Dryers

There are 2 N.P.T. to B.S.P.T. adaptors included with each dryer, which must be installed to the gas inlets. The adaptors are shipped in the upper tumbler.

 \bigwedge

Important

Pipe joint compounds that resist the action of natural, propane, and butane gases must be used.

Warning (CE Dryers Only)

This appliance must only be operated with the gas type indicated on the dryer's data plate. If the appliance is converted (gas type changed), a data plate amendment must be obtained from American Dryer Corporation for CE approved units.

Gas Connections

Inlet connection1/2" N.P.T.

3/8" B.S.P.T. (CE and Australian dryers)
Inlet supply size1/2" Diameter Pipe (minimum)

Gas Specifications for Non-CE and Non-AGA Approved Dryers***									
			SL	2020					
Gas Type and Nominal Heating Value		Supply Pressure	**Gross Heat Input		Orifice Size		**Orifice (Injector)	Burner Pressure	
	Btu/ft³	in WC	Btu/hr	kW	DMS	mm	Quantity	in WC	
Natural	1,000	7.0-13.0	40,000	11.72	30	3.264	1	3.0	
*Liquid Propane	2,500	11.0	40,000	11.72	49	1.854	1	10.0	
	SL2929								
Gas Type and Nominal Heating Value		Supply Pressure	**Gross Heat Input		Orifice Size		**Orifice (Injector)	Burner Pressure	
	Btu/ft³	in WC	Btu/hr	kW	DMS	mm	Quantity	in WC	
Natural	1,000	7.0-13.0	52,500	15.37	21	4.038	1	3.0	
*Liquid Propane	2,500	11.0	52,500	15.37	45	2.082	1	10.0	
			SL	3131					
Gas Type and Supply Nominal Heating Value Pressure			**Gross Heat Input		Orifice Size		**Orifice (Injector)	Burner Pressure	
	Btu/ft³	in WC	Btu/hr	kW	DMS	mm	Quantity	in WC	
Natural	1,000	7.0-13.0	55,000	16.12	20	4.089	1	3.0	
*Liquid Propane	2,500	11.0	55,000	16.12	44	2.184	1	10.0	

- Gas valve's internal regulator disabled.
- ** Information is per pocket/tumbler.
- *** Consult factory for elevations over 2,000 feet (610 meters) for correct orifice size.

Heat Input/Gas Consumption/Orifice (Injector) Data (For CE [European] Models Only)

	(Gas Spec	ification	ns for (CE Approve	ed Dry	ers***		
				SL2	020				
Gas Type and Nominal Heating Value		Supply **Gross Pressure Heat Input		**Fuel	Orifice Size		**Orifice (Injector)	Burner Pressure	
	Btu/ft³	mb	Btu/hr	kW	Consumption	DMS	mm	Quantity	mb
Natural (I _{2H} /I _{2E})	1,000	15-30	40,000	11.72	1.133 M³/H	30	3.264	1	6.7
Natural (I _{2L})	830	20-35	40,000	11.72	1.365 M³/H	30	3.264	1	9.2
Natural (I _{2ELL})	830	15-30	40,000	11.72	1.365 M³/H	30	3.264	1	9.2
*N = (= 1 /l)	1,000	20	40,000	11.72	1.133 M³/H	38	2.578	1	_
*Natural (I _{2E+})	830	25	40,000	11.72	1.365 M³/H	38	2.578	1	_
*Butane (I ₃₊)	3,175	28-30	40,000	11.72	0.845 kg/H	52	1.613	1	
*Propane (I ₃₊)	2,500	37	40,000	11.72	0.845 kg/H	52	1.613	1	
Butane (I _{3B/P})	3,175	28-30/50	40,000	11.72	0.845 kg/H	49	1.854	1	18.0
Propane (I _{3P})	2,500	28-30/50	40,000	11.72	0.845 kg/H	49	1.854	1	23.0
				SL3	131				
Gas Type Nominal Heati		Supply Pressure	**Gross Heat Input		**Fuel			**Orifice (Injector)	Burner Pressure
	Btu/ft³	mb	Btu/hr	kW	Consumption	DMS	mm	Quantity	mb
Natural (I _{2H} /I _{2E})	1,000	15-30	55,000	16.12	1.557 M³/H	22	3.988	1	6.9
Natural (I _{2L})	830	20-35	55,000	16.12	1.876 M³/H	22	3.988	1	9.5
Natural (I _{2ELL})	830	15-30	55,000	16.12	1.876 M³/H	22	3.988	1	9.5
***	1,000	20	55,000	16.12	1.557 M³/H	31	3.048	1	-
*Natural (I _{2E+})	830	25	55,000	16.12	1.876 M³/H	31	3.048	1	_
*Butane (I ₃₊)	3,175	28-30	55,000	16.12	1.162 kg/H	48	1.930	1	_
*Propane (I ₃₊)	2,500	37	55,000	16.12	1.162 kg/H	48	1.930	1	_
Butane (I _{3B/P})	3,175	28-30/50	55,000	16.12	1.162 kg/H	44	2.184	1	18.1
Propane (I _{3P})	2,500	28-30/50	55,000	16.12	1.162 kg/H	44	2.184	1	24.9

Shaded areas are stated in metric equivalents

- Gas valve's internal regulator disabled.
- ** Information is per pocket/tumbler.

 *** Consult factory for elevations over 2,000 feet (610 meters) for correct orifice size.

Heat Input/Gas Consumption/Orifice (Injector) Data (For AGA [Australian] Models Only)**

Gas Specifications for AGA Approved Dryers									
Model	Gas Type	Supply Pressure	*Gross Heat Input	Orific	e Size	*Orifice (Injector)	Burner Pressure		
		kPa	MJ/h	DMS	mm	Quantity	kPa		
SL2020	Natural	1.7-3.2	42.20	30	3.264	1	0.67		
3L2020	Propane	2.75	42.20	49	1.854	1	2.30		
SL3131	Natural	1.7-3.2	58.03	22	3.988	1	0.69		
	Propane	2.75	58.03	44	2.184	1	2.49		

Shaded areas are stated in metric equivalents

- * Information is per pocket/tumbler.
- ** Consult factory for elevations over 2,000 feet (610 meters) for correct orifice size.


Piping/Connections

The dryer is provided with two 1/2" N.P.T. (3/8" B.S.P.T. for CE and Australian dryers) inlet pipe connections (1 for each tumbler) at the rear of the dryer. If a separate feed is provided for each tumbler from the main supply line (header), then a 1/2" (12.7 mm) line connection is sufficient. However, if the top and bottom tumbler connections are connected together, the supply from the header must be increased to 3/4-inch (19.05 mm). There should be a minimum 6-inch (15.24 cm) clearance between the back guard and the first bend in the gas piping for ease of servicing. It is recommended that a gas shutoff valve be provided to the gas supply line of each dryer for ease in servicing.


The size of the main gas supply line (header) will vary depending on the distance this line travels from the gas meter or, in the case of L.P. gas, the supply tank, other gas-operated appliances on the same line, etc. Specific information regarding supply line size should be determined by the gas supplier.

Undersized gas supply piping can create a low or inconsistent pressure, which will result in erratic operation of the burner ignition system.

TYPICAL NATURAL GAS INSTALLATION

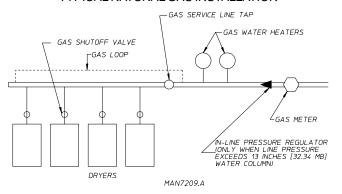

TYPICAL L.P. GAS INSTALLATION

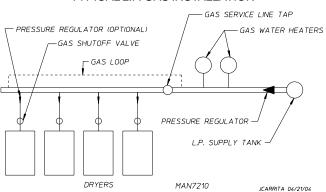

Consistent gas pressure is essential at all gas connections. It is recommended that a 3/4-inch (19.05 mm) pipe gas loop be installed in the supply line servicing a bank of dryers. An in-line pressure regulator must be installed in the gas supply line (header) if the (natural) gas pressure exceeds 13.0 in WC (32.34 mb) pressure.

A plugged tap, accessible for a pressure gauge connection, must be installed in the main gas supply line immediately upstream of the dryers.



Important

Pipe joint compounds that resist the action of natural, L.P., and butane gases must be used.

Test all connections for leaks by brushing on a soapy water solution (liquid detergent works well).



Warnina

Never test for leaks with a flame!!!

Converting from One Family of Gas to Another ____

Warning (CE Dryers)

This appliance must only be operated with the gas type indicated on the dryer's data plate. If the appliance is converted (gas type changed), a data plate amendment must be obtained from American Dryer Corporation (dryer's serial number is required to purchase a conversion kit).



Important

Any burner changes or conversions must be made by a qualified professional.

The dryers manufactured for Belgium, Luxemburg, Greece, Estonia, Slovak Republic, Iceland, Malta, Poland and Cyprus cannot be converted from one family of gas to another.

Conversion from Natural Gas to Propane or Butane Gas

The following conversion allows the dryer to be operated with either propane, butane, or LPG. The use of gas valve kit (ADC P/N 140414) disables the internal regulator of the gas valve. Therefore, the gas supply is ungoverned and an external regulator must be provided at the source of the supply (example L.P. tank) or the gas supply line to the dryer. The L.P. kit supplied will depend on the country the dryer is installed in.

Parts Required for Conversion:

Description	ADC P/N	Qty
Unregulated Gas Conversion Kit***	140414	2*
OR		
Regulated L.P. Gas Conversion Kit****	140416	2*
Burner Orifice (Injector)	**	2*
L.P. Conversion Label	114515	2*

- * This includes 1 for each pocket/tumbler.
- ** Refer to page 19 for orifice (injector) size.
- *** Required for unregulated propane or butane only.
- **** Required for regulated LPG or propane only.

Instructions

Disconnect electrical power to the dryer.

Close all shutoff valves (for both top and bottom tumbler) in dryer's gas supply line.



Important

The following procedures must be performed on both top and bottom tumblers.

Open the panels located just below each loading door.

Locate the gas train and disconnect the union, 3 electrical plugs, and the gas train mounting screws from the burner. Carefully slide the gas train out of the gas train enclosure. (The carbon ignitor located at the far end of the gas train is very fragile.)

Remove 2 burner tube mounting screws and remove burner tube in order to gain access to the orifice.

Using a 3/8" wrench or socket, remove the existing orifice and replace it with an orifice from the kit.

Important

Use extreme care when removing and replacing orifice (injector). This orifice (injector) is made of brass, which is easily damaged.

Reinstall the burner tube onto the burner base.

Use a flat screwdriver to remove the regulator vent cap.

- For unregulated L.P. gas (most countries): install blocking pin (ADC P/N 140414).
- For regulated L.P. gas (some countries): remove the white plastic regulator adjustment screw (under vent cap). Remove spring under screw and replace with spring from kit (ADC P/N 140416). Replace regulator adjustment screw.

Install the gas train back into the dryer gas train enclosure. Be sure the tab at the rear of the gas train engages into the mounting slot.

Connect the union and the 3 electrical plugs.

Repeat these steps for the other burner.

Affix L.P. Conversion Label (ADC P/N 114515) to the dryer's data label.

Complete L.P. Kit Conversion Confirmation Label (ADC P/N 114083) and affix this label as close as possible to the dryer's existing dryer rating (data) label/plate.

 
Non-CE Dryers

Affix L.P. Conversion Rating Label Addendum (ADC P/N 114090) as close as possible to the dryer's existing dryer rating (data) label/plate.

CE Dryers


Affix new data plate label that came with the conversion kit.

Open all shutoff valves, reconnect electrical power to the dryer, and test for leaks.



Never test for leaks with an open flame!!! Use a soapy water solution or product intended for that

purpose.

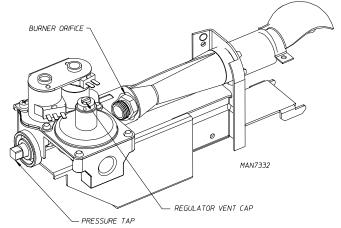

Unregulated Gas Valve

Regulate (govern) gas externally (refer to "Supply Pressure" in chart on page 19) to the correct gas pressure for the gas being used. Operate dryer through 1 complete cycle to ensure proper operation.

Regulated Gas Valve

Refer to "Gas Pressure Adjustment" on this page to adjust the gas valve to the appropriate burner pressure listed on page 19. The supply pressure must also match what is listed on page 19 for the type of gas to be used.



Important

Conversions done improperly can result in a fire or explosion!

Conversion from Propane or Butane Gas to Natural Gas

The following conversion allows the dryer to be operated with natural gas.

Parts Required for Conversion:

Description	ADC P/N	Qty
Vent Cap and Spring	140415	2*
Burner Orifice (Injector)	**	2*

- * This includes 1 for each pocket (tumbler).
- ** Refer to page 19 for orifice (injector) size.

Instructions

Disconnect electrical power to the dryer.

Close all shutoff valves (for both top and bottom tumbler) in dryer's gas supply line.



Important

The following procedures must be performed on both top and bottom tumblers.

Open the panels located just below each loading door.

Locate the gas train and disconnect the union, 3 electrical plugs, and the gas train mounting screws from the burner. Carefully slide the gas train out of the gas train enclosure. (The carbon ignitor located at the far end of the gas train is very fragile.)

Remove 2 burner tube mounting screws and remove burner tube in order to gain access to the orifice.

Using a 3/8" wrench or socket, remove the existing orifice and replace it with an orifice from the kit.

Important

Use extreme care when removing and replacing orifice (injector). This orifice (injector) is made of brass, which is easily damaged.

Reinstall the burner tube onto the burner base.

Select from the following 3 options, the conversion to be performed:

- Converting from unregulated L.P. to regulated natural gas: use a flat screwdriver to remove the cap with blocking pin and install the regulator vent cap from the kit (ADC P/N 140415).
- Converting from unregulated L.P. to unregulated natural gas: no change to the regulator is required.
- Converting from regulated L.P. to regulated natural gas: remove the white plastic regulator adjustment screw (under vent cap). Remove spring under screw and replace with spring from kit (ADC P/N 140415). Replace regulator adjustment screw.

Install the gas train back into the dryer gas train enclosure. Be sure the tab at the rear of the gas train engages into the mounting slot.

Connect the union and the 3 electrical plugs.

Repeat these steps for the other burner.

Open all shutoff valves, reconnect electrical power to the dryer, and test for leaks.

Operate the dryer through 1 complete cycle to ensure proper operation.

With dryer operating, check the manifold (burner) pressure at the tap on the gas valve to ensure proper operating pressure (refer to chart on page 19).

Gas Pressure Adjustment

Disconnect electrical power to the dryer.




Important

The following procedures must be performed on both top and bottom tumblers.

To adjust gas valve's internal regulator, remove the regulator vent cap with the regulator adjustment tool, which is located on the back guard between the gas inlet and exhaust outlet (refer to the illustration below for proper use of adjustment tool). Be sure to use one of the wide ends of the adjustment tool for removal of the vent cap. Once vent cap is removed, the narrow end of the adjustment tool can be used to turn the plastic adjustment screw in the valve. Turn the screw clockwise to raise pressure and counterclockwise to lower pressure.

Gas (burner) pressures are measured with the burner in operation for all burner adjustment conditions. Therefore once the necessary adjustments have been made, the dryer must be operated in a heating cycle to verify that the pressure is correct. If it is not correct, you must discontinue the power to the unit and make further adjustments. Repeat these steps as many times as necessary to achieve the correct burner pressure. Once the adjustment of the valve is complete, the vent cap must be replaced and sealed with, for example, paint to prevent maladjustment by the user.

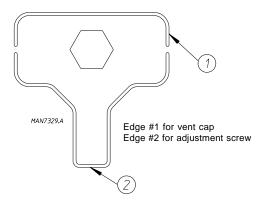

Warning (CE Dryers)

This appliance must only be operated with the gas type indicated on the dryer's data plate. If the appliance is converted (gas type changed), a data plate amendment must be obtained from American Dryer Corporation.

Conversions done improperly can result in a fire or explosion!

Gas Pressure Testing _

For proper operation, the gas pressure must be correct, consistent and maintained at the gas pressure rates shown on page 19. Provisions are made at the gas valve for taking gas pressure readings.

There are two types of devices used to measure gas pressure. They are the spring/mechanical type gauge and the manometer. The use of the spring/mechanical type gauge is not recommended because they are very easily damaged and are not always accurate. The preferred type of gauge is the manometer because it is a simple device to use and is highly accurate. A manometer is simply a glass or transparent plastic tube with a scale graduated in inches or millibars. When it is filled with water and pressure is applied, the water in the tube rises, showing the exact gas pressure.

Gas Pressure Test Procedure

Turn gas cock in gas supply line to "OFF" position.

50 Hz dryers: Back out miniature screw inside pressure tap and attach manometer (refer to the illustration on page 21).

60 Hz dryers: Install pressure tap and attach manometer (refer to the illustration on page 21).

Turn gas cock to "ON" position.

Start the dryer in Heat Mode and wait for ignition. Gas manifold pressure should be as shown on page 19.

If the gas pressure needs to be adjusted, refer to "Gas Pressure Adjustment" on page 22.

Once test is complete, turn gas cock to "OFF" position. Remove manometer. Tighten screw inside the pressure tap or install plug.

Turn gas cock to "ON" position and check for leaks with soap solution with main burner "ON."

Steam Information

It is your responsibility to have all plumbing connections made by a qualified professional to ensure that the steam plumbing installation is adequate and conforms with local, state, and country regulations or codes.

Care must be exercised when leveling steam dryers into final position. After leveling the dryer, check the downward pitch of the heat exchanger from front to rear with a level. Likewise, check the downward pitch of the return condensate manifold toward its outlet part. Absence of these downward pitches will result in probable water hammer and premature heat exchanger fracture and leakage.

The presence of condensate in the steam will cause water hammer and subsequent heat exchanger failure. The steam supply connection must be taken from the top of a well-dripped steam main. If the supply run-out to the dryer exceeds 25 feet (7.6 meters), it should be dripped just before the control valve with a proper trap and dirt pocket.



Important

Failure to comply with the requirements stipulated in this manual can result in component failure, which will void the warranty.


Steam Coil pH Level

The normal pH level for copper type steam coils must be maintained between a value of 8.5 to 9.5. For steel type steam coils the pH level must be maintained between a value of 9.5 to 10.5. These limits are set to limit the acid attack of the steam coils.



Important

Coil failure due to improper pH level will void the warranty.

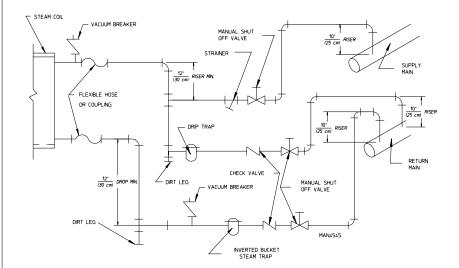

Steam Requirements - High Pressure

Inlet ----- 1/2" N.P.T. supply line connection

1 at top manifold

Return ----- 1/2" N.P.T. return line connection

1 at bottom manifold

SL2020 Operating Steam Pressure							
Maximum	150 psig* 1.0 MPa						
Heat Input (Normal Load)	Heat Input (Normal Load) 1.2 Bhp						
Consumption (Approximate) @ 125 psi (8.6 bar)	' ''' / 1 45 ID/DT /11 41 KD/D						
SL3131 Operating Steam Pressure							
Maximum	150 psig*	1.0 MPa					
Heat Input (Normal Load)	1.75 Bhp						
Consumption (Approximate) @ 125 psi (8.6 bar)	63 lb/hr	28.58 kg/hr					

Shaded areas are stated in metric equivalents

Installation Instructions

To ensure an adequate supply of steam is provided, be sure that the steam supply lines and steam return lines are sized and laid out as stipulated in this manual. Inadequate steam supply lines and steam return lines or improper steam plumbing will result in poor performance and can cause component failure. Clean, dry steam must be provided to the dryer.



Important

Steam coil failure due to water hammer by wet steam will void the warranty.

The presence of condensate in the steam supply line will cause water hammer and subsequent heat exchanger (steam coil) failure. The steam supply connection into the main supply line must be made with a minimum 10-inch (25.4 cm) riser. This will prevent any condensate from draining towards the dryer.

The steam supply line to the dryer must include a 12-inch (30.48 cm) riser along with a drip trap and check valve. This will prevent any condensate from entering the steam coil.

Flexible hoses or couplings must be used. The dryer vibrates slightly when it runs and this will cause the steam coil connections to crack if they are hard piped to the supply and return mains.

Shutoff valves for each dryer should be installed in the supply line, return line, and drip trap return line. This will allow the dryer to be isolated from the supply main and the return main if the dryer needs maintenance work.

Install an inverted bucket steam trap and check valve at least 12-inches (30.48 cm) below the steam coil as close to the coil as possible. A trap with a minimum capacity of 100 lb (45.35 kg) of condensate per hour at 125 psi (8.62 bar) is needed for each unit. (Based on 2 times the steam consumption per hour.)

The supply line and the return line should be insulated. This will save energy and provide for the safety of the operator and maintenance personnel.

Water pockets in the supply line, caused by low points, will provide wet steam to the coil possibly causing steam coil damage. All horizontal runs of steam supply piping should be pitched 1/4-inch (6.35 mm) for every 1 foot (0.31 meters) back towards the steam supply header causing the condensate in the line to drain to the header. Install a bypass trap in any low point to eliminate wet steam.

Important

Flexible hoses/couplings must be used. Coil failure due to hard plumbing connections will void the warrantv.

Water Information

Before You Start Check Local Codes and Permits

Call your local water company or the proper municipal authority for information regarding local codes.

Important

It is your responsibility to have all plumbing connections made by a qualified professional to ensure that the plumbing installation is adequate and conforms to local, state, and federal regulations or codes.

It is the installer's or owner's responsibility to see that the required water pressure, pipe size, or connections are provided. The manufacturer assumes no responsibility if the fire suppression system is not connected, installed, or maintained properly.

Installation Water Supply

The fire suppression system must be supplied with a minimum water pipe size of 1/2-inch (12.7 mm) and be provided with 40 psi +/- 20 psi (2.75 bar +/- 1.37 bar) of pressure.

If the rear area of the dryer or the water supply is located in an area where it will be exposed to cold/freezing temperatures, provisions must be made to protect these water lines from freezing.

Warning

If the water in the supply line or water solenoid valve freezes, the fire suppression system will be inoperative!!

Water Connections

The water connection is made to the 3/4"-11.5 NH hose adaptor, which is shipped in the tumbler and must be installed to the 1/2" N.P.T. water connection, located at the upper rear of the dryer. A flexible supply line/coupling must be used in an effort to avoid damaging the electric water solenoid valve.

Note

The 3/4"-11.5 NH is a standard hose coupling screw thread. It is not to be confused with 3/4" N.P.T. The sealing of an NH connection is made with a washer opposed to the mating threads of an N.P.T. assembly. The 2 thread designs are not compatible.

It is recommended that a filter or strainer be installed in the water supply line.

The minimum operating pressure for optimum results is 100 psig (689.47 kPa).

Important

Flexible supply line/coupling must be used. Solenoid valve failure due to hard plumbing connections will void warranty.

The dryer is to be connected to the water mains using a new hose set and the old hose set should not be reused.

Optional Manual Bypass

Provisions are made in the dryer's fire suppression system for the installation of an optional manual bypass. The connections for the manual bypass are made at the "cross" or "four way" fitting located in the outlet supply side of the water solenoid valve. The manual ball cock shutoff valve must be located outside of the dryer at a distance from the dryer where it is easily accessible. The use and connection of this manual bypass is at the option or discretion of the owner.

The water connection for the manual bypass is made to the "cross" or "four way" fitting, which has a 3/8" F.N.P.T. and a coupling must be used to provide the minimum 1/2-inch (12.7 mm) supply (feed) line.

Electrical Requirements

No independent external power source or supply connection is necessary. The 24-volt power to operate the fire suppression system is accomplished internally in the dryer (from the dryer controls).

Warning Electrical power must be provided to the dryer at all times. If the main electrical power supply to the dryer is disconnected, the fire suppression system is inoperative!!

Preparation for Operation/Start-Up ___

The following items should be checked before attempting to operate the dryer:

- Read all "CAUTION," "WARNING," and "DIRECTION" labels attached to the dryer.
- · Check incoming supply voltage to be sure that it is the same as indicated on the data label. In the case of 208 VAC or 230/240 VAC, the supply voltage must match the electric service exactly.
- GAS MODELS Check to ensure that the dryer is connected to the type of heat/gas indicated on the dryer
- GAS MODELS Be sure that all gas shutoff valves are in the open position.
- Be sure all back panels (guards) and electric box covers are in place.
- · Be sure the service doors are closed and securely in place.
- Be sure the lint door/drawer is securely in place.
- Rotate the tumbler (drum) by hand to be sure it moves freely.
- Check bolts, nuts, screws, terminals, and fittings for tightness and security.
- Check that the vent is connected to the dryer and is exhausted to the outdoors.
- STEAM MODELS Check to ensure all steam shutoff valves are open.

Preoperational Test ____

All dryers are thoroughly tested and inspected before leaving the factory. However, a preoperational test should be performed before the dryer is publicly used. It is possible that adjustments have changed in transit or due to marginal location (installation) conditions.

Turn on electric power to the dryer.

Refer to the Operating Instructions for starting your particular model dryer.

Gas Dryers

Open all shutoff valves.

When a gas dryer is first started (during initial start-up), it has a tendency not to ignite on the first ignition attempt. This is because the gas supply piping is filled with air, so it may take a few minutes for the air to be purged from the lines.



Note

During the purging period, check to be sure that all gas shutoff valves are open.

A gas pressure test should be taken at the gas valve pressure tap of each dryer to ensure that the water column pressure is correct and consistent.



Note

Water column pressure requirements (measured at the pressure tap of the gas valve body) must be verified.

Important

In most cases there is no regulator provided in an L.P. dryer. The water column pressure must be regulated at the source (L.P. tank), or an external regulator must be added to each dryer.

Electrical Dryers

Check to ensure that electric oven/contactor assembly is activating.

Safety Related Circuits

Make a complete operational check of all safety related circuits:

- · Door Switch(es)
- · Hi-Limit Thermostats
- · Sail Switch

Make a complete operational check of all operating controls.

Tumbler Coating

The tumbler is treated with a protective coating. We suggest dampening old garments or cloth material with a solution of water and nonflammable mild detergent and tumbling them in the tumbler to remove this coating.

Microprocessor Programs/Selections

Each microprocessor controller (computer) has been preprogrammed by the factory with the most commonly used parameter (program) selections. If computer program changes are required, refer to the computer programming manual, which was shipped with the dryer.

Preoperational Instructions Shutdown Instructions If the dryer is to be shutdown (taken out of service) for a Important period of time, the following must be performed: For more detailed information regarding the Discontinue power to the dryer either at the external disconnect microprocessor controller (computer), refer to the switch or the circuit breaker. microprocessor user's manual included with the dryer. Discontinue the heat supply: Coin Models Gas Models - Discontinue the gas supply. Microprocessor Controller (Computer) Shut off external gas supply shutoff valve. When the microprocessor controller (computer) is in the ready Shut off internal gas supply shutoff valve located in the gas state, the L.C.D. screen will display "Ready, Insert \$XX.XX valve burner area. (amount) to Start". Steam Models - Discontinue the steam supply. Insert coin(s). Once the correct "Amount to Start" has been Shut off external (location furnished) shutoff valves. inserted, the L.C.D. will display "Select Temperature". Select temperature by pressing "HI," "MED," or "LO." The cycle will start and the L.C.D. will display the Dry Cycle selected and the remaining time. The dryer will continue through the drying and cooling cycles. until the vended time has expired. Note To stop the dryer, open main door. Continuation of the cycle will resume only after the door has been closed and any one of the 3 temperature selections is pressed.

Non-Coin Models

Microprocessor Controller (Computer)

The L.E.D. display reads "READY" (no cycle in progress).

Press the letter on the keypad corresponding to the cycle desired (e.g. key "D").

The dryer will then start (i.e. blower, tumbler, and heat).

The L.E.D. display will read MANUAL DRYING CYCLE D, MIN REMAIN.

∧ Note

The dryer can be stopped at any time by pressing the "STOP/CLEAR" key, at this time the dryer will go into a cycle pause. If the "STOP/CLEAR" key is pressed again at this point, the cycle that was in progress will be cancelled and returned to the "READY" state.

When the programmed drying time has expired, the non-coin microprocessor controller (computer) will proceed into the Cool Down Cycle.

Once the Cool Down Cycle begins at the end of the heat cycle, the L.E.D. display will read COOL DOWN TEMP __/_ MINUTES remaining. At the end of the heat cycle, the dryer will shut off the heat and continue the fan and tumbler until the Cool Down Time or temperature is reached.

NOTES			

Service/Parts Information

Service

Service must be performed by a qualified trained technician. If service is required, contact the reseller from whom the equipment was purchased. If the reseller cannot be contacted or is unknown, contact the Service Department for a reseller in your area.

Note

When contacting the Service Department, be sure to give them the correct model number and serial number so that your inquiry is handled in an expeditious manner.

Parts

Replacement parts should be purchased from the reseller from whom the equipment was purchased. If the reseller cannot be contacted or is unknown, contact the Parts Department for a reseller in your area. Parts may also be purchased directly from the factory by calling the Parts Department at +1 (508) 678-9000 or you may FAX in your order at +1 (508) 678-9447.

Note

When ordering replacement parts from the reseller or the manufacturer, be sure to give them the correct model number and serial number so that your parts order can be processed in an expeditious manner.

Warranty Information _____

Returning Warranty Cards

Before any dryer leaves the factory test area, a warranty card is placed on the inside of the main door glass. These warranty cards are intended to serve the customer where we record the individual installation date and warranty information to better serve you should you file a warranty claim.

If a warranty card did not come with your dryer, contact the Warranty Department or the Service Department at +1 (508) 678-9000.



Important

A separate warranty card must be completed and returned for each individual dryer.



Note

Be sure to include the installation date when returning the warranty card(s).

Warranty

For a copy of the commercial warranty covering your particular dryer(s), contact the reseller from whom you purchased the equipment and request a dryer warranty form. If the reseller cannot be contacted or is unknown, warranty information can be obtained from the factory by contacting the Warranty Department at +1 (508) 678-9000.

Note

Whenever contacting the factory for warranty information, be sure to have the dryer's model number and serial number available so that your inquiry can be handled in an expeditious manner.

Returning Warranty Parts

All dryer or parts warranty claims or inquiries should be addressed to the Warranty Parts Department. To expedite processing, the following procedures must be followed:

No parts are to be returned without prior written authorization R.M.A. from the factory.



Note

An R.M.A. is valid for only 30 days from date of issue

The R.M.A. issued by the factory, as well as any other correspondence pertaining to the returned part(s), must be included inside the package with the failed merchandise.

Each part must be tagged with the following information:

Model number and serial number of the dryer from which part was removed.

Nature of failure (be specific).

Date of dryer installation.

Date of part failure.

Specify whether the part(s) being returned is for a credit, replacement, or a refund.

Note

If a part is marked for a credit or a refund, the invoice number covering the purchase of the replacement part must be provided.

Warranty tags (Part No. 450064) are available at "no charge" from ADC upon request.

The company returning the part(s) must clearly note the complete company name and address on the outside of the package.

All returns must be properly packaged to ensure that they are not damaged in transit. Damage claims are the responsibility of the shipper.



Important

No replacements, credits, or refunds will be issued for merchandise damaged in transit.

All returns should be shipped to the factory in such a manner that they are insured and a proof of delivery can be obtained by the sender.

Shipping charges are not the responsibility of ADC. All returns should be "prepaid" to the factory. Any "C.O.D." or "COLLECT" returns will not be accepted.

Important

No replacements, credits, or refunds will be issued if the claim cannot be processed due to insufficient information. The party filing the claim will be notified in writing, either by "FAX" or "CERTIFIED MAIL – Return Receipt Requested," as to the information necessary to process claim. If a reply is not received by the Warranty Department within 30 days from the FAX/letter date, then no replacements, credits, or refunds will be issued, and the merchandise will be discarded.

Routine Maintenance

Cleaning

A program and/or schedule should be established for periodic inspection, cleaning, and removal of lint from various areas of the dryer, as well as throughout the ductwork system. The frequency of cleaning can best be determined from experience at each location. Maximum operating efficiency is dependent upon proper airflow. The accumulation of lint can restrict this airflow. If the guidelines in this section are met, the dryer will provide many years of efficient, trouble free, and most importantly, safe operation.

Warning

Lint from most fabrics is highly combustible. The accumulation of lint can create a potential fire hazard. Keep dryer area clear and free from combustible materials, gasoline, and other flammable vapors and

Note

liquids.

Suggested time intervals shown are for average usage, which is considered 6 to 8 operational (running) hours per day.

Important

Dryer produces combustible lint and must be exhausted to the outdoors. Every 6 months, inspect the exhaust ducting and remove any lint buildup.

Suggested Cleaning Schedule

Every Third or Fourth Load

Clean the lint screen every third or fourth load. A clogged lint screen will cause poor dryer performance. The lint door/ drawer is located just below the loading door of the dryer. Open the lint door/drawer, brush the lint off the lint screen. and remove the lint. Inspect lint screen and replace if torn.

To remove the lint drawer from the dryer, pull drawer out approximately halfway. Press the lint door/drawer stop downward and pull the drawer out.



Important

The frequency of cleaning the lint screen can best be determined from experience at each location.

Weekly

Clean lint accumulation from lint chamber, thermostat, and microprocessor temperature sensor area.



Warning

To avoid the hazard of electrical shock, discontinue electrical supply to the dryer.

Steam Dryers

Clean the steam coil fins. It is suggested that compressed air and a vacuum cleaner with brush attachment be used.

Warning

When cleaning steam coil fins, be careful not to bend the fins. If fins are bent, straighten by using a fin comb, which is available from local air-conditioning supply houses.

90 Days

Remove lint from gas valve burner area with a dusting brush or vacuum cleaner attachment.

Clean any lint accumulation in and around the motor(s) casing opening.



Note

To prevent damage, avoid cleaning and/or touching ignitor/flame-probe assembly.

Every 6 Months

Inspect and remove lint accumulation in customer furnished exhaust ductwork system and from dryer's internal exhaust ducting.



Note

The accumulation of lint in the exhaust ductwork can create a potential fire hazard.

Do not obstruct the flow of combustion and ventilation air. Check back draft dampers in the exhaust ductwork. Inspect and remove any lint accumulation, which can cause the damper to bind or stick.

A back draft damper that is sticking partially closed can result in slow drying and shutdown of heat circuit safety switches or thermostats.

When cleaning the dryer cabinet(s), avoid using harsh abrasives. A product intended for the cleaning of appliances is recommended.


Adjustments

7 Days After Installation and Every 12 Months Thereafter


Inspect bolts, nuts, screws, setscrews, grounding connections and nonpermanent gas connections (unions, shutoff valves, and orifices). Belts should be examined. Cracked or seriously frayed belts should be replaced. Complete an operational check of controls and valves. Complete an operational check of all safety devices (lint door/ drawer switch, door switches, sail switch, and hi-limit thermostats).

Data Label Information


Standard Label

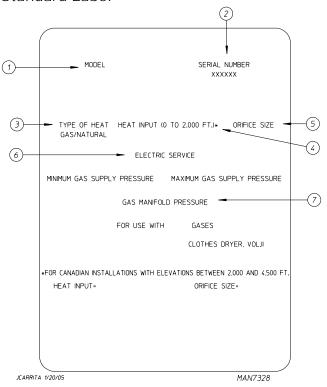

AGA Label

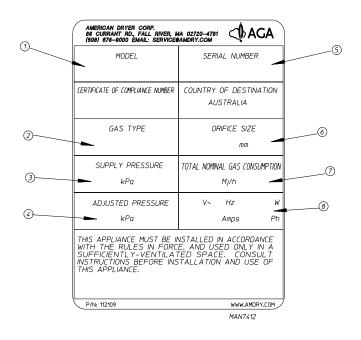

CE Label

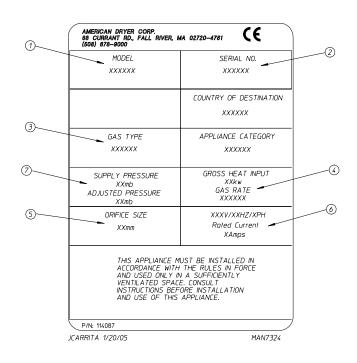

When contacting ADC, the information on the data label is required to ensure proper service/parts assistance. The data label is located at the upper left rear of the dryer behind the back guard.

- 1. Model Number This describes the style of dryer and type of heat (gas, electric, or steam).
- 2. Serial Number Allows the manufacturer to gather information on your particular dryer.
- Type of Heat This describes the type of heat for your particular dryer, gas (either natural gas or L.P. gas), electric, or steam.
- Heat Input (For Gas Dryers) This describes the heat input in British thermal units per hour (Btu/hr) or kilowatts (kW).
- Orifice Size (For Gas Dryers) Gives the number drill size used.
- 6. Electric Service This describes the voltage and current rating for a particular model.
- Gas Manifold Pressure (For Gas Dryers) This describes the manifold pressure taken at the gas valve tap.

