



The use of the MSC-HR10 or MSC-HR20 watch is for sport purposes only and it is not meant to replace any medical advice.

This manual contains important safety and care information, and provides step-by-step instructions for using this product. Read the manual thoroughly and keep it in a safe place for future reference.

PACKAGE CONENTS

- Watch
- Heart Rate Sensor
- Fastening belt
- 2 x CR2032 lithium batteries (installed)

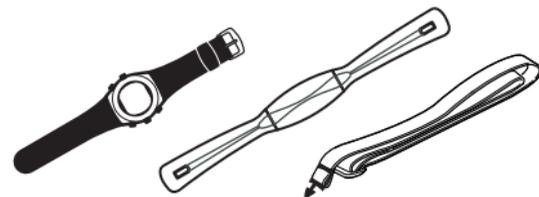


TABLE OF CONTENTS

1.0	Wrist Watch	3.2	Exercise Profile	6.0	Batteries
2.0	Basic Operation	3.3	Using Exercise Profiles	7.0	Care Instructions
2.1	Changing Settings	3.4	Memory Functions	7.1	Aquatic & Outdoor Activities
2.2	Setting the Clock	3.5	Alarm	8.0	Specifications
2.3	Stopwatch Mode	3.6	Backlight	9.0	Screen Flow
2.4	Recording Laps (HR20)	4.0	Heart Rate Sensor	10.0	Limited Warranty
3.0	Profile Mode	5.0	Activity Score	11.0	Spare Parts
3.1	User Profile	5.1	Fitness Index		

PROPER USE OF THE CATEYE MSC-HR10/20



WARNING:


- Pace maker users should never use this device.
- Do not leave any battery within the reach of children, and dispose of it correctly. If a battery is swallowed, consult a doctor immediately.



IMPORTANT:

- The following objects and places generate strong electromagnetic wave and interference, which may cause incorrect measurement:
 1. TV, PC, radios, motors/ engines, or in cars and trains.
 2. Railroad crossings and near railway tracks, around television transmitting stations and radar bases.
- Do not place more than one transmitter within 1.5 m of the main unit. Do not use the main unit together with other cordless devices. Doing so may result in incorrect measurement.
- Do not drop or carelessly handle the main unit, the heart rate sensor, or other components; protect from strong shock.
- Stop using the fastening belt or the electrode pad if rashes appear on the skin.
- Do not forcefully twist or pull the heart rate sensor.
- The heart rate sensor may deteriorate after extended use, resulting in measurement errors. If measurement errors tend to occur often, replace the heart rate sensor with a new one.

1.0 WRIST WATCH

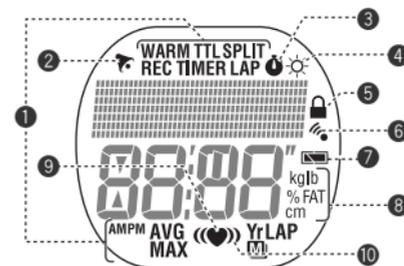

- 1 Measurement icons
- 2 Alarm icon
- 3 Stopwatch icon
 - Flashes in the Clock Mode if the Stopwatch is active
- 4 Auto-light icon
- 5 Key lock icon
- 6 Sound icon
- 7 Battery icon
- 8 Measurement units
- 9 Heart Rate Icon (♥)
 - Lights up when MSC-HR10/20 is ready to receive Heart Rate signal.
 - Flashes when it receives Heart Rate signal.
- 10 Zone Alert Icon (◀ ▶)
 - Flashes when Heart Rate is outside the target Heart Rate Zone

HR10: MEMORY (MEM/-)

HR20: MEMORY/LAP (MEM/LAP/-)

- Record a lap (HR20)
- Recall Stopwatch or Program Memory
- Decrease a setting value

MODE (MODE)

- Press to cycle through modes

START/STOP (ST/SP/+)


- Start and stop timer
- Increase a setting value

LIGHT (☼)

- Turn on back light
- Hold down to turn on/off key lock

SET (SET)

- Enter a setting mode
- Confirm a setting
- Switch sub-function mode

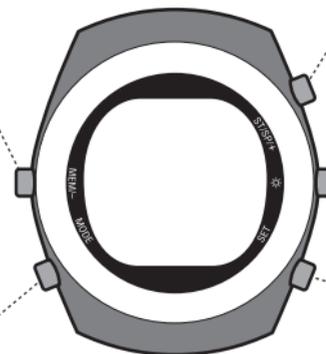

BASIC OPERATION

FIRST TIME OPERATION


Press any key for 2 seconds to activate the LCD display.

Navigation

Each button operates either by pressing once, or by holding for 2 seconds.

Basic Operation

You can navigate through each of the four main modes by pressing the MODE button.

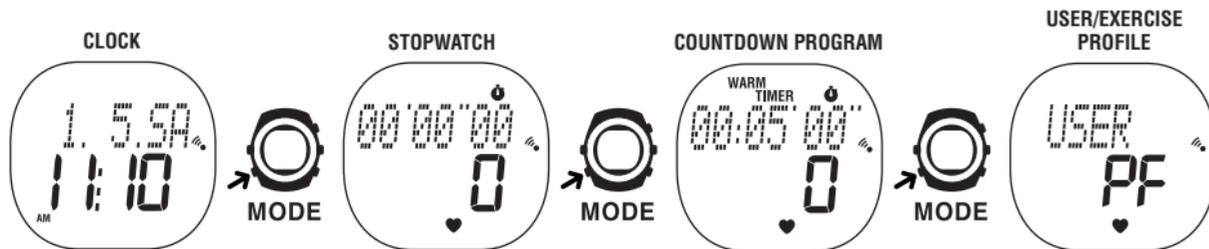

All Reset

Press 4 main buttons for 2 seconds to reset the MSC-HR10/20.

When malfunctions occur, do All Reset and repeat Profile edits.



Without any programming you can attach the Heart Rate Sensor, press the MODE button until you are in the Stopwatch Mode and begin using the MSC-HR10/20 with simple timer and heart rate functions.

CHANGING SETTINGS

- When a digit is flashing that unit can be changed.
- Press the ST/SP/+ button to increase the digit.
- Press the MEM/- button to decrease the digit.
- Press and hold the ST/SP/+ or MEM/- button to increase or decrease the digits rapidly.
- Press the SET button to confirm it and advance to the next setting.



NOTE:

The MSC-HR10/20 returns to Clock Mode if left idle for 30 seconds, or if the MODE button is pushed.

SETTING THE CLOCK


- From Clock mode press and hold the SET button for two seconds.
- The hours are now flashing. Use the ST/SP/+ or MEM/- buttons to adjust and press the SET button to continue.
- The minutes are now flashing. Adjust and press the SET button.
- The year data is now flashing. Adjust and press the SET button.
- The month is now flashing. Adjust and press the SET button.
- The day is now flashing. Adjust and press the SET button.
- The 12-hour/24-hour clock setting is now flashing. Adjust and press the SET button.
- The day/month display order is now flashing. Adjust and press the SET button.
- The clock is now set.



NOTE: The clock is programmed with a 50-year auto-calendar.

STOPWATCH MODE


- Use the ST/SP/+ button to start and stop the timer function in the Stopwatch mode.

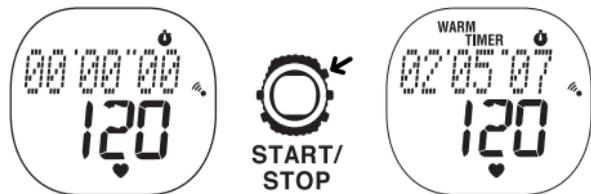

NOTE:

The stopwatch begins measurement in min:sec:1/100 sec. After 59 minutes pass, the display will change to hrs:min:sec.


- Use the SET button to navigate between the different screens available in the Stopwatch mode. The SET button navigates between the following screen with current heart rate in the lower portion of the screen.

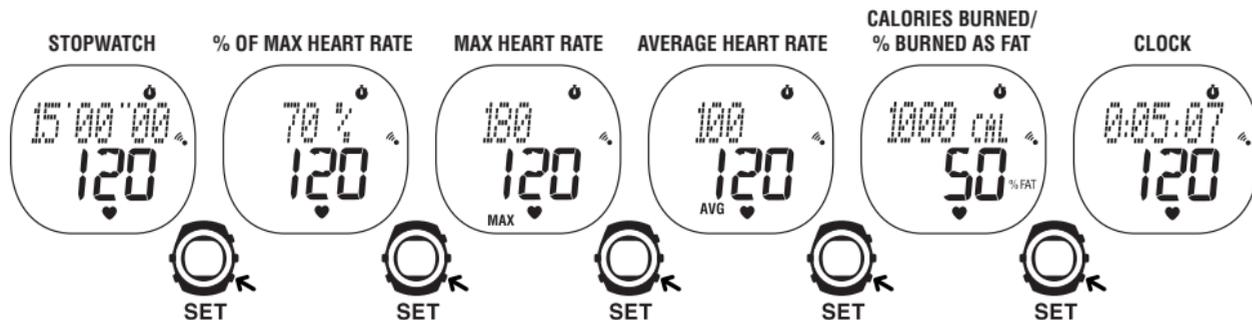

- If the Stopwatch is stopped and there is no heart rate signal for 30 seconds, the watch returns to the Clock mode.
- To reset the Stopwatch data, with the timer stopped, press and hold the SET button for two seconds.

RECORDING LAPS (HR20)

In Stopwatch mode you can press the MEM/LAP/- button to record a lap. The screen will freeze on the current lap time and lap number for two seconds. You can save up to 44 laps. After two seconds the screen returns to the Stopwatch mode.

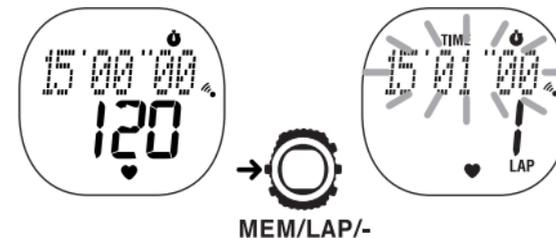


- All lap data will be cleared after the Stopwatch has been reset and restarted.

3.0 PROFILE MODE

The MSC-HR10/20 can be programmed with specific information including your age, body weight, etc, to make the data collected more accurate and useful. In the User Profile (USER PF), you must set up the user data correctly in order to achieve more accurate calculation of the Calorie Expenditure and the % Burned as Fat. Note that initial set up is slightly different from changing your user profile once it is set up.

3.1 SET UP YOUR USER PROFILE (USER PF)

- USER PROFILE - Press MODE button until User Profile (USER PF) or Exercise Profile (Ex PF) appears on the screen. If the Ex PF appears on the screen, press the SET button to have USER PF appear. Press and hold the SET button for two seconds to access the User Profile and change or set the data.

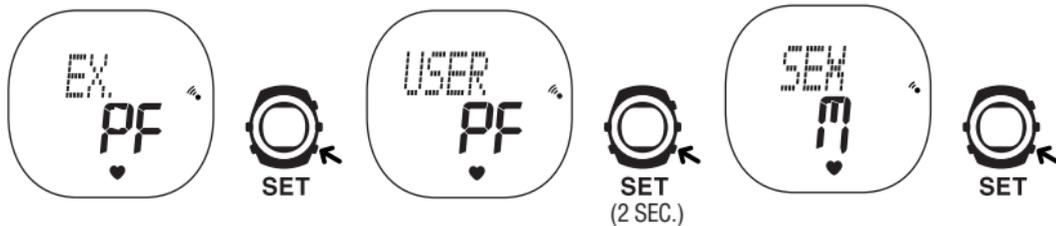

- Select M for male or F for female. Press the SET button.
- Birth year is now flashing. Adjust and press the SET button.
- The birth month is now flashing. Adjust and press the SET button.
- The birth date is now flashing. Adjust and press the SET button.



- Maximum Heart Rate (MHR) is now flashing. The default value is 220 minus your age. Adjust if necessary and press the SET button.
- “kg” for kilograms or “lb” for pounds is flashing. Select your preference and press the SET button.
- Enter your weight and press the SET button.
- “cm” or “feet/inches” is flashing for height scale. Select your preference and press the SET button.
- Enter your height and press the SET Button.
- “Activity Score (ACT)” is flashing. See section 5.0 for details. Adjust and press the SET button.
- Your “Fitness Index (FIT)” is now displayed. See section 5.1 for details. Your fitness index will change only as you enter new personal data, such as weight, age, etc. Press the MODE button to return to the User Profile screen.
- At any time in the set up you can press the MODE button to escape to the User Profile screen.
- If you do not press a button for 30 seconds the watch returns to the Clock mode.




NOTE:

Once you have set your User Profile your lower and upper heart rate limit will be set automatically. However, you can manually change your upper and lower heart rate limit if the automatic setting does not suit you. If you change the Activity Score (ACT), your upper / lower and maximum heart rate will automatically be updated.

SET UP AN EXERCISE PROFILE (EX PF)

MSC-HR10/20 can be programmed with Exercise Profiles or workouts. HR10 can program 1 Exercise Profile and HR20 can program 3 Exercise Profiles. Each Exercise Profile can have a countdown Warm Up, Exercise, and Recovery (HR20 only) timer.

EXERCISE PROFILE (EX PF) - Press MODE button until User Profile (USER PF) or Exercise Profile (EX PF) appears on the screen. If the USER PF appears on the screen, press the SET button to have Ex PF appear. For HR20, press the SET button to cycle through each of the three Exercise Profiles listed on screen as EX 1 PF, EX 2 PF and EX 3 PF. Press and hold the SET button for two seconds to access the Exercise Profile and change or set the data.

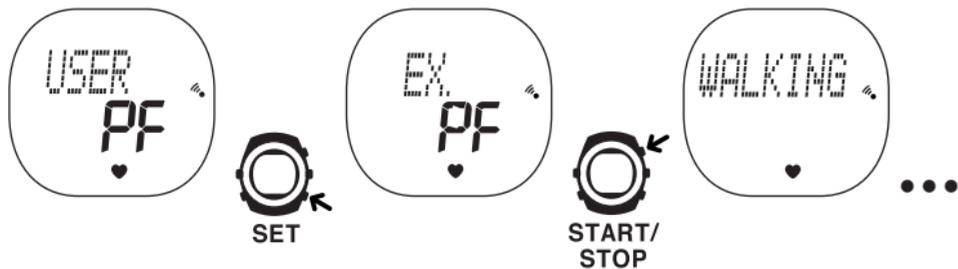

- Select the Workout Activity (T.ACT) from WALKING, CYCLING, or RUNNING. Press the SET button to advance.
- The Lower Heart Rate limit for your training zone will flash. Adjust and press the SET button.
- The Upper Heart Rate limit of your training zone will flash. Adjust and press the SET button.

- Audio Alert can be turned on or off. The alert will beep once every minute if you have gone below your target Heart Rate Zone, and twice if you have gone above it. Adjust and press the SET button.
- Set your hours and minutes of your Exercise timer. Press the SET button to advance.
- Set the Warm Up timer (0, 5, 10 or 15 minutes). Press the SET button to advance.
- For HR20, set the Recovery timer (0, 5, 10 or 15 minutes). Press the SET button to advance.
- After the Exercise Profile has been set, it can be modified quickly by the same method.
Note that once the Exercise Profile has been established, the screens are arranged so the data you would most likely change is first, like Maximum Heart Rate and Weight.

USING EXERCISE PROFILES

Once you have set your Exercise Profile(s), you can train according to the guidelines in your profile.

For HR20, select from three Exercise Profiles in the Profile mode by pressing the SET button.

- Press the MODE button until you enter the Countdown Program mode.
- Press the ST/SP/+ button to start or pause the program.
- To skip the Warm Up timer to the Exercise timer press and hold the ST/SP/+ for two seconds.
- To skip the Exercise timer and start the Recovery timer (HR20 only), hold ST/SP/+ for another 2 seconds.
- For HR20, if the Recovery timer has a non-zero value, the Recovery timer will begin.
- To end the Recovery timer early, press and hold the ST/SP/+ button for two seconds.



NOTE:


You cannot use the Stopwatch mode while running the Countdown program.

MEMORY FUNCTIONS

There are two Memory functions; one for the Stopwatch and the other for the Countdown Program.


Press the MEM/- button in the Stopwatch mode.

- HR20 only:
- “ALL” displays at first.
 - Press SET to view data for the entire workout.
 - Press ST/SP/+ or MEM/Lap/- to scroll and view data for the desired Lap numbers. Press SET to continue.
 - Total Time (workout) and Maximum Heart Rate is displayed (this is the first display for HR10). Press the SET button.
 - Total Time (workout) and Average Heart Rate is displayed. Press the SET button to view next data.
 - Calories consumption and Percentage of Calories Burned as Fat are displayed. Press the SET button to view next data.
 - The time in the Heart Rate Zone is displayed. Press the SET button.
 - The time above the Heart Rate Zone is displayed. Press the SET button.
 - The time below the Heart Rate Zone is displayed. Press the SET button to return to the top of the Memory function screen. Press the MODE button to return to the Clock mode.

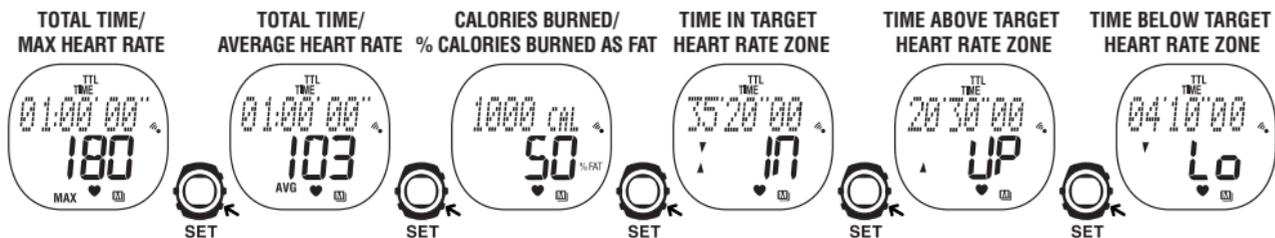

Press the MEM/- button in the Countdown Program mode.

- Total Time (workout) and Average Heart Rate is first displayed. Press the SET button to continue.
- Recovery Start and End Heart Rate are displayed at 1 sec interval (HR20 only *1) and Average Heart Rate is displayed.
- Calories consumption and Percentage of Calories Burned as Fat are displayed. Press the SET button to view next data.
- The time in the Heart Rate Zone is displayed. Press the SET button.
- The time above the Heart Rate Zone is displayed. Press the SET button.
- The time below the Heart Rate Zone is displayed. Press the SET button to return to the top of the Memory function screen. Press the MODE button to return to the Clock mode.

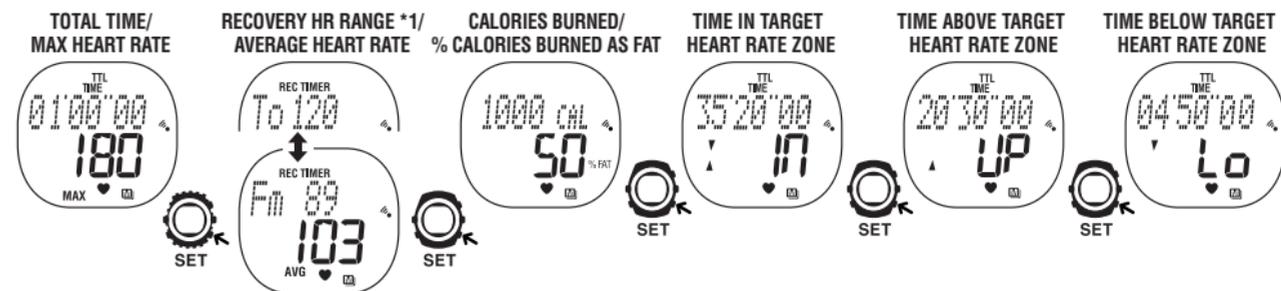

IMPORTANT:

You must update the User Profile in order for all the memory data to be accurate.

ALARM

The MSC-HR10/20 also has an alarm. Follow the steps below to set it.

- From the Clock mode press the SET button.
- The current Alarm time appears. Press the ST/SP/+ or the MEM/- button to turn on or off the alarm.
- Press the SET button for two seconds to change the hour and minutes.
- The hours are flashing. Adjust and press the SET button.
- The minutes are now flashing. Adjust and press the SET button.
- Press the MODE button to exit the setup.

BACKLIGHT

When the Auto-light is set to OFF:

- Press LIGHT button to turn on the backlight for 3 seconds. Press any other key whilst the light is on and it will extend the light time by another 3 seconds.

When the Auto-light is set to ON:


- Press any key to turn ON or extend the backlight for 3 seconds.

To help conserve power, the Auto-light setting will automatically switch to OFF after 2 hours.

NOTE:

The backlight does not work when the low battery icon is shown and will return to normal once the batteries are replaced.

WEARING THE HEART RATE SENSOR

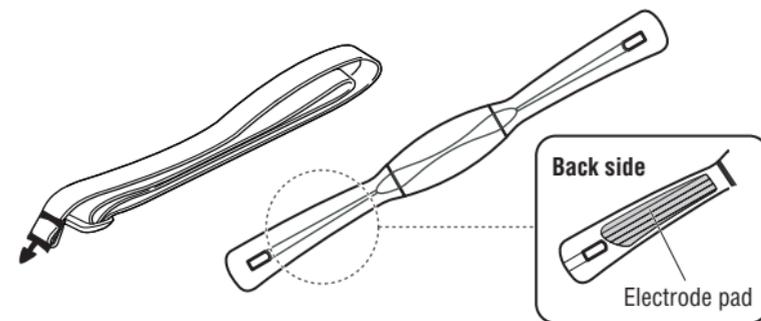

The Heart Rate Sensor is used to count your heartbeat and transmit the data to the MSC-HR10/20.

To wear the Heart Rate Sensor:

1. Wet the conductive pads on the underside of the Heart Rate Sensor with a few drops of water or a conductive gel to ensure solid contact.
2. Strap the Heart Rate Sensor across your chest. To ensure an accurate heart rate signal, adjust the strap until the belt sits snugly below your pectoral muscles.



NOTE:

- The position of the Heart Rate Sensor affects its performance. Move the Heart Rate Sensor along the strap so that it falls above your heart.
- Avoid areas with dense chest hair.
- In dry, cold climates, it may take several minutes for the Heart Rate Sensor to function steadily. This is normal and should improve with several minutes of exercise, or by wetting the sensor contacts.
- If the watch is kept idle without receiving a heart rate signal for 5 minutes, the Heart Rate receiving function turns OFF and return to the Clock mode.

**TRANSMISSION SIGNAL:**

The Heart Rate Sensor have a maximum transmission range of about 31.5 inches (80 cm).

**IMPORTANT:**

In the event that you experience a weak signal or your signal is disrupted by interference in the environment, follow the instructions below to identify and resolve the situation.

If the signal is weak - The display will only show “Ø”:

- Shorten the distance between the MSC-HR10/20 and the Heart Rate Sensor.
- Re-adjust the position of the Heart Rate Sensor.
- Check the conductive pads are moist enough to ensure solid contact.
- Check the batteries. If they are low or exhausted, the range may become shorter.

**WARNING:**

Signal interference in the environment can be due to electromagnetic disturbances. These may occur near high voltage power lines, traffic lights, overhead lines of electric railways, electric bus lines or trams, televisions, car motors, bike computers, some motor driven exercise equipment, cellular phones or when you walk through electric security gates.

ACTIVITY SCORE


The activity score is based on your own self-assessment of the amount of exercise you regularly perform.

ACTIVITY SCORE	DESCRIPTION
1 Hour per week	Low - You do not usually participate in programmed recreation, sports or exercise.
2 Hours per week	Medium - You are engaged in modes physical activity (such as golfing, horseback riding, table tennis, calisthenics, bowling, weight lifting or gymnastics) 2-3 times a week, totaling 2 hours per week.
More than 2 Hours per week	High - You actively and regularly participate in heavy physical exercise (such as running, jogging, swimming, cycling, or any conditioning exercise) or engage in vigorous aerobic exercise (such as tennis, basketball or handball).

FITNESS INDEX

Your MSC-HR10/20 will generate a fitness index based on your aerobic fitness. This index is dependent and limited by the body's ability to deliver oxygen to the working muscles in training. It is often measured by maximum oxygen uptake (VO2 Max), which is defined as the highest amount of oxygen that can be utilized when exercising at an increasingly demanding level. The lungs, heart, blood, circulatory system, and working muscles are all factors in determined VO2 Max. The unit of VO2 Max is ml/kg min.

The higher the index, the fitter you are. See the tables below for a rough guide to what your fitness index means. Your fitness index is a reference and can be adjusted by changing your personal data.

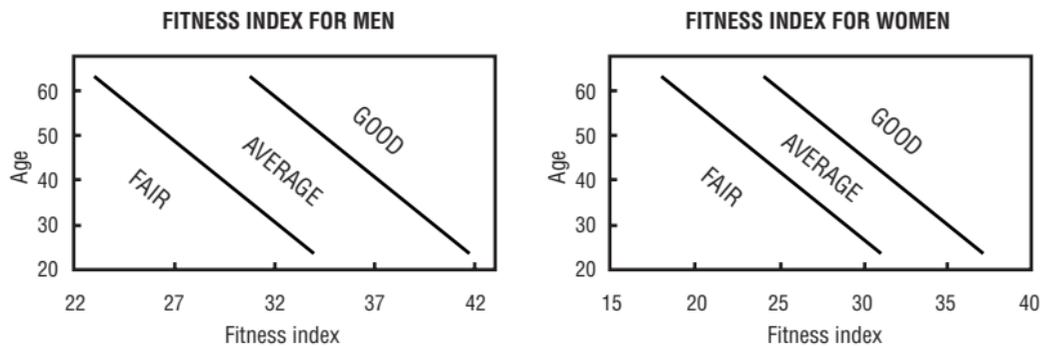

BATTERIES

The batteries typically last one year when used an average of 30 minutes per day. It is recommended to contact the retailer or our customer service department if you need to replace them.


To replace the battery in MSC-HR10/20:

1. Turn the MSC-HR10/20 over so that you are looking at the back plate.
2. Use a small screwdriver to remove the four screws that hold the back plate into position.
3. Remove the back plate and set it aside.
4. Using a thin blunt instrument (such as a paperclip), hook the release catch and lift the clip.
5. With your finger, remove the old battery.
6. Slide the new battery into the battery compartment with the + side upwards.
7. Replace the battery clip.
8. Replace the back plate and screws.



IMPORTANT:

After the battery change, it is necessary to re-enter the User Profile.

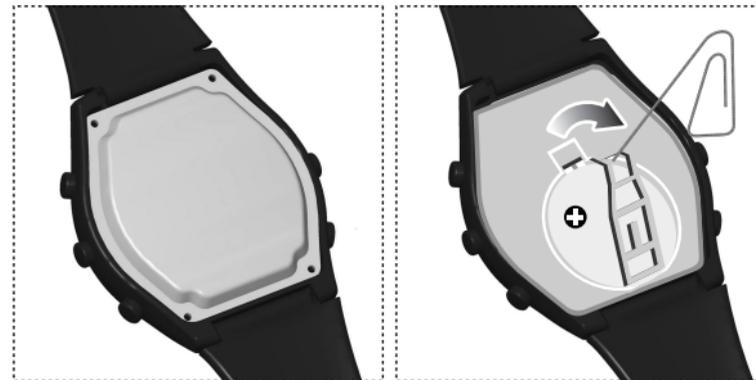

To replace the Heart Rate Sensor battery:

1. Locate the battery compartment on the back of the Heart Rate Sensor.
2. Using a coin, as shown above, turn the compartment cover counter-clockwise until it clicks out of place.
3. With your finger, remove the old battery and set it aside.
4. Insert the new battery with the + side upwards.
5. Replace the battery compartment cover by turning it clockwise until it is firmly in position.



IMPORTANT:

- Non-rechargeable and rechargeable batteries must be disposed of properly according to your local regulations.
- Batteries are extremely dangerous when swallowed! Keep batteries and the article away from children. If a battery has been swallowed seek immediate medical advice.
- The batteries supplied must not be recharged, reactivated by any other means, dismantled, put into fire or short-circuited.

CARE INSTRUCTIONS

To ensure you receive the maximum benefit from using this product, please observe the following guidelines:

- Clean the MSC-HR10/20 and Heart Rate Sensor thoroughly after each training session. Never store the products when wet.
- Use a soft, slightly moistened cloth. Do not use abrasive or corrosive cleaning agents, as these may cause damage.
- Avoid pressing the keys with wet fingers, under water, or in heavy rain, as this may allow water to gain entry into the electrical circuitry.
- Do not bend or stretch the transmitter part of the Heart Rate Sensor.
- Do not subject the product to excessive force, shock, dust, temperature changes, or humidity. Never expose the product to direct sunlight for extended periods. Such treatment may result in malfunction.
- Do not tamper with the internal components. Doing so will terminate the product warranty and may cause damage. The main unit contains no user-serviceable parts.
- Do not scratch hard objects against the LCD display as this may cause damage.
- Remove the batteries whenever you are planning to store the product for a long period of time.
- When replacing batteries, use only new batteries.

7.1 AQUATIC AND OUTDOOR ACTIVITIES

The MSC-HR10/20 is water-resistant up to 100 feet (30 meters). The Heart Rate Sensor is splash proof and should not be used for underwater activities. Refer to the table for proper use guidelines.

					
	RAIN SPLASHES, ETC	SHOWERNG (WARM / COOL WATER ONLY)	LIGHT SWIM- MING / SHAL- LOW WATER	SHALLOW DIVING / SURFING / WATER SPORTS	SNORKELING / DEEP WA- TER DIVING
30 m / 100 ft	OK	OK	OK	NO	NO

- Keep MSC-HR10/20 water resistant! Avoid contact with chemicals and solvents (gasoline, chlorine, perfumes, alcohol, hair sprays, etc.).
- Rinse and dry after use.
- Reduce exposure to heat.

8.0 SPECIFICATIONS

CLOCK

Time format: 12hr/24hr
 Date format: DD/MM or MM/DD
 Year format: 2001 – 2050 (auto calendar)
 Alarm: One alarm

STOPWATCH

Stopwatch: 99:59:59:99 (HH:MM:SS)
 Resolution: 1/100 sec.
 *Lap counter: 44 laps share 99:59:59:99 (HH:MM:SS)

EXERCISE PROFILE

Warm-up timer: 5, 10, 15, or 0 mins
 Exercise timer: 99:59:59:99 (HH:MM:SS)
 *Recovery timer: 5, 10, 15, or 0 mins

DISPLAY FUNCTIONS

Heart Rate (HR) alarm: Audible and visual
 Heart Rate (HR) alarm: 30 – 240bpm (beats per minute)
 Lower HR settable range: 30 – 220bpm
 Upper HR settable range: 80 – 240bpm
 Calories consumption: 0 – 9,999 kcal
 % Burned as Fat: 0 – 99%

TRANSMISSION

Minimum range: 25 in. (62.5cm)
 Maximum range: 31.5 in. (80cm) –
 may decrease with low battery

WATER RESISTANT

MSC-HR10/20: 100 ft (30m) – not actuating keys
 Heart Rate Sensor: Splash proof

BATTERY


MSC-HR10/20: 1 x CR2032 3v lithium battery
 Heart Rate Sensor: 1 x CR2032 3v lithium battery

OPERATING ENVIRONMENT

Operation temperature: 41°F – 104°F (5°C – 70°C)
 Storage temperature: -4°F – 158°F (-20°C – -70°C)

* HR20 Only

SCREEN FLOW

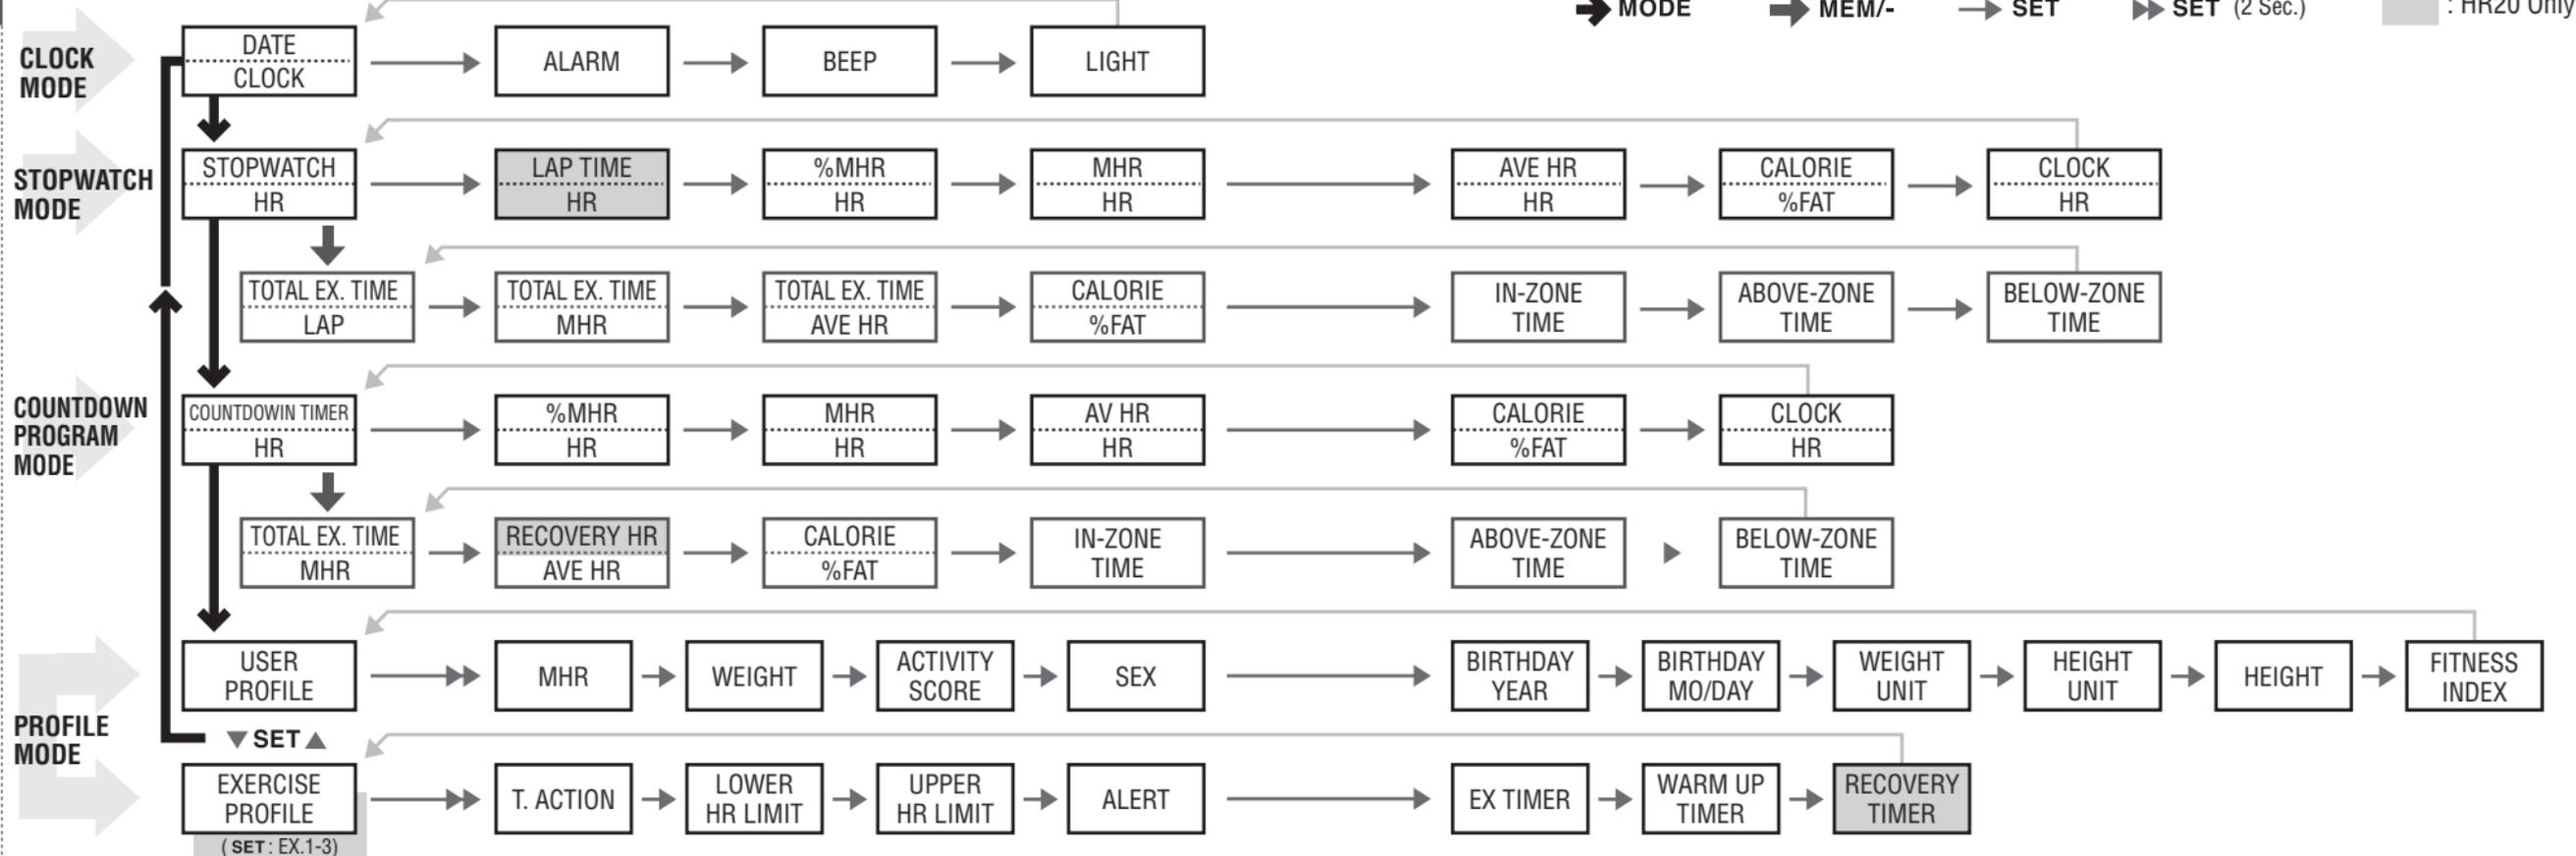

LIMITED WARRANTY

Two-year warranty period: applied to the MSC-HR10/20 and the Heart Rate Sensor only (excluding batteries).

Should the MSC-HR10/20 or the Heart Rate Sensor fail under normal conditions of use, we will repair or replace it free of charge. The warranty service should be performed directly by CatEye; please return through the point of purchase, or directly to CatEye.

CATEYE CO., LTD.

Service & Research Address for United States Consumers:

CATEYE Service & Research Center

1705 14 th St. 115 Boulder CO 80302

Phone: 303-443-4595 FAX: 303-473-0006

Toll Free: 800-5 CATEYE URL: <http://www.cateye.com>

Japan Office:


2-8-25 Kuwazu, Higashi Sumiyoshi-ku, Osaka 546-0041 Japan

Attn: CATEYE Customer Service Section

SPARE PARTS


249-9940

WATCH STRAPS

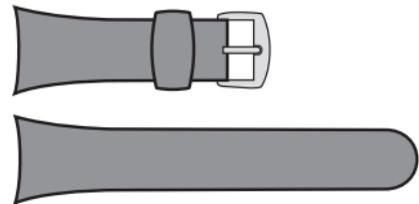

249-9920

HEART RATE SENSOR

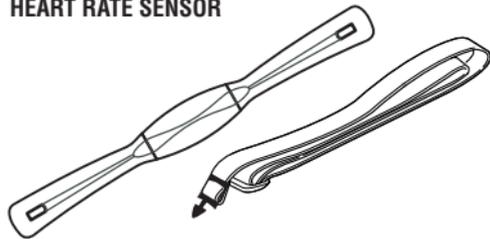

166-5150

BATTERY (CR2032)

