

SUPER POOLER AND

MP300

User's Manual

Manuel de L'utilisateur

INTRODUCTION

Congratulations on your purchase of the Edifier MP300 portable Multimedia Speaker System. With the right care and attention, it will give you years of trouble free operation. However, it is most important for you to take a few minutes at this early stage of your product's life to read the following paragraphs. They contain essential information to enable you to obtain the best performance from your Edifier MP300.

SAFETY INSTRUCTIONS

Please read all the instructions herein. Please retain this manual safely for future reference. Please heed all safety warnings. Please Install in accordance with the Manufacturer's instructions. Please adjust the volume control to a comfortable level to avoid damaging your hearing and the system.

▲ CAUTION:

TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) OF AC ADAPTER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

🛆 WARNING

Humidity ---- Do not use the speakers near water, and do not immerse them in any liquid or pour any liquid on them.

Polarized Plug ---- Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. The wider blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the appliance.

Heat---- Place the speakers away from all heat sources, such as heat registers, stoves, and direct sunlight.

Ventilation ---- Do not block the openings in the speaker cabinets, and never push objects into speaker vents or slots because of fire or electric shock hazards, and provide sufficient space around the speakers for proper ventilation.

Location ---- Place the speakers in a stable location so that it will not fall causing damage to the speakers or bodily harm.

Cleaning --- Unplug the speakers from the computer and from the electrical outlet before cleaning them with a damp cloth.

Non-Use Period ---- The Power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

Lightning Storm ---- For added protection during lightning storms, unplug the speakers from the electrical outlet and turn off the computer.

Servicing ---- Servicing is required when the appliance has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the appliance, the appliance has been exposed to rain or moisture, and does not operate normally, or has been dropped. Refer all servicing to qualified service personnel only.

<u>A</u> Edifier One Year Limited Warranty

Edifier warrants to the end user that all of its computer speaker systems are free from defects in materials and workmanship in the course of normal and reasonable use for a term of one year from the date of purchase. This warranty is the exclusive and only warranty in effect relative to Edifier multimedia speaker systems and any other warranties, either expressed or implied, are invalid. Neither Edifier nor any authorized Edifier reseller is responsible for any incidental or consequential damages incurred in the use of the speakers. (This limitation of incidental or consequential damage is not applicable where prohibited.)

Edifier's obligation under this warranty does not apply to any defect, malfunction or failure as a result of misuse, abuse, improper installation, use with faulty or improper equipment, or the use of the speaker systems with any equipment for which they were not intended.

The terms of this warranty apply only to speaker systems when such speakers are returned to the respective authorized Edifier reseller where they were purchased.

Under the terms of this warranty, the original consumer purchaser has certain legal rights and may have other rights, which vary worldwide.



OPENING THE PACKING

Please check the speaker Model number marked on the packing carton. Please contact the seller as soon as possible if you find the speaker is the incorrect model or has sustained shipping damage.

MP300 PACKING LIST:

1 x Sub Woofer 2 x satellite Speakers (with cables) 1x AC Adapter 2 x Audio Connecting Cable 1 x User Manual

ILLUSTRATIONS:



INTRODUCTION OF BACK PANEL



CONNECTIONS

1. Connect the satellite speaker cable plug (2) into multi-pin socket. Please align the plug carefully into the socket.

2. Connect the Audio Input cable (1), one end into the Line In socket; the other end to any audio device (E.g.: Computer, MP3 player, Discman etc).

3. Connect AC Adapter (4) to DC IN (3) socket. The system is now ready and in standby mode.

English

PLAYING THE AUDIO DEVICE

Please refer to illustration below:



Right Satellite Speaker

NOTE: A slight tap on the Volume UP (+) or DOWN (-) will launch the system. And to set it into Standby Mode, please press down the Volume UP (+) and DOWN (-) buttons together, and hold down either of them will wake up the system again. When system is activated, please refer to the following part:

Please adjust the volume by pressing UP (+) or DOWN (-) button on the left control satellite to a comfortable level for listening. Please note that when the system is in standby mode, the LED Indicator on the subwoofer will flicker with a pulsing effect.

I TROUBLE SHOOTING GUIDE

No Sound from Any Speakers?

Is there Power to your System?

Ensure that your subwoofer is plugged securely into a working AC wall outlet and that the blue power indicator LED is ON.

Are your Volume Controls adjusted correctly?

Ensure your computer's internal volume settings are set to mid-level, and the Volume of the Controller Satellite (Left) is adjusted correctly.

Is the Mute on your System set to Auto-Protect Mute or to ON?

Mute on is ON when both the + and - Volume buttons are depressed, and OFF when they are both depressed again. Please check the blue status LED on the subwoofer. A non-pulsing effect indicates the Mute is in Off mode.

Are your Cables properly connected? Check all the connections are secure.

Are you receiving an Audio Signal?

Please try connecting your speakers to an alternate audio source, such as another portable CD player or Discman to determine that your speakers are working.

Sound from only part of your system?

Please ensure the "S" plug connecting the satellites, is firmly inserted into the socket assembly on the subwoofer mounting base. Try substituting the audio connection to another source, e.g. a Discman, portable radio etc. If the system now works, the original source is at fault.

When playing CD from computer, only one Speaker has sound

Mostly this phenomenon tends to occur with a new computer - only one satellite works when playing an audio CD, but all work correctly when running a WAV file or playing a Game. The reason for this is the CD-ROM is not matched with the Soundcard, or one signal channel maybe shorted to a ground wire. Also please refer to the CD-ROM user manual to adjust the jumpers.

IROUBLE SHOOTING GUIDE

Speakers exhibit excessive noise

Edifier speakers are of a very low noise circuit design. Some source equipment may have a poor signal to noise ratio. Therefore, please unplug the input audio cable, and check if the noise is from the CD/DVD player or the Computer Soundcard etc.

Magnetically Shielded Speakers

Edifier system subwoofers and satellite speakers are all of a magnetically shielded design. You can place the speakers near a TV or monitor. However, it is wise to allow a 0.2-1 m distance between the speakers and monitor to avoid possible magnetic field interference.

Listening Tips:

All high quality speaker systems benefit from a running-in period on normal music sources.

TO OPTIMIZE THE SOUND QUALITY FROM YOUR SYSTEM:

Sit in a comfortable position at the computer desktop. Take time to test the listening environment by using music CDs with wide frequency content and spacious left-to-right imaging. The loudspeaker driver used in the subwoofer will change its characteristics subtly over the first two weeks of use as the suspension of the cone will loosen up slightly, producing a trace more warmth to the overall sound texture.

Adjust the speaker placement for the most realistic imaging and tonal balance by listening to several different musical selections and game or computer sound effects.

For optimum acoustic performance, we recommend that you place your satellite speakers at least 6-8" from rear walls to reduce unwanted reflections that can muddy your sound. Bass frequencies may be enhanced or exaggerated by placing your subwoofer close to a wall or corner. Please feel free to experiment with the system's location to obtain the most pleasing effects.

Edifier couples incredible technology with an amplified subwoofer to generate smooth deep bass, crystal clear highs, and enough power to ensure that your personal listening experience allows you to hear what you have been missing!

SPECIFICATIONS:

Power output:	RMS 2.5W×2+9W (THD=10%)
Signal-to-Noise Ratio (Amplifier):	≥ 85dBA
Input Impedance:	≥5KOhm
Input Sensitivity:	Auto-Intelligent Sensitivity Adjustment
Input Port:	3.5mm Stereo input plug.
Frequency Response:	75Hz-20kHz
Bass driver unit:	2" woofer with heat treated paper voice coil,
	40hm, Magnetically Shielded
Midrange/High Frequency Driver:	1.5" M.F./ H.F. with heat treated paper voice
	coil, 40hm, Magnetically Shielded
Dimensions Subwoofer:	260 (W)×84 (H)× 59 (D) mm
Satellite:	57 (W) × 63(H) × 57(D) mm
Weight:	Approx1.4 Kg
Power Requirement:	DC 12 Volts
AC Power Adapter:	220V-240V ~, 50/60Hz (for ModelEuropean/
	China/Korea/South America, etc.)
	100V-120V ~, 50/60Hz (for Model USA/Canada/Japan)

To Use with:

Laptop, Mobile and Multimedia Computer (2 channel Sound Card), CD player, Discman, MP3, etc.

If you have any further questions or concerns regarding Edifier Products

please visit our website at: <u>www.edifier.com</u> or email Edifier Support for further assistance at: <u>main@edifier.com</u> If you prefer, you may contact us by phone Toll Free: 1-877-EDIFIER (334-3437) Copyright[©] 2005 All Rights Reserved. Manual Edition 1.1,Aug. 2005 Printed in CHINA

Edifie

www.edifier.com EDIFIER ENTERPRISES CANADA INC. Made in China