

Operating and installation instructions for washer-extractor PW 5065

To avoid the risk of accidents or damage to the machine it is **essential** to read these instructions before it is installed and used for the first time.



M.-Nr. 06 787 070

Caring for the environment

Disposal of the packing material


The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation!

Rather than just throwing these materials away, please ensure that they are offered for recycling.

Disposal of your old machine

Electrical and electronic machines often contain materials which if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your machine. Please do not therefore dispose of it with your household waste.

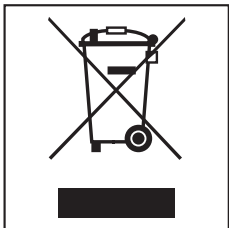

Please dispose of it at your local community waste collection / recycling centre and ensure that it presents no danger to children while being stored for disposal.

It should be disconnected from the mains electricity supply by a competent person. The cable should be cut off directly behind it to prevent misuse. See the "Warning and Safety" section of this booklet for further details.

Energy saving tips

Energy and water consumption

- Water consumption and energy usage are determined by the size of the load.
To make the most out of your machine load the maximum dry load for the programme you are using.
- If smaller loads are washed using the *Cottons* programmes, the automatic load recognition system will reduce the amount of water, time and energy used.
- Use the *Quick wash* programme for small loads.

Detergent

- Do not exceed the amounts of detergent recommended by the manufacturer on the packaging.
- Reduce the amount of detergent for smaller loads.

When drying with a tumble dryer

Selecting the highest possible spin speed for the wash programme will save energy when drying in a tumble dryer afterwards.

Caring for the environment	2
Disposal of the packing material	2
Disposal of your old machine	2
Energy saving tips	2
Warning and Safety instructions	6
Operating the washer-extractor	9
Control panel	9
Displays	10
Before using for the first time	11
How to wash correctly	12
Brief instructions	12
Spinning	17
Maximum final spin speed	17
Rinse and interim spin	17
To omit the final spin (Rinse hold)	17
To omit rinse and interim spin and the final spin	17
Delay start	18
Programme chart	19
Programme sequence	25
Garment care label symbols	27
Changing the programme sequence	28
Cancelling a programme	28
Altering a programme	28
Adding or removing laundry after a programme has started	29

Contents

Detergent	30
Water softeners	31
Washing with several components	31
External dispensing system	31
Fabric conditioners or liquid starch	32
Automatic dispensing of fabric conditioner or liquid starch to laundry at the end of a programme	32
Adding fabric conditioner separately	32
Adding starch separately	32
Colour run and dye removers / dyes	32
 Cleaning and care	33
Cleaning the water inlet filters	35
 Problem solving guide	36
What to do, if	36
The programme does not start	36
Fault messages in the display	37
General problems	38
An unsatisfactory wash result	39
The drum door cannot be opened by pressing the <i>Door</i> button.	40
Opening the drum door in the event of a blocked drain outlet and/or power failure	41
Changing the lamp for the drum lighting	44
 After sales service	45
PC / Optical interface	45
Optional accessories	45
 Installation and connection	46
Front view	46
Rear view	47
Installation on a raised plinth	48
Washer-dryer stack	48

Payment system. 48

Installation surface. 49

Installing the washer-extractor. 49

Removing the transit fittings 49

Re-fitting the transit bars 51

Levelling the machine 52

Plumbing 53

 Connection to the cold water supply 53

 Connection to the hot water supply 54


Connection to drainage 55


 Machines with a drain pump 55

 Drain valve version 55

Electrical connection U.K. 56

Technical data 57

Settings menu  60

 Language  60

 Suds cooling 60

 Time of day 61

 Display contrast. 61

 Display brightness. 61

 Standby 62

 Memory 62

Settings/Supervisor level menu 63

Warning and Safety instructions

To avoid the risk of accidents and damage to the machine please read these operating instructions carefully before using it for the first time. They contain important information on its safety, use and maintenance. Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner of the machine.

Correct use

Only use this washer-extractor to wash items which are specified by the manufacturer to be machine-washable on the wash-care label, and textiles composed of hand-washable wool or wool blend fabrics as well as satin, lace, silk and other hand-washable garments. Any other applications may be dangerous. The manufacturer is not liable for damage resulting from improper use or operation.

Technical safety

Before setting up the machine, check it for any externally visible damage. Do not install or use a damaged machine.

Before connecting the machine, ensure that the connection data on the data plate (voltage and connected load) match the mains electricity supply. If in any doubt, consult a qualified electrician.

The electrical safety of this machine can only be guaranteed when continuity is complete between the machine and an effective earthing system which complies with local and national safety regulations. It is most important that this basic safety requirement is present and regularly tested, and where there is any doubt the on-site wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

Do not connect the machine to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the machine (e.g. danger of overheating).

The machine is built in accordance with current safety requirements. Unauthorised repairs could result in unforeseen dangers for the user, for which the manufacturer cannot accept liability. Repairs should only be undertaken by a Miele approved technician.

Ensure current is not supplied to the machine until after maintenance or repair work has been carried out.

In the event of a fault or for cleaning purposes, the machine is only completely isolated from the electricity supply when:

- it is switched off at the mains, or
- the mains fuse is withdrawn.

Warning and Safety instructions

■ This machine must only be connected to the on-site water supply using a new hose kit. Old hoses must not be re-used. Check the hose regularly for signs of wear. Change in good time to avoid the risk of leaks and subsequent damage.

■ Faulty components must only be replaced by genuine Miele original spare parts. Only when these parts are fitted can the safety standards of the machine be guaranteed.

■ If the connection cable is faulty it must only be replaced by a Miele approved service technician to protect the user from danger.

■ In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the machine and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the machine guarantee.

Use

■ This equipment may only be used in mobile installations such as ships, caravans, aircraft etc. if a risk assessment of the installation has been carried out by a suitably qualified engineer.

■ Do not install this machine in rooms where temperatures below freezing may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.

■ Before using the machine for the first time, check that the transit fitting at the rear of the machine has been removed (see section on "Installation"). During spinning, a transit fitting which is still in place may result in damage to both the machine and adjacent furniture or appliances.

■ Turn off the stopcock if the machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain (gully) in the immediate vicinity.

■ Flooding danger.

■ If hooking the drain hose of a drain pump machine into a wash basin, check that the water can drain off quickly enough to prevent the sink from overflowing. Make sure the drain hose is secure, so that the force of the water flowing out of the hose does not dislodge it. Otherwise this will result in flooding.

■ Take care to ensure that foreign objects (e.g. nails, pins, coins, paper clips) do not find their way into the machine with the laundry. These may damage components of the machine (e.g. suds container, drum), which in turn can result in damage to the laundry.

Warning and Safety instructions

■ If the correct amount of detergent is dispensed, the machine should not need to be descaled. If, however, you do wish to descale the machine only use proprietary non-corrosive descaling agents and strictly observe the instructions on the packaging. If in doubt contact the Miele Professional Dept. or your Miele Dealer.

■ Textiles which have been pre-treated in solvent based cleaning agents must be thoroughly rinsed in clean water before being washed in the machine.

■ Never use solvent based cleaning agents in this machine, as this may result in damage to component parts and create toxic fumes. Such detergents also pose a fire and explosion hazard.

■ Only use dyes specified by the manufacturer as being suitable for use in a washing machine. Always observe the manufacturer's instructions carefully.

■ Colour run and dye removers contain sulphur compounds which can cause damage such as corrosion. Do not use these products in this machine.

■ Avoid contact of stainless steel surfaces (front, lid, casing) with liquid cleaning and disinfecting agents which contain chlorine or sodium hypochlorite. These agents can have a corrosive effect on stainless steel. Aggressive vapours containing chlorine bleach can also be corrosive. Do not store open containers of these agents near the machine.

Safety with children

■ This machine is not a toy! To avoid the risk of injury do not allow children to play on or near it or to play with the controls. Supervise its use by the elderly or infirm, and supervise children whilst you are operating the machine.

■ For machines with a 'porthole' door, remember that the porthole glass will be hot when washing at very high temperatures. Do not let children touch it.

Accessories


■ Accessory parts may only be fitted when expressly approved by Miele. If other parts are used, guarantee, performance and product liability claims will be invalidated.

Disposal of your old machine

■ Before discarding an old machine disconnect it from the electricity supply. Cut off the cable directly behind the machine to prevent misuse. This should be done by a competent person.

■ The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Control panel

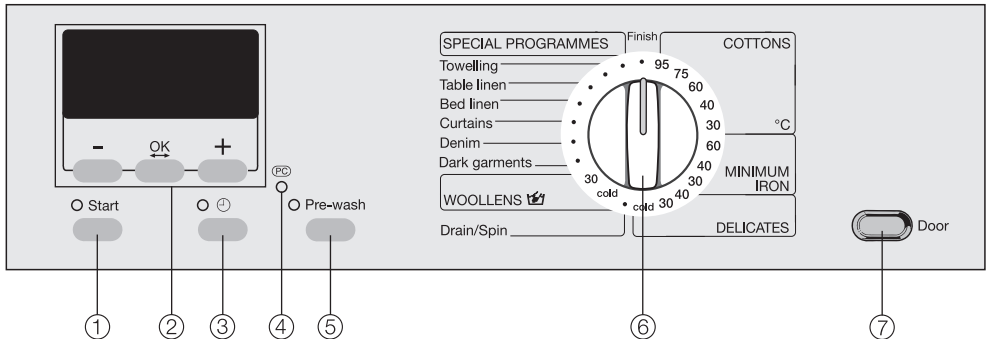

① **Start button**

Starts the selected programme.

② **Display with -, OK, and + buttons**

See the following pages for more information.

③ **⏸ button**

For selecting delay start.

④ **PC / Optical interface**

This is used by service technicians to run diagnostic checks on your machine and can also be used to update programming data in the future.

⑤ **Pre-wash button** with indicator light

⑥ **Programme selector**


For selecting a programme. The programme selector can be turned clockwise or anti-clockwise.

⑦ **Door button**

Opens the machine door.

Operating the washer-extractor

Displays

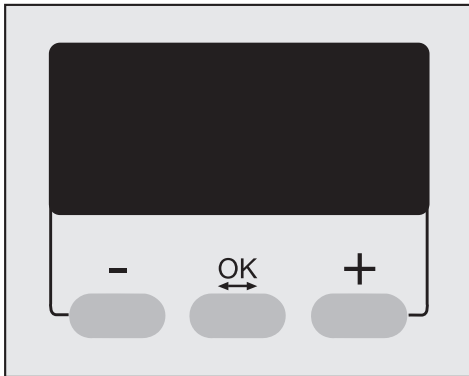

- / + buttons

For altering the values highlighted in the display:

- decreases the value or moves the highlighting upwards
- + increases the value or moves the highlighting downwards.


OK button

For confirming the value selected and choosing the next value.

The following are selected via the display:

- special programmes
- final spin speed
- the temperatures for some programmes
- delay start

The display also shows the duration of the programmes and the current time of day.

The *Settings*  menu is also operated via the display.

Before using for the first time

Before using the machine for the first time ensure that it is correctly installed and connected. See "Installation and connection". Also check that the drain filter is securely tightened to prevent the risk of water leaks during use.

For safety reasons spinning is not possible until the machine has been prepared for using for the first time. To activate the spinning function you must run a wash programme without laundry and without detergent.

If the washing machine is being switched on for the first time, the welcome screen will appear.



Miele
PROFESSIONAL
Welcome

The welcome screen will not appear again once a programme lasting longer than one hour has been completed.

Reminder to remove transport struts

To avoid the risk of damage, the transport struts must be removed before the machine is used for the first time. See "Installation and connection" for instructions on how to do this.

- After removing the transport struts (if this has not already been done by your fitter) press the *OK* button.

The display for setting the time of day will appear.

Setting the time of day



12:00

Set the time of day

- Set the hour with the - and + buttons, and confirm your setting by pressing the *OK* button. Then set the minutes. After you have confirmed the minute setting, the main menu will appear in the display.

Running your first programme

- Your machine is now ready for the first programme to be run.
- Turn the programme selector to the *Cottons 60°C* position.
- Open the stopcocks.
- Press the *Start* button.


When this programme has finished, your machine is ready for using for the first time.

How to wash correctly

Brief instructions

The headings numbered ①, ②, ③, . . . show the operating sequence and can be used as brief instructions.

① Sort the laundry

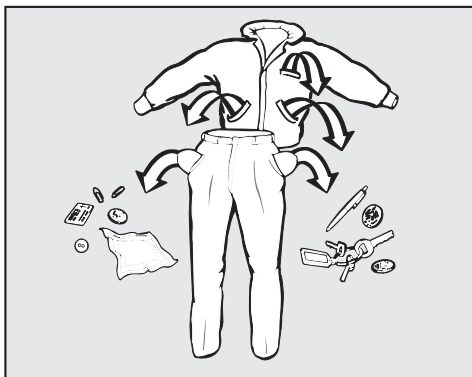

- Empty all pockets.

⚠ Foreign objects (e.g. nails, coins, paper clips, etc.) can cause damage to garments and components in the machine.

Removing marks

- Badly soiled areas, stains etc. should be removed as soon as possible, preferably whilst still fresh. Spillages should be carefully dabbed off using a soft colourfast cloth. Do not rub!

Badly soiled areas can be pre-treated with liquid detergent, stain removers etc. first, following the manufacturer's instructions. With particularly stubborn stains ask your dry cleaner for advice.

⚠ Do not use solvent-based cleaning agents in this machine.

- Sort the laundry by colour and by care label. Most garments have a textile care label in the collar or side seam.

Dark textiles often contain excess dye and should be washed separately several times before being included in a mixed load. Always wash whites and coloureds separately.

- Curtains: Remove lead weights first or place in a laundry bag.
- Underwiring and collar stiffeners: Any loose wiring in bras, shirt collar stiffeners, etc. should be removed or sewn in.
- Knitted garments, trousers and jeans, T-shirts and sweat shirts: Turn inside out, if recommended by the manufacturer.
- Close any zips, fasten hooks and eyes etc before washing.
- Fasten duvet covers etc. to prevent small items from being rolled up inside them.

Do not wash any items in this machine which are specified by the manufacturer as **not washable** on the care label (❌ symbol).

How to wash correctly

② Load the drum


- Press the *Door* button and open the drum door.

The interior drum lighting will come on.

- Unfold the laundry and load loosely in the drum. Mixing both large and small items gives better wash results and also helps distribute the load evenly during spinning.

The most efficient use of energy and water is achieved when a full load is washed. However, do not overload as this causes creases and reduces cleaning efficiency.


- Shut the door with a gentle swing.

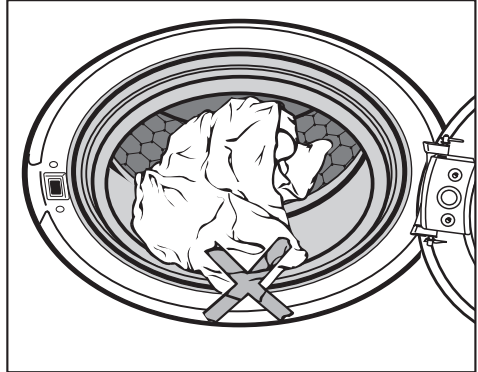

Make sure that no garments are caught between the drum door and seal.


How to wash correctly

3 Select a programme

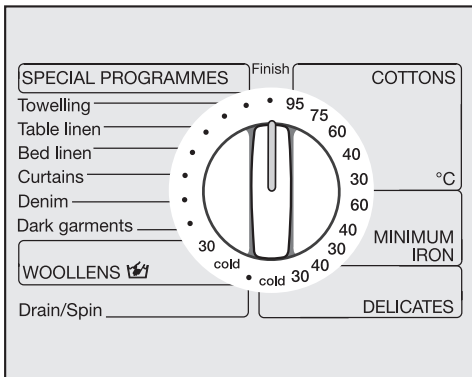


- The wash programmes and temperatures are selected with the programme selector.

The programme selected will appear in the display.

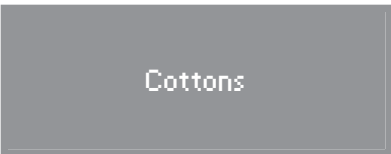


The display will then switch to show the menu for the programme selected.

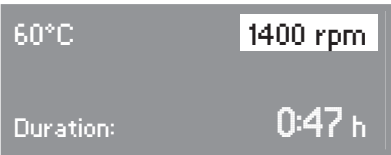


- You can then alter the spin speed which is shown highlighted with the – or + buttons. Confirm your selection by pressing the OK button. For some programmes you can also alter the temperature with – or +.

When you turn the programme selector to *Special programmes*, these will appear in the display.

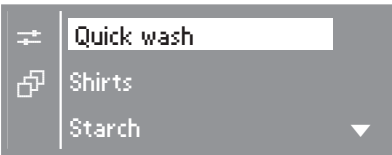

- Use the – or + button to highlight the programme you wish to select and confirm your selection by pressing the OK button.

The display will switch to show the menu for the programme selected.

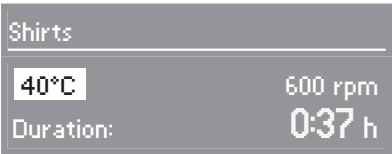

- You can then alter the temperature which is shown highlighted with the – or + buttons. Press the OK button to confirm the temperature. The spin speed will then be highlighted and you can change and confirm this in the same way you did the temperature.

Pre-wash

- Select the Pre-wash additional option for laundry with large amounts of dirt, e.g. dust, sand.
Pre-wash is not available for using with every programme.

Delay start

Select Delay start, if required (see "Delay start").

4 Add detergent

Take the level of soiling and water hardness into account. It is important to dispense the correct amount, because


too little detergent results in:

- Laundry not getting properly clean and with time it may become grey and hard to the touch.
- Greasy particles clinging to the laundry.
- Limescale deposits on the heater elements.


too much detergent results in:


- Excessive foam which causes a low level of agitation and poor wash, rinse and spin results.
- A burden to the environment.

See "Detergent" for further information.

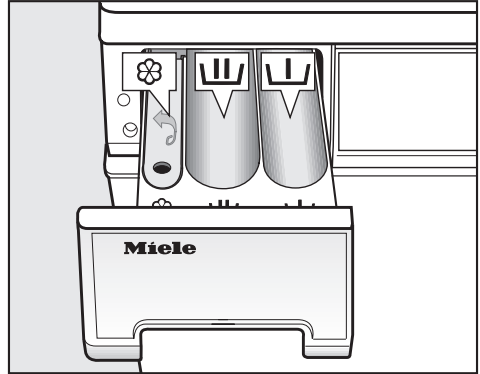

- Pull out the detergent drawer and add detergent to the compartments as follows:

 = Detergent for the pre-wash ($\frac{1}{4}$ of the total amount recommended).
This compartment is also used for starch formulations when starching separately.

 = Detergent for the main wash

 = Fabric conditioner or liquid starch

- Close the detergent drawer.

How to wash correctly

Payment system

If your machine has a payment system, the amount of credit required will appear in the display.

Credit will be lost if the door is opened or the programme cancelled after it has started.

5 Start the programme

The indicator light for the *Start* button will flash as soon as a programme can be started.

- Press the *Start* button.
- The indicator light for the *Start* button will now light up constantly.

The drum lighting switches off once the programme has started.

If delay start has not been selected, the estimated programme duration will appear in the display. This will count down in one minute steps. During the first 10 minutes the machine measures how much water is being absorbed by the laundry. The programme duration may be shorter depending on this absorbency rate.

The programme sequence is also shown in the display. The washer-extractor shows you when each section of the programme is reached.

6 Remove the laundry


Only remove laundry from the machine once the drum has stopped turning. Reaching into a moving drum is extremely dangerous and could result in injury.

If laundry is not removed immediately the programme has finished, the anti-crease phase will begin and the drum will turn at intervals to help prevent creasing.

Anti-crease will flash alternately with *Finish* in the display to indicate that the programme has finished.

- Press the *Door* button to open the drum door and remove the laundry.

Check that all items have been removed from the drum. Items left in the drum could discolour other items in the next wash or become discoloured themselves.

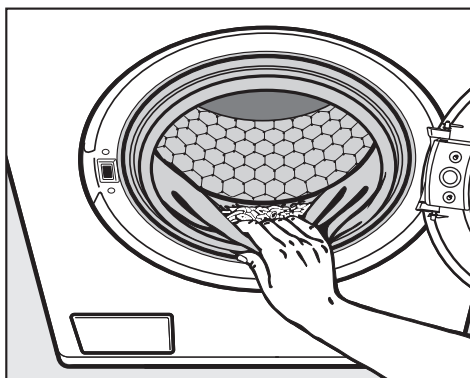

- Check the folds in the door seal for any small articles, e.g. buttons which might be lodged there.
- Turn the programme selector to *Finish*.
- Close the drum door. Otherwise there is the danger of objects being placed inadvertently in the drum. If these remained unnoticed and were washed in the next load, they could damage the laundry.

Maximum final spin speed

Programme	rpm
Cottons	1400
Minimum iron	1000
Delicates	600
Towelling	1400
Table linen	1200
Bed linen	1200
Curtains	400
Denim	900
Dark garments	1200
Woollens	1200
Quick wash	1200
Shirts	600
Starch	1200
Pillows	1400
Outerwear	900
Proofing	800
Separate rinse	1200
Drain/Spin	1400
Intensive wash*	1400
Flour*	1400
Flour +*	1400
Grease and fat*	1400
Grease and fat +*	1400
Towels short*	1400
Towels +*	1400
Capes*	600
Chem. Therm. Dis. 20min*	1400

* = These programmes can be selected from the *Settings/Supervisor level* menu, if this has been activated by a Miele service technician or authorised dealer.

You can reduce the final spin speed. However, you cannot select a final spin speed higher than that shown in the chart above.

Rinse and interim spin

There is a spin after the main wash and between the rinses. A reduction in the final spin speed will also reduce the interim spin speed.

To omit the final spin (Rinse hold)

■ Select the *Rinse hold* setting. The laundry will not be spun and will remain suspended in the final rinse water. This reduces creasing if the laundry is not going to be removed from the drum immediately after the end of the programme.

– To start the final spin:

Use the **+** button to select the spin speed you want. The final spin will start immediately.

– To end the programme:

Press the **–** or the *Door* button. The water will drain away. Press the *Door* button again to open the door.

To omit rinse and interim spin and the final spin

■ Select the *Without spin* setting. The laundry is not spun after the final rinse. The water will drain away and the machine will go straight into the anti-crease stage.

Delay start


You cannot use the delay start function if your machine is fitted with a payment system.

With delay start you can choose when you want the programme to end. The start of a programme can be delayed from 30 minutes up to a maximum of 24 hours, allowing you to make use of night-time economy electricity rates, for example.

The current time of day needs to have been set for delay start to work correctly.


To select delay start

- Select the programme you want and then press the **⌚** button.

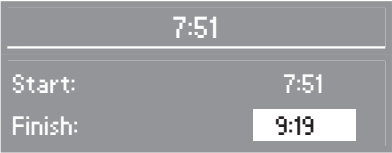

The display shows the current time of day and the time the programme is due to end.

- Use the **+** button to select the time you want the programme to end at.

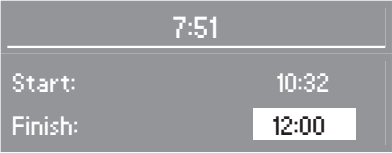

The first press on the button will adjust the programme end time to the next full or half hour. Each subsequent press on the button will delay the programme end time by 30 minutes.

Use the **-** button to shorten the time if you have chosen too long a time.

- Confirm the programme end time by pressing the **OK** button.

To begin delay start

- Press the **Start** button.



The display will show when the programme will be started in hours and minutes.

To alter delay start

- Press the **⌚** button.
- Use the **+** and **-** buttons to alter the time you want the programme to end at.
- Press the **OK** button to confirm.













To cancel delay start

- Press the **⌚** button.
- Use the **-** button to bring the end time of the programme forward until it is the same as the current time of day.
- Press the **OK** button to confirm.



The programme will now start immediately.

The actual load size can only be determined accurately by the machine once the programme has started. The programme end time may, therefore, be a bit earlier than first indicated.

Programme chart

Cottons 30°C to 95°C		   
Fabric type	Cottons, linens or cotton mix fabrics.	
Notes	<ul style="list-style-type: none"> – Only use Cottons 95°C for very heavily soiled laundry. – For dark coloured fabrics use a detergent for coloured fabrics, or liquid detergent. 	
Detergent	Powder detergent, detergent for coloured fabrics, liquid detergent, tablet detergent and liquid tab detergent.	
Max. load	6.5 kg	
Minimum iron 30°C to 60°C		     
Fabric type	Synthetics, mixed fibres and easy care cottons.	
Detergent	Powder detergent, detergent for coloured fabrics, liquid detergent, detergent for delicates, tablet detergent and liquid tab detergent.	
Max. load	3.5 kg	
Delicates cold to 40°C		 
Fabric type	For delicate garments made of synthetic fibres, mixed fibres, rayon and easy care cottons.	
Note	– Use the woollens programme for any textiles which contain wool.	
Detergent	Liquid detergent for delicates.	
Max. load	2.5 kg	
Towelling 60°C to 40°C		
Note	For dark coloured fabrics use a detergent for coloured fabrics.	
Detergent	Powder detergent, detergent for coloured fabrics, liquid detergent, tablet detergent and liquid tab detergent.	
Max. load	5.5 kg	
Table linen 75°C to 60°C		
Item	Cotton, linen and mixed fibre table linen, such as tablecloths and napkins.	
Note	Select <i>Pre-wash</i> for stubborn soiling. Use a detergent containing enzymes for the pre-wash.	
Detergent	Powder detergent, detergent for coloured fabrics, liquid detergent, tablet detergent and liquid tab detergent.	
Max. load	6.5 kg	



Programme chart

Bed linen 60°C to 40°C	
Item	Bed linen made from cotton or cotton mix fabrics.
Note	For dark coloured fabrics use a detergent for coloured fabrics.
Detergent	Powder detergent, detergent for coloured fabrics, liquid detergent, detergent for delicates, tablet detergent and liquid tab detergent.
Max. load	6.5 kg
Curtains cold to 40°C	
Item	Curtains, including net curtains, specified as machine-washable by the manufacturer.
Note	Select <i>Without spin</i> for curtains which crease easily.
Detergent	Powder detergent, detergent for coloured fabrics, liquid detergent, detergent for delicates, tablet detergent and liquid tab detergent.
Max. load	3.0 kg
Denim cold to 40°C	
Notes	<ul style="list-style-type: none"> – Wash denim inside out. – Denim often contains excess dye and will run during the first few washes. Wash light and dark coloured items separately.
Detergent	Liquid detergent for coloured fabrics
Max. load	3.5 kg
Dark garments cold to 40°C	
Item	Dark garments made from cotton or mixed fibres.
Note	Wash inside out.
Detergent	Liquid detergent for coloured fabrics
Max. load	3.0 kg
Woollens  cold to 30°C 	
Fabric type	Machine-washable or hand-washable wool or wool blend fabrics. If the care label does not specify a temperature, wash using the cold setting.
Detergent	Liquid detergent for machine-washable woollens
Max. load	2.5 kg
Drain/Spin	
Note	Drain only: Select <i>Without spin</i> . For spinning fabrics. Please make sure you select the appropriate spin speed.
Max. load	6.5 kg

Programme chart

Special programmes	
Quick wash 40°C	
Fabric type	Very lightly soiled fabrics which can be washed in the <i>Cottons</i> programme.
Detergent	Powder detergent, detergent for coloured fabrics, liquid detergent, detergent for delicates.
Max. load	3.5 kg
Shirts 60°C to 40°C	
Item	Shirts and blouses.
Note	– Pre-treat collars and cuffs if necessary.
Detergent	Powder detergent, detergent for coloured fabrics, liquid detergent, detergent for delicates, tablet detergent and liquid tab detergent.
Max. load	2.5 kg
Starch	
Note	The laundry (table cloths, napkins, overalls) should be washed but not treated with fabric conditioner.
Starching agent	Liquid and powder starch formulations
Max. load	6.5 kg
Pillows 95°C to 40°C	
Item	Washable pillows with feather, down or synthetic fillings.
Notes	– Please observe the instructions on the wash care label. – Use a liquid detergent.
Max. load	2 pillows (40 x 80 cm) or 1 pillow (80 x 80 cm)
Outerwear cold to 40°C	
Item	Outerwear made from micro-fibres such as Gore-Tex®, Sympatex®, Windstopper® etc.
Notes	– Zip up jackets before washing. – Use a specialist detergent. Do not use fabric conditioner.
Max. load	3.0 kg

Programme chart

Proofing 40°C to 30°C	
Item	For treating microfibre fabrics, ski wear, fine closeweave cotton garments (poplin) or tablecloths to provide a water and dirt resistant finish.
Notes	<ul style="list-style-type: none">– The items should be freshly washed and spun or dried before proofing.– For best results, the items should be heat-treated afterwards, either in a tumble dryer or by ironing.
Proofing agent	<ul style="list-style-type: none">– Only use proofing agents which are stated by the manufacturer as being "suitable for use on membrane textiles" as these consist of fluorochemical compounds. Do not use proofing agents which contain paraffin.– Add proofing agents to compartment . The container for liquid agent must be placed in compartment .
Max. load	3.0 kg
Separate rinse	
Item	For items which only require rinsing and spinning.
Max. load	6.5 kg

Additional special programmes can be selected from the *Settings/Supervisor level* menu, if this has been activated by a Miele service technician or authorised dealer.

Intensive wash 60°C to 40°C

Item	Cottons, linens or cotton mix fabrics.
Detergent	Powder detergent, detergent for coloured fabrics, liquid detergent, tablet detergent and liquid tab detergent.
Max. load	6.5 kg

Flour 95°C to 40°C

Item	Overalls, jackets, hats, cloths made from cotton or mixed fibres.
Note	A pre-wash is carried out automatically. Use a detergent with enzymes for the pre-wash. Select the <i>Flour +</i> programme for heavy soiling.
Detergent	Powder detergent, detergent for coloured fabrics, liquid detergent, tablet detergent and liquid tab detergent.
Max. load	6.5 kg


Grease and fat 95°C to 40°C

Item	Overalls, jackets, hats, cloths made from cotton or mixed fibres.
Note	Use a detergent with enzymes for the pre-wash. Select the <i>Grease and fat +</i> programme for heavy soiling.
Detergent	Powder detergent, detergent for coloured fabrics, liquid detergent, tablet detergent and liquid tab detergent.
Max. load	6.5 kg

Towels short 40°C

Item	Lightly soiled cotton towelling.
Note	For dark coloured fabrics use a detergent for coloured fabrics.
Detergent	Powder detergent, detergent for coloured fabrics, liquid detergent.
Max. load	5.5 kg

Programme chart

Towels + 60°C to 40°C	
Item	Heavily soiled cotton towelling.
Note	For dark coloured fabrics use a detergent for coloured fabrics.
Detergent	Powder detergent, detergent for coloured fabrics, liquid detergent, tablet detergent and liquid tab detergent.
Max. load	5.5 kg
Capes 30°C	
Fabric type	Lightly soiled capes made from synthetic fibres.
Detergent	Liquid detergent for delicates.
Max. load	3.0 kg
Chem. Therm. Dis. 20 min 60°C	
Fabric type	Workwear or items requiring disinfection, which are suitable for the disinfection process. Sort according to colour.
Detergent	An approved disinfecting agent.
Max. load	6.5 kg
Hygiene	
<p><i>Hygiene</i> will appear in the display if the last programme selected used a temperature below 55°C or the <i>Drain/Spin</i> programme is selected.</p> <p>To select the hygiene programme:</p> <ul style="list-style-type: none"> – do not put any laundry into the drum, add a little detergent to compartment  and start the programme, or – select a wash programme with a temperature of more than 60°C. <p>Programmes will still run normally even if you do not carry out either of the above.</p>	

Programme sequence







	Main wash		Rinses		Spinning	
	Water level	Wash rhythm	Water level	Rinses	Spinning	Final spin
Cottons		Ⓐ		2	✓	✓
Minimum iron		Ⓐ		2	✓	✓
Delicates		Ⓑ		2	–	✓
Towelling		Ⓐ		2	✓	✓
Table linen		Ⓐ		2	✓	✓
Bed linen		Ⓐ		2	✓	✓
Curtains ¹⁾		Ⓐ		3	–	✓
Denim		Ⓐ		3	–	✓
Dark garments		Ⓐ		3	✓	✓
Woollens		Ⓒ		2	✓	✓
Quick wash		Ⓐ		2	✓	✓
Shirts		Ⓐ		2	–	✓
Starch	–	–		1	–	✓
Pillows ²⁾		Ⓐ		3	–	✓
Outerwear		Ⓑ		3	✓ ³⁾	✓
Proofing	–	–		1	✓	✓
Separate rinse	–	–		2	–	✓
Intensive wash*		Ⓐ		2	✓	✓
Flour*		Ⓐ		2-3 ⁴⁾	✓	✓
Grease and fat*		Ⓐ		3	✓	✓
Towels*		Ⓐ		2	✓	✓
Capes*		Ⓑ		2	–	✓
Chem.Therm. Dis.*		Ⓐ		3	✓	✓

* = These programmes can be selected from the *Settings/Supervisor level* menu, if this has been activated by a Miele service technician or authorised dealer.

See the following pages for the meanings of the symbols and more information about the programme sequences.-

Programme sequence

Symbols:

-  = Low water level
 = Medium water level
 = High water level
 = Normal wash rhythm
 = Gentle action
 = Woollens

This machine has fully electronic controls with automatic load recognition. It takes in the right amount of water required for the programme depending on the amount of laundry and its absorbency rate. This means that programme cycles and durations can vary.


The programme sequences outlined in the chart are based on the basic programme with a full load. Extra options which can be selected have not been taken into account.

The programme sequence display shows the stage the programme has reached.

Special features in the programme sequences:

Anti-crease:

At the end of every programme, with the exception of the *Woollens* programme, the drum continues to turn at intervals for up to 30 minutes to help prevent creasing. The door can be opened and laundry removed at any time during the anti-crease phase.

- 1) Pre-rinse: A pre-rinse without detergent is carried out automatically to remove dust.
- 2) Run-up to spin: A run-up to spin is carried out before the wash process begins to deflate air from the pillows. Subsequent water intake for the main wash is through compartment .
- 3) In the *Outerwear* programme, laundry is only spun after the main wash.
- 4) A third rinse is carried out in the *Flour* + programme.

Garment care label symbols

Washing

The figure quoted in the bucket is the maximum temperature the garment can be washed at. The number of bars under the symbol indicate the level of agitation permitted.



No bar under the symbol:
= normal agitation



One bar under the symbol:
= reduced agitation



Two bars under the symbol:
= much reduced agitation



Hand wash (if no temperature is specified use the lowest temperature or cold)



Do not wash

Drying

The number of dots indicates the drying temperature



Normal temperature



Low temperature



Do not tumble dry

Ironing

The number of dots indicates the ironing temperature



Hot iron (max sole plate temp. approx. 200°C)



Medium hot iron (max sole plate temp. approx. 150°C)



Cool iron (max sole plate temp. approx. 110°C). Do not steam iron garments carrying this symbol.



Do not iron

Professional cleaning



Dry clean only. The letters indicate the type of cleaning agent required.



Professional Wet Clean only



Do not dry clean

Bleaching



Any oxidising bleaching agent can be used



Only use an oxygen based bleach or a non-chlorine bleach



Do not bleach

Changing the programme sequence

If your machine is fitted with a payment system, the programme will lock after 3 minutes and it is then no longer possible to cancel or change it.

Cancelling a programme

You can cancel a programme at any time after it has started.

- Turn the programme selector to *Finish*.

The suds will be pumped away and the programme is cancelled.

- Press the *Door* button.
- Remove the laundry
or
- Close the door and start a different programme.

Altering a programme

Changing a wash programme

After the start of a programme it is no longer possible to select a different programme.

You will need to cancel the current programme before you can select a new one.

Altering the temperature

With some programmes it is possible to select a different temperature up to 5 minutes after the programme has started.

- Press the *OK* button to highlight the temperature. You can use the **+** or **–** button to alter the temperature. Confirm with *OK*.

Altering the spin speed

- Press the *OK* button repeatedly until the spin speed is highlighted. You can use the **–** and **+** buttons to change the spin speed up until the final spin begins.

Pre-wash

It is not possible to select or de-select *Pre-wash*

Changing the programme sequence

Adding or removing laundry after a programme has started

In some programmes you can add or remove laundry after the programme has started:

- Press the *Door* button to open the drum door.
- Add or remove items.
- Close the drum door.

The programme will continue automatically.

Please note:

Once a programme has started the machine cannot recognise any adjustment to the load.

For this reason, if laundry is added or removed after the start of a programme, the machine will always complete the programme cycle assuming a full load which can lead to an increase in the programme duration shown in the display.

The door cannot be opened, if:

- the suds temperature is above **55°C**.
- the water is above a certain level.
- the programme has reached the *Final spin* stage.
- the programme is locked because the machine is fitted with a payment system.



Detergent

All modern detergents produced for automatic washing machines are suitable, including liquid, compact (concentrated), tablets and special application detergents. Use dispensing aids, e.g. balls, if these are supplied with the detergent. Tablets are suitable for full loads but note that it may be impractical to reduce tablets by proportion to suit smaller loads. Some tablets do not dissolve as rapidly as others and may not be suitable for programmes with short durations.

Woollens and knitwear containing wool mixtures and hand-washable garments should be washed using a detergent specifically designed for washing woollens.

Instructions for use and recommended amounts for a full load are given on the detergent packaging.

Liquid detergent should be dispensed using a ball provided by the manufacturer for programmes without a pre-wash.

When using liquid detergent for programmes with a pre-wash you will need to purchase a special container from the Miele Spare Parts Department which sits in the main wash compartment  of the detergent dispenser drawer. Add liquid detergent to this container for the main wash and to compartment  for the pre-wash.

The right amount to dispense will depend on the following:

- The soiling level of the laundry
 - Lightly soiled No visible dirt or stains. Possibly slight body odour.
 - Normally soiled Visibly dirty and/or just a few slight stains.
 - Heavily soiled Stains and soiling clearly visible.
- The water hardness level. Check with your local water supplier if you do not know the hardness level in your area.
- The quantity of the laundry (add the recommended amount of detergent).


Water softeners

A water softener can be used to cut down on the use of detergents in hard water areas. Dispense according to the amount specified on the packaging. First add detergent and then the water softener.

Use a quantity of detergent as for soft water.

Miele do not recommend connecting the machine to an on-site water softener.

Washing with several components

If you wash using several components (e.g. special application detergents), we recommend always dispensing the agents into compartment  in the following order:

1. Detergent
2. Water softeners
3. Stain remover

This way the agents are distributed more evenly.

External dispensing system

This machine is suitable for connecting to an external dispensing system. A conversion kit is required which must be fitted by a Miele approved service technician.

Detergent


Fabric conditioners or liquid starch

Fabric conditioners make garments soft to handle and help prevent static cling when tumble drying.

Starch stiffens and gives body to items of laundry, e.g. shirts, tablecloths and bed linen.

- Dispense according to the amount specified on the packaging.

Automatic dispensing of fabric conditioner or liquid starch to laundry at the end of a programme

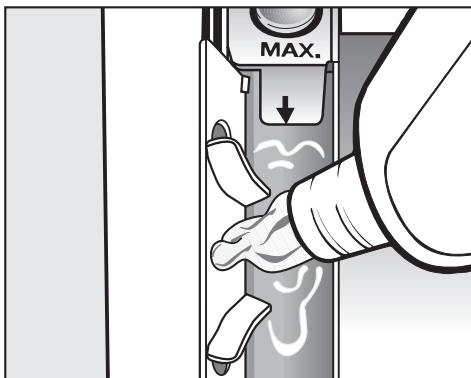

- Add the fabric conditioner or liquid starch to compartment ⌘. **Do not exceed the maximum level mark.**

It will be automatically dispensed in the last rinse. At the end of the programme a small amount of water remains in the fabric conditioner compartment ⌘.

If starching frequently, clean the dispenser compartment and especially the siphon tube and conditioner channel regularly. See "Cleaning the detergent dispenser drawer". Do not add starch formulations or viscous liquid starch to the ⌘ compartment as it will clog up.

Adding fabric conditioner separately


- Add fabric conditioner to compartment ⌘.
- Select the *Starch* programme.
- Press the *Start* button.

Adding starch separately

- Prepare the starch solution in accordance with manufacturer's instructions on the packaging.
- Add the starch to compartment ⌘.
- Select the *Starch* programme.
- Press the *Start* button.

Colour run and dye removers / dyes

- Do not use colour run or dye removers in this machine.
- Dyes suitable for use in a washing machine can be used. However, please note that the salt used in the dyeing process can cause corrosion to stainless steel components in the machine if you dye frequently. Always observe the manufacturer's instructions carefully.

 Disconnect the machine from the mains electricity supply.


- Clean the casing with a mild non-abrasive detergent or soap and water. Wipe dry with a soft cloth.
- Clean the fascia panel with a damp cloth and wipe dry with a soft cloth.
- The drum and any other stainless steel components can be cleaned using a suitable proprietary stainless-steel cleaning agent following the manufacturer's instructions on the packaging.

E-Cloth

A microfibre "E-Cloth" is available from the Miele UK Spare Parts Department which is suitable for cleaning surfaces such as stainless steel, glass, plastic and chrome without the use of chemicals.

Extra cleaning


Carry out a hot wash (70°C or above) with powder detergent approx. every 6 weeks to help prevent deposits building up in the machine. These can occur when washing is mainly done at low temperatures and also lead to unpleasant smells.

 Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaning agents. These might damage plastic surfaces and other components because of the chemicals they contain.


Cleaning and care

Cleaning the detergent dispenser drawer

Remove detergent residues regularly.

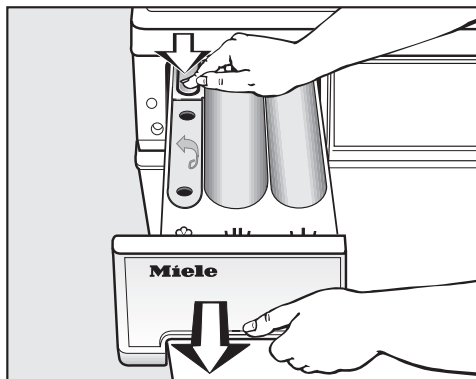


- Pull out the detergent dispenser drawer until a resistance is felt. Press down the release catch and at the same time pull the drawer right out of the machine.
- Clean the detergent drawer with warm water.

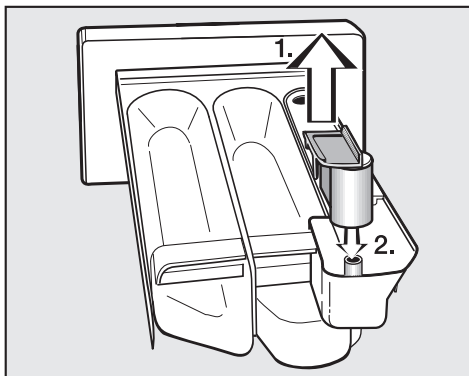

- Clean the siphon.

1. Remove the siphon from compartment ☼ and rinse under warm running water. Clean the siphon tube in the same way.
2. Replace the siphon.


 Do not use a hose to wash the machine down.

Cleaning the water inlet filters

The machine has two filters to protect the water inlet valve. These filters should be checked every six months or so, or more often if there are frequent interruptions to the external water supply.

To clean the filter in the inlet hose:

- First turn off the stopcock.
- Unscrew the threaded union connecting the free end of the inlet hose to the stopcock.

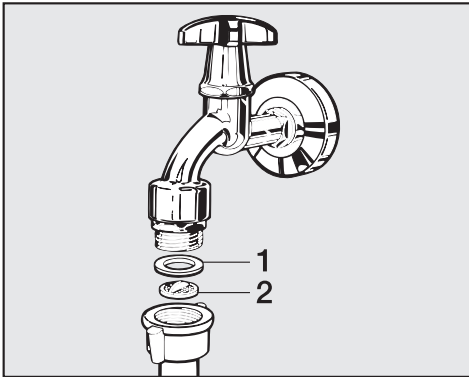


- Remove the rubber seal **1** from the recess.
- Using pointed pliers, take hold of the plastic filter bar **2** and remove.
- Clean the plastic filter.
- Put the filter and seal back in the reverse order and reconnect the hose.

Turn on the stopcock and check the connection is watertight. If water drips out, tighten the connection.

To clean the filter in the water inlet valve:

- Using pliers, carefully loosen the ribbed plastic nut on the inlet valve and unscrew.

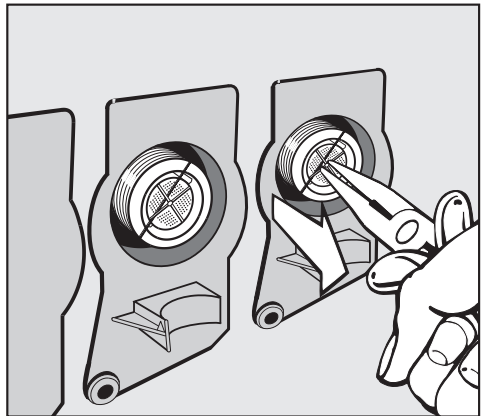


- Use pointed nose pliers to withdraw the plastic filter by the bar (see illustration). Clean, put back and secure.

The two filters **must** be put back in place after cleaning.

Problem solving guide





What to do, if . . .

With the help of the following notes, minor faults in the performance of the machine, some of which may result from incorrect operation, can be put right without contacting the Service Department.

 Repair work to electrical appliances should only be carried out by a suitably qualified person in accordance with local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.




The programme does not start		
Problem	Possible cause	Remedy
The display remains dark and the programme selector is not lit up.	There is no power to the machine.	Check whether <ul style="list-style-type: none">– the electricity supply to the machine is switched on.– the fuse or circuit breaker has tripped.
The programme does not start when Drain/Spin has been selected.	The machine has not been prepared for using for the first time.	Prepare the machine as described in <i>Before using for the first time</i> .
The display is dark.	The display has switched off automatically to save energy (Standby mode).	Press a button. Standby comes to an end.

Fault messages in the display


Message in the display	Possible cause	Remedy ❶
 Drainage fault	<ul style="list-style-type: none"> – The water outlet is blocked or restricted. – The drain hose has been fixed too high. 	<ul style="list-style-type: none"> – Clean the drain filter and the drain pump. – The maximum drain height is 1 m.
 Water inlet fault	The water inlet is blocked or restricted.	Check whether <ul style="list-style-type: none"> – the stopcock is opened wide enough. – the inlet hose is kinked.
 Drum lighting fault	The drum lighting is not locked in position.	Check that the drum lighting is fitted correctly.
 Technical fault	There is a fault.	Start the programme again. If the fault message appears again, contact the Service Department.

❶ To switch off the fault message, press the *OK* button.

Problem solving guide

General problems		
Problem	Possible cause	Remedy
The machine shakes during the spin cycle.	The machine feet are not level.	Level the machine (see "Installation").
The pump makes strange noises.	This is not a fault! These noises occur at the end of a pump sequence as a normal part of the operation.	
Large amounts of detergent residue remain in the detergent dispenser drawer.	The water supply pressure is too low.	Clean the filters in the water inlets.
	Powder detergent used in conjunction with water softeners tends to become sticky.	In future, add washing powder into the dispenser drawer first, and then add the water softener.
Fabric conditioner is not completely dispensed or too much water remains in the  compartment.	The siphon tube is not correctly positioned or is clogged up.	Clean the siphon, (see "Cleaning and care - Cleaning the detergent dispenser drawer").
The display is in a different language.	A different language has been selected in "Settings  "Language  .	Set the language you want. The flag symbol will guide you.

An unsatisfactory wash result

Problem	Possible cause	Remedy
Liquid detergent does not give the required result.	Liquid detergents usually contain no bleaching agents. They do not remove fruit, coffee and tea stains.	<ul style="list-style-type: none"> – Use a general purpose detergent containing a bleaching agent. – Pour stain removers into compartment  of the dispenser drawer and liquid detergent into a dispenser ball. – Never put stain removers and liquid detergent together in the dispenser drawer.
Grey, greasy particles cling to washed laundry.	Insufficient amounts of detergent were used to break down the particles of grease in heavily soiled laundry.	<ul style="list-style-type: none"> – Use more detergent. – Before washing the next load run a Cottons 95°C programme with powder detergent but without a load.
White residues which look like powder detergent are seen on dark textiles after washing.	The detergent contained compounds (zeolites) to aid water softening which are not soluble in water. They have ended up on the laundry.	<ul style="list-style-type: none"> – Try and brush off the residues with a soft brush once the laundry is dry. – Wash dark textiles using a detergent which contains no zeolites. Liquid detergents usually contain no zeolites.
Textiles have particularly greasy soiling.	<ul style="list-style-type: none"> – Select a programme with pre-wash. <p>The use of heavy-duty detergent is recommended in the main wash for very heavily soiled work clothing. Consult detergent producers for advice.</p>	


Problem solving guide

The drum door cannot be opened by pressing the <i>Door</i> button	
Possible cause	Remedy
There is no power to the machine.	Check whether <ul style="list-style-type: none">– the electricity supply to the machine is switched on.– the fuse or circuit breaker has tripped.
Power cut.	Open the drum door as described in the next section.
The door was not correctly engaged.	Press hard against the lock side of the drum door and then press the <i>Door</i> button.
There is still water in the drum and the machine is unable to drain.	The drainage system may be blocked. Clean the drainage system as described in the next section.
For safety reasons the drum door cannot be opened if the suds temperature is higher than 55°C.	


Opening the drum door in the event of a blocked drain outlet and/or power failure

⚠ Disconnect the machine from the mains electricity supply.

There is a lever behind the detergent drawer fascia panel.

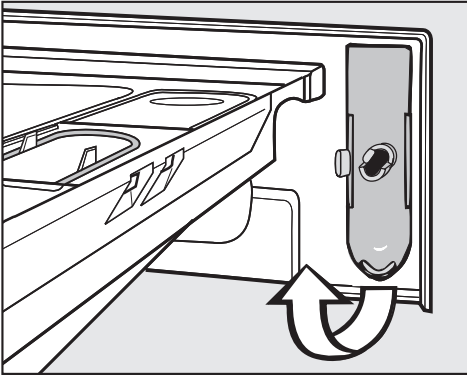

- Remove the lever.

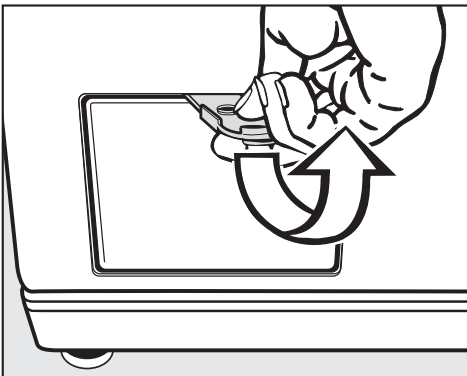

- Use it to open the access flap.

... Machines with a drain pump

If the drain outlet is clogged, a large amount of water will be retained in the machine (**up to 30 litres**).

⚠ Caution: if laundry has been washed at a high temperature, water draining out of the machine will still be hot. Danger of scalding!

- Place a suitable container under the access flap.

When draining water from the machine, do **not** unscrew the drain filter completely or take it right out.




- Unscrew the drain filter lid until water runs out.

To interrupt the flow of water:


- Tighten the drain filter back up again.

Problem solving guide

Once the flow of water ceases:

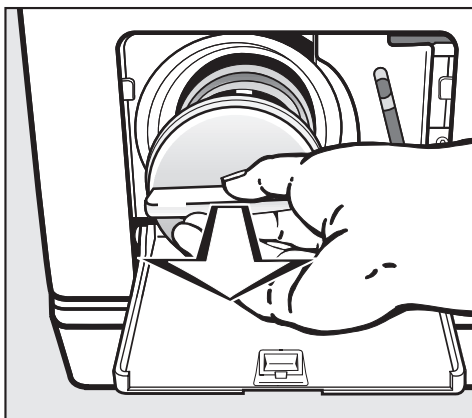

- Remove the drain filter completely.
- Clean it thoroughly.

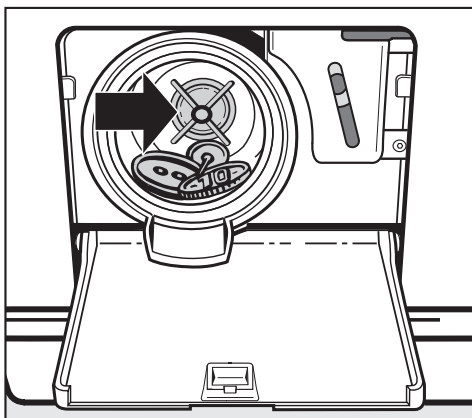


- Remove any foreign objects (e.g. buttons, coins, etc.) and fluff from the filter housing. Turn the impeller by hand to check that it rotates freely.
- Put the drain filter back in place and secure.

⚠ Make sure the drain filter is securely tightened. Otherwise there is a risk of water leakage during use.


Opening the drum door

⚠ Always make sure that the drum is stationary before reaching into the machine to remove laundry. Reaching into a moving drum is extremely dangerous.

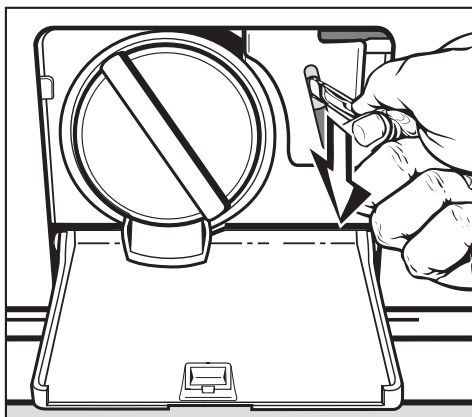


- Use a spoon handle to pull the emergency release downwards (see arrow). The drum door will open.


... Machines with a drain valve

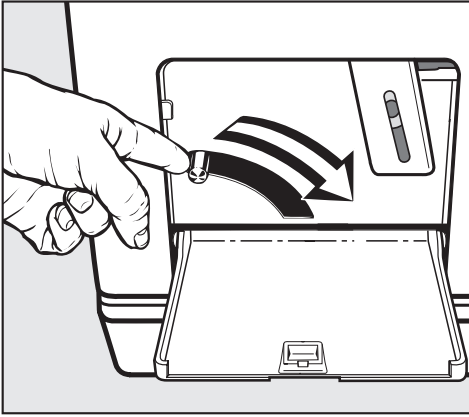

- Push the emergency drain lever downwards (see illustration) and hold until no more water runs out.

Opening the drum door

 Always make sure that the drum is stationary before reaching into the machine to remove laundry. Reaching into a moving drum is extremely dangerous.

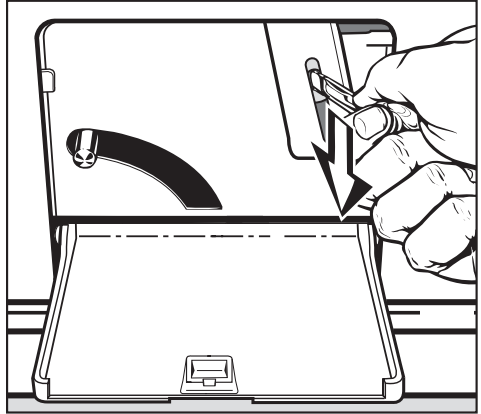


- Use a spoon handle to pull the emergency release downwards (see arrow). The drum door will open.

Problem solving guide


Changing the lamp for the drum lighting

The machine will operate with no lighting in place or if the lighting is faulty.

- Open the drum door.
- Now disconnect the machine from the electricity supply, see "Warning and Safety instructions".
- Remove the yellow lever from behind the detergent drawer fascia panel.

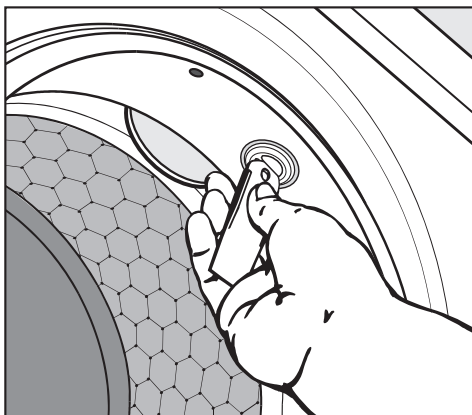

- Insert the lever in the slot provided in the drum lighting unit (see illustration) and turn anti-clockwise (a quarter turn) until you feel a resistance.
- Pull out the loosened unit with your fingers.

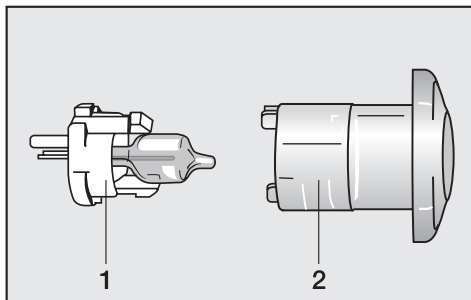

- Press the two prongs to separate the plastic holder **1** from the protective cover **2**.
- Remove the faulty lamp from the plastic holder.

The new lamp must be of the same type (G4) with a maximum power output of 5 watts/12 volts.

The lamps are available from an electrical retailer, your Miele Dealer or from the Miele Spare Parts Department.


- Insert the new lamp into the plastic holder.
- Carefully fit the plastic holder and the protective cover together.
- Insert the lighting unit into the socket and turn it clockwise to secure it.

It is absolutely essential for the correct functioning of the washer-extractor that the drum lighting unit is fitted correctly in position.

In the event of any faults which you cannot remedy yourself, please contact:

- your Miele dealer, or
- the Miele Service Department (see back cover for contact details).

When contacting your Dealer or the Service Department, please quote the model and serial number of your machine, both of which are shown on the data plate visible above the porthole glass when the drum door is open.

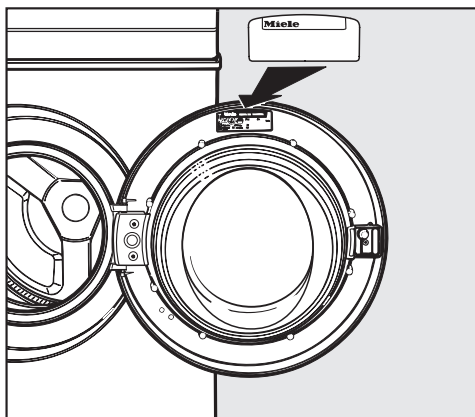

PC / Optical interface

The indicator or check light marked **PC** on the fascia panel is the interface used by Miele service technicians during servicing work for testing purposes and for updating the machine's programme data.


Optional accessories

Optional accessories for this washer-extractor are available from your Miele Dealer or from the Miele Spare Parts Department.

Please note that telephone calls may be monitored and recorded for training purposes.


Installation and connection

Front view

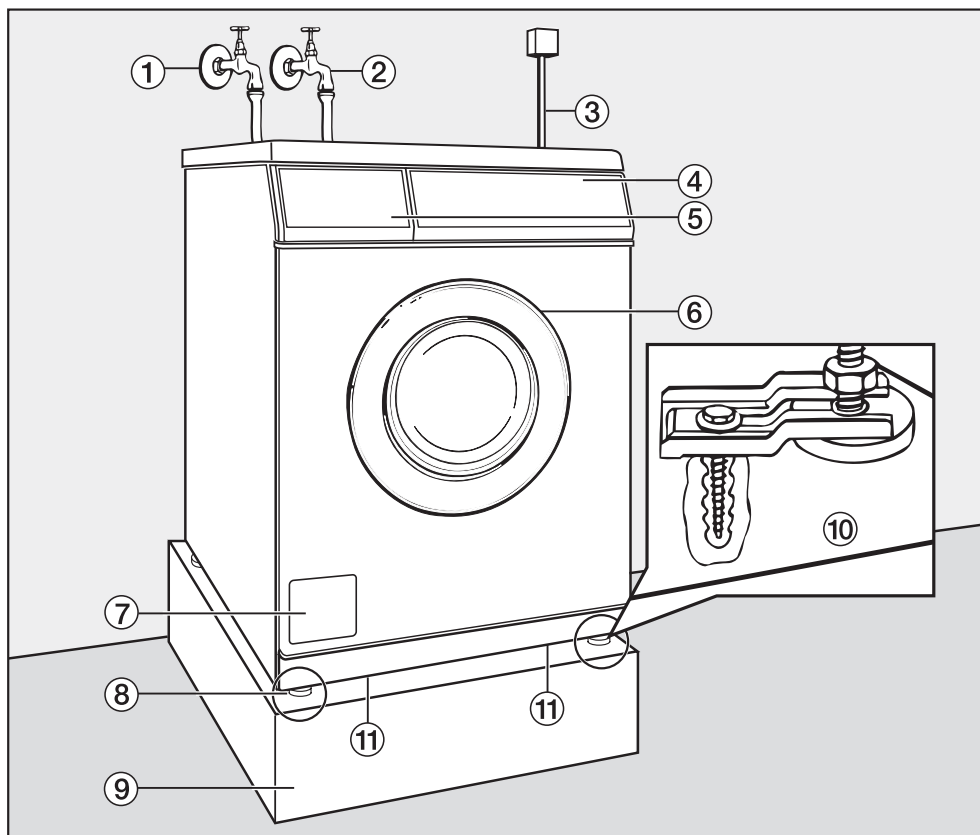

- ① Inlet hose (cold water)
- ② Inlet hose (hot water)
- ③ Mains connection cable
- ④ Control panel
- ⑤ Detergent dispenser drawer
- ⑥ Drum door
- ⑦ Access to drain filter, drain pump or drain valve and emergency release
- ⑧ Height adjustable feet
- ⑨ Plinth
- ⑩ Clamps (for installing on a concrete plinth)
- ⑪ Handle recesses for moving the machine

Rear view

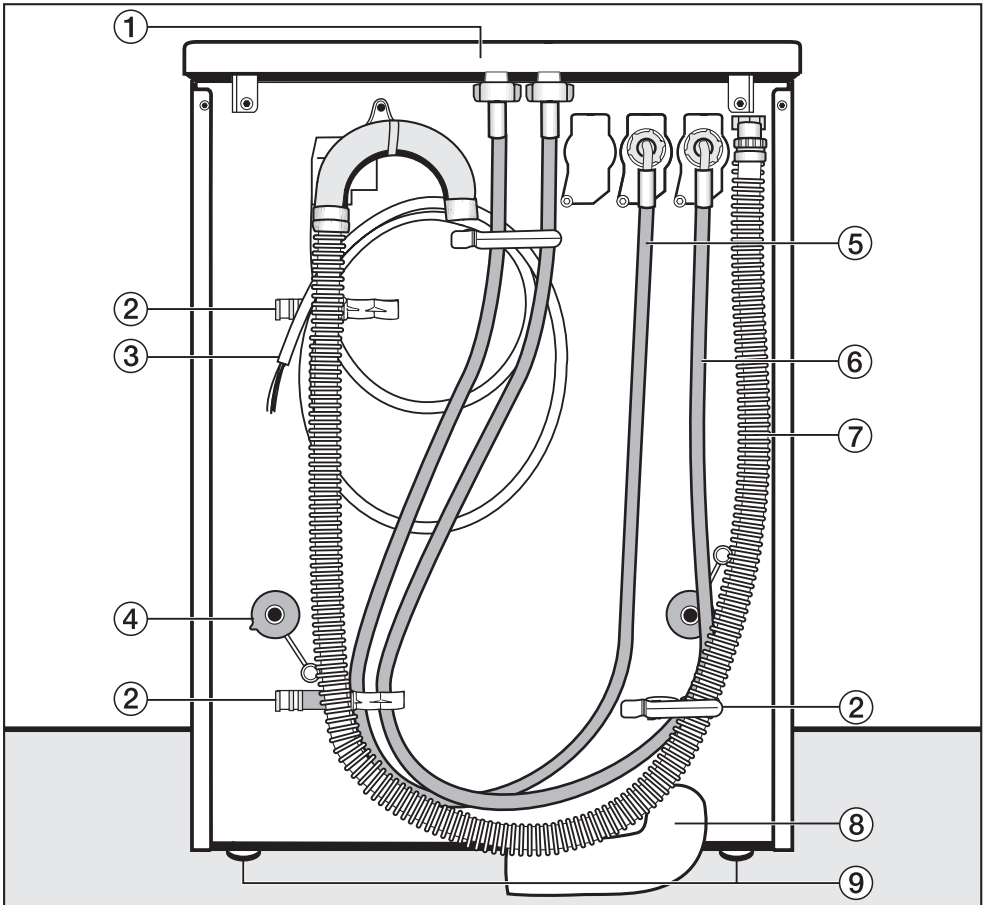

① Protruding lid for holding when moving the machine

② Holder for:

- Inlet hose
- Drain hose
- Transit bars when removed

③ Mains connection cable

④ Transit bar covers

⑤ Inlet hose (cold water)

⑥ Inlet hose (hot water)

⑦ Drain hose (for drain pump)

⑧ Drain hose (for drain valve)

⑨ Height adjustable feet

Installation and connection

The washer-extractor is not suitable for building under.


Installation on a raised plinth

The machine can be installed on a steel plinth base (available open or closed) or on a concrete plinth.

- Secure the front feet of the washer-extractor with the clamps supplied when installing on a concrete plinth.
- Follow the fitting instructions supplied.

Washer-dryer stack

A Miele tumble dryer can be stacked on top of this washer-extractor. The appropriate stacking kit* (WTV) is required.

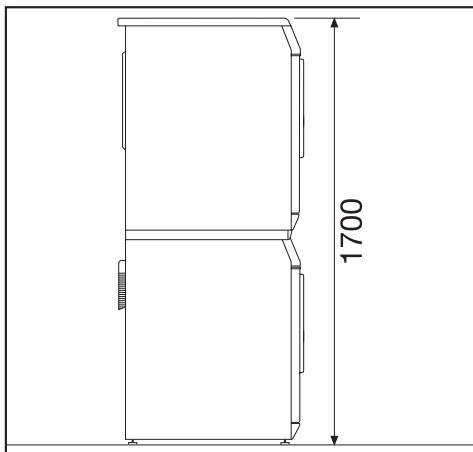

The stacking kit must be fitted by a Miele authorised service technician.

Replacing the lid

If the lid has been removed in order to fit the washer-dryer stack, ensure that, if the lid is ever replaced, it fits securely into the rear holders. Otherwise, it is not properly secure for transport.

Payment system

This washer-extractor can be fitted with a payment system.*

This must be connected and programmed by a Miele service technician or authorised dealer.

Coins / tokens must be removed from the payment system regularly, otherwise it will become blocked.

Do not use devices to turn the machine off automatically, (e.g. automatic timers).

* All items marked * are available to order from your Miele Dealer or from the Miele Spare Parts Department.

Installation surface

⚠ Do not install the machine near or directly above an open gully or floor drain. Moisture from these can penetrate the machine and damage the electric components.

A concrete floor is the most suitable installation surface, being far less prone to vibration during the spin cycle than wooden floorboards or a carpeted surface.

⚠ If the machine is installed on an on-site concrete or brick plinth, it **must** be secured using the clamps supplied with the machine. Otherwise there is the danger of the machine moving about.

- The machine must be level and securely positioned.
- To avoid vibrations during spinning, the machine should not be installed on soft floor coverings.

If installing on a wooden joist floor:

- We recommend a plywood base (at least 70 x 60 x 3 cm) The base should span several joists and be bolted to the joists and not only to the floorboards. Check for the presence of pipes and cables first.

If possible, install the machine in a corner, as this is usually the most stable part of the floor.

Installing the washer-extractor


To manoeuvre the machine out of its packing case to its installation site, hold it by the edge of the lid where it protrudes to the rear of the machine as well as by the handle recesses at the front.

Please note:

- Do not lift the machine by the drum door.

⚠ Ensure that the machine feet and the floor are dry to prevent the machine from slipping during the spin cycle.


Removing the transit fittings

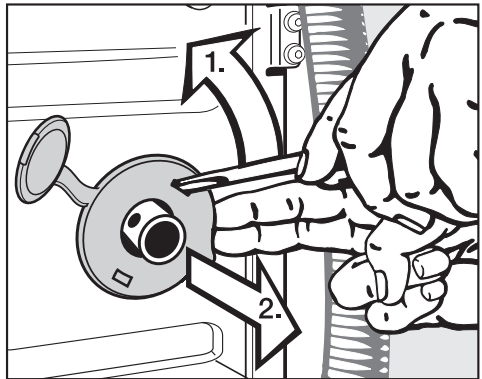


- To remove the left and right covers

1. Use a screwdriver to prise out the cover as illustrated.
2. Pull the cover forwards to remove.


Installation and connection

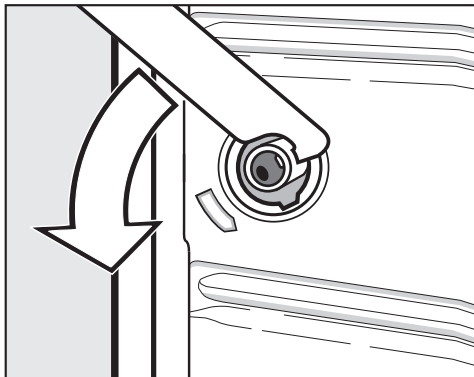


- Using the spanner supplied turn the left-hand transit bar 90°, then

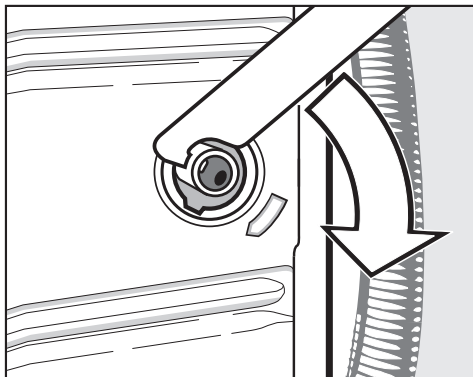

- Turn the right-hand transit bar 90°, then

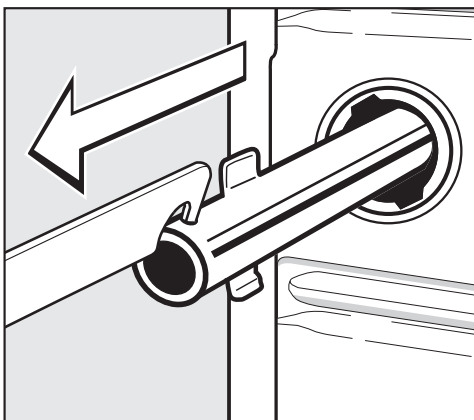


- withdraw the transit bar.

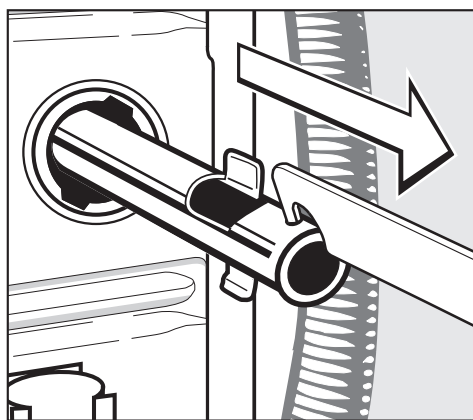

- withdraw the transit bar.




 The machine must not be moved without the transit fittings in place. Store them as shown or keep them in a safe place for future use. They must be re-fitted if the machine is to be moved again (e.g. when moving house).

Re-fitting the transit bars

Re-fitting is carried out by reversing the procedure.

- Fit the covers on to the two holes. Then plug the holes as shown with the caps.

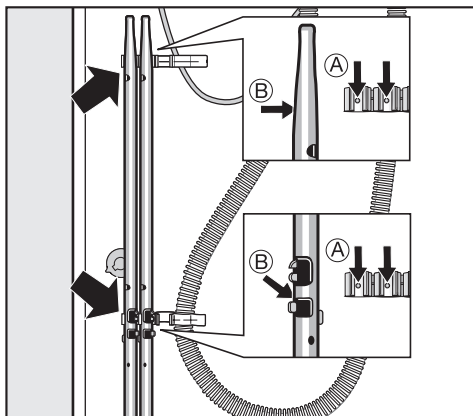


- Secure the transit bars to the back of the washer-extractor. Make sure that holes (B) are fitted over retainers (A).

Installation and connection

Levelling the machine


The machine must stand perfectly level on all four feet to ensure safe and proper operation.

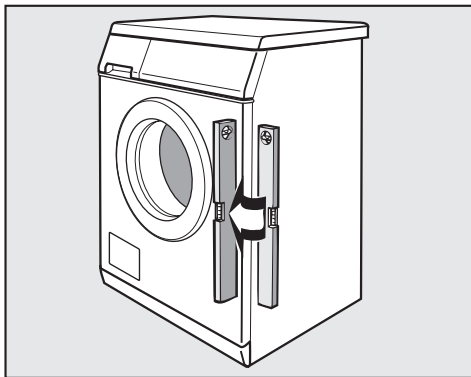


Incorrect installation may increase electricity and water consumption and may cause the machine to move about.

Screwing out and adjusting the feet

The four adjustable screw feet are used to level the machine. All four feet are screwed in when the machine is delivered.

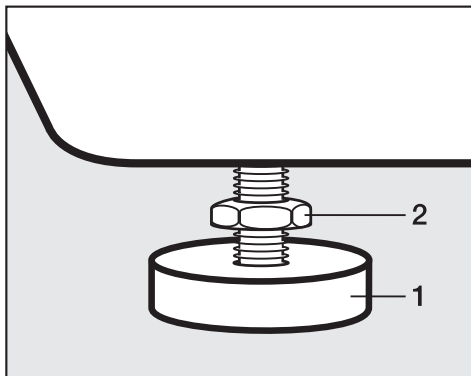

- Using the spanner supplied turn counter nut **2** in a clockwise direction. Then turn counter nut **2** together with foot **1** to unscrew.
- Use a spirit level to check the machine is standing level.
- Hold foot **1** securely with a pipe wrench. Turn counter nut **2** again using the spanner supplied until it sits firmly up against the housing.

 All four counternuts must sit firmly up against the housing. Please also check this for the feet which did not need adjustment. Otherwise there is the danger of the machine moving about.

Plumbing

This machine is approved for all UK applications as suitable for category 5. The product is listed in the WRAS regulations advisory scheme directory and is suitable for direct connection to mains drinking water. No special plumbing arrangements e.g. break tanks are required.

Two Water Council approved double check valves are supplied in the accessories pack provided with this machine. They should be fitted in between the stopcocks and the water inlet hoses.

The machine should be connected to a mains water supply in accordance with local and national safety regulations.


The machine is designed to operate with a flow pressure of between 1 and 10 bar (100 kPa and 1,000 kPa). At higher water pressures it is essential to fit a reducer valve.

Connection to the water supply should be carried out by a qualified plumber and should incorporate a stopcock with a 3/4" thread. The stopcock should be fitted by a qualified plumber.

The machine is supplied as standard with two hoses, for connection to a hot and cold water supply.

Connection to the cold water supply

The cold water inlet hose (blue stripes) must be connected to the on-site cold water supply via a 3/4" threaded union. It is **not** suitable for connection to a hot water supply.

 The connection point is subject to mains water pressure. Turn on the stopcock slowly and check for leaks. Correct the position of the washer and union if appropriate.

Maintenance and care

Only use a genuine Miele hose should you ever need a replacement. Miele hoses are tested to withstand pressure of at least 70 bar (7,000 kPa).

In order to protect the water inlet valve, the two dirt filters - one in the open end of the inlet hose, one at the inlet point in the machine must not be removed.

Extension hose

Longer hoses 2.5 or 4.0 m in length are available from your Miele dealer or the Miele Spare Parts Department as optional extras.

Installation and connection

Connection to the hot water supply

To keep electricity consumption costs down this machine can be connected to a **(ring) piped hot water supply**. The maximum temperature must not exceed 70°C.

It is not economical to run it from an individual hot water supply if it is not in continuous use, as the water in the supply pipes cools down and more energy would be required to reheat the water.

For hot water connection the same conditions apply as for cold water connection.

The inlet hose with the red stripes (hot water hose) is connected to the stopcock.

For operational reasons the machine must not be connected to hot water only.

If the machine is **not** connected to a hot water supply, the water settings for the *main wash*, *pre-wash* and *rinses* must be re-programmed and the hot water inlet hose must be detached:

- Go to the *Settings menu/Supervisor level* and select the cold option for each of the above.

The programme durations may be longer.

- Unscrew the inlet hose (hot water - red stripes)
- Plug the inlet connection with the cap supplied.

Connection to drainage

Machines with a drain pump

The machine drains via a drain pump with a delivery head of 1 metre*. The drain hose must not be kinked as this would restrict drainage. The swivel elbow at the end of the hose can be turned in either direction, or can be detached if required, with a sharp twist and pull.

* For a delivery head of more than 1 m (up to a max. of 1.8 m) a second duo-drain pump is available with the corresponding kit from the Miele Spare Parts Department or your Miele Dealer.

The drain hose may be connected as follows:

1. Direct into a sink or basin (drain pump version):

Please note:

- Hook the hose over the edge and secure.
 - Make sure that the water can drain away freely without hindrance. Otherwise there is a risk of water overflowing or of some of the drained water being sucked back into the machine.
2. Connected securely to a plastic drain pipe with a rubber nipple. There is no need to use a non-return valve.
 3. Connected securely to a standpipe. (Seal the hose into the pipe to avoid flooding in case of the drainpipe being blocked).
 4. Connected securely to a floor gully.

If required the drain hose can be extended to a length of 5 m. The necessary parts can be purchased from the Miele Spare Parts Department or your Miele dealer.

Drain valve version

A motorised drain valve is used to drain the machine. A DN 70 angle connector can be used for draining the machine via an on-site gully (with odour trap). N.B. If not supplied with the machine an angle connector is available through the Miele Spare Parts Department.

Installation and connection

Electrical connection U.K.

All electrical work must be carried out by a suitably qualified and competent person, in strict accordance with current national and local safety regulations (BS 7651 in the UK).

Ensure power is not supplied to the machine until after installation work has been carried out.

The voltage, rated load and fuse rating are given on the data plate. Please ensure these match the site mains supply.

This washer-extractor is supplied as standard for connection to either:

- 230 - 240 V / 1 N / 50 Hz,
25 A fuse rating

or:

- 400 V / 2N / 50 Hz,
2 x 13 A fuse rating

Connection should be made via a suitable isolator which complies with national and local safety regulations, and the on/off switch should be easily accessible for servicing work.

For extra safety it is advisable to install a residual current device (RCD) with a trip current of 30 mA (in accordance with DIN VDE 0664, VDE 0100, Section 739).

When switched off there must be an all-pole contact gap of 3 mm in the isolator switch (including switch, fuses and relays acc. to VDE 0660).

Important

for **400 V** connection, the machine is supplied with a cable in the following colours:

Black = live

Brown = live

Blue = neutral

Green and yellow = earth

WARNING

**THIS APPLIANCE MUST
BE EARTHED**



Do not use devices to turn the machine off automatically, (e.g. automatic timers).

Technical data

Height	85.0 cm
Width	59.5 cm
Depth	72.0 cm
Depth with door open	112 cm
Weight	107 kg
Maximum floor load	2778 Newton (approx. 278 kg)
Capacity	6.5 kg dry laundry
Voltage	see data plate
Connected load	see data plate
Fuse rating	see data plate
Noise level during spin (sound pressure according to German 3. GSGV)	< 70 dB (A)
Water flow pressure min.	100 kPa (1 bar)
Water flow pressure max.	1000 kPa (10 bar)
Inlet hose length	1.60 m
Connection cable length	1.60 m
Drain pump head max. (drain pump version)	1.00 m
Lamp for drum lighting	Type G4 (5 watts/12 volts)
Test certificates awarded	Radio/TV suppression, VDE

Settings menu for changing standard settings


The Settings menu is used to alter the machine's electronics to suit different requirements.

Settings can be altered at any time.


Settings menu 🚩

To open the **Settings** menu

- 1 Turn the programme selector to *Finish*. The main menu will appear.

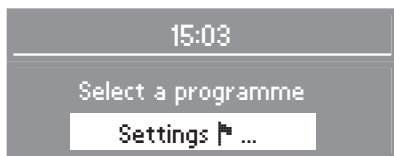

- 2 Press the *OK* button.
- 3 This will take you into the *Settings* menu.

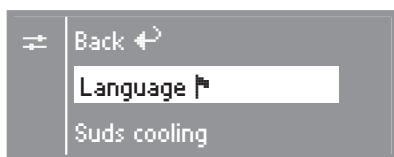

- 4 Use the – and + buttons to select the setting you want and confirm your selection by pressing the *OK* button.

To close the **Settings** menu

- Select *Back* and confirm your selection. The display will return to the entry menu.

Language 🚩

The display can be set to appear in one of several different languages.

You can change the language displayed via the *Languages* sub-menu.

The flag after the word *Language* acts as a guide to prevent a language which will not be understood from being set.

A tick will appear beside the language to show that it has been set.

The different language setting will only apply to the programme currently in use. After the programme has finished the display will revert to the default language which was set in the *Settings/Supervisor level* menu.

Suds cooling

When this is activated, additional water flows into the drum at the end of the main wash to cool the suds down. Hot suds can damage plastic drainage pipes.

Suds cooling takes place when temperatures of more than 70°C are selected.

Suds cooling should be activated:

- to prevent the danger of scalding if the drain hose is hooked over the edge of a sink or basin.
- where the drainage pipes do not comply with DIN 1986.

The machine is delivered with Suds cooling activated.

Time of day

First select either a 24 hour or 12 hour clock, or to not show the time in the display at all. Then set the current time of day.

If you choose not to display the time, the delay start function can only be used as a 24 hour timer, i.e. the display will show how many hours until the start but not the current time of day.

To select a 24 hour or 12 hour clock

- Select the clock option you want and confirm your selection.

The display will then change to the screen for setting the time of day.

Setting the time

- Set the hour with the – and + buttons and confirm your setting by pressing the *OK* button. Now set the minutes. The display will return to the *Settings* menu.

Display contrast

There are ten different display contrast settings.

The machine is delivered with the display contrast on Setting 4.

The display contrast will change as soon as a different setting is chosen.

Display brightness

There are ten different display brightness settings.

The machine is delivered with the display brightness on Setting 5.

The display brightness will change as soon as a different setting is chosen.

Settings menu

Standby

To save energy, the display goes out after 10 minutes and the indicator light for the *Start* button flashes slowly.

There are two options:

On

Standby comes on:

- if a programme is not selected after the machine has been switched on.
- after a programme has started.
- at the end of a programme.

Not in current prog. (the machine is delivered with this option selected)

Standby comes on:

- if a programme is not selected after the machine has been switched on.

Turning the programme selector or pressing a button switches the display back on again.

Memory


If an extra option has been selected for a programme, or the recommended temperature or spin speed has been altered, the machine will store the changes in memory at the start of a programme.

When this programme is chosen again these settings will appear in the display.

The machine is delivered with the memory function deactivated.


Settings/Supervisor level menu

The Settings/Supervisor level needs to be activated by a Miele service technician or by an authorised Miele dealer.

The *Settings* menu (with the exception of Language ) is locked with a code to prevent it being accessed by unauthorised personnel.



- Select Supervisor level and confirm your selection.

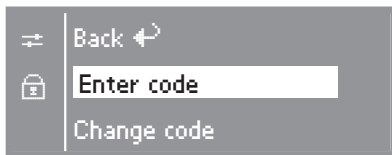

- Select Enter code and confirm your selection.

To enter the code


You will now be asked to enter a 3-figure code. The code is set at **000** at the factory. **0 0 0**.



- Use the **+** button to enter the first number. Confirm your selection of this number by pressing the *OK* button. Now set the second number.

- Repeat the process until all three numbers have been entered.
- After the last number has been entered, press the *OK* button.

The following will appear in the display:

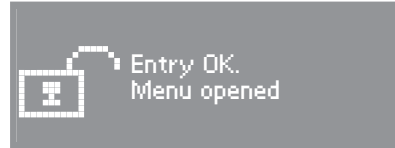

You are now in the Supervisor level. You can alter all the settings described previously as well as the settings on the following pages.

You can alter the code if you want to prevent it being accessed by unauthorised personnel.

Settings/Supervisor level menu

Language

The display can be set to appear in one of several different languages.

You can set the language you want as the fixed default language in the *Languages* sub-menu.

- Select the language you want and confirm your selection.

Supervisor level

You can alter the access code to the supervisor level.

- Enter the old code.
- Enter a new code.

After you have confirmed the new code, the display will change to the beginning of the *Settings* menu.

Auto load control

If the auto load control is deactivated, the machine will always carry out the programme sequence based on a full load.

The machine is delivered with this option activated.

Pre-wash water

You can choose for the pre-wash to be carried out with either hot or cold water (not applicable to the *Curtains* programme). Hot water can only be only taken in if the wash temperature is above 30°C.

The machine is delivered with the *Hot* water option selected.

Main wash water

You can choose for the main wash to be carried out with either hot or cold water (not applicable to the *Woollens* or *Curtains* programmes). Hot water can only be only taken in if the wash temperature is above 30°C.

The machine is delivered with the *Hot* water option selected.

If the machine is not connected to the hot water supply, the programme durations will be longer and will vary from the time remaining shown in the display.

Rinse water

You can choose for the rinses in the *Cottons* and *Minimum iron* programmes to be carried out with either hot or cold water. Hot water can only be only taken in if the wash temperature is above 50°C.

The machine is delivered with the *Hot* water option selected.

Settings/Supervisor level menu

Low water pressure

This setting should be activated to ensure the correct amount of water is taken into the machine in areas where the water pressure is constantly low (below 100 kPa / 1 bar).

The machine is delivered with the Low water pressure option deselected.

Temperature pre-wash

You can choose the temperature you want the pre-wash to be carried out at in the *Cottons* and *Grease and fat* + programme.

The machine is delivered with the Block parameters option selected (the temperature will be controlled according to the programme data which has been programmed on-site).

Cottons level

You can increase the water level for the main wash in the *Cottons* programme.

The machine is delivered with the Block parameters option selected (the water level will be controlled according to the programme data which has been programmed on-site).

Pre-wash duration

You can lengthen the duration of the pre-wash.

The machine is delivered with the Block parameters option selected (the wash duration will be controlled according to the programme data which has been programmed on-site).

Minimum iron level

You can increase the water level for the main wash in the *Minimum iron* programme.

The machine is delivered with the Block parameters option selected (the water level will be controlled according to the programme data which has been programmed on-site).

Cottons duration

You can increase the wash duration for the main wash in the *Cottons* programme.

The machine is delivered with the Block parameters option selected (the wash duration will be controlled according to the programme data which has been programmed on-site).

Settings/Supervisor level menu

Minimum iron duration

You can increase the wash duration for the main wash in the *Minimum iron* programme.

The machine is delivered with the Block parameters option selected (the wash duration will be controlled according to the programme data which has been programmed on-site).

Pre-wash

You can choose for pre-wash to be carried out with every *Cottons* and *Minimum iron* programme or to select it on an individual basis.

If pre-wash has been selected as a default (*Permanent*), the indicator light for the Pre-wash button will be lit up.

The machine is delivered with the *Menu selection* option activated for pre-wash.

List of special programmes

You can add more special programmes to the number of programmes available.

Option 1: The *Quick wash*, *Shirts*, *Starch*, *Pillows*, *Outerwear* and *Proofing* programmes are listed in the display. (the machine is delivered with this option selected)

Option 2: The *Intensive wash* programme is offered in addition to the Option 1 programmes.

Option 3: The *Flour*, *Flour +* and *Grease and fat* programmes are available in addition to the Option 1 programmes.

Option 4: The *Grease and fat* and *Grease and fat +* programmes are available in addition to the Option 1 programmes.

Option 5: The *Towels short*, *Towels +* and *Capes* programmes are available in addition to the Option 1 programmes.

Option 6: The *Chem. Therm. Dis.* (Chemothermal Disinfection 20min 60°C) programme is available in addition to the Option 1 programmes.

Hygiene

If a programme has been run using temperatures below 60°C a message will appear in the display at the end of the programme asking you to run the Hygiene programme.

The machine is delivered with the Hygiene option deselected.

No. rinses Cottons

You can alter the number of rinses which are carried out in the *Cottons* programme.

2 rinses (standard setting)

3 rinses

4 rinses

5 rinses

Settings/Supervisor level menu

No. rinses Minimum iron

You can alter the number of rinses which are carried out in the *Minimum iron* programme.

2 rinses (standard setting)
3 rinses
4 rinses

Pre-rinse Cottons

A pre-rinse can be carried out in the *Cottons* programme.

The machine is delivered with this option deactivated.

Pre-rinse Minimum iron

A pre-rinse can be carried out in the *Minimum iron* programme.

The machine is delivered with this option deactivated.

Spin free of charge

If your machine is fitted with a payment system, you can release the Spin programme (Free of charge).

The machine is delivered with this option deactivated.

External dispenser

This machine is suitable for connecting to an external dispensing system. The external dispenser setting must be selected before the external dispensing system can be used.

The machine is delivered with this option deactivated.

To close the Settings menu

- Select *Back* and confirm your selection. The display will return to the entry menu.

United Kingdom:

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
tel. Abingdon (01235) 554455
Service Office: (01235) 554466
fax (01235) 554477
Internet: www.miele.co.uk

Ireland:

Miele Ireland Ltd.
Broomhill Road, Tallaght, Dublin 24
Tel: (01) 46 10 710, Fax: (01) 46 10 797
Email: info@miele.ie
Internet: <http://www.miele.ie>

Australia:

Miele Australia Pty. Ltd.
A.C.N. 005635398
1 Gilbert Park Drive
Knoxfield, VIC 3180
Telephone: (03) 9764 7100
Fax: (03) 9764 7129
Internet: www.miele.com.au

Distributor New Zealand:

Steelfort Engineering Company. Ltd.
500 Rangitikei Street
Palmerston North, Priv. Bag 11045, NZ
Telephone: (06) 350 1350
Fax: (06) 356 1507

South Africa:

Miele (Pty) Ltd
63 Peter Place
Bryanston 2194
P.O. Box 69434
Bryanston 2021
Tel.: (011) 548 1900
Telefax (011) 548 1935
Internet: www.miele.co.za
E-mail: info@miele.co.za

Singapore:

Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
04 - 02/03 Winsland House II
Singapore 238463
Tel : +65-67351191
Fax: +65-67351161
Email: infosea@miele.com.sg
Internet: www.miele.sg

Hong Kong:

Miele (Hong Kong) Limited
AIA Plaza, 24th Floor
18 Hysan Avenue
Causeway Bay
Hong Kong
Tel.: (852) 2610 1331
Fax: (852) 2610 1013
E-mail: mielehk@miele.com.hk