

USER GUIDE

UK

MOBILE Voxtel M800



AEG

perfekt in form und funktion



1 BOX CONTENT

In the box you will find:

- mobile handset
- charging cradle (supplied with all models)
- mains power adapter with USB connection cable
- user guide
- Lanyard

Keep the packing materials in a safe place in case you later need to transport the device.

Warning


The torch uses a high-brightness LED. Do not shine directly into eyes or view with optical instruments.

Important

Your mobile is not supplied with a SIM card, you will need to insert a SIM card for the mobile to work correctly.

Display language

You can change the display language in your handset :

1. Press **Menu** then press **Settings icon**  .
2. Select **Phone settings**.
3. Select **Language** .
4. Press **OK** to confirm your preferred language.













2 GETTING TO KNOW YOUR PHONE

2.1 Keys and parts















#		Meaning
1	Talk key	<ul style="list-style-type: none"> • Press to answer a call during ringing • Press to open the dial keypad in standby • Press to dial a number
2	End key	<ul style="list-style-type: none"> • Press to end a call • Press to return to standby • Press and hold to : Power On / Off, Reboot or set to Flight mode
3	Home key	<ul style="list-style-type: none"> • Press to return to the main menu • Press and hold in standby to Lock/Unlock
4	SOS key	<ul style="list-style-type: none"> • Press and hold to start the SOS procedure
5	Volume control / scroll button	<ul style="list-style-type: none"> • Press to change ring volume in standby or earpiece / speaker volume during a call or FM radio ,audio player volume • Press to scroll up/down in menu lists
6	Camera key	<ul style="list-style-type: none"> • Press to enter Camera mode

2.2 Display icons

The standby screen shows the following information:

#	Meaning
	Radio link On with signal strength when linked to mobile network.
	Battery charge level Shows the battery level (Internal segments cycle during battery charging.)
	Alarm On if an alarm is set.
	Ring and Vibrate off Ringer and vibration are both turned off.
	Ring on On if only the ringer is enabled.
	Vibrate on On if only vibration is enabled.
	Vibrate and ring on On if both are enabled.
	Vibrate then ring On if vibrate then ring is enabled.
	New SMS Indicates you have new text messages.
	Lock On when the keypad is locked.
	Bluetooth On when Bluetooth is activated.
	Earphone On when earphone is plugged in or when Paired and connected to a BT headset.

3 MAIN MENU ICONS

#	Icon Name
	Dialer
	Phonebook
	Gallery
	Messages
	Clock
	Camera
	Calculator
	Settings
	Calendar
	FM Radio
	Web
	Music
	Torch
	Bluetooth

Touch **Menu** to open the main menu. Slide the screen to the left ,to display the second or third menu screen, touch any menu icon to open.

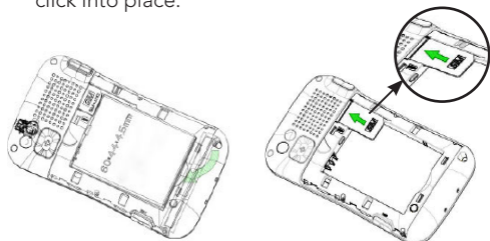
4 INSTALLATION AND SETUP

Before operating a SIM card must be installed. Keep the SIM card out of reach of small children.

The SIM card and its contacts can be damaged easily by scratches or bending, so handle the card carefully.

4.1 Install the SIM card and battery

- Switch off the phone, disconnect the power adaptor.
- To remove the back cover, unclip and lift it, starting from the slot at the bottom right edge.
- Remove the battery, if fitted, by lifting from the bottom edge.
- Carefully slide the SIM card into the holder with the gold connectors face down.
- To insert a memory card, carefully slide a micro-SD card, with the gold connectors face down, into the slot under the SIM card.
- Replace the battery by aligning the gold connectors on the battery with those on the phone and push the end of the battery down until it click into place.
- Replace the back cover by placing it flat on the back of the handset and pushing down until it click into place.



4.2 Charging the battery

Warning:

Use only the supplied/approved batterie and charger. Using others may be dangerous and will invalidate warranty. A battery must be fitted.

Do not charge with the back cover removed.

- Connect the charger lead firmly into the micro-USB socket on the top of the handset or place the handset directly in the charging cradle.
- Plug the mains power adapter into an AC mains socket. If the handset is turned on, "**Charger connected**" displays for a few seconds and the battery symbol bars scroll to indicate that charging has started.

If the handset is turned off, the display shows a large battery symbol with segments cycling for about 1 minute to indicate it is charging.

- If the '**Charger connected**' does not display, disconnect and retry.
- The battery is fully charged when the bars within the battery symbol are continuously on. Disconnect the charger from the phone and the AC outlet. "**Charger removed**" displays for a few seconds to indicate the charging has stopped.



Note:

The battery can also be charged if the handset is connected to a USB port of a computer. "USB charger connected" appears briefly and then gives the option of "Mass storage" or "COM port".


Select "Mass storage" if you want to transfer data

or read files. Or select "COM port" for debug or updating. When unplugged "USB removed" displays.

4.3 Switching on and off

- To switch on, press and hold **End key**  until the display turns on.
- To switch off, press and hold **End key**  and select **Power off** from the list.

4.4 Locking the screen and keys

- To lock the screen and keys : from the home screen tap **Lock** at the bottom right on the screen. A locked message appears on the screen and the "Lock icon"  on the status bar.
- To unlock the keypad : from the home screen press and hold the "Home" key until the lock icon turns off.

4.5 Display backlight

- The display backlight automatically turns off after a period of inactivity. The first press of any key will turn the display back on, but the key function will be ignored.
- The backlight time can be set between 5 and 60 seconds in Settings > Phone settings > Misc. settings > LCD backlight.


Note:

You can also set an automatic screen and key lock feature in Settings > Phone settings > Display > Screen auto lock : between 15 sec and 5 minutes, so the keys are locked automatically after the set period of inactivity.


 
 


5 MAKING AND ANSWERING CALLS

5.1 To make a call

 
 


Ensure the phone is switched on and in service.

- In standby, press the **Talk key**  to display the dialler interface.

OR

- Touch **Menu**, then select the **Dialer icon**  to open the dialler interface.
- Input the telephone number, including the area code. (To add '+' touch and hold the 0 key.)
- Press the **Talk key**  or touch the **Call icon**  to dial out.
- To end the call press the **End Call**  button or touch **End Call icon** .

5.2 Last number redial

- In standby, press the **Talk key**  to display the dialler interface, then touch the **call log icon**  to view the All calls log list – touch the tabs at the top to view **Dialled calls, Missed calls, Received calls or All calls**.
- Scroll up and down to go to the number you want using volume up/down or using the touch screen.
- Press the **Talk key**  or touch the **Call icon**  to dial out.



5.3 To answer a call

- When the phone rings, press the **Talk key**  or touch the **Answer icon**  to answer the call.

5.4 Earpiece volume

- During a call, press the **Volume control button** to change the volume.
The volume level is displayed and remains for future calls.

5.5 To switch to speakerphone (handsfree)

- During a call, touch **H-Free** to turn the **Loudspeaker on** and touch **Handset** to turn the **Loudspeaker off**.
- To end the call, press the **End Call**  button or touch the **End call icon** .

5.6 To mute the microphone


 

- During a call select **Options** then select **Mute** to turn the mute On or Off.
- Or touch the Mute icon or Unmute icon to turn the mute on or off.

6 PHONEBOOK

The phone store names and phone numbers in the internal Phonebook (up to 500) and in the SIM card (SIM dependant, but maximum 250).

6.1 To access the Phonebook

In standby mode:

- Touch **Menu** then touch the **Phonebook icon**  to enter the contacts list.
- Or press the **Talk key**  to enter the dialler interface, then touch **the Phonebook icon**  to enter the contacts list.

Note:





Indicates entries on the SIM card

 



Indicates entries in the Internal phone book.

6.2 Add a new contact

- Touch **Menu**, then touch **Phonebook** .
- Touch **Add new contact**, then Select **To SIM** or **To Phone**.
- Touch the **Name** bar to display the keyboard and input the name, then hide the keyboard by touching ".
- Touch the **Number** bar to display the number keypad and input the telephone number then hide the keyboard by touching ".
- Touch **Options** then touch **Save** to store the new contact.

6.3 Make a call from the Phonebook

- Open the contact list, slide up and down to find the name you want or use the volume up/down keys to step through the list.
- Press the **Talk key**  or touch the **Call icon**  to dial the number.

6.4 Edit a contact

- Open the contact list, slide up and down to find the entry you want to change.
- Touch **Options** then select **Edit**, touch the **Name** bar to display the keyboard and modify the name then hide the keyboard by touching "⌵".
- Touch the **Number bar** to display the number keypad and modify the Number, then hide the keyboard by touching "⌵".
- Touch **Options** then **Save** to save the change(s).

6.5 To delete a contact

- Open the contact list, slide up and down to find the entry you want to delete.
- Touch **Options** then **Delete**, then **Yes** to confirm.

6.6 Copy an entry to the phone or SIM card

- Open the contact list, slide up and down to find the entry you want to copy.
- Touch **Options** then **Copy**, then select copy **To Phone** or **To SIM** or **To file**.

6.7 Add an entry to Blacklist

- Open the contact list, slide up and down to find the entry you want to add to your blacklist.
- Touch **Options** then select **Add to Blacklist**, then **Yes** to confirm.

Note:

Once you put a number in the blacklist, this number will be blocked to call you. The calling party will get a busy signal when they try to call and your phone will not ring for this incoming number.

Note:

To block blacklisted numbers, you first need to activate **Reject numbers in blacklist** in the following menu options:



Settings > Call settings > Blacklist > Reject numbers in blacklist>On.

6.8 Phonebook settings

- When in the phonebook list, touch **Options** then select **Phonebook settings** and you have following options:

Preferred storage	Select to save contacts in SIM/Phone/Both.
Speed dial	To set speed dial numbers. Long press numbers (2-9) number key in dial interface, to dial out.
Extra numbers	To set the phone so you can only call specific programmed numbers. (This requires a compatible SIM card.)
Memory status	To view the SIM/Phone /Group memory status.
Copy contacts	To copy contacts from SIM to Phone or from Phone to SIM.
Move contacts	To move contacts from SIM to Phone or from Phone to SIM.
Delete all contacts	To delete all contacts from the SIM or Phone phonebooks.

7 CALL LOG


In standby, press the **Talk key**  to display the dialler interface, then touch the **call log icon**  to see the calls log list – touch the tabs at the top to view **Dialled calls**, **Missed calls**, **Received calls** or **All calls**.

7.1 To view a call log entry


- When in a call log list, slide up and down to find the call entry you want.
- Press **Options** :

View	View details of the selected call, including Name, Number, Call time and Times of call.
Call	Call the selected number.
Send text message	Send an SMS message to the selected number.
Send multimedia message	Send an MMS message to the selected number.
Save to Phonebook	Save the selected number to your phonebook.
Add to Blacklist	Add the number to the blacklist.
Edit before call	Edit the selected number before dialling it out.
Delete	Delete the selected number from the log.
Delete all	Delete all entries from the log.
Advanced	Display details of the Call timers, Call cost and GPRS counter.

8 MESSAGES

Received SMS are stored in the **Messages Inbox** and an icon indicates a New SMS . This icon  is displayed until **View** or **Cancel** is touched.


 
8.1 To access the SMS menu

- Touch **Menu** then touch the **Messages icon**  to display the messages menu :

Write message	to write a new message.
Inbox	to go to the inbox to read received messages.
Drafts	to go to saved draft messages
Outbox	to see messages that are waiting to be sent.
Sent messages	to see messages that have been sent.
Broadcast messages	to set for receiving broadcast messages
Templates	to see and use preset templates in text messages
Message settings	to check or change the SMS Message settings.

8.2 Write and send a text message

In the **Messages** menu:

- Touch **Write message**, then touch **Text message**. A new page appears with a flashing cursor in the TO number bar above a keyboard. Touch (123 icon) to change the keyboard to digits and input the full telephone number for to where you want the message sent. You can also touch the **TO** icon  to add contacts from the **Phonebook**.
- To start writing your message, touch the page below the number bar to show the keyboard, and with the cursor flashing at the start of the message page. Write your **SMS**.
- When you have finished your message, touch **Options** then **Send** to send the message , or close the keyboard then touch the **Send** icon  to send it.

Note:

Sent messages are saved in the **Sent messages folder**, provided **Save sent message** is **On** in **Messages > Message settings > Text message>Save sent message**.

If the message cannot be sent, it will be saved in the Outbox and you may have to open the Outbox and try to resend it later.

8.3 Read your SMS messages

- In the Messages menu, touch **Inbox**.
- Scroll **Up/Down** through the messages, and touch the selected message to view it.
- While viewing a message, touch **Options** :

Reply by SMS	to send a reply SMS to the sender.
Reply by MMS	to send a reply MMS to the sender.
Call sender	to call the sender
Forward	to forward the message to others
Delete	to delete the message.
Advanced	to copy or move the message to Phone / SIM or turn Auto find on/off.

8.4 To delete all messages

All Messages can be deleted from each of the **Inbox, Drafts, Outbox** and **Sent messages** folders using **the Options** menu.

When in the selected folder, touch **Options** to open the options list, then touch **Delete all** then **Yes** to delete the required messages.

8.5 SMS settings


In the Messages menu:

- Go down to **Message settings** and touch it, then touch Text message to enter:

SIM	to set validity period, message type, on/off delivery report, on/off reply path, preferred connection, set mailbox
Memory status	to display the message memory status of the SIM/phone
Text message counter	to see the SMS counter for sent and Received messages
Save sent message	to set if sent messages are saved or not
Preferred storage	to set whether messages are saved to the Phone or SIM

9 SETTINGS

Allows you to adjust various settings on the phone and also to reset them to their factory default values.

- Touch **Menu** then slide to the second icon screen and touch the **Settings icon**  .
- Choose from the list the options available.

9.1 PROFILES

Profiles allow quick changes to your phone sounds and to customise them based on your situation.

There are 5 preset profiles – **General, Silent, Meeting, Outdoor, My style** . Each profile has settings for **Alert type, Ring type, Ringtone, Ringtone volume, Message tone, Message tone volume, Keypad tone , Keytone volume, Power on /off tone, System alert.**

9.1.1. Activate a Profile

In the Settings menu list:

- Press **Profiles** to open the menu.
- Touch the profile name you want to activate, then touch **Options** then **Activate** to active the selected profile.

9.1.2. Customise a Profile

In the Settings menu list:

- Press **Profiles** to open the menu.
- Touch the profile you wish to customise and then touch **Options** then **Customize**.
- Modify any of the settings you want, then touch **Options** and touch **Save** to confirm the changes.

Note: you can select Reset from the menu to return the profile to its factory default settings.

9.2 Call settings

To set or modify the following call feature options:

Call waiting	to activate call waiting so you can press Talk to answer a 2nd call while holding the 1st call.
Call divert	to set different incoming call diverts.
Call barring	to restrict making and receiving calls.
Blacklist	to set Reject On / Off for the Blacklist function and to program up to 20 Blacklist numbers.
Auto redial	to set automatic redial for failed calls.
Call time display	to set call time display on/off.
Call time reminder	to set a Single or Periodic time for a reminder tone during calls.
Reject by SMS	if a call is rejected, to set an option for sending an SMS to the caller.
Answer mode	to set Any key / Auto answer when headset mode.
Auto Call Record	to set auto recording during the call.

Note:

Some Network functions may not be available with all services, so check availability with your SIM provider.

9.3 Phone settings

In the Settings menu list:

- Touch **Phone settings** to set or modify the following phone feature options:

Time and date	to set the time and date.
Schedule Power on/off	to set times and enable your phone to automatically turn off and on. When turning off it sounds an alarm for 30 seconds before going off, unless Yes or No are pressed within that time.
Language	to set the display language
International keyboards	to show the languages available when writing texts.
Display	to set the background wallpaper picture and whether to show the date/time on the idle screen and to set the screen auto lock, timer for the period of inactivity before the screen locks.
Auto update time	to set whether the time auto updates or not.
Flight mode	to set flight mode or normal mode.
Misc.settings	to set the LCD brightness and the backlight timer for the period of inactivity before the screen turns off to save power.
SOS Setting	to set the SOS numbers, SOS message content, activate or deactivate the SOS key and SOS Alarm tone. (See next chapter for more details.)

9.3.1. SOS Setting

In the Phone settings menu list:

- Slide **Down** to **SOS Setting**, and touch to select.
- Touch Number 1 - 5 to input up to 5 telephone numbers (New Number for manual entry or from Phone Book) for the SOS call and SMS message.
- Touch **Message Content** to edit the **SOS message sent out when the SOS key is pressed (default message: "Please help me!")** and touch **Done** to save the changes.
- Touch **SOS Control** to switch the **SOS key** **On** or **Off**.
- Touch **SOS Alarm** to switch the SOS alarm **On** or **Off**.

9.4 Network settings

To set the Mobile Network options, including Network selection to set the phone for Automatic or Manual selection of a mobile service, or other Preferences and GPRS settings.

Note:

Some Network functions may not be available with all services, so check availability with your SIM provider.

9.5 Security settings

To manage the security of your phone.

to set the SIM security	SIM lock On / Off : you need the correct PIN to change the status or to change the password and when the PIN lock is turned on, you will need to enter the PIN every time the handset turns on or is unlocked. Note: some SIM cards don't allow it turned off. Warning: if you enter the wrong PIN three times the SIM card will be blocked and you must enter the PUK number or contact your SIM provider to unblock it or set a new PIN code. PIN and PUK numbers come with your SIM card.
Phone security	to set the Phone lock On / Off to need to enter a PIN on power-up and to change the phone password . Default Pin = 1122.

9.6 Notification settings

To set optional notifications that can be shown or played when there are new entries in Messages, Call logs or Downloads.

9.7 Restore settings

To restore the phone to its initial settings.

All phonebook, call log entries and call timers will be erased and settings will be reset to default.

This requires the Phone Password. (Default password = 1122)

9.8 Sound effects

To set the sound style for Audio functions, with Equalizer settings of Normal, Bass, Dance, Classical, Treble, Party, Pop or Rock.

10 SOS BUTTON

With the phone in idle mode, press and hold the SOS button for 3 seconds to start the emergency call operation.

An alarmtone will sound for about 10 seconds when activated before the emergency call procedure starts.

Press **Abort** to stop the alarm and the emergency call.

If the emergency call is not cancelled, a preset SMS message is sent to each programmed SOS number.

Then the phone will make a call to the first programmed emergency number **Number 1**. If **Number 1** is busy or out of area or not answered within 30 seconds, it will try **Number 2** then the next programmed number. If the call is answered, the phone will be set in the speakerphone (handsfree) mode and the called person must press "0" on this phone to stop the SOS cycle from continuing.


Note:

If within 30 sec after answering the call the receiver not dial "0" on this phone the line will be disconnected and SOS cycle with continue.

Note: You can use the emergency SOS button even if the keypad lock is activated, but the screen must be on before pressing and holding the SOS button. To program the SOS numbers and modify the SOS SMS message, see section **9.3.2 SOS Setting**.

11 CAMERA

From the main menu screens, touch the **Camera**

icon  then press **Options** to enter the camera menu for the following options:

Note: You can also open the camera application directly from standby or the main menu screens by pressing the Camera key on the right side of the handset.

Photos	to view saved photos.
Camera settings	to change the camera settings.
Image settings	to set the image size and Image quality. Note: if the image size is above 800x600 there will be a short delay between pressing the button and a picture being taken and saved
White balance	to set the white balance.
Scene mode	to set the scene mode.
Effect settings	to set special effects.
Storage	to set the storage location of the photos to either Phone or Memory card.
Restore default	to restore the default settings of the camera.


When in camera mode:

- Touch the + / - icons to zoom in / out.
- Touch the Flash icon to turn the flash on / off.
- Touch the Camera icon to take a photograph.

12 GALLERY


12.1 Image viewer

From the main menu screens, touch the **Gallery**

icon  then touch **Image viewer** to show the thumbnails of stored pictures. Touch Options to open the viewer menu for the following options:


View	to view the selected photo - swipe across the screen to view another photo, and while viewing a photo touch Options then Play for a slide show of the photos, or for other options.
Browse style	to set List style or Matrix style.
Send	to send the image as a multimedia message or via Bluetooth
Use as	to use the selected image as wallpaper.
Rename	to change the name of the image.
Delete	to delete the image.
Sort by	to sort the images by name, type, time, or size.
Delete all files	to delete all images.
Storage	to select which memory is viewed.
Image information	to display information about the image: name, resolution, size, create time.

12.2 Video recorder

From the main menu screens, touch the **Gallery icon**  touch press **Video recorder** to open the video recorder. Touch the Record icon to start a recording or touch Options to open the recorder menu for the following options:

Camcorder settings	to change the recorder settings
Video settings	to set the Video quality
White balance	to set the white balance
Effect settings	to set special effects
Storage	to set the storage location of videos to either Phone or Memory card
Restore default	to restore the default settings of the camcorder

12.3 Video player


From the main menu screens, touch the **Gallery icon**  then touch **Video player** to show a list of stored videos . Touch a video to open that video for playing, or touch Options to open the menu for the following options:

Play	to open the video for playing
Send	to send the video as a multimedia message or via Bluetooth
Rename	to change the name of the video
Delete	to delete the video
Delete all files	to delete all videos
Sort by	to sort the videos by name, type, time or size
Storage	to select which memory is viewed for videos

- When a video is playing, touch the Icon in the lower left corner to enter video settings:


Preferred play 3D mode	to turn the 3D play mode On / Off
Auto repeat	to turn the auto repeat function On / Off

12.4 Sound recorder

- From the main menu screens, touch the **Gallery icon**  touch press **Sound recorder** to open the recorder. Touch the record icon to start recording, then the pause or stop icons to stop recording. Touch the play icon to play back the recording.
- When in the Sound recorder mode, touch the Icon in the lower left corner to open the recorder menu:

New record	to start a new recording
Play	to play the selected recording
Append	to add more to the end of the selected recording
Rename	to change the name of recording
Delete	to delete the recording
List	to view a list of all recordings
Settings	to set the Storage location of recordings to either Phone or Memory card, or set the Audio quality
Use as	to use a recording as a Ringtone
Send	to send the recording as a multimedia message or via Bluetooth


12.5 File Manager

- From the main menu screens, touch the Gallery icon  then touch File manager to open the file manager to see how much memory is available in the Phone or Memory card and to view the files stored and manage them, or reformat the memories.


13 CLOCK

Setting the clock time is done in Settings > Phone settings > Time and date > Set time/date (see section 9.3.1).

13.1 Alarm

- From the main menu screens, touch the **Clock** icon  then touch **Alarm** to enter the alarms menu. You can set 5 alarm times, each with options for the repeat mode and alert type. When an alarm sounds, press **Stop** to stop the alarm or **Snooze** to set the snooze mode for 5 minutes before the alarm sounds again.


13.2 World clock

- From the main menu screens, touch the **Clock** icon  then touch **World clock** to view the current time in different cities.

Note: Setting your home city is done in Settings > Phone settings > Time and date > Set home city (see section 9.3.1).


14 CALCULATOR



From the main menu screens, touch the **Calculator**

icon  to open the calculator to perform simple addition, subtraction, multiplication or division calculations.



15 CALENDAR

From the main menu screens, touch the **Calendar**

icon  to open the Calendar to show the current month.

Touch the  /  icons at the top of the calendar to move back / forward a year, or back / forward a month.

Touch the [7] tab at the bottom of the calendar to change to a weekly view, or the [1] tab to see the events for the day.

Note: when in a weekly view, the  /  icons at the top are for changing the week number or between a.m. / p.m..



Touch Options to open a menu for the following options:



View	to view the events for the selected day
View all	to view all calendar events.
Add event	to add a new event to the calendar.
Delete event	to delete events from the calendar.
Jump to date	to go to a specific date.
Go to today	to return to the present day.
Go to weekly / monthly view	to display a weekly / monthly view.
Start of week	to set the start day of as Sunday or Monday.

16 FM RADIO

You must insert a headset (3.5mm stereo headset) before you can receive any radio channels for the FM radio. With a headset inserted, from the main menu



screens, touch the **FM Radio icon**  to open FM radio, then touch the On/Off icon  to switch on.

Touch the  or  icon to step back or forward to the next station in the channel list.

Touch the  or  icon to manually tune down or up in 0.1MHz steps.










Touch the Menu icon  in the lower left corner for the Options:


Channel list	to open a list of radio station channels that you can Play, Delete or Edit.
Manual input	to manually enter a new frequency to play.
Auto search	to scan for radio stations and save the channels in the Channel list.
Settings	Turn on/off Background play and Loudspeaker , or set the Audio quality and Record storage location.
Record	to record the currently playing radio channel.
File list	to see a list of recorded files.

When the radio is playing, touch the central On/Off icon  to switch the FM radio off, or touch the Return icon  in the lower right corner, to return to the main menu screen, but leave the radio playing, provided background play is turned on (see Settings above).

17 MUSIC

From the main menu screens, touch the **Music icon**


 to open the music player. Touch the Play icon  to start playing the selected track and touch other icons for Pause (||), Skip back , Skip forward , Loop off , Loop single track only , Loop all , Shuffle off  or on .

When in the Music player screen, touch the icon  in the lower left corner to display a list of available tracks, then touch Options for the options:

Play	to play the selected track.
Details	to show the details for the current track, including the size, duration and title.
Refresh list	to refresh the current music list.
Settings	to select the source of the playlist, List auto generate, Repeat and Shuffle modes, Background play mode and Audio effects.

18 TORCH

From the main menu screens, touch the **Torch icon**

 to display the torch controls and select **On** or **Off** to switch the torch on or off.

19 BLUETOOTH

From the main menu screens, touch the **Bluetooth**

icon  to open the Bluetooth menu:

Bluetooth	to power the Bluetooth On / Off
Visibility	to make the Bluetooth visible or not to other Bluetooth devices
My device	to search for new Bluetooth devices and see previously paired devices
Search audio device	to search for audio devices and pair.
My name	to change the name of your handset seen by other Bluetooth devices
Advanced	to set the Audio path, the storage location for any downloads and check the Bluetooth address

Note:

The Bluetooth must be turned on and visible to link with other devices, and the Audio path must be set to "Forward to Bluetooth headset" if you want to make calls via the Bluetooth link.

20 SAFETY AND PRECAUTIONS

When using your telephone, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Switch off the phone in the vicinity of chemical plants, gas stations and other locations containing explosive objects.
2. When driving, if you have to make or receive a call, please use a hands free calling device (to be purchased separately) to improve safety. Please

- park the car on the roadside for communication except in case of emergency.
3. Switch off the phone when boarding an airplane and do not switch the phone on during the flight, unless the airline specifically allow it.
 4. Be careful when using the mobile phone in the vicinity of devices such as pacemakers, hearing aids and other electro-medical equipment, which may be affected by mobile phones.
 5. Never attempt to disassemble the phone by yourself.
 6. Do not recharge the phone without a battery being installed.
 7. Charge the phone in a well-ventilated environment and keep away from inflammable and highly explosive elements.
 8. To avoid demagnetisation keep the handset away from magnetic substances, such as magnetic discs or credit cards.
 9. Keep the phone away from liquid. If soaking or erosion occurs, take the battery out and contact the supplier.
 10. Avoid using the phone in extremely high or low temperature environments. Never leave the phone exposed under direct sunlight, in high humidity or in a dusty environment.
 11. Do not use liquid or anything wet with strong detergents to clean the handset.

20.1 Charging your battery

Your device is powered by a rechargeable battery. The full performance of a new Battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged

and discharged hundreds of times but it will eventually wear out. When the talking and standby time is noticeably shorter than normal, please replace the battery. Use only approved batteries and recharge your battery only with approved chargers designated for this device.

If a replacement battery is being used for the first time or if the battery has not been used for a long period, it may be necessary to connect the charger, disconnect it and then reconnect it to begin charging the battery.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made. Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting will occur when a metallic object such as a coin, clip or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. This might happen, for example, if you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

Note:

Actual operation time of the battery varies according to operation mode, network settings and call settings.

Note:

- To ensure safety, do not change the parts and accessories of the battery by yourself or take off the battery shell.
- We suggest you only use the original battery supplied with your phone to avoid any damage to your phone.
- The temperature range for charging the phone is 0°C - 40°C. Do not charge the battery in extremely high or low temperatures.
- Do not use the mobile phone during charging.

20.2 Further safety information

The unit and the accessories can contain small parts. Keep them out of the reach of small children.

20.3 Operating environment

Remember to follow any particular rules that may apply wherever you happen to be and always turn off the unit whenever its use is forbidden, as it can cause interference or danger. Only use the units in its normal user position.

This unit complies with guidelines for radiation when it is used either in a normal position against your ear, or when it is at least 2.2 cm from your body.

If the unit is carried close to your body in a case, belt holder or other holder, these should not contain any metal and the product should be placed at the distance from your body specified above.

Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic elements near the unit, as information stored on them can be erased.

20.4 Medical units

The use of equipment that transmits radio signals, e.g. mobile phones, can interfere with insufficiently protected medical apparatus. Consult a doctor or the manufacturer of the apparatus to determine if it has adequate protection against external radio signals, or if you have any questions. Wherever there are notices to forbid use of mobile phones, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

20.5 Pacemaker

Pacemaker manufacturers recommend a distance of at least 15 cm. between a mobile phone and a pacemaker to avoid the risk of interference with the pacemaker. These recommendations are in accordance with independent research and recommendations from Wireless Technology Research. People with pacemakers should:

- not carry the unit in a breast pocket.
- hold the unit against the ear on the opposite

side from the pacemaker to reduce the risk of interference.

If you suspect that there is a risk of interference, turn off the unit and move it further away.

20.6 Hearing aids

Some digital wireless units can cause interference to some hearing aids.

20.7 Vehicles

Radio signals can affect electronic systems in motor vehicles (e.g. electronic fuel injection, ABS brakes, automatic cruise control, air bag systems) that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about your vehicle or any additional equipment.

For vehicles equipped with air bags: remember that air bags fill with air with considerable force.

Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand. Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air.

20.8 Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion and follow all signs and instructions. An explosion risk exists in the places that include areas where you are normally requested to turn off your car engine. Within such an area, sparks can cause explosions or fire which can lead to personal injuries or even death.

Turn off the unit at filling stations i.e. near petrol pumps and garages.

Follow the restrictions that are in force on the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress.

Areas with risk for explosion are often – but not always – clearly marked.

20.9 Emergency calls

Important!

Mobile phones use radio signals and the mobile phone network. This means that connection in all circumstances cannot be guaranteed.

Therefore you should never rely solely on a mobile phone for very important calls such as medical emergencies.

21 GUARANTEE AND SERVICE

The phone is guaranteed for 24 months from the date of purchase shown on your sales receipt. This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, lightning, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

Please keep your sales (till) receipt this is your proof of guarantee.

21.1 While the unit is under Guarantee

- Pack up all parts of your phone system.
- Return the unit to the shop where you bought it, making sure you take your sales receipt.
- Remember to include the mains adapter.

21.2 After the Guarantee has expired

If the unit is no longer under Guarantee, contact us via **[www. aegtelephones.eu](http://www.aegtelephones.eu)**

22 TECHNICAL DETAILS

Standard:	GSM Mobile
Frequency Band:	GSM900/DCS1800 MHz
System:	Phase 2G
Operating Time:	Standby around: 600Hours (with fully charged battery) Talk time : 4 hours
Charging Time:	<6 hours
Temperature Range:	Operating: 0 °C to 40 °C Storage: -20 °C to 60 °C
Handset Battery:	3.7V DC, 1200mAh Battery Pack
Travel Charger:	A31-1503-500550 100-240V AC,50/60Hz,
Input:	Max 0.15A
Output:	5.0V DC, 550mA
SAR Values :	
900 Mhz	0.271 W/kg 10g Head 0.630 W/kg 10g Body
1800 Mhz	0.134 W/kg 10 g Head 0.293 W/kg 10g Head

23 DECLARATION OF CONFORMITY

This product is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC.

The Declaration of conformity can be found on:
www.aegtelephones.eu

CE 1313

24 DISPOSAL OF THE DEVICE




At the end of the product lifecycle, you should not throw this product into the normal household garbage but take the product to a collection point for the recycling of electrical and electronic equipments. The symbol on the product, user guide and/or box indicates this. Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection points in your area.

Batteries must be removed before disposing of the device. Dispose of the batteries in an environmental manner according to your country regulations.

25 TROUBLESHOOTING

"Call failed" appears	Check dialled number is correct, with full area code.
SIM card fitted – only makes emergency call	Some SIM cards are thinner than others. Lightly press the SIM card holder to ensure a proper contact is made.
The mobile phone display is blank (screen off)	The phone is switched off. Press the End key for 3 seconds to switch it on again.
	The screen is in power save. Press any button to turn it on again.
Calling outside your own country	If you are away from your network provider, your phone may link with another GSM network.
	Contact your network provider for additional costs incurred using the phone abroad.
Can an emergency call be made without a signal or credit?	You cannot make a call if the phone has no signal.
	If your display says Limited Service, Emergency only or SOS, the phone cannot receive a signal from your network, or has run out of credit, so can only call the emergency number 112.
	You can call 112 if there is no credit on your phone.
How can reception be improved?	If the signal is weak, try another location to make or continue with a call, e.g. when indoors move towards a window. Reception is often poor in elevators, tunnels or underground railways and car parks.

<p>Can I suppress / withhold my telephone number?</p>	<p>If you want to withhold your phone telephone number, you will need to check with your service provider. (This network service may not be available).</p>
<p>No reaction when keys are pressed?</p>	<p>Press and hold the  button to unlock the keypad.</p>
<p>When do I start to incur call charges?</p>	<p>Charges start when a call connects to a person or an answering machine. There is no charge for writing or receiving an SMS, only when sending an SMS and none for using phone features e.g. alarm clock.</p>
<p>Did I successfully send my SMS?</p>	<p>If your SMS is in the SMS Sent messages box then it was OK, or you can get confirmation after the SMS is delivered – set Delivery report from Messages-Message settings-Text message SIM - or contact your operator for details.</p>

26 CERTIFICATION INFORMATION (SAR)

This model meets international guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines.

These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2.0 W/kg.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of the device while operating is typically below the above indicated level. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level requested to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure.

The World Health Organization has stated that present scientific information does not indicate the need for any special precaution for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

© 2014 Binatone Electronics International Limited

All rights reserved

Subject to availability. Rights of
modification reserved.

AEG is a registered trademark used under
license from AB Electrolux (publ)

www.aegtelephones.eu

