

## **SPECIAL NOTICE**

This product is now licensed to Anodyne Electronics Manufacturing (AEM) from Northern Airborne Technology (NAT). AEM is responsible for all matters related to this product, including sales, support and repair services.

Please note the transition to convert product manuals and supporting documentation is an ongoing process and is being addressed on an 'as needed' basis.

All references to NAT product part numbers (and associated images) are equivalent to AEM product part numbers.

Contact info: **Anodyne Electronics Manufacturing Corp.** #15-1925 Kirschner Road Kelowna B.C. Canada V1Y 4N7

Email: <a href="mailto:support@aem-corp.com">support@aem-corp.com</a>

Toll Free: **1-888-763-1088** Phone: 1-250-763-1088 Fax: 1-250-763-1089 <u>www.aem-corp.com</u>

#15-1925 Kirschner Road, Kelowna BC Canada, V1Y 4N7



# SM09-1

AA82 InterMUSIC<sup>™</sup> Stereo Intercom System



## **INSTALLATION AND OPERATION MANUAL**

REV 2.00 April 16, 2012

Anodyne Electronics Manufacturing Corp. 15-1925 Kirschner Road Kelowna, BC, Canada. V1Y 4N7

> Telephone (250) 763-1088 Facsimile (250) 763-1089

Website: www.aem-corp.com

© 2012 Anodyne Electronics Manufacturing Corp. (AEM), All Rights Reserved



### **COPYRIGHT STATEMENT**

© 2012 Anodyne Electronics Manufacturing Corp. (AEM), All Rights Reserved

This publication is the property of AEM and is protected by Canadian copyright laws. No part of this document may be reproduced or transmitted in any form or by any means including electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of AEM.



Prepared By:	Checked By:	Approved By:
Tony Pearson Designer Apr 16, 2012	Loen Clement Designer May 24/12	Tom Betzelt Product Support Manager May 28, 2012

The status of this installation and operation manual is controlled by issue shown on the title page. The status of each section is controlled by revision shown in the footer of each page. All revisions affecting sections of this manual have been incorporated into the latest issue.

ISSUE/REVISION RECORD									
Manual Issue Number	Section Revision Number	Revision Description	Issue Date						
4.11	Section 1 Rev: 1.00 Section 2 Rev: 1.00 Section 3 Rev: 1.00	Updated Installation Kit Information. Update to current templates.	Aug 29, 2008						
	AEM MA	NUAL REVISIONS							
Section	Revision Number	Revision Description	Date						
All	Rev 2.00	Updated drawings and template	April 16, 2012						



### **Table of Contents**

Section	Title	Page
1.0	Description	
1.1	Introduction	1-1
1.2	Purpose of Equipment	1-1
1.3	Design Features	1-1
1.4	Specifications	1-2
1.4.1	Electrical Specifications	1-2
1.4.2	Physical Specifications	1-3
1.4.3	Environmental Specifications	1-3
2.0	Installation	
2.1	Introduction	2-1
2.2	Unpacking and Inspection	2-1
2.2.1	Warranty	2-1
2.3	Continued Airworthiness	2-1
2.4	Installation Procedures	2-1
2.4.1	Warnings	2-1
2.4.2	Cautions	2-2
2.4.3	Cabling and Wiring	2-2
2.4.4	Mounting	2-2
2.4.5	Post Installation Checks	2-3
2.5	Adjustments and Connections	2-3
2.5.1	Radio Settings	2-3
2.5.2	Setting Up Music and Muting	2-4
2.5.3	Setting Balance and Bass Potentiometers	2-4
2.5.4	Other ICS Functions	2-4
2.5.5	Music Selection (AA82-060 only)	2-5
2.5.6	Final Check	2-5
2.6	Accessories Required	2-6
2.7	Installation Drawings	2-7
3.0	Operation	
3.1	Introduction	3-1
3.2	General Information	3-1
3.3	Controls and Indicators	3-1
3.3.1	Stereo & Intercom Special Features	3-2
3.3.2	Logic Explanation	3-2
3.3.3	Tie/Split Operation	3-2



## **Section 1.0 Description**

#### 1.1 Introduction

Information in this section consists of product description, design features and specifications for the AA82 InterMUSIC<sup>™</sup> Stereo Intercom System. All derivative product information shall be contained in the applicable manual supplement, which may be obtained from AEM as required.

Review all notes, warning and cautions.

#### 1.2 Purpose of Equipment

The AA82 InterMusic<sup>™</sup> Stereo Intercom System is a system for passenger entertainment and communications. The system is available in two models, the AA82-001 and AA82-060. The AA82-001 is compatible with AA80 intercoms and allows four stereo positions. The AA82-060 is compatible with AA83 intercoms and allows six stereo positions. Each is linked via the ICS Tie Line to the crew audio system.

The AA82 InterMUSIC<sup>™</sup> Stereo Intercom offers the passengers full control of their intercom and entertainment functions. The front panel controls permit adjustment of Intercom level, VOX threshold and Music level. Internal adjustments set Receive level, Receive Balance, ICS balance, ICS bass, Music muting and Music balance. These controls allow unique features such as making the intercom audio appear to be coming from the left and receive audio coming from the right, which is helpful in relating the audio to the source. The stereo audio is muted during intercom operation or when receive audio is detected, permitting greater intelligibility of in-coming transmissions. A front panel annunciator allows easy visual setting of the VOX threshold and also indicates RX signal reception.

#### 1.3 Design Features

The AA82 uses surface mount technology and provides true stereo music audio to the headset.

The Inter MUSIC<sup>™</sup> system employs NAT's unique audio processing, which reduces noise and tailors the frequency response to produce clean, crisp intercom audio.

High output power and low distortion results in better on-board communication and greatly reduces noise fatigue.

Employing highly integrated stereo audio processors, component numbers were substantially reduced and product reliability is increased.

With the reduction of component size, more features were incorporated (Adjustable music muting by intercom and receive audio, bass control of intercom and stereo audio).

Designed into the smallest possible chassis, it allows mounting in the remotest locations usually close to the passengers).



The AA82's ICS Tie Line is fully compatible with existing AEM products, making it possible to chain multiple systems together (3 units max).

The unit has overvoltage and reverse voltage protection to insure operability in severe aircraft environments.

#### 1.4 Specifications

1.4.1	Electrical Specifications	
	Input Power	+11 to +32 Vdc
	Supply Current	385 mA max. (full output power)
	Headset Power	400 mW per channel (total power) 100 mW typical into each headset element (300 Ω/side) 4 headsets (AA82-001) 6 headsets (AA82-060)
	Lighting	160 mA at 28 Vdc 600 mA at 5 Vdc
	Modes of Operation	Voice track trigger circuit Adjustable treshold on panel Live or Hot mic by rotating VOX control counterclockwise
	Indicators	Receive monitor (Green LED) VOX ICS triggered (Amber LED)
	Front Panel Controls	ICS Volume Music Level VOX Threshold
	Internal Side Panel Controls	RX Volume RX Balance ICS Balance Music Balance
	Inputs (AA82-001) output	<ul> <li>4 microphone 'carbon equivalent', 250 mVrms for full</li> <li>150 Ω input inpedance</li> <li>4 ICS keylines (active ground) for all users</li> <li>2 music inputs compatible (left &amp; right), configurable for portable CD/cassette/etc, phones compatible (3 Vp-p)</li> </ul>



	Inputs (AA82-060)	4 microphone 'carbon equivalent', 250 mVrms for full				
	output,	150 $\Omega$ input impedance 6 ICS keylines (active ground) for all users 2 music inputs compatible (left & right), configurable for either portable CD/cassette, phones compatible (3 Vp-p) or CD changer Line Out Compatible (100-500 mV @ 10 k $\Omega$ )				
	Inputs (all models)	1 radio input, 2.5 Vrms for full output, 1 $k\Omega$ input				
	impedance	bi-directional ICS Tie Line, 1 Vp-p for full output, 2 $k\Omega$ input impedance				
	Outputs (AA82-001)	4 aircraft stereo headsets (300 $\Omega$ / side) <b>Note</b> : Not designed for 8 $\Omega$ headsets.				
	Outputs (AA82-060)	6 aircraft stereo headsets (300 $\Omega$ / side) <b>Note:</b> Not designed for 8 $\Omega$ headsets				
	Logic	ICS and RX audio both muted the music channel No emergency or transmit functions.				
1.4.2	Physical Specificatio	ons				
	Height	1.30" (33.0 mm)				
	Depth	5.60" (142.2 mm) excluding front panel controls				
	Width	2.60" (66.0 mm)				
	Weight	0.6 lbs (283.5 g) excluding external hardware				
	Mounting	Horizontal or vertical with reversible faceplate for through-panel mounting				
1.4.3	Environmental Spec	ifications				
	Temperature	-40° C. to +70° C (operating) -55°C to +85°C (storage)				
	Humidity	95% Non-condensing				
	Altitude	25,000 feet max				
		End of Section 1.0				



## Section 2.0 Installation

#### 2.1 Introduction

Information in this section consists of unpacking and inspection procedures, installation procedures, postinstallation checks and installation drawings for the AA82 InterMUSIC<sup>™</sup> Stereo Intercom System.

Review all notes, warnings and cautions.

#### 2.2 Unpacking and Inspection

Unpack the equipment carefully. Inspect the unit visually for damage due to shipping and report all such claims immediately to the carrier involved. Check that all items listed below are present before proceeding and report any shortage immediately to your supplier:

- AA82 InterMUSIC<sup>™</sup> Stereo Intercom System
- Product Information Card
- Certificate of Conformity or Release Certification
- Installation kit with faceplate (crimp type connector)

#### 2.2.1 Warranty

All Anodyne Electronics Manufacturing Corp. (AEM) products are warranted for 2 years. See the website www.aem-corp.com/warranty for complete details.

#### 2.3 Continued Airworthiness

Maintenance of the AA82 InterMUSIC<sup>™</sup> Stereo Intercom System is 'on condition' only. Periodic maintenance of this product is not required.

#### 2.4 Installation Procedures

#### 2.4.1 Warnings

WARNING: High volume settings can cause hearing damage. Set the headset volume control to the minimum volume setting prior to conducting tests, and slowly increase the headset volume to a comfortable listening level.

April 16, 2012 Rev: 2.00 ENG-FORM: 805-0100.DOTX



2.4.2 Cautions

#### CAUTION:

DO NOT use mono aircraft headsets in this system. Mono aircraft headsets will short out one side of the AA82 power amplifier when installed in the stereo jacks. This may result in eventual unit failure. Use only stereo headsets with this system.

#### 2.4.3 Cabling and Wiring

All wire shall be selected in accordance with the original aircraft manufacturer's Maintenance Instructions or AC43.13-1B Change 1, Paragraphs 11-76 through 11-78. Unshielded wire types shall qualify to MIL-W-22759 as specified in AC43.13-1B Change 1, Paragraphs 11-85, 11-86, and listed in Table 11-11. For shielded wire applications, use Tefzel MIL-C-27500 shielded wire with solder sleeves (for shield terminations) to make the most compact and easily terminated interconnect. Follow the connector map in Section 2.7 as required.

Allow 3" from the end of the shielded wiring to the shield termination to allow the connector hood to be easily installed. Reference the interconnect drawing in Section 2.7 for shield termination details. Note that the hood is a "clamshell" hood, and is installed after the wiring is complete. Aircraft harnessing shall permit the unit to be removed from the panel for easy access to all side adjustments. Do NOT mount the unit until all adjustments have been performed.

Maintain wire segregation and route wiring in accordance with the original aircraft manufacturers Maintenance Instructions.

Unless otherwise noted, all wiring shall be a minimum of 24 AWG, except power and ground lines, which shall be a minimum of 22 AWG. Reference the Interconnect drawing for additional specifications. Check that the ground connection is clean and well secured, and that it shares no path with any electrically noisy aircraft accessories such as blowers, turn and bank instruments or similar loads. Power to this unit must be supplied from a separate circuit breaker or fuse (fast blow), and not attached to any other circuit breaker without additional protection. Verify that the selected circuit breaker size and wire gauge are adequate for the installation using the techniques specified in AC43.13-1B Change 1, Paragraphs 11-47 through 11-51 and 11-66 through 11-69.

#### 2.4.4 Mounting

The AA82 InterMUSIC<sup>™</sup> Stereo Intercom can be mounted in either a vertical or horizontal orientation. Place the adhesive backed drill template in an appropriate place on the instrument panel and drill through the indicated locations. The mounting nuts on the faceplate controls should not be removed at any time. The clearance holes for the nuts should be 3/8" to allow them to fit through the instrument panel. The unit is secured by three black Phillips screws, which require 5/32" holes.

Notes: 1) The clock mount faceplate used with the AA80 Series is not supplied.

2) Perform all functional tests and adjustments prior to mounting. Secure the unit to the panel prior to flight.



#### 2.4.5 Post Installation Checks

#### 2.4.5.1 Voltage/Resistance Checks

#### Do not attach the AA82-xxx until the following conditions are met.

Check the following for the AA82-001:

- a) Check pin 1 for +11 to +32 Vdc relative to ground.
- b) Check pin 14 for continuity to ground (less than  $0.5\Omega$ ).

Check the following for the AA82-060:

- a) Check pin 1 for +11 to +32 Vdc relative to ground.
- b) Check pin 16 for continuity to ground (less than  $0.5\Omega$ ).

#### 2.4.5.2 Power On Checks

Power up the aircraft's systems and confirm normal operation of all functions of the AA82-xxx. Reference Section 3 for specific operational details.

- a) Check that headsets are installed correctly.
- b) To verify proper operation, all functions and levels shall be checked in-flight.
- c) Check preset adjustments are completed before aircraft departure.

Upon satisfactory completion of all performance checks, make all required log book entries, electrical load, weight and balance amendments and other documentation as required by your local regulatory agency before releasing the aircraft for service.

#### 2.5 Adjustments and Connections

All AA95/AMS4X Audio Controllers used with the AA82 must have the ICS Tie Line and Gain Modifications installed. This applies to units with a serial number less than 1918.

The AA82-xxx has internal trimpot adjustments accessible through holes in the right and left sides of the unit. The AA82-060 also has internal jumper settings for music input types. Reference Section 2.5.5 for jumper settings.

#### 2.5.1 Radio Settings

To achieve correct radio volume settings, check that the headset radio level is acceptable. This adjustment should be made with the radio volume set to about 50%. Adjust the headset volume control (if it exists) for something less than full volume, such as 75% (full output on active headsets will give the worst over-all signal to noise ratio, as it will increase the low level noise floor). Adjust the RX VOL on the side of the AA82 to a preferred level.

Check that the music is muting at this stage when a radio signal is received. If not, the radio itself set too low and must be increased at the radio to properly activate the internal muting circuit in the AA82. Once the radio settings are satisfactory, perform all other adjustments. The RX VOL trimpot sets only the radio level heard during normal operation and has no effect on any other function, including muting.



#### 2.5.2 Setting Up Muting and Music

Rotate the front panel VOX potentiometer until the VOX indicator is off. The music audio can now be heard. Adjust the music to a comfortable level with the front panel potentiometer. If the music is louder in one ear than the other, the side panel MUSIC BAL control may need adjusting, although this could be a problem with your music source, as this adjustment should be correct from the factory.

With the front panel VOX potentiometer turned fully counter-clockwise (LIVE ICS, the indicator should be ON), adjust the MUSIC MUTE trimpot to the desired level of music audio in the background. This is the level the music will default to whenever it is muted and can range from OFF to only slightly muted as preferred.

#### 2.5.3 Setting Balance and Bass Potentiometers

With the VOX control still in the LIVE ICS position, talk back and forth on the intercom to determine the voice quality. If more bass is desired, the ICS BASS potentiometer may be adjusted for the preferred tone. Check that this adjustment is compatible with the headsets and that it does not increase distortion. If the ICS audio seems distorted, reduce the ICS BASS potentiometer for best results. Some aircraft headsets do not have very good internal microphone amplifiers and achieve "noise reduction" by shunting the microphone with a large capacitor to reduce high frequency noise. This may make the voice very bass heavy and muffled. Best results were obtained in AEM testing with the following headsets:

Bose (may require re-wiring of plug for stereo) David Clark (may require modification for stereo)

Most aircraft headsets do not do a good job of reproducing wide bandwidth music information, which seriously compromises the performance of the AA82. AEM will test any headset for system compatibility if the unit is supplied for evaluation with the AA82.

If you wish the ICS audio to come from a particular location (left to right), adjust the ICS BAL potentiometer for the desired position.

**Note:** If you have not controlled the Left/Right headset jack wiring, it may appear to change locations between different users.

Set the location to suit your preference, listen to an incoming radio transmission and position it (ideally) in the opposite location with the RX BAL trimpot. The best setup should give some perceived difference in location for these two sources (radio & ICS), as it will improve recognition of who is speaking in the system.

#### 2.5.4 Other ICS Functions

Check all installed functions and check the ICS function for all users. The VOX potentiometer on the front controls all passengers. Adjust as needed for the best performance.

- **Note:** Significantly different headsets may have different microphone characteristics, which affect VOX squelch settings.
- **Note:** The David Clark M-7 microphone is more active than M-4 or M-1 microphones and may aggravate headset imbalance if used in a mixed system.



To test KEYED ICS operation of the AA82-060, be sure the VOX potentiometer is set fully clockwise and all ICS audio is shut off. Keying the ICS switches should activate the specific microphone involved.

**Note:** Each microphone is individually gated in the AA82-060 and only the microphone involved with a key signal is activated.

The front panel indicator should illuminate orange when there is activity on the intercom.

#### 2.5.5 Music Selection (AA82-060 only)

The cover of the unit must be removed in order to access jumper locations. Reference Section 6 for Exploded View AA82\060\904-0 and Component Locator AA82\060\924-0 drawings.

**Note:** The AA82 is a static sensitive device. Use proper ESD handling procedures when the cover is removed.

To gain access to the jumpers, remove the cover from the AA82. Remove the top PCB by removing the three pan head screws and carefully lifting it straight up. When reassembling the unit check that the pins and connector are aligned properly before screwing the PCB down.

The two types of music inputs are configured by the position of jumpers JP101 and JP102, located on the main PCB near the access hole for Q101. Music input type is determined as shown in Table 1:

Music Input Type	Jumper Positions
Low Z/Portable cassette/CD compatible	JP101 and JP102 Installed
High Z/CD changer compatible	JP101 and JP102 Removed

Table 1 Music Input Type and Jumper Position

#### 2.5.6 Final Check

Before leaving the aircraft, check that the mating connector is securely fastened to the AA82 and the unit is securely fastened to the aircraft panel.



#### 2.6 Accessories Required

Installation kit p/n AA82-001-IKC (25 pin D-min Female Crimp) is required to complete the installation. The kit includes AEM Part No. D25SL-IKC.

#### AA82-001-IKC consists of:

Quantity	Description	AEM Part No.
1	D-min 25 Socket Housing	20-21-025
25	MS Crimp Socket	20-26-901
1*	Jack Screw Set	20-27-002
1*	Lock Clip Set	20-27-004
1	25 Pin Connector Hood	20-29-026
3	5/8" 6-32 Black Pan Head Screw	25-11-427
2	Fluted 1/8" Knob	40-18-002
1	Fluted 1/8" Music Knob	40-18-MUS2
1	Hole Overlay	43-10-083
1	Rectangular Faceplate	50-04-821
* Use as required.		

Installation kit p/n AA82-060-IKC (44 pin D-min Female Crimp) is required to complete the installation. The kit includes AEM Part No. D44SL-IKC.

#### AA82-060-IKC consists of:

Quantity	Description	AEM Part No.
1	D-min 44 Socket Housing	20-20-044
44	Mini D Crimp Socket	20-26-703
1*	Jack Screw Set	20-27-002
1*	Lock Clip Set	20-27-004
1	25 Pin Connector Hood	20-29-026
3	5/8" 6-32 Black Pan Head Screw	25-11-427
1	Fluted 1/8" ICS Knob	40-18-ICS2
1	Fluted 1/8" Music Knob	40-18-MUS2
1	Fluted 1/8" VOX Knob	40-18-VOX2
1	Hole Overlay	43-10-080
1	Rectangular Faceplate	50-04-821
* Use as required.		



#### 2.7 Installation Drawings

Use of the "#" symbol in the REV. column indicates that the document is listed elsewhere in the manual. Refer to the applicable AEM Part No. to locate the referenced document.

DOCUMENT AA82-001	REV.	DESCRIPTION	TYPE	SERIAL NO.
AA82\001\302-0	1.02	InterMUSIC Stereo Intercom	Block Diagram	All
AA82\001\403-0	1.01	InterMUSIC Stereo Intercom	Interconnect	All
AA82\001\405-0	1.01	InterMUSIC Stereo Intercom	Connector Map	All
AA82\001\921-0	1.00	InterMUSIC Stereo Intercom	Mounting Plate	All
AA82-060				
AA82\060\302-0	1.01	InterMUSIC Stereo Intercom	Block Diagram	All
AA82\060\403-0	1.31	InterMUSIC Stereo Intercom	Interconnect	All
AA82\060\405-0	1.02	InterMUSIC Stereo Intercom	Connector Map	All
AA82\001\921-0	#	InterMUSIC Stereo Intercom	Mounting Plate	

Section 2.0 ends following the above documents



1 14 2 15 3 16		20 AWG. 20 AWG. 22 AWG.			9 TO +32VDC PWR GND DIO OR
2 — 15 — 3 —				-	
15 — 3 —		22 AWG.			
15 — 3 —			$\overline{\underline{\vee}}$	- HIIRAI	
3 —	$\bigcirc$				DIO OR DIO PANEL
1 1	$\bigcirc$				
1 1	1 1	22 AWG.	$\bigcirc$		
	$\square$		$\bigvee$	- LO RIGI	HT CHANNEL
4 —	$\bigcirc$	22 AWG.	$\frown$		PE PLAYER T CHANNEL
17			Y		
	$\bigcirc$	22 AWG.	$\frown$		
	Y		$\bigvee$	- BARREL	PAX #1 Mic jack
		22 AWG.	$\bigcirc$		 
					PAX #1
	$\bigcirc$		4	BARREL	STEREO JACK
20	$\bigcirc$	22 AWG.	$\bigcirc$	RING	PAX #2
			$\bigvee$	BARREL	MIC JACK
	$\square$	22 AWG.	$\frown$		
8				- RING	PAX #2 Stereo jack
	$\bigcirc$		Y	BARREL	STEREO DACK
22 -	$\frown$	22 AWG.	$\frown$	RING	PAX #3
23 —	-		$\checkmark$	BARREL	MIC JACK
9 —		22 AWG.	$\bigcirc$	- TIP	
10 -	$\overline{\bigcirc}$			RING	PAX #3 Stereo jack
				<u> – Barrel</u>	
24 —	$\frown$	22 AWG.		RING	PAX #4
25 —	-		\	BARREL	MIC JACK
11 -	$\wedge$	22 AWG.		TIP	
12 -				RING	PAX #4 Stereo Jack
				- RAKKEL	
	$\frown$	22 AWG.	$\frown$	17	INTERCOM OR
			$\overline{\mathbf{v}}$	GND	AUDIO CONTROLLER
REVISIO		-	THERN		
	16         4         17         18         19         5         6         20         21         7         8         22         23         9         10         24         25         11         12         13	16       0         4       17         18       19         19       0         5       1         6       0         20       0         21       0         7       1         8       0         22       0         23       0         9       1         10       0         24       0         25       0         11       1         12       0         13       0         REVISION       DATE	3       16       22 AWG.         16       22 AWG.         17       22 AWG.         18       22 AWG.         19       22 AWG.         5       1 1         6       22 AWG.         20       22 AWG.         21       22 AWG.         7       22 AWG.         11       22 AWG.         22       22 AWG.         23       22 AWG.         9       1 1         10       22 AWG.         24       22 AWG.         13       22 AWG.         13       22 AWG.	3       16       22 AWG.         16       22 AWG.       1         17       17       1         18       22 AWG.       1         19       22 AWG.       1         5       1       1         6       1       1         20       22 AWG.       1         20       22 AWG.       1         21       22 AWG.       1         7       1       1         8       1       1         10       22       22 AWG.         22       22 AWG.       1         10       1       1         11       1       1         12       22 AWG.       1         13       22 AWG.       1	3       16       22 AWG.       Hi       RIG         4       17       22 AWG.       Hi       LO         18       22 AWG.       RING       BARREL         19       22 AWG.       TIP       RING         5       1       1       RING       BARREL         20       22 AWG.       TIP       RING         21       22 AWG.       RING       BARREL         20       22 AWG.       TIP       RING         21       22 AWG.       RING       BARREL         20       22 AWG.       TIP       RING         21       22 AWG.       TIP       RING         7       1       1       TIP         8       22 AWG.       TIP       RING         9       1       1       TIP       RING         9       1       22 AWG.       TIP       RING         11       1       1       TIP       RING         12       22 AWG.       1       TIP       RING         13       22 AWG.       13       TIP       RING         13       22 AWG.       13       MARREL       13         13<

EVISION	DATE			I DOIIIIODOU I					
-	OCT 30/90	DESIGNED BY	DESCRIPTION						
1.01	MAY 24/94	K. VEITCH	INTERMUSIC STEREO INTERCOM						
		DRAWN BY	PART NUMBER	DR	AWING TYPE	SHEET			
		K. VEITCH	AA82-001	INT	FERCONNECT	1/1			
		APPROVED BY	DRAWING NUM	DRAWING NUMBER		ER			
		NAT R&D 101	AA82-001\40	3-0	AA82-001\403-0101				

## INTERMUSIC INTERCONNECT

	TAPE   PA> #1		PAX #1						4X \$2		PAX #3	2	₽#			
9-32 VDC PWR	RADIO AUDIO	MUSIC RIGHT	MUSIC LEFT	H/S R AUDIO	H/S L AUDIO		u/e d ai inio	H/S L AUDIO	H/S R AUDIO			H/S B AI INIO	H/S L AUDIO	ICS TIE LINE		
	2	3	4	5			7	8	9				12	13		
14	1.			7	0 18	0 19	2		21	<b>O</b> 22	0 23	2.		5		
- GND					MIC	COM	MIC		COM	MIC	COM	MIC				

# **Confidential and Proprietary to NAT**

DATE	🔆 nat NORI	THERN AIRBO	ORNE	TECHNOLOGY	LTD.		
MAY 10/90	DESIGNED BY		DESCRIPTION				
MAY 16/94	K.VEITCH	INTERM	INTERMUSIC STEREO INTERCOM				
	DRAWN BY	PART NUMBER	DR	AWING TYPE	SHEET		
	K. VEITCH	AA82-001	CONNECTOR MAR		1/1		
	APPROVED BY	DRAWING NUMBER		FILE NUMBER			
	NAT R&D	AA82-001\405-0 AA82-001\405-			5-0101		
	MAY 10/90	MAY 10/90         DESIGNED BY           MAY 16/94         K.VEITCH           DRAWN BY         K. VEITCH           K. VEITCH         K.VEITCH	MAY 10/90         DESIGNED BY           MAY 16/94         K.VEITCH         INTERM           DRAWN BY         PART NUMBER           K. VEITCH         AA82-001           APPROVED BY         DRAWING NUM           NAT R&D         AA82-001\40	MAY 10/90 DESIGNED BY DESCR MAY 16/94 K.VEITCH INTERMUSIC ST DRAWN BY PART NUMBER DR K. VEITCH AA82-001 CON APPROVED BY DRAWING NUMBER NAT R&D AA82-001\405-0	MAY 10/90     DESIGNED BY     DESCRIPTION       MAY 16/94     K. VEITCH     INTERMUSIC STEREO INTERCOM       DRAWN BY     PART NUMBER     DRAWING TYPE       K. VEITCH     AA82-001     CONNECTOR MAP       APPROVED BY     DRAWING NUMBER     FILE NUMB       NAT R&D     AA82-001\405-0     AA82-001\405		





										REVISIONS					
					REV		[	DESCRIPTIO	N				DATE	B	Y
							MOUS	REVISIONS	SEE	401-0130.0	DWG				
					1.30	and the second se				S 22/24AWG			MAR 18/97	TG	M
			D101		1.31					RRENT NAT		RDS.	NOV 10/00	TA	
	AA82-060	_J101	P101 44 PIN	FEMALE	DMIN								AME CONNECTION		
			MATINO	G CONNEC	TOR						т			5	
	INPUT POWER										$\neg$	/	+9 TO +32 VD	POV	WFR
	POWER GROUND	1						Constants Co			1A	-	POWER GROUND		TCIN
	FOWER GROUND	10										그	POWER GROUND		
											~	<u> </u>			
	RADIO AUDIO HI	2										н	RADIO OR		
	RADIO AUDIO LO	17	F								Y	LO	AUDIO PAN	EL	
											$\cap$				
	MUSIC RIGHT HI	3	TV I								U	HI	RIGHT CHANI	NEL	
	MUSIC LEFT HI	18			5.55							н	LEFT CHANN		
	MUSIC COMMON	32	LY								Y	LO	TAPE PLAY		
	and the second									Ţ		<u> </u>	TALE LEAN		
	PAX 1 ICS KEY	10									<u>-</u>		DAX 4		
	PAX 1 MIC HI	25	+								-/ \		PAX 1 MIC JACK		
	PAX 1 MIC LO	39									۲		MIC UACK		
	PAX 1 PHN RIGHT	4									$\cap$				
	PAX 1 PHN LEFT	19			- 22				10000				PAX 1		
	PAX 1 PHN LO	33	FY		*					-	Y		STEREO JA	CK	
	PAX 2 ICS KEY	11								T	-			_	
	PAX 2 MIC HI	26	$\square$										PAX 2		
	PAX 2 MIC LO	40	LY								Y		MIC JACK		
	PAX 2 PHN RIGHT	5									$\cap$			=	
	PAX 2 PHN LEFT	20	11								11		PAX 2		
	PAX 2 PHN LO	34	LY							-	Y		STEREO JAC	ск	
	PAX 3 ICS KEY	12									<b>-</b>			=	
	PAX 3 MIC HI	27											PAX 3		
	PAX 3 MIC LO	41	LY								Y		MIC JACK		
														_	
	PAX 3 PHN RIGHT PAX 3 PHN LEFT	6 21	11								11	1	PAX 3		
	PAX 3 PHN LO	35	L Y								Y	1	STEREO JAG	СК	
	PAX 4 ICS KEY	13									_				
													PAX 4		
	PAX 4 MIC HI PAX 4 MIC LO	28 42	Y			and the second					Ŷ	1	MIC JACK		
											$\sim$			_	
	PAX 4 PHN RIGHT	7					HO: HEC				11		PAX 4		
	PAX 4 PHN LEFT PAX 4 PHN LO	22 36	LY								Y	1	STEREO JAG	ск	
15	PAX 4 PHIN LO	14													
										•••	1		PAX 5		
÷	PAX 5 MIC HI	29	FU								0		MIC JACK		
Ť	PAX 5 MIC LO	43									τ				
1	PAX 5 PHN RIGHT	8					- <u></u>						DAY E		
	PAX 5 PHN LEFT	23									11		PAX 5 STEREO JA	CK	
	PAX 5 PHN LO	37	<u> </u>							_ <b>T</b> _	ĭ		STEREO VA		
	PAX 6 ICS KEY	15			-					, <sup></sup> T	<u> </u>				
	PAX 6 MIC HI	30											PAX 6		
			ΙΎ								Y		MIC JACK		
	PAX 6 PHN RIGHT	9	$\land$								$\cap$				
	PAX 6 PHN LEFT	24									11		PAX 6		
	PAX 6 PHN LO	38	LY								Y_		STEREO JAC	CK	
	ICS TIE HI	44	$\cap$	0							$\cap$	н	ICS T	5	$\wedge$
	ICS TIE LO	31	LY								Y_	LO	EXPANS		2
										•					
		-				PROPI	RIETA	RY AND	co	NFIDENTIA	AL TO	NA	T LTD.		
Ν	OTES:			DESIGN	ED	KV	-		ויזיסו		DODN	TP TP	ECHNOLOCY	. 10	m
1	ALL WIRES SHOULD BI			DRAWN		KV			JK1	<b>HERN AIR</b>	DOKN	E I.	ECHNOLOGY	L1	. <b>D</b> .
	UNLESS OTHERWISE SI WIRE SHOULD BE IN A			DATE	C	CT 30/90	TITIE								-
WIRE SHOULD BE IN ACCORDANCE DATE WITH MIL-W-22759. ALL SHIELDED		A	<u></u>	INICE			INTE	RMUSI	С						
	WRE/CABLE SHOULD			CHECKE		T NAT				STEREO	INTER	RCON	A		
	ACCORDANCE WITH MI	L-C-	2/500.		Y	4 223									
TO BE USED FOR EXPANSION OF APPROVED NAT SIZE CAGE CODE PART NO.						12 1									
	TO INSTALLATION MAN			APPROV		(113)	A	3AB0	1	A	A82-0	060	1.31	11,	/1
	DETAILS.			FILE 4	103-0	0131.DWG	DWG.	TYPE	INTE	RCONNECT	DWG.	NO.	AA82\060\4	03-0	5
								The second s							







### Section 3.0 Operation

#### 3.1 Introduction

Information in this section consists of functional and operational procedures for the AA82 InterMUSIC<sup>™</sup> Stereo Intercom System.

#### 3.2 General Information

The AA82 is available in two models, the AA82-001 and AA82-060. Both are designed for passenger entertainment and communications. The AA82-001 is compatible with AA80 series intercom and allows four stereo positions. The AA82-060 is compatible with AA83 series intercoms and allows six stereo positions. Each is linked via the bi-directional ICS Tie Line to the crew audio system.

#### 3.3 Controls and Indicators

The front panel controls shown in Figure 1 permit user adjustment of frequently needed signals, such as Intercom Audio Level (ICS Volume), Microphone VOX Threshold (VOX Squelch) and Music Level (Musical Note).



Annunciator

Figure 1: Front Panel Controls

Internal adjustments set default values for Receive Audio Level, Receive Balance, ICS Balance, ICS Bass, Music Muting and Music Balance. These extensive controls allow some unique features, such as making the intercom and radio sources appear from distinct listening space positions to aid in recognition.

Music Muting allows the dynamic range of the music muting function to be set to suit individual preferences and Bass adjustments allow tailoring to the exact characteristics of the headsets chosen. Music muting occurs in a smooth, fast attack/slow return sequence, for maximum comfort and clarity of communication in all modes.



#### 3.3.1 Stereo & Intercom Special Features

The stereo music audio is muted during intercom operation and when radio receive audio is detected, permitting greater intelligibility of incoming transmissions. The AA82 Muting adjustment ranges from complete music muting to gentle background music on command, with a fast attack and slow level return for optimum user comfort. Each microphone is individually gated for the best possible noise performance during VOX operation. A front panel annunciator allows easy visual setting of the VOX threshold and also indicates radio signal reception.

#### 3.3.2 Logic Explanation

When ICS or RX functions are active, any music will be muted quickly as shown in Table 1. The music will slowly return when transmission is completed. The degree of muting is set at the time of installation. The relative volume of the music can be changed from the front panel by adjusting the music volume knob marked with a musical note.

- Active: Function being used
- Muted: Functions that are overridden by the active condition
- Idle: Functions that are not active, but still available for use

Music	ICS	RX
Active	Idle	Idle
Muted	Active	Idle
Muted	Idle	Active
Muted	Active	Active

Tab	ole 1
Music	Muting

#### 3.3.3 Tie/Split Operation

The crew audio system that the AA82 is connected to may have a Tie/Split mode of operation. The crew's Tie/Split switch connects or disconnects the ICS Tie Line from the passengers' intercom system. Intercom between the passengers is maintained, but they are cut off from the crew ICS and radio audio. Many different circuit combinations can be set up depending on what device is hooked to the Tie Line.

End of Section 3.0