

# ELBA

## **TUMBLE DRYER** **MODEL: ED-B7610ES(WH)**

### **Owner's Manual**

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

**For The Warranty Terms & Conditions, Please Refer To Warranty Certificate**

REMOVE ALL PACKING MATERIALS FROM THIS PRODUCT BEFORE USING IT. THIS APPLIANCE MUST BE INSTALLED IN LEVEL. PLEASE ENSURE THE ELECTRICITY SUPPLY TO THIS APPLIANCE IS DISCONNECTED BEFORE INSTALLING.

Please read this instruction carefully. It is advisable to keep this instruction manual in a safe place for future reference.

## **SAFETY PRECAUTIONS**

1. Keep this appliance out of reach from children. Do not let them to operate the appliance without supervision.
2. Check the current rating on the rating plate and make sure the current supplied is matched with the appliance before using.
3. This product is for household and indoor use only.
4. This product is not intended for use by person (including children) with reduced physical, sensory or mental capabilities unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. If the power cord or plug is damaged, it must be replaced by the service centre or a qualified service technician to avoid hazard.
6. Any electrical work required to install this appliance should be carried out by a qualified technician or competent personnel.

**WARNING - to reduce the risk of fire or injury to persons or property, please read and follow below instructions carefully:**

- Do not operate this appliance if it has malfunctioned, damaged or appears damaged in any way. Make enquiry to our service centre and return the complete set to the place of purchase for inspection, repair or replacement.
- This appliance must be grounded and the ground wire should not be connected to any heating pipe and gas pipe.
- Avoid placing any objects into the appliance such as coins, nails, screws, or objects which may cause severe damage to the drum.
- Objects made with rubber or any latex material such as hand gloves and shower caps should not be dried in the tumble dryer at any time.
- Laundry which has been contaminated with flammable substance such as petrol, kerosene, cooking oil or turpentine should be washed in hot water with detergent before drying with this appliance. Only tumble dry laundry washed with water.
- If the tumble dryer is place on top of a washing machine, it is compulsory to use the stacking kit (optional accessory) to hold the appliance.
- Do not overload the appliance. Laundry which is dripping wet should not be dried with the appliance.

## **INSTALLATION**

Position the tumble dryer so that the plug remains accessible after installation. Do not block the vent at the front or base of the dryer, as this will impair the working of the machine.

This appliance must not be installed behind a lockable door, a sliding door or a door with hinges on the opposite side to that of the tumble dryer.

Your tumble dryer will release warm, damp air in one of three ways.

### **EXTENDIBLE REAR VENTING**

A long flexible vent hose (optional accessory) can be built into the dryer and extended from the large opening at the rear of the machine.

### **FIXED REAR VENTING**

Venting is through the large opening at the bottom of the rear panel. A separate extendible vent hose (optional accessory) can be attached if desired.

### **FRONT VENTING**

The dryer vents through a grille on the plinth. The opening on the rear panel is blanked off.

Rear vented dryers can be used without a vent hose but not in a confined space. Rear vented dryers must have a vent hose if they are installed under a work surface or against a wall. To minimize condensation it is preferable to vent to outside. This may be through an open door or window. The best solution is to connect the vent hose to a permanent connection through a wall or a single glazed window. This is particularly recommended for small, cool rooms. A kit for this purpose is available as an accessory.


When using a vent hose, remember the following points:

- The vent hose must be at least 10cm (4 in) in diameter.
- No more than three right-angled bends should be allowed when positioning the vent hose.
- Do not distort or constrict the vent hose as this will reduce the airflow.
- The vent hose must not be shared with other appliances, for example, a cooker hood outlet.

### **FINAL INSTALLATION**

Push the filter into its operating position as shown in the diagram. Remove any dust by wiping the drum and door with a damp cloth. Any initial smell of burning will be caused by dust on the heater and will quickly disappear.

## PRODUCT DESCRIPTION

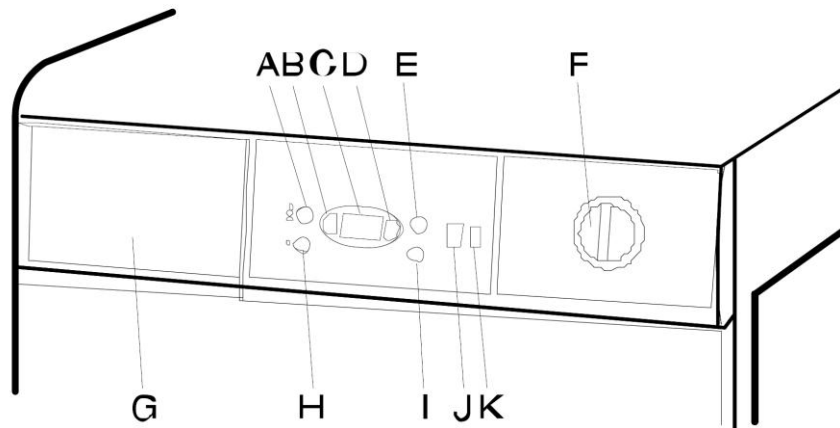

**A. Heat Setting Button**

Press to select appropriate heat setting. Some programs have limited choice of heat setting. High is used for drying cottons and linens; half heat is used for drying synthetics and delicates; cool does not apply any heat.

**B. “-” Button**

Change program or time selection downwards.

**C. Display Window**

Indicates program number / drying time / delay time.

**D. “+” Button**

Change program or time selection upwards.

**E. Start Button**

Starts the program selected of drying cycle.

**F. Activate Button**

Illuminates the Display Window.

**G. Program Chart**

Display the overall drying programs of the appliance.

**H. Anti-Crease Button**

Indicator illuminates when anti-crease has been activated and flashes when the dryer is in the anti-crease phase of cycle.

**I. Reset Button**

Reset the program to default settings.

**J. Delay Start Display**

Shows display time selected.

**K. Delay Start Button**

To set delay time to start the appliance. It can be set up to 9 hours with every one hour interval.

## **OPERATION PROCEDURE AND FUNCTIONS**

This sensing tumble dryer has a full moisture sensing system to choose the level of dryness required on your laundry. Alternatively you can select a timed drying cycle.

### **PROGRAMS**

P1 – Extra Dry: Laundries are extra dry and can be put away.

P2 – Cupboard Dry: Laundries are dry enough to be stored in the cupboard.

P3 – Mid Dry: Depending upon fabric, laundries are generally dry enough to be put away.

P4 – Extra Iron Dry: Laundries are almost dry but can be easily ironed.

P5 – Iron Dry: Laundries are slightly damp and ready to be ironed.

P6 – Damp Dry: Laundries are damp and ready to be ironed.

Programs 1 to 6 can be operated using the full heat, half heat or cool setting.

P7 – 30 minutes fixed time drying program: This program can be operated on the half heat or full heat setting.

P8 – 30 minutes fixed time airing program: This program is for freshening up laundry. This program operates without the heater, circulating air through the dryer at the room temperature.

P9 – Variable Timed Program – Can be set from 10 minutes to 180 minutes drying time and can be operated on the full heat, half heat or cool setting. To return back to the main menu, press the Reset button.





Delay Start – All programs from P1 to P9 can be used with this Delay Start feature. A maximum of 9 hours delay time is available in 1 hour increments.

Anti-crease – This function can be selected to minimize creasing by continuing to turn the drum periodically after the main drying cycle has completed.

## PREPARATION

Check care labels inside the garments.

CARE LABELS YOU MAY FIND ON YOUR FABRICS:

	Suitable for tumble drying
	Tumble dry using full heat
	Tumble dry using half heat
	Do not tumble dry

- 1) Do not tumble dry woolen or wool mixture articles unless the article has labeled as being suitable. This should avoid shrinkage.
- 2) Place delicate articles, e.g. tights, scarves inside a pillowcase.
- 3) To avoid the need to iron easy-care polyester / cotton items, it is better to only dry small loads (half fill drum). It is better to dry small and large articles together.
- 4) Fabric softener or similar products should be used as specified by the Fabric Softener instructions.
- 5) Do not overload the dryer or dry large bulky items such as duvets or sleeping bags as it is important to make sure the air flow through the dryer is not obstructed.
- 6) The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature which will not damage the articles.
- 7) Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- 8) Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber-backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

## **OPERATION**

- 1) Open the door.
- 2) Load clothes loosely into the drum. Load sheets first, starting with one corner.
- 3) Close the door and dry your hands.
- 4) Plug in the machine and press the Activate button. The Display Window will illuminate. If no further buttons are pressed, the display will go into sleep mode after 1 minute. To reactivate, press the Activate button again.
- 5) The dryer will automatically remember the program and heat setting last used. To change the program use the (-) or (+) buttons on either side of the display window. Change the heat setting if required.
- 6) If P9 (variable time program) has been selected press the coloured Start button. A default of 120 minutes will appear in the display window. Use the (-) or (+) buttons to adjust the drying time for your laundry from 10 minutes up to 180 minutes. Holding the button down will rapidly change the time selected.
- 7) Select anti-crease function if required.
- 8) Press the coloured Start button to commence the drying cycle. The drum will begin rotating and will stop automatically when your laundries are dry or the timed cycle has finished.
- 9) An audible alert will sound to indicate that the drying cycle has finished.
- 10) If you have selected the anti-crease function, the drum will continue to turn periodically for up to 8 hours or until the dryer is stopped by opening the dryer door or by disconnecting from the mains.
- 11) If the door is opened during a drying cycle the dryer will stop. To restart, close the door, press the Activate button then press the coloured Start button.
- 12) There is an automatic 12 minutes cool down period at the end of each cycle, during which the heater is switched off and the green cool indicator is on. This helps to minimize creasing, and must always be used fully to avoid the risk of fire.


## **DELAY START**

To use Delay Start feature press the Delay Start button before pressing the Start button. The Delay Start display will show 1 hour of delay time. Repeated pressing, or holding down of the Delay Start button will increase the amount of delay time to a maximum of 9 hours. To cancel Delay Start, press the Reset button. To start the delay period press Start. The delay time will start to count down in the display window. To cancel Delay Start once the countdown has started, turn off the power or by opening the dryer door.

**NEVER SWITCH THE DRYER OFF AND LEAVE A HOT LOAD IN THE DRUM DUE TO THE RISK OF FIRE.**

## **CLEANING AND MAINTENANCE**

**ALWAYS CLEAN THE FILTER AFTER EACH USE. FAILURE TO DO SO COULD CAUSE THE SAFETY CUTOUT TO OPERATE.**

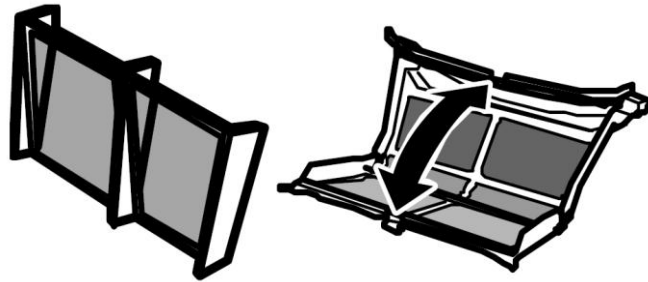

1. Pull the filter upwards and away from the appliance.
2. Remove any threads or fluff by hand or with a soft brush.
3. Slide the filter back.
4. Wash the filter occasionally in detergent solution using a soft brush to remove small particles.
5. If your filter has damaged, replace it to ensure no damage is caused to the dryer.
6. Do not use chemical, steel, wooden or abrasive cleaners to clean the appliance.
7. This appliance should not be left unused for a long period. To stop using the appliance, disconnect the main power. Clean the interior and dry it completely.



## TROUBLESHOOTING

If the laundries are not dry after normal drying time:

- 1) Check that you used the correct heat setting.
- 2) Check that the lint filter has been cleaned. A blocked filter will restrict the airflow.
- 3) Check that your dryer is heating – the area below the door should feel warm to the touch after the first 10-15 minutes of its program.
- 4) Failure to heat may indicate the safety cut-out has operated. To reset, simply press the red button at the rear of the machine. If it has operated then a sharp “click” will be heard.
- 5) This cut-out only operates if the airflow is severely restricted so make sure the filter is clean, the air inlets and outlets at the front and back are not blocked, and that all other restrictions are removed before re-starting.
- 6) If the cut-out continues to operate after checking the above points, you should contact the after sales service centre.
- 7) Check that the machine has the correct weight load in the drum before starting the appliance.
- 8) If your machine does not work properly, check the following before calling a service engineer:-
  - a) Check that there is a supply of electricity.
  - b) Check that the Activate button has been pressed and that the Display is illuminated.
  - c) Check that the door has been properly closed.
  - d) Check the fuse in the moulded plug.

## MAIN SPECIFICATION

Model No	: ED-B7610ES(WH)
Drying Capacity	: 7KG
Delicate	: 2KG
Input Power	: 2200W
Rated Voltage	: 220-240V
Rated Frequency	: 50Hz
Power Consumption	: 3.93kW per cycle

## IMPORTANT USER INFORMATION

This tumble dryer is intended for **DOMESTIC USE ONLY**.

- Adequate ventilation must be provided to avoid back flow of gases into the room from appliances burning other fuels, including open fires.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuel.
- It is not recommended that the dryer is placed directly next to ovens, cookers or other heating appliances as the performance of the dryer may be affected.
- A carpet must not obstruct the ventilation openings in the base of the dryer.
- Do not stack the tumble dryer on top of other appliances without the correct stacking kit.
- Any electrical work required to install the appliance should be carried out by a qualified person.
- It is important to clean the lint filter after each drying cycle or the restrictions to airflow will extend drying times and could cause the safety cut-out to trip.
- Under no circumstances should anything other than the recommended articles be placed in the tumble dryer.
- The dryer should be serviced by an authorized service centre and only genuine parts used.
- Do not attempt to alter or modify the product in any way.
- We recommend that the appliance is unplugged each time after use. It should always be disconnected from the electricity supply if not in use for long periods.
- The rear of the dryer gets hot during use. Position the dryer so that the back is not accessible while in operation, but ensure that the sides have a space available to allow airflow.
- The special mains cable and plug assembly must only be replaced with a genuine part from the manufacturer or authorized service centre.
- It is important to clean fluff from the window of the dryer and around the door seal after each drying cycle. Failure to do so could result in water leaking.
- Children should be supervised to ensure they do not play with the appliance.

**WARNING:** Never stop a tumble dryer before the end of a drying cycle unless all items are quickly removed and spread out so that heat is dissipated. Remove all objects from pockets such as lighters and matches.

**DO NOT** use a two-way adaptor, or extension lead. The dryer must be connected to its own socket.

**DO NOT** block the air inlets at the front, base, rear and side of your dryer.

**DO NOT** allow fluff to accumulate around the tumble dryer.

**DO NOT** exceed the recommended maximum load.

**DO NOT** dry unwashed items in the tumble dryer

**DO NOT** place articles in the dryer if anything other than a water solution has been used in the cleaning process.

**DO NOT** tumble dry anything other than water washed laundry.

**DO NOT** attempt to dry dripping wet articles.

**DO NOT** use the tumble dryer if you suspect that it is damaged in any way. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause serious injury. Consult your local authorized service centre and insist on genuine spare parts.

## **THIS APPLIANCE MUST BE EARTHED**



### **CAUTION HOT SURFACE**

This label, positioned on the rear of your dryer, indicates the surface is hot when in operation – avoid touching.



### **NOTICE**

This appliance is marked according to the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

At end of life this product should be recycled and not disposed in household waste. Contact your retailer, council or local authority for further information.

**ELBA**