

Celestia

CPAP with Heated Humidifier

Instruction Manual



drive
MEDICAL DESIGN & MANUFACTURING

Model No.: 18250

Please read the instruction manual before use.

Contents

Important Safeguards.....	1
1.Introduction.....	3
2. Product Description.....	4
3. Installation.....	6
4. Operation	9
5. Cleaning & Maintenance.....	13
6. Troubleshooting	15
7. Technical Specification.....	17
8. Note, Caution and Warning Statements.....	18
APPENDIX A: EMC Information.....	20

IMPORTANT SAFEGUARDS
SAVE THESE INSTRUCTIONS
READ ALL INSTRUCTIONS BEFORE USING

WARNING –

1. THIS DEVICE IS NOT INTENDED FOR LIFE SUPPORT. It may stop operating due to power interruption but no hazards to patient.
2. This device **should not** be used with oxygen.
3. This device **should not** be used in the vicinity of a flammable anesthetic mixture in combination with oxygen or air and nitrous oxide.
4. The airflow for breathing generated by this device may be as much as 7°C (12.6°F) higher than the room temperature. This device **SHOULD NOT** be used if the room temperature is warmer than 35°C (95°F) to prevent the airflow temperature from exceeding 40°C (104°F) and causing irritation to your airway.
5. If this device overheats, it will stop operating and show “Error Message 002” on the display. After cooling down to proper temperature, the device can restart again.
6. This machine should be used only with masks (and connectors) recommended by the manufacturer, or by your physician or respiratory therapist. A mask should not be used unless the CPAP machine is turned on and operating properly. The vent holes associated with the mask should never be blocked for proper exhaling purpose.
7. At low CPAP pressure, some exhaled gas may remain in the mask and be re-breathed.

CAUTION –

U.S. Federal law restricts this device to sale by or on the order of a licensed physician.

DANGER -To reduce the risk of electrocution:

1. Always unplug this product immediately after using.
2. Do not use while bathing.
3. Do not place or store product where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for a product that has fallen into water. Unplug immediately.
6. Do not reach into the water or other liquids, if product falls into water or other liquids. Unplug it immediately.

WARNING -To reduce the risk of burns, electrocution, fire or injury to persons:

1. This product should never be left unattended when plugged in.
2. Close supervision is necessary when this product is used by, on, or near children or invalids.
3. Use this product only for its intended use as described in this manual, do not use attachments not recommended by the manufacturer.
4. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never block the air openings of this product or place it on a soft surface, such as a bed or couch, where their openings may be blocked. Keep the air opening free of lint, hair, and other similar particles.
7. Never drop or insert any object into any opening or hose.
8. Follow the national requirement to dispose unit.
9. Recommended operating atmospheric condition is above sea level up to 8000 feet, if goes higher than 8000 feet, re-calibration is then required.
10. Do not operate the device before mask and water chamber installed.
11. Disconnect the water chamber from the device when not in use, water entering the device may result in electric shock hazard or damage.
12. Do not use if water comes in contact with the device or enters the tubing.
13. This device is not for use with patients whose supraglottic airways have been bypassed.
14. Do not use this device on the floor.
15. Do not cover blanket or clothes on the device.
16. Do not remove water chamber while humidifier is heating. Do not touch the heater plate for 30 minutes after the device is disconnected from the mains.

1. Introduction

This manual should be used for initial set up of the system and saved for reference purpose.

1.1 General Information

Obstructive Sleep Apnea (OSA) is a condition that an intermitted and repetitive obstruction of the upper respiratory tract causes a complete (apnea) or partial (hypopnea) block of breathing airflow during sleep. The syndrome varies depending on the degree of relaxation of the tongue and soft palate muscle.

The most common treatment for OSA is Continuous Positive Airway Pressure (CPAP). CPAP devices can deliver a constant air pressure into your upper airway via a nasal mask. This constant air pressure can keep your airway open during sleep, therefore prevents the OSA.

This device is a micro-processor controlled continuous positive airway pressure device. It features the illuminated, menu-driven LCD display, universal power supply, and ramp time adjustment. The ramp time adjustment and ultra quiet operation ensure you to fall asleep comfortably while air pressure slowly build up to treatment level. The user compliance meter records the total system's operating time for physician's reference.

EMC Warning Statement

This equipment has been tested and found to comply with the limits for medical devices to the IEC 60601-1-2:2004. These limits are designed to provide reasonable protection against harmful interference in a typical medical installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to other devices in the vicinity. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to other devices, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving device.
- Increase the separation between the equipment.
- Connect the equipment into an outlet on a circuit different from that to which the other device(s) are connected.
- Consult the manufacturer or field service technician for help.

This system has been tested and compliance to the following volunteer standards:

FDA

1.2 Intended Use


This device is intended to provide continuous positive airway pressure (CPAP) for the treatment of adult Obstructive Sleep Apnea (OSA). The integrated heated humidifier is designed to increase the humidity of the air from the CPAP thereby relieving the symptoms of a dry nose and throat that some people may experience.


NOTE: Equipment not suitable for use in the presence of a flammable anesthetic mixture with air or with oxygen or nitrous oxide.


2. Product Description


Components including:


- (1) Main CPAP device with integrated heated humidifier
- (2) Detachable power cord
- (3) User manual
- (4) Flexible air tubing with 1.8 m length
- (5) Full face or nasal mask and headgear straps (Optional, Always use CE certified and 510(k) cleared mask for CPAP)
- (6) Carrying bag (optional)
- (7) USB cable and Easy Compliance CD (Optional)

 Note 1: ONLY for Physician or Technician to download data. Patient should not use this function.

 Note 2: Only applicable for devices with USB port.

 CAUTION – Patient should not connect the device to the personal computer for data downloading. This may cause the CPAP system failure

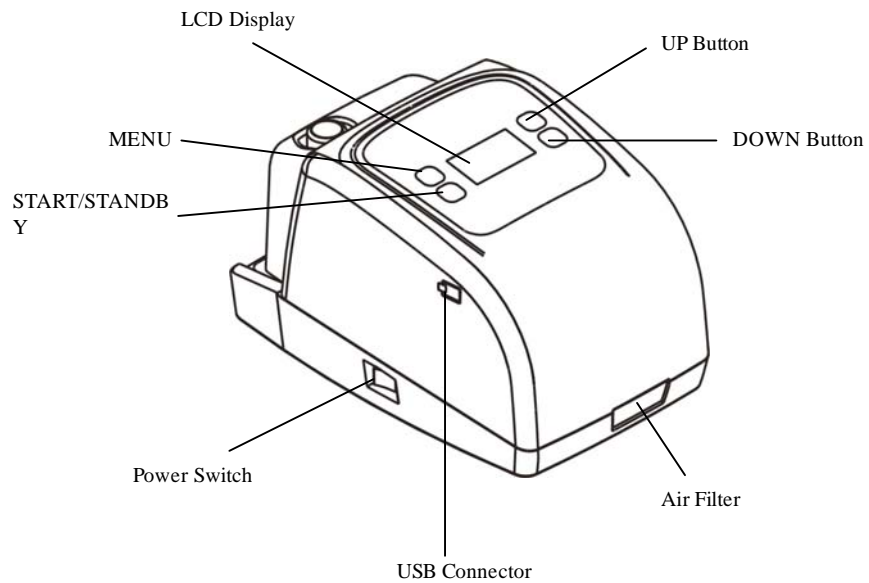

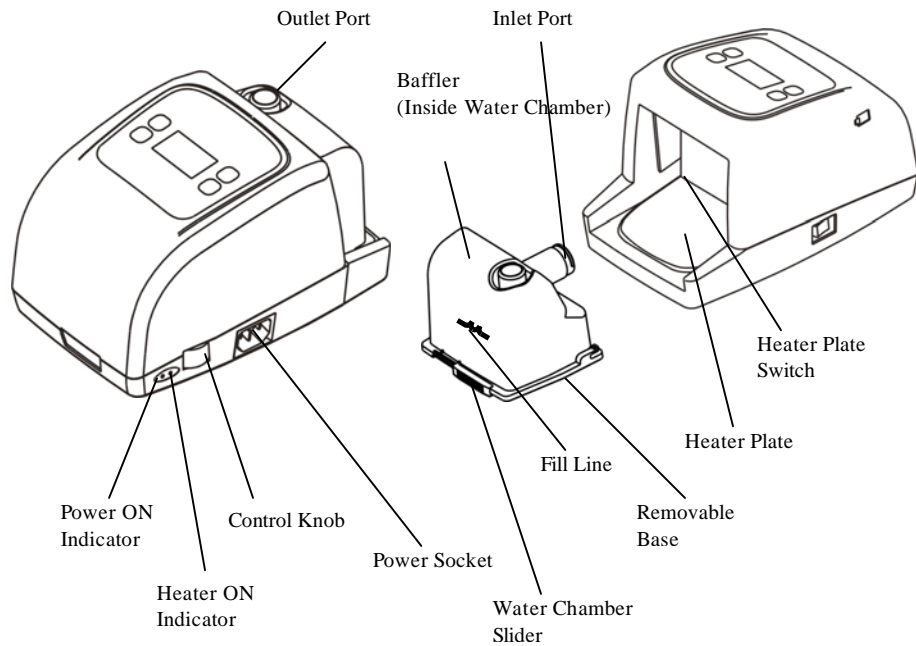


- Water Chamber:** The water chamber contains the water for humidification. Its removable base plate allows itself ease for cleaning.
- Fill Line:** Symbol indicates the maximum level of water that water chamber can contain.
- Baffle:** The baffle can prevent water spillage due to improper shaking.
- Heater Plate:** Warms the water in the water chamber.
- Heater Plate Switch:** When the switch is pressed against the water chamber, the heater plate will start to work.
- Control Knob:** This control knob, graduated from 1 to 6, is used to adjust the heating temperature of the heater plate from 30°C to 60°C.
- Power On Indicator (Green LED):** When lit, this indicates the humidifier is turned on and ready for operation.
- Heater On Indicator (Yellow LED):** When lit, this indicates the heater is turned on.
- Inlet Port with Silicon Connector:** Connect to the outlet port of the CPAP device.
- Outlet port:** Connect the flexible tubing here.
- Water Chamber Slider:** Lock and unlock the water chamber

3. Installation


3.1 Unpacking

To secure its contents inside, the device and accessories are bundled in a paper packaged box. Unpack this box by removing the device and its accessory and checking for any damage, which may have occurred during shipping. If there are damages, please contact your dealer immediately.

3.2 Setting Up

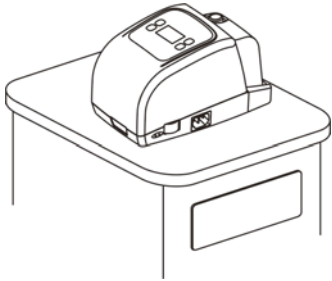


- 1) Place the device on a flat surface and at a lower level than your sleeping position.

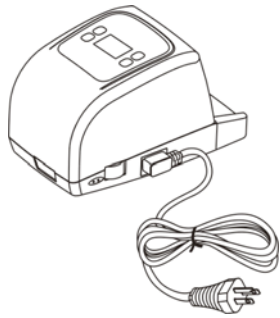

- 2) Connect the power cord to the device and plug into main electrical outlet. Turn on the device by pressing the ON/OFF switch on the left side of the device

Once the device is turned on, it is in ready to operate position (“STANDBY” sign appears in LCD display)


⚠ NOTE: The plug is also served to disconnect the device.

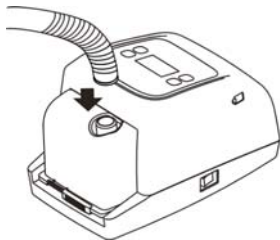

- 3) Connect one end of the air tubing firmly to the air outlet on the back of the device. As shown in the left figure.




- 4) Connect the other end of the air tubing to the mask system. Putting on the mask and headgear according to the mask instruction manual.

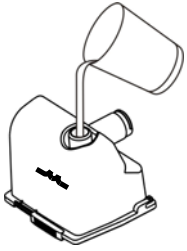

Daily Use for the Integrated Humidifier

- 5) Fill the chamber to the fill line with distilled water (approx. 350 ml).

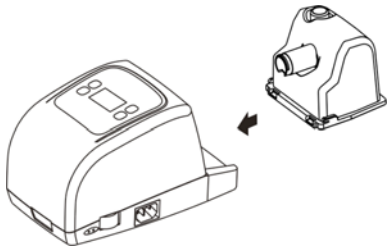

- 6) Slide the chamber into place. Make sure the silicon connector on the inlet connector fit securely over the CPAP device air outlet.

Note: Make sure the water chamber is pushed to the end to press against the heater plate switch. At the same time, the heater on indicator will be lit to indicate the heater plate starts to warm.

Note: The heater will be automatically turned off while the water chamber is removed from the heater platform.

3.3 WARNING & CAUTION



WARNING:

This CPAP machine should be used only with special masks (or connectors) recommended by the manufacturer of the CPAP machine, or by your physician or respiratory therapist. A mask should not be worn unless the CPAP machine is turned on and operating properly. The vent hole associated with the mask should never be blocked for proper exhaling purpose.

If the vent hole is blocked, the CPAP machine will stop and show message "Error 002", after cooling down, please re-connect the power cord to reset the machine.



WARNING:

When the CPAP is not in operation, oxygen may accumulate within the CPAP device enclosure, and it may create the risk of fire. This warning applies to most of the CPAP models.



WARNING:

This device SHOULD NOT be used if the room temperature is warmer than 35°C (95°F) to prevent the temperature of air delivered to nasal mask over 40°C (104°F).



WARNING:

This device SHOULD NOT be used in the vicinity of a flammable anesthetic mixture in combination with oxygen or air and nitrous oxide.



WARNING:

Recommended operating atmospheric condition is above sea level up to 8000 feet, if goes higher than 8000 feet, re-calibration is then required.



CAUTION:

At low pressures, some exhaled gas may remain in the mask and be re-breathed.



CAUTION:

Make sure the environment around the machine is dry and clean. Dust and foreign particles may affect the treatment. Keep the air inlet on the back of the machine clear to prevent overheating and damage of the device. Do not place the machine near a source of hot or cold air. Extreme cold or hot environment may damage user's respiratory airway.



CAUTION:

Do not connect the device to the personal computer for data downloading during the treatment. This may cause the CPAP system failure.



CAUTION:

If there is a possibility of electro-magnetic interference with mobile phones, please increase the distance between devices or turn off the mobile phone.

4. Operation



NOTE: Always read the operating instruction before use.

4.1 Control Panel Description

Buttons arrangement on control panel and main use of the buttons:



START/STANDBY

- To start the treatment, simply press the "**START/STANDBY**" button. To stop the treatment, press the "**START/STANDBY**" button again. The display will switch between [**STANDBY**] and Therapy Pressure [**XX.X cmH₂O**] in cmH₂O unit.



MENU

- Press the "**MENU**" button to enter the setting mode when device is in standby mode. The adjustment setting includes ramp time selection, ramp starting pressure, altitude compensation, therapy pressure adjustment, alarm ON/OFF, clock alarm setting, compliance meter, and total operating meter. When each setting's value has been changed, press "**MENU**" for confirmation and press "**MENU**" again for next setting selection. Please refer to 4.2 Function Description section for detailed information.



UP

the "**UP**" button to select the increasing value.



DOWN

Press the "**DOWN**" button to select the decreasing value.

4.2 Function Description

(1) Ramp Time

Ramp time function allows user to fall into sleep with a lower, comfortable pressure and helps users gradually accustomed to increasing treatment pressure. The first selection of pressing "MENU" is [Ramp XX MIN]. When the "MENU" setting is in [Ramp XX MIN] mode, press "UP" or "DOWN" button to set the preferred ramp time and press "MENU" for confirmation. There are 10 adjustable levels, 0, 5, 10, 15, 20, 25, 30, 35, 40 and 45 minutes.

(2) Ramp Starting Pressure

Press "MENU" button to select [Ramp P XX.X] menu, press "UP" or "DOWN" button to set the preferred ramp starting pressure and press "MENU" for confirmation. The ramp starting pressure can be changed from 3 cmH₂O to "Therapy Pressure – 1" cmH₂O. For example, if your therapy pressure is 10 cmH₂O, the maximum ramp starting pressure you can select is 9 cmH₂O.

(3) Therapy Pressure


Press "MENU" button to select [P XX.XcmH₂O] menu, you can view the current pressure setting displayed in cmH₂O unit. Therapy pressure is adjustable only by the provider, a respiratory therapist or physician.

NOTE: The therapy pressure is to only be prescribed by a physician.

(4) Altitude Compensation

Press "MENU" button to select [Alt XXX] menu, press "UP" or "DOWN" button to set the preferred altitude compensation level from 1 to 3. The level should be set depending on your elevation above sea level. Once the preferred level has been selected, press "MENU" for confirmation.

1	0 ~ 2600 ft	0 ~ 800 m
2	2601 ~ 5200 ft	801 ~ 1600 m
3	5201 ft ~8000 ft	1601 m ~2400m

 **NOTE** – Altitude compensation setting is mainly for the sensitivity adjustment for low pressure alarm at mask off or leakage situation. This device equipped with pressure sensory feedback mechanism by PWM control. Whenever air leakage or mask off occurs, device will compensate more PWM value to achieve device's targeted pressure.

(5) Total Meter

Press "**MENU**" button to select [**TM XXXX.X hr**] menu, the total compliance meter records the total number of hours that the device has been active. The meter should only be re-set by the provider, a respiratory therapist or by a physician.

(6) Compliance Meter

Press "**MENU**" button to select [**CM XXXX.X hr**] menu, the compliance meter records the total therapy hours for the device. The compliance meter should be re-set only by the provider, a respiratory therapist or by a physician.

(7) Alarm

Press "**MENU**" button to select [**Alarm on/off**] menu, press "**UP**" or "**DOWN**" button to set the alarm on or off. When alarm is turned on, the audible alarm will activate with warning messages showed on the LCD display. Set alarm off for mute the audible alarm.

(8) Clock Alarm

Press "**MENU**" button to select [**Clock Alarm on/off**] menu, press "**UP**" or "**DOWN**" button to set the clock alarm on or off. When clock alarm is set on, the display will show the time on the left side. Press "**UP**" or "**DOWN**" button to set the time to wake you up. Once the clock alarm is activated, press the start/standby button to mute the audible alarm.

(9) Clock

Press "**MENU**" button to select [**Clock XX:XX**] menu, press "**UP**" or "**DOWN**" button to set the current time.

(10) Turn off the Device

Turn off the device by pressing the ON/OFF switch on the left side of the device

NOTE: Once the setting is confirmed, press "MENU" button. Otherwise, the device will automatically go back to standby without saving the modification if no action is taken in 5 seconds.


(11) Event Indication

While the device is on standby mode, press **UP**" and "**DOWN**" button at the same time to see the latest one data of Apnea Index (AI), Hypopnea Index (HI) and Snoring Index (SI) on the display. Press "**MENU**" button to show each index in sequence. To go back to standby mode, press "**START/STANDBY**" button.

NOTE: Once the device is re-started, all the indexes will be re-calculated. The whole data of these indexes are only seen by respiratory therapists or physicians by using Easy Compliance 2.1 playback software.

4.3 Flowchart of Menu settings


Enter the user's menu mode by pressing the "**MENU**" button.

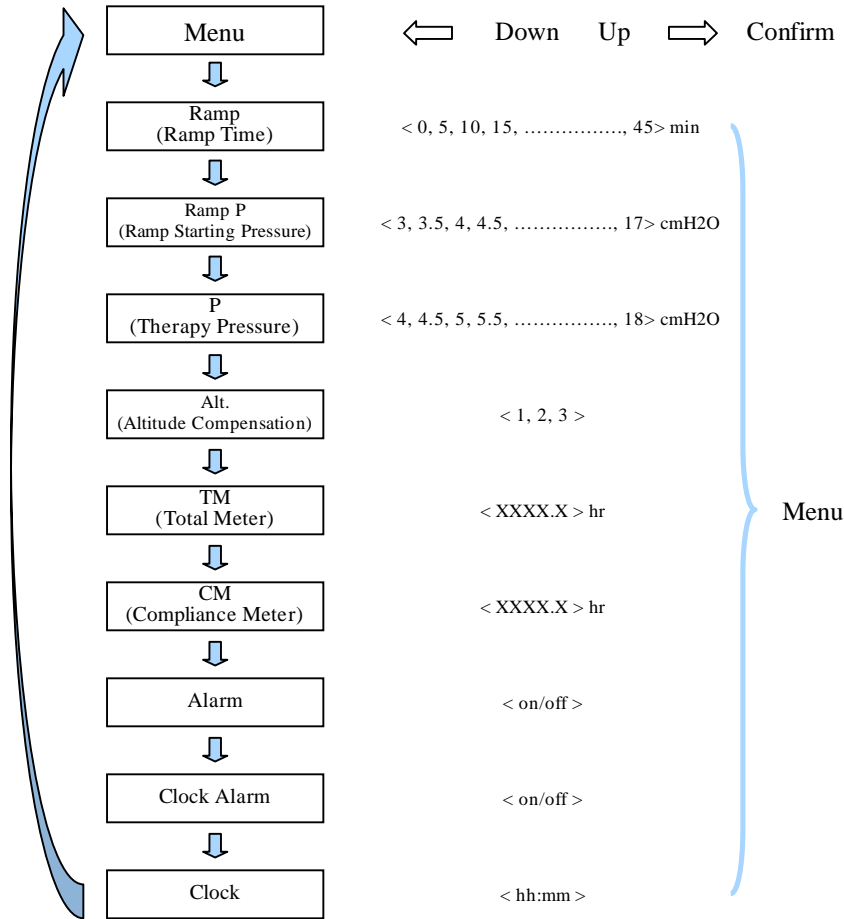

In each setting, when the preferred value has been selected, press "**MENU**" for confirmation and press "**MENU**" again to enter next selection.

NOTE: For physicians, please refer to a separated "Physician's Additional Instruction" page.

4.4 Using the heated humidifier

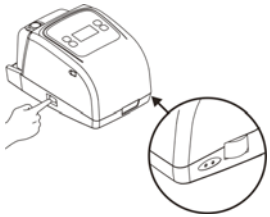

1. While the device is turned on., the heater power on indicator on the right side of the device will be lit (green light)




2. Adjust the heater temperature to the desired setting by the control knob. The 1-6 setting corresponds to the temperature as follows:
1 = about 30°C 2 = about 39°C
3 = about 43°C 4 = about 47°C
5 = about 51°C 6 = about 60°C

Danger: In order to avoid the destruction or damages of the device or even the hazard of electric shock, when the water chamber is attached, DO NOT fill water from the outlet port of the water chamber. Users must fill water no more than the marking for maximum volume after the water chamber is removed from the device.

5. Cleaning & Maintenance

5.1 Device

The device should be checked and dusted regularly (at least every 30 days). Wipe with a damp cloth and a mild detergent and keep it free from dust. If other detergent is used, choose one that will have no chemical effects on the surface of the plastic case. All parts should be air-dried thoroughly before use. Inspect the device and all circuit parts for any damage after cleaning and replace it if necessary.

 **WARNING:** Don't try to open this device. Repairs and internal servicing should only be performed by an authorized service agent. Don't drop any subject into the air tube or air outlet.

5.2 Tubing and Mask

The tubing and mask should be checked and cleaned daily. Please refer to the cleaning instruction packaged with the accessories.

1. Disconnect the air tubing from the air outlet of the device.
2. Remove the air tubing and headgear straps from the nasal mask.
3. Use a mild detergent and prepare the detergent according to manufacturer's recommendations.

Tubing and mask can be washed and rinsed in warm water.


4. Rinse thoroughly and make sure they are completely dry before next use.
5. All items of the mask and air tubing are subject to normal wear and tear and may eventually be replaced. Replace the mask and the air tubing if they are damaged.

⚠ WARNING: Do not use any cleaner containing fragrance or conditioners as they will leave a residue.

⚠ WARNING: The mask must not be re-used by another person. This is to avoid the risk of cross-infection.

5.3 Air Filter


The air filter should be checked and replaced every 30 days, or more often if this device is operated in a dusty environment.

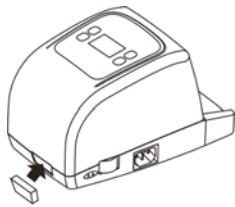

1. Remove the dirty filter from the enclosure on the front of the device.
2. Insert a new filter.

5.4 Water Chamber

1. Turn the device off and allow the heater and water to cool.
2. Disconnect the flexible tubing from the water chamber. Slide the water chamber out of the heater platform. Empty the remaining water.
3. Push the water chamber slider to the left and gently remove the chamber base by pressing downward on the metal base tab.
4. Use a mild detergent to wash all the chamber parts. Rinse all the parts with clear water and allow them to air dry.
5. All items of the chamber are subject to normal wear and tear

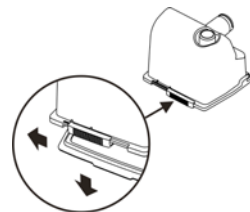

and may eventually be replaced. Replace the chamber parts if any damage is present.

6. Troubleshooting

The table below lists troubleshooting solutions for the problems that may happen. If the problem persists, contact your equipment provider service agent.

Problem	Possible Causes	Solutions
No display	<ol style="list-style-type: none"> 1. The power cord is not connected to the power socket. 2. LCD failure or controlled PCB failure. 	<ol style="list-style-type: none"> 1. Ensure the power cord is connected. 2. Contact your equipment provider for repair.
Display code incorrect	LCD failure or controlled PCB failure.	Contact your equipment provider for repair.
Illuminant under LCD is not on	LED failure	Contact your equipment provider for repair.
Buttons disable	Button failure	Contact your equipment provider for repair.
Air delivered is slow	<ol style="list-style-type: none"> 1. During ramp time. 2. Filter is too dirty. 3. Flow generator failure. 	<ol style="list-style-type: none"> 1. Check the ramp time setting 2. Change or clean the filter regularly. 3. Contact your equipment provider for repair.
Integrated humidifier power on indicator not light	<ol style="list-style-type: none"> 1. Power cord not plug into a working AC outlet. 2. Power switch is not turned on 3. PCB or indicator worn out 4. Fuse blown out 	<ol style="list-style-type: none"> 1. Plug in the power cord to a working AC outlet. 2. See Setup procedure and turn the power on. 3. Contact your local agent or EU representative for service. 4. Contact your local agent or EU representative for service.
Heater on indicator not light at all	<ol style="list-style-type: none"> 1. Heater plate over heating 2. PCB indicator worn out 	<ol style="list-style-type: none"> 1. Contact your local agent or EU representative for service. 2. Contact your local agent or EU representative for service.
There is no air flow on through the mask	<ol style="list-style-type: none"> 1. Device is not turned on or working correctly 2. Flexible tubing is not connected right. 3. Flexible tube is blocking. 	<ol style="list-style-type: none"> 1. Check the power cord is connected properly. 2. Reconnect the flexible tubing correctly. 3. Unblock the flexible tube.
Condensation in mask or flexible tube	<ol style="list-style-type: none"> 1. The heater plate setting is too high. 2. The operating environment or position of heated humidifier is not properly. The temperature 	<ol style="list-style-type: none"> 1. Adjust the control knob to low temperature setting. 1. Remove any air conditioner which may nearby the heated humidifier. Or keep room temperature up near 25°C.

	close to mask or flexible tube is low.	
Water Leakage	1. Assembly of water chamber is not proper or incorrectly. 2. Water chamber or removable base plate worn out.	1. Remove the water chamber from the heated humidifier, pull out the water and reassemble the water chamber again, make sure the removable base plate is right fit into water chamber, and fill the water till it reach fill line and check if it still leak or not. 2. Replace a new water chamber.

Error / Warning Messages show in LCD.

Message type	Definition	Message in LCD
Error: Primary function can't execute.	Error for abnormal system settings	Error 001
	Error for flow generator failure	Error 002
Warning:	Out of system memory	Warn 001
	System memory is nearly full	Warn 002

NOTE: When the warning message appears, contact your physician or equipment provider to download the memory data and reset the meter.

7. Technical Specifications

Item		Specifications
Power Supply		100-120VAC, 50/60Hz, 0.5A (For 120V system) 220V-240VAC, 50/60Hz, 0.3 A (For 230V system)
Therapy Pressure		4 –18 cmH ₂ O (adjustable in 0.5 cmH ₂ O increment)
Ramp Time		0 – 45 minutes (adjustable in 5-minute increment)
Ramp Starting Pressure		3 – 17 cmH ₂ O (adjustable in 0.5 cmH ₂ O increment)
Dimensions (W x D x H)		16.5 X 24.5 X13.7 cm
Weight		1.4 kg (3.1 lbs)
Sound Level		30 dBA at 10 cmH ₂ O, 1 meter distance
Water Capacity:		350ml
Heater Settings:		1 to 6 from 30°C-60°C
Pressure Drop:		0.2cmH ₂ O @ 60LPM
Humidity Output:		10-40mgH ₂ O/L
Environment	Temperature	Operating: +5°C to +35(C (+41°F to +95°F) Storage: -15°C to 50°C (+5°F to +122°F) Shipping: -15°C to 70°C (+5°F to +158°F)
	Humidity	Operating: 15%RH to 95%RH non-condensing Storage: 10%RH to 90%RH non-condensing Shipping: 10%RH to 90%RH non-condensing
Air Tubing		Flexible plastic, 1.8m (approx.)
EN 60601-1 EN 60601-1-2 Classification:		Class I, Type BF, IPX0 Applied Parts Nasal Mask Not suitable for use in the presence of a flammable anesthetic mixture (No AP/APG Protection) Continuous operation.

Note: the manufacturer reserves the right to modify the specification without notice.



BF symbol, which indicated this product is according to the degree of protecting against electric shock for type BF equipment.



Attention, should read the instructions.



Grounding terminal



Disposal of Electrical & Electronic Equipment (WEEE):

This product should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. For more detailed information about the recycling of this product, please contact your local city office, household waste disposal service or the retail store where you purchased this product.



Fill line



Air flow direction

8. NOTE, CAUTION, AND WARNING STATEMENTS

NOTE: Indicate information that you should pay special attention to.

CAUTION: Indicate correct operating or maintenance procedures in order to prevent damage to or destruction of the equipment or other property.

WARNING: Calls attention to a potential danger that requires correct procedures or practices in order to prevent personal injury.

GROUNDING INSTRUCTIONS

This product should be grounded. In the event of an electrical short circuit grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.


DANGER-improper use of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.

If is necessary to use an extension cord, use only a 3-wire extension cord that has a three-blade grounding plug, and a 3-slot receptacle that will accept the plug on the product. Replace or repair a damaged cord.

GROUNDING METH (For 120V System Only)

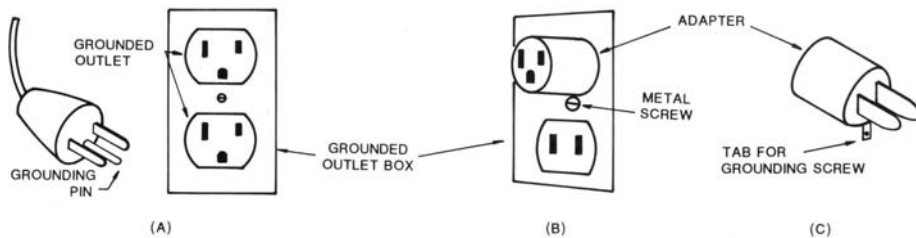

Appendix A: EMC Information

Guidance and Manufacturer's Declaration- Electromagnetic Emissions:

This device is intended for use in the electromagnetic environment specified below. The user of this device should make sure it is used in such an environment.

Emissions Test	Compliance	Electromagnetic Environment-Guidance
Harmonic emissions IEC61000-3-2	Class A	The device is suitable for use in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network.
Voltage fluctuations / Flicker emissions IEC61000-3-3	Complies	


Guidance and Manufacturer's Declaration- Electromagnetic Immunity:

This device is intended for use in the electromagnetic environment specified below. The user of this device should make sure it is used in such an environment.

Immunity Test	IEC60601 test level	Compliance	Electromagnetic Environment-Guidance
Electrostatic Discharge(ESD) IEC61000-4-2	±6kV contact ±8kV air	±6kV contact ±8kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30 %.
Electrical fast transient/ burst IEC61000-4-4	±2kV for power supply line ±1kV for input/out line	±2kV for power supply line ±1kV for input/out line	Mains power quality should be that of atypical commercial or hospital environment
Surge IEC61000-4-5	±1kV for differential mode ±2kV for common mode	±1kV for differential mode ±2kV for common mode	Mains power quality should be that of atypical commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC61000-4-11	<5 % UT(>95 % dip in UT)for 0,5 cycle 40 % UT(60 % dip in UT)for 5 cycles 70 % UT(30 % dip in UT)for 25 cycles <5 % UT(>95 % dip in UT)for 5 sec	<5 % UT(>95 % dip in UT) for 0,5 cycle 40 % UT(60 % dip in UT) for 5 cycles 70 % UT(30 % dip in UT) for 25 cycles <5 % UT(>95 % dip in UT) for 5 sec	Mains power quality should be that of atypical commercial or hospital environment. If the user of this device requires continued operation during power mains interruptions, it is recommended that the device be powered from an uninterruptible power supply or a battery.
Power frequency (50/60Hz) magnetic field IEC61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of atypical location in a typical commercial or hospital environment.
NOTE: U _T is the a.c. mains voltage prior to the application of the test level			

Guidance and Manufacturer's Declaration- Electromagnetic Immunity:

This device is intended for use in the electromagnetic environment specified below. The user of this device should make sure it is used in such an environment.

Immunity Test	IEC60601 test level	Compliance	Electromagnetic Environment-Guidance
Conducted RF IEC 61000-4-6	3Vrms 150 kHz to 80 MHz outside ISM bands ^a	3Vrms	<p>Portable and mobile RF communications equipment should be used no closer to any part of this device, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.</p> <p>Recommended separation distance $d = 1.2\sqrt{P}$ 150kHz to 80MHz</p>
Radiated RF IEC 61000-4-3	3 V/m 80 MHz to 2.5 GHz	3V/m	<p>$d = 1.2\sqrt{P}$ 150kHz to 80MHz $d = 2.3\sqrt{P}$ 80 MHz to 2.5 GHz</p> <p>Where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in meters (m).^b</p> <p>Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey^c, should be less than the compliance level in each frequency range^d.</p> <p>Interference may occur in the vicinity of equipment marked with the following symbol:</p> 

NOTE 1 At 80 MHz and 800 MHz, the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

a The ISM (industrial, scientific and medical) bands between 150 kHz and 80 MHz are 6,765 MHz to 6,795 MHz; 13,553 MHz to 13,567 MHz; 26,957 MHz to 27,283 MHz; and 40,66 MHz to 40,70 MHz.

b The compliance levels in the ISM frequency bands between 150 kHz and 80 MHz and in the frequency range 80 MHz to 2,5 GHz are intended to decrease the likelihood that mobile/portable communications equipment could cause interference if it is inadvertently brought into patient areas. For this reason, an additional factor of 10/3 is used in calculating the recommended separation distance for transmitters in these frequency ranges.

c Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To

assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the device is used exceeds the applicable RF compliance level above, the device should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the device.

d Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3 V/m.

Recommended separation distances between portable and mobile RF communications equipment and this device

This device is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of this device can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and this device as recommended below, according to the maximum output power of the communications equipment

Rated maximum output power of transmitter W	Separation distance according to frequency of transmitter m		
	150 kHz to 80 MHz $d = 1.2\sqrt{P}$	80 MHz to 800 MHz $d = 1.2\sqrt{P}$	800 MHz to 2,5 GHz $d = 2.3\sqrt{P}$
0.01	0.12	0.12	0.23
0.1	0.38	0.38	0.73
1	1.2	1.2	2.3
10	3.8	3.8	7.3
100	12	12	23

For transmitters rated at a maximum output power not listed above, the recommended separation distance d in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

Note 1: At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

Note 2: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects, and people.

Additional instruction for Physician and Technician

(Do not distribute to patients)

1. To Set the Therapy Pressure

1. Press "**MENU**" to select [**P** XX.XcmH₂O] menu while in the standby screen.
2. Hold the "**UP**" and "**DOWN**" button, and then simultaneously press the "**MENU**" button for one second. Meanwhile, the LCD screen [**P** XX.XcmH₂O] should start blinking to allow you to adjust the therapy pressure from 4 to 18 cm H₂O.
3. Press "**UP**" or "**DOWN**" button to increase or decrease the pressure setting. The increment or decrement of pressure setting is 0.5 cm H₂O.
4. After selecting the prescribed pressure, press "**MENU**" to confirm.
5. Press "**START/STANDBY**" button to go back to standby screen or leave the device to automatically go back to standby screen 5 seconds later.

2. To Re-set the Compliance Meter & Total Meter

1. Press "**MENU**" to select [**TM** XXXX.X hr] or [**CM** XXXX.X hr] menu while in the standby screen.
2. Hold the "**UP**" and "**DOWN**" button, and then simultaneously press the "**MENU**" button for one second. Meanwhile, [**TM** XXXX.X hr] or [**CM** XXXX.X hr] will start blinking and "**CLEAR**" will show on the LCD display.
3. Press "**UP**" or "**DOWN**". The LCD screen will show "**CLEAR OK**" and the total meter or compliance meter record will be erased so the value becomes 0.0 hr.
4. Press "**MENU**" to confirm the reset function.
5. Press "**START/STANDBY**" button to go back to standby screen or leave the device to automatically go back to standby screen 5 seconds later.

NOTE – When the compliance meter has been cleared, the total meter will also be cleared at the same time, and vice versa.

3. To Download the Compliance Meter and Total Meter Data

Please refer to *Easy Compliance 2.1 CPAP Data Management Software* instruction. Use the USB cable to connect the device with a computer which has been tested and approved by IEC60601-1 or IEC60950 standard.

CAUTION – Do not connect the device to the personal computer for data downloading during the treatment. This may cause the CPAP system failure.

NOTE – This additional instruction is separated because of concerns with rental service management and accidental wrong setting by others. Please tear off this page from manual before deliver this product to end-user.





Drive Medical Design & Manufacturing

99 Seaview Boulevard

Port Washington, NY 11050

516-998-4600

www.drivemedical.com