

AGENTE ESPECIAL
Para mantener las cuchillas de su cortador en condición óptima, lubrifíquelas después de tres o cuatro cortes de cabello, aplicando una cantidad mínima de aceite. Encienda la cortadora durante un minuto. Luego apague. El aceite lubrica las cuchillas. Encienda la cortadora durante un minuto. Luego apague. Use otro aceite para lubricar su aparato. No use aceites para limpiar el aceite de Conair. Mantenga el aceite lubricante fuera del alcance de los niños.

Haircut Kit
10 PIECE
Instructions for Care and Use

MODEL HC90CS

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially basic precautions should always be followed, including the following:

- READ ALL INSTRUCTIONS BEFORE USING**
KEEP AWAY FROM WATER
DANGER—Any appliance is electrically live, even when the switch is off.
To reduce the risk of electric shock:
1. Do not reach for an appliance that has fallen into water. **Unplug immediately.**
 2. Do not use while bathing or in the shower.
 3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
 4. Always unplug this appliance from the electrical outlet immediately after using.
 5. Unplug this appliance before cleaning.

 
DO NOT REACH INTO THE WATER WARNING

—To reduce the risk of burns, electric shock, fire, or injury to persons:


1. An appliance should never be left unattended when plugged in.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.

PERFECTOS CORTES CON CORONILLAS PLANAS, CORTES MILITARES ETC.

Siempre corte el cabello desde la parte superior hacia abajo. Mantenga la cortadora contra la cabeza y mueva la cortadora lateralmente en el cabello hacia arriba. Use la misma técnica para los lados, cortando el pelo contra la cabeza y moviendo la cortadora hacia adelante y hacia atrás.



Para una coronilla plana, use un peine plano para eliminar el pelo en la parte superior natural del cabello. Luego iguale los lados. Para cortar el pelo en la nuca y las patillas, sostenga la cortadora en el estilo deseado. Coloque la cortadora entre las patillas y la oreja (véase el dibujo).
"Contorno".
Para cortar el pelo en la nuca y en las patillas, use el peine accesorio No. 1 (véase la sección "Contorno").

 

1. Para evitar que la cortadora corte el pelo en la parte delantera, corte el cabello en la parte superior y luego iguale los lados. Para una coronilla plana, use un peine plano para eliminar el pelo en la parte superior natural del cabello. Luego iguale los lados. Para cortar el pelo en la nuca y las patillas, sostenga la cortadora en el estilo deseado. Coloque la cortadora entre las patillas y la oreja (véase el dibujo).
"Contorno".
Para cortar el pelo en la nuca y en las patillas, use el peine accesorio No. 1 (véase la sección "Contorno").

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, the plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, try reversing the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat the safety feature.

Your new Conair Haircut Kit has everything you need to achieve professional haircuts at home. Its powerful magnetic motor clipper with High Carbon steel blades for long lasting cutting precision. Also included are four attachment combs for different hair lengths. It also comes with a barber comb, barber scissors, cleaning brush, lubricating oil and a blade guard for easy maintenance of the clipper blades.

THE CONAIR GUIDE TO CUTTING HAIR AT HOME

 
Before you start:

1. Inspect your clipper to make sure it is free of hair and dirt, is properly oiled and is running smoothly.
2. Place a towel or cape around the neck of the person getting the haircut.
3. Seat the person so that his/her head is at your eye level. This gives you greater visibility and control.
4. Comb hair until it is tangle-free. Hold the clipper in a comfortable grip. Now you're ready to cut.

MEDIUM TO LONG CUT

To begin, cut only a small amount of hair until you become used to the length each attachment leaves the hair. Try the longest attachment on the clipper first. If you want a shorter cut, you can then use shorter combs.

- Short attachment comb (number 1) cuts hair to 1/8".
- Medium-Short attachment comb (number 2) cuts hair to 1/4".
- Medium-Long attachment comb (number 3) cuts hair to 3/8".
- Long attachment comb (number 4) cuts hair to 1/2".

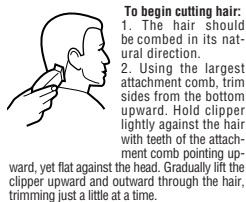

To begin cutting hair:
1. The hair should be combed in its natural direction.
2. Using the largest attachment comb, trim sides from the bottom upward. Hold clipper lightly against the hair with teeth of the attachment comb pointing upward, yet flat against the head. Gradually lift the clipper upward and outward through the hair, trimming just a little at a time.

 


Attach combs by holding them teeth up, then snapping onto the bottom of the clipper blade.



To remove comb attachments place index finger and thumb as illustrated; then pull out and up.

NOTE: Never push or shove the clipper through the hair to make it move more quickly. Professional experience shows that the clipper works most efficiently when it cuts through the hair at its own speed.

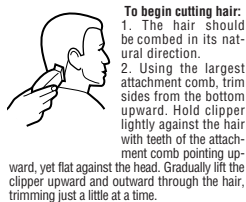

To begin cutting hair:
1. The hair should be combed in its natural direction.
2. Using the largest attachment comb, trim sides from the bottom upward. Hold clipper lightly against the hair with teeth of the attachment comb pointing upward, yet flat against the head. Gradually lift the clipper upward and outward through the hair, trimming just a little at a time.



Remember, it's better to leave too much hair than too little. For longer hair on top, use the barber comb and lift hair on the top of the head, cutting over the fingers and cut to the back of the head, gradually cut the hair shorter by reducing the space between the comb or fingers and the head. Comb often to check for uneven strands, and to get rid of trimmed hair.



Repeat around sides and back of head. If you want hair to be even shorter:
A) Apply more pressure to the head with the attachment comb that is in place. This takes a little practice at first.
OR
B) Just switch to a shorter attachment comb.

STOP. COMB. CHECK.

For best results, do as the professionals do: comb the hair often and check results as you comb. This way you can avoid uneven sides, bangs, neckline, etc.

OUTLINING:

Outlining requires no attachments. Comb the hair into the desired style. Position the clipper between the sideburns and the ear (see sketch) and make sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around and behind the ears. For



To taper hair down to the neckline, use the lower settings attachment comb. Comb the hair and check for uneven spots. Outline the sideburns and neckline areas (see Outlining).

SHORTCUTS TO PERFECT FLAT TOPS, CREW CUTS, ETC.

Always cut the hair from the back of the neck toward the crown, using the longest



comb setting. Hold the comb attachment flat against the head and slowly move the clipper up through the hair. Use the same technique for the sides, cutting from the bottom to the upper side of the head.

For the front of the crown, cut the hair against its natural direction. Then even it up with the sides.

 
For a flat top use a flat comb, not the attachment comb. Just cut top hair by running the clipper over the comb.

To taper hair down to the neckline, use the lower settings attachment comb. Comb the hair and check for uneven spots. Outline the sideburns and neckline areas (see Outlining).

USER-MAINTENANCE INSTRUCTIONS CARE OF YOUR CLIPPER

IF YOU DETERMINE THAT BLADE ALIGNMENT IS INCORRECT:

Conair® hair clippers are carefully inspected to insure that the blades are in perfect alignment. You will need to realign the blades after removing them for cleaning or replacement, or if they should be knocked out of alignment. How can you tell if the blades need realigning? Simply match them up, point for point, to conform with the drawing below.



1. To prevent the clipper from contacting the skin or cutting too closely, make certain that the end of the top blade is 1/32" to 1/16" back from the bottom blade.
2. Position the extreme left-hand tooth of the top blade so that it either covers, or appears on the left of the first small tooth on the bottom blade.
3. Make sure that the big tooth on the bottom blade touches the extreme right-hand tooth on the top blade.

CORTES MEDIANOS A LARGOS

Este aparato fue diseñado para uso con un peine accesorio. Mantenga las aberturas de las aberturas a una altura de 1/2" (13 mm) o más. Este aparato tiene un enchufe de seguridad. La experiencia profesional demuestra que funciona mejor cuando corta a su propia velocidad.

OPERATING INSTRUCTIONS

GUARDE ESTAS INSTRUCCIONES

 
 
 
 
 
 
 
Este aparato fue diseñado para uso con un peine accesorio. Mantenga las aberturas de las aberturas a una altura de 1/2" (13 mm) o más. Este aparato tiene un enchufe de seguridad. La experiencia profesional demuestra que funciona mejor cuando corta a su propia velocidad.

EL CABELLO EN SU CASA

Este aparato fue diseñado para uso con un peine accesorio. Mantenga las aberturas de las aberturas a una altura de 1/2" (13 mm) o más. Este aparato tiene un enchufe de seguridad. La experiencia profesional demuestra que funciona mejor cuando corta a su propia velocidad.

GUÍA DE CONAIR PARA CORTAR EL CABELLO EN SU CASA

Este aparato fue diseñado para uso con un peine accesorio. Mantenga las aberturas de las aberturas a una altura de 1/2" (13 mm) o más. Este aparato tiene un enchufe de seguridad. La experiencia profesional demuestra que funciona mejor cuando corta a su propia velocidad.



MODELO HC90CS

Instrucciones de uso y de mantenimiento



Conjunto de Peluquero
70
PIEZAS
CONAIR
MANTENGA EL APARATO ALEJADO DEL AGUA
PERIGRO—Cualquier eléctrico puede causar un incendio o lesión personal. Mantenga las aberturas de las aberturas a una altura de 1/2" (13 mm) o más. Este aparato tiene un enchufe de seguridad. La experiencia profesional demuestra que funciona mejor cuando corta a su propia velocidad.

MEASURES OF SAFETY INSTRUCTIONS
When using electrical appliances, especially basic precautions should always be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USING
KEEP AWAY FROM WATER
DANGER—Any appliance is electrically live, even when the switch is off.
To reduce the risk of electric shock:
1. Do not reach for an appliance that has fallen into water. **Unplug immediately.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this appliance from the electrical outlet immediately after using.
5. Unplug this appliance before cleaning.

DO NOT REACH INTO THE WATER WARNING
—To reduce the risk of burns, electric shock, fire, or injury to persons:
1. An appliance should never be left unattended when plugged in.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.

STOP. COMB. CHECK.
For best results, do as the professionals do: comb the hair often and check results as you comb. This way you can avoid uneven sides, bangs, neckline, etc.

OUTLINING:
Outlining requires no attachments. Comb the hair into the desired style. Position the clipper between the sideburns and the ear (see sketch) and make sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around and behind the ears. For

SHORTCUTS TO PERFECT FLAT TOPS, CREW CUTS, ETC.
Always cut the hair from the back of the neck toward the crown, using the longest comb setting. Hold the comb attachment flat against the head and slowly move the clipper up through the hair. Use the same technique for the sides, cutting from the bottom to the upper side of the head.

USER-MAINTENANCE INSTRUCTIONS CARE OF YOUR CLIPPER
IF YOU DETERMINE THAT BLADE ALIGNMENT IS INCORRECT:
Conair® hair clippers are carefully inspected to insure that the blades are in perfect alignment. You will need to realign the blades after removing them for cleaning or replacement, or if they should be knocked out of alignment. How can you tell if the blades need realigning? Simply match them up, point for point, to conform with the drawing below.

MANTENGA EL APARATO ALEJADO DEL AGUA
PERIGRO—Cualquier eléctrico puede causar un incendio o lesión personal. Mantenga las aberturas de las aberturas a una altura de 1/2" (13 mm) o más. Este aparato tiene un enchufe de seguridad. La experiencia profesional demuestra que funciona mejor cuando corta a su propia velocidad.

MEASURES OF SAFETY INSTRUCTIONS
When using electrical appliances, especially basic precautions should always be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USING
KEEP AWAY FROM WATER
DANGER—Any appliance is electrically live, even when the switch is off.
To reduce the risk of electric shock:
1. Do not reach for an appliance that has fallen into water. **Unplug immediately.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this appliance from the electrical outlet immediately after using.
5. Unplug this appliance before cleaning.

DO NOT REACH INTO THE WATER WARNING
—To reduce the risk of burns, electric shock, fire, or injury to persons:
1. An appliance should never be left unattended when plugged in.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.

