

2015

*Cadillac*

**CTS**

**CONVENIENCE/PERSONALIZATION GUIDE**

Review this guide for an overview of some important features in your Cadillac CTS. Some optional equipment (denoted by ♦) described in this guide may not be included in your vehicle. More detailed information can be found in your Owner Manual.

## INSTRUMENT PANEL



## REMOTE KEYLESS ENTRY TRANSMITTER

### Lock

Press to lock all doors.

### Unlock

Press to unlock the driver's door. Press again to unlock all doors.

Press and hold to open all windows.


**Note:** To change the Remote Lock and Unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

### Remote Start

Use to start the engine from outside the vehicle. See Adaptive Remote Start on page 4.

### Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn sounds.

Press and hold for 3 seconds to activate the alarm. The turn signal lamps flash and the horn sounds for 30 seconds, or until the  button is pressed again or the vehicle is started.

### Trunk Release

Press twice to open the trunk.

### Door Key

Press the button (A) on the side of the transmitter to pull the door key out of the transmitter. Use the key to lock/unlock the driver's door, front passenger's door and rear folding seats. ♦



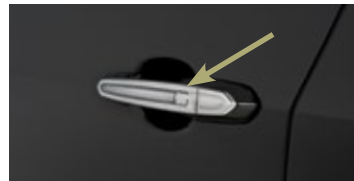
## KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and trunk without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or the trunk.**

### Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the trunk.



### Keyless Locking

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

**Note:** To change the Keyless Locking and Unlocking settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

See Keys, Doors and Windows in your Owner Manual.

## KEYLESS START

### Start

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.



**Note:** The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the depression under the rubber mat on the top shelf of the center console to enable the engine to start. Replace the transmitter battery as soon as possible.

Cell phone chargers may interfere with the operation of the Keyless Start System and should not be plugged in when starting or turning off the engine.

### Stop/Off

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof♦ until any door is opened.

### Accessory

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the vehicle in Accessory mode. The yellow indicator on the button will illuminate.

See *Driving and Operating in your Owner Manual.*

## ADAPTIVE REMOTE START

### Starting the Vehicle

1. Press and release the **Lock** button on the Remote Keyless Entry transmitter.
2. Immediately press and hold the **Remote Start** button until the turn signal lamps flash.

When the vehicle starts, the doors remain locked, and the parking lamps will light and remain on while the vehicle is running. The engine will continue running for 10 minutes. Repeat these steps for a 10-minute time extension. Remote start can be extended only once.

3. Before driving, simultaneously press the brake pedal and the **ENGINE START/STOP** button to turn on the ignition.

### Canceling a Remote Start

- ▶ Press and hold the **Remote Start** button until the parking lamps turn off.

### Climate Control Operation

During a remote start, the automatic climate control system will operate at the same setting as when the vehicle was last turned off.

### Heated/Ventilated Seat Operation

During a remote start, the heated/ventilated seats♦ will turn on automatically if enabled in the Vehicle Settings menu. When it is cold outside, the heated seats turn on; and when it is hot outside, the ventilated seats turn on. The temperature performance of an unoccupied seat may be reduced. The heated/ventilated seats turn off when the ignition is turned on. The seats can be turned on manually if desired.

See *Keys, Doors and Windows in your Owner Manual.*

## STEERING WHEEL CONTROLS

### Cruise Control

 On/Off

 On/Off

**(Adaptive Cruise Control)**

### SET Set Speed

With Cruise Control on, press the control bar down fully to set the cruise speed.

### RES Resume Speed

With Cruise Control on, press the control bar up fully to resume the previous set speed.

### + – Adjust Speed

When active, press the control bar up (+) or down (–) lightly to increase or decrease the set speed by 1-mph increments; press up or down fully to increase or decrease the set speed to the next 5-mph interval on the speedometer.

 **Cancel**

Press to cancel cruise control without erasing the set speed from memory.

 **Following Gap (Adaptive Cruise Control and Forward Collision Alert)**

Press repeatedly to select a gap setting of Far, Medium, or Near.

*See Driving and Operating in your Owner Manual.*

### Heated Steering Wheel

 On/Off

*See Instruments and Controls in your Owner Manual.*



### Voice Recognition

 **Push to Talk**

Press to interact with the OnStar, Bluetooth or CUE system.

 **End Call/Mute**

Press to end/reject a call or mute the audio system.

*See your CUE Infotainment System Manual.*

### 5-Way Control

Moves left/right, up/down, and in.

 **Left/Right**

Press to view the left or right cluster display. Press the left < to exit a display menu.

 **Up/Down**

Press the control bar up or down to scroll through a menu.





### SEL Select

Press to select a highlighted menu item.



*See Instruments and Controls in your Owner Manual.*

### Audio Controls

  **Volume**

Press  or  to increase or decrease the volume.

 **Next/Previous**

Press  or  to select the next or previous favorite radio station, track or file.

*See your CUE Infotainment System Manual.*

## INSTRUMENT CLUSTER



Uplevel Performance Cluster shown

### Cluster Display Zones



Use the 5-way control on the right side of the steering wheel to move between the different display zones and scroll through the different displays in each cluster configuration.

### Uplevel Cluster Configurations

1. With the vehicle in Park, use the 5-way control on the steering wheel to find the Settings page in one of the display zones on the cluster.
2. Press **SEL (Select)** to enter the Settings menu.
3. Scroll down to highlight Display Layout; press **SEL**.
4. Scroll up or down to highlight one of four cluster configurations; press **SEL**.
5. Press **<** to exit the menu.

See *Instruments and Controls* in your Owner Manual.

## DRIVER INFORMATION CENTER



The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information. The DIC Info Displays may include a digital speedometer, trip odometers, fuel range, average fuel economy, instantaneous fuel economy, average speed, timer, compass, turn arrow, travel time, distance to destination, speed limit speed warning, cruise control set speed, follow distance gap/gap setting, battery voltage, oil life, and odometer.

### Info Pages Menu

1. Use the 5-way control on the right side of the steering wheel to find the Settings page in one of the display zones on the cluster. Press **SEL** to enter the Setting menu.
2. Scroll **∨ down** to highlight Info Pages; press **SEL**.
3. Scroll **∧ up** or **∨ down** to move through the list of Info Displays.
4. Press **SEL** to select or deselect a display item.

*See Instruments and Controls in your Owner Manual.*

## HEAD-UP DISPLAY

The Head-Up Display (HUD) displays some operating information onto the windshield. The HUD controls are located on the left side of the instrument panel.



Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

### INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.



Lift up or press down to brighten or dim the display.  
Hold down to turn off the display.

*See Instruments and Controls in your Owner Manual.*

# TOUCH SCREEN AND CONTROLS



Applications:  
Touch the screen icon to access the desired application

VOLUME:  
Touch arrows or swipe finger **above** chrome bar

Power/Mute:  
Press and hold to turn CUE On/Off; Press to mute audio

Driver's Temperature Control

OFF  
Climate Control Power Off

Driver's Heated/Ventilated Seat Control

AUTO:  
Automatic Climate Control Operation

Windshield Defrost Mode

Additional Pages:  
Touch to view additional pages of applications

Interaction Selector:  
Touch to display the favorites list.

Home Page

Passenger's Temperature Control

Climate Control Fan Speed

Passenger's Heated/Ventilated Seat Control

Recirculation Mode

Rear Window Defog

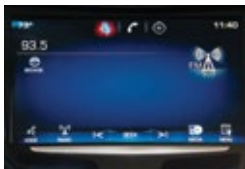
Storage Compartment with USB Port and Dockspot:  
Press and hold the bright bar to open/close

*The controls use capacitive technology – simply touch the icon/text to access a feature or adjust a function.*



## CUE SYSTEM MENUS

CUE offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen to access the following items.



### Audio


- Voice Recognition
- Radio Band
- Seek Up/Down
- Tune/Play
- Media
- Menu

### Navigation◆

- Zoom Out
- Zoom In
- Overview
- Destination
- Map Menu
- Seek Up/Down
- Tune/Play

### Phone

- Voice Recognition
- Contacts
- Recent
- Keypad
- Voice Mail
- Phones

**Note:** Press and hold the  **Push to Talk** steering wheel button to activate Handset Voice Recognition. See page 13.

### Climate

- Driver/Vehicle Set Temperature
- Passenger Set Temperature
- Sync Temperature Settings
- AC Mode
- Automatic Climate On/Off
- Air Distribution Settings
- Front/Rear Settings◆
- Fan Speed

### Settings

- Time and Date
- Language
- Valet Mode
- Teen Driver◆
- Radio
- Vehicle
- Bluetooth
- Voice
- Display
- Rear Camera
- Return to Factory Settings


## CUE SYSTEM FEATURES

Refer to your Owner Manual for important safety information about using the infotainment system while driving.


CUE uses a Bluetooth or USB connection to link a compatible smartphone, cell phone, USB flash drive or portable audio player/iPod® to the touch screen infotainment display. It offers a variety of entertainment options, including streaming audio from the Internet and features enhanced hands-free voice control, music information and the ability to play music files from a USB flash drive or an SD media card. For assistance, call 1-855-4-CUE-NOW (1-855-428-3669) or visit [www.cadillac.com/cue](http://www.cadillac.com/cue).


### Interacting with the CUE System


To make interactions simple and safe, use the following gestures on the CUE touch screen just as you would on a smartphone.

**Tap**  Tap an item on the screen to perform the desired function.

**Press and Hold**  Press and hold an item.

**Drag**  Touch an item on the screen and drag your finger along the screen while holding down on the item.

**Spread**  Place two fingers on the screen and spread them apart.

**Pinch**  Place two fingers on the screen and bring them together in a pinching motion.

See your CUE Infotainment System Manual.

## CUE SYSTEM FEATURES


### Setting the Time

1. Touch **Settings** on the Home page.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch **+** or **-** to adjust the hours, minutes, and AM or PM.
5. Touch **< Back** to exit the menu.

If the Auto Set feature is enabled, the time will be updated automatically as the system obtains time information from the cellular network.



### Portable Audio Devices

Two USB ports, an SD media card slot, and an auxiliary audio input jack are located in the center console storage compartment.

- ▶ Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to the USB port or insert an SD media card into the card slot.
- ▶ Touch  **Media** until the connected device is shown. CUE will read the device and build a list of voice commands. Search for music on-screen or by voice commands.


### Text Message Alerts

Text message alerts play a text message over the audio system and allow a response with a preset message. The text messaging feature must be set up when the cell phone is paired. Messages can be viewed on the touch screen only when the vehicle is not moving. For more information, visit [www.gmtotalconnect.com](http://www.gmtotalconnect.com).

- ▶ Touch the  Text icon to view the text message inbox.
- ▶ Touch the  speaker icon to listen to a message.

### Storing Favorite Stations

Radio stations from all bands (AM, FM or XM♦), Pandora stations, tone settings, phone contacts and navigation destinations♦ can be stored in any order.

1. Display the desired radio station, tone settings, Pandora station, navigation destination or contact.
2. Touch and drag up the  **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold a favorite screen button.
4. Repeat the steps to store another favorite item.

### PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres. Requires an Internet-connected device with Pandora software.

1. Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora (if necessary).
2. Create a station on your phone to listen to a customized song list in the vehicle.
3. Connect your smartphone/device to the system by Bluetooth (see page 13) or, for Apple devices, by a USB cable.
4. Touch the Pandora icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

See your CUE Infotainment System Manual.

## VEHICLE PERSONALIZATION



Some vehicle features can be customized using the controls on the CUE system. The Vehicle Settings menu may include Climate and Air Quality; Collision/Detection Systems; Comfort and Convenience; Lighting; Power Door Locks; and Remote Lock, Unlock, Start.

1. Touch **Settings** on the Home page.
2. Touch **Vehicle** from the **Settings** menu.
3. Touch the desired menu item.
4. Touch the desired feature and setting.
5. Touch **< Back** to exit each menu.

*See Instruments and Controls in your Owner Manual.*

## NAVIGATION




Enter a destination using the Single Line Destination feature. Approximate your desired destination and CUE's auto-fill function will enter the necessary information.

1. Touch **Navigation** on the Home page.
2. Touch **Destination**.
3. Type the address, intersection or road.
4. Touch **Go**.
5. Select the desired name from the generated list.
6. Touch **Go**.

*See your CUE Infotainment System Manual.*

## VOICE RECOGNITION

Control the music source and navigation destination, and make phone calls hands-free, using the enhanced voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will say "Say a command," followed by a beep.
3. After the beep, say what you want it to do.

- **Hands-free calling:**

Example command: "Call Amanda" or "Dial 555-1212"

- **Connected music device search:**

Example command: "Play artist [name]"

Example command: "Play song [name]"

- **Radio control:**

Example command: "Tune FM 104.3" or "Tune XM Classic Vinyl"

 
Example command: "Tune Pandora" (Pandora app required)

- **Help:**

- Say "Help" for voice recognition assistance.

### **Handset Voice Recognition**

Handset Voice Recognition pass-thru allows access to the voice recognition commands on a cell phone; e.g. Siri or Voice Command. For more information, visit [www.gmtotalconnect.com](http://www.gmtotalconnect.com).


- ▶ To activate Handset Voice Recognition, press and hold the  **Push to Talk** steering wheel button.

*See your CUE Infotainment System Manual.*

## BLUETOOTH® SYSTEM

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit [www.gmtotalconnect.com](http://www.gmtotalconnect.com).

### **Pair a Phone**

1. To use voice recognition, press the  **Push to Talk** button; after the tone, say "Pair Phone" or Use the touch screen to select Phone > Pair Device.
2. Start the pairing process on the phone. Locate Cadillac CUE on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or, if a six-digit code appears on the phone, confirm it on the touch screen.
4. If your phone prompts you to accept the connection or phone book download, click "yes" and always allow.

*See your CUE Infotainment System Manual.*

## VALET MODE

- ▶ To lock/unlock the CUE screen and the glove box, select Valet Mode under Settings and enter a passcode. It can be used when it's desired that only an authorized user has access to personalized features.

**Note:** For added security, the rear seat pass-through door can be locked by turning the knob on the pass-through door and the folding rear seat-backs can be locked using the door key.

*See your CUE Infotainment System Manual and Seats and Restraints in your Owner Manual.*

## WIRELESS CHARGING

The Dockspot wireless charging system is located in the storage compartment behind the climate controls. To check mobile device compatibility, visit [www.gmtotalconnect.com](http://www.gmtotalconnect.com).

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the mobile device face up on the symbol on the charging pad.
4. Move the device slowly until the battery charging symbol displays on the CUE touch screen, indicating the device is charging.

See your *CUE Infotainment System Manual*.

## ONSTAR WITH 4G LTE

If equipped with OnStar 4G LTE and Wi-Fi, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle's built-in Wi-Fi® hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen.

For assistance or to change the SSID and password, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827) to connect to an OnStar Advisor.

**Note:** See [onstar.com](http://onstar.com) for a detailed instruction guide, vehicle availability, details, and system limitations. Services and apps vary by make, model, year, carrier, availability, and conditions. 4G LTE service is available in select markets. 4G LTE performance is based on industry averages and vehicle systems design. Some services require a data plan.

See your *CUE Infotainment System Manual*. 14


## MEMORY SEATS



 
 
### Set Memory Positions

1. Adjust the driver's seat, power outside mirrors and the power steering column to the desired positions.
2. Press and release the **SET** button and then press and hold button **1** on the driver's door until a beep sounds.
3. Repeat the steps using button **2** for a second driver.

### Set Exit Position

1. Adjust the driver's seat, power outside mirrors and the power steering column to the desired positions.
2. Press and release the **SET** button and then press and hold the  **Exit** button on the driver's door until a beep sounds.

### Manually Recall Positions

- ▶ At any time, press and hold button **1**, **2** or  until the stored position is reached. Releasing the button before the stored position is reached stops the recall.
- ▶ With the vehicle in Park and the ignition ON, press and release button **1**, **2** or  to recall the stored position.

**Note:** To change the Auto Memory Recall settings, go to *Comfort and Convenience in the Vehicle Settings menu*.

See *Seats and Restraints in your Owner Manual*.

## EXTERIOR LIGHTING



### Exterior Lighting Controls

 Off/On

### AUTO Automatic Light Control

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions, including the IntelliBeam® automatic high-beam system♦.

 Parking Lamps

 Headlamps

### Adaptive Forward Lighting (included with HID headlamps)♦

The Adaptive Forward Lighting (AFL) system pivots the headlamps left or right in the direction of travel.

**Note:** The AFL system operates only when the exterior lamps control knob is in the AUTO position, at speeds greater than 2 mph, and after driving a short distance to calibrate the system.

See Lighting in your Owner Manual.

♦ Optional equipment

## WINDSHIELD WIPERS



**HI** Fast wipes

**LO** Slow wipes

**INT** Intermittent (Rainsense™ Sensitivity)

When in Rainsense mode, rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

**Note:** When entering an automatic car wash, turn off the Rainsense windshield wipers.

**OFF**

**1x** Mist

Single wipe.

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.


See Instruments and Controls in your Owner Manual.


## DRIVER ASSISTANCE SYSTEMS


The driver assistance systems use advanced technologies to help avoid collisions by providing visual, audible and/or tactile (vibration) alerts.


**Safety Alert Seat** – The driver's seat pulses, left side, right side, or simultaneously, to alert the driver of potential hazards.


- ▶ Audible alerts may be selected instead of Safety Alert Seat pulsing alerts. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

**Forward Collision Alert** – The  **Vehicle Ahead** indicator is green on the instrument cluster when a vehicle is detected and is yellow when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the driver's seat pulses.


- ▶ To set the alert timing or turn the system off, press the  **Following Gap** button on the left side of the steering wheel.

**Lane Keep Assist** – The  **Lane Keep Assist** indicator is green on the instrument cluster when a lane is detected ahead. The indicator is yellow, and the system gently turns the steering wheel, when crossing a detected lane marking to assist in keeping the vehicle in the lane. Turn the steering wheel to override Lane Keep Assist.


**Lane Departure Warning** – When crossing a detected lane marking without using a turn signal, the yellow  **Lane Departure Warning** symbol flashes on the instrument cluster and the left or right side of the driver's seat pulses. Turn the steering wheel to suppress Lane Departure Warning.


- ▶ To turn the Lane Keep Assist and Lane Departure Warning systems on or off, press the  **Lane Keep Assist** button on the left side of the CUE screen.


**Front and Rear Automatic Braking** – Automatically applies the brakes in potential collision situations to help reduce damage or help avoid collisions with vehicles directly ahead or behind, and with some objects behind.

- ▶ To turn the Front Automatic Braking system on or off, go to Settings > Vehicle > Collision/Detection Systems > Auto Collision Preparation.
- ▶ To turn the Rear Automatic Braking system on or off, press the  **Parking Assist** button on the right side of the CUE screen. This will also turn the Parking Assist and Rear Cross Traffic Alert systems on/off.

**Adaptive Cruise Control** – If a vehicle is detected ahead, the vehicle accelerates or brakes moderately to maintain the driver-selected cruise speed and following gap.

- ▶ To set a following gap, press the  **Following Gap** button on the left side of the steering wheel.

**Lane Change Alert** – While driving, a  warning symbol displays on the left or right side mirror when a vehicle is rapidly approaching from beyond that side blind zone area.

**Side Blind Zone Alert** – While driving, a  warning symbol displays on the left or right side mirror when a vehicle is detected in that side blind spot area.

- ▶ To turn the Lane Change Alert and Side Blind Zone Alert systems on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

*See Driving and Operating in your Owner Manual.*



## DRIVER ASSISTANCE SYSTEMS

**Rear Cross Traffic Alert** – With the vehicle in Reverse, a warning of approaching cross traffic is displayed on the touch screen from the Rear Vision Camera, and the left or right side of the driver's seat pulses to indicate the direction of the cross traffic.

- ▶ To turn the system on or off, press the **P** **Parking Assist** button on the right side of the CUE screen. This will also turn the Parking Assist and Rear Automatic Braking systems on/off.

**Automatic Safety Belt Tightening** – While driving, the front safety belts automatically tighten during emergency braking or steering maneuvers, and release when driving conditions return to normal.

*See Driving and Operating in your Owner Manual.*

## TRUNK RELEASE

- ▶ To open the trunk from inside the vehicle, press the **Trunk Release** button on the driver's door.
- ▶ To open the trunk from outside the vehicle, press the touch pad above the license plate. The vehicle must be unlocked or the transmitter must be within range of the trunk.



*See Keys, Doors and Windows in your Owner Manual.*

◆ Optional equipment

## ULTRAVIEW SUNROOF



### Open/Close the Sunshade

- ▶ Press the front or rear of the **Front Sunshade** switch (A) to express-open or express-close the front sunshade.
- ▶ Press the front or rear of the **Rear Sunshade** switch (B) to express-open or express-close the rear sunshade.

### Open/Close the Sunroof

- ▶ Press the rear of the **Sunroof** switch (C) to vent the sunroof. Press the **Sunroof** switch again to express-open the sunroof.
- ▶ Press the front of the **Sunroof** switch to express-close the sunroof.

*See Keys, Doors and Windows in your Owner Manual.*

## POWER CUPHOLDERS COVER

- ▶ Push or pull and then release the chrome tab to open/close the power retractable cover. The power cover will operate when the vehicle is On or in Accessory or Retained Accessory Power mode.
- ▶ Open/close the cover manually when power is not provided to the cupholder cover by slowly pushing or pulling the chrome tab.

*See Storage in your Owner Manual.*

## PADDLE SHIFT AUTOMATIC TRANSMISSION



The automatic transmission has paddle shifters on the steering wheel and a Manual mode that allow you to shift gears similar to a manual transmission.

### Temporary Tap Mode

- ▶ While in Drive (D), use either paddle behind the steering wheel to temporarily take control of gear selection. Automatic shifting returns if no manual shifts have been made after 10 seconds.
- ▶ Pull the right paddle to upshift or the left paddle to downshift. The current gear will be displayed on the instrument cluster.

### Permanent Tap Mode

- ▶ Press the M (Manual) button on top of the shift lever to enable the Manual mode. Use the paddles to manually shift the transmission.

If current vehicle speed is too high or too low for the requested gear, the shift will not occur.


 
*See Driving and Operating in your Owner Manual.*

## STABILITRAK®/TRACTION CONTROL SYSTEMS

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

### Turning Off Traction Control

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak** button on the center console. The  **Traction Control Off** light will illuminate on the instrument cluster.
- ▶ Press the button again to turn on traction control.



*See Driving and Operating in your Owner Manual.*

## DRIVE MODE CONTROL SYSTEM

The Drive Mode Control System automatically adjusts steering, automatic transmission and Magnetic Ride Control (if equipped) settings in real time.

- ▶ Press the **MODE** button on the center console to select the Tour (default at each ignition cycle), Sport, Snow/Ice, or Track mode.

*See Driving and Operating in your Owner Manual.*

## AUTOMATIC PARKING ASSIST

Automatic Parking Assist steers the vehicle to help park in parallel and perpendicular spaces.



1. Press the **P** **Automatic Parking Assist** button on the right side of the CUE touch screen. A beep sounds and a parking assist display is shown in the Driver Information Center (DIC). The system will begin searching for a large enough parking space.
2. To switch between parallel and perpendicular parking, press and hold the **P** button during the search process.
3. The system searches for parking spaces to the right of the vehicle. To search for a parking space to the left, turn on the left turn signal.
4. Once a space is found, shift the vehicle into Reverse to engage automatic steering.
5. Remove your hands from the steering wheel and accelerate or brake as required. Shifting directions will be displayed on the DIC. Be prepared to brake.
6. Parking Complete is displayed and a beep sounds when the parking maneuver is complete.

*See Driving and Operating in your Owner Manual.*

## ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the **(P)** **Parking Brake** switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** switch.



**Note:** The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive away.

*See Driving and Operating in your Owner Manual.*

## TIRE PRESSURE MONITOR

The **(!**) **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center.

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

*Refer to your Owner Manual for additional information about normal monthly tire maintenance.*

*See Vehicle Care in your Owner Manual.*

## OWNER PRIVILEGES™

### ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

**Roadside Assistance and OnStar®:** If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

### CUSTOMER ASSISTANCE

1-800-458-8006

Should you need to ask a question, make a comment, or request additional information, Cadillac Customer Assistance is available anytime.

### CADILLAC ONLINE OWNER CENTER

Visit [my.cadillac.com](http://my.cadillac.com) for access to the Cadillac Owner Center, which features online owner manuals, maintenance information, service records, and more.

### myCADILLAC and ONSTAR MOBILE APPS

The myCadillac and OnStar RemoteLink mobile apps connect owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance, as well as enabling users to perform Remote Keyless Entry transmitter commands, including locking and unlocking the doors and starting the vehicle.



An active OnStar account is required to use the OnStar mobile app. Download the mobile apps from your iPhone® or Android™ device's app store. To learn more about OnStar services, press the OnStar button, refer to your Owner Manual, call 1-888-466-7827 or visit [onstar.com](http://onstar.com).

### CUE SUPPORT

For information or assistance operating the CUE infotainment system, call 1-855-4-CUE-NOW (1-855-428-3669).

**We recommend always using ACDelco or genuine GM service parts.**

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2014 by General Motors. All rights reserved.

