

USER'S MANUAL

BV9348B

BLUETOOTH®-ENABLED | AM/FM RECEIVER

BOSS®
AUDIO SYSTEMS

USER'S MANUAL

BV9348B

BLUETOOTH®-ENABLED

AM/FM RECEIVER

FEATURING 6.2" (157mm) WIDESCREEN TOUCHSCREEN
DIGITAL TFT MONITOR



BOSS®
AUDIO SYSTEMS

 
INSTRUCTIONS

ACCESSORY

Accessory	Quantity
Wire	1PC
USB Cable	1PC
Keys	2PCS
Remote controller	1PC
Warranty card	2PCS

INSTRUCTIONS

PANEL INTRODUCTION

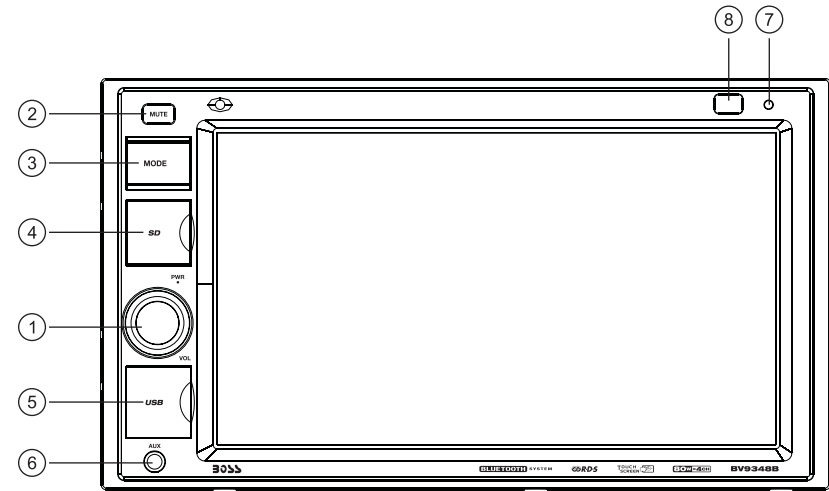

1. PWR/VOL button
2. MUTE button
3. MODE button
4. SD slot
5. USB slot
6. AUX slot
7. RESET
8. IR

BASIC FUNCTION

1. PWR/VOL button

Press this button will turn on power, during working longer press this button will turn off power, on any mode, shortly press will return main menu, rotate this button will adjust volume level.

 
2. MUTE button

Press this button to shut off sound output, repress this button to resume sound output; Press this button longer to turn on/off TFT LCD display.

3. MODE button

When the unit is power on, Repeat press this button can switch to different function mode as following picture.

Note: When the device without connection to USB, SD, the system will automatically skip these related working mode.



4. SD slot

Insert SD card, the unit will play the files automatically.

5. USB slot

Insert USB removable device so as to read audio/video files.

6. Dual (front and rear) AUX

To input external audio.

⚠ Warning: You can only use either front or rear AUX at a time. Never connect both front and rear AUX at the same time.

 
7. RESET

Press this button and this unit will be restored to the initial state.

8. IR

To receive infrared signal from the remote control.

Remote Control Operation

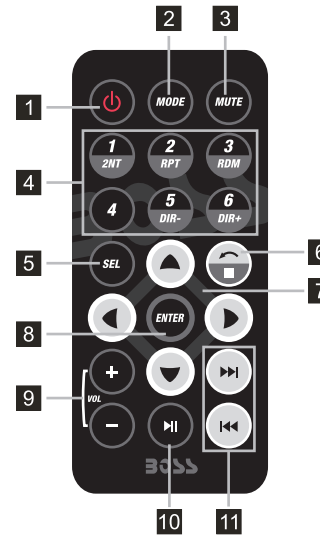

1. (Power) button

Press the button to turn power on/off.

2. MODE (mode switch) button

When the power is on, each time the button is pressed, the mode switches between RADIO/USB/SD (MMC) /AUX.

3. MUTE button

Press the button to turn off volume output, repress the button to resume previous volume level.

4. Number button

.Number button 1/2NT (track browse & playback)

Under FM/AM radio status, short press the button to get into the corresponding stored radio channels. After searching for a station manually, hold the button for 2 seconds to save the station in the number button 1's position. Browse & playback. Under USB playback status, press the button to browse and play the previous 10 songs, each for 10 seconds, repress it to cancel browsing and playback.

.Number button 2/RPT (repeat playback)

Under FM/AM radio status, short press the button to get into the corresponding stored radio channels. After searching for a station manually, hold the button for 2 seconds to save the station in the number button 2's position. Repeat playback. Under USB playback status, press the button to repeatedly play the current song, repress it to cancel repeat playback.

.Number button 3/RDM (random playback)

Under FM/AM radio status, short press the button to get into the corresponding stored radio channels. After searching for a station manually, hold the button for 2 seconds to save the station in the number button 3's position. Random playback. Under USB playback status, press the button to play songs in the disc randomly, repress it to cancel random playback.

.Number button 4

Under FM/AM radio status, touch the button to get into the corresponding stored radio channels. After searching for a station manually, hold the button for 2 seconds to save the station in the number button 4's position. Under USB playback status, press the button to select the current folder.

.Number button 5 Long press 5/DIR- to select the previous folder/short press to play the -10 song

Under FM/AM radio status, touch the button to get into the corresponding stored radio channels. After searching for a station manually, hold the button for 2 seconds to save the station in the number button 5's position. Under USB playback status, touch the button to select the -10 song cyclically. Long touch the button to select the previous folder.

.Number button 6 Long press 6/DIR+ to select the next folder/short press to play the +10 song

Under FM/AM radio status, touch the button to get into the corresponding stored radio channels. After searching for a station manually, hold the button for 2 seconds to save the station in the number button 6's position.

Under USB playback status, touch the button to select the +10 song cyclically. Long touch the button to select the next folder.

5. SEL Button

The function is the same as the function of SEL button on panel.

6.  Button

In radio/AUX mode, press the button to return to the interface;

In USB/SD mode, press the button: current interface → repertoire interface → interface.

7. /▶/▲/▼ Button

In DVD mode, press “◀” button to select the folder → AUDIO → IMAGE, press “▶” button to select the next folder.

8. ENTER button



9. VOL+/- button

Press this button to increase/decrease volume level.

10.  Button

Press this button so as to switch between play and pause.

 
11.   Button

The function is the same as the function of   buttons on panel.


BATTERY CHANGE

When control distance of remote control becomes shorter or no function, please change battery. Please confirm polarity before change.


One hand press stopper, then pull out battery.

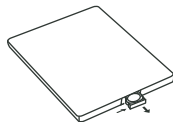

Put battery into controller.

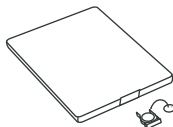 

Insert battery holder into controller.

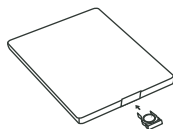 

When the ignition switch is put in ACC or ON position, Press power button on the front panel to turn on the unit. After the host starts, hold power button for 3 seconds, the host will turn off.

Access main interface

Turned on, the interface to return the icon to switch to the main interface. As shown below:



Touch the function icons so as to access the corresponding function operations.

USB/SD Card Operation

When there is a USB device/SD card connected, the unit can conduct the playback of audio/video/image files in the USB device/SD card.

Insert/Eject USB storage device

1. Connect a U disc recorded with media information to the unit by a USB connecting cable.
2. When there is a need to eject the USB device, exit the USB device playback screen first, and then take out the device.

Insert/eject SD card

1. Insert a SD card recorded with media information into the SD card slot in the unit correctly until it is locked.
2. When pulling out the SD card, exit SD card playing state first, then press the SD card and it shall pop up after unlocking.

Enter/exit

Insert a USB storage device or SD card to automatically play data contained in it. If the unit has connected with a USB device or SD card, touch [USB] icon in the multimedia interface to enter into the external storage playback interface; Touch [SD] icon to enter into the SD card playback interface. During playback, touch the top center area of the screen to pop up the touch menu, operate touch menu to perform various playback controls.


Play

After SD card/USB removable device being read out, you can by clicking the play files. Native support for playback the MP5 formats (including: *.rm, *.rmvb, *.wmv, *.wma, *.wav, *.dat, *.flv, *.asf, *.mov, *.DivX, *.vob, *.avi, *.fsm, *.mp3, *.mp2, *.mp4, *.mpg etc.)

Radio Operation


1. Enter/exit

Touch [Radio] icon in the main interface to enter into the radio interface.

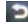
Touch  icon to return to main interface, and then touch other function icons so as to exit radio mode.


2. Mute: Click  icon, mute on/off.

3. Band selection


Click  icon so as to switch among FM1, FM2, FM3, AM1, AM2 bands.

4. Search/Save radio stations

Short press  icon to browse the stored radio stations. FM band can save 18 radio stations (Six stations for FM1/FM2/FM3), AM band can save 12 radio stations (Six stations for AM1/AM2).

5. Sound setting: Click  icon to access sound setting interface.

6. Turn on/off the Long/Short-range


Click  icon, the search pattern in the local search (LOC) and remote search (DX) switch between. LOC feature is turned on after the signal is strong enough only to listen to those in good condition and receiving radio station; DX enabled, you can receive remote weak radio signals.

Note: This function is available only when FM band is selected.

7. Loudness on/off

Click  icon so as to turn on/off loudness function.

8. Stereo on/off

When receiving stereo signals, click  icon to turn on/off stereo.

9. TA (Receive traffic information)

ON: When the traffic station is turned on, the radio will automatically search for traffic stations. After a station is searched, screen displays "TP". Only when traffic information is broadcasted can it be received, after traffic information is completed, the radio will automatically switch to the previous mode.

OFF: Repress [TA] button to close TA function. In other modes, traffic announcement will automatically switch to radio mode, after the traffic announcement is completed, it will automatically switch to the previous mode.

10. AF

Touch the button to turn the AF function on/off. AF function is turned on, When the received station signals become weak, the radio will automatically fine-tune to other frequencies. When receiving an emergency announcing, the screen will display warning message.

11. PTY

Touch the button the screen displays program types, users can search station according to program type.


Note: If the unit does not have RDS function, it has no AF/TA/PTY function.



BT Operation

1. Enter/exit

Touch [BT] icon in the main interface to enter the BT interface.


Touch  icon to exit BT interface.

2. Pair/link


To use BT hand-free function, make connection first, i.e. match the host with the BT mobile phone.



Operation methods:

Set the host to be matching state, and open the BT of your mobile phone and use the mobile phone to search device, the mobile phone shall prompt to match password with the BT when it has searched the BT device. Input BT password (0000) to the mobile phone and confirm. The mobile phone shall prompt whether authorize to this device, please select [Yes]. Phone and BT shall automatically connect within 20 seconds. Under any working mode, the host shall convert to BT state if there is an incoming call. And the host shall restore to current mode after hanging up.

 When the BT device matches with this device, the connection status shall display "LINK OK", otherwise, it shall display "NO LINK".

3. Dialing


You can dial on mobile phone directly or input phone number through the number buttons on the screen, click  to delete if there is input error.

After input the phone number, click  to make a call, and click  to hang up the phone.

Click  during a call so as to switch the voice between car speaker and mobile phone.

4. Call records

Click  to access call records interface.

 
 
 Touch this button to check all the phone numbers of received calls.

 Touch this button to check all the dialed phone numbers.

 Touch this button to check all the phone numbers of missed calls.

5. BT music

Click  to access BT music interface.

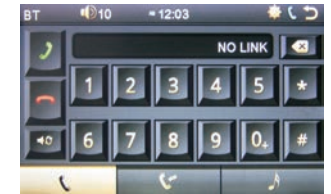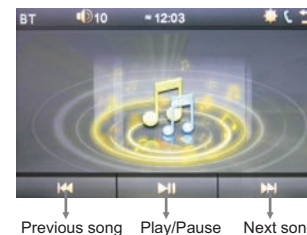

External input operation

Connect the video input plug with external video input jack, and connect the audio input plug with external audio input jack.

Touch [Aux] icon on main interface to access external input interface.





Steering wheel setting

1. Click on the [SWC] icon in the main interface into the steering wheel settings interface.
 2. The original vehicle to the control line positive, negative with the machine control line in the positive and negative connection.
 3. Click the steering wheel buttons will appear corresponding operating tips, and fundamental operation prompts the steering wheel feature set.
 4. Set function to save the settings and click the Confirm icon to confirm.
- Note: To modify function settings, repeat procedures 3~4.
To reset functions, click [Reset] icon, all the settings set before shall be cleared, repeat procedures 3~4 for resetting.



AUDIO setting

- Click on the [AUDIO] icon in the main interface enter the AUDIO setting interface.
- Drag on each volume, treble, bass bar  icon associated settings.
- Click  icon to adjust the speaker channel.
- Click LOUD icon at the option on / off loudness.
- Click SUB icon at the option on / off subwoofer.
- Click RESET icon restore the initial settings.



 
Other functions

Rearview function

In any running state, the video signal can switch to reverse video state when reversing the car, and the system shall return to its initial running state after reversing the car.

⚠ Warning

Do not rely on CCD system completely, please make sure your car is safe by your eyes during driving. Back rearview system only assists in driving. As the distance range of rearview system is limited, completely relying on the rearview system during driving may cause accidents.

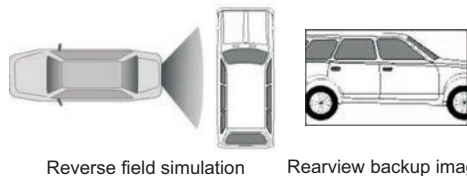

Access setup interface

Click [Setup] icon on main interface to access setup interface.

Audio setting

Click [AUDIO] icon on setup interface to access audio setting interface.

You can turn on or turn off the existing functions on audio setting interface and adjust the rearview volume.



 
Date setting

Click [DATE] icon on setup interface to access time setting interface.

Click [12 Hour] icon on time bar [Time Mode 12 Hour] time setting interface shall display, Can be set time mode.

Click [AM 12:02] icon on time bar [Set Time AM 12:02] time setting interface shall display, Can be set time.


Click [2012/01/01] icon on time bar [Set Date 2012/01/01] time setting interface shall display, Can be set Date.

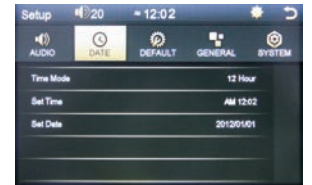

General setting

Click [GENERAL] icon on setup interface to access general setting interface.

 In general setting interface, you can select to turn on or turn off the existing functions.

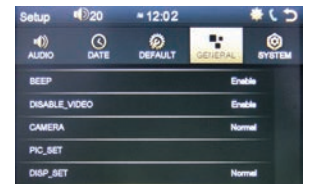


System setting

Click [SYSTEM] icon on setup interface to access system setting interface.



Language setting

During use, you can select your familiar language to display menu by language setup.

Click the corresponding [English] icon on the language bar desired to be set so as to switch the language type, when there are more than 3 languages,  direction icon shall pop up, click it to select your familiar language.

Touch calibrate

If touch calibration error occurs, you can adjust the touch coordinate by "Touch calibrate".

Click [Touch Calibrate] icon on system setting interface, to confirm to access touch calibration interface.

 
Touching methods

Use touch pen to click the center of "+" icon, and move along with center of "+" icon so as to calibrate the screen. It shall automatically save data and exit after screen calibration. Please accurately click all positions on screen, or the accuracy of touch calibration shall be affected.

WIRING DIAGRAM

This player is equipped with ISO standard connector, please follow below instruction:

- Red - ACC ON (+12V)
- Yellow – 12 V Constant
- Black – Ground wire
- Blue - Power Antenna / Remote Amp Turn On
- Orange – Back-Up Camera Trigger (+)
- Grey/Grey black - Right front speaker (+/-)
- White/White black - Left front speaker (+/-)
- Purple/Purple black - Right rear speaker (+/-)
- Green/Green black - Left rear speaker (+/-)
- Parking Brake (-)

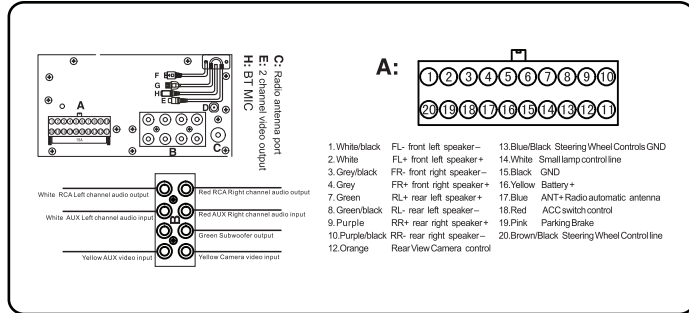

TROUBLE SHOOTING

PROBLEM	CAUSE	SOLUTION
Cannot power on	Check fuse	Change fuse same as the old one
	Some factors cause MPU wrong operation	Press RES button on the panel by penpoint, then, power on
After ignition switch off, setting information all lose	Change battery or fuse	Reset information and save
Poor performance of radio station	Weak signal	Move the car to another place, then research
Cannot switch language/subtitle	There is only one language/subtitle	If not with multi - language/subtitle, it cannot switch language/subtitle
No image	Other factors cause MPU wrong operation	Press RES button on the panel by penpoint, then, power on
Cannot watch image during driving	It's not allowed to watch image during driving	Park the car in a safe place, put the car stall in " P " position, pull up the hand brake, parking brake wire must be grounded

INSTRUCTIONS

SPECIFICATIONS

- Power supply ----- DC 12V
- Power range----- 10.8-16.0V DC
- Max Current Consumption----- 15A
- Ground system ----- Negative ground
- Power Output ----- 80 WattsX4 Channels

FM tuner

- US frequency range ----- 87.5-107.9MHz
- European frequency range ----- 87.5-108MHz
- Signal / Noise ratio----- 55dB
- Stereo separation ----- 30dB
- Search station volt ----- 20-30dBuv

AM tuner

- US frequency range----- 530-1710KHz
- European frequency range ----- 522-1620KHz
- Limit noise sensitivity ----- 32dB

DVD player

- S / N Ratio----- 70dB
- Frequency response----- 20Hz-20KHz

This unit is with switchable frequency.

You can switch from USA frequency to Europe frequency by following the below steps:
 Step1. In main menu, press setup icon to enter the setup interface.

Step2. Press the Radio icon, and insert password 123456, then press "OK", the menu from which you can select the radio frequency will show.

Step3. Press "Radio region" and select the desired frequency by pressing the "up" and "down" arrow, then press it and setting is finished.