



## **EVO 4T**

Thanks for your preference, and have a good time! This handbook contains the information you need to properly operate and maintain your motorcycle.

The data and specifications provided in this manual does not constitute an engagement on the part of BETAMOTOR S.p.A. BETAMOTOR reserves the right to make any changes and improvements to its models at any moment and without notice.

## IMPORTANT

We recommend you to check all the tightenings after the first one or two hours' ride over rough ground. Special attention should be paid to the following parts:

- rear sprocket
- ensure that the footrests are properly fixed
- front/rear brake levers/calipers/discs
- check that the plastics are properly fastened
- engine bolts
- shock absorber bolts/swingarm
- wheel hubs/spokes
- rear frame
- pipe connections
- tensioning the chain

## IMPORTANT

For any servicing requirements, please get in contact with Beta-motor's authorized service network.

# CONTENTS

## TABLE OF CONTENTS

Operating instructions .....	5
Ecologic guide .....	5
Riding safety .....	6
<b>CHAPTER 1 GENERAL INFORMATION .....</b>	<b>7</b>
Vehicle identification data .....	8
Familiarizing with the vehicle .....	9
Specifications .....	10
Electrical system .....	14
Recommended lubricants and liquids .....	18
<b>CHAPTER 2 OPERATION .....</b>	<b>19</b>
Main parts .....	20
Checks before and after use .....	24
Breaking in .....	24
Fuelling .....	25
Startup .....	26
Engine shut-down .....	26
<b>CHAPTER 3 ADJUSTMENTS .....</b>	<b>27</b>
Brakes .....	28
Clutch .....	29
Adjustment of gas clearance .....	29
Accelerator .....	30
Handlebar .....	30
Adjusting fork .....	30
Shock absorber .....	31
Suspension adjustment according to the motorcyclist's weight .....	32
<b>CHAPTER 4 CHECKS AND MAINTENANCE .....</b>	<b>33</b>
Key to symbols .....	34
Engine oil .....	34
Coolant .....	36
Air filter .....	38
Spark plug .....	40
Carburetor .....	41
Front Brake .....	42
Rear brake .....	44
Clutch control .....	45

# CONTENTS

Steering gear.....	47
Oil fork.....	48
Tyres.....	52
Chain .....	53
Headlight.....	55
Rear tail light.....	56
Cleaning the vehicle .....	57
Prolonged inactivity .....	58
Scheduled maintenance vehicle .....	59
<b>CHAPTER 5 TROUBLESHOOTING .....</b>	<b>61</b>
Troubleshooting .....	62

## **OPERATING INSTRUCTIONS**

- The vehicle must be accompanied by: number-plate, registration document, tax disc and insurance.
- Do not carry animals, pets or loose objects that can stick out from the vehicle.
- Riding without a crash helmet is forbidden.
- Always ride with the low beam on.
- Any modifications of the engine or other parts resulting in a power and/or speed increase are punishable by severe sanctions including the confiscation of the vehicle.
- To protect your safety and that of others, always drive carefully and with your helmet on.

### **WARNING**

Any modifications and tampering with the vehicle during the warranty period exempt the manufacturer from all responsibility and invalidate warranty.

## **ECOLOGIC GUIDE**

- Every vehicle powered by an internal combustion engine produces an amount of noise (noise pollution) and gases (air pollution) which varies with the riding style.
- The abatement of noise and air pollution levels is the duty of everybody. Avoid full-throttle starts, sudden acceleration and abrupt braking. This will reduce noise emission as well as the wear and tear of the tyres and mechanical parts, and will also allow a considerable reduction in fuel consumption.

## RIDING SAFETY

- Observe the Highway Code.
- Always put on and fasten a homologated helmet.
- Always ride with the low beam on.
- Always keep the crash helmet visor clean.
- Avoid wearing garments with hanging ends.
- Do not keep sharp or brittle objects in your pockets while riding.
- Properly adjust the rearview mirrors.
- Always ride in a seated position, with both hands on the handlebars and both feet on the footrests.
- Always pay attention and do not allow anything to distract you while riding.
- Do not eat, drink, smoke, use a mobile phone, etc. while riding.
- Do not wear headphones to listen to music while riding.
- Never ride abreast with other vehicles.
- Do not tow and avoid being towed by other vehicles.
- Always keep a safe distance from other vehicles.
- Do not sit on the vehicle when it is on its stand.
- Do not start off while the vehicle is on its stand.
- Do not pull out the stand when the vehicle is facing downhill.
- Avoid swaying and wheelies as they are extremely dangerous for your own and other people's safety as well as for your vehicle.
- Always apply both brakes on dry roads with no gravel and sand. Using one brake may be dangerous and cause uncontrolled skidding.
- To reduce the braking distance, always apply both brakes.
- On wet roads and in off-road riding, drive with care and at moderate speed. Take special care in applying the brakes.
- Do not start the engine in closed places.

**CHAPTER 1 GENERAL INFORMATION****CONTENTS**


Vehicle identification data .....	8
Frame identification .....	8
Engine identification .....	8
Familiarizing with the vehicle.....	9
Main parts.....	9
Specifications .....	10
Weight.....	10
Vehicle dimensions .....	10
Tyres .....	10
Capacities .....	10
Front suspension.....	11
Rear suspension .....	11
Front brake .....	11
Rear brake .....	11
Engine .....	12
Carburetor.....	12
Gear box .....	13
Electrical system.....	14
Electrical diagram for homologated version .....	14
Legend electrical diagram for homologated version .....	15
Electrical diagram for race version .....	16
Legend electrical diagram for race version .....	17
Recommended lubricants and liquids.....	18



## VEHICLE IDENTIFICATION DATA

### FRAME IDENTIFICATION

Frame identification data **A** are stamped on the right side of the steering head tube.

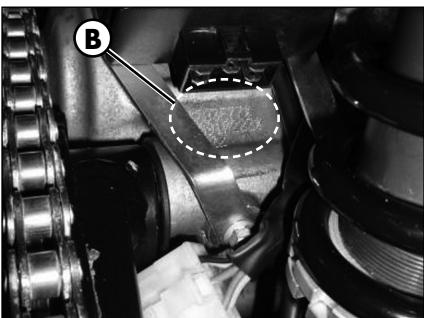


### ENGINE IDENTIFICATION

Engine identification data **B** are stamped in the area shown in the picture.  
In order to read it correctly, it is necessary to remove the silencer and disconnect the regulator connector.

#### WARNING:

Tampering with the identification numbers is severely punished by law.

## FAMILIARIZING WITH THE VEHICLE

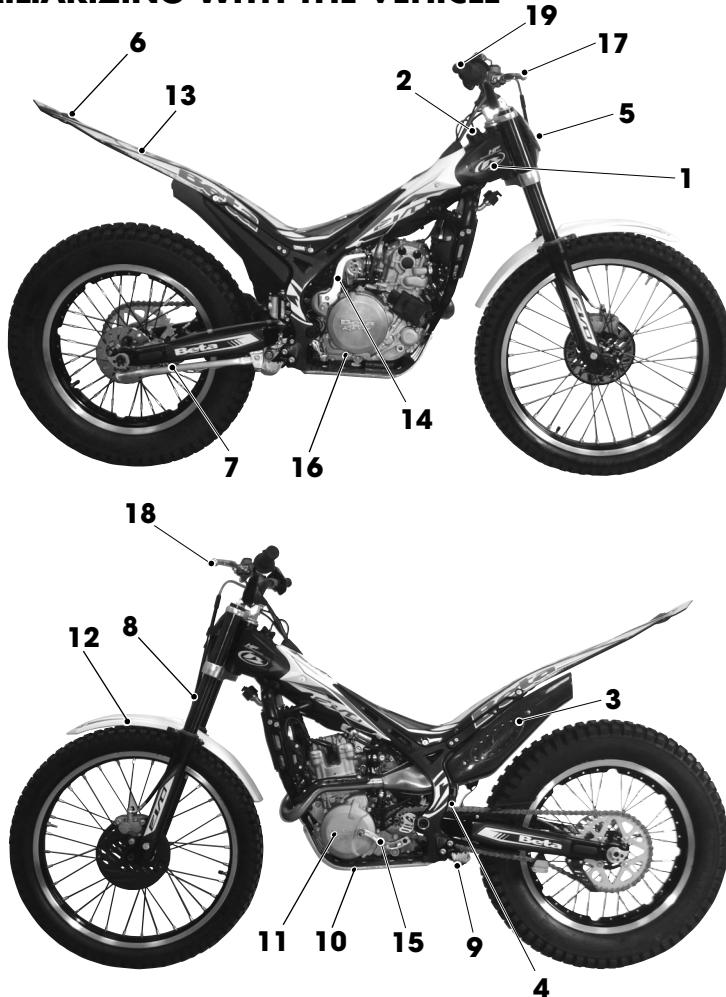

### MAIN PARTS

- |                       |                      |
|-----------------------|----------------------|
| 1 Fuel tank           | 11 Engine            |
| 2 Tank cap            | 12 Front mudguard    |
| 3 Silencer            | 13 Rear mudguard     |
| 4 Rear shock absorber | 14 Kick-start        |
| 5 Headlight           | 15 Gear lever        |
| 6 Rear light          | 16 Rear brake lever  |
| 7 Side stand          | 17 Front brake lever |
| 8 Fork                | 18 Clutch lever      |
| 9 Rider's footrests   | 19 Throttle          |
| 10 Lower bumper       |                      |

## SPECIFICATIONS

### WEIGHT

Dry weight .....	72 kg
Front .....	36 kg
Rear .....	36 kg

### VEHICLE DIMENSIONS

maximum length.....	2005 mm
maximum width .....	850 mm
wheelbase.....	1305 mm
maximum height .....	1115 mm
ground clearance.....	310 mm
saddle height.....	660 mm

### TYRES

Dimensions		Pressure [Bar]	
Front tyre	Rear tyre	Front tyre	Rear tyre
2,75 - 21	4,00 - 18	0,4 ÷ 0,5	0,3 ÷ 0,4

### CAPACITIES

fuel tank.....	2,8 liters
coolant circuit.....	600 ml
engine oil.....	900 ml

**FRONT SUSPENSION**

<b>Version</b>	<b>EVO 250</b>		<b>EVO 300</b>	
Wheel excursion [mm]	166		166	
	Right fork leg	Left fork leg	Right fork leg	Left fork leg
K spring [N/mm]	X	7,65	X	7,65
Oil type	Shell Tellus S2 V32 SAE 6,1			
Oil level [mm] (edge rod with fork compressed)	65	125	65	125
Register spring preload	X	Full open	X	Full open
Click in extension	Full open	X	Full open	X

**REAR SUSPENSION**

<b>Version</b>	<b>EVO 250</b>	<b>EVO 300</b>
k spring	70N/mm	70N/mm
Length (spring in its seat) [mm]	136	136
Oil type	oil titan SAF 5045 Eu 137 RED	
Click in extension	Full open	Full open

**FRONT BRAKE**

disk-type with hydraulic control Ø 185 mm

**REAR BRAKE**

disk-type with hydraulic control Ø 160 mm

**ENGINE**

<b>Version</b>	<b>EVO 250</b>	<b>EVO 300</b>
Type	Single-cylinder, 4-stroke	Single-cylinder, 4-stroke
Bore x stroke	77 x 53,6	84 x 53,6
Displacement [cm <sup>3</sup> ]	249,6	297
Pressure ratio	11,5:1	11,4:1
Fuel system	carburetor	carburetor

**CARBURETOR**

	<b>EVO 250</b>		<b>EVO 300</b>	
<b>Version</b>	Homologated	Competition*	Homologated	Competition*
Carburetor type	SE BSR33-79		SE BSR33-79	
Main jet	120	127,5	120	120
Slow jet	17,5	27,5	17,5	27,5
Start jet	60	60	60	60
Needle	5D132	5D132	5D132	5D132
Needle position (from top)	2°	3°	2°	3°
Air screw turns (from all closed)	3+1/2	2+1/2	3+1/2	2
Spacer	YES	NO	YES	NO

\* Such modification makes the vehicle non-compliant with the road regulations in force. Its use must be limited to the sole private circuits which are closed to circulation.

Cooling system ..... forced liquid circulation by pump  
 Spark plug ..... NGK CR7EB  
 Clutch..... wet, multidisc

**GEAR BOX**

<b>Version</b>	<b>EVO 250</b>		<b>EVO 300</b>	
Primary drive	18/63		18/63	
Gear ratio 1st gear	13/36		13/36	
Gear ratio 2nd gear	15/36		15/36	
Gear ratio 3rd gear	16/30		16/30	
Gear ratio 4th gear	24/27		24/27	
Gear ratio 5th gear	28/21		28/21	
Secondary drive	Homologated	Competition*	Homologated	Competition*
	42/13	42/11	42/13	42/11

\* Such modification makes the vehicle non-compliant with the road regulations in force. Its use must be limited to the sole private circuits which are closed to circulation.


Ignition ..... electronic Hidria 12V-120W

# GENERAL INFORMATION

# 1

## ELECTRICAL SYSTEM

### ELECTRICAL DIAGRAM FOR HOMOLOGATED VERSION

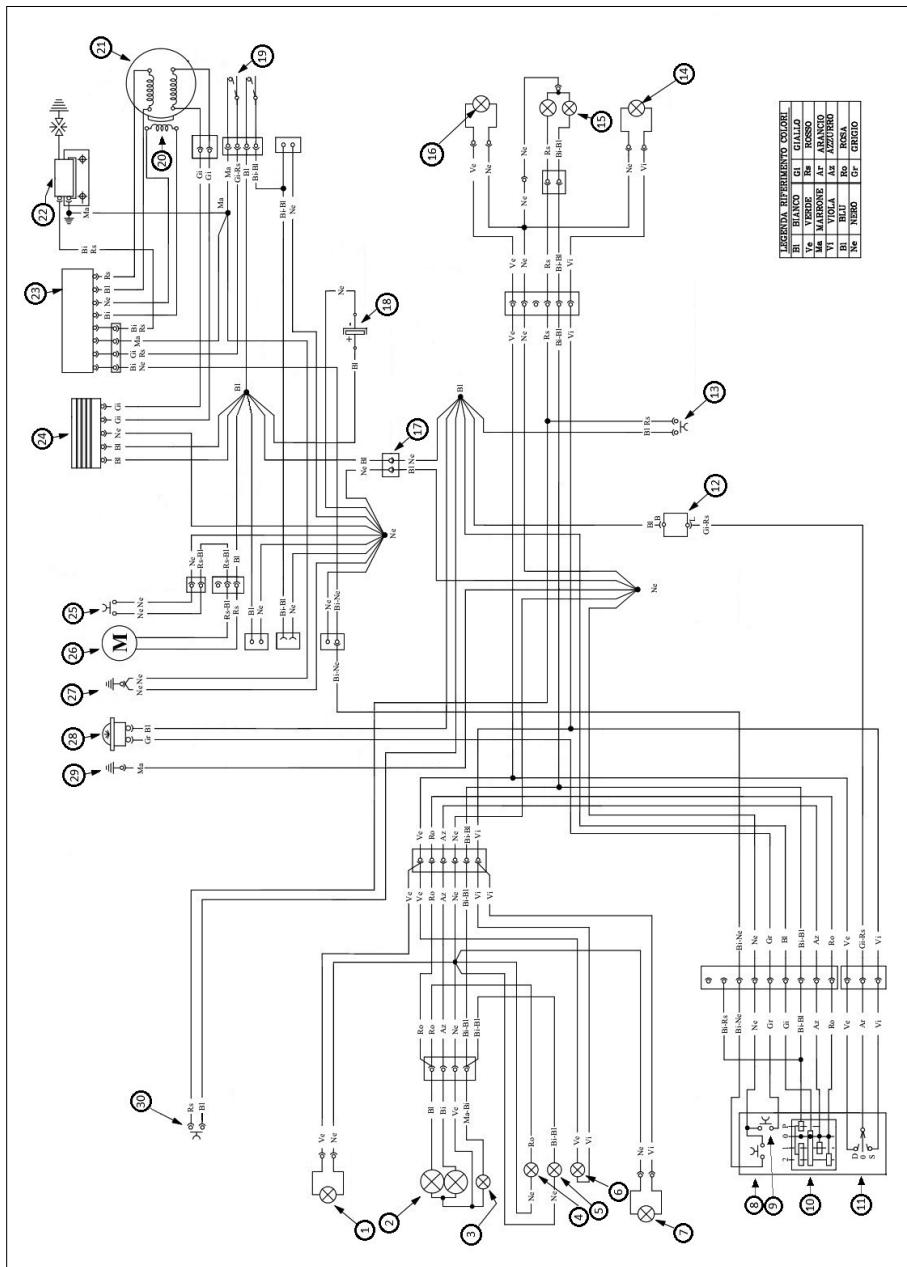

**LEGEND ELECTRICAL DIAGRAM FOR HOMOLOGATED VERSION**

- 1) R.H. front turn signal with bulb 12V - 10W
- 2) Headlamp (double filament bulb) 12V-35/35W
- 3) Position light with bulb 12V - 5W
- 4) High beam indicator light with bulb 12V 1,2W
- 5) Dashboard indicator light with bulb 12V 1,2W
- 6) Turn signal indicator light with bulb 12V 1,2W
- 7) L.H. front turn signal with bulb 12V - 10W
- 8) Engine stop button
- 9) Horn button
- 10) Light switch
- 11) Turn signal switch
- 12) Blinker
- 13) Rear brake stop button
- 14) L.H. rear turn signal with bulb 12V - 10W
- 15) Tail light with bulb 12V - 5/21W
- 16) R.H. rear turn signal with bulb 12V - 10W
- 17) Connector connected to the fuel cock
- 18) Condenser 4700µF - 25V
- 19) Switch for change mapping
- 20) Pick-up
- 21) Generator
- 22) H.T. coil
- 23) Electronic control unit
- 24) Regulator 12V
- 25) Thermal switch
- 26) Electrofan
- 27) Frame earth
- 28) Horn 12V
- 29) Frame earth
- 30) Front brake stop button

## Key to colours

Bi = White  
 Ve = Green  
 Ma = Brown  
 Vi = Purple


Bl = Blue  
 Ne = Black  
 Gi = Yellow  
 Rs = Red

Ar = Orange  
 Az = Sky-blue  
 Ro = Pink  
 Gr = Grey

# GENERAL INFORMATION

1

## ELECTRICAL DIAGRAM FOR RACE VERSION

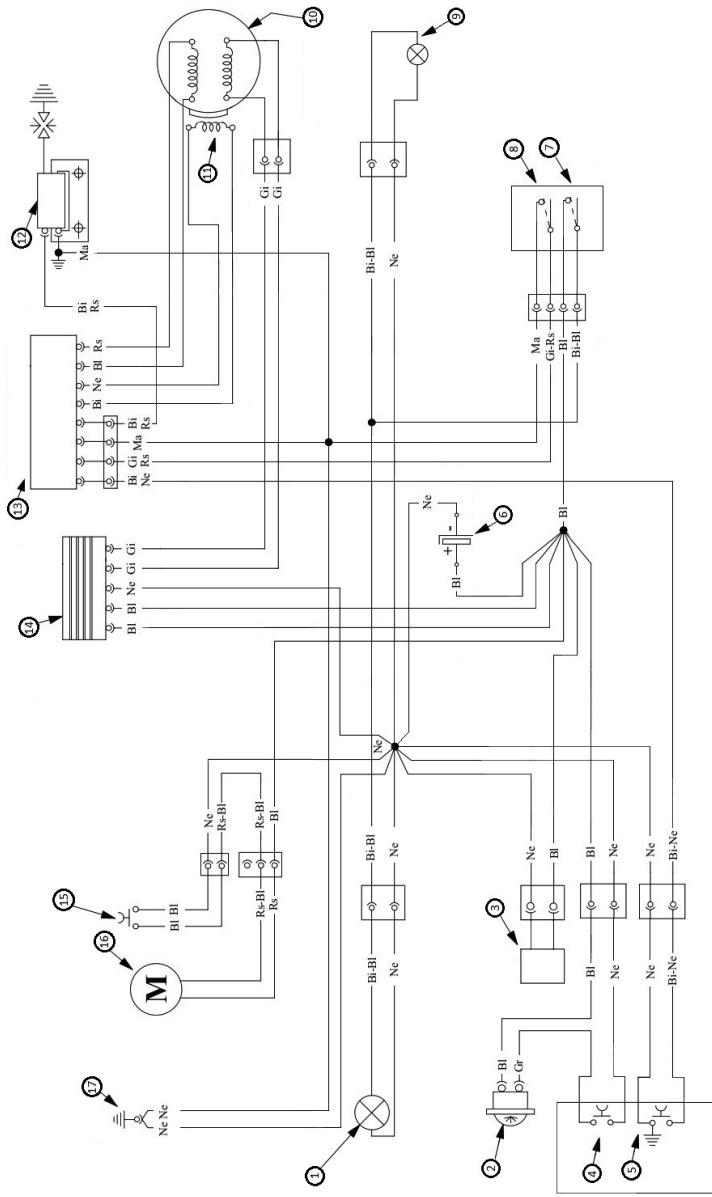

LEGENDA RIFERIMENTO COLORI		
Bi	BIANCO	Gi GIALLO
Ve	VERDE	Rs ROSSO
Ma	MARRONE	Ar ARANCIO
Vi	VIOLA	Az AZZURRO
Bl	BLU	Ro ROSA
Ne	NERO	Gr GRIGIO

**LEGEND ELECTRICAL DIAGRAM FOR RACE VERSION**

- 1) Headlamp with bulb 12V-20W
- 2) Horn 12V
- 3) Fuel cock
- 4) Horn button
- 5) Engine stop button
- 6) Condenser 4700 $\mu$ F - 25V
- 7) Light switch (black)
- 8) Switch for change mapping (yellow)
- 9) Tail light with bulb 12V - 3W
- 10) Generator
- 11) Pick-up
- 12) H.T. coil
- 13) Electronic control unit
- 14) Regulator 12V
- 15) Thermal switch
- 16) Electrofan
- 17) Frame earth

## Key to colours

Bi = White  
Ve = Green  
Ma = Brown  
Vi = Purple

Bl = Blue  
Ne = Black  
Gi = Yellow  
Rs = Red

Ar = Orange  
Az = Sky-blue  
Ro = Pink  
Gr = Grey


## RECOMMENDED LUBRICANTS AND LIQUIDS

For better operation and longer vehicle life, we advise you to use the products listed in the following chart:

Engine Oil: 850cc	Motul 7100 10w40 (For Competition use Motul 300V 10w40)
Brake Fluid	Motul RBF 600
Coolant/Antifreeze	Motul Motocool Expert
Fork Oil	Motul Factory Line 5 wt.
Air Filter Oil	Motul Air Filter Oil
Air Filter Cleaner	Motul Air Filter Clean
Grease	Motul Tech 300

**CHAPTER 2 OPERATION****CONTENTS**

Main parts .....	20
Fuel cock .....	20
Starter .....	20
Hot start .....	20
Clutch lever .....	21
LH switch .....	21
RH switch .....	21
Front brake lever and gas control .....	22
Gearchange lever .....	22
Brake pedal .....	22
Kick-start .....	22
Checks before and after use .....	24
Breaking in .....	24
Fuelling .....	25
Startup .....	26
Engine shut-down .....	26

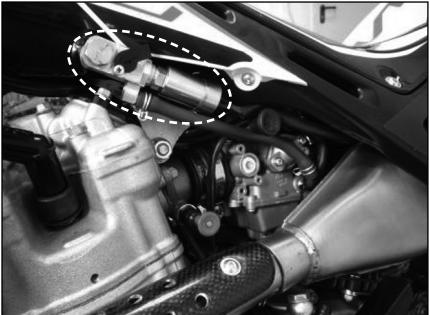


## MAIN PARTS

### FUEL COCK

Fuel valve has two positions:

C : OFF Automatic. If the engine is shut off, the fuel supply is switched off and the fuel cannot flow from the tank to the carburetor.  
A: fuel supply always enabled. The fuel passes from the tank to the carburetor even with the engine off.

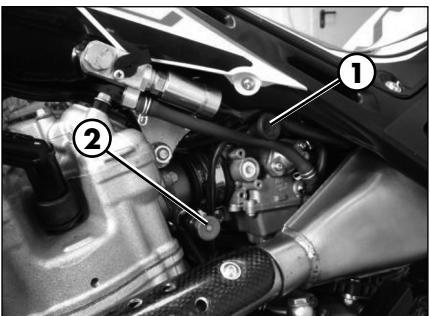

### STARTER

The starter lever **1** is located on the carburetor.

To use, pull it out.


### HOT START

The hot start **2** is located on the intake manifold.

To use, pull it out.

## CLUTCH LEVER


Clutch lever **1** is fitted to the left-hand side of the handlebars. Screw **A** can be used to alter the home position of the lever (see Adjustments).

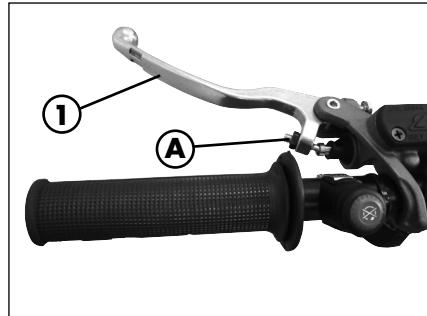

## LH SWITCH

The off switch is positioned on the left-hand side of the handlebar and consists of the following:

shutdowns engine: it is necessary to hold it until the engine stops.

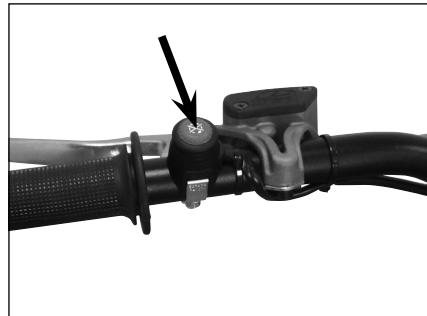

## RH SWITCH



The lights and services switch is located on the right-hand side of the radiator and consists of the following:


**1** Rear light power on/off

**2** Mapping change switch

By acting on the switch shown in the figure, it is possible to select one of two possible mappings for the ignition advance.


With the switch in position **A**, "soft" mapping more suited to muddy terrain and for a gentler response of the bike is selected. With the switch in position **B** "hard" mapping that is more suitable for dry land and for a more aggressive response of the bike is selected.

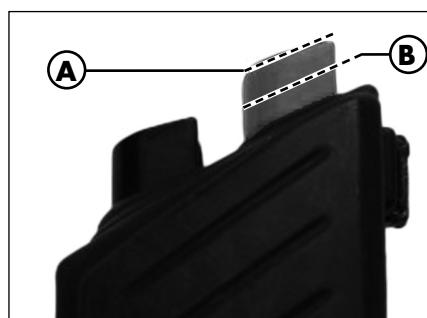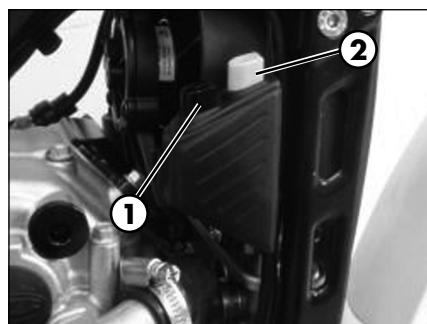

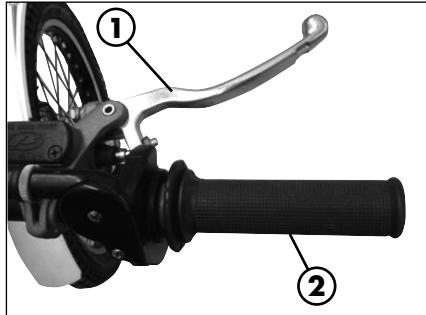

## FRONT BRAKE LEVER AND GAS CONTROL

The front brake lever **1** and the gas throttle **2** are located on the right side of the handlebar.

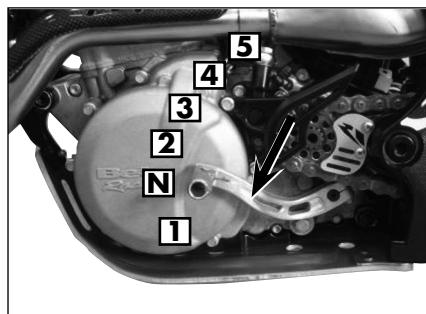

## GEARCHANGE LEVER

Gearchange lever is fitted to the left side of the engine.

The positions corresponding to the different gears are shown in the figure.



## BRAKE PEDAL

Brake pedal is located in front of the right-hand footrest.



## KICK-START


The kick-start pedal is located on the right side of the engine. The upper part is rotatable

## SIDE STAND

Press down side stand with the foot and lean the vehicle against it.

Ensure that the ground is solid and the vehicle stands steadily.

**WARNING!** The kickstand has an automatic closing device. When the vehicle weight on the kickstand is reduced, it closes automatically.

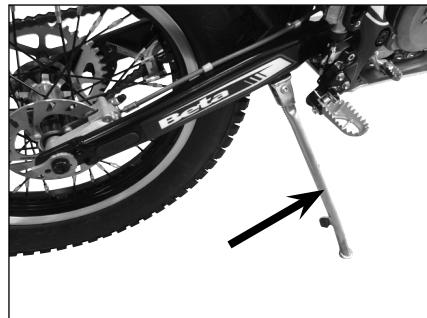

## CHECKS BEFORE AND AFTER USE

For safe driving and long vehicle life you should:

- Check all fluid levels.
- Check the correct operation of the brakes and brake pad wear (page 43).
- Check pressure, general condition and thickness of tread (page 10).
- Check that the spokes are properly tightened.
- Check the chain tension (page 54).
- Check the adjustment and the operation of all the cable controls.
- Inspect all the nuts and bolts.
- With the engine running, check the operation of the headlight, the rear and brake lights, the indicators, the warning lights and the horn.
- Wash the motorcycle thoroughly after off-road use (page 58).

## BREAKING IN

The breaking-in period lasts approximately 10 hours, during which it is advisable to:

- Avoid travelling at constant speed.
- For the first 3 hours of use, the engine should only be used at up to 50% of its power. The engine speed should not exceed 7000 rpm.
- For the next 7 hours of use, the engine should only be used at up to 75% of its power.

### WARNING:

After the first 3 hours to replace the engine oil.

This procedure should be followed each time piston, piston rings, cylinder, crankshaft or crankshaft bearings are replaced.

## FUELLING

Use unleaded gasoline.

Fuel tank capacity is shown on page 10.

To open the fuel tank's cap, turn it anti-clockwise.

To close the fuel tank's cap, set it on the tank and crew it clockwise.



## STARTUP

Set the fuel tank tap to A (see page 20).

- Check that the gears are in neutral (page 22).

- Pull the clutch lever (page 21).

KICKSTART (page 22):

depress the kick-starter with a sharp movement of the foot.

### ATTENTION

Once the pedal has been depressed, release it immediately. This avoids jolts to the entire ignition group and to the foot.

COLD STARTING:

operate the starter (page 20), start the vehicle, wait a few seconds, then move the starter back to its starting position.

HOT STARTING:

operate the hot start (page 20), WITHOUT stepping on the gas to start the vehicle, wait a few seconds, then return the hot start to the initial position.

Once you start the engine, turn the fuel cock to the "C" position.

STARTING WHEN THE BIKE HAS FALLEN OVER:

If the bike falls over, the carburettor float bowl may empty. In this case, follow the procedure for starting a warm engine.

## ENGINE SHUT-DOWN

To shut-down the engine:


- press the button  on the left switch unit (see page 21).

NOTE:

With the engine off, make sure the fuel cock is set to C (page 20).

**CHAPTER 3 ADJUSTMENTS****CONTENTS**

Brakes .....	28
Front brake .....	28
Rear Brake.....	28
Clutch.....	29
Adjustment of gas clearance.....	29
Accelerator .....	30
Adjusting the idle speed .....	30
Handlebar .....	30
Adjusting fork .....	30
Adjusting the rebound damper .....	30
Adjusting the spring preload .....	31
Shock absorber.....	31
Adjusting the rebound damper .....	31
Adjusting the spring preload .....	32
Suspension adjustment according to the motorcyclist's weight .....	32

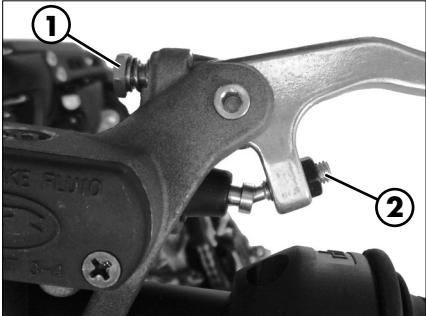

## BRAKES


### FRONT BRAKE

The front brake is disk type with hydraulic control.

The position of the lever is controlled through the use of register **1**.

Once the position of the lever has been changed, register **2** must be changed to restore the initial correct clearance.

**WARNING:** reduced play causes brake overheating leading to sudden lockup.

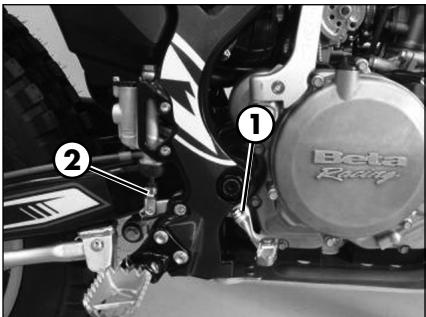

### REAR BRAKE

The rear brake is disk type with hydraulic control. You may adjust pedal height by means of register **1**.


Once you change the original pedal position you need to modify regulator **2** on the brake pump to allow you to reset the correct pump travel.

**WARNING:** reduced play causes brake overheating leading to sudden lockup.

## CLUTCH


The position of the lever is controlled through the use of register **1**.

Once the position of the lever has been changed, register **2** must be changed to restore the initial correct clearance.

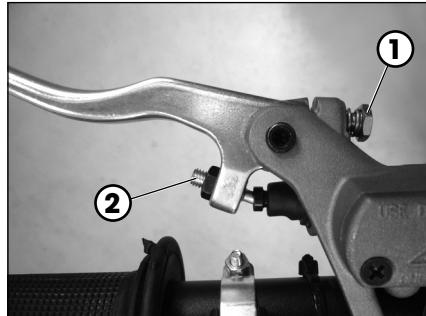

The idle stroke of push rod must not be less than 0.9 mm

ATTENTION: reduced clearance leads to premature wear of the discs and overheating of the entire clutch group.

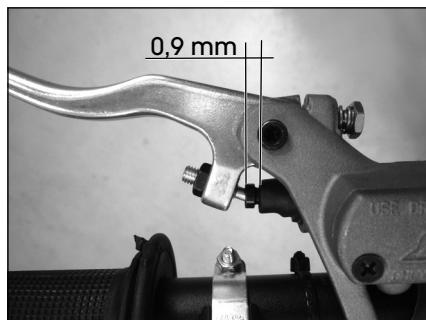


## ADJUSTMENT OF GAS CLEARANCE

The throttle control cable should always have a 3-5 mm play. In addition, the idle speed should not change when the handlebars are fully rotated to the left or right.


To adjust the clearance proceed as follows:

- Loosen ring **1**.
- Rotate register **2** with respect to sheath **3**.
- Tighten ring **1**.

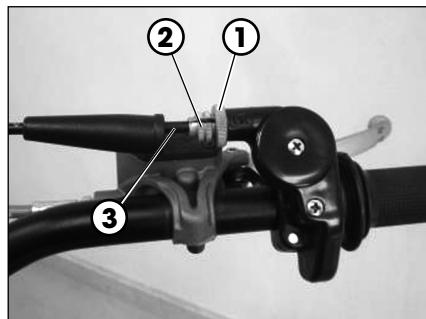

# 3

## ADJUSTMENTS

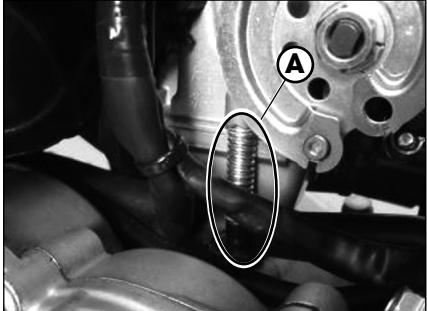

### ACCELERATOR

#### ADJUSTING THE IDLE SPEED


In order to perform this operation correctly, we advise you to do it when the engine is hot, connecting an electric revolution counter to the spark plug wire. Then use a screwdriver on register screw **A** to calibrate the minimum with  $1.100 \div 1.200$  rpm.



### HANDLEBAR

The handlebar can be adjusted by rotating it back and forth.

- To adjust the handlebar loosen screws **1**.
- Position the handlebar according to requirements.
- Tighten to the torque indicated.

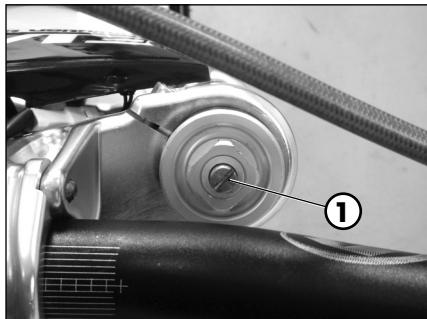

### ADJUSTING FORK

#### ADJUSTING THE REBOUND DAMPER


The hydraulic brake unit in extension determines the behaviour in the extension phase of the fork and can be adjusted using screw **1**. Turning clockwise increases the action of the brake in extension, while rotating counter-clockwise decreases the action of the brake in extension.

For standard calibration, refer to page 11.

## ADJUSTING THE SPRING PRELOAD

Spring preload is adjusted by means of screw **2**. Turning clockwise will increase the preload, while rotating counter-clockwise decreases the preload.

For standard calibration, refer to page 11.

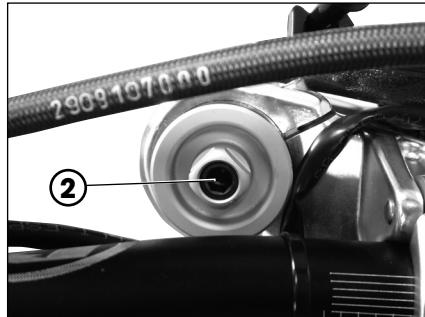

## SHOCK ABSORBER


### ADJUSTING THE REBOUND DAMPER


The hydraulic brake unit in extension determines the behaviour in the extension phase of the shock absorber and can be adjusted using screw **1**. Turning clockwise increases the action of the brake in extension, while rotating counter-clockwise decreases the action of the brake in extension.

For standard calibration, refer to page 11.

#### NOTE:

for adjustment use a T-handle wrenches with jointed hexagonal socket.

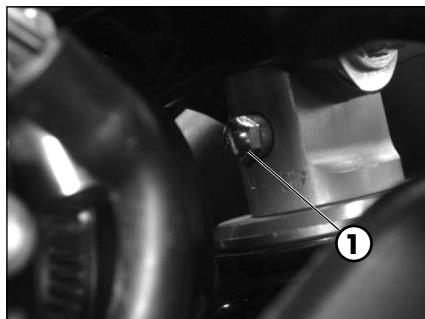

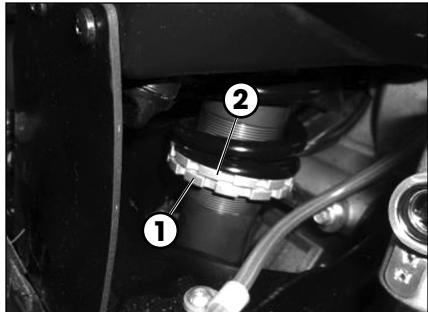

## ADJUSTING THE SPRING PRELOAD

To adjust the spring preload, use the procedure described below.

Loosen counter-ring **1**, rotate ring **2** clockwise to increase the spring preload (and consequently the shock absorber preload) or anticlockwise to decrease it.

After obtaining the desired preload, turn counter-ring **1** until it stops against adjusting ring **2**.

For standard calibration, refer to page 11.

**NOTE:** for movement of the rings use a specific sector key with square pin

## SUSPENSION ADJUSTMENT ACCORDING TO THE MOTORCYCLIST'S WEIGHT

The following table shows the approximate calibration of the suspension adjustment according to the motorcyclist's weight.

<b>w &lt; 70 Kg</b>		<b>70 Kg &lt; w &lt; 80 Kg</b>		<b>80 Kg &lt; w</b>	
Adjustment		Adjustment		Adjustment	
Fork	Shock absorber	Fork	Shock absorber	Fork	Shock absorber
Standard	Standard	+ 5 turns preload	+ 1,5 turns preload	+ 10 turns preload	+ 3 turns preload

## CHAPTER 4 CHECKS AND MAINTENANCE

### CONTENTS

Key to symbols.....	34
Engine oil.....	34
Check the level.....	34
Replacement .....	34
Coolant .....	36
Check the level.....	36
Replacement .....	37
Radiator grill.....	38
Air filter .....	38
Removing and fitting air filter .....	38
Cleaning air filter .....	39
Spark plug .....	40
Carburetor .....	41
Draining the carburetor float chamber.....	41
Front Brake.....	42
Check the level of the front brake fluid .....	42
Restoring the level of the front brake fluid .....	42
Bleeding the front brake .....	43
Front brake lining control.....	43
Rear brake.....	44
Check the level of the rear brake fluid .....	44
Restoring the level of the rear brake fluid .....	44
Bleeding the rear brake.....	44
Rear brake lining control .....	45
Clutch control .....	45
Check oil level .....	45
Bleeding clutch control .....	46
Steering gear.....	47
Check of steering gear .....	47
Oil fork.....	48
Removing legs.....	48
Oil replacement right leg.....	48
Oil replacement left leg .....	49
Legs assembly and parts.....	50
Linkage rear suspension .....	51
Tyres.....	52
Chain .....	53
Check and adjust tightening chain .....	53
Headlight .....	55
Replacing the headlight bulbs .....	55
Rear tail light .....	56
Cleaning the vehicle .....	57
Prolonged inactivity .....	58
Scheduled maintenance vehicle .....	59


## KEY TO SYMBOLS



Tightening torque



Threadlocker medium intensity

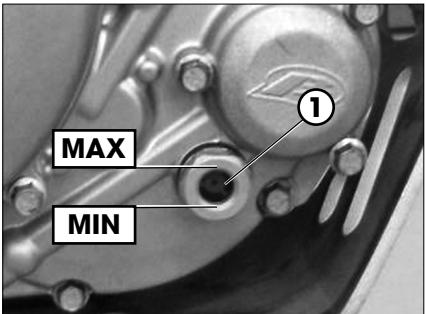

## ENGINE OIL

## CHECK THE LEVEL

The engine oil level must be checked when the engine is warm.

Let the engine run for a few minutes then turn it off.



Keep the vehicle in vertical position relative to the ground.

Wait a few minutes and check the oil level through the window **1**.

The level must be between the limits indicated in the picture.

Otherwise restore the oil level through **2**.

Use the oil indicated on page 18 in the "Recommended lubricants and liquids" table.

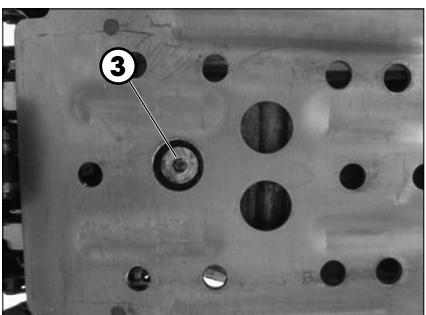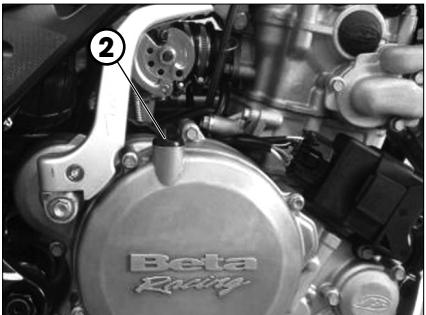


## REPLACEMENT

Always perform the replacement when engine is hot:

- Position the drive on a flat base ensuring stability.
- Place a container under the engine.
- Unscrew the filler cap **2** and the drain plug **3**.
- Completely empty the crankcase.
- Close the cap **3**.


- Unscrew the plug **4** in the left-hand casing and use pliers to extract the filter. Clean it carefully and blow it through with compressed air. Check for damage to the O-rings, and replace them if necessary. Refit all the parts and tighten the plug to 15 Nm.

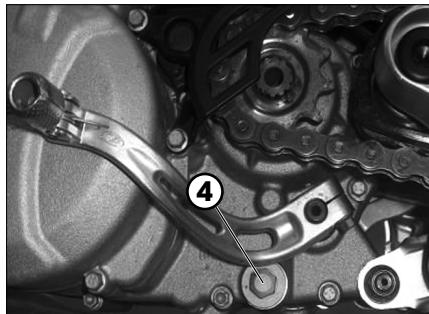

- Perform the same procedure for the filter located on the right side of crankcase.




- Put a drawn pan under the engine closer to the paper filter cover **1** and then unscrew **2** the cover.

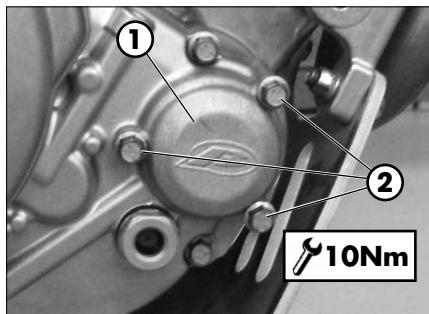

# 4

## CHECKS AND MAINTENANCE

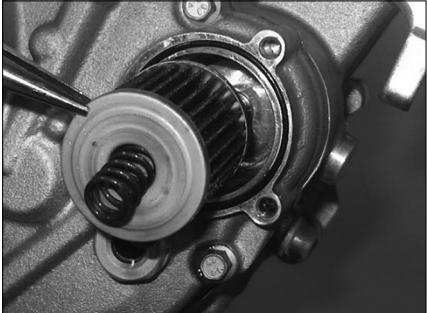

- Extract the paper filter using pliers. Check the condition of the O-ring too, and replace it if necessary. Change the filter and refit the cover, tightening the three M6x20 bolts to 10 Nm.
- Pour in the quantity of oil indicated on page 10.
- Use the oil indicated on page 18 in the "Recommended lubricants and liquids" table.
- Close the filler cap **1**.

**WARNING:**

Hot oil can cause severe burns!



### **COOLANT CHECK THE LEVEL**

Keep the vehicle in vertical position relative to the ground.

The level of the coolant must be checked when the engine is cold. Use the following procedure:

Unscrew cap **1** and ensure that the liquid is visible in the lower portion of the loading tube.

Where the liquid is not visible in the lower part of the loading tube position the vehicle as in the figure and then top up.




Use the liquid indicated on page 18 in the "Recommended lubricants and liquids" table.

## REPLACEMENT


Position the vehicle on a flat base and in a stable manner.

Replacement of the coolant must take place when the engine is cold.


- 1) Unscrew cap **1**.

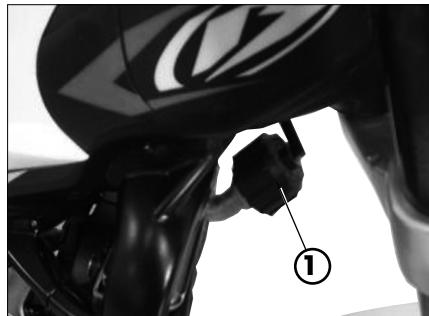

- 2) Unscrew screw **2**, collecting the liquid in a container.
- 3) Drain the liquid.
- 4) Tighten screw **2** applying the specific washer.
- 5) Unscrew drain screw **3** and fill until the liquid starts to overflow the screw.

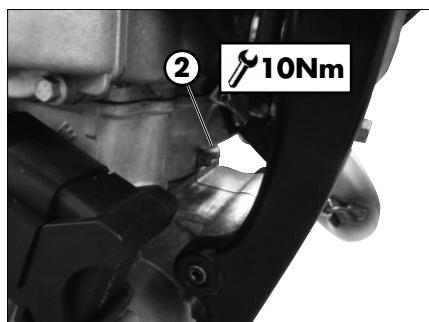

- 6) Tighten screw **3**.

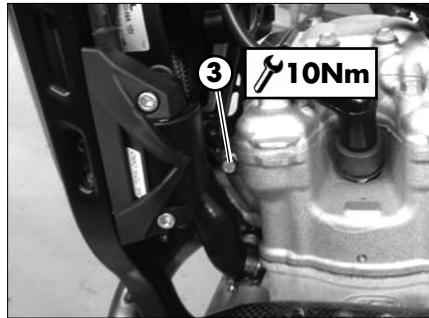

- 7) Place the vehicle as shown and proceed to filling.
- 8) Reapply the loading cap **1**.

The amounts of liquid are shown on page 10.






## RADIATOR GRILL

Should the grill be obstructed proceed as follows:

Remove the grill by pulling it towards the front of the vehicle.

Shake and wash the grill.

Reapply the grill pushing it towards the radiator.

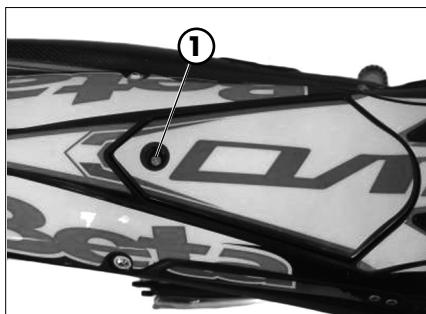

## AIR FILTER

Check after every ride.

### REMOVING AND FITTING AIR FILTER

To access the filter:

- Loosen the fastening screw **1** of the rear cover.
- Remove the filter frame and the filter by unscrewing the screw **2**.

#### WARNING:

After every intervention, check that nothing has been left inside the filter box.

- Reassemble by performing the operations in reverse order.



## CLEANING AIR FILTER

- Thoroughly wash the filter with water and soap.
- Dry the filter.
- Wet the filter with specific oil and then remove the excess oil to prevent it from dripping.
- If necessary also clean the interior of the filter box.

### WARNING:

Do not clean the filter with gasoline or petrol.

### NOTE:

If the filter is damaged, replace it immediately.

Verify the integrity of water proofing gaskets on air box shown in the picture. Change them if these are damaged.

To replace, contact authorised Betamotor customer service.


### WARNING:

Never use the vehicle if the air filter is not in place. The infiltration of dust and dirt can cause damage and considerable wear.

### WARNING:

After each operation check that no object is left in the filter box.



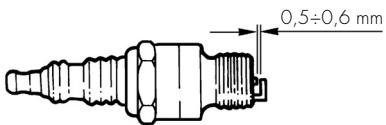

## SPARK PLUG

Keeping the spark plug in good condition will reduce fuel consumption and increase engine performance.

To perform the check, simply slide off the electrical connection tube and unscrew the spark plug. Examine the distance between the electrodes with a feeler. This distance should be from  $0.5\div0.6$  mm. If it is not, it may be corrected by bending the earth electrode.

Check as well that there are no cracks in the insulation or corroded electrodes. If so, replace immediately.

When replacing the spark plug, screw it in by hand until it stops, then tighten with a wrench.

**WARNING:**

Do not check while the engine is hot.

## CARBURETOR

### DRAINING THE CARBURETOR FLOAT CHAMBER

If the carburetor tank needs to be emptied, proceed as described. Perform the operation once the engine is cold.

Turn the fuel cock to the "C" position (see page 20)

Place tube **1** in a container to gather the fuel that flows out.


Loosen screw **1** and drain the fuel until complete emptying of the tank.


Tighten screw **1**.

#### WARNING

Fuel is flammable and toxic and must be handled with great care. Never work on the fuel system near heat sources or open flames. Always allow the engine to cool down before working on the fuel system.

Wipe off any excess fuel with a rag. Materials soaked in fuel are also flammable. In case of ingestion or contact with sensitive parts of the body immediately seek medical attention. Fuel is to be disposed of as prescribed by law.

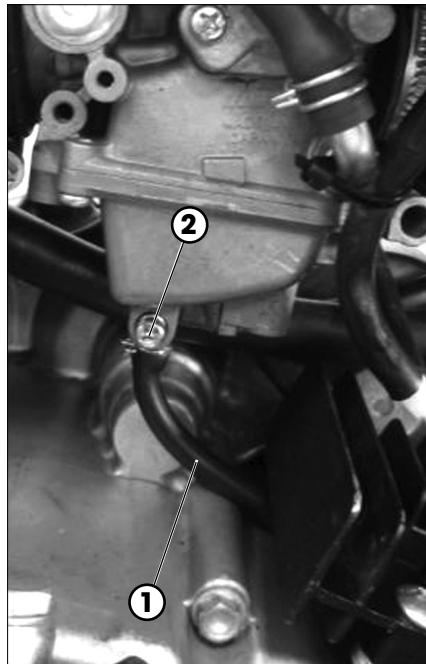


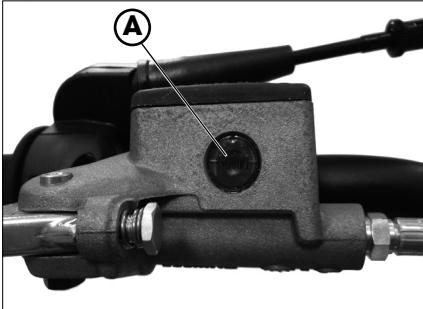

## FRONT BRAKE

### CHECK THE LEVEL OF THE FRONT BRAKE FLUID

Check the level of the brake fluid through sight **A**. The level of the fluid should never fall below the mark in the sight.

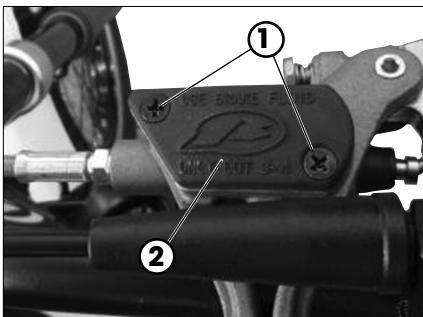

### RESTORING THE LEVEL OF THE FRONT BRAKE FLUID

To restore the level of the brake fluid, loosen the two screws **1**, lift cap **2** and add brake fluid until its level is 5 mm below the upper rim of the reservoir.

Use the liquid indicated on page 18 in the "Recommended lubricants and liquids" table.

#### WARNING:

The brake fluid is extremely corrosive. Take care not to spill it on the paintwork.

## BLEEDING THE FRONT BRAKE

To bleed air from the front brake circuit, proceed as follows:

- Remove the rubber cap **1** from the valve **2**.
- Open the sump cap.
- Insert one end of a transparent tube into a container.
- Pump with the brake lever 2/3 times and keep the lever pressed.
- Unscrew the valve and let the oil drain.
- If are still visible in the tube repeat above operation until obtaining a continuous outflow of oil within no air bubbles.
- Close the valve and release the lever.

### NOTE:

During this procedure, continuously top up the brake pump tank to replace the oil that is out flowing.

- Remove the tube.
- Replace the rubber cap.

Close the oil reservoir cap.




## FRONT BRAKE LINING CONTROL



In order to verify the wear condition of front brake is enough to view the caliper from the bottom, where is possible to glimpse the brake lining tails which will have to show a brake of 2 mm in thickness. If the stratum is lesser let's start replacing them.

### NOTE:

Perform the check according to the times shown in the table on page 59.

To replace, contact authorised Betamotor customer service.

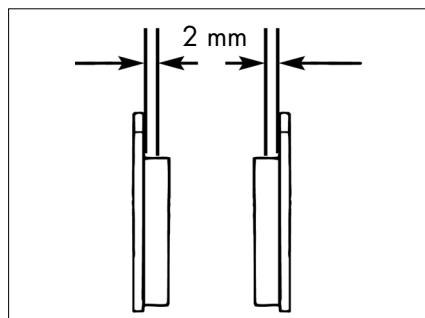

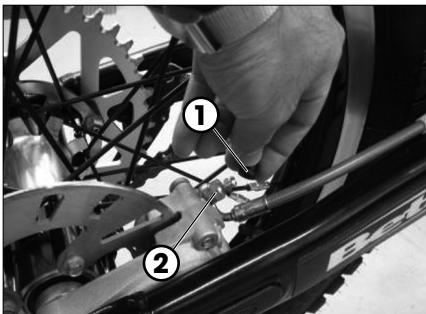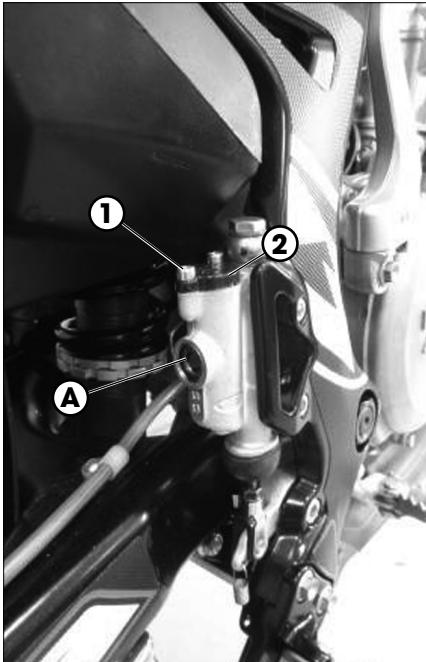

## REAR BRAKE

### CHECK THE LEVEL OF THE REAR BRAKE FLUID

Check the level of the brake fluid through sight **A**. The level of the fluid should never fall below the mark in the sight.

### RESTORING THE LEVEL OF THE REAR BRAKE FLUID

To restore the level of the brake fluid, loosen the two screws **1**, lift cap **2** and add brake fluid until its level is 5 mm below the upper rim of the reservoir.

Use the liquid indicated on page 18 in the "Recommended lubricants and liquids" table.

#### WARNING

The fluid is extremely corrosive. Take care not to spill it on the paintwork.

### BLEEDING THE REAR BRAKE

To bleed air from the rear brake circuit, proceed as follows:

- Remove the rubber cap **1** from the valve **2**.
- Open the sump cap.
- Insert one end of a transparent tube into a container.
- Pump with the brake lever 2/3 times and keep the lever pressed.
- Unscrew the valve and let the oil drain.
- If are still visible in the tube repeat above operation until obtaining a continuous outflow of oil within no air bubbles.
- Close the valve and release the lever.

**NOTE:**

During this procedure, continuously top up the brake pump tank to replace the oil that is out flowing.

- Remove the tube.
- Replace the rubber cap.

Close the oil reservoir cap.


**REAR BRAKE LINING CONTROL**

In order to verify the wear condition of rear brake is enough to view the caliper from the back side, where is possible to glimpse the brake lining tails which will have to show a brake of 2 mm in thickness. If the stratum is lesser let's start replacing them.

**NOTE:**


Perform the check according to the times shown in the table on page 59.

To replace, contact authorised Betamotor customer service.

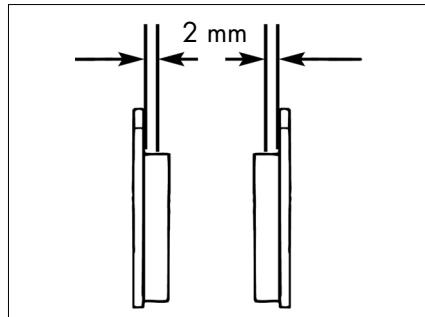**CLUTCH CONTROL****CHECK OIL LEVEL**

To check the oil level in the clutch pump, first remove cover **1**.

Remove the two screws **2** and take off cover **1** together with the rubber bellows. With the clutch pump in a horizontal position, the level of the oil should be 5 mm below the upper rim.

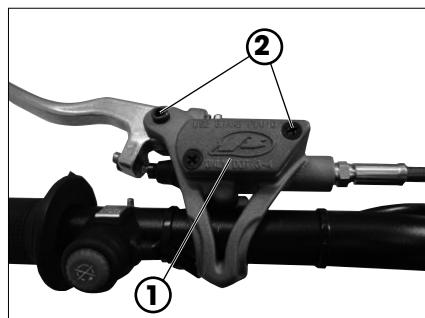


If the level is lower than indicated proceed with refilling.

Use the liquid indicated on page 18 in the "Recommended lubricants and liquids" table.

**WARNING:**

The fluid is extremely corrosive. Take care not to spill it on the paintwork.

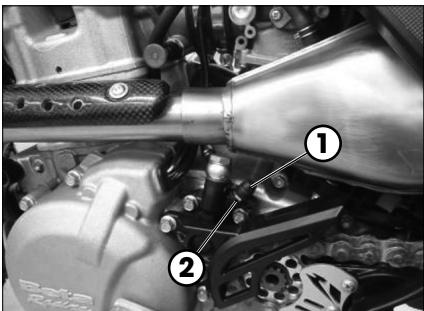

**BLEEDING CLUTCH CONTROL**

- Remove the rubber cap 1 from the valve 2.
- Open the sump cap.
- Insert one end of a transparent tube into a container.
- Pump with the brake lever 2/3 times and keep the lever pressed.
- Unscrew the valve and let the oil drain.
- If any air bubbles are visible in the tube, repeat the above operation until obtaining a continuous outflow of oil without air bubbles.
- Close the valve and release the lever.

**NOTE:**


During this procedure, continuously top up the brake pump tank to replace the oil that is overflowing.

- Remove the tube.
- Replace the rubber cap.


## STEERING GEAR

### CHECK OF STEERING GEAR

Periodically check the play in the steering sleeve by moving the fork back and forth as shown in the figure. Whenever you feel play, adjust as described below:

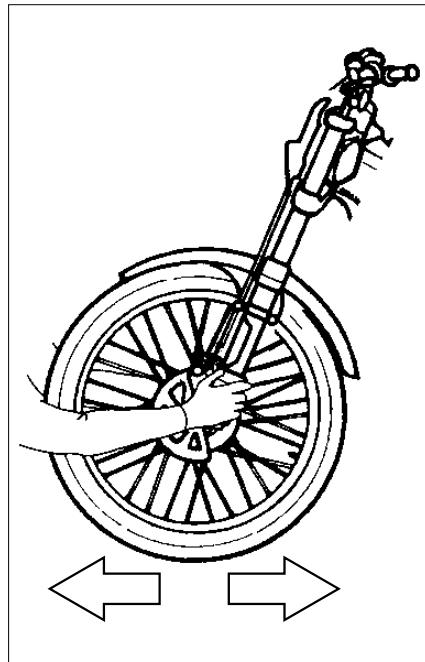


Loosen the screws **1**.

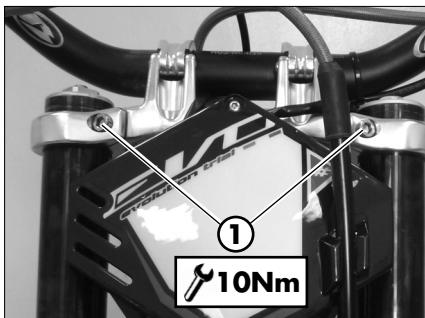

Loosen the screw **2**.

Take up the play by means of nut **3**.


Tighten the screws to the specified torque values.

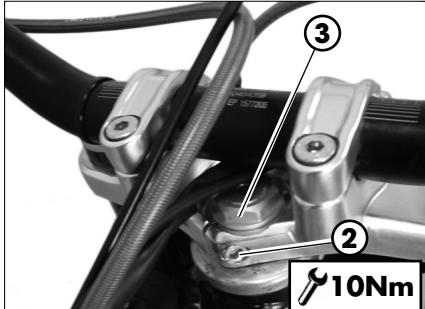

## OIL FORK

The procedure for changing the oil in the forks is provided only for information.

We recommend having the operation performed by a BETAMOTOR authorized workshop.

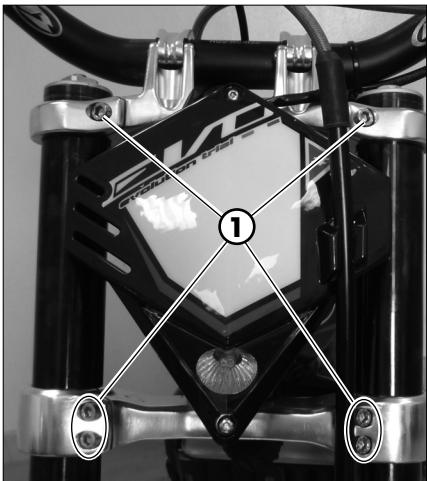

### REMOVING LEGS

To replace, proceed as follows:

Position the vehicle on the central bike stand.

Remove the front wheel.

Remove the mudguard, the brake caliper and brake disc cover.

Loosen the screws **1** and pull off the stems.



### OIL REPLACEMENT RIGHT LEG

Unscrew upper plug **2**.

Unscrew fixing lock nut and take off the plug.

Unscrew the fixing screw of the cartridge positioned under the fork leg, and extract the cartridge.

Empty the fork leg and the cartridge, draining all the oil inside.

Reassemble the cartridge on the fork leg tightening the fixing screw, then refill oil in the cartridge.

Pour in the quantity of liquid indicated on page 11.

Use the liquid indicated on page 18 in the "Recommended lubricants and liquids" table.

Reassemble the plug on the rod, tighten the lock nut and, extending the fork leg.



#### OIL REPLACEMENT LEFT LEG


Unscrew upper plug **3**.

Remove the spring and totally empty the oil.

Pour in the quantity of liquid indicated on page 11.

Reassemble the spring and extend fork leg.

Apply and tighten cap **3**.

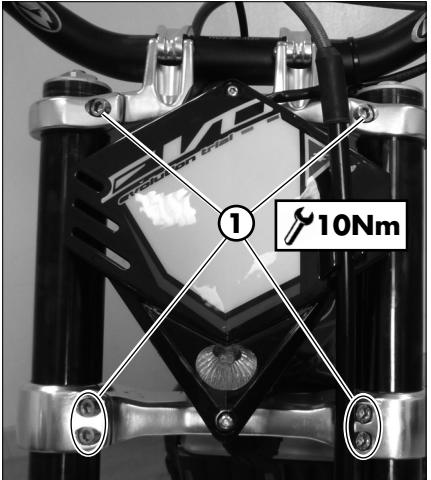

## LEGS ASSEMBLY AND PARTS

Apply the legs to the vehicle and tighten the screws 1 to the torque indicated.

ATTENTION: Tightening of the screws should be carried out by adjusting the torque wrench to to the stability torque with repeated tightening until stability torque has been achieved.

Grease the wheel bolt.

Apply wheel and wheel bolt.

Apply brake caliper, disc cover and fender.



Tighten to the torque indicated.

Place the vehicle on the ground.

Compress and release the fork 3-4 times.

Tighten the wheel bolt and the screws of the foot.

ATTENTION: Tightening of the screws should be carried out by adjusting the torque wrench to to the stability torque with repeated tightening until stability torque has been achieved.


Tighten to the torque indicated.



## LINKAGE REAR SUSPENSION

To guarantee an optimal operation and the longest lifetime of the progressive linkage of the rear suspension, it is recommended to check after every race/run the correct tightening of the bolt.

Verify that the result of the suspension bolts to specified torque.

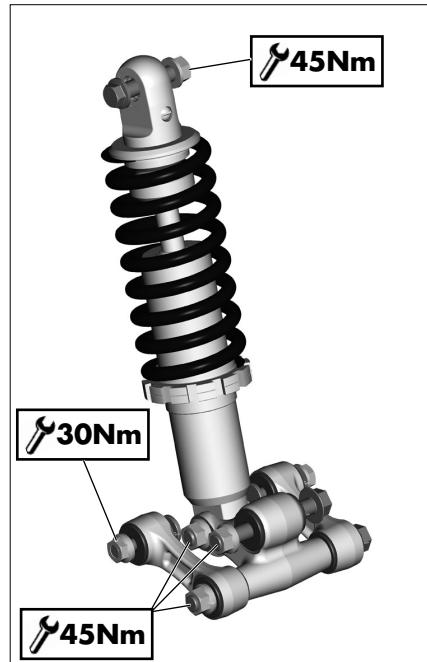

To check the upper shock absorber fastening proceed as follow:

Remove screws **1** and **2** (two per side).  
Remove the mudguard.


At the end refit the screws **1** and **2**.

Tighten to the torque indicated.

NOTE: It is recommended not to wash with water jets at high pressure in the zone of the linkage.

Perform the check according to the times indicated in the table on page 59.

To verify device, contact authorised Beta-motor customer service.

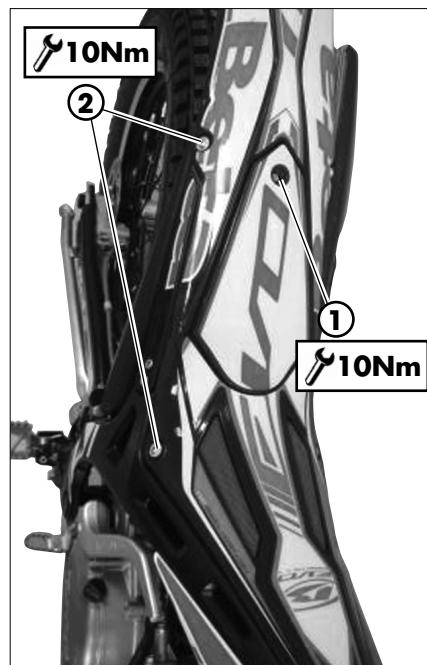

## TYRES


Only fit tyres approved by BETAMOTOR. Unsuitable tyres can adversely affect the road holding of the vehicle.

- To protect your safety, immediately replace any damaged tyres.
- Slick tyres adversely affect the road holding of the vehicle, especially on wet roads and in off-road riding.
- Insufficient pressure results in abnormal wear and overheating of the tyres.
- The front and rear tyres must have the same tread design.
- Always measure the inflating pressures when the tyres are cold.
- Keep the tyre pressures within the prescribed range.

## CHAIN

Checking the drive chain periodically to ensure longer chain life. Always keep it lubricated and clean of deposited dirt.


Take special care in preventing the lubricant from coming into contact with the rear tyre or brake disc, otherwise the tyre grip and the action of the brake would be greatly reduced, making it very difficult to control the vehicle.

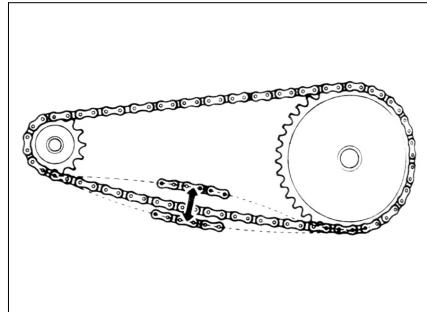

### CHECK AND ADJUST TIGHTENING CHAIN

Position the vehicle on the central bike stand.

If the distance between chain and swingarm is less than 20 mm proceed with adjustment.

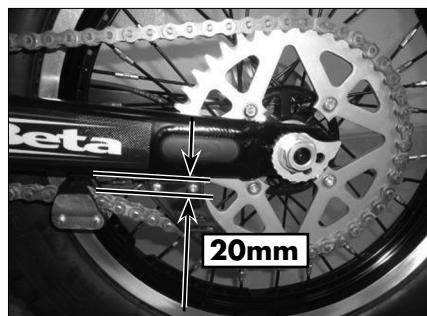

Loosen the pin **1**.

Rotate register **2** until the distance between chain and swingarm is that recommended.





Rotate register **3** into the same position as register **2**.

Ensure the distance between chain and swingarm is that recommended.

If the distance between chain and swingarm is not that recommended proceed to readjustment.




Tighten the pin to the torque indicated.

## HEADLIGHT

Keep the headlight glass clean at all times (page 57).

### REPLACING THE HEADLIGHT BULBS

Dismantle the headlight mask removing the two retaining screws **1** indicated in the figure.

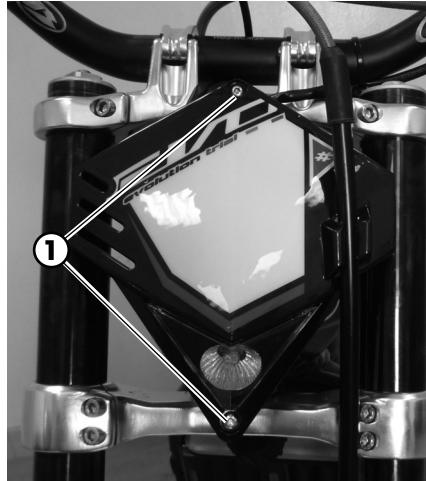

Remove the screws **2** indicated in the figure.



Take out the bulb assembly from the bulb holder.

Remove the bulb from the connectors and carry out replacement.

To reassemble, proceed inversely as described above.





## REAR TAIL LIGHT

Keep the tail light glass clean at all times (see page 57).

Remove the screws indicated in the figure.

Remove the bulb holder from its place.

Remove the bulb.

To reassemble, proceed inversely as described above.

## CLEANING THE VEHICLE

**WARNING:** Do not clean your vehicle with a high-pressure device with a strong jet of water. Excessive pressure can reach electrical components, connectors, flexible cables, bearings, etc and can damage or destroy them.

**WARNING:** Wash motorbikes frequently that are used near the sea (salty air) and on roads subject to salt spreading in winter. Cover with a film of oil or silicone spray unpainted parts and the most exposed parts such as wheels, forks and swingarm. Do not treat rubber parts and brakes.

When cleaning, avoid direct exposure to sunlight.

Close off the exhaust system to prevent water from entering.

Avoid directing the jet of water onto the air filter box cover.

Use water jet to soften the dirt and mud accumulated on the paintwork, then remove them with a soft bodywork sponge soaked in water and shampoo. Subsequently rinse well with water, and dry with air and cloth or suede leather.

Proceed to the emptying of the filter box using the appropriate ventilation and drying.

Detergents pollute water. Always wash the vehicle in areas equipped for collection and purification of the washing liquids.

After cleaning, ride a short distance until the engine reaches operating temperature.

**WARNING:** braking effect is reduced with wet brakes. Operate the brakes cautiously to allow them to dry.

Push back the handlebar control covers, so that water can evaporate.

When the bike is completely dry and cooled down, lubricate all moving parts.

Treat all plastic and painted components with non-aggressive detergents or products that are specific for the care of the motorcycle.

To prevent malfunction of the electrical system, treat electric contacts and switches with electrical contact spray.

# 4

## CHECKS AND MAINTENANCE

A few simple operations should be performed to keep the vehicle in good condition whenever it is to remain inactive for a long period (e.g. during the winter):

- Thoroughly clean the vehicle.
- Reduce the tyre pressures by approximately 30 percent, and if possible raise the tyres off the ground.
- Remove the spark plug and pour a few drops of engine oil into the spark plug hole. Make the engine turn a few times by operating the kick-start (where available) and then replace the spark plug.
- Cover the unpainted parts, excepting the brakes and the rubber parts, with a film of oil or spray silicone.
- Protect the vehicle with a dust cover.
- Drain the carburetor tank as described at page 41.

### AFTER PROLONGED INACTIVITY

- Restore the tyre inflating pressures.
- Check the tightening of all the screws having an important mechanical function.

# SCHEDULED MAINTENANCE VEHICLE

	End of running-in <b>5</b> hours									
	<b>Coupon 1</b>		<b>1.000 Km</b>		<b>Coupon 2</b>		<b>2.000 Km</b>		<b>Coupon 3</b>	
	P	S	S	S	S	C	S	S	S	
<b>Engine</b>										
Spark plug	P	S	S	S	S	C	S	S	S	
Clutch	C	C	C	C	C	C	C	C	C	
Cylinder			C		C		C		C	
Piston sealing rings			C		C		C		C	
Piston			S	S		S		S		
Water pump shaft	C	S	C	S	C	S	C	S	C	
Oil seal water pump shaft			S	S		S		S		
Coolant	C	C	S	C	S	C	S	C	S	
Gear oil	S	S	S	S	S	S	S	S	S	
Oil net filters	P	P	P	P	P	P	P	P	P	
Paper filter	S	S	S	S	S	S	S	S	S	
Connecting rod					S				S	
Crankshaft bearings					S				S	
Gear					C				C	
<b>Vehicle</b>										
Rear shock absorber	C	C	C	C	C	C	C	C	C	
Linkage rear suspension	T	T	C	T	C	T	C	T	C	
Fork oil		S	S		S		S		S	
Steering bearings and steering clearance	C	C	C	C	C	C	C	C	C	
Wheel bearings	C	C	C	C	C	C	C	C	C	
Spokes	C	C	C	C	C	C	C	C	C	
Air filter	P	P	S	P	S	P	S	P	S	
Throttle control	C	C	C	C	C	C	C	C	C	
Braking system	C	C	C	C	C	C	C	C	C	
Oil pumps brakes	C	C	C	C	C	C	C	C	C	
Oil clutch actuator	C	C	C	C	C	C	C	C	C	
Transmission chain	C	C	C	C	C	C	C	C	C	
State and tyre pressure	C	C	C	C	C	C	C	C	C	
Electrical system	C	C	C	C	C	C	C	C	C	

## Key

- C** Check (Clean, adjust, lubricate, replace as necessary)  
**S** Replace/renew  
**R** Adjust

- P** Clean  
**T** Tighten



**CHAPTER 5 TROUBLESHOOTING****CONTENTS**

Troubleshooting .....	62
Alphabetical index .....	63

## TROUBLESHOOTING

PROBLEM	CAUSE	REMEDY
The engine turns over but will not start	Fuel cock in C position	Turn the fuel cock in A position
	Dirty carburettor jets	Contact authorised BETAMOTOR customer service
	Spark plug dirty	Clean or replace the spark plug
	Spark gap wrongly adjusted	Restore the spark gap (page 40)
	Fault in the ignition system	Contact authorised BETAMOTOR customer service
The power delivered by the engine is insufficient	Tank vent obstructed	Check the tank vent
	Fuel system dirty	Contact authorised BETAMOTOR customer service
	Air filter dirty	Clean the air filter
	Defective ignition system	Contact authorised BETAMOTOR customer service
The motor stops or splutters	Lack of fuel	Move the fuel cock to A Refuel
	Poor carburettor seal	Make sure that the sleeve between carburetor and engine is intact
	Loose or oxidized connector or ignition coil	Check the connector. Clean and treat with specific spray
Engine overheats (liquid flows out/vapor from the vent radiator)	Radiator grill blocked	Remove and clean the grill (page 38)
	Radiator (air side) blocked	Clean the radiator
	Forced ventilation absent	Check that the cooling fan is working correctly
	Low coolant	Check the coolant level (page 36)
	Silencer partly clogged	Contact authorised BETAMOTOR customer service
	Carburation too lean	Contact authorised BETAMOTOR customer service
Front braking poor	Brake pads worn	Contact authorised BETAMOTOR customer service
	Air or humidity in the hydraulic circuit	Contact authorised BETAMOTOR customer service
Rear braking poor	Brake pads worn	Contact authorised BETAMOTOR customer service
	Air or humidity in the hydraulic circuit	Contact authorised BETAMOTOR customer service

## **ALPHABETICAL INDEX**

Accelerator .....	30
Adjusting fork .....	30
Adjustment of gas clearance.....	29
Air filter .....	38
Brakes .....	28
Breaking in.....	24
Carburetor .....	41
Chain .....	53
Checks before and after use .....	24
Cleaning the vehicle.....	57
Clutch.....	29
Clutch control .....	45
Coolant .....	36
Ecologic guide.....	5
Electrical system.....	14
Engine oil.....	34
Engine shut-down .....	26
Familiarizing with the vehicle.....	9
Front Brake.....	42
Fuelling.....	25
Handlebar .....	30
Headlight.....	55
Key to symbols.....	34
Main parts .....	20
Oil fork.....	48
Operating instructions.....	5
Prolonged inactivity .....	58

**INDEX**

# INDEX

Rear brake .....	44
Rear tail light .....	56
Recommended lubricants and liquids .....	18
Riding safety .....	6
Scheduled maintenance vehicle .....	59
Shock absorber.....	31
Spark plug .....	40
Specifications .....	10
Startup.....	26
Steering gear.....	47
Suspension adjustment according to the motorcyclist's weight .....	32
Troubleshooting .....	62
Tyres.....	52
Vehicle identification data .....	8