



**MP5 Player P886
User Manual**

(Version 1.0)

Important Notice

Congratulations on purchasing your aigo MP5 Player P886. Please read this user manual carefully before using your aigo product.

Warranty Registration

Register your aigo product online to enjoy warranty, member's perks and more, please visit www.aigo.com.sg

Need Help Fast?

Read your User Manual first for quick tips. After you have read the instructions and still need assistance, you may access our online help at www.aigo.com.sg or call +65 6333 6388 with your product's model and serial number.

Obtaining Warranty Service

Please review the User's Manual troubleshooting resources and online help resources before seeking warranty service. If the product is still not functioning properly after making use of these resources, access the online website: www.aigo.com.sg for instructions on how to obtain warranty service.

Copyrights/ Trademarks Information

- aigo logo is registered trademark of Beijing Huaqi Information & Digital Technology Co., Ltd.
- Microsoft, MS-DOS, Windows and the Windows logo are registered trademarks of Microsoft Corporation.
- Intel and Pentium are registered trademarks of Intel Corporation.
- SRS WOW is the registered trademark of SRS Labs, Inc.
- All other products are trademarks or registered trademarks of their respective owners and are hereby recognized as such.
- The information on this manual is prepared with the current player specifications. aigo reserves the right to make design and specification changes for product improvement without prior notice. Actual contents

may differ slightly from those pictured.

- Unauthorized duplication of any recordings downloaded from the internet or made from audio CDs is a violation of copyright laws and international treaties.

Always Keep a Copy of Your Original Data

Before you deliver your product for warranty services please backup all data, including all software programs. You will be responsible for reinstalling all data. Data recovery is not included in the warranty service and aigo is not responsible for data that may be lost or damaged during transit or a repair.

Safety Instructions

- Do not expose to extreme temperatures.
- Do not allow any liquid form into the device.
- Do not apply or subject the player to excessive pressure.
- Do not expose to direct sunlight or heat sources.
- Do not try to disassemble and repair the device yourself.
- Do not expose device to chemicals such as benzene or thinner.
- Do not store device in dusty or damp area.
- aigo will claim no responsibility for any damage on data loss due to breakdown, repair or other causes.


Content

IMPORTANT NOTICE.....	1
CHAPTER I: GETTING TO KNOW THE P886.....	4
1. OVERVIEW OF THE PLAYER	4
Front View	4
Top View	5
Left side view	6
BOTTOM VIEW.....	7
2. CHARGING THE BATTERY	8
3. CONNECT TO PC.....	9
CHAPTER II: OPERATION.....	10
1. POWER ON/OFF.....	10
Power on	10
Power off	10
2. FILE BROWSE.....	11
2.1 More function.....	13
3. MOVIE.....	14
3.1 Basic function.....	14
3.2 More function.....	16
4. PHOTO.....	18
4.1 Basic function.....	18
4.2 More function.....	20
5. MUSIC.....	22
5.1 Basic function.....	22
6. EBOOK.....	25
6.1 Basic function.....	25
6.2 More function.....	27
7. GAME	28
8. AUDIOCORDER	29
8.1 Basic function.....	29
8.2 More function.....	30
9. VIDEOCORDER.....	31
9.1 AV In	31
9.2 AV out	32
10. SETTING.....	33
10.1 Display.....	34
10.2 Option	35
10.3 Clock.....	36
10.4 Sound	37
10.5 Power.....	37
10.6 AudioCorder.....	38
10.7 Scheduler	39
10.8 System.....	39
CHAPTER III APPENDIX.....	41
1. TECHNICAL SPECIFICATIONS	41
2. SUPPORTING FILE SPECIFICATIONS	42
3. PACKING LIST	44

CHAPTER I: GETTING TO KNOW THE P886

1. Overview of the Player

Front View

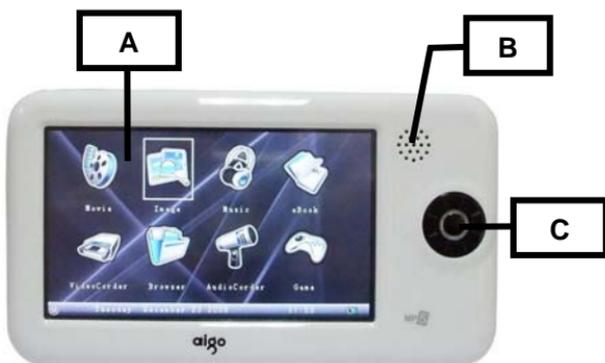

A. 4.3 inch LCD screen

B. Speaker

C. Idler wheel button

The details of this button:

Enter: Go into a mode or a folder or start or pause. Zoom in (In Image mode).

Menu: Different menu comes out in different mode.

Exit: Quit or go back to the main menu.

Left: Back to the last directory. Move left (In the main menu). Fast Backward (In Movie and Music mode). Last file (In Movie, Music and Image mode).

Right: Go into a folder or start a file. Move right (In the main menu). Fast forward (In Movie and Music mode). Next file (In Movie, Music and Image mode).

Clockwise turning: From up to down in the folder or file list and Ebook mode. Volume down (In Movie, Music, AudioCorder and VideoCorder mode). Clockwise rotate (In Image mode).

Anti-clockwise turning: From down to up in the folder or list and Ebook

mode. Volume up (In Moive, Music, AudioCorder and VideoCorder mode)
Anti-clockwise rotate (In Image mode).


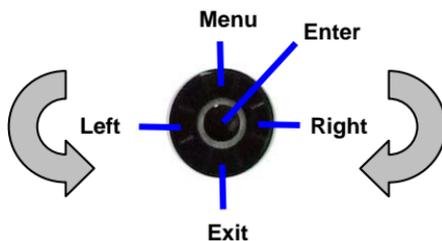


Figure 1

Top View

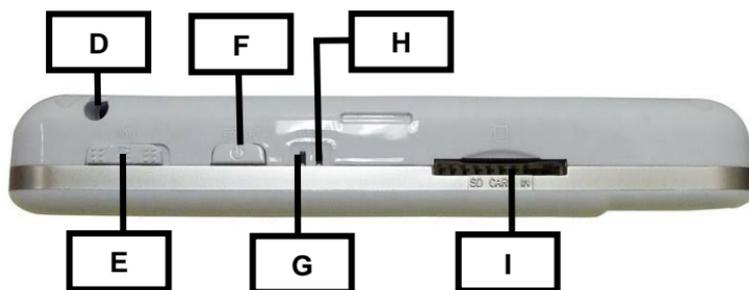

D. Stylus hole

E. Hold button


F. ON/OFF button

G. Power on LED indicator

H. Charging LED indicator

I. SD card slot

Left side view

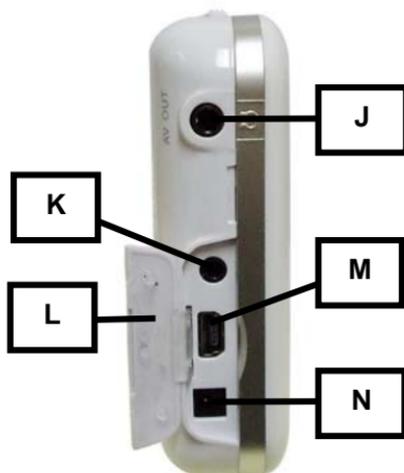

J. Earphone jack / AV out port


K. AV in port

L. Port cover

M. USB port

N. DC power point

Bottom view

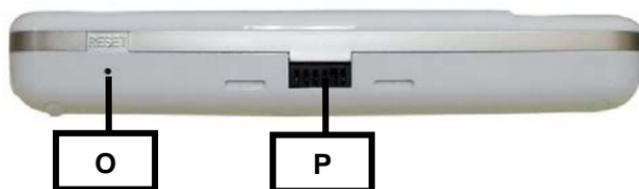

O. Reset hole

P. Dock station port

P886 stylus (Please refer to the real item)



2. Charging the battery

The player comes with a rechargeable high capacity lithium battery. The battery can be charged directly through the power adaptor.

1. When the player is out of power, recharge the battery with the power adaptor for about 5 hours. The LED indicator is green color during it is charging, after the battery is fully charged the indicator is blue color.

2. Please note the specifications of the power supply: output voltage: 5V, output current: 2.5A.

Note:

1. Damage caused by using other power adaptor that does not come with this device is not covered by our warranty.

2. For the initial use, please fully charge the battery.

3. If the screen of "Low Battery" appears repeatedly, this means the power is insufficient, please recharge the battery; if "The battery is critical low! Please plug in AC adapter." appears on the screen, the device turns off automatically.

4. When power is insufficient, please turn off the device first and then plug in AC adaptor to recharge the battery.

5. Personal data will be retained even the device is out of power, but please remember to turn off the power before taking out the battery.

3. Connect to PC

The player can be used as a standard USB removable storage device. Files can be transferred between the PC and the player.

3.1 Use of the player as removable storage device

1. Power on the player.
2. Connect the player with PC by mini USB cable, an icon should appear indicating that aigo P886 is connected.
3. Double click "My Computer", and you will see a new "Removable disk" icon, representing the built-in hard drive of the aigo P886 player.

Note: *When using the player for the first time, the system will search for an aigo P886 driver a while, please wait patiently. In Windows 2000/XP, an icon  will appear in the bottom right of the taskbar, which represents the aigo P886 removable storage. Never remove the USB cable while the computer is reading data, or else your data will be lost.*

3.2 Remove from PC

Left click the icon  on the bottom right of the taskbar and a notice "Safely remove USB Storage Device" will appear, and then click again, the "Safe To Remove Hardware" hint appear (See figure below), now the player can be removed from PC safely.



CHAPTER II: OPERATION

1. Power on/off


Power on

Press and hold power on/off button for about 5 seconds, the startup interface comes out as the picture shown below.



Power off

Press and hold power on/off button for about 3 seconds, the shutdown interface comes out as the picture shown below.

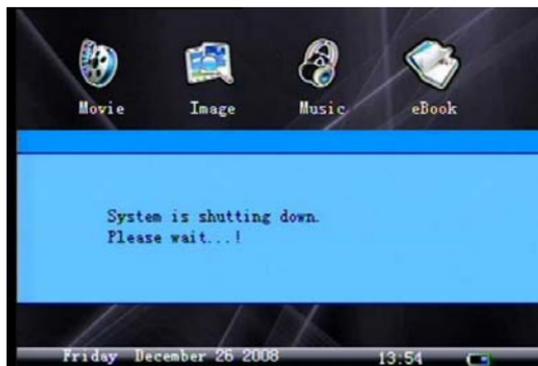

2. File Browse

After power on the player, the main menu comes out as shown below.



Press enter button or touch the browser icon to go into file browse mode as shown below.



Press enter button or touch "C(Hard Disk, AIGO.6)" to go into C drive as shown below. Use idler wheel button to go to the last directory or press exit button to back to the main menu.



There are some folders in C drive.

Folder name	Path	Relevant function	Function definition
music	\music	Audio play	Music file/lyric file directory
audio	\audio\rec	Line-in recording	Audio file saving directory
movie	\movie\rec	Video recording	Video file saving directory
photo	\photo	Picture browsing	Image file saving directory
video	\video	Video play	Video file saving directory
ebook	\ebook	E-book	E-book (.TXT) file saving directory

During the first time using, system will automatically create folders in the root directory of the first hard disk directory of P886. The path and function definition of each folder are as shown above.

Note: The above folder which system creates automatically CAN NOT be renamed or moved.

2.1 More function

Press menu button or touch  icon in file browser mode, the menu will come out as the shown below.



2.1.1 New Folder

To create a new folder in C drive.

2.1.2 Copy

To copy a file or a folder.

2.1.3 Paste

To paste a file or a folder

2.1.4 Delete

To delete a file or a folder.

2.1.5 FileInfo

To display the properties of a file or a folder.


3. Movie



The formats below are supported for video playback:
rmvb、rm、avi、mpg、mpeg、vob、dat

3.1 Basic function

Use the idler wheel button or touch movie icon to select movie option, press enter button or touch movie icon to go into movie mode. Use the idler wheel button or touch a folder or a video file's name to select the folder or the video file, press enter button or use the idler wheel button to open the folder or the video file. Press exit button or touch  icon to quit.

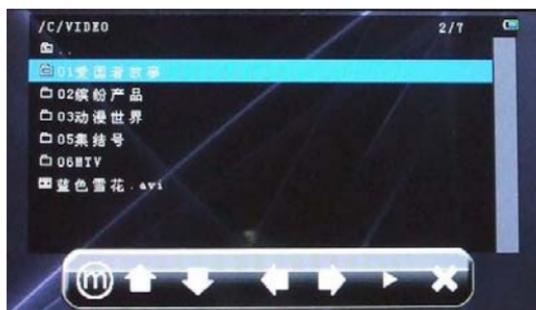



3.1.1 Play

Select video option from main menu, press enter button or touch video icon to go into video mode.

3.1.2 Pause

Press enter button or touch  icon on control bar during the video is playing. Press again to continue.

3.1.3 Stop

Press exit button or touch  icon to stop and exit during video is playing.

3.1.4 Fast forward/backward

Use the idler wheel button to fast forward or backward or touch  and  icon. Press enter button or touch  icon to resume.

3.1.5 Last/Next

Use the idler wheel button to play last/next video file or touch  and  icon.

3.1.6 Volume adjustment

Clockwise or anti-clockwise turning the wheel button or touch the   icon to adjust the volume up or down during video playback.

3.1.7 Subtitle

Touch the  icon to on/off the subtitle.

3.1.8 Display ratio

Touch the  icon to adjust the display ratio during the video is playing. (Normal, Full screen, 16:9, 14:9)

3.2 More function

Press menu button or touch the  icon during video playback, the menu list will come out as the picture shown below.



Use the idler wheel button or touch screen to select options, press enter button or touch the option's name to enter the option, press exit button or touch the screen to exit

3.2.1 Switch Screen Mode

To shift the display ratio: Normal, Full screen, 16:9, 14:9.

3.2.2 Switch Subtitle

To shift the language of subtitle.

3.2.3 Switch Audio

To shift the sound channel.

3.2.4 Movie Info


To display the properties of the video file.

3.2.5 Play Info on/off


To shift the control bar on/off.

3.2.6 Bookmark

The system will ask “Save the break point as bookmark?” when quit the video playback as the picture shown below:

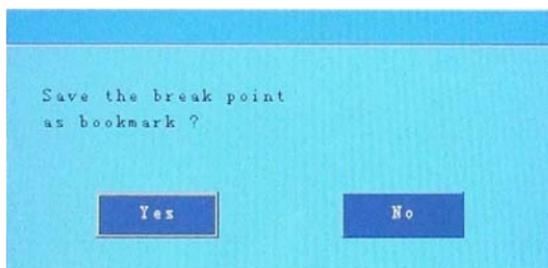

Use the idler wheel button or touch “Yes”/“No” to select the option. If “Yes” is selected, the same video is played next time; the picture is shown as below:

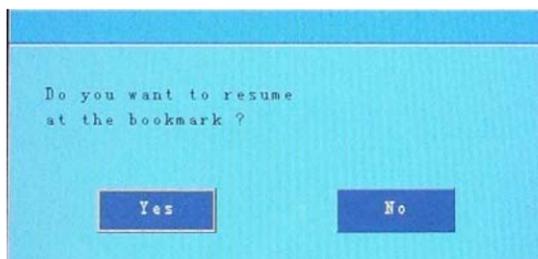

Use the idler wheel button or touch "Yes"/"No" to select the option. If "Yes" is selected, the video will be played from the track that last time saved.


4. Photo



In this mode only jpeg format can be supported.

4.1 Basic function

Use the idler wheel button or touch image icon to select image option, press enter button or touch image icon to go into image mode. Use the idler wheel button or touch a folder or an image file's name to select the folder or the image file, press enter button or use the idler wheel button to open the folder or the image file. Press exit button or touch  icon to quit.

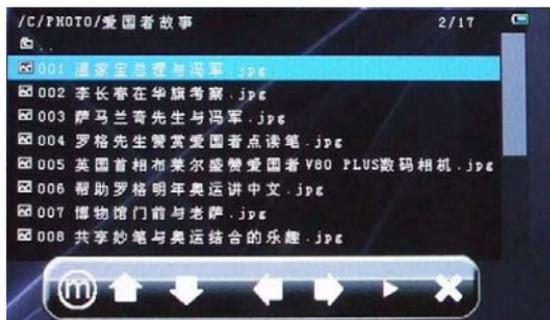

4.1.1 Rotate

Use the idler wheel button or touch   icons to do the clockwise/anti-clockwise rotation

4.1.2 Last/Next image

Use the idler wheel button or touch   icons to view the last/next image.

4.1.3 Zoom in

Press enter button or touch  icon to zoom in. (2X, 4X)

4.1.4 Thumbnails

Touch  icon, the iamge will be display by 3x4.

4.2 More function

Press menu button or touch  icon during a photo is opening; the menu will come out as the picture shown below.



4.2.1 Info

To display the properties of the image file.

4.2.2 Slide Show

To start slide show image.

4.2.3 Effect

To shift the image effect. (B/W, Gray, OldPicture, Morning, Mirror, Flip, Negative, Normal)

4.2.4 Setup

To setup Display, Option and Power options.

4.2.5 Thumbs

To display the image by 3x4 mode.

4.2.6 Fuzzle Game

To set the current image as a fuzzle game.


5. Music



The formats below are supported for music playback:
mp3, wma, m4a, ogg, wav, ape, flac.

5.1 Basic function

Use the idler wheel button or touch music icon to select music option, press enter button or touch music icon to go into music mode. Use the idler wheel button or touch a folder or a music's name to select the folder or the music file, press enter button or use the idler wheel button to open the folder or the music file. Press exit button or touch  icon to quit.

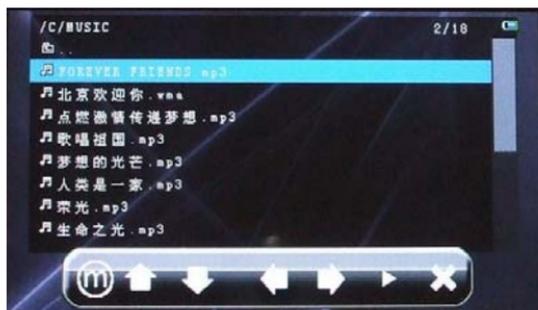



5.1.1 Play

Press enter button or touch the music file's name from music list to start playing music. Press enter button or touch  icon to continue playing when the music is paused.

5.1.2 Pause

Press enter button or touch  icon to pause during the music is playing back.

5.1.3 Stop

Press exit button or touch  icon to stop and quit the music is playing back mode.

5.1.4 Fast forward/backward

Use the idler wheel button or touch   icons during the music is playing back.

5.1.5 Last/Next

Use the idler wheel button or touch   icons during the music is playing back or paused.

5.1.6 Volume adjustment

Use the idler wheel button or touch  icons to adjust the volume.

5.1.7 Playing sequence

Touch  icon to shift the playing sequence. (Normal, Repeat, Repeat All, Shuffle)

5.1.8 Equalizer

Touch  icon to shift the music equalizer. (None, Classical, Dance, Full Base, Full Base&Treble, Full Treble, Live, Pop, Rock)

5.1.9 Exit

Press exit button or touch  icon to quit from music playback.


6. Ebook




In this mode only txt format can be supported.

6.1 Basic function

Use the idler wheel button or touch ebook icon to select ebook option, press enter button or touch ebook icon to go into ebook mode. Use the idler wheel button or touch a folder or a ebook file's name to select the folder or the ebook file, press enter button or use the idler wheel button to open the folder or the ebook file. Press exit button or touch  icon to quit.

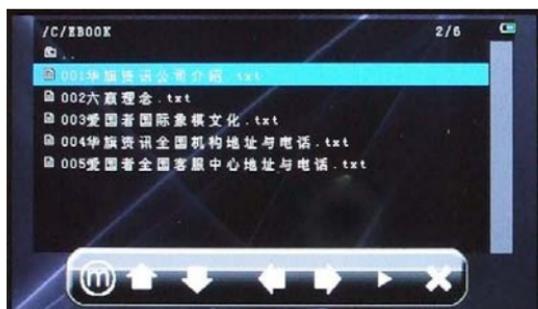

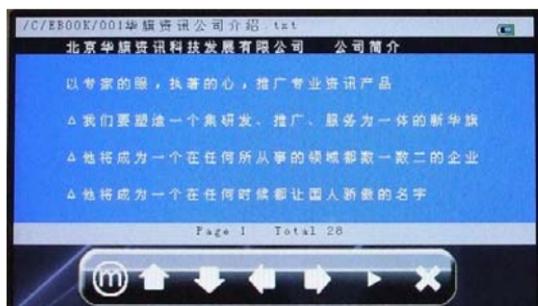

6.1.1 Play

Press enter button or touch the txt file's name from ebook list to start playing ebook.

6.1.2 Up/down


Use the idler wheel button or touch   icons to move the line up/down.

6.1.3 Last/Next page

Touch   icons to go to the last/next page.


6.1.4 Goto page

Touch  icon, the goto page option will come out as the picture shown below

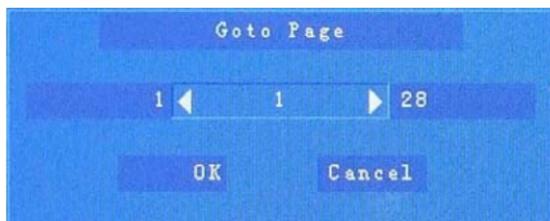

6.2 More function

Press menu button or touch  icon in ebook mode, the menu will come out as the picture shown below.

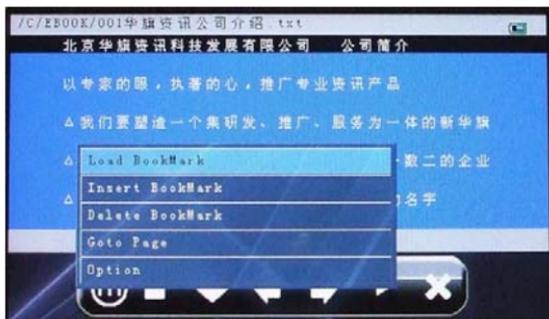

6.2.1 Load Bookmark

To load the bookmark that last time saved.

6.2.2 Insert BookMark

To save a new bookmark.

6.2.3 Delete BookMark

To delete the current bookmark.

6.2.4 Goto page

Refer to 6.1.4.

6.2.5 Option

To set ebook color.

Note: P886 only supports “.TXT” format for ebook. When the ebook XXXX.TXT file is transferred to the player, please choose the file less then 10MB.

7. Game




Use the idler wheel button or touch the game icon to select game option, press enter button or touch the game icon to go into game mode.



8. AudioCorder



The formats below are supported for audiocorder:
mp3 and wav.

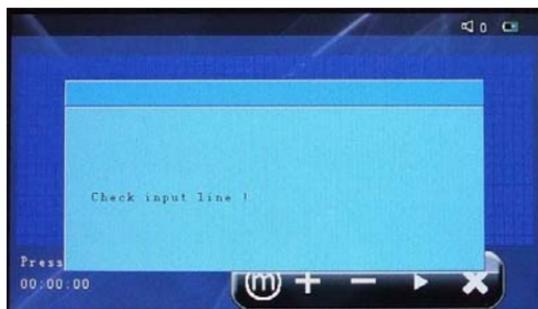

Before start to record, make sure the line-in cable is connected between player and other audio output device.

8.1 Basic function

Use idler wheel button or touch audiocorder icon to go into audiocorder mode. Press exit button or touch  icon to quit.

8.1.1 Start to record

Press enter button or touch  icon to start recording.

8.1.2 Pause

Press enter button to pause the recording.

8.1.3 Stop

Press exit button or touch  icon to stop recording.

8.1.4 Volume adjustment

Use the idler wheel button or touch  icons to adjust the volume.

8.2 More function


Press menu button or touch  icon in audiocorder mode, the menu will come out as the picture shown below.



9. VideoCorder



9.1 AV In

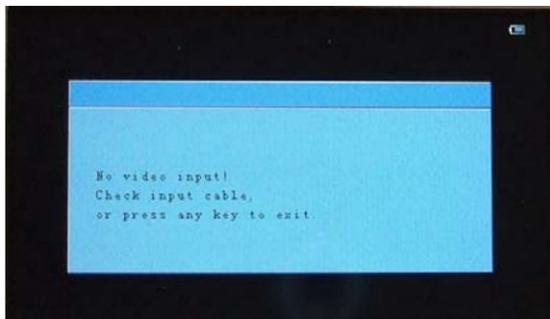

Note: One side of the AV cable is connected to the AV IN port of the player, the other side which has three color plugs (Video/IN (yellow), Audio L/IN (white), Audio R/IN (red)) is connected to TV or other video output device.



9.1.1 Start recording

Press enter button or touch  icon to start recording.

9.1.2 Stop

Press enter button or touch  icon during video recording.

9.1.3 Volume adjustment

Use the idler wheel button or touch  icons to adjust volume.

9.2 AV out

Connect the AV cable to the player and TV or other display device.

Note: One side of the AV cable is connected to the AV OUT port of the player, the other side which has three color plugs (Video/IN (yellow), Audio L/IN (white), Audio R/IN (red)) is connected to TV or other video input device.



Turn on TV and switch to AV mode, press enter button or touch videocorder icon to select video recording mode, the LCD screen will be off, and the image will be displayed on TV.

10. Setting



Press menu button or touch (M) icon on the bottom of the screen to go into the setting mode.

10.1 Display



10.1.1 Language

To shift different system language.

10.1.2 Video Output

To shift video output.

10.1.3 TV Standard

To shift TV standard mode.

10.1.4 LCD Brightness

To adjust LCD brightness.

10.1.5 Scan mode

To shift scan mode.

10.2 Option



10.2.1 Music Play Order

To shift music play sequence.

10.2.2 Equalizer

To shift music equalizer.

10.2.3 SlideInterval

To adjust image slide show time.

10.2.4 Movie Play Order

To shift movie play sequence.

10.2.5 Movie LCD Mode

To shift LCD display mode.

10.2.6 ImageTransition

To on/off imagetransition.

10.2.7 eBook Color manage

10.3 Clock



10.3.1 Year

To set the system year.

10.3.2 Month

To set the system month.

10.3.3 Day

To set the system day.

10.3.4 Hour

To set the system hour.

10.3.5 Minute

To set the system minute.

10.4 Sound



10.4.1 In Speaker

To on/off built-in speaker.

10.4.2 Volume

To adjust the volume level.

10.5 Power



Battery Operation

10.5.1 Auto Power Off

To set auto power off time.

10.5.2 Auto LCD Off

To set auto LCD off time

DC-Power Operation

10.5.3 Auto Power Off

To set auto power off time with power adapter connected.

10.5.4 Auto LCD Off

To set auto LCD off time with power adapter connected.


10.6 AudioCorder



10.6.1 Format

To shift the audio recording format.

10.7 Scheduler

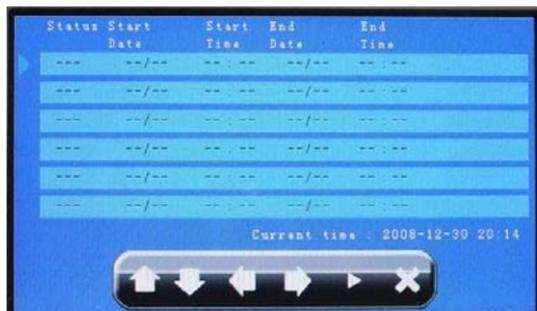

To set the date and time of video recording.

10.8 System



10.8.1 Show All Files

To on/off the mode of file displaying.

10.8.2 Media Browse Mode

To shift the media browse mode.

10.8.3 Update Media Lib.

To update media library.

10.8.4 Set Defaults

To recover the default setting.

10.8.5 Set Password

To set the password. (The default password is 88888)

10.8.6 Calibrate Touch Screen

To rectify the touch screen function.

10.8.7 Format Hard Disk

To do reformat hard disk.

10.8.8 Update Fireware

To update the fireware.

CHAPTER III Appendix

1. Technical Specifications

Indicators	Parameters
Dimension	124mmx76mmx28mm
Weight	180g (Include battery)
Language	Chinese/English/French/German/Spanish
LCD screen	4.3 inch TFT LCD; 480x272 pixels
Capacity	2.5 inch HDD (160Gbytes)
Power supply	DC 5V-2.5A 100-240V
Charging time	About 5 hours (use power adapter in the state of shut down)
Playback time	Video playback time is about 3 hours (rmvb, 480 x 272, 587KBPS, 24FPS, single-cycle,brightness 3, volume 10, headset output, others are as default settings)
	Audio playback time is about 4.5 hours (MPEG1.0 Layer3, 4KHZ, 128KBPS, single file repeat, volume 10, headset output, screen shutdown, others are as default settings)
Battery	Rechargeable Li-Polymer battery, 4000mAh
Transmission interface	USB2.0
Audio output	Headset output:32 ohms
	Built-in speaker: 8 ohms 0.5W
Video output	Composite video output format: PAL, NTSC
Temperature range	Operating temperature: 5℃~35℃
	Preserving temperature: -20℃~45℃
System requirements	Computer configuration: Windows 2000/XP and above.
	File system: FAT32 file system

2. Supporting file specifications

Type	Description		
Picture browsing	JPEG, JPG	The maximum support is 8MPixels	
Video format	File type	MPG	Video type: MPEG1, MPEG2
			Audio type: MP2, AC3, LPCM
			Video frame rate: 30f/s
			Resolution: 720x480
			Stream: 800 KBPS
		VOB	Video type: MPEG1, MPEG2
			Audio type: MP2, AC3, LPCM
			Video frame rate: 30f/s
			Resolution: 720x480
			Stream: 800 KBPS
		AVI	Video type: MPEG4 SP, ASP
			Audio type: MP2, MP3, AC3, PCM, ADPCM
			Video frame rate: 30f/s
			Resolution: 720x480
			Stream: 800 KBPS
RM/RMVB	Video type: RMVB, RM8/9/10		

			Audio type: RA, AAC, AAC+
			Video frame rate: 30 f/s
			Resolution: 720x480
			Stream: 800 KBPS
	Subtitle		*.SUB, *.SRT format
Audio playback	File type		MP3, WMA, M4A, OGG
	Bit rate		MP3 8kbps~320kbps WMA 32kbps~160kbps M4A 48kbps~320kbps OGG 80kbps~500kbps
	Lyric		*.LRC format
E-book	File type		TXT format, the maximum is 10MB for single file.
Picture shooting	2.0 million pixels	JPEG	1600x1200, 1024x768, 640x480
Line-in recording	File type		WAV, MP3
Video recording	File type		AVI
SD card	Capacity		Max. 4GB, SD,SDHC

Note: Due to harddisk is used with FAT32 partition, not support the single file larger than 2G.

3. Packing list

Packing list				
No.	Article name	Quantity	Unit	Remarks
1	Main unit	1	set	
2	AV in cable	1	piece	
3	AV out cable	1	piece	
4	USB cable	1	piece	
5	Power adapter	1	piece	
6	Headset	1	piece	
7	Line In cable	1	piece	
8	User Manual	1	piece	