

S/M No. : OR6QDB3001

Service Manual

Microwave Oven

Model : KOR-6QDB



• Caution:

In this Manual, some parts can be changed for improving, their performance without notice in the parts list. So, if you need the latest parts information, please refer to PPL(Parts Price List) in Service Information Center (<http://svc.dwe.co.kr>).

Feb. 2008

DAEWOO
ELECTRONICS 

DAEWOO

PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not operate or allow the oven to be operated with the door open.
- (b) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary: (1) Interlock operation, (2) Proper door closing, (3) Seal and sealing surfaces (arcing, wear, and other damage), (4) Damage to or loosening of hinges and latches, (5) Evidence of dropping or abuse.
- (c) Before turning on microwave power for any service test or inspection within the microwave generating compartments, check the magnetron, wave guide or transmission line, and cavity for proper alignment, integrity, and connections.
- (d) Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.
- (e) A microwave leakage check to verify compliance with the Federal performance standard should be performed on each oven prior to release to the owner.

TABLE OF CONTENTS

PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	1
SAFETY AND PRECAUTIONS	2
FOR SAFE OPERATION	2
FOR SAFE SERVICE PROCEDURES	2
SPECIFICATIONS	3
EXTERNAL VIEW	4
OUTER DIMENSION	4
FEATURES DIAGRAM	5
CONTROL PANEL	6
INSTALLATION	7
OPERATIONS AND FUNCTIONS	8
DISASSEMBLY AND ASSEMBLY	9
INTERLOCK MECHANISM AND ADJUSTMENT	16
TROUBLE SHOOTING GUIDE	17
MEASUREMENT AND TEST	21
MEASUREMENT OF THE MICROWAVE POWER OUTPUT	21
MICROWAVE RADIATION TEST	22
COMPONENT TEST PROCEDURE	23
WIRING DIAGRAM	24
PRINTED CIRCUIT BOARD	25
CIRCUIT CHECK PROCEDURE	25
PCB CIRCUIT DIAGRAM	28
PCB LOCATION NO	29
EXPLODED VIEW AND PARTS LIST	30
DOOR ASSEMBLY	30
CONTROL PANEL ASSEMBLY	30
TOTAL ASSEMBLY	30

SAFETY AND PRECAUTIONS

CAUTION : This Device is to be Serviced Only by Properly Qualified Service Personnel. Consult the Service Manual for Proper Service Procedures to Assure Continued Safety Operation and for Precautions to be Taken to Avoid Possible Exposure to Excessive Microwave Energy.

1. FOR SAFE OPERATION

Damage that allows the microwave energy (that cooks or heats the food) to escape will result in poor cooking and may cause serious bodily injury to the operator.

IF ANY OF THE FOLLOWING CONDITIONS EXIST, OPERATOR MUST NOT USE THE APPLIANCE.

(Only a trained service personnel should make repairs.)

- (1) A broken door hinge.
- (2) A broken door viewing screen.
- (3) A broken front panel, oven cavity.
- (4) A loosened door lock.
- (5) A broken door lock.

The door gasket plate and oven cavity surface should be kept clean.

No grease, soil or spatter should be allowed to build up on these surfaces or inside the oven.

DO NOT ATTEMPT TO OPERATE THIS APPLIANCE WITH THE DOOR OPEN.

The microwave oven has concealed switches to make sure the power is turned off when the door is opened.

Do not attempt to defeat them.

DO NOT ATTEMPT TO SERVICE THIS APPLIANCE UNTIL YOU HAVE READ THIS SERVICE MANUAL.

2. FOR SAFE SERVICE PROCEDURES

1. If the oven is operative prior to servicing, a microwave emission check should be performed prior to servicing the oven.
2. If any certified oven unit is found to have excessive emission level $5\text{mW}/\text{cm}^2$, the service person should:
 - (a) inform the manufacturer, importer or assembler,
 - (b) repair the unit at no cost to the owner,
 - (c) attempt to ascertain the cause of the excessive leakage,
 - (d) tell the owner of the unit not to use the unit until the oven has been brought into compliance.
3. If the oven operates with the door open, the service person should tell the user not to operate the oven and contact the manufacturer and CDRH immediately.

CAUTION

MICROWAVE RADIATION

PERSONNEL SHOULD NOT BE EXPOSED TO THE MICROWAVE ENERGY WHICH MAY RADIATE FROM THE MAGNETRON OR OTHER MICROWAVE GENERATING DEVICE IF IT IS IMPROPERLY USED OR CONNECTED. ALL INPUT AND OUTPUT MICROWAVE CONNECTIONS, WAVEGUIDES FLANGES AND GASKETS MUST BE SECURED. NEVER OPERATE THE DEVICE WITHOUT A MICROWAVE ENERGY ABSORBING LOAD ATTACHED. NEVER LOOK INTO AN OPEN WAVEGUIDE OR ANTENNA WHILE THE DEVICE IS ENERGIZED.


SPECIFICATIONS

POWER SUPPLY		120V AC, 60Hz SINGLE PHASE WITH GROUNDING
MICROWAVE	INPUT POWER	1100 W
	ENERGY OUTPUT	700 W
	FREQUENCY	2,450MHz
OUTSIDE DIMENSIONS (W x H x D)		465 x 279 x 331 mm (18.3 x 11.0 x 13.0 in.)
CAVITY DIMENSIONS (W x H x D)		301 x 293 x 219 mm (11.9 x 11.5 x 8.6 in.)
CAVITY VOLUME		.68 cu.ft
NET WEIGHT		APPROX. 12 kg (26.54 lbs.)
TIMER		59 min. 99 sec.
POWER SELECTIONS		10 Levels


* Specifications are subject to change without notice.

EXTERNAL VIEW

1. OUTER DIMENSION

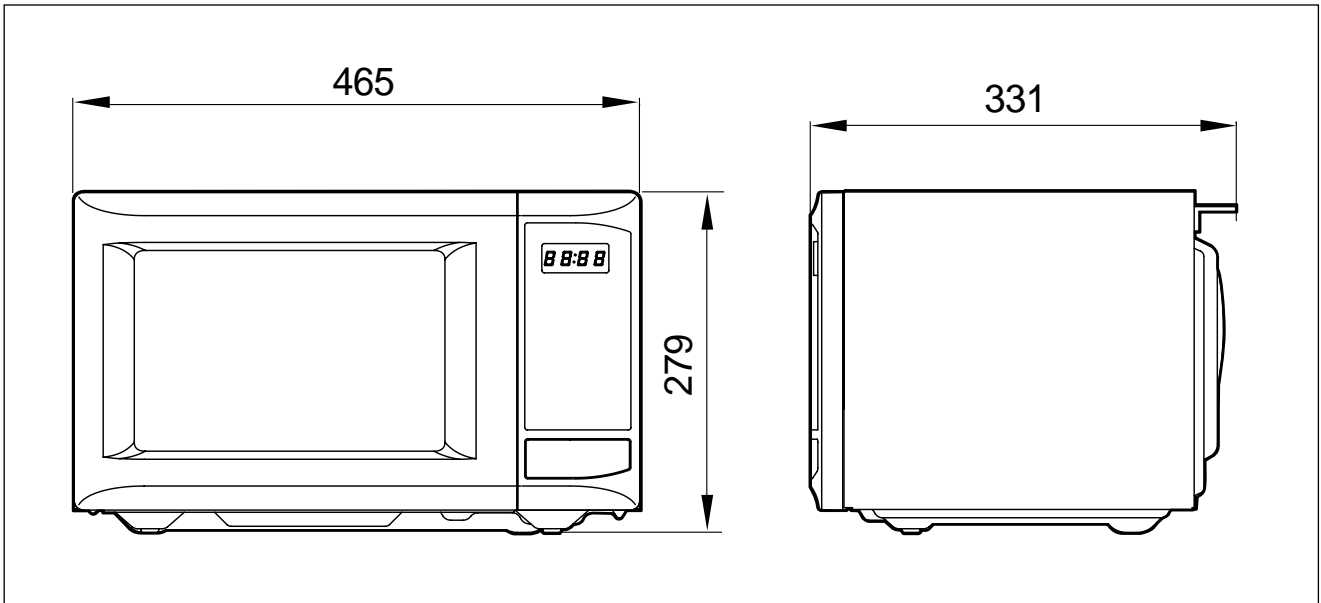


2. FEATURES DIAGRAM

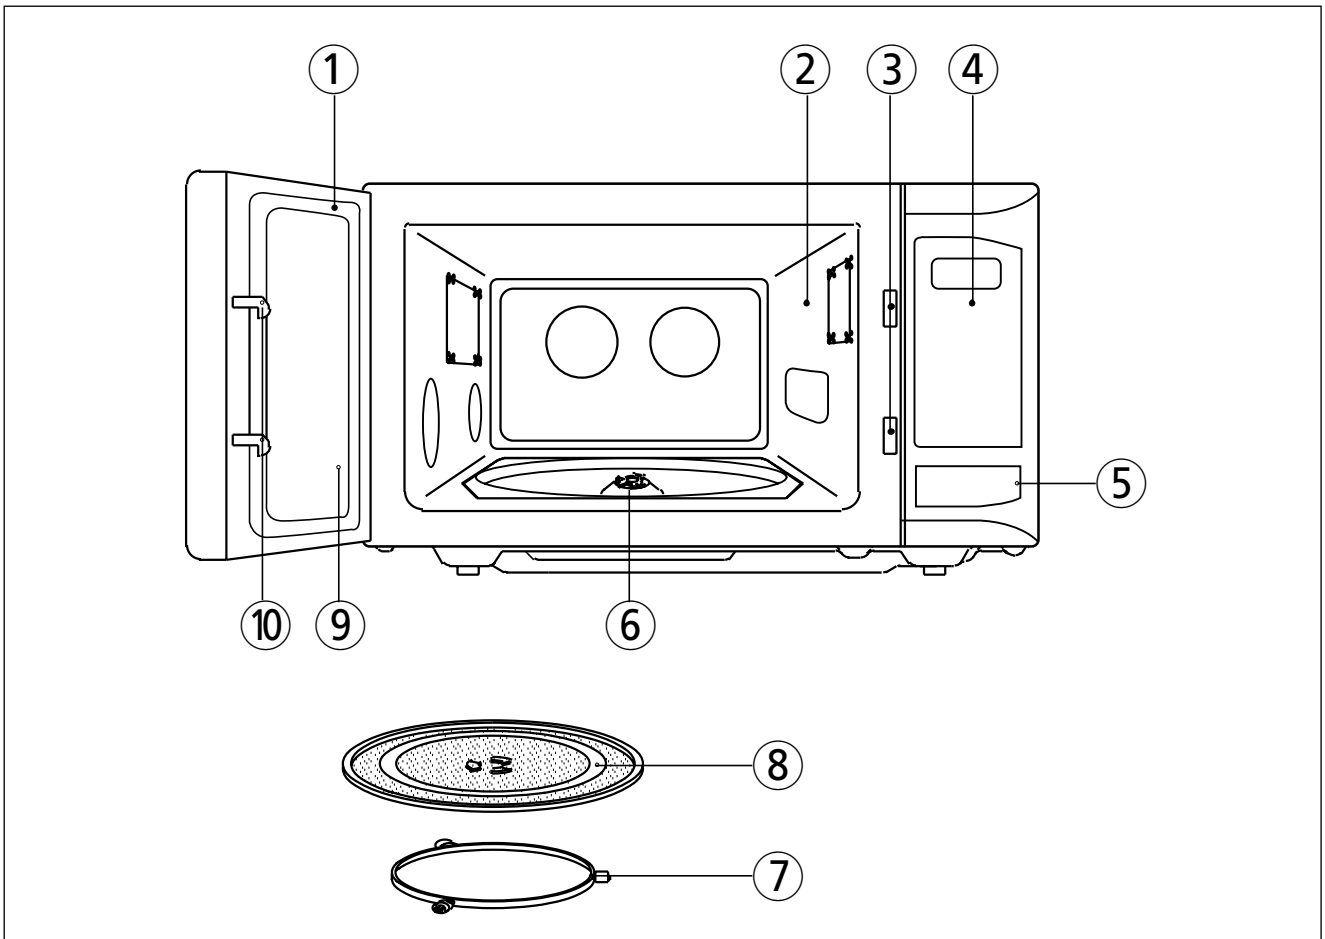

- ① **Door seal** - Door seal maintains the microwave energy within the oven cavity and prevents microwave leakage.
- ② **Oven cavity**
- ③ **Safety interlock system**
- ④ **Control panel**
- ⑤ **Door release button** - By pushing this button the latch system cut off all circuits and stops the oven before the door is opened.
- ⑥ **Coupler** - This fits over the shaft in the centre of the ovens cavity floor. This is to remain in the oven for all cooking.
- ⑦ **Roller guide** - This must always be used for cooking together with the glass cooking tray.
- ⑧ **Glass cooking tray** - Made of special heat resistant glass. Food in a proper receptacle is placed on this tray for cooking.
- ⑨ **Door viewing screen** - Allows viewing of food. The screen is designed so that light can pass through, but not the microwave.
- ⑩ **Door latch** - When the door is closed, it will automatically shut off. If the door is opened while the oven is operating, the magnetron will immediately stop operating.

3. CONTROL PANEL

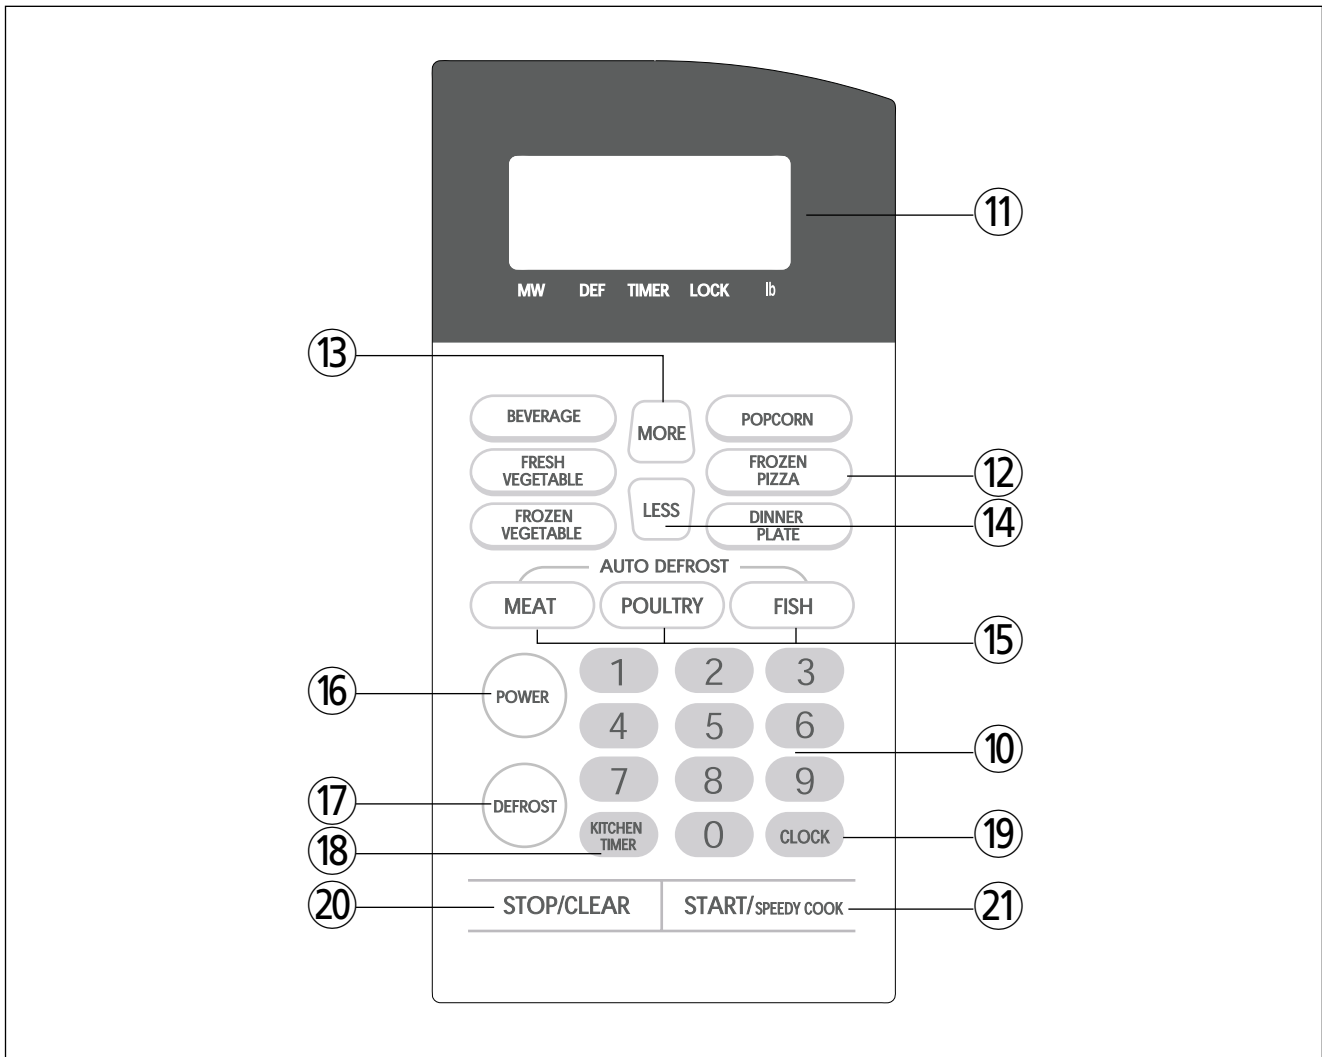

⑩ **Time set pad**-Used to set the cooking time and the present time.

⑪ **Display**-Cooking time, power level, indicators and present time are displayed.

⑫ **One touch**-Used to cook or reheat specific quantities of food.

⑬ **More**-Used to add time to cooking.

⑭ **Less**-Used to remove time from cooking.

⑮ **Auto Defrost**-Used to defrost foods.(for weight)

⑯ **Power**-Used to set power level.

⑰ **Defrost**-Used to defrost foods.(for time)

⑱ **Kitchen Timer**-Used as a minute timer, to delay the start of cooking, or to set a holding time after cooking.

⑲ **Clock**-Used to set clock.

⑳ **Stop/Clear**-Used to stop the oven operation or to delete the cooking data.

㉑ **Start/Speedy cook**-Used to start the oven and also used to set a reheat time.

INSTALLATION

1. Steady, flat location.

This microwave oven should be set on a steady, flat surface.

2. Leave space behind and side.

All air vents should be kept a clearance. If all vents are covered during operation, the oven may be overheated and, eventually, cause oven failure.

3. Away from radio, and TV sets


Poor television reception and radio interference may result if the oven is located close to a TV, radio, antenna, or feeder and so on.

4. Away from heating appliances and water taps

Keep the oven away from hot air, steam or splash when choosing a place to position it, or the insulation might be adversely affected and breakdowns occur.

5. Power supply

- Check your local power source.
This microwave oven requires a current of approximately 9 amperes, 120Volts, 60Hz grounded outlet.
- Line fuse rating is 15 amperes and described on EXPLODED VIEW AND PART LIST.
- Power supply cord is about 0.8 meters long.
 1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
 2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
 3. If a long cord or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The extension cord must be a grounding type 3-wire cord.
 - 3) The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

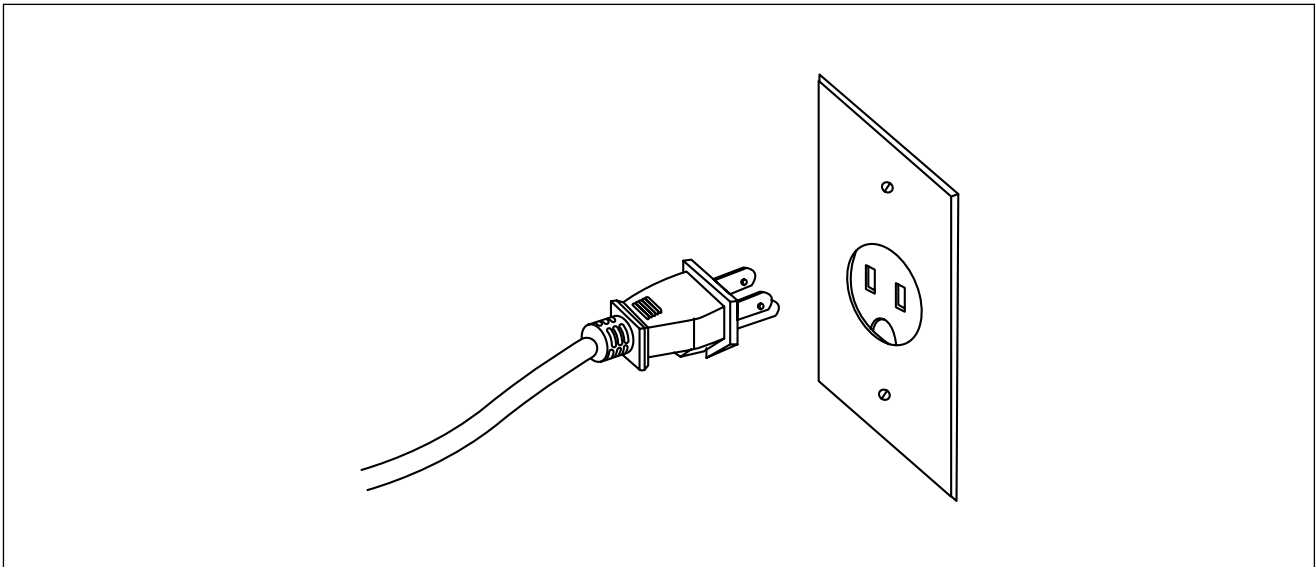

6. Examine the oven after unpacking for any damage such as:

A misaligned door, broken door or a dent in cavity.

If any of the above are visible, DO NOT INSTALL, and notify a dealer immediately.

OPERATIONS AND FUNCTIONS

1. Connect the mains lead to an electrical outlet.
2. After placing the food in a suitable container, open the oven door and put it on the glass tray. The glass tray must always be in place during cooking.
3. Close the door securely.
4. The oven door can be opened at any time during operation by pushing the door open button on the control panel.
The oven will automatically shut off. To restart the oven, close the door and then touch the START pad.
5. Each time a pad is touched, a BEEP will sound to acknowledge the touch.
6. The oven automatically cooks on full power unless set to a lower power level.
7. The display will show ": 0" when the oven is plugged in.
8. Time clock returns to the present time when the cooking time ends.
9. When the STOP/CLEAR pad is touched during the oven operation, the oven stops cooking and all information retained.
To erase all information (except the present time), touch the STOP/CLEAR pad once more. If the oven door is opened during the oven operation, all information is retained.
10. If the START pad is touched and the oven does not operate, check the area between the door and door seal for obstructions and make sure the door is closed securely. The oven will not start cooking under the door is completely closed or the program has been reset.

Make sure the oven is properly installed and plugged into the electrical outlet.

Wattage output chart

The power level is set by touching the POWER pad. The chart shows the display, the power level and the percentage of power.

Touch the POWER pad	Power level(Display)	Approximate Percentage of Power
Once	P-HI	100%
Twice	P-90	90%
3 times	P-80	80%
4 times	P-70	70%
5 times	P-60	60%
6 times	P-50	50%
7 times	P-40	40%
8 times	P-30	30%
9 times	P-20	20%
10 times	P-10	10%
11 times	P-00	0%

DISASSEMBLY AND ASSEMBLY

Cautions to be observed when troubleshooting.

Unlike many other appliances, the microwave oven is high-voltage, high-current equipment. It is completely safe during normal operation.

However, carelessness in servicing the oven can result in an electric shock or possible danger from a short circuit. You are asked to observe the following precautions carefully.

1. Always remove the power plug from the outlet before servicing.
2. Use an insulated screwdriver and wear rubber gloves when servicing the high voltage side.
3. Discharge the high voltage capacitor before touching any oven components or wiring.

(1) Check the grounding.

Do not operate on a two-wire extension cord.

The microwave oven is designed to be used with grounded.


It is imperative, therefore, to make sure it is grounded properly before beginning repair work.

(2) Warning about the electric charge in the high voltage capacitor.

For about 30 seconds after the operation stopped and electric charge remains in the high voltage capacitor.

When replacing or checking parts, short between oven chassis and the negative high terminal of the high voltage capacitor by using a properly insulated screwdriver to discharge.

4. When the 20A fuse is blown out due to the operation of the monitor switch; replace primary interlock switch, secondary interlock switch and interlock monitor switch.
5. After repair or replacement of parts, make sure that the screws are properly tightened, and all electrical connections are tightened.
Check continuity of the monitor circuit.
6. Do not operate without cabinet.

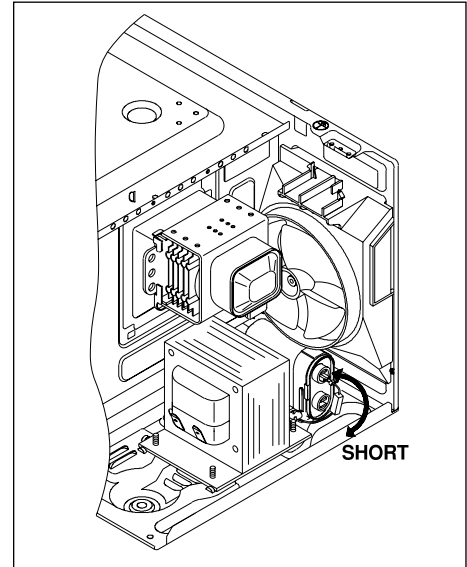


CAUTION : Service personnel should remove their watches whenever working close to or replacing the magnetron.

WARNING : When servicing the appliance, take a care of touching or replacing high potential parts because of electric shock or exposing microwave. These parts are as follows - HV Transformer, Magnetron, HV Capacitor, HV Diode HV Fuse.


1. To remove cabinet

- 1) Remove three screws on cabinet back.
- 2) Pull the cabinet backward.

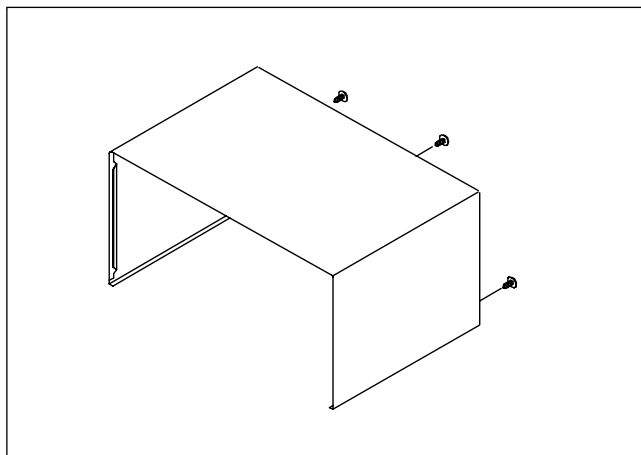


2. To remove door assembly

- 1) Remove two screws which secure the stopper hinge top.
- 2) Remove the door assembly from top plate of cavity.
- 3) Reverse the above for reassembly.

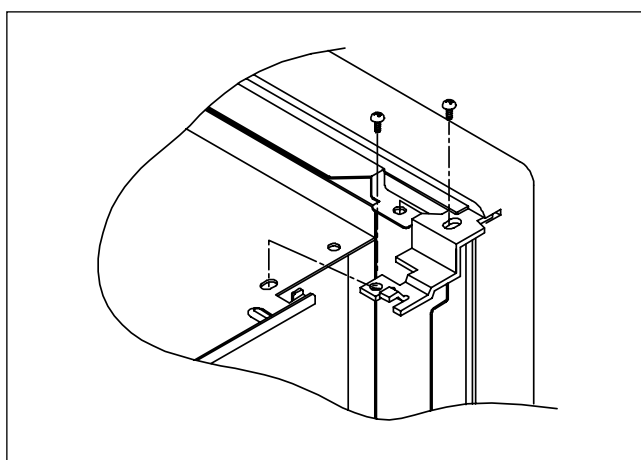

NOTE : After replacing the door assembly, perform a check of correct alignment with the hinge and cavity front plate.

3. To remove door parts.

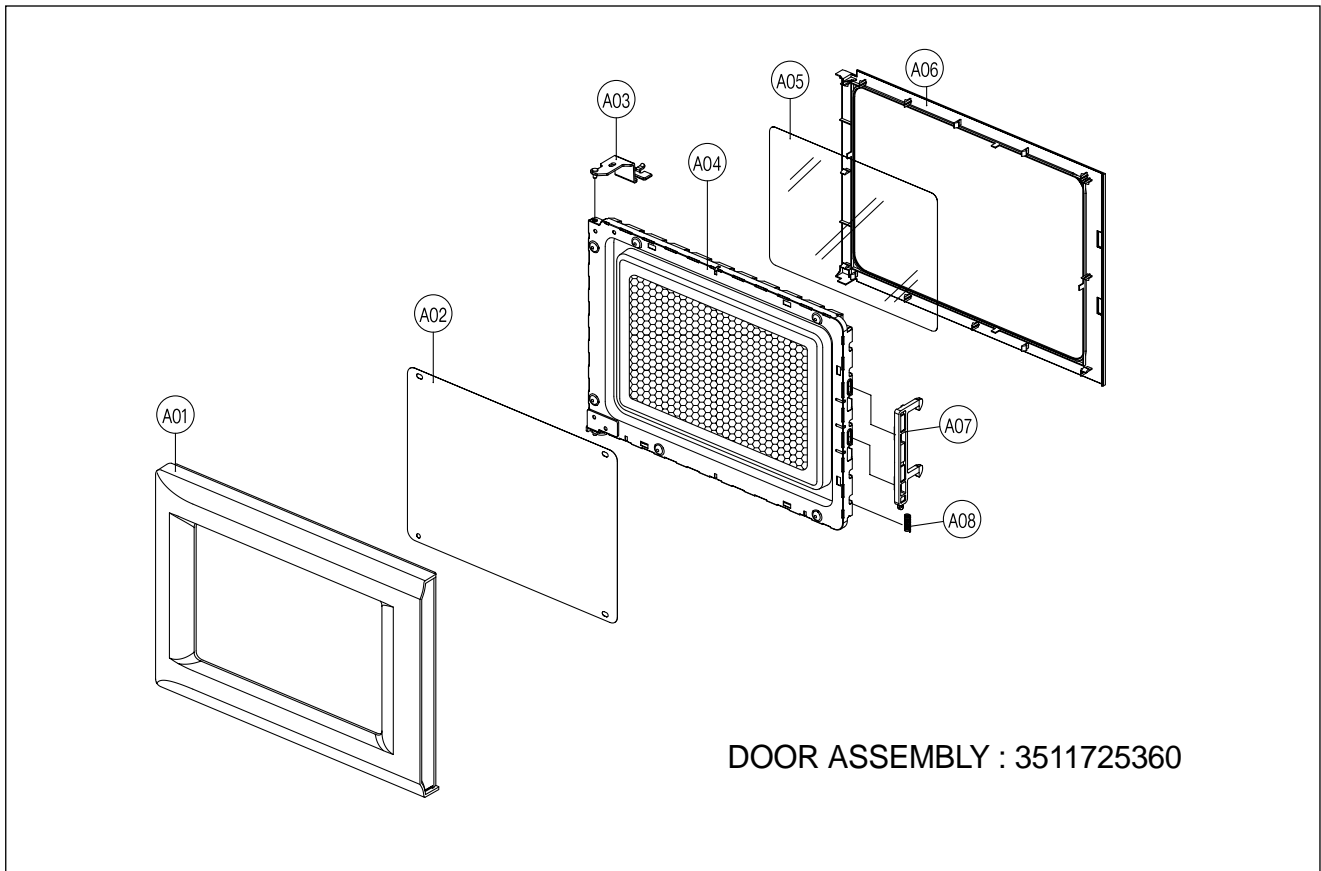


REF NO.	PART CODE	PART NAME	DESCRIPTION	Q'TY	REMARK
A01	3512208530	FRAME DOOR	HIPS SG-970, HG-176OH	1	
A02	3517007300	BARRIER-SCREEN *O	PET T0.125	1	
A03	3515204100	STOPPER HINGE *T AS	KOR-63150S	1	
A04	3511719500	DOOR PAINTING AS	KOR-6C0B5S	1	
A05	3517002800	BARRIER SCREEN *I	POLYESTER T0.1	1	
A06	3512300210	GASKET DOOR	PP	1	
A07	3513100700	HOOK	POM	1	
A08	3515101300	SPRING HOOK	PW1	1	

- (1) Remove the gasket door from door painting as.
- (2) Remove the door frame from door painting as.
- (3) Remove the stopper hinge top from door painting as.
- (4) Remove the spring and the hook.
- (5) Remove the barrier screen outer from door frame.
- (6) Reverse the above steps for reassembly.


4. Method to reduce the gap between the door seal and the oven front surface.

- (1) To reduce gap located on part 'A'
 - Loosen two screws on the stopper hinge top, and then push the door to contact the door seal to the oven front surface.
 - Tighten two screws.
- (2) To reduce gap located on part 'B'
 - Loosen two screws on the stopper hinge under, and then push the door to contact the door seal to the oven front surface.
 - Tighten two screws.
- (3) To reduce gap located on part 'C'
 - Loosen the screw on the interlock switch assembly located the top of the oven body.
 - Draw the interlock switch assembly inward as possible to engage with the hook on the door bottom.
 - Tighten a screw.
- (4) To reduce gap located on part 'D'
 - Loosen the screw on the interlock switch assembly located the bottom of the oven body.

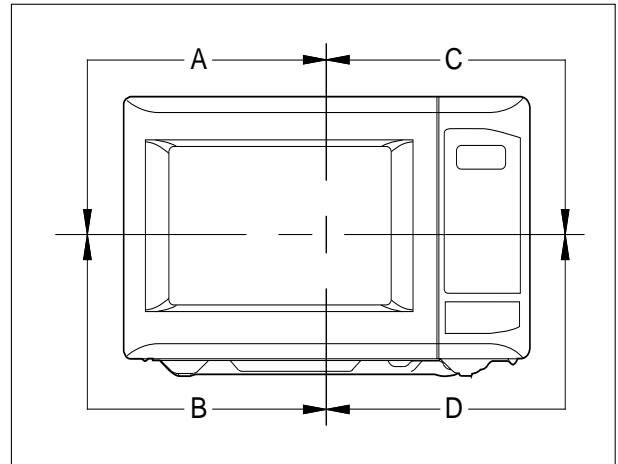

NOTE : A small gap may be acceptable if the microwave leakage does not exceed 4mW/cm².

5. To remove control panel parts.

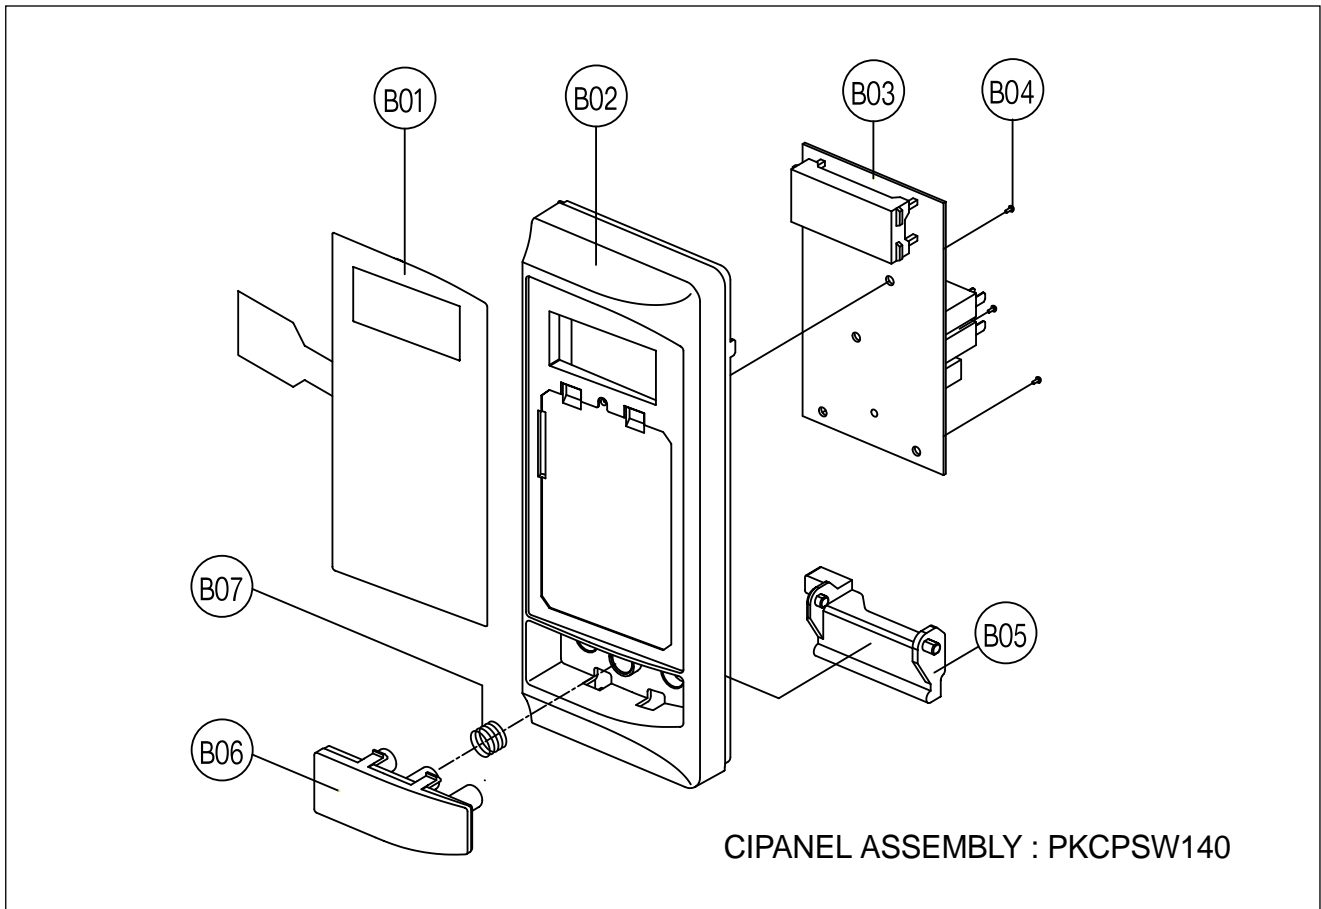


REF NO.	PART CODE	PART NAME	DESCRIPTION	Q'TY	REMARK
B01	3518571830	SWITCH MEMBRANE	KOG-6QDB3A27	1	
B02	3516733340	CONTROL-PANEL	HIPS	1	
B03	PKMPMSBA40	PCB ASSY.	KOG-6QDB3A27	1	
B04	7122401211	SCREW TAPPING	T2S TRS 4X12 MFZN	4	
B05	3513702700	LEVER DOOR OPEN	PP	1	
B06	3516915210	BUTTON DOOR OPEN	HIPS SG-970, HG-176OH	1	
B07	441G430171	SPRING BUTTON	SWP DIA. 0.7	1	


- (1) Remove the screw which secure the control panel, push up two snap fits and draw forward the control panel assembly.
- (2) Remove four screws which secure the PCB assembly to control panel.
- (3) Disconnect membrane tail from the connector of the PCB assembly.
- (4) Detach membrane from the control panel.
- (5) Reverse the above steps for reassembly.

6. To remove high voltage capacitor.

- 1) Remove the screw which secure the grounding ring terminal of the H.V. diode and the capacitor holder.
- 2) Remove the H.V. diode from the capacitor holder.
- 3) Reverse the above steps for reassembly.

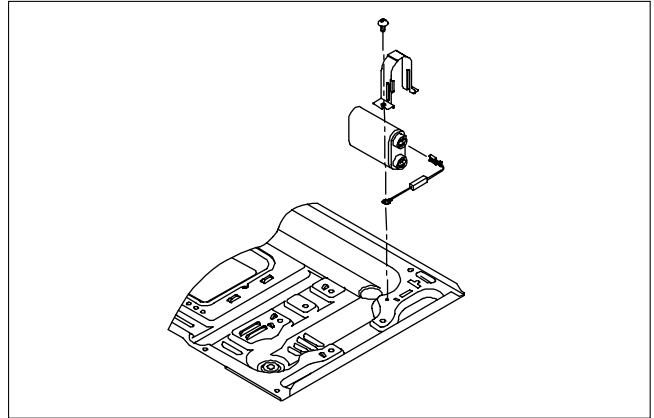


◆ High voltage circuit wiring


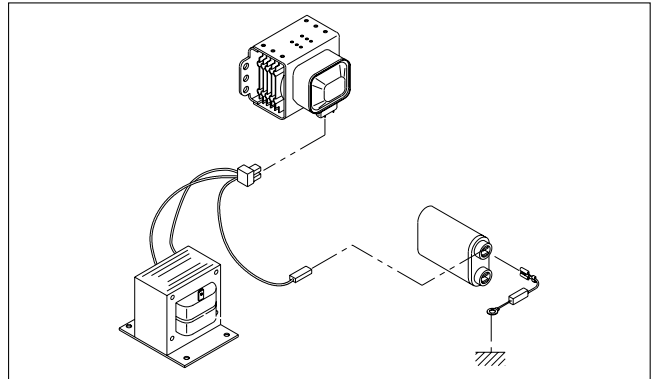


7. To remove magnetron.

- 1) Remove the screw which secure the magnetron.
- 2) Remove the magnetron.
- 3) Reverse the above steps for reassembly.

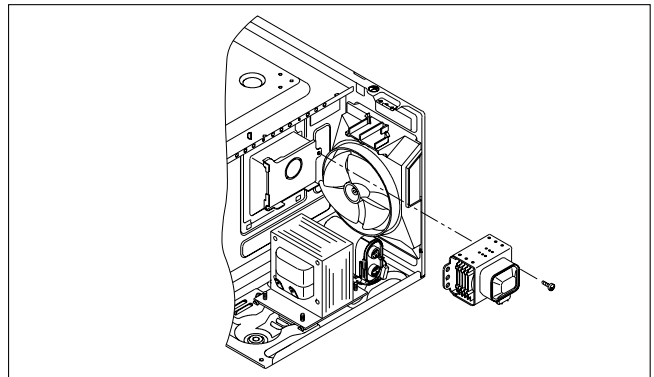


NOTE : Never install the magnetron without the metallic gasket plate which is packed with each magnetron to prevent microwave leakage. Whenever repair work is carried out on magnetron, check the microwave leakage. It shall not exceed $4\text{mW}/\text{cm}^2$ for a fully assembled oven with door normally closed.

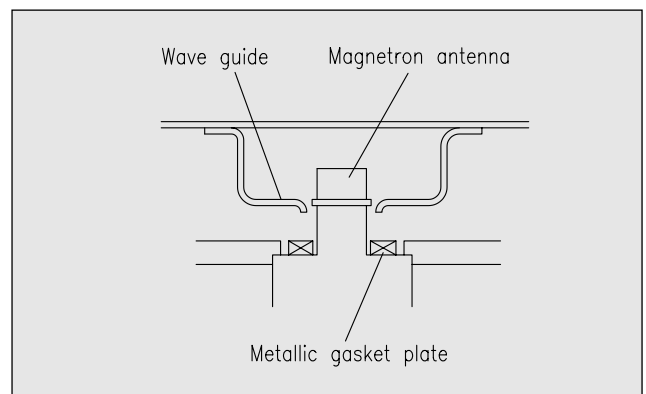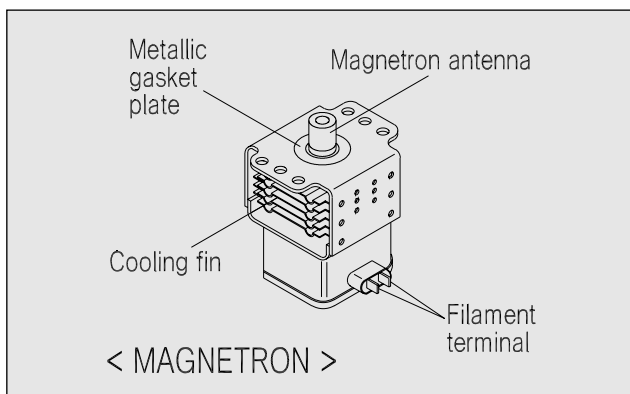


8. To remove wind guide assembly.

- 1) Remove the screw which secure the wind guide assembly.
- 2) Draw forward the wind guide assembly.
- 3) Pull the fan from the motor shaft.
- 4) Remove two screws which secure the motor shaded pole.
- 5) Remove the motor shaded pole.
- 6) Reverse the above steps for reassembly.

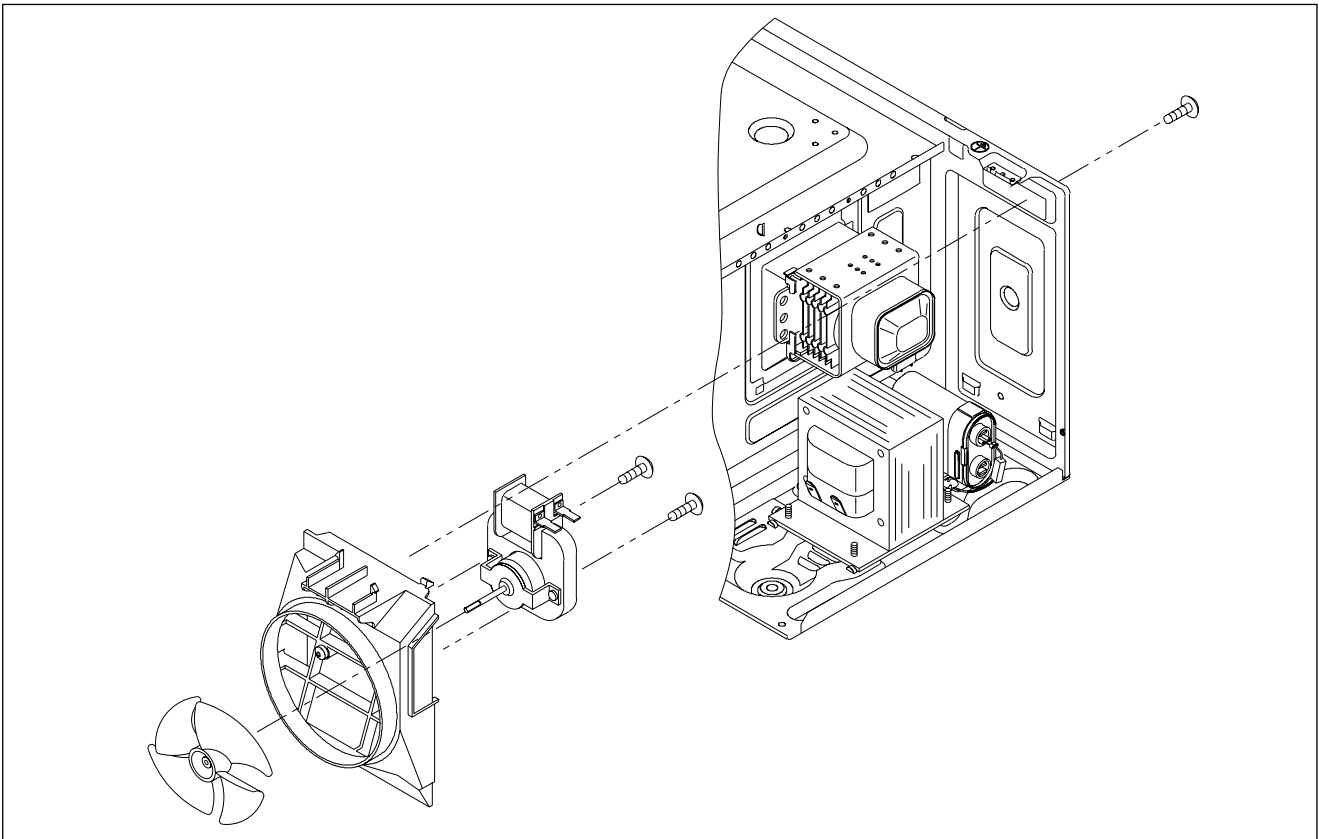


9. To remove H.V.transformer.

- 1) Remove four screws holding the H.V.transformer.
- 2) Remove the H.V.transformer.
- 3) Reverse the above steps for reassembly.

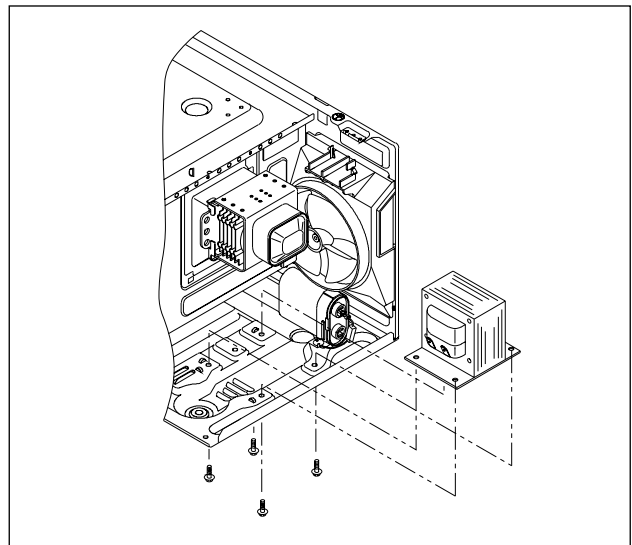

INTERLOCK MECHANISM AND ADJUSTMENT

The door lock mechanism is a device which has been specially designed to completely eliminate microwave radiation when the door is opened during operation, and thus to perfectly prevent the danger resulting from the leakage of microwave.

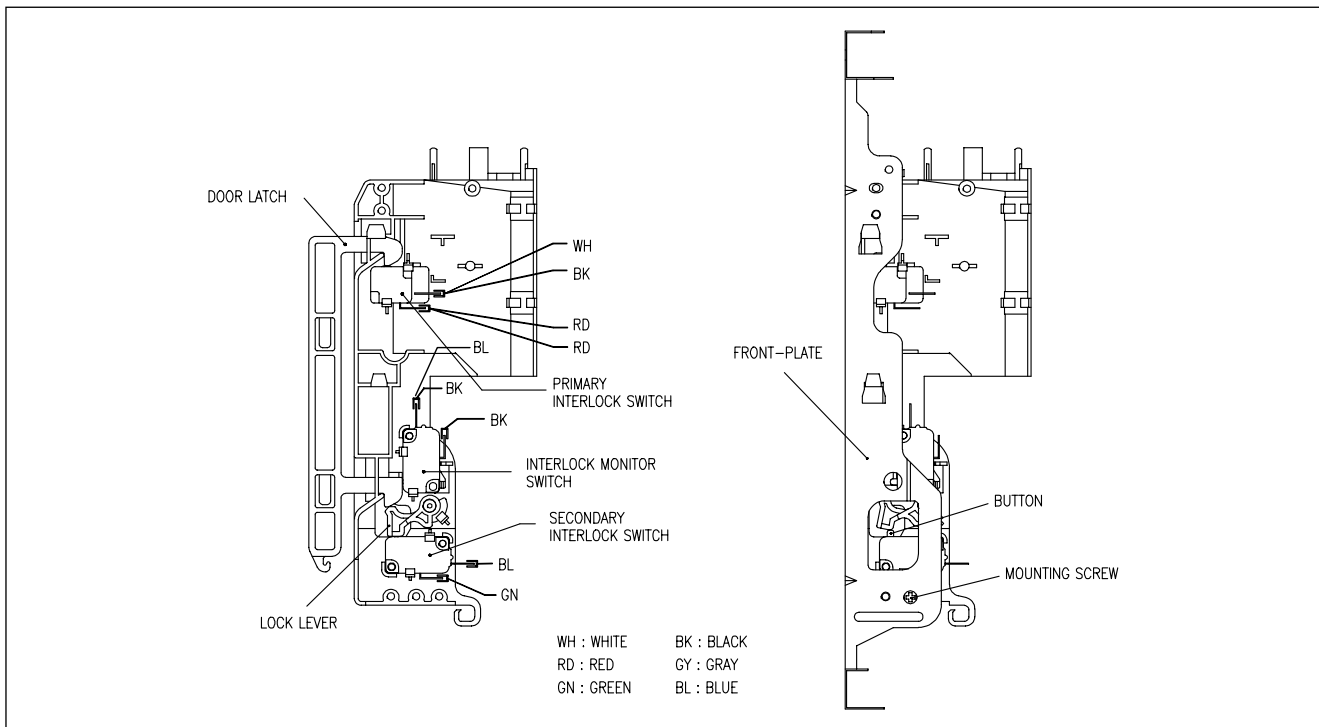

(1) Primary interlock switch

When the door is closed, the hook locks the oven door. If the door is not closed properly, the oven will not operate.

When the door is closed, the hook pushes the button of the microswitch. Then the button of the primary interlock switch bring it under "ON" condition.

(2) Secondary interlock switch and interlock monitor switch

When the door is closed, the hook pushes the lock lever downward. The lock lever presses the button of the interlock monitor switch to bring it under "OFF" condition and presses the button of the secondary interlock switch to bring it under "ON" condition.

ADJUSTMENT :

Interlock monitor switch

When the door is closed, the interlock monitor switch should be "OFF" condition before other switches are "ON" condition.

When the door is opened, the interlock monitor switch should be "ON" condition after other switches are "OFF" condition.

(3) Adjustment steps

a) Loosen the mounting screw.

b) Adjust interlock switch assembly position.

Actuation distance of primary and secondary interlock switch shall be adjusted almost 0.7mm.

c) Make sure that lock lever moves smoothly after adjustment is completed.

d) Tighten completely a mounting screw.

NOTE :

Microwave emission test should be performed after adjusting interlock mechanism. If the microwave emission exceed 4mW/cm², readjust interlock mechanism.


TROUBLESHOOTING GUIDE


Following the procedure below to check if the oven is defective or not.

1. Check grounding before trouble checking.
2. Be careful of the high voltage circuit.
3. Discharge the high voltage capacitor.
4. When checking the continuity of the switches, fuse or high voltage transformer, disconnect one lead wire from these parts and check continuity with the AC plug removed. To do otherwise may result in a false reading or damage to your meter.

NOTE : When electric parts are checked, be sure the power cord is not inserted the wall outlet. Check wire harness, wiring and connected of the terminals and power cord before check the parts listed below.


(TROUBLE 1) Oven does not operate at all ; any inputs can not be accepted.

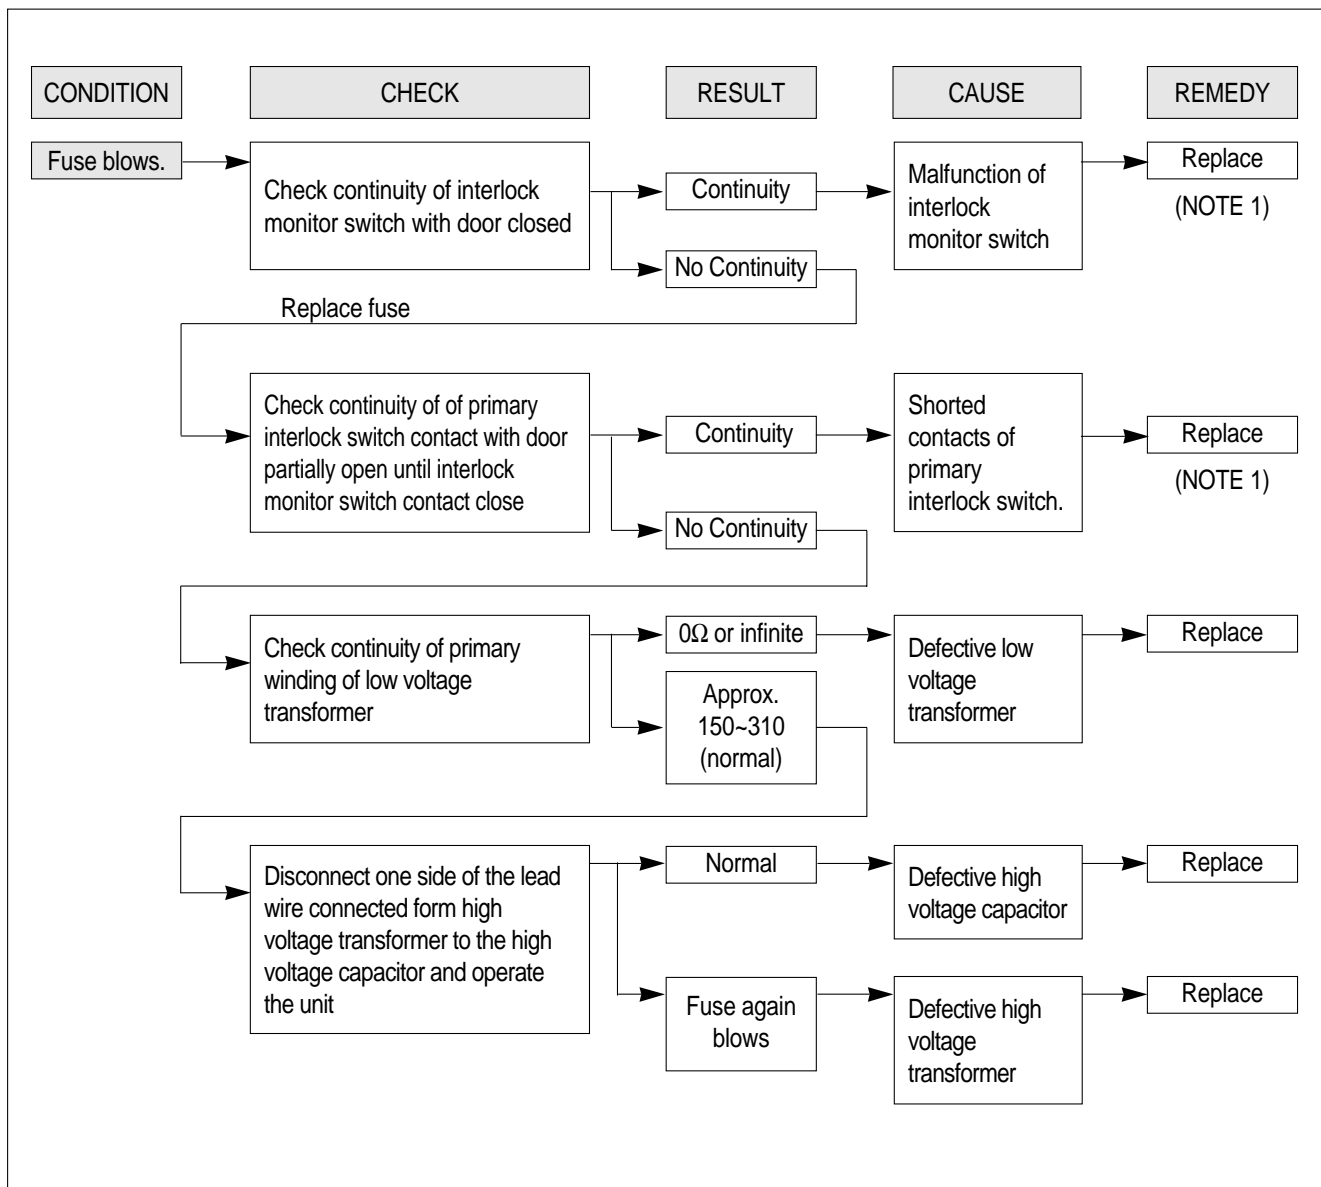

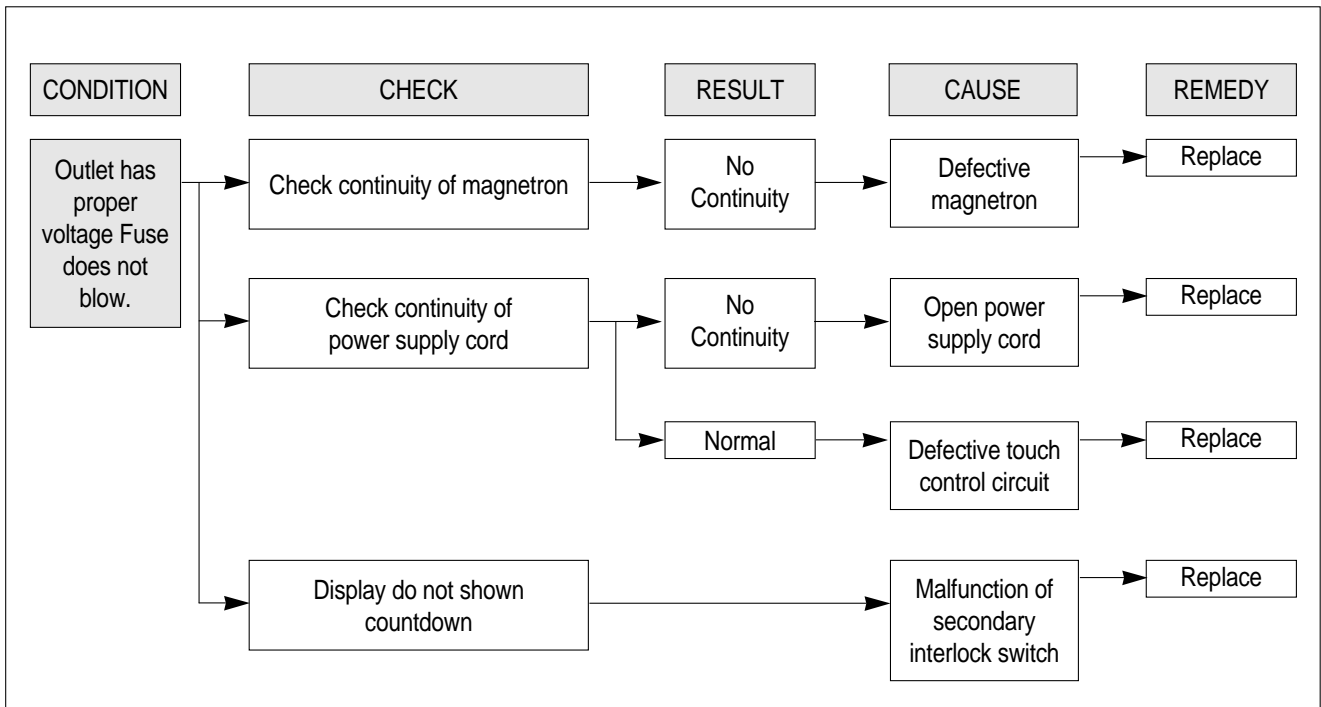


NOTE 1
All these switches must be replaced at the same time, please refer to "Interlock Mechanism And Adjustment".

(TROUBLE 2) Display shows all figures selected, but oven does not start cooking, even though desired program and time are set and the START pad is touched.


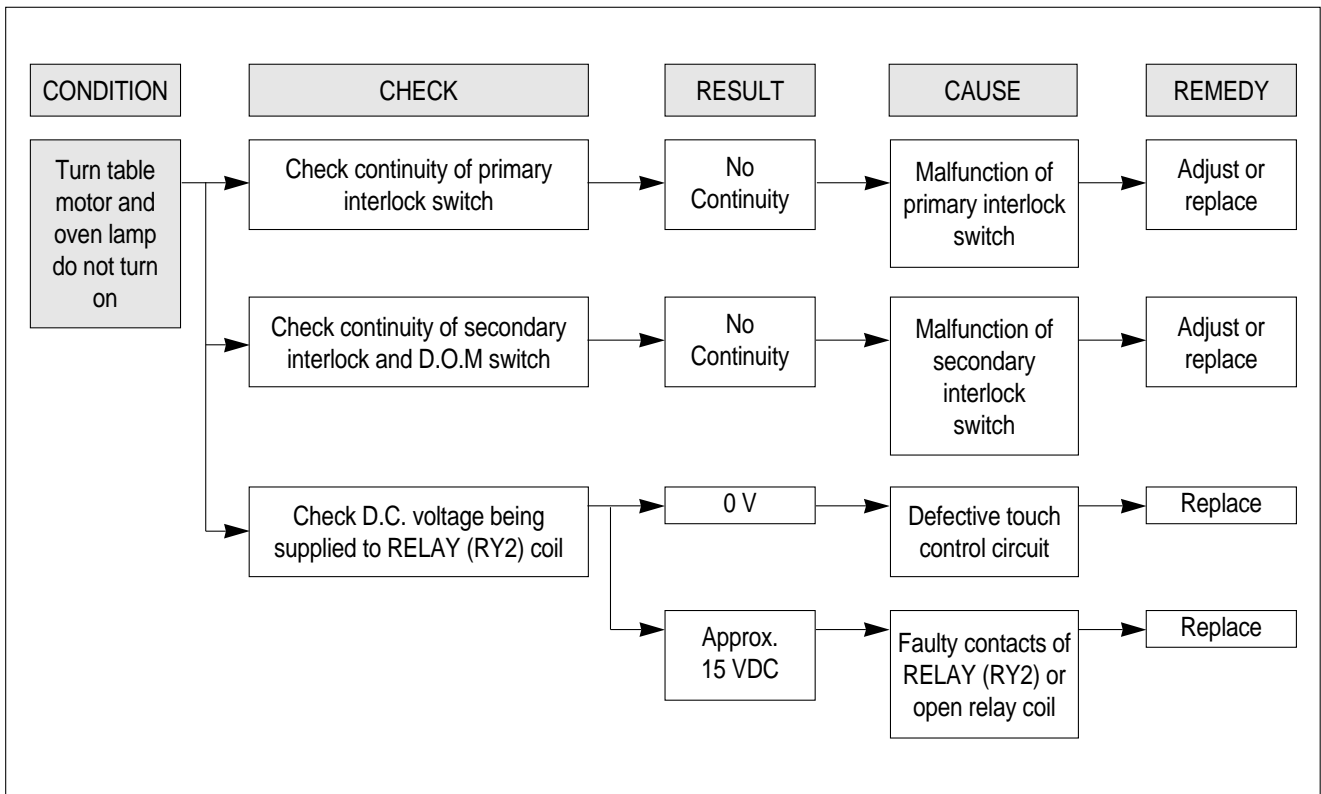


(TROUBLE 3) No microwave oscillation even though fan motor rotates.

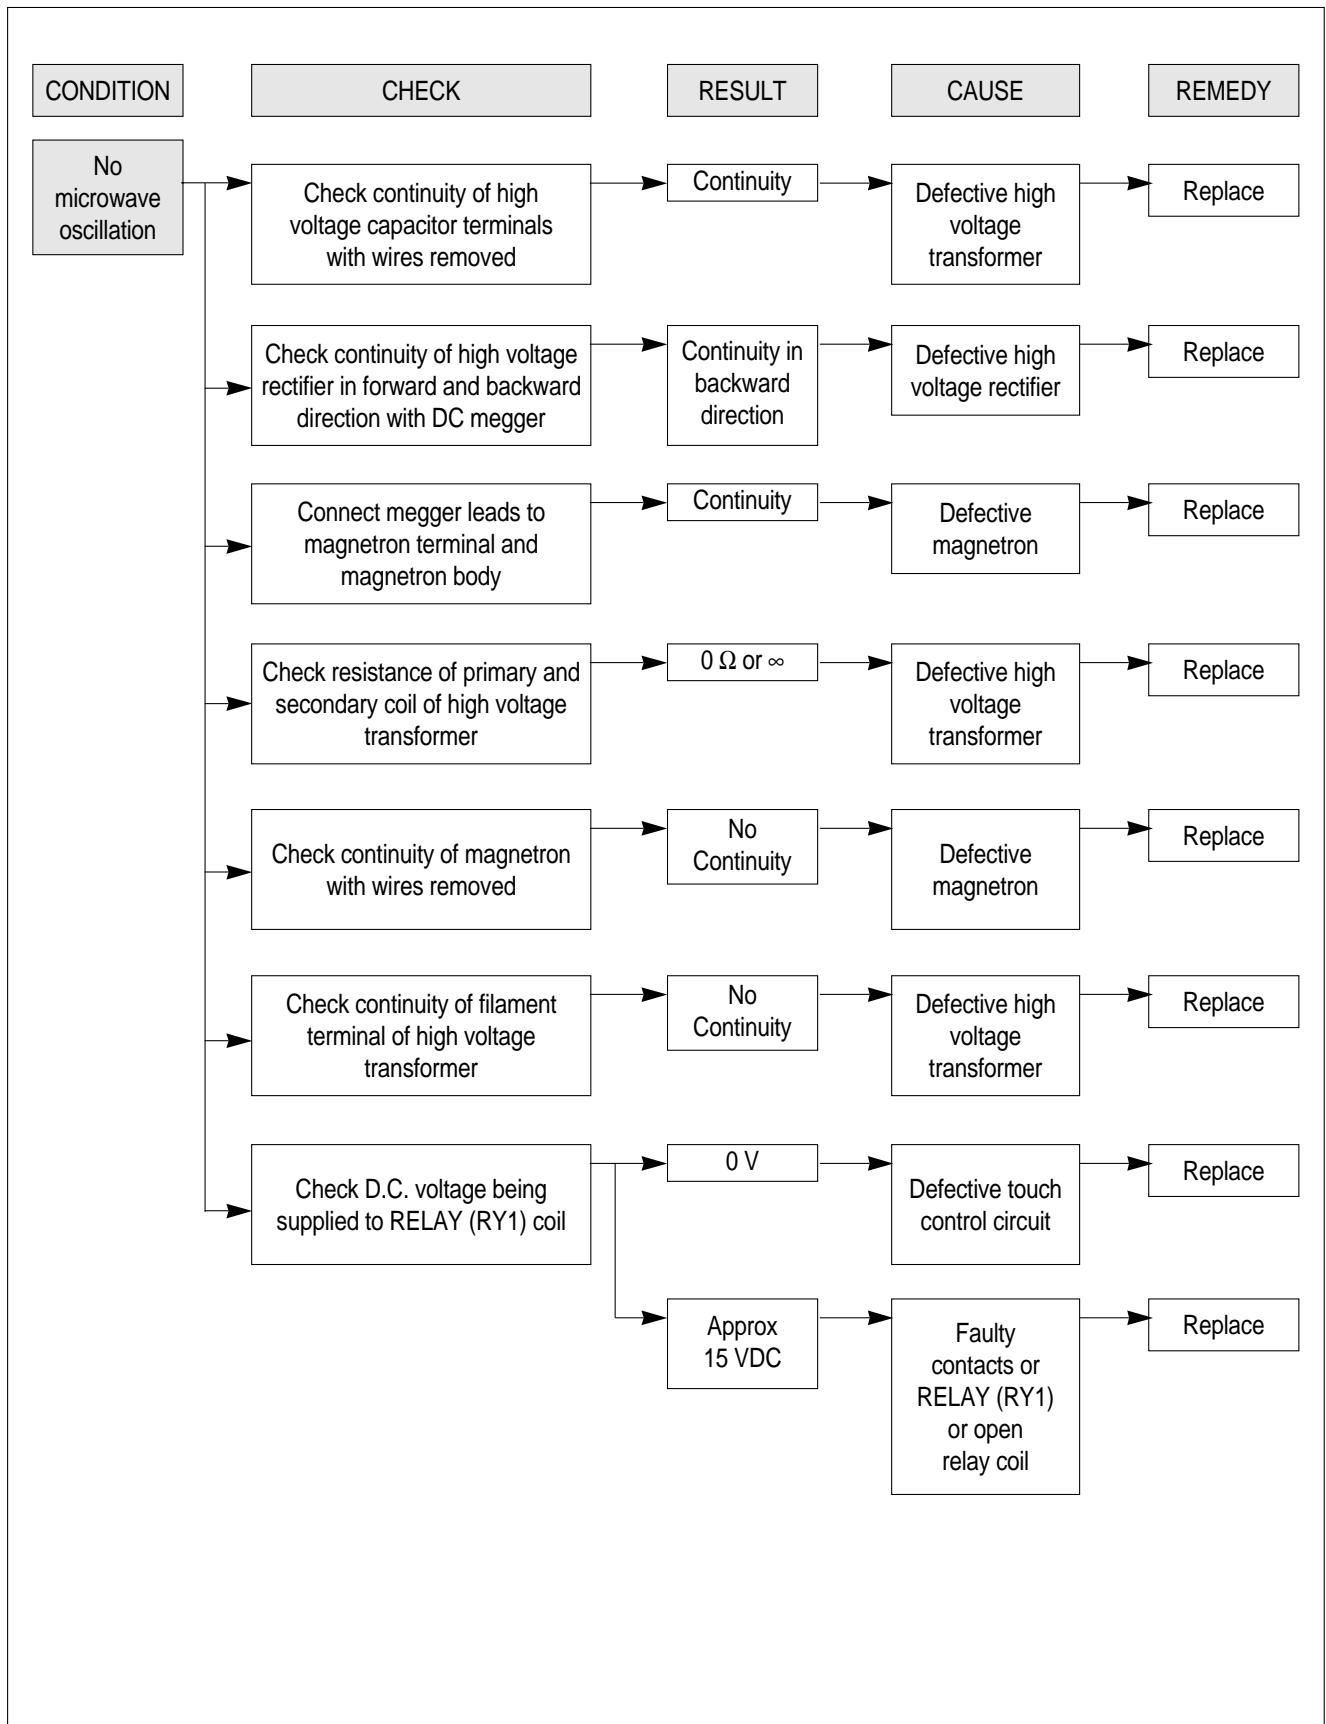

(TROUBLE 4) The following visual conditions indicate a probable defective touch control circuit or membrane switch assembly.

1. Incomplete segments
 - (1) Segments missing
 - (2) Partial segments missing
 - (3) Digit flickering other than normal display slight flickering
 - (4) “:0” does not display when power is on.
2. A distinct change in the display are not on when they numbers is the display.
3. One or more digits in the display are not on when they should be.
4. Display indicates a number different from one touched.
5. Specific numbers (for example 2 or 3) will not display when the panel is touched.
6. Display does not count down or up with time cooking or clock operation.
7. Oven is programmable and cooks normally but no display shows.
8. Display obviously jumps in time while counting down.
9. Display counts down noticeably too fast while cooking.
10. Display does not show the time of day when STOP/CLEAR pad is touched. (in case of setting the present time)
11. Oven lamp and turntable motor do not stop although cooking is finished. Check if the RELAY 2 contacts close if they are close, replace touch control circuit.

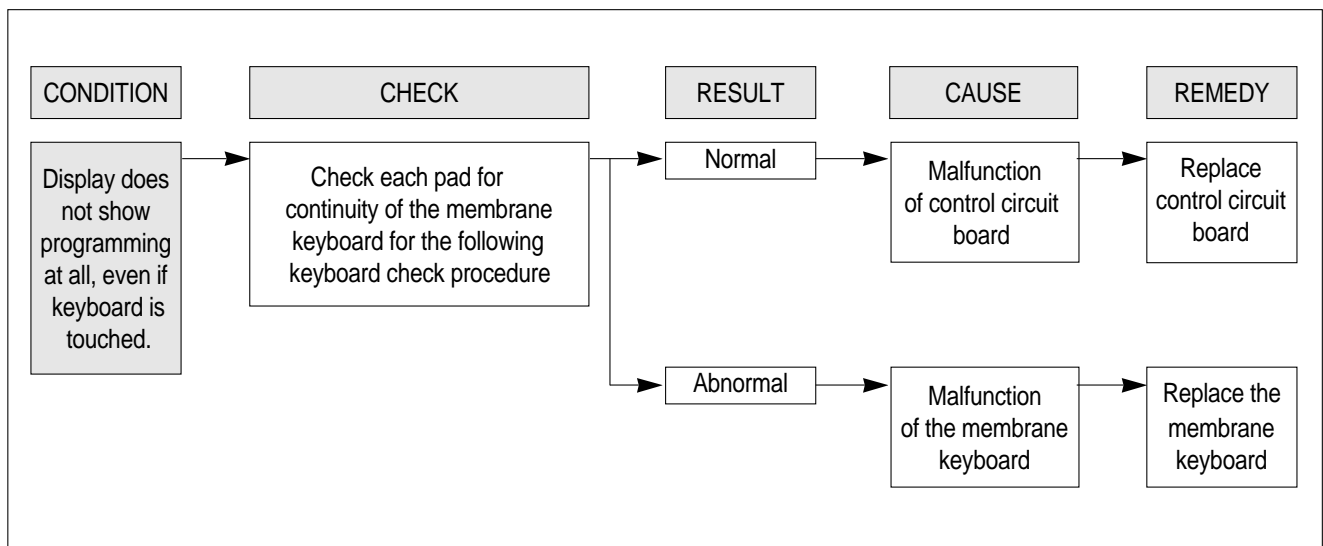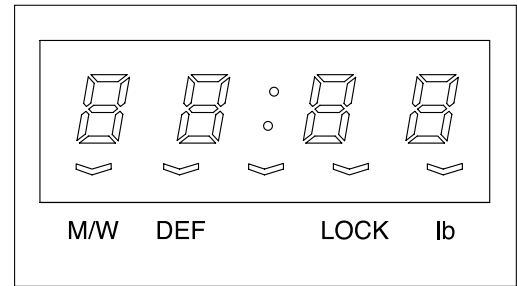

NOTE
 Before following the particular steps listed above in the troubleshooting guide for the membrane keyboard's failure, please check for the continuity of each wire-harness between the membrand keyboard and P.C.B. assembly.

MEASUREMENT AND TEST

1. MEASUREMENT OF THE MICROWAVE POWER OUTPUT

Microwave output power can be checked by indirectly measuring the temperature rise of a certain amount of water exposed to the microwave as directed below.

PROCEDURE

- Microwave power output measurement is made with the microwave oven supplied at rated voltage and operated at its maximum microwave power setting with a load of 1000 ± 5 cc of potable water.
- The water is contained in a cylindrical borosilicate glass vessel having a maximum material thickness of 3 mm and an outside diameter of approximately 190 mm.
- The oven and the empty vessel are at ambient temperature prior to the start of the test.

The initial temperature of the water is $10 \pm 2^\circ\text{C}$ ($50 \pm 3.6^\circ\text{F}$)

It is measured immediately before the water is added to the vessel.


After addition of the water to the vessel, the load is immediately placed on the center of the shelf, which is in the lowest normal position.

- Microwave power is switched on.
- Heating time should be exactly A seconds. (Refer to table as following)
Heating time is measured while the microwave generator is operating at full power.
The filament heat-up time for magnetron is not included.
- The initial and final temperature of water is selected so that the maximum difference between the ambient and final water temperature is 5K.
- The microwave power output P in watts is calculated from the following formula :

$$P = 4187 \times \Delta T / t$$

- ΔT is difference between initial and ending temperature.
- t is the heating time.

The power measured should be B (Refer to SPECIFICATIONS) $\pm 10.0\%$.

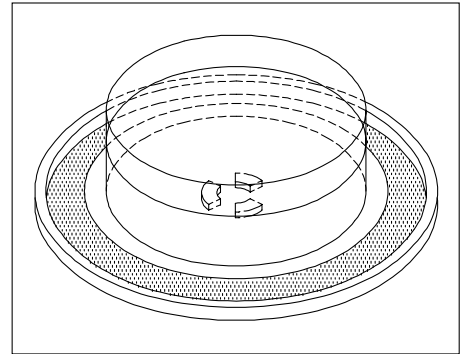

CAUTION :

- Water load should be measured exactly to 1 liter.
- Input power voltage should be exactly specified voltage (Refer to SPECIFICATIONS).
- Ambient temperature should be $20 \pm 2^\circ\text{C}$ ($68 \pm 3.6^\circ\text{F}$)

- Heating time for power output:

A(second)	70	64	60	56	52	49	47	44	42	40	38
B(W)	600	650	700	750	800	850	900	950	1000	1050	1100


2. MICROWAVE RADIATION TEST

CAUTION :

1. Make sure to check the microwave leakage before and after repair of adjustment.
2. Always start measuring of an unknown field to assure safety for operating personnel from microwave energy.
3. Do not place your hands into any suspected microwave radiation field unless the safe density level is known.
4. Care should be taken not to place the eyes in direct line with the source of microwave energy.
5. Slowly approach the unit under test until the radiometer reads an appreciable microwave leakage from the unit under the test.

PROCEDURES

1. Prepare Microwave Energy Survey Meter, 600cc glass beaker, and glass thermometer $100^{\circ}\text{C}(212^{\circ}\text{F})$.
2. Pour $275\text{cc}\pm 15\text{cc}$ of tap water initially at $20\pm 5^{\circ}\text{C}(68\pm 9^{\circ}\text{F})$ in the 600cc glass beaker with an inside diameter of approx. 85mm(3.5in.).
3. Place it at the center of the tray and set it in a cavity.
4. Close the door and operate the oven.
5. Measure the leakage by using Microwave Energy Survey Meter with dual ranges, set to 2450MHz.
 - 1) Measured radiation leakage must not exceed the value prescribed below. Leakage for a fully assembled oven with door normally closed must be less than $4\text{mW}/\text{cm}^2$.
 - 2) When measuring the leakage, always use the 5cm(2in.) space cone with probe. Hold the probe perpendicular to the cabinet and door. Place the space cone of the probe on the door, cabinet, door seem, door viewing screen, the exhaust air vents and the suction air vents.
 - 3) Measuring should be in a counter-clockwise direction at a rate of 1 in./sec. If the leakage of the cabinet door seem is unknown, move the probe more slowly.
 - 4) When measuring near a corner of the door, keep the probe perpendicular to the areas making sure the probe end at the base of the cone does not get closer than 2 in. from any metal. If it does not, erroneous reading may result.

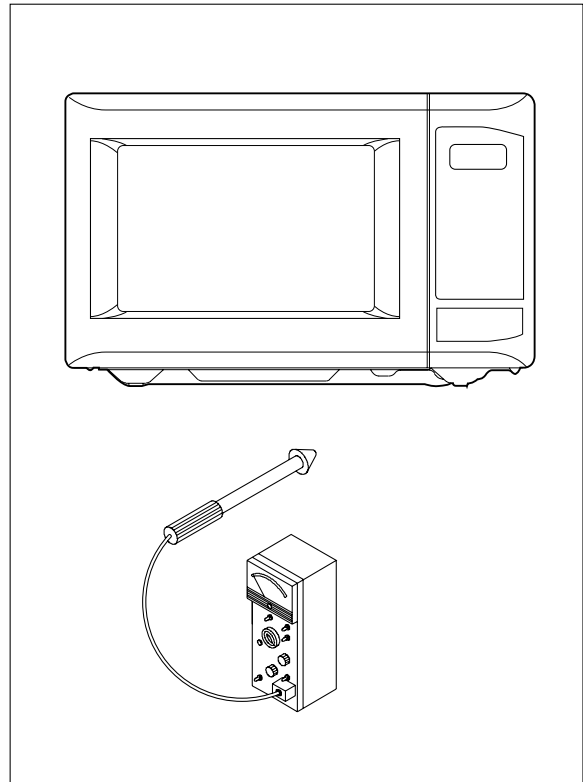

3. COMPONENT TEST PROCEDURE

- High voltage is present at the high voltage terminal of the high voltage transformer during any cooking cycle.
- It is neither necessary nor advisable to attempt measurement of the high voltage.
- Before touching any oven components or wiring, always unplug the oven from its power source and discharge the capacitor.

1. High voltage transformer

- (1) Remove connections from the transformer terminals and check continuity.
- (2) Normal readings should be as follows:

Secondary winding	Approx. $110\Omega \pm 10\%$
Filament winding	Approx. 0Ω
Primary winding	Approx. 1Ω

2. High voltage capacitor

- (1) Check continuity of capacitor with meter on the highest OHM scale.
- (2) A normal capacitor will show continuity for a short time, and then indicate $10M\Omega$ once the capacitor is charged.
- (3) A shorted capacitor will show continuous continuity.
- (4) An open capacitor will show constant $10M\Omega$.
- (5) Resistance between each terminal and chassis should be infinite.

3. High voltage diode

- (1) Isolate the diode from the circuit by disconnecting the leads.
- (2) With the ohmmeter set on the highest resistance scale measure the resistance across the diode terminals. Reverse the meter leads and again observe the resistance reading. Meter with 6V, 9V or higher voltage batteries should be used to check the front-back resistance of the diode, otherwise an infinite resistance may be read. A normal diode's resistance will be infinite in one direction and several hundred $K\Omega$ in the other direction.

4. Magnetron

For complete magnetron diagnosis, refer to "Measurement of the Microwave Power Output".

Continuity checks can only indicate an open filament or a shorted magnetron.

To diagnose for an open filament or a shorted magnetron.

- (1) Isolate magnetron from the circuit by disconnecting the leads.
- (2) A continuity check across magnetron filament terminals should indicate 0.1Ω or less.
- (3) A continuity check between each filament terminal and magnetron case should read open.

5. Fuse


If the fuse in the primary and monitor switch circuit is blown when the door is opened, check the primary and monitor switch before replacing the blown fuse.

In case the fuse is blown by an improper switch operation, replace the defective switch and fuse at the same time. Replace just the fuse if the switches operate normally.

6. Interlock switches

- (1) You can test continuity of safety interlock and monitor switch by using ohmmeter.
- (2) The switch operation is checked by zero/unlimited. The meter should indicate zero resistance.
- (3) The sequence of check is interlock monitor switch, primary and secondary interlock switches check.

WIRING DIAGRAM

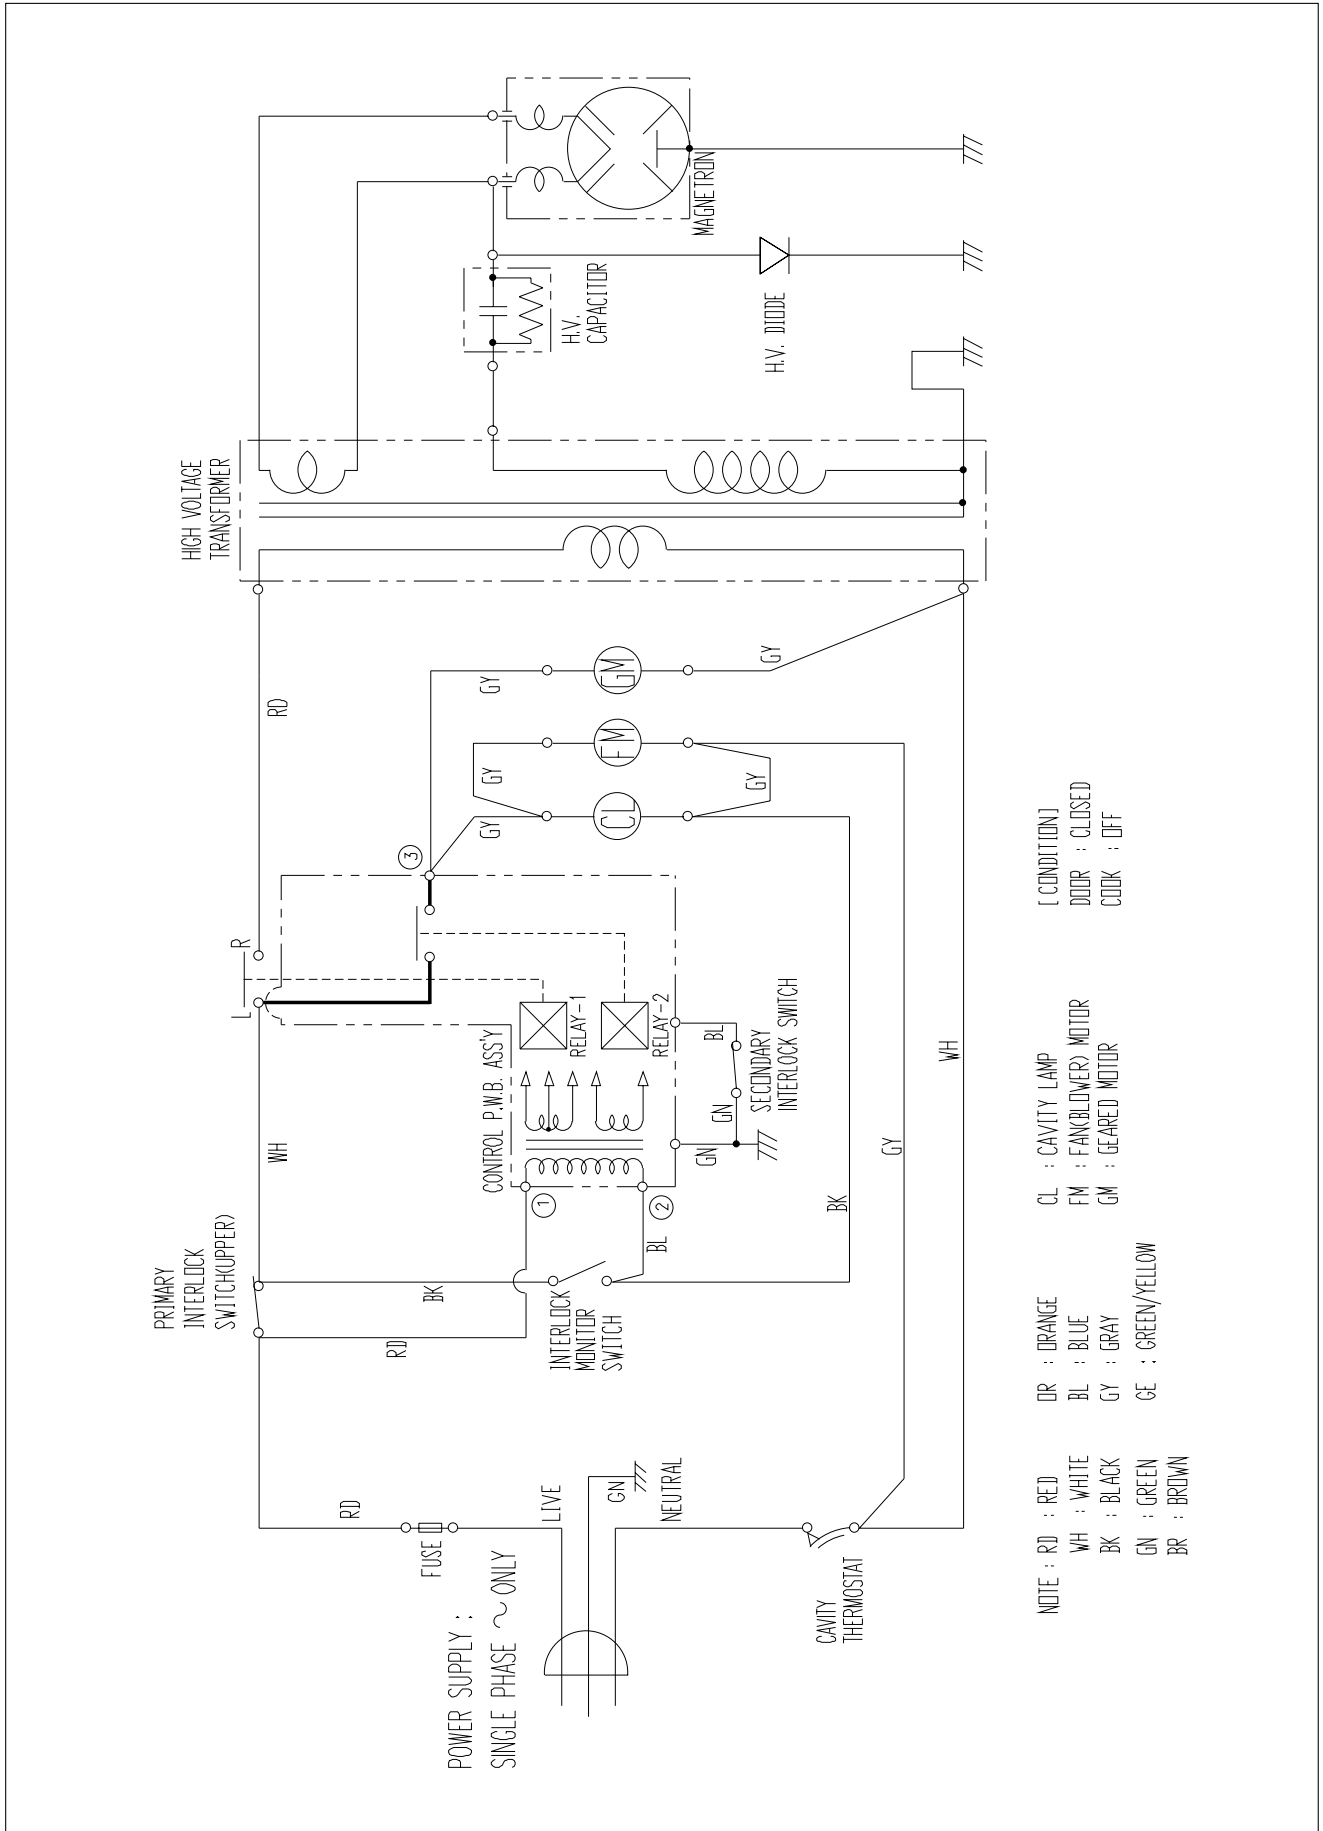

PRINTED CIRCUIT BOARD

1. CIRCUIT CHECK PROCEDURE

1. Low Voltage Transformer check

- The low voltage transformer is located on the P.C.B.
- Measuring condition: input voltage : 120V/Frequency : 60Hz



Terminal Voltage	LOAD	NO LOAD
5-6-7	AC 12.6 V	AC 14.7 V

NOTE :

1. Refer to Circuit Diagram (point 4).
2. Secondary side voltage of the low voltage transformer changes in proportion to fluctuation of power source voltage.
3. The allowable tolerance of the secondary voltage is within $\pm 5\%$ of nominal voltage.

2. Voltage check

  - Key check point


NO	CHECK POINT	REMARK
1	IC 1 PIN 5	5 VDC
2	IC 1 PIN 8	 T:16.67ms(60Hz)
3	IC 1 PIN 35 OR PIN 36	 T:250ns(4MHz)

- Check method

NO	MEASURE POINT	WAVE FORM	REMEDY	REMARK
1	MP1	DC 5V \pm 0.25V	Replace VL1, EC1	NO LOAD
2	MP2	DC 12V \pm 2.0V	Replace EC2, D11, D13, D14	NO LOAD

NOTE :


Each measure point must be measured with GND point.

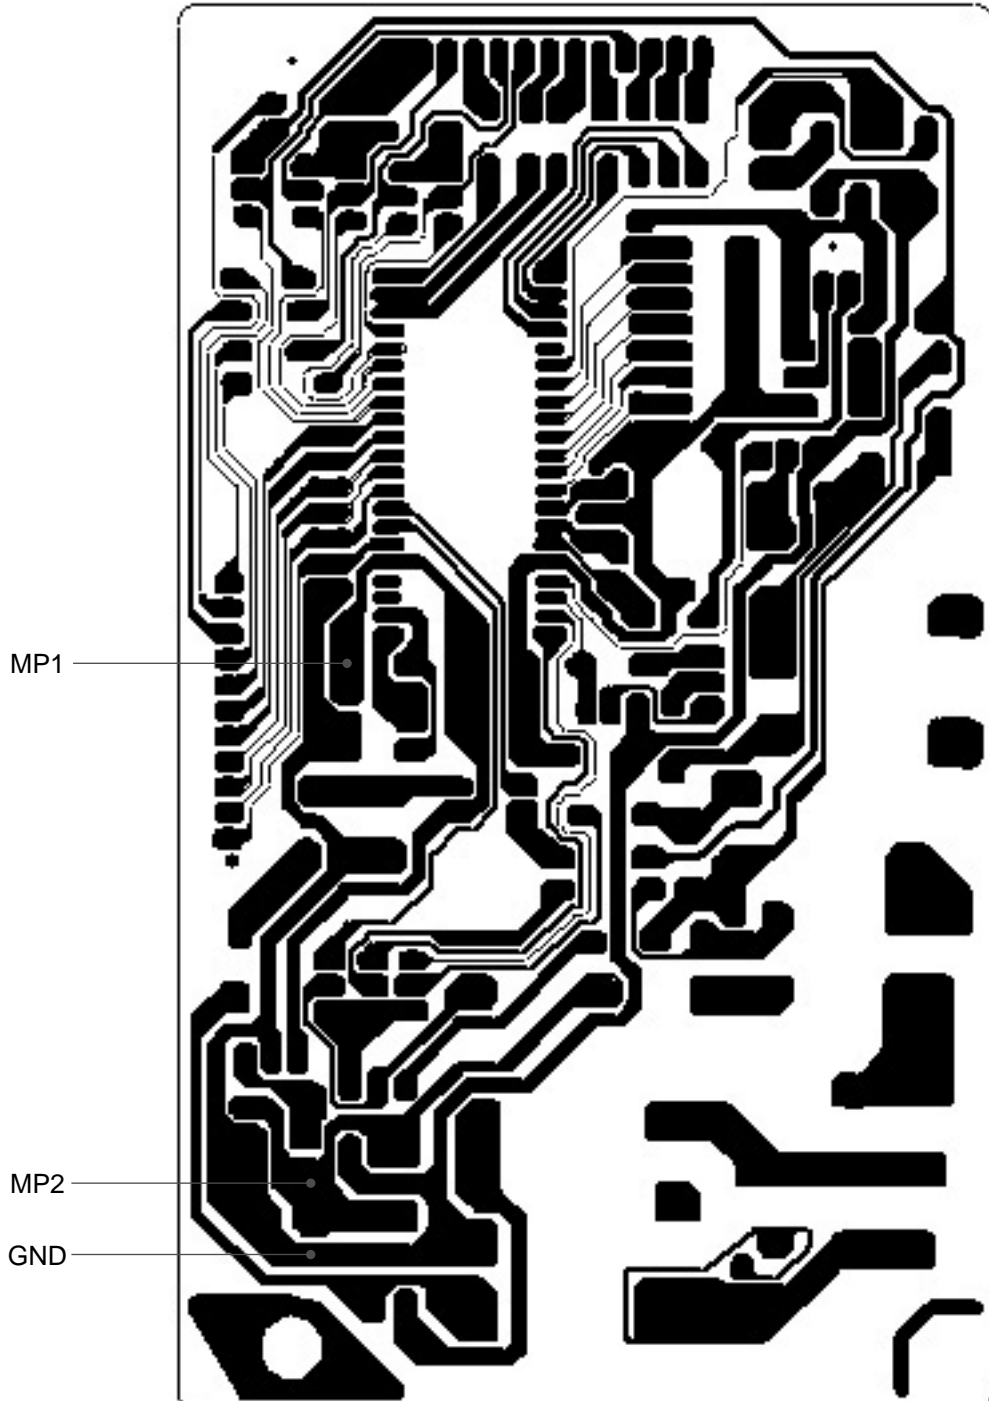

Measure Point

3. When there is no microwave oscillation


- 1) When touching **START** pad, oven lamp does not turn on.
Fan motor does not rotate, but cook indicator in display comes on.

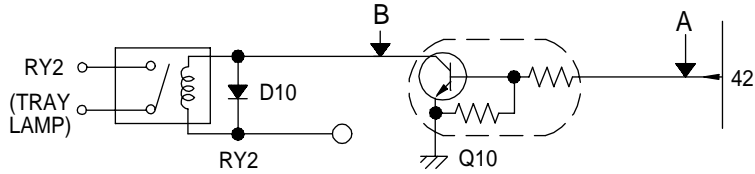

- Check method

STATE	POINT	A	B
RELAY 2 ON		5VDC	GND
RELAY 2 OFF		GND	12VDC


- 2) When touching **START** pad, oven lamp turns on.
Fan motor and turntable rotate and cook indicator in display comes on.

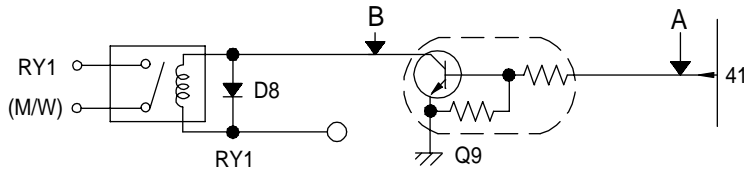

- Check method

STATE	POINT	A	B
RELAY 1 ON		5VDC	GND
RELAY 1 OFF		GND	12VDC

4. When the door is opened during operation, the count down timer does not stop.

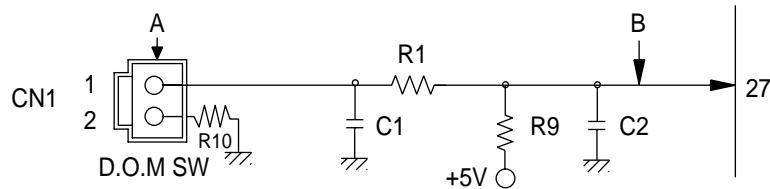

-Check method

STATE	POINT	A	B
1) DOOR OPEN		OPEN	5VDC
2) DOOR CLOSED		CLOSE	GND

CHECK NO	METHOD	REMEDY
1	Check the stage (ON, OFF) of the door open monitor switch by resistance measurement.	Replace door open monitor switch.


5. When the digital clock does not operate properly

→Refer to Circuit Diagram.

POINT	WAVE FORM
IC 1 PIN 8	

* If clock does not keep exact time, you must check resistor R20 and zener diode ZD2.

2. PCB CIRCUIT DIAGRAM

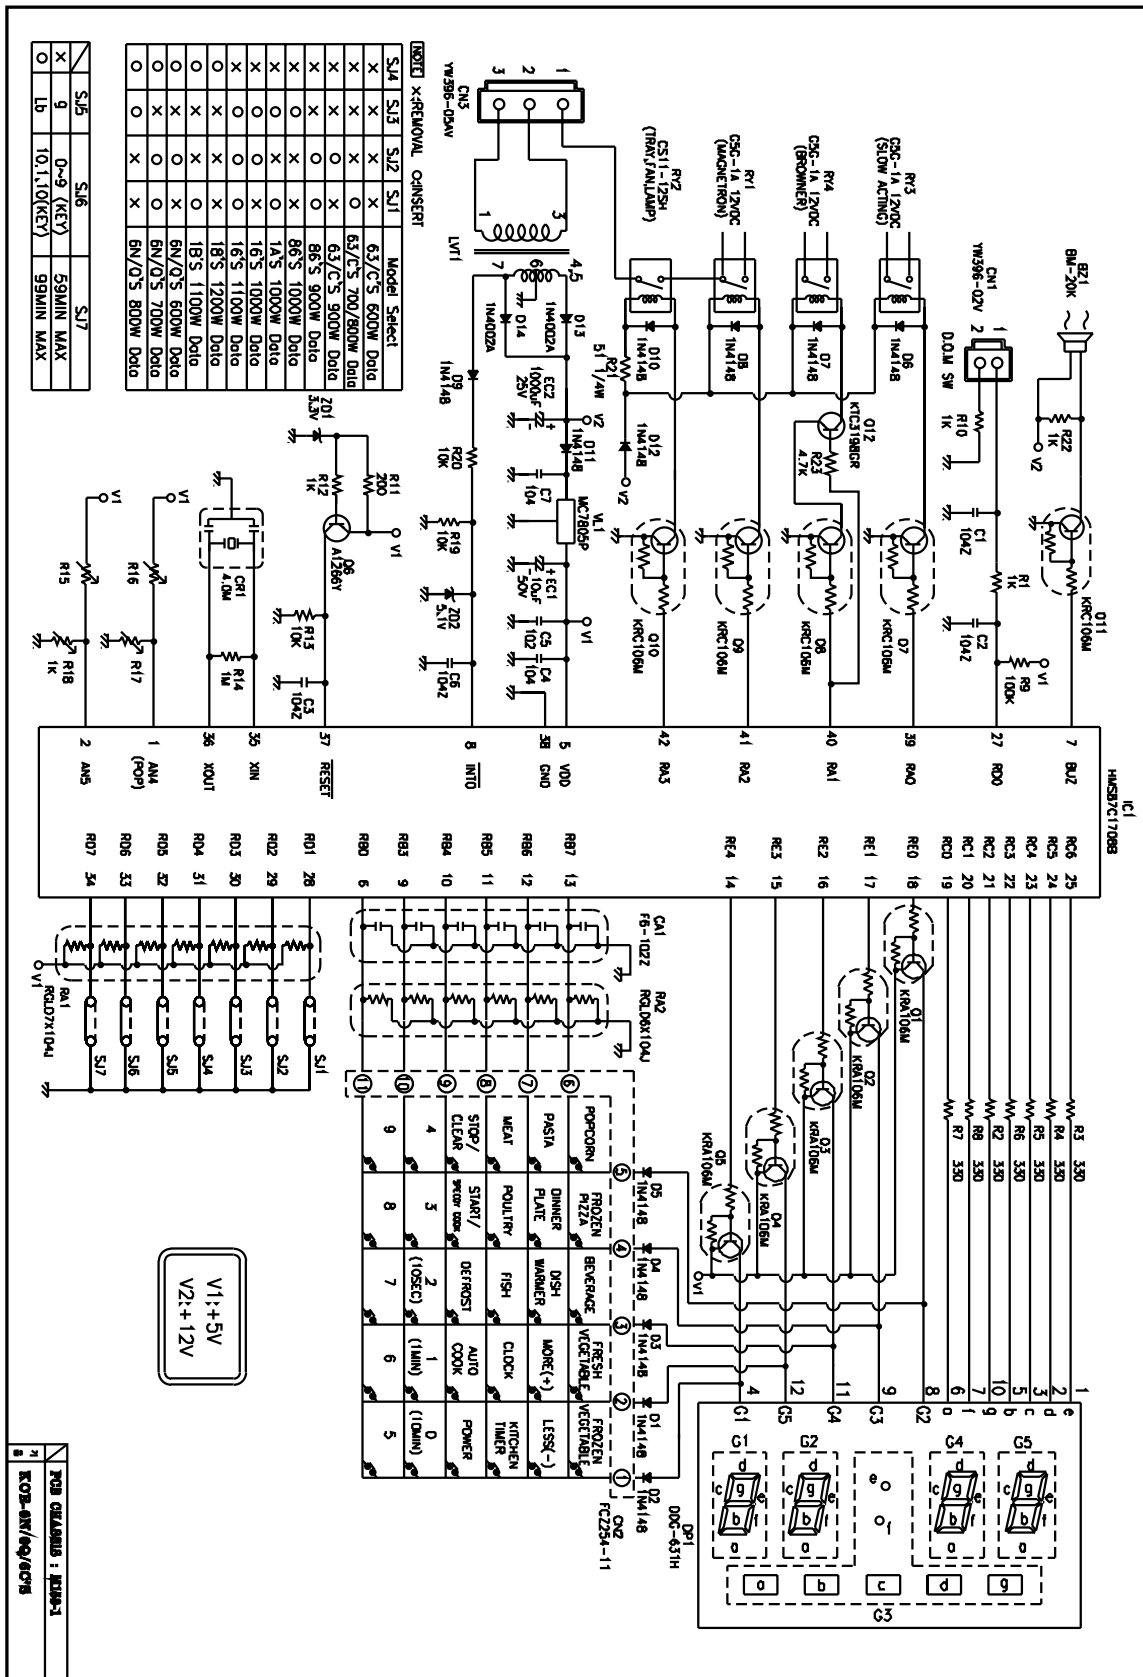

3. PCB LOCATION NO.

NO	NAME	SYMBOL	SPECIFICATION	PART CODE	Q'TY	REMARK
1	BUZZER	BZ1	BM-20K (BUJEON)	3515600100	1	
2	C ARRAY	CA1	7P(6) 1000PF M 50V 2.54MM	CN6XB-102M	1	
3	CONN WAFER	CN1	YW396-02V(YEONHO)	3519150520	1	
4	CONN FILM	CN2	FCZ 254-11(YEON HO)	441M367160	1	
5	CONN WAFER	CN3	YW396-05AV(YEONHO)	3519150510	1	
6	LED DISPLAY	DP1	LTC-4651HG(631)	DDD631H02	1	
7	C ELECTRO	EC2	25V RSS 1000MF (13X20) TP	CEXF1E102V	1	
8	IC MICOM	IC1	HMS81C1708B-HN017-1	150SR6N6Q-	1	
9	TRANS POWER	LVT1	DMR-631P	5EPU035302	1	
10	SW RELAY	RY1	G5G-1A 1C 1P DC12V	5SC0101121	1	
11	SW RELAY	RY2	CS11-12SH 1C 1P	5SC0101128	1	
12	WIRE COPPER	SJ1~2,4~5	1/0.52 TIN COATING	85801052GY	4	
13	IC REGULATOR	VL1	MC7805C(S/S)	1CPMC7805C	1	
14	RESONATOR CERA	CR1	CRT 4.00MS	5P4R00MTS-	1	
15	C ELECTRO	EC1	50V RS 10MF (5X11) TP	CEXE1H100A	1	
16	TR	Q01~5	KRA106M(AUTO)	TZRA106M--	5	
17	TR	Q06	KTA1266Y- (AUTO)(1015Y)	TZTA1266Y-	1	
18	TR	Q09~11	KRC106M(AUTO)	TZRC106M--	3	
19	R ARRAY	RA1	8P(7) 1/8 100K OHM J	RA-88X104J	1	
20	R ARRAY	RA2	7P(6) 1/8 100K OHM J	RA-87X104J	1	
21	PCB MAIN	BOARD	M158-1	3514315411	1	
22	C CERA	C01~4,6~7	HIKF 50V 0.1MF Z AXIAL	CCZF1H104Z	6	
23	C CERA	C05	50V B 1000PF K (AXIAL)	CCZB1H102K	1	
24	DIODE	D01~5,8~12	1N4148 AUTO 52MM	DZN4148---	10	
25	DIODE	D13~14	KN4004A AUTO 52MM	DZN4004A--	2	
26	WIRE COPPER	J01~10,13~14	1/0.52 TIN COATING	85801052GY	12	7.5mm
27	WIRE COPPER	J11~12	1/0.52 TIN COATING	85801052GY	2	10.0mm
28	R CARBON FILM	R01,10,12,17,18,22	1/6 1K OHM J	RD-AZ102J-	6	
29	R CARBON FILM	R02~8	1/6 330 OHM J	RD-AZ331J-	7	
30	R CARBON FILM	R09	1/6 100K OHM J	RD-AZ104J-	1	
31	R CARBON FILM	R11	1/6 200 OHM J	RD-AZ201J-	1	
32	R CARBON FILM	R13,19~20	1/6 10K OHM J	RD-AZ103J-	3	
33	R CARBON FILM	R14	1/6 1M OHM J	RD-AZ105J-	1	
34	R CARBON FILM	R21	1/4 51 OHM J	RD-4Z510J-	1	
35	DIODE ZENER	ZD1	UZ-3.3BSB(3.32-3.53V)	DZUZ3R3BSB	1	
36	DIODE ZENER	ZD2	UZ-5.1BSB(4.97-5.18V)	DZUZ5R1BSB	1	

EXPLODED VIEW AND PARTS LIST


1. DOOR ASSEMBLY

Refer to Disassembly and assembly.

2. CONTROL PANEL ASSEMBLY

Refer to Disassembly and assembly.

3. TOTAL ASSEMBLY

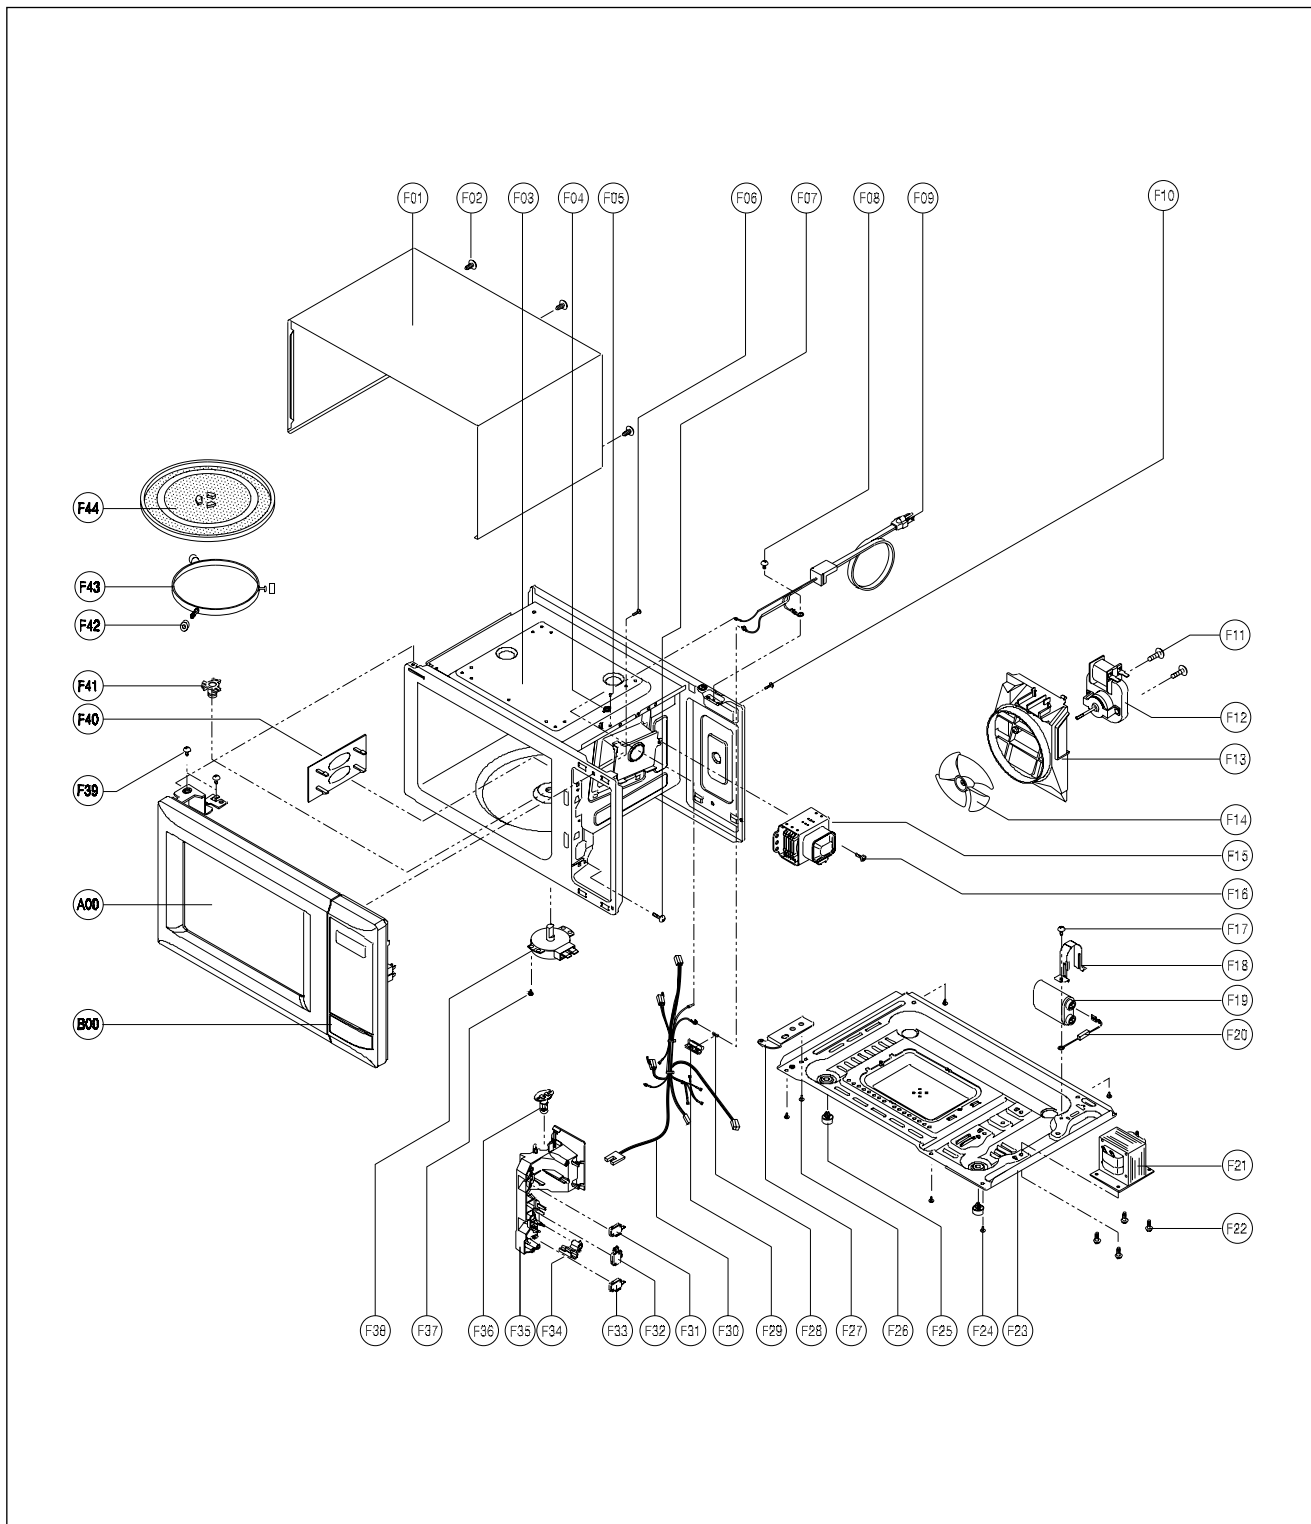

REF NO	PART CODE	PART NAME	DESCRIPTION	Q'TY
A00	3511725360	DOOR AS	KOR-6QDB3S	1
B00	PKCPSWF300	CONTROL-PANEL AS	KOR-6QDB3A27	1
F01	3510808400	CABINET AS	KOR-6NM51A	1
F02	3516004100	SPECIAL SCREW	T1 TRS LR4 POLE 4X10 MFZN	3
F03	3516117400	CAVITY AS	KOR-6NM51A	1
F04	3518902600	THERMOSTAT	OFF:90 ON:60 H #187	1
F05	7121300611	SCREW TAPPING	T2S PAN 3X6 MFZN	1
F06	7122401211	SCREW TAPPING	T2S TRS 4X12 MFZN	1
F07	7122401211	SCREW TAPPING	T2S TRS 4X12 MFZN	1
F08	7S312X40A1	SCREW SPECIAL	T1 TRS 4X10 SE MFZN	1
F09	35113NKX55	CORD POWER AS	3X18AWG 40X80 110-RTML 600W ONLY	1
F10	7122401211	SCREW TAPPING	T2S TRS 4X12 MFZN	1
F11	7121402511	SCREW TAPPING	T2S PAN 4X25 MFZN	2
F12	3963821620	MOTOR SHADED POLE	120V 60HZ MW08XA-M01	1
F13	3512517000	GUIDE WIND	PP	1
F14	3511800300	FAN	PP+30%GLASS	1
F15	3518003410	MAGNETRON	RM228JF 5CF	1
F16	3516004000	SPECIAL SCREW	T2 BOLT FLANGE 5X12 DACRO	1
F17	7S432X4081	SPECIAL SCREW	TT3 TRS 4X8 SE MFZN	1
F18	3513003200	HOLDER HV CAPACITOR	SECC T0.5	1
F19	3518301600	CAPACITOR HV	2100VAC 0.77UF #187 65MM	1
F20	3518400900	DIODE HV AS	HVR-1X-30B #187	1
F21	3518122900	TRANS HV	DWAR70A0-63T A (AL/AL)	1
F22	3516003700	SPECIAL SCREW	TT3 HEX 4X8 FLG MFZN	4
F23	3510316000	BASE	SBHG 0.7T	1
F24	7S312X40A1	SCREW SPECIAL	T1 TRS 4X10 SE MFZN	5
F25	3512100900	FOOT	PP DASF-130	2
F26	7S432X4081	SPECIAL SCREW	TT3 TRS 4X8 SE MFZN	1
F27	3515201101	STOPPER HINGE *U	SCP-1 T2.5	1
F28	4417B07600	FUSE CERA	UL/CSA MF61 15A 250V TL	1
F29	3511100800	CASE FUSE	GS12000	1
F30	3512781440	HARNESS MAIN	KOR-6NBG3A	1
F31	4415A17352	SW MICRO	VP-533A-OF SPNO #187 200G	1
F32	4415A66600	SW MICRO	VP-532A-OF SPNC #187 200G	1
F33	4415A17352	SW MICRO	VP-533A-OF SPNO #187 200G	1
F34	3513702600	LEVER LOCK	POM	1
F35	3513815810	LOCK	PP(GRAY) TB53	1
F36	3513601500	LAMP	BL 125V 25W T25 C5A H187	1
F37	7S312X40A1	SCREW SPECIAL	T1 TRS 4X10 SE MFZN	1
F38	3966821600	MOTOR SYNCRO	120V 60HZ ST-16 KX63MQAD A	1
F39	7272400811	SCREW TAPTITE	TT3 TRS 4X8 MFZN	2
F40	3511406220	COVER WAVE GUIDE	PP J640A WHITE	1
F41	3517400600	COUPLER	XAREC	1
F42	3514700710	ROLLER	TEFLON	3
F43	3512517300	GUIDE ROLLER	PP 5113MF6 A353B	1
F44	3517203600	TRAY	GLASS	1



DAEWOO ELECTRONICS CORP.
686, AHYEON-DONG MAPO-GU SEOUL, KOREA
C.P.O. BOX 8003 SEOUL, KOREA
TELEX: DWELEC K28177-8
CABLE: "DAEWOOELEC"

PRINTED DATE: Feb. 2008

S/M NO. :