


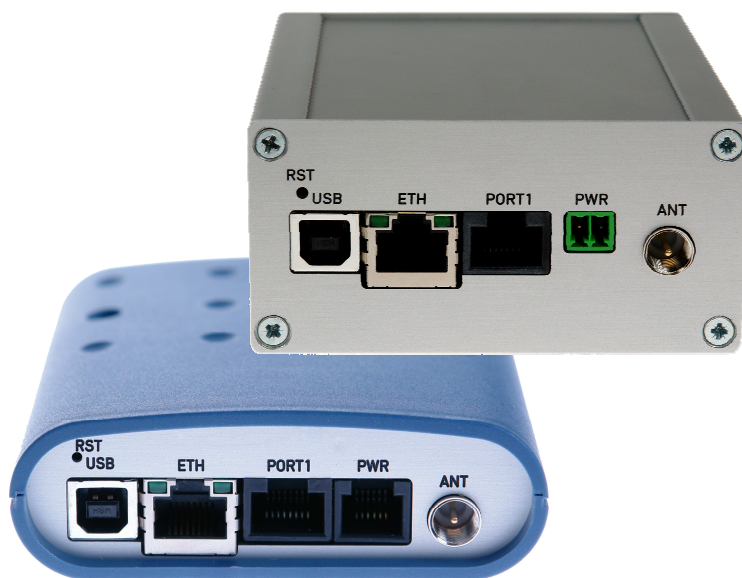

EDGE router **ER 75i,**
ER 75i DUO, ER 75i SL
and **ER 75i DUO SL**
USER'S GUIDE



Contents

1.	Safety instructions	5
2.	Description of the ER 75i, ER 75i DUO, ER 75i SL and ER 75i DUO SL routers	6
2.1.	Introduction	6
2.2.	Delivery Identification	7
2.3.	Antenna Connection	8
2.4.	SIM Card Reader	9
2.5.	Power Supply	9
2.6.	Technical parameters	9
2.7.	Description of individual components of the router	10
2.7.1.	GSM/GPRS/EDGE module	10
2.7.2.	Control microcomputer	10
2.8.	User interfaces (Connectors)	11
2.8.1.	Connection of the PWR Supply Connector	13
2.8.2.	Connection of the ETH Connector	14
2.8.3.	Connection of the Connector USB	14
2.8.4.	Connection of the optional connector PORT1	15
2.8.4.1.	Expansion port RS232	15
2.8.4.2.	Expansion port RS485	16
2.8.4.3.	Expansion port RS422	17
2.8.4.4.	Expansion port M-BUSD	19
2.8.4.5.	Expansion port CNT	20
2.9.	Technical specification of optional PORT1	21
2.10.	Modem status indication	24
2.11.	Putting into operation	24
2.12.	Mechanical external dimensions and mounting recommendations	25
3.	Expansion port mounting	28
3.1.	Expansion port mounting for ER 75i and ER 75i DUO router	28
3.2.	Expansion port mounting for ER 75i SL and ER 75i DUO SL router	30
4.	Configuration setting over web browser	32
4.1.	Network Status	33
4.2.	DHCP Status	34
4.3.	IPsec status	34
4.4.	GPRS Status	34
4.5.	DynDNS status	35
4.6.	System Log	35
4.7.	LAN Configuration	36
4.8.	VRRP Configuration	40
4.9.	GPRS Configuration	41
4.10.	Firewall Configuration	45
4.11.	NAT Configuration	47
4.12.	OpenVPN Tunnel Configuration	50
4.13.	Ipsec Tunnel Configuration	53
4.14.	GRE Tunnel Configuration	55
4.15.	L2TP tunnel Configuration	57
4.16.	DynDNS Client Configuration	59
4.17.	NTP Client Configuration	60
4.18.	SNMP Configuration	60
4.19.	SMTP Configuration	62

4.20.	SMS Configuration	63
4.21.	Expansion Port Configuration	70
4.22.	Start-up script	72
4.22.1.	IO program	72
4.23.	Up/Down script	74
4.24.	Automatic update configuration	74
4.25.	Change profile	75
4.26.	Change password	75
4.27.	Set real time clock	76
4.28.	Set SMS service center address	76
4.29.	Unlock SIM Card	76
4.30.	Send SMS	77
4.31.	Backup Configuration	77
4.32.	Restore Configuration	77
4.33.	Update firmware	78
4.34.	Reboot	78
4.35.	Default settings	79
4.35.1.	LAN Configuration	79
4.35.2.	VRRP Configuration	80
4.35.3.	Firewall Configuration	80
4.35.4.	GPRS Configuration	81
4.35.5.	NAT Configuration	82
4.35.6.	OpenVPN Tunnel Configuration	82
4.35.7.	Ipssec Tunnel Configuration	84
4.35.8.	GRE Tunnel Configuration	85
4.35.9.	L2TP Configuration	85
4.35.10.	DynDNS Configuration	86
4.35.11.	NTP Configuration	86
4.35.12.	SNMP Configuration	86
4.35.13.	SMTP Configuration	87
4.35.14.	SMS Configuration	87
4.35.15.	Expansion Port Configuration	88
4.35.16.	Startup Script	88
4.35.17.	Up/Down Script	89
4.35.18.	Automatic Update	89
5.	Configuration setting over Telnet	90
6.	Driver installation	91
7.	Control by AT commands	93
8.	Possible problems	93
9.	Reference	93
10.	FAQ	93
11.	Customer's care	95
12.	Product disposal information	96
13.	Guarantee Claim Guidelines	97
14.	Guarantee certificate	100

Symbols used

-  Danger – important notice, which may have an influence on the user's safety or the function of the device.
-  Attention – notice of possible problems, which can arise in specific cases.
-  Information, notice – information, which contains useful advice or special interest.

GPL license

Source codes under GPL license are available free of charge by sending email to info@conel.cz.



**Declared quality system
ISO 9001**

Conel s.r.o., Sokolska 71, 562 04 Usti nad Orlici, Czech Republic
Issue in CZ, 5/16/2011





1. Safety instructions

Please, observe the following instructions:

- The communication module must be used in compliance with any and all applicable international and national laws and in compliance with any special restrictions regulating the utilization of the communication module in prescribed applications and environments.
- To prevent possible injury to health and damage to appliances and to ensure that all the relevant provisions have been complied with, use only the original accessories. Unauthorized modifications or utilization of accessories that have not been approved may result in damage to the communication module and in a breach of applicable regulations. Unauthorized modifications or utilization of accessories that have not been approved may result in the termination of the validity of the guarantee.
- The communication module must not be opened. Only the replacement of the SIM card is permitted.



- **Caution!** The SIM card could be swallowed by small children.
- Voltage at the feed connector of the communication module must not be exceeded.
- Do not expose the communication module to extreme ambient conditions. Protect the communication module against dust, moisture and high temperature.
- It is recommended that the communication module should not be used at petrol stations. We remind the users of the duty to observe the restrictions concerning the utilization of radio devices at petrol stations, in chemical plants, or in the course of blasting works in which explosives are used.
- Switch off the communication module when travelling by plane. Utilization of the communication module in a plane may endanger the operation of the plane or interfere with the mobile telephone network, and may be unlawful. Failure to observe these instructions may result in the suspension or cancellation of telephone services for the respective client, or, it may result in legal sanctions; it may also result in both eventualities.
- When using the communication module in close proximity of personal medical devices, such as cardiac pacemakers or hearing aids, you must proceed with heightened caution.
- If it is in the proximity of TV sets, radio receivers and personal computers, the telephone may cause interference.

2. Description of the ER 75i, ER 75i DUO, ER 75i SL and ER 75i DUO SL routers

2.1. Introduction

EDGE router is a compact electronic device based on the module which enables data transfers using GSM, GPRS and EDGE technologies.

Primarily, the router expands the capabilities of the module by the option of connecting more PCs by means of the built-in Ethernet interface. In addition, the firmware of the router provides automatic establishment and maintenance of GPRS connection. By means of integration of a DHCP server it provides the users with simple installation and Internet access.

In addition, the router is equipped with a USB 2.0 Full Speed interface which is designed only for connection to a PC with Windows 2000, Windows XP or Windows Vista operating system. For operation it is sufficient to install drivers from the supplied CD to the PC.

By consumer request it is possible to equip the router with a modulus port PORT1 and extend the functionality of EDGE router about RS232, RS485/RS422, M-BUSD or CNT (I/O module).

The EDGE router has four versions. The first version is the basic ER 75i, the second version is the ER 75i DUO with two SIM cards, third version is the ER 75i SL in an aluminum box and the last version is the ER 75i DUO SL with two SIM cards in an aluminum box.







Examples of Possible Applications

- mobile office
- image transmission
- security system
- telematics
- telemetry
- remote monitoring
- monitoring of traffic information
- vending and dispatcher machines




2.2. Delivery Identification

Trade name	Type name	Other
ER 75i	ER-75i	Version with 1 SIM
ER 75i DUO	ER-75i-DUO	Version with 2 SIM
ER 75i SL	ER-75i-SL	Version in aluminum box with 1 SIM
ER 75i DUO SL	ER-75i-DUO-SL	Version in aluminum box with 2 SIM

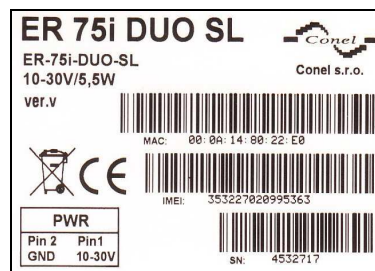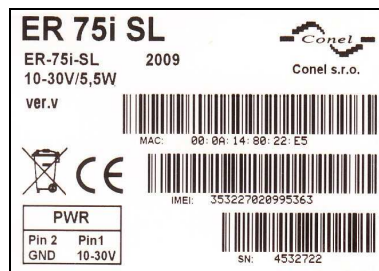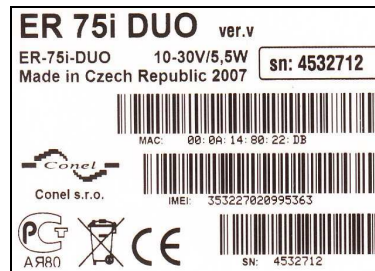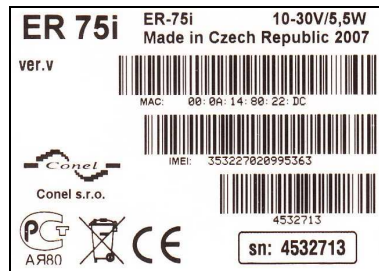

Specimen label of optional PORT1:

Trade name of PORT1	Type name of PORT1	Power supply
Expansion port RS232	XC-232	Internal power supply
Expansion port RS485-RS422	XC-485-422	Internal/external power supply
Expansion port M-BUSD	XC-MBUSD	External power supply
Expansion port CNT	XC-CNT	Internal power supply

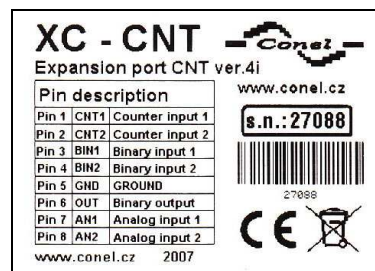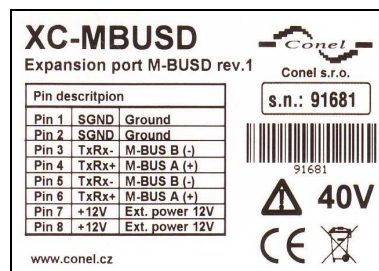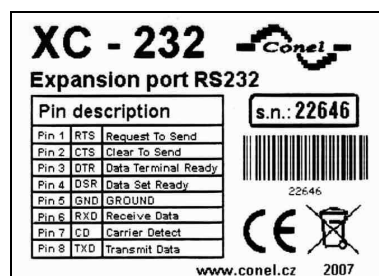

-  Basic delivered set of router includes:
- EDGE router ER 75i or ER 75i DUO or ER 75i SL or ER 75i DUO SL,
 - power supply,
 - crossover UTP cable,
 - external magnetic antenna,
 - installation CD containing instructions and drives,
 - plastic clips for the DIN bar with fixing screws.
-  In addition to the basic it is possible to deliver:
- expansion port RS232, RS485/RS422, M-BUSD or CNT (separation columns are in distribution),
 - USB A-B cable.
-  Router is standardly designed for:
- mounting to a panel using through holes (only version ER 75i and ER 75i DUO),
 - or possibility to be put on a worktop,
 - mounting onto the DIN rail by the plastic clips, which are included.

2.3. Antenna Connection

The whip antenna is connected to the router using an FME on the back panel.

External whip antenna:



2.4. SIM Card Reader

The SIM card reader for 3 V and 1.8 V SIM cards is located on the front panel of the modem. For putting the modem into operation it is necessary to insert an activated SIM card with unblocked PIN in the reader.



1. Make sure that the modem is not being powered.
2. Press the small yellow button next to the reader to eject the reader holder.
3. Insert the SIM card in the reader holder and slide it in the reader.

2.5. Power Supply

The router requires +10 V DC to +30 V DC supply. Protection against reversal of polarity without signaling is built into the modem.

The power consumption during receiving is 1 W. The peak power consumption during data sending is 5,5 W. For correct operation it is necessary that the power source is able to supply a peak current of 500 mA.

2.6. Technical parameters

GSM module		MC75i
Complies with standards		EN 301 511, V9.0.2 EN ETSI 301 489-1 V1.9.1 EN 60950-1:06 ed.2
Frequency bands		EGSM850, EGSM900, GSM1800 and GSM1900
Transmit power		Class 4 (2 W) for EGSM850 Class 4 (2 W) for EGSM900 Class 1 (1 W) for GSM1800 Class 1 (1 W) for GSM1900
Temperature range	Operation Storage	-30 °C to +60 °C -40 °C to +85 °C
Protection rating	Freely In switch board	IP20 IP56
Supply voltage		+10 až +30 V DC
Consumption	Reception Transmission	1 W 5,5 W
Dimensions	ER 75i, ER 75i DUO	30x90x102 mm (attachment to DIN rail 35mm)
	ER 75i SL, ER 75i DUO SL	42x86x94 mm (attachment to DIN rail 35mm)
Weight		140 g
Antenna connector		FME – 50 Ohm
User interface	ETH USB PORT1	Ethernet – connector RJ45 (10/100 Mbit/s) USB 2.0 – connector USB-B Optional – connector RJ45 (150 b/s - - 230400 b/s), RS232, RS485/RS422, M-BUSD, CNT

2.7. Description of individual components of the router

2.7.1. GSM/GPRS/EDGE module

The MC75i OEM module is used for GSM network wireless communication. It is integrated into the printed circuit board. The slide-out SIM card reader is accessible from the front panel. The FME antenna connector is accessible from the back panel.

The router is equipped with a USB 2.0 Full Speed interface which is brought to the USB-B connector marked USB. The MC75i module is connected to the control computer via the RS-232 high-speed serial interface.

GSM/GPRS/EDGE module

- Communicates in four GSM bands (850MHz, 900MHz, 1800MHz, and 1900MHz).
- In the GPRS mode it is able to transmit in three „Time Slot“ and receive in two (GPRS multi-slot class 10 – the maximum bit rate of reception is 42.8 kb/s) or transmit in one „Time Slot“ and receive in four (GPRS multi-slot class 12 – the maximum bit rate of reception is 85.6 kb/s).
- In the EDGE mode it is able to transmit in three „Time Slot“ and receive in two (EDGE multi-slot class 10 – the maximum bit rate of reception is 118.4 kb/s) or transmit in one „Time Slot“ and receive in four (GPRS multi-slot class 12 – the maximum bit rate of reception is 236.8 kb/s).
- Supports coding schemes CS1 to CS4 and MCS1 to MCS9.



Beware! The transmitting and receiving in timeslots depends on the operator networks possibilities.

2.7.2. Control microcomputer

The core of the router is a 32-bit microprocessor with 16 MB RAM, 4 MB FLASH EEPROM, serial interface RS232 and an Ethernet interface 10/100 Mbit/s. The microcomputer is connected to the MC75i OEM module through the serial interface and controls the communication via GSM/GPRS. Towards to the user it is connected on the Ethernet interface.

The software is built on the uClinux operating system.

The router supports services such as DHCP, NAT, GRE, IPSec tunnels, etc.

The router settings are saved in the FLASH EEPROM memory. All configuration of the modem can be done through a web interface (HTTP) which is security password controlled.




Actual firmware version: 2.1.1 (22.4.2011)

2.8. User interfaces (Connectors)


On the back panel of the router the following connectors are located:

- one RJ12 connector or MRT9 (PWR) – for connection of the power supply adapter,
- one RJ45 connector (ETH) – for connection into the local computer network,
- one RJ45 connector (optional PORT1) – for connection of the local any arrangement over RS232, RS485/422, M-BUSD or CNT,
- one FME connector (ANT) – for connection of the antenna,
- one USB-B connector (USB) – for connection of the router to the PC.


Rear panel ER 75i and ER 75i DUO

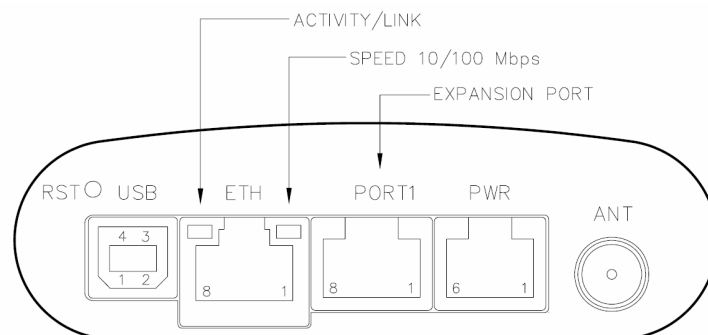


Front panel ER 75i

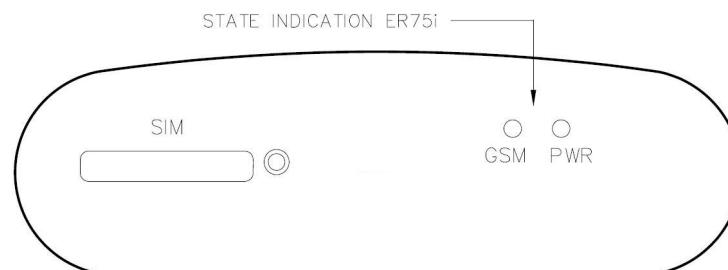


Front panel ER 75i DUO

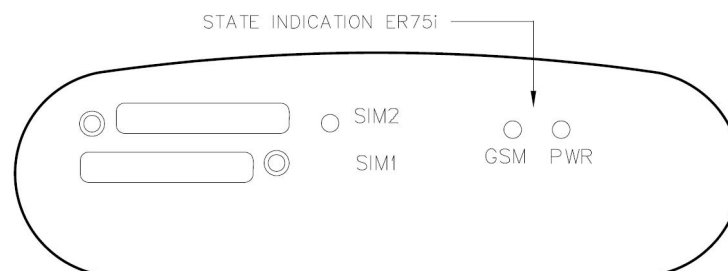


Rear panel ER 75i SL and ER 75i DUO SL

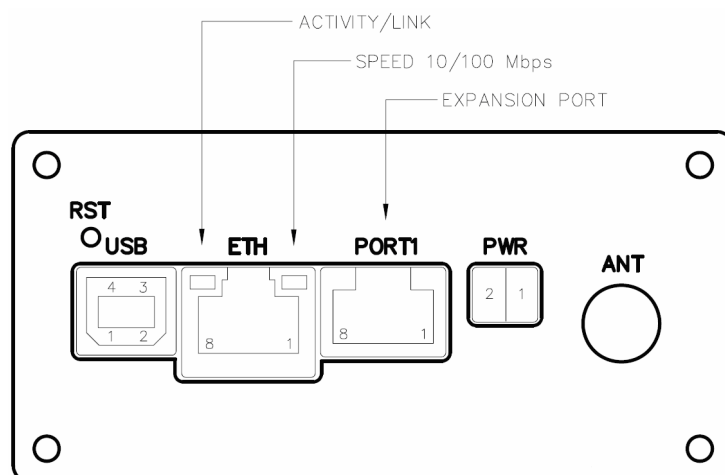

Front panel ER 75i SL

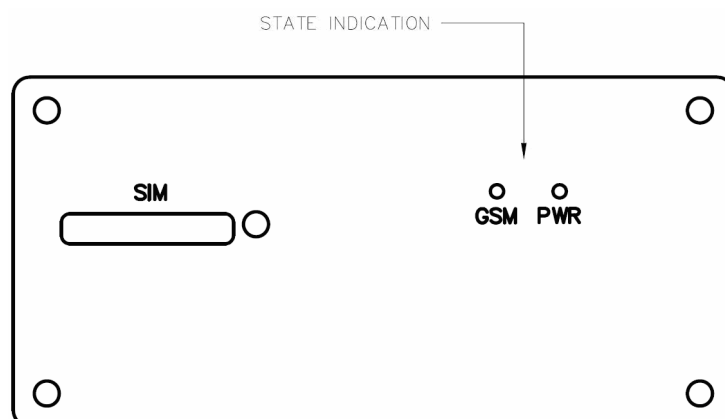

Front panel ER 75i DUO SL

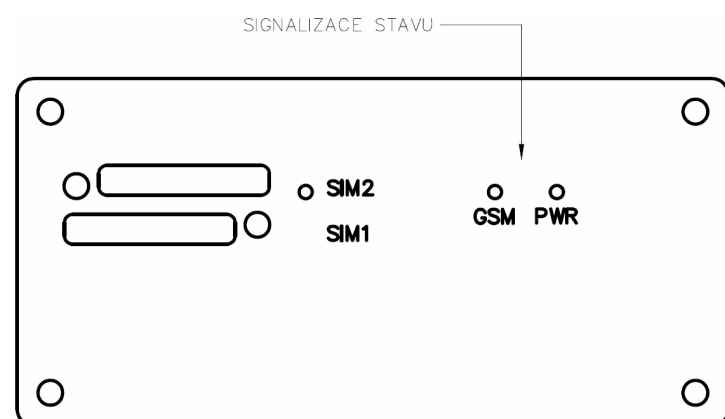


2.8.1. Connection of the PWR Supply Connector

- Panel socket RJ12.

Pin number	Signal mark	Description
1	+UN	Positive pole of DC supply voltage (+10 to +30 VDC)
2	NC	Signal not connected
3	NC	Signal not connected
4	+UN	Positive pole of DC supply voltage (+10 to +30 VDC)
5	GND	Negative pole of DC supply voltage
6	GND	Negative pole of DC supply voltage



Circuit example:

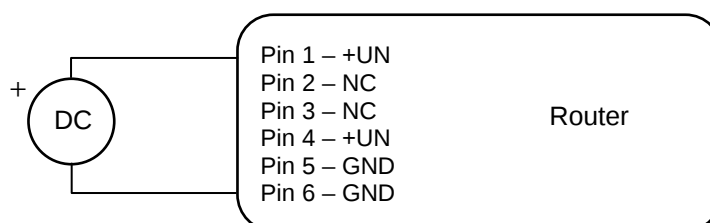


- Panel socket MRT9.

Pin number	Signal mark	Description
1	+UN	Positive pole of DC supply voltage (+10 to +30 VDC)
2	GND	Negative pole of DC supply voltage



Circuit example:

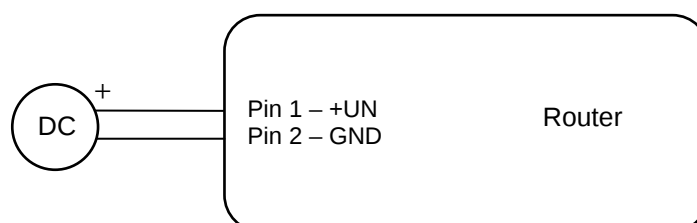

The positive pole +UN is marked by a red socket on the power supply.

2.8.2. Connection of the ETH Connector


Panel socket RJ45.

Pin number	Signal mark	Description	Data flow direction
1	TXD+	Transmit Data – positive pole	Input/Output
2	TXD-	Transmit Data – negative pole	Input/Output
3	RXD+	Receive Data – positive pole	Input/Output
4	---	---	
5	---	---	
6	RXD-	Receive Data – negative pole	Input/Output
7	---	---	
8	---	---	



ATTENTION! Port ETH is not POE (Power Over Ethernet) compatible!

The ETH router connection:

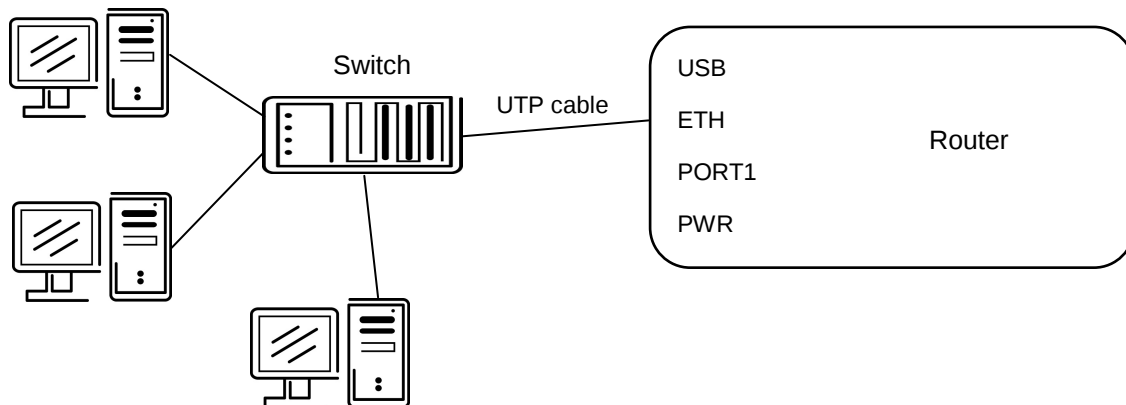


2.8.3. Connection of the Connector USB

Panel socket USB-B.

Pin number	Signal mark	Description	Data flow direction
1	VCC	Positive pole of 5V DC supply voltage	
2	USB data -	USB data signal – negative pole	Input/Output
3	USB data +	USB data signal – positive pole	Input/Output
4	GND	Negative pole of DC supply voltage	



The USB router connection:

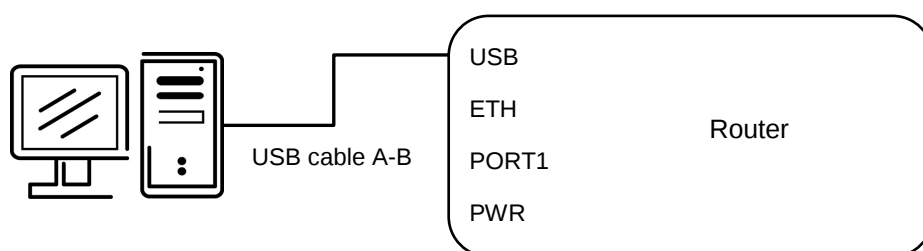

2.8.4. Connection of the optional connector PORT1

Panel socket RJ45.


2.8.4.1. Expansion port RS232

(RS232 – DCE – Data Communication Equipment)


Pin No.	Signal name	Description	Data flow direction
1	RTS	Request To Send	Input
2	CTS	Clear To Send	Output
3	DTR	Data Terminal Ready	Input
4	DSR	Data Set Ready – connected to +3,3 V over 330 Ohm resistor	Output
5	GND	GROUND – signal ground	
6	RXD	Receive Data	Output
7	CD	Carrier Detect	Output
8	TXD	Transmit Data	Input



Circuit example:

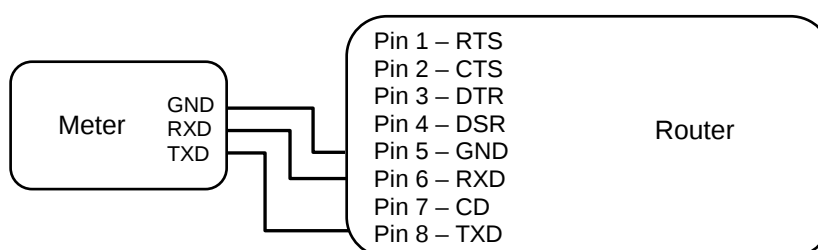


The router connection to the PC:

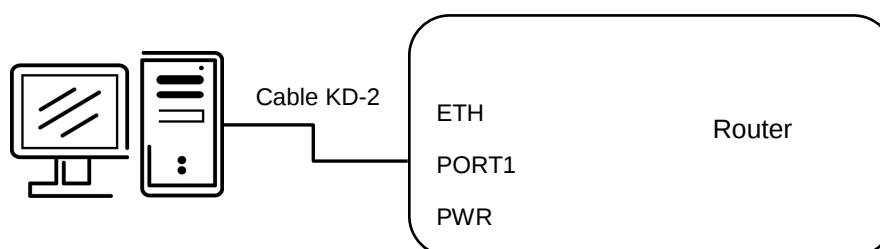

- cable KD2 is connected to serial port PC (example COM1)



The router connection to equipment with full-value RS232 interface:

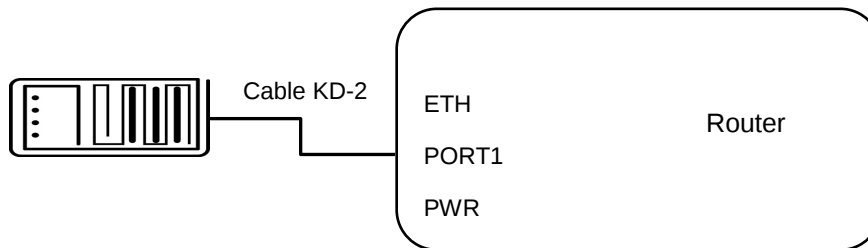

2.8.4.2. Expansion port RS485


Pin No.	Signal name	Description	Data flow direction
1	SGND	Signal and power supply ground	
2	SGND	Signal and power supply ground	
3	TxRx-	RS485 B (-)	Input/Output
4	TxRx+	RS485 A (+)	Input/Output
5	TxRx-	RS485 B (-)	Input/Output
6	TxRx+	RS485 A (+)	Input/Output
7	+12V EXT	External power supply	
8	+12V EXT	External power supply	



ATTENTION! Power supply is selected on the expansion port RS485 by help of a jumper, 2.9. If galvanic separation is required the converter must have an external power supply.




Circuit example of the equipment with a router with data length less than 10 m:

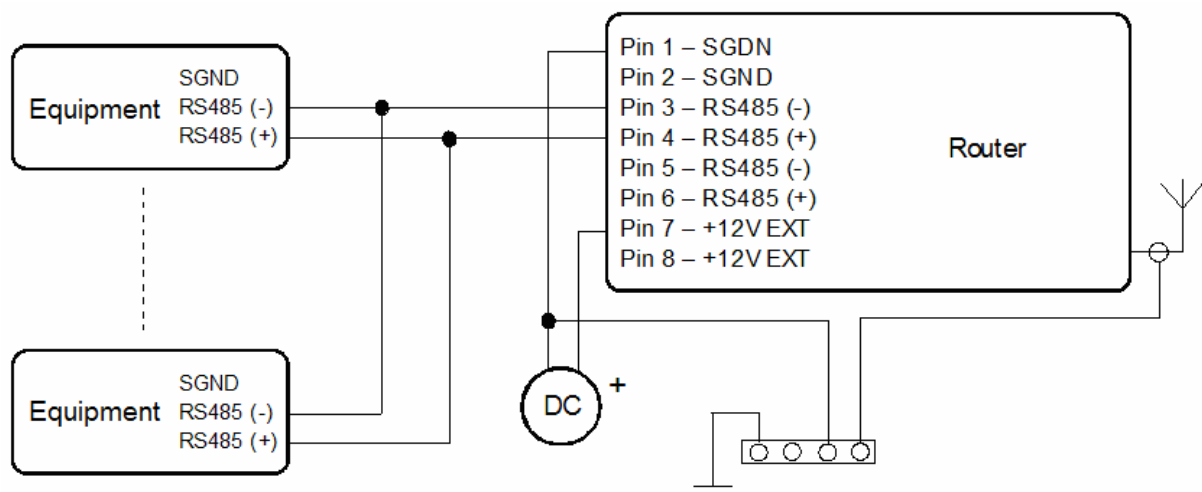



Circuit example of the equipment with a router with data length more than 10 m:

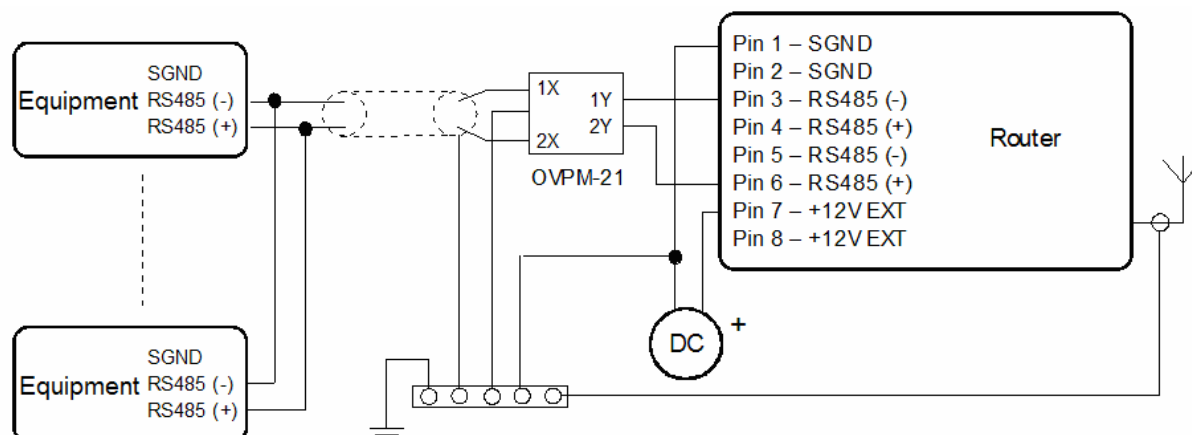

At RS485 data cable more than 10m it is need to use overvoltage protection on the router side!

2.8.4.3. Expansion port RS422


Pin No.	Signal name	Description	Data flow direction
1	SGND	Signal and power supply ground	
2	SGND	Signal and power supply ground	
3	RxD-	Receive Data (-)	Output
4	RxD+	Receive Data (+)	Output
5	TxD-	Transmit Data (-)	Input
6	TxD+	Transmit Data (+)	Input
7	+12V EXT	External power supply	
8	+12V EXT	External power supply	




ATTENTION! Power supply is selected on the expansion port RS422 by help of a jumper, 2.9. If galvanic separation is required the converter must have an external power supply.



Circuit example of the equipment with router with data length less than 10 m:

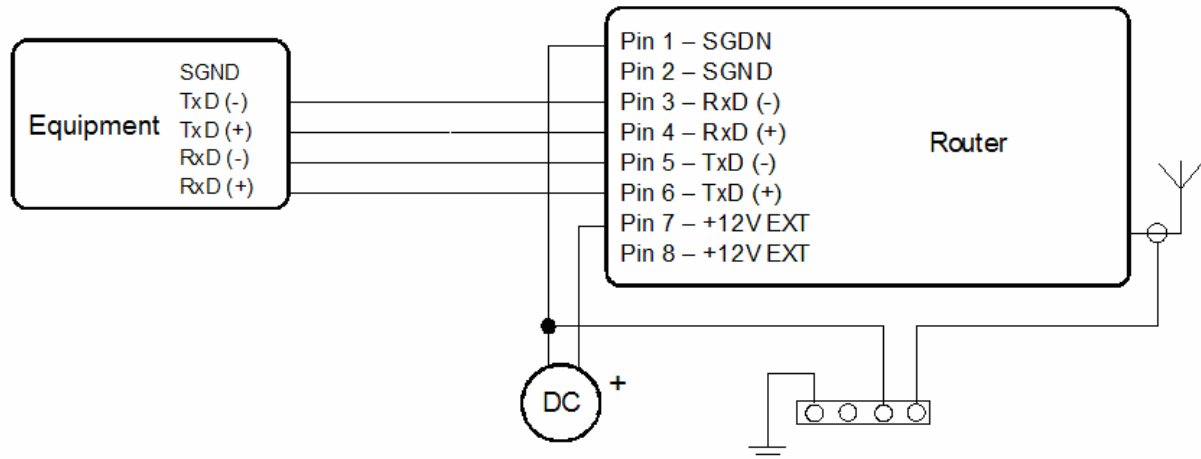

Circuit example of the equipment with a router with data length more than 10 m:

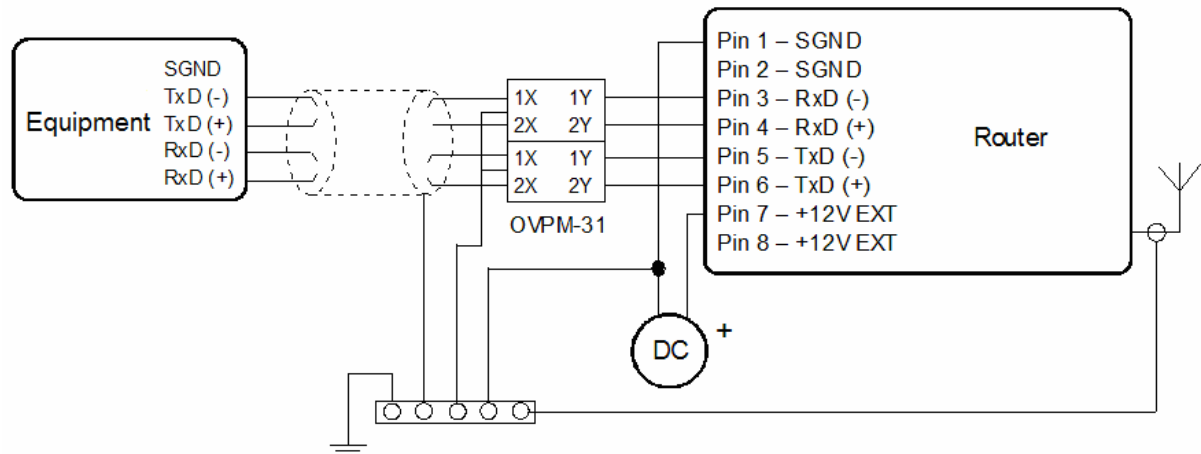

At RS422 data cable more than 10m it is need to use overvoltage protection on the router side!

2.8.4.4. Expansion port M-BUSD

Pin No.	Signal name	Description	Data flow direction
1	SGND	Signal and power supply ground	
2	SGND	Signal and power supply ground	
3	TxRx-	M-BUS B (-)	Input/Output
4	TxRx+	M-BUS A (+)	Input/Output
5	TxRx-	M-BUS B (-)	Input/Output
6	TxRx+	M-BUS A (+)	Input/Output
7	+12V EXT	External power supply	
8	+12V EXT	External power supply	




ATTENTION! External supply is for converter M-BUSD!


If galvanic separation is required the converter must have external power supply.



Circuit example of the equipment with a router with data length less than 10 m:

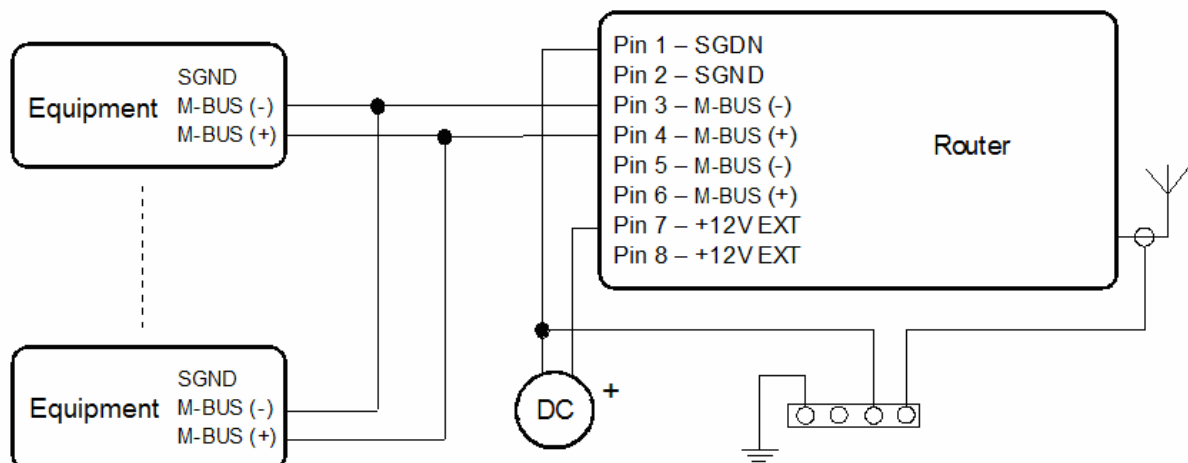

Circuit example of the equipment with a router with data length more than 10 m:

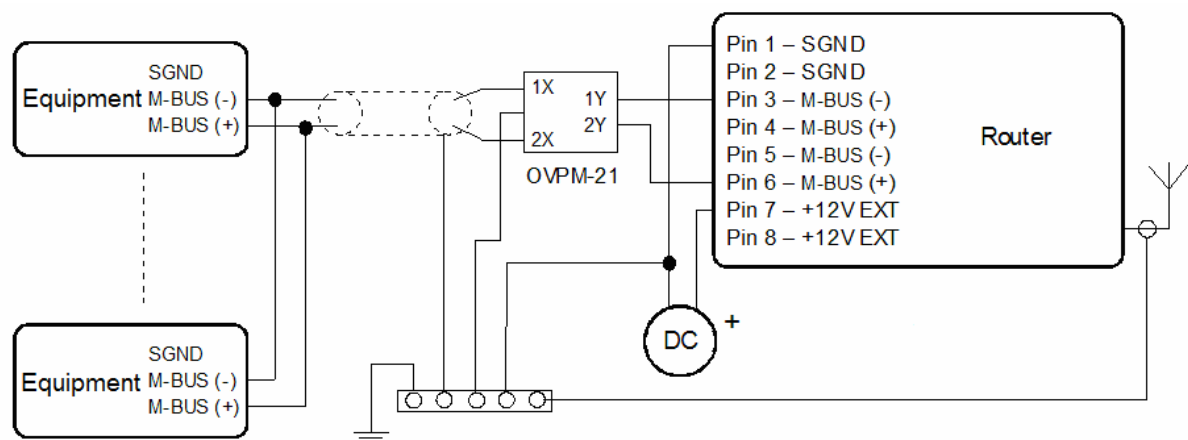

If an M-BUS data cable more than 10m it is need to use overvoltage protection on the router side!


2.8.4.5. Expansion port CNT

Pin number	Signal mark	Description	Data flow direction
1	BIN1/CNT1	Binary input/counter input	Input
2	BIN2/CNT2	Binary input/counter input	Input
3	BIN3	Binary input	Input
4	BIN4	Binary input	Input
5	GND	Signal ground	
6	OUT1	Binary output (open collector)	Output
7	AN1	Analogue input	Input
8	AN2	Analogue input	Input

The user interface CNT is for monitoring and processing of analogue and binary signals and to control (settings) of binary signals. Available are 2 counter and 2 binary inputs or 4 binary inputs, 2 analogue inputs and 1 binary output. The setting of binaries and counter inputs by the help of firmware in which the single inputs and output is defined. Binary output is off in default configuration(it is not switched to ground).



Typical connection of a router measuring circuits:

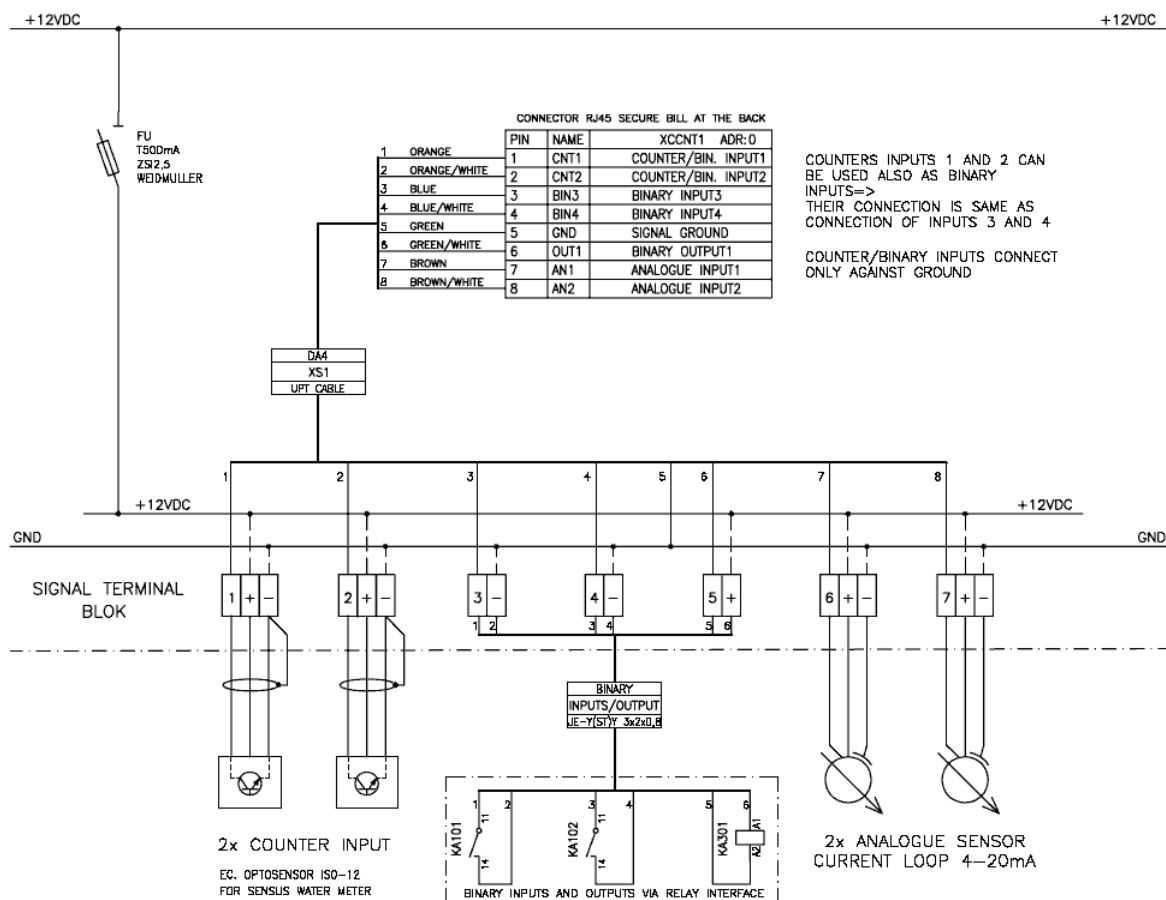

The router does not support to modify any signals of the CNT port, for example logical functions.

2.9. Technical specification of optional PORT1

- Expansion port RS232

Expansion port RS232		
Power supply	Internal	
Environment	Operating temperature	-20 .. +55 C
	Storage temperature	-20 .. +85 C
Standards	Emission	EN 55022/B
	Immunity	ETS 300 342
	Safety	EN 60950
RS232 specifications (EN 1434)	Max. operating bus current	15 mA
	Max. bit rate	230400 bps
	Max. overvoltage	±30 V
	Max. total cable length (300Bd, 200nF/km)	20 m


- Expansion port RS485

Expansion port RS485		RS485	RS422
Power supply	External	+10 .. +30 V	
	Internal		
	Supply power	Max. 1 W	
	Supply current	Max. 4 mA	
Environment	Operating temperature	-20 .. +55 C	
	Storage temperature	-20 .. +85 C	
Standards	Emission	EN 55022/B	
	Immunity	ETS 300 342	
	Safety	EN 60950	
RS485 specifications (EN 1434)	Max. devices (each 1,5 mA)	256	
	Max. bit rate	38400 bps	
	Short circuit strength	Permanent	
	Max. total cable length (300Bd, 200nF/km)	1200 m	


External or internal power supply of module Expansion port RS485/RS422 can be made by wiring jumpers J2 and J3 on this module. If external power supply of the module is required, jumpers J2 and J3 must be connected to pins 2 - 3. Internal power supply is made by connecting pins 1 - 2 with jumpers J2 and J3.

Interface behavior of module Expansion port RS485/RS422 can be made by wiring jumpers J4, J5 and J6 on this module. If RS485 is required, jumpers J4 and J5 must be connected and jumper J6 disconnected. If RS422 is required, jumpers J4 and J5 must be disconnected and jumper J6 connected.


Jumper placement can be seen in the picture below (module Expansion port RS485/RS422 from TOP layer). We recommend that internal power supply is only chosen in the event that it is not possible to ensure external power supply. If internal power supply is chosen, converter RS485/RS422 is not galvanic separated.

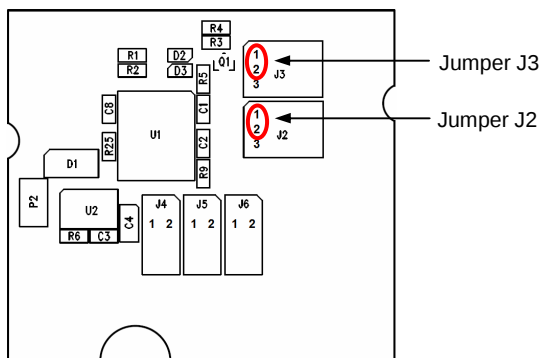

The jumper circuitry for internal supply

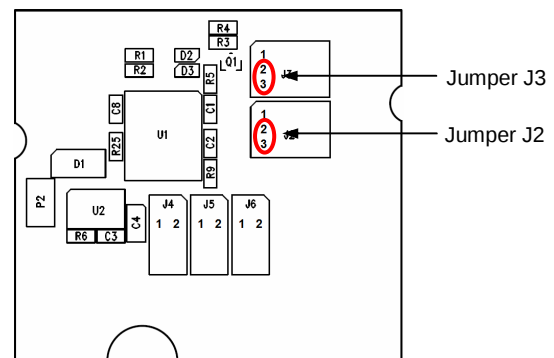


The jumper circuitry for external supply

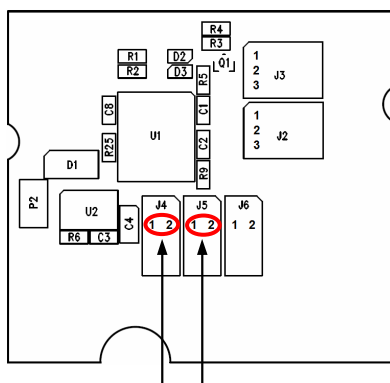

Jumper J4 a J5

The jumper circuitry for RS485

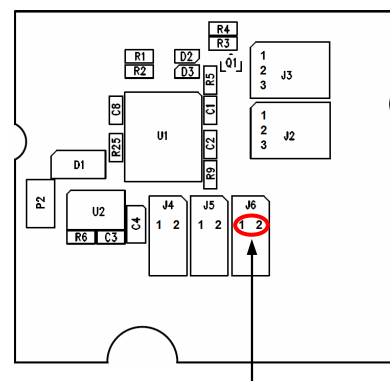

Jumper J6

The jumper circuitry for RS422


- Expansion port M-BUSD

Name of product	Expansion port M-BUSD	
Power supply	External	+10 .. +30 V
	Supply power	Max. 30 W
Environment	Operating temperature	-20 .. +55 C
	Storage temperature	-20 .. +85 C
Standards	Emission	EN 55022/B
	Immunity	ETS 300 342
	Safety	EN 60950
M-BUS specifications (EN 1434)	Max. devices (each 1,5 mA)	30
	Max. operating bus current	60 mA
	Overload detection	100 mA
	Short circuit strength	Permanent
	Bus voltage mark	36 .. 43 V
	Bus voltage space	24 .. 31 V
	Max. total cable length (300Bd, 200nF/km)	1000 m

- Expansion port CNT

Name of product	Expansion port CNT	
Power supply	Internal	
	Sleep	100 μ A (counter is functional)
	Operation	2 mA
Environment	Operating temperature	-20 .. +55 C
	Storage temperature	-20 .. +85 C
Standards	Emission	EN 55022/B
	Immunity	ETS 300 342
	Safety	EN 60950
	Isolation	EN 60747
Inputs/Outputs	2x counter	Max. 100 Hz, Ratio max. 1:10
	2x analogue inputs	0 .. 20 mA, R_{in} 100 Ohms
	2x binary inputs	reed contact is J4 20mA is not J4 8 μ A
	1x output (open collector)	100 mA
Others	Voltage resistance	Permanent
	Sleeping mode	Controlled

If active level is set as log. 1, electric current can be selected with jumper. When jumper J4(viz. picture) is mounted on pins, electric current value is 20 mA. When jumper J4 is not mounted, electric value is 8 μ A. If current value is 20mA, CNT has higher consumption, also it has higher resistance to industrial noise.

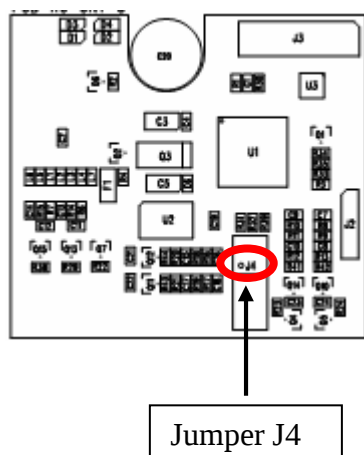

2.10. Modem status indication

On the front and back panel of the modem there are altogether four LED indicators, which inform on the modem status.



Panel	Color	Description	Description
Front	Green	PWR	Blinking 1:9 join GPRS connection Blinking 9:1 establishing of GPRS connection Permanently on starting of the ER 75i
Front	Red	GSM	BlinkingGSM/GPRS communication in progress
Front	Yellow	SIM	On active the second SIM card Off non active the second SIM card
Back	Green	–	On selected 100 Mbit/s Off selected 10 Mbit/s
Back	Green	–	On..... the network cable is connected Blinking data transmission Off the network cable is not connected

2.11. Putting into operation

Before putting the ER 75i, ER 75i DUO, ER 75i SL or ER 75i DUO SL router into operation it is necessary to connect all components needed for the operation of your applications and the SIM card must be inserted (the modem is off). The SIM card must support the GPRS.

The modem is put into operation by connection of the power supply to the modem. In the default setting the modem starts to login automatically to the preset APN. The behavior of the modem can be modified by means of the web interface which is described in the following chapter.

2.12. Mechanical external dimensions and mounting recommendations

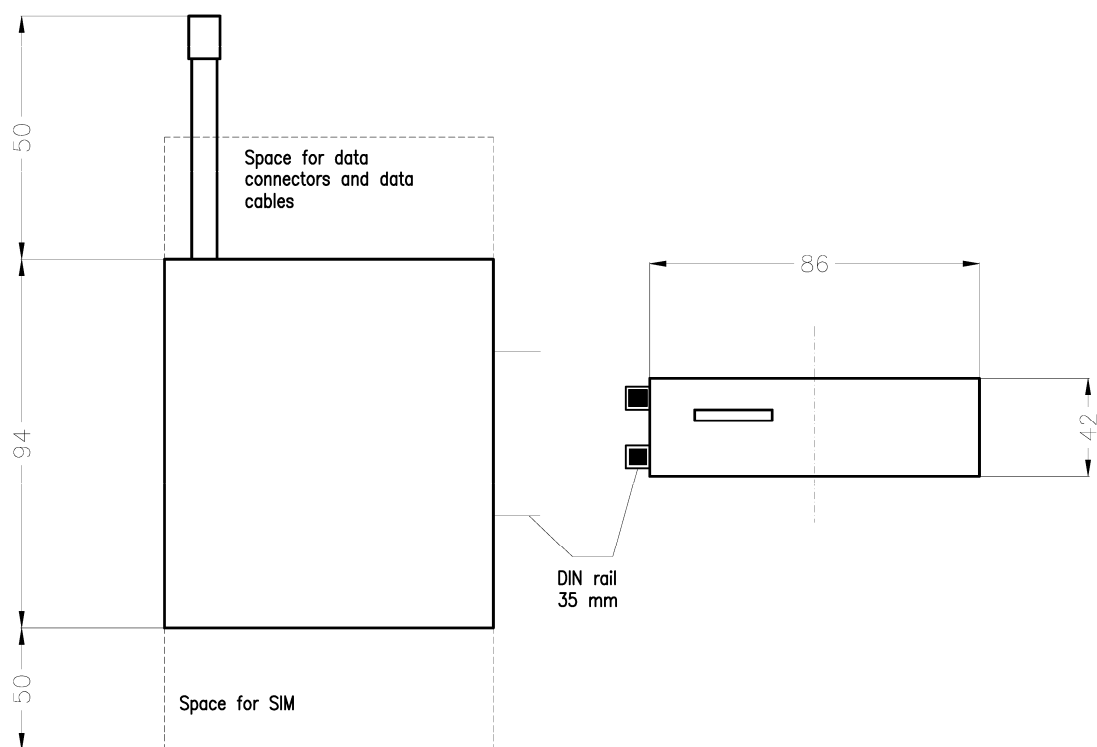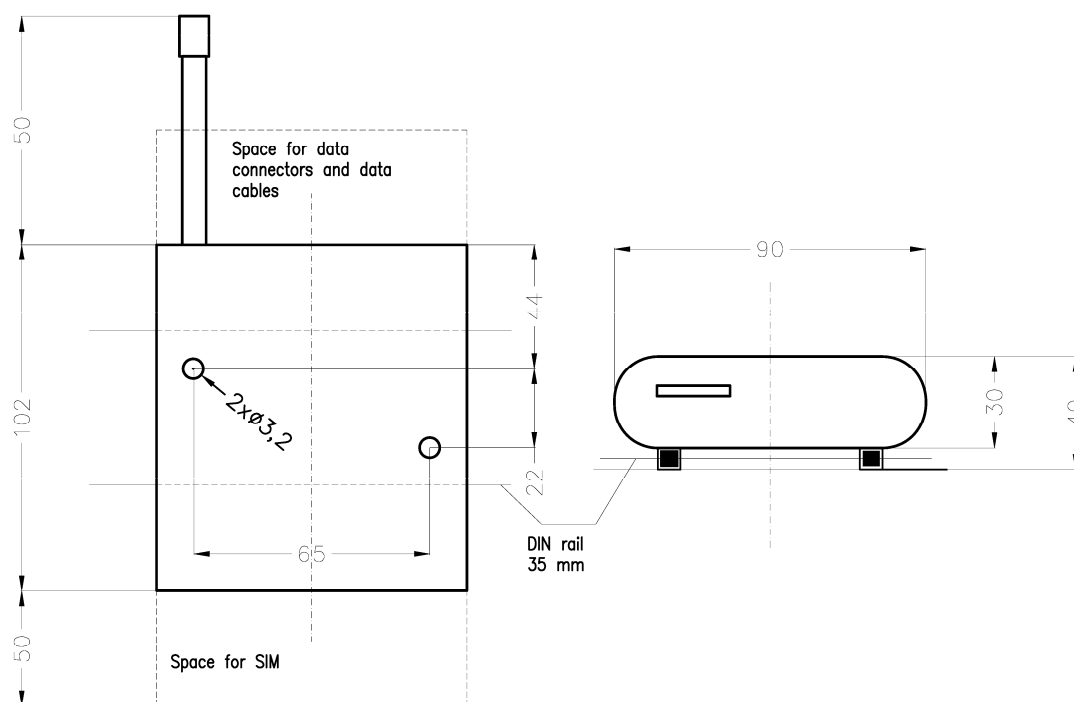

For the majority of applications with a built-in modem in a switch board it is possible to recognize two sorts of environments:

- non public and industry environment of low voltage with high interference,
- public environment of low voltage without high interference.

For both of these environments it is possible to mount modems to a switch board, the following is no need to have examination immunity or issues in connection with EMC according to EN 60439-1 ed.2:00 + A1:04.



For compliance of EN 60439-1 ed.2:00 + A1:04 specification it is necessary to observe next assembly of the modem to the switch board:





- for round antennas we recommend to observe a distance of 6 cm from cables and metal surfaces on every side according to the next picture due to the elimination of interference, while using an external antenna except for the switch-board it is necessary to fit a lightening conductor,





- before mounting a modem on sheet-steel we recommend using an external antenna,

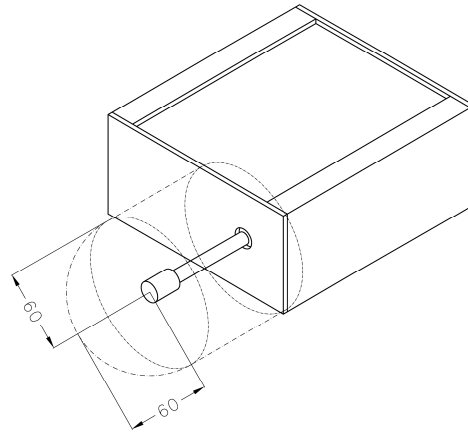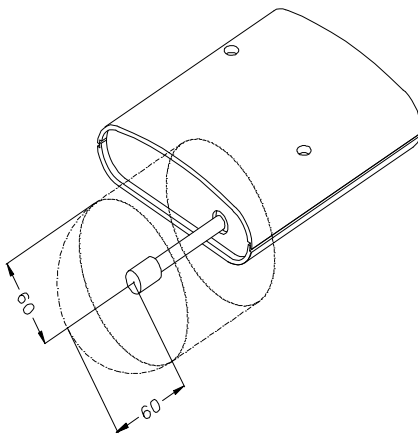

- for single cables we recommend to bind the bunch according to the following picture, for this use we recommend:
 - length of the bunch (combination of power supply and data cables) can be maximum 1,5 m, if the length of data cables exceeds 1,5 m or in the event of, the cable leads towards the switch - board, we recommend installing over - voltage protectors (surge suppressors),
 - with data cables they mustn't carry cables with reticular tension ~ 230 V/50 Hz,
 - all signals to sensors must be twisted pairs.

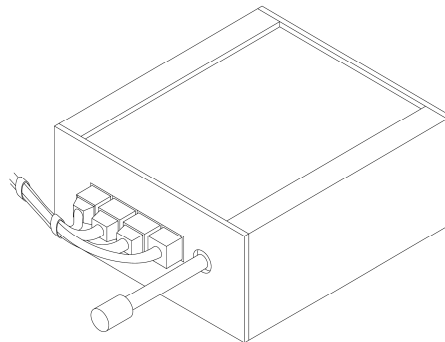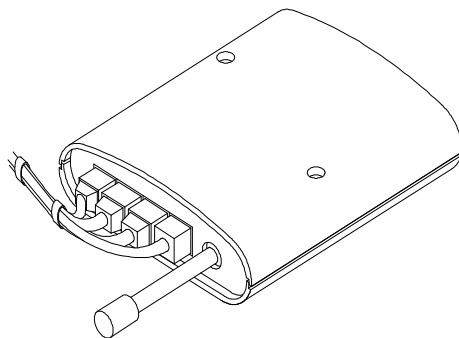


- sufficient space must be left before individual connectors for handling of cables,

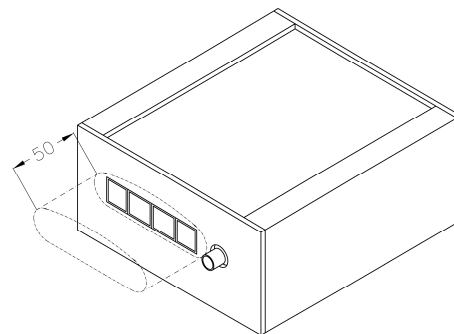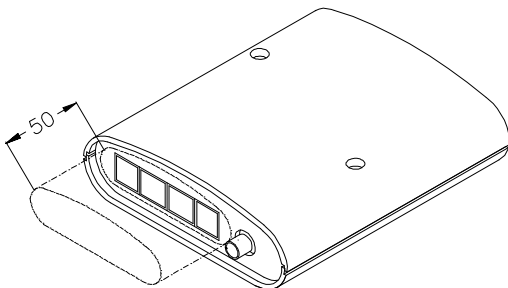

- for correct function of the modem we recommend to use in switch - board earth-bonding distribution frame for grounding of power supply of modem, data cables and antenna,



- the circuit diagram of the router is on the following pictures.

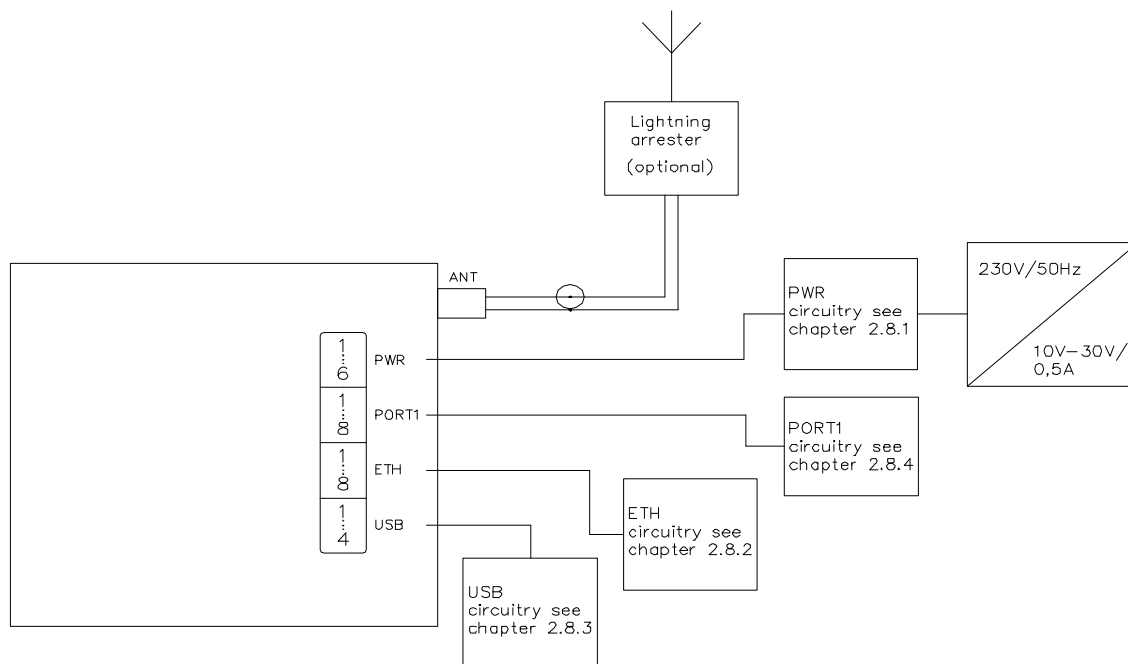


3. Expansion port mounting

3.1. Expansion port mounting for ER 75i and ER 75i DUO router



Attention! Expansion port includes when the router is switched off.

After unscrewing two screws (position 8) on the box bottom part (position 4) and removing box top part (position 3), connect the expansion port PORT1 (position 2) to connector J3 (see below) of the router B-ER-75i motherboard (position 1) from the TOP side. The expansion port is mounted to the motherboard by the help of three spacers (position 7). After mounting the expansion port, the box is screwed together by the help of three screws.

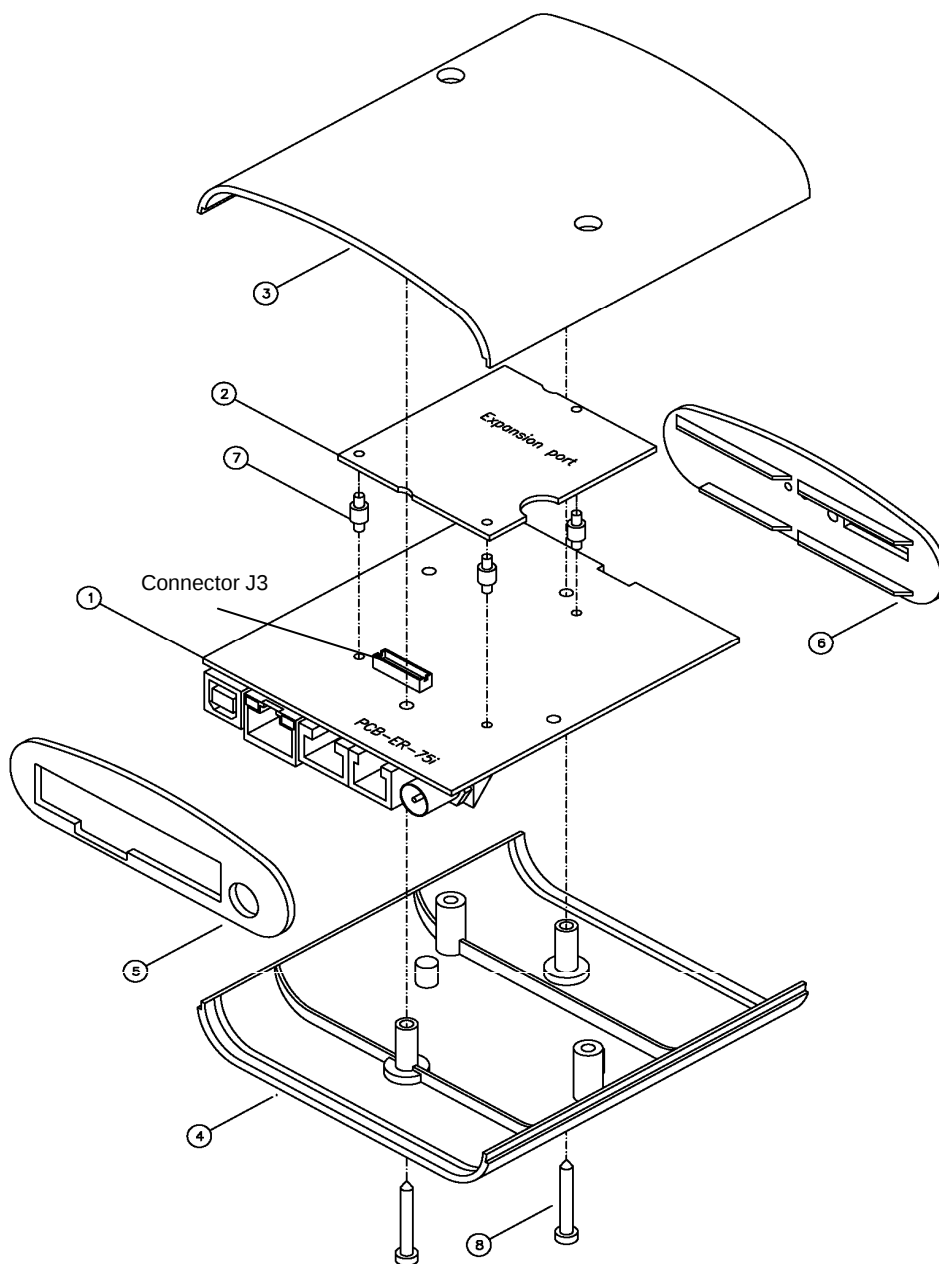

Parts list and description


Part	Description	Number
1	EDGE router motherboard	1
2	Expansion port PORT1	1
3	Box top part	1
4	Box bottom part	1
5	Rear head	1
6	Front head	1
7	Spacers for expansion port PORT1 mounting to motherboard	3
8	Screw for box completion	2

3.2. Expansion port mounting for ER 75i SL and ER 75i DUO SL router



Attention! Expansion port includes when the router is switched off.

After unscrewing four screws (position 10) on the rear panel (position 5) and removing it is possible to take out the B-ER-75i motherboard (position 1). The expansion port PORT1 (position 2) is connected to connector J3 (see below) of the router B-ER-75i motherboard (position 1) from TOP side. The expansion port is mounted to the motherboard by the help of three spacers (position 9). After mounting the expansion port the box is screwed together by the help of four screws.

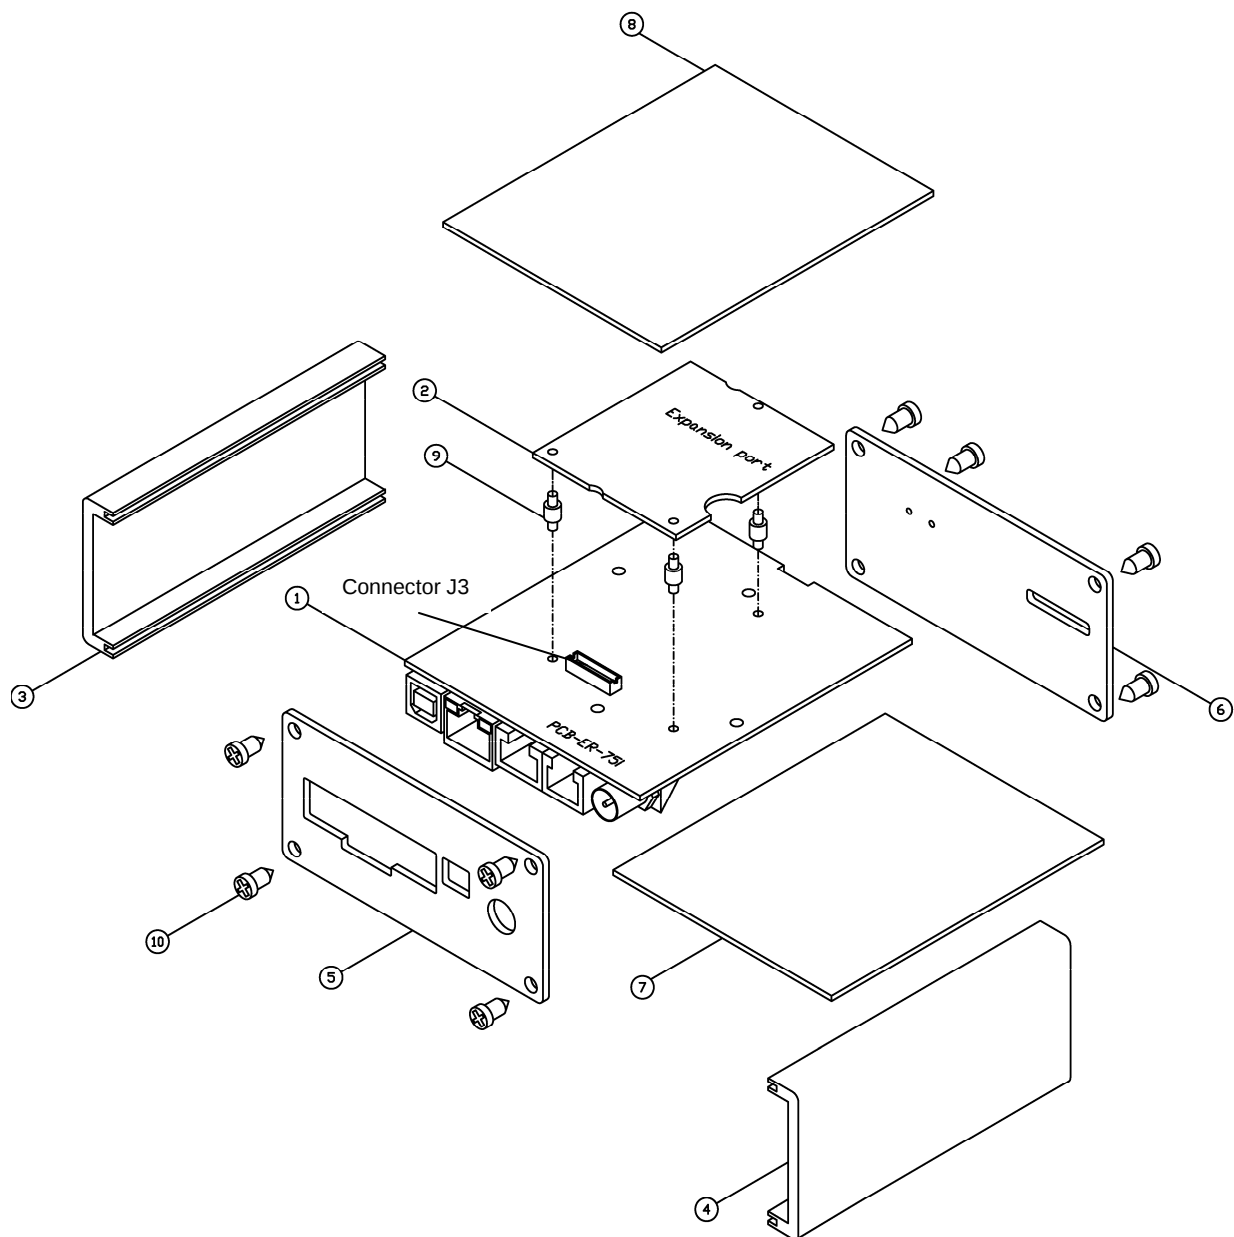

Parts list and description

Part	Description	Number
1	EDGE router motherboard	1
2	Expansion port PORT1	1
3	Left box part	1
4	Right box part	1
5	Rear head	1
6	Front head	1
7	Bottom box part	1
8	Top box part	1
9	Spacers for expansion port PORT1 mounting to motherboard	3
10	Screw for box completion	8

4. Configuration setting over web browser

Attention! If the SIM card is not inserted in the router, then it is impossible to operate. The inserted SIM card must have activated GPRS. Insert the SIM card when the router is switched-off.

Monitoring of the status, configuration and administration of the router can be performed by means of the web interface, which is available after insertion of IP address of the modem into the web browser. The default IP address of the modem is 192.168.1.1. Configuration may be performed only by the user "root" with initial password "root".

For providing higher security of your network we recommend changing this password! More about changing password can be found in chapter 4.26.

The left part of the web interface contains the menu with pages for monitoring of the Status, Configuration and Administration of the router.

EDGE router ER75i

Status	Network Status																																
Network DHCP GPRS IPsec DynDNS System Log	Interfaces eth0 Link encap:Ethernet HWaddr 00:0A:14:80:27:40 inet addr:192.168.1.1 Bcast:192.168.1.255 Mask:255.255.255.0 UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1 RX packets:19 errors:0 dropped:0 overruns:0 frame:0 TX packets:23 errors:0 dropped:0 overruns:0 carrier:0 collisions:0 txqueuelen:1000 RX bytes:2410 (2.3 KB) TX bytes:11490 (11.2 KB) ppp0 Link encap:Point-Point Protocol inet addr:10.168.188.109 P-t-P:10.0.0.1 Mask:255.255.255.255 UP POINTOPOINT RUNNING NOARP MULTICAST MTU:1500 Metric:1 RX packets:3 errors:0 dropped:0 overruns:0 frame:0 TX packets:3 errors:0 dropped:0 overruns:0 carrier:0 collisions:0 txqueuelen:3 RX bytes:54 (54.0 B) TX bytes:54 (54.0 B)																																
Configuration	Route Table <table><thead><tr><th>Destination</th><th>Gateway</th><th>Genmask</th><th>Flags</th><th>Metric</th><th>Ref</th><th>Use</th><th>Iface</th></tr></thead><tbody><tr><td>10.0.0.1</td><td>0.0.0.0</td><td>255.255.255.255</td><td>UH</td><td>0</td><td>0</td><td>0</td><td>ppp0</td></tr><tr><td>192.168.1.0</td><td>0.0.0.0</td><td>255.255.255.0</td><td>U</td><td>0</td><td>0</td><td>0</td><td>eth0</td></tr><tr><td>0.0.0.0</td><td>10.0.0.1</td><td>0.0.0.0</td><td>UG</td><td>0</td><td>0</td><td>0</td><td>ppp0</td></tr></tbody></table>	Destination	Gateway	Genmask	Flags	Metric	Ref	Use	Iface	10.0.0.1	0.0.0.0	255.255.255.255	UH	0	0	0	ppp0	192.168.1.0	0.0.0.0	255.255.255.0	U	0	0	0	eth0	0.0.0.0	10.0.0.1	0.0.0.0	UG	0	0	0	ppp0
Destination	Gateway	Genmask	Flags	Metric	Ref	Use	Iface																										
10.0.0.1	0.0.0.0	255.255.255.255	UH	0	0	0	ppp0																										
192.168.1.0	0.0.0.0	255.255.255.0	U	0	0	0	eth0																										
0.0.0.0	10.0.0.1	0.0.0.0	UG	0	0	0	ppp0																										
Administration																																	
LAN VRRP GPRS Firewall NAT OpenVPN IPsec GRE L2TP DynDNS NTP SNMP SMTP SMS Expansion Port Startup Script Up/Down Script Automatic Update	Change Profile Change Password Set Real Time Clock Set SMS Service Center Unlock SIM Card Send SMS Backup Configuration Restore Configuration Update Firmware Reboot																																

After green LED starts to blink it is possible to restore initial settings of the router by pressing button RST on front panel. After press button RST it is restoration of the configuration and reset (green LED will be on).

4.1. Network Status

To view the system information about the modem operation, select the *System Information* menu item. The bottom part of the window contains information about the system memory usage. The upper part of the window displays detailed information about active interfaces:

- eth0 – parameters of networks interface
- ppp0 – PPP interface (active connection to GPRS/EDGE)
- tun0 – OpenVPN tunnel interface
- gre1 – GRE tunnel interface
- ipsec0 – IPsec tunnel interface

By each of the interfaces are then shown the following information

- HWaddr – hardware (unique) address of networks interface
- inet – own IP address
- P-t-P – IP address second ends connection
- Bcast – broadcast address
- Mask – mask of network
- MTU – maximal size of packet, which is equipment able transmit
- Metric – number of routers, over which packet must pass
- RX packets – received packets, errors – number of errors, dropped – dropped packets
- TX packets – transmit packets, errors – number of errors, dropped – dropped packets
- collisions – number of collisions
- RX bytes – total number of received bytes
- TX bytes – total number of transmit bytes

It is possible to elicit GPRS connection state from the network information. If the GPRS connection is active, then it is in the system information shown as ppp0 connection.

Network Status							
Interfaces							
eth0	Link encap:Ethernet HWaddr 00:CF:52:08:CF:01 inet addr:192.168.2.254 Bcast:192.168.2.255 Mask:255.255.255.0 UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1 RX packets:336 errors:0 dropped:0 overruns:0 frame:0 TX packets:101 errors:0 dropped:0 overruns:0 carrier:0 collisions:0 txqueuelen:1000 RX bytes:32435 (31.6 KB) TX bytes:50905 (49.7 KB)						
gre1	Link encap:UNSPEC HWaddr 00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00 inet addr:192.168.2.254 P-t-P:192.168.2.254 Mask:255.255.255.255 UP POINTOPOINT RUNNING NOARP MTU:1476 Metric:1 RX packets:0 errors:0 dropped:0 overruns:0 frame:0 TX packets:0 errors:0 dropped:0 overruns:0 carrier:0 collisions:0 txqueuelen:0 RX bytes:0 (0.0 B) TX bytes:0 (0.0 B)						
ipsec0	Link encap:Point-Point Protocol inet addr:10.0.2.38 Mask:255.255.255.255 UP RUNNING NOARP MTU:16260 Metric:1 RX packets:0 errors:0 dropped:0 overruns:0 frame:0 TX packets:0 errors:0 dropped:0 overruns:0 carrier:0 collisions:0 txqueuelen:10 RX bytes:0 (0.0 B) TX bytes:0 (0.0 B)						
ppp0	Link encap:Point-Point Protocol inet addr:10.0.2.38 P-t-P:10.0.0.1 Mask:255.255.255.255 UP POINTOPOINT RUNNING NOARP MULTICAST MTU:1500 Metric:1 RX packets:15 errors:0 dropped:0 overruns:0 frame:0 TX packets:16 errors:0 dropped:0 overruns:0 carrier:0 collisions:0 txqueuelen:3 RX bytes:314 (314.0 B) TX bytes:678 (678.0 B)						
Route Table							
Destination	Gateway	Genmask	Flags	Metric	Ref	Use	Iface
10.0.0.1	0.0.0.0	255.255.255.255	UH	0	0	0	ppp0
192.168.1.0	0.0.0.0	255.255.255.0	U	0	0	0	eth0
0.0.0.0	10.0.0.1	0.0.0.0	UG	0	0	0	ppp0

4.2. DHCP Status

Information about IP addresses, which was leased to the router by the DHCP server, is possible to find in menu in sum *DHCP*:

- lease 192.168.1.2 (generally IP address) – assigned IP address
- starts – information about time of assignation of IP address
- ends – information about time of termination IP address validity
- hardware ethernet – hardware MAC (unique) address
- uid – unique ID

DHCP Status
Active DHCP Leases
<pre> lease 192.168.1.2 { starts 5 2010/01/29 09:15:11; ends 5 2010/01/29 09:25:11; hardware ethernet 00:24:81:69:a0:bd; uid 01:00:24:81:69:a0:bd; } </pre>

In the extreme the DHCP status can display two records for one IP address. That could have been caused by resetting of network cards.

4.3. IPsec status

Information on actual IPsec tunnel state can be called up in option *IPsec* in the menu. Detailed information on the description shown below can be found on the following link <http://www.freeswan.org/doc.html>.

IPsec Status
IPsec Tunnel Informations
<pre> 000 interface ipsec0/ppp0 10.0.2.38 000 000 "ipsec": 10.0.2.38...10.0.2.39 000 "ipsec": ike_life: 3600s; ipsec_life: 3600s; rekey_margin: 540s; rekey_fuzz: 100%; keyingtries: 0 000 "ipsec": policy: PSK+ENCRYPT+TUNNEL; interface: ppp0; unrouted 000 "ipsec": newest ISAKMP SA: #0; newest IPsec SA: #0; exroute owner: #0 000 "ipsec": IKE algorithms wanted: 5_000-1-5, 5_000-2-5, 5_000-1-2, 5_000-2-2, flags=-strict 000 "ipsec": IKE algorithms found: 5_192-1_128-5, 5_192-2_160-5, 5_192-1_128-2, 5_192-2_160-2, 000 "ipsec": ESP algorithms wanted: 3_000-1, 3_000-2, flags=-strict 000 "ipsec": ESP algorithms loaded: 3/168-1/128, 3/168-2/160, 000 000 #1: "ipsec" STATE_MAIN_I1 (sent MI1, expecting MR1); born:0s; EVENT_RETRANSMIT in 13s </pre>

4.4. GPRS Status

The item *GPRS* in the menu contains up-to-date information about PLMN (code of operator), cell, channel and signal quality of the selected cell, as well as neighboring hearing cells. In the middle part of window is shows information about transferred data in accounting period. The GPRS Connection Log is in the bottom of this window where information about the make-up of the GPRS connection is and pertinent problems on this formation.



Information about transferred data is show when the parameter *Data Limit* is set (*GPRS* configuration) and it set parameter (*Switch to backup SIM card hen data limit to exceeded*); or when the parameter *Data Limit* is set (*GPRS* configuration) and it set parameter *Send SMS when data limit is exceeded* (*SMS* configuration). Information about transferred data is show for primary SIM card only.

GPRS Status	
GSM Informations	
PLMN	: 23001
Cell	: 6517 (EDGE attached)
Channel	: 80
Level	: -96 dBm
Neighbours	: -102 dBm (57), -105 dBm (30)
Transferred data in accounting period	
Counting transferred data is disabled.	
PPP Connection Log	
2010-01-29 08:35:59 Connection successfully established.	

4.5. DynDNS status

DynDNS up - dating entry result on server www.dyndns.org can be called up in option DynDNS item in the menu.

DynDNS Status	
Last DynDNS Update Status	
DynDNS record successfully updated.	

4.6. System Log

In case of any problems with connection to GPRS it is possible to view the system log by pressing the *System Log* menu item. The System log observes only connection to GPRS and formation of IPsec tunnel. The upper part of the window displays possible errors at GPRS connection establishment. After switching on the log daemon by pressing the *Start* button, the bottom part of the window displays detailed reports from individual applications running in the modem. To update the contents of the window press the *Refresh* button. By the help of button *Save* it is possible to save the system log to the computer.

System Log	
System Messages	
<pre> 2010-01-29 08:35:58 pppd[227]: Script /etc/scripts/ip-up started (pid 418) 2010-01-29 08:35:58 dnsmasq[169]: reading /etc/resolv.conf 2010-01-29 08:35:58 dnsmasq[169]: using nameserver 62.141.0.2 2010-01-29 08:35:58 dnsmasq[169]: using nameserver 88.86.110.18 2010-01-29 08:36:00 pppd[227]: Script /etc/scripts/ip-up finished (pid 418), status = 0x0 2010-01-29 08:40:11 dhcpcd[104]: DHCPREQUEST for 192.168.1.2 from 00:24:81:69:a0:bd via eth0 2010-01-29 08:40:11 dhcpcd[104]: DHCPACK on 192.168.1.2 to 00:24:81:69:a0:bd via eth0 2010-01-29 08:45:11 dhcpcd[104]: DHCPREQUEST for 192.168.1.2 from 00:24:81:69:a0:bd via eth0 2010-01-29 08:45:11 dhcpcd[104]: DHCPACK on 192.168.1.2 to 00:24:81:69:a0:bd via eth0 2010-01-29 08:50:11 dhcpcd[104]: DHCPREQUEST for 192.168.1.2 from 00:24:81:69:a0:bd via eth0 2010-01-29 08:50:11 dhcpcd[104]: DHCPACK on 192.168.1.2 to 00:24:81:69:a0:bd via eth0 2010-01-29 08:55:11 dhcpcd[104]: DHCPREQUEST for 192.168.1.2 from 00:24:81:69:a0:bd via eth0 2010-01-29 08:55:11 dhcpcd[104]: DHCPACK on 192.168.1.2 to 00:24:81:69:a0:bd via eth0 2010-01-29 09:00:11 dhcpcd[104]: DHCPREQUEST for 192.168.1.2 from 00:24:81:69:a0:bd via eth0 2010-01-29 09:00:11 dhcpcd[104]: DHCPACK on 192.168.1.2 to 00:24:81:69:a0:bd via eth0 2010-01-29 09:05:11 dhcpcd[104]: DHCPREQUEST for 192.168.1.2 from 00:24:81:69:a0:bd via eth0 2010-01-29 09:05:11 dhcpcd[104]: DHCPACK on 192.168.1.2 to 00:24:81:69:a0:bd via eth0 2010-01-29 09:10:11 dhcpcd[104]: DHCPREQUEST for 192.168.1.2 from 00:24:81:69:a0:bd via eth0 2010-01-29 09:10:11 dhcpcd[104]: DHCPACK on 192.168.1.2 to 00:24:81:69:a0:bd via eth0 2010-01-29 09:15:11 dhcpcd[104]: DHCPREQUEST for 192.168.1.2 from 00:24:81:69:a0:bd via eth0 2010-01-29 09:15:11 dhcpcd[104]: DHCPACK on 192.168.1.2 to 00:24:81:69:a0:bd via eth0 2010-01-29 09:20:11 dhcpcd[104]: DHCPREQUEST for 192.168.1.2 from 00:24:81:69:a0:bd via eth0 2010-01-29 09:20:11 dhcpcd[104]: DHCPACK on 192.168.1.2 to 00:24:81:69:a0:bd via eth0 2010-01-29 09:25:11 dhcpcd[104]: DHCPREQUEST for 192.168.1.2 from 00:24:81:69:a0:bd via eth0 2010-01-29 09:25:11 dhcpcd[104]: DHCPACK on 192.168.1.2 to 00:24:81:69:a0:bd via eth0 </pre>	
Stop Refresh Save	



Program syslogd can be started with two options that modifies its behaviour. Option "-S" followed by decimal number set maximal number of lines in one log file. Option "-R" followed by hostname or IP address enable logging to remote syslog daemon. For starting syslogd with these options you could modify script "/etc/init.d/syslog" or add lines "killall syslogd" and "syslogd <options> &" into Startup Script.

4.7. LAN Configuration

To enter the network configuration, select the *LAN* menu item. In the first part of the window it is possible to define the network interface IP address (*IP address*), the network mask (*Subnet Mask*) and media type (*Media Type*), in the majority of cases set *Auto-Negotiation*.

In the second part of the window is possible to define *Default Gateway* and *DNS server*.

In the third part of the window, it is possible to define the DHCP server by checking the *Enable dynamic DHCP server* option. In the window it is possible to define the beginning (*IP Pool Start*) and end (*IP Pool End*) of the pool of IP addresses which will lease to DHCP clients. By parameter *Lease time* is possible to define time after which the client can use IP address.


In the fourth part of the Windows it is possible, by checking the *Enable static DHCP server* option, to define leases up to six static *IP Addresses*, which conform to *MAC Address* of the connected equipment etc.

The changes in settings will apply after pressing the *Apply* button.

The DHCP server assign IP addresses to the connected clients from defined address pool, IP address of the gate and IP address of the primary DNS server. It is important not to overlap ranges of static engaged IP address with address allotted by the help of DHCP, or collision of addresses may occur, thereby malfunctioning the network.


LAN Configuration	
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Media Type	auto-negotiation
Default Gateway	
DNS Server	
☐ Enable dynamic DHCP leases	
IP Pool Start	192.168.1.2
IP Pool End	192.168.1.254
Lease Time	600 sec
☐ Enable static DHCP leases	
MAC Address	IP Address
Apply	

Example of the network interface with dynamic DHCP server:

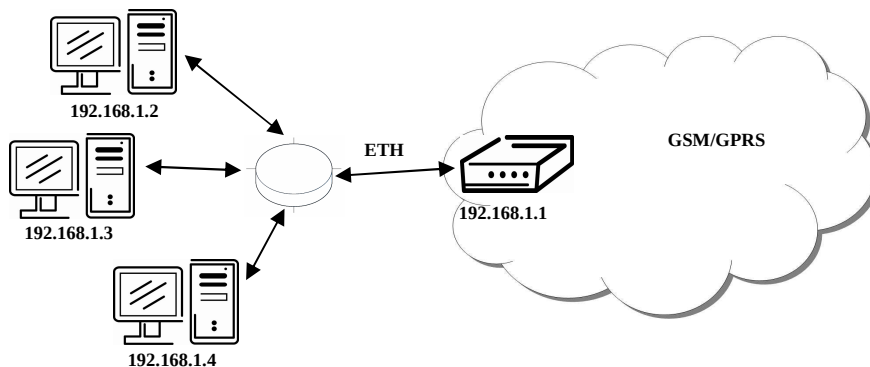


LAN Configuration	
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Media Type	auto-negotiation
Default Gateway	
DNS Server	
☒ Enable dynamic DHCP leases	
IP Pool Start	192.168.1.2
IP Pool End	192.168.1.4
Lease Time	600 sec
☐ Enable static DHCP leases	
MAC Address	IP Address
Apply	

Example of the network interface with dynamic and static DHCP server:

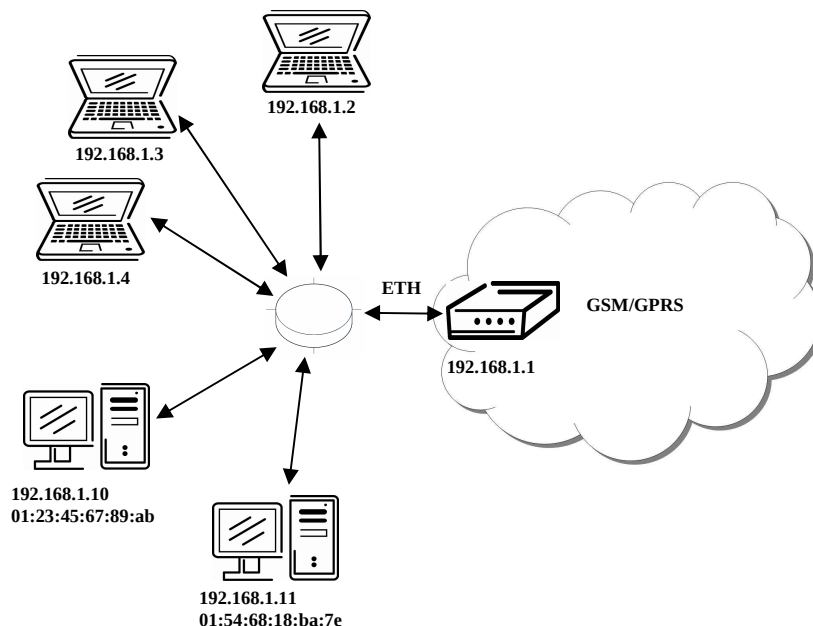

LAN Configuration	
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Media Type	auto-negotiation
Default Gateway	
DNS Server	
☒ Enable dynamic DHCP leases	
IP Pool Start	192.168.1.2
IP Pool End	192.168.1.4
Lease Time	600 sec
☒ Enable static DHCP leases	
MAC Address	IP Address
01:23:45:67:89:ab	192.168.1.10
01:54:68:18:ba:7a	192.168.1.11
Apply	

Example of the network interface with default gateway and DNS server:

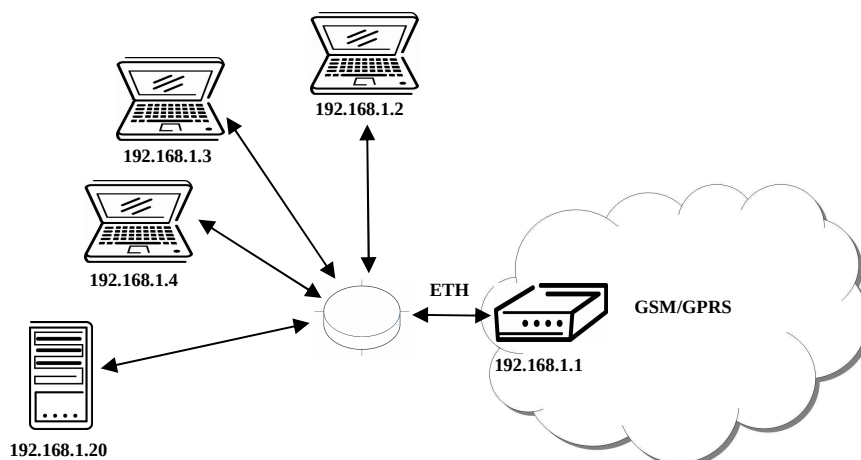

LAN Configuration	
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Media Type	auto-negotiation
Default Gateway	192.168.1.20
DNS Server	198.168.1.20
☒ Enable dynamic DHCP leases	
IP Pool Start	192.168.1.2
IP Pool End	192.168.1.4
Lease Time	600 sec
☐ Enable static DHCP leases	
MAC Address	IP Address
Apply	


4.8. VRRP Configuration

To enter the VRRP configuration select the *VRRP* menu item. VRRP protocol (Virtual Router Redundancy Protocol) is a technique, by which it is possible to forward routing from main router to backup router in the case of the main router failure. If the *Enable VRRP* is checked, then it is possible to set the following parameters. Parameter *Virtual Server IP Address* sets virtual server IP address. This address should be the same for both routers. a connected device sends its data via this virtual address. Parameter *Virtual Server ID* distinguishes one virtual router on the network from others. This implies that the main and backup routers must use the same value for this parameter. The router, with higher priority set by the parameter *Host Priority*, is the main router. According to RFC 2338 the main router has the highest possible priority - 255. The backup router has priority in range 1 – 254 (init value is 100). The priority value equals 0 is not allowed.

It is possible to set *Check PPP connection flag* in the second part of the window. The currently active router (either main or backup) will send testing messages to defined *Ping IP Address* at periodic time intervals (*Ping Interval*) with setting time of waiting for answer (*Ping Timeout*). The function check PPP connection is used as a supplement of VRRP standard with the same final result. If there are no answers from remote devices (*Ping IP Address*) for a defined number of probes (*Ping Probes*), then connection is switched to the other line. It is possible to use for example a DNS server of mobile operator as a test message (ping) IP address. There's an additional way for evaluating the state of the active line. It is activated by selecting *Enable traffic monitoring* parameter. If this parameter is set and any packet different from ping is sent to the monitored line, then any answer to this packet is expected for *Ping Timeout*. If *Ping Timeout* expires with no answer received then process of testing the active line continues the same way like in the case of standard testing process after first test message answer drops out.

VRRP Configuration	
☐ Enable VRRP	
Virtual Server IP Address	
Virtual Server ID	
Host Priority	
☐ Check PPP connection	
Ping IP Address	
Ping Interval	sec
Ping Timeout	sec
Ping Probes	
☐ Enable traffic monitoring	
Apply	

Example of the VRRP protocol:

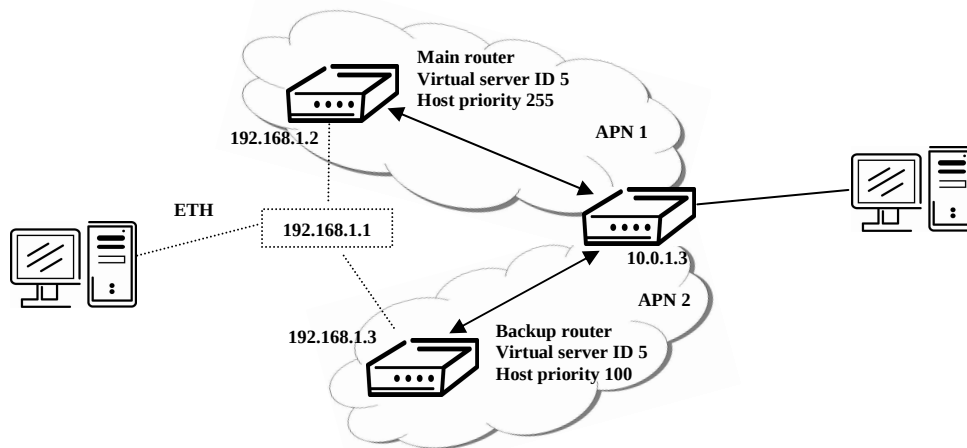

VRRP Configuration	
☒ Enable VRRP	
Virtual Server IP Address	192.168.1.1
Virtual Server ID	5
Host Priority	255
☒ Check PPP connection	
Ping IP Address	10.0.1.3
Ping Interval	10 sec
Ping Timeout	5 sec
Ping Probes	10
☐ Enable traffic monitoring	
Apply	

4.9. GPRS Configuration

To enter the GPRS connection configuration select the *GPRS* menu item. If the *Create GPRS connection* option is selected, the modem automatically tries to establish GPRS connection after switching-on. In this window it is possible to define *Username*, *Password*, authenticate protocol in the GSM network (*Authentication*), IP address (*IP Address*) and phone number (*Phone Number*) for two different APN. If the *IP address* field is not filled in, the operator automatically assigns the IP address when it is establishing the connection. The router uses phone number *99**1# as default number. When it is set other phone number, it will be use for establish GPRS or CSD connection.

If the *APN* field is not filled in, then the router automatically selects the APN by the IMSI code of the SIM card. If the PLMN (operator number format) is not in the list of APN, then default APN is "internet". The mobile operator defines APN. The PLMN parameter is possible to define in *Operator* item. If the *PPPoE bridge mode* is activated, then login is taken from the connected client. By parameter *PIN* it is possible to put PIN to the SIM card always during the starting of the router.



Attention! If one SIM card is inserted into the router, which has two different APN's, the router cannot have the second SIM socket mounted. Otherwise it will switch to secondary APN false. Also, correct PIN must be filled. For SIM cards with two APN's there will be the same PIN for both APN's. Otherwise the SIM card can be blocked by false SIM PIN.

The choice *Get DNS address from operator* is given for easier configuration on client side. If this field is filled in, then the router tries to get an IP address of primary and secondary DNS server from the operator automatically.

If the *Check PPP connection* option is selected, it has active control of connection over PPP. The modem will automatically send the ping question to the selected domain name or IP address (*Ping IP Address*) in periodic time intervals (*Ping Interval*). If the PING failed, new ping be sent immediately. After three unsuccessfully pings on appropriate IP address the router terminates connection and tries to establish a new connection. It is possible to use, for example, the DNS server of a mobile operator as the ping IP address.

If the *Enable Traffic Monitoring* option is selected, then the router stops sending ping questions to the *Ping IP Address* and it will watch traffic in PPP connection. If PPP connection is without traffic longer than the *Ping Interval*, then the router sends ping questions to the Ping IP Address.

Parameter *Data limit* set limit for data sending via GPRS. Parameter *Warning Threshold* determine per cent of *Data Limit* in the range of 50% to 99%, which if is exceeded, then the router sends an SMS in the form *Router has exceeded (value of Warning Threshold) of data limit*. By the parameter *Accounting Start* it is possible to specify day in month when it will start accounting defined in *Data limit*. If the parameter *Switch to backup SIM card when data limit is exceeded* (see next) or *Send SMS when datalimit is exceeded* (see SMS configuration) are not selected the data limit will not count.

At the bottom of configuration it is possible to set rules for switching between two APN's on the SIM card, in the event that one SIM card is inserted or between two SIM cards, in the event that two SIM cards are inserted. Parameter *Default SIM card* sets default APN or SIM card, from which it will try to establish the PPP connection. If this parameter is set to *none*, the router launches in off-line mode and it is necessary to establish PPP connection via SMS message.

If parameter *Backup SIM card* is set to *none*, then parameters *Switch to other SIM card when connection fails*, *Switch to backup SIM card when roaming is detected* and *Switch to backup SIM card when data limit is exceeded* switch the router to off-line mode.

If PPP connection fails, then the parameter *Switch to other SIM card when connection fails* ensures switch to secondary SIM card or secondary APN of the SIM card. Failure of the PPP connection can occur in two ways. When I start the router, when three fails to establish a PPP connection. Or if it is checked *Check the PPP connection*, and is indicated by the loss of a PPP connection.

In case that the roaming is detected the parameter *Switch to backup SIM card when roaming is detected* enables switching to secondary SIM card or secondary APN of the SIM card.

Parameter *Switch to backup SIM card when data limit is exceeded* enables switching to secondary SIM card or secondary APN of the SIM card, when the data limit of default APN is exceeded.

Parameter *Switch to primary SIM card after timeout* defines conditions, how to switch back to the default SIM card or default APN.

Parameter *Switch to backup SIM card when binary input is active* enables switching to secondary SIM card or secondary APN of the SIM card, when binary input 'bin0' is active.

Parameter *Switch to primary SIM card after timeout* enable defines the method, how the router will try to switch back to default SIM card or default APN.

The following parameters define the time after which the router attempts to go back to the default SIM card or APN. The first attempt to switch back to the primary SIM card or APN shall be made for the time defined in the parameter *Initial Timeout*, range of this parameter is from 1 to 10000 minutes. In an unsuccessful attempt to switch to default SIM card, the router on the second attempt to try for the time defined in the parameter *Subsequent Timeout*, range is from 1 to 10000 minutes. Any further attempt to switch back to the primary SIM card or APN shall be made in time computed as the sum of the previous time trial and time defined in the parameter *Additive constants* range is 1-10000 minutes.

Example: If parameter *Switch to primary SIM card after timeout* is checked and parameters are set as follows *Initial Timeout* – 60min. *Subsequent Timeout* 30min a *Subsequent Timeout* - 20min. The first attempt to switch the primary SIM card or APN shall be carried out after 60 minutes. Switched to a failed second attempt made after 30 minutes. Third after 50 minutes (30 +20). Fourth after 70 minutes (30 +20 +20).

Parameter *Initial Timeout* sets the time after which the Router tries to make connection with default APN, range of this parameter is from 1 to 10000 minutes. Parameter *Subsequent Timeout* sets the time period for every other next attempt to make connection with default APN, range is from 1 to 10000 minutes. Parameter *Additive Constant* sets the amount of time which is added to every attempt at main connection establishment after unsuccessful defined attempt (for example: *Additive Constant* is 15 minutes. After a second unsuccessful attempt at main connection establishment time of next attempt is extended by about 30 minutes etc.). Range is from 1 to 1000 minutes.

In the bottom part of the window it is possible to define access over CSD connection by *Enable Dial-In Access* function. Access can be secured by used the *Username* and *Password*. When the router is in offline mode, the router is permanently available via CSD connection.

In the last part of the window, is possible to switch on the PPPoE server by checking off *Enable PPPoE bridge mode*. Then server waits for client from ethernet. After connection, router sets the PPP connection over GPRS. Router then act as a transparent bridge between PPPoE and PPP.



Attention! We recommend checking the GPRS connection in case of uninterrupted running.

Annotation:

- MTU (Maximum Transmission Unit) – it is the identifier of the maximum size of packet, which is possible to transfer in a given environment.
- MRU (Maximum Receiving Unit) – it is the identifier of the maximum size of packet, which is possible to receive in a given environment.

Default value is 1500 bytes. Other settings may cause incorrect transmission of data.

The changes in settings will apply after pressing the *Apply* button.

GPRS Configuration			
☒ Create PPP connection			
	Primary SIM card	Secondary SIM card	
APN *			
Username *			
Password *			
Authentication	PAP or CHAP ▼	PAP or CHAP ▼	
IP Address *			
Phone Number *			
Operator *			
PIN *			
MRU	1500	1500	bytes
MTU	1500	1500	bytes
☒ Get DNS addresses from operator			
☐ Check PPP connection (<i>necessary for uninterrupted operation</i>)			
Ping IP Address			
Ping Interval			sec
☐ Enable traffic monitoring			
Data Limit		MB	
Warning Threshold		%	
Accounting Start	1		
Default SIM card	primary ▼		
Backup SIM card	secondary ▼		
☐ Switch to other SIM card when connection fails			
☐ Switch to backup SIM card when roaming is detected			
☐ Switch to backup SIM card when data limit is exceeded			
☐ Switch to primary SIM card after timeout			
Initial Timeout	60	min	
Subsequent Timeout *		min	
Additive Constant *		min	
☐ Enable Dial-In access			
Username *			
Password *			
☐ Enable PPPoE bridge mode			
* can be blank			
Apply			

4.10. Firewall Configuration

By the help of a firewall it is possible to set IP addresses from which are possible to remotely access the router. The choice *Allow remote access only from specified hosts* is given for easier configuration of hosts. In this firewall configuration it is possible to set up to four remote accesses by the help of *Source*, *Source IP Address*, *Protocol* and *Target Port*.

Parameter *Source* defines if access is allowed to one IP address which is defined by *Source IP Address*, or every IP addresses. In menu *Protocol* it is possible to specify protocol for remote access, it is possible to allow all protocols (*all*), or only one protocol *UDP*, *TCP* or *ICMP*. By parameter *Target Port* it is possible to specify a port number.


The changes in settings will apply after pressing the *Apply* button.



Caution! Firewall doesn't filter via Ethernet.

Firewall Configuration			
☐ Allow remote access only from specified hosts			
Source	Source IP Address *	Protocol	Target Port *
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
* can be blank			
Apply			

Example of the firewall configuration:

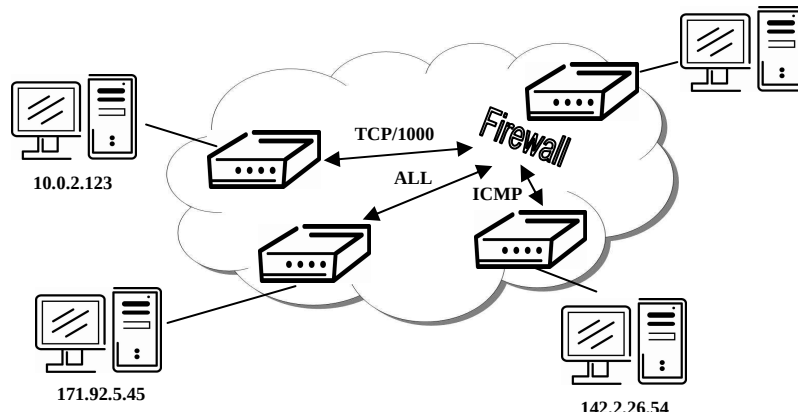

Firewall Configuration			
☒ Allow remote access only from specified hosts			
Source	Source IP Address *	Protocol	Target Port *
single address ▼	171.92.5.45	all ▼	
single address ▼	10.0.2.123	TCP ▼	1000
single address ▼	142.2.26.54	ICMP ▼	
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
* can be blank			
Apply			

4.11. NAT Configuration

To enter the Network Address Translation configuration, select the *NAT* menu item. By checking off the *Send all incoming packets to default server* item and setting the *Default Server* item it is possible to put the router into the mode in which all incoming data from GPRS will be routed to the computer with the defined IP address.

If the *Enable remote HTTP access* field and port number is filled in, then configuration of the router over web interface is possible. Choice *Enable remote FTP access on port* and port number makes it possible to access over FTP. Choice *Enable remote Telnet access* and port number makes it possible to access over Telnet. Choice *Enable remote SNMP access* and port number makes it possible to access to SNMP agent. Choice *Masquerade outgoing packets* option turns the system address translation NAT.

The changes in settings will apply after pressing the *Apply* button.


NAT Configuration			
Public Port	Private Port	Type	Server IP Address
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	

☒ Enable remote HTTP access on port
☒ Enable remote FTP access on port
☒ Enable remote Telnet access on port
☒ Enable remote SNMP access on port

☐ Send all remaining incoming packets to default server
 Default Server IP Address

☒ Masquerade outgoing packets

Example of the configuration with one connection equipment on the router:

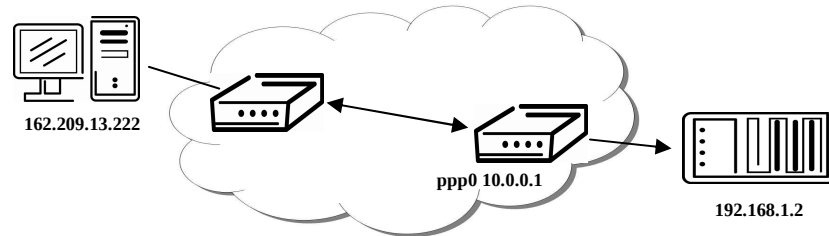

NAT Configuration			
Public Port	Private Port	Type	Server IP Address
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	
		TCP ▼	


☒ Enable remote HTTP access on port
☒ Enable remote FTP access on port
☒ Enable remote Telnet access on port
☒ Enable remote SNMP access on port

☒ Send all remaining incoming packets to default server
 Default Server IP Address

☒ Masquerade outgoing packets

In these configurations it is important to have marked choice of *Send all remaining incoming packets it default server*, IP address in this case is the address of the device behind the router. Connected equipment behind the router must have set Default Gateway on the router. Connected device replies, while PING on IP address of SIM card.

Example of the configuration with more connected equipment:

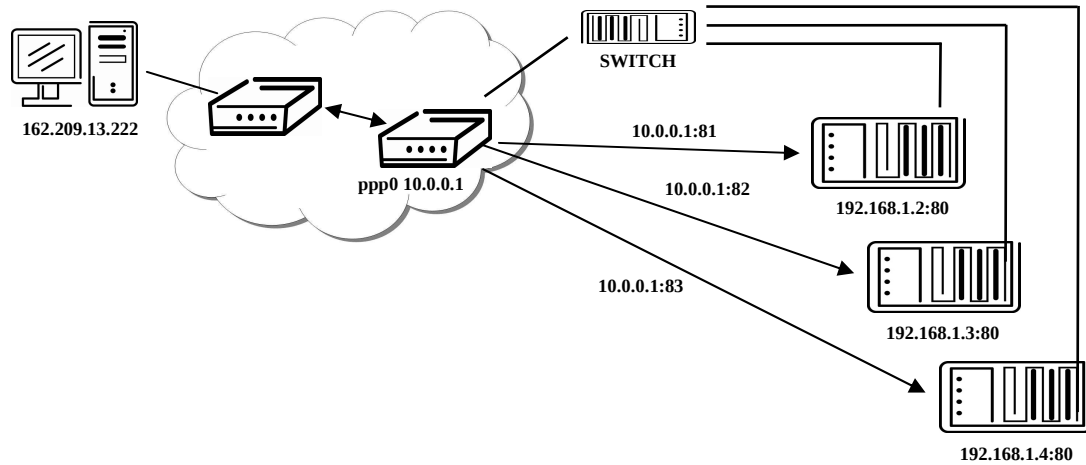

NAT Configuration			
Public Port	Private Port	Type	Server IP Address
81	80	TCP	192.168.1.2
82	80	TCP	192.168.1.3
83	80	TCP	192.168.1.4
		TCP	
		TCP	
		TCP	
		TCP	
		TCP	
		TCP	
		TCP	
		TCP	
		TCP	
		TCP	
		TCP	
		TCP	
		TCP	
		TCP	
		TCP	

☒ Enable remote HTTP access on port

☒ Enable remote FTP access on port

☒ Enable remote Telnet access on port

☒ Enable remote SNMP access on port

☐ Send all remaining incoming packets to default server
 Default Server IP Address

☒ Masquerade outgoing packets

In this configuration equipment wired behind the router defines the address *Server IP Address*. The router replies, while PING on address of SIM card. Access on web interface of the equipment behind the router is possible by the help of Port Forwarding, when behind IP address of SIM is indicating public port of equipment on which we want to come up. At demand on port 80 it is surveyed singles outer ports (Public port), there this port isn't defined, therefore at check selection Enable remote http access it automatically opens the web interface ER 75i. If this choice isn't selected and is selected volition Send all remaining incoming packets to the default server fulfill oneself connection on induction IP address. If it is not selected election Send all remaining incoming packets to default server and Default server IP address then connection requests a failure.

If necessary set more than twelve rules for NAT, then is possible insert into start up script following script:

```
iptables -t nat -A napt -p tcp -dport [PORT_PUBLIC] -j DNAT --to-destination [IPADDR]:[PORT1_PRIVATE]
```

Concrete IP address [IPADDR] and ports numbers [PORT_PUBLIC] and [PORT1_PRIVATE] are filled up into square bracket.

4.12. OpenVPN Tunnel Configuration

OpenVPN tunnel configuration can be called up by option *OpenVPN* item in the menu. OpenVPN tunnel allows protected connection of two networks LAN to the one which looks like one homogenous. In the *OpenVPN Tunnels Configuration* window are two rows, each row for one configured OpenVPN tunnel. The column *Create* switches on tunnels, other columns contain values view set in the *OpenVPN Tunnel Configuration* windows; configuration is possible by the *Edit* button.

OpenVPN Tunnels Configuration				
	Create	Description	Remote IP Address	Remote Subnet
1st	no			Edit
2nd	no			Edit

In the window can be defined tunnel name (*Description*) and *Protocol*, by which the tunnel will communicate. At choice is *UDP*, *TCP server* or *TCP client* protocol which has to have defined *port* protocol (*UDP port* nebo *TCP port*). On off – side tunnel IP address (*Remote External IP Address*), address nets behind off – side tunnel (*Remote Subnet*), mask nets behind off – side tunnel (*Remote Subnet Mask*). By parameter Redirect Gateway is possible to redirect all traffic on Ethernet. Parameter *Local Interface IP Address* defines local interface IP address, parameter *Remote Interface IP Address* defines the interface IP address of the off-side tunnel. Parameter *Ping Interval* defines the time period after which it sends a message to off-side and by parameter *Ping Timeout* waits on message from off-side tunnel. For OpenVPN tunnel right verify parameter *Ping Timeout* has to be bigger than *Ping Interval*. Parameter *Renegotiate Interval* sets renegotiate period (reauthorization) of the OpenVPN tunnel. This parameter is possible to set only at username/password authentication or at X.509 certificate using. By parameter *Max Fragment Size* it is possible to define maximum sending packet size. Sending data is possible compress by lossless LZO compressions by parameter *Compression*, compression has to be on both tunnel ends. By parameter *NAT Rules* it is possible to apply set NAT rules to OpenVPN tunnel. By

Authenticate Mode it is possible to choose authentication. On choice are *none* authentication, or by *Pre-shared secret* which set shared key for both off-side tunnel; or by *Username/Password* which enable authentication by *CA Certificate*, *Username* and *Password*; next can be *X.509 Certificate (client)*, this enables authentication by *CA Certificate*, *Local Certificate* and *Local Private Key*; last possibility is *X.509 Certificate (server)* which enables authentication by *CA Certificate*, *DH Parameters*, *Local Certificate* and *Local Private Key*. By the help of parameter *Extra Options* it is possible to define additional parameters of the OpenVPN tunnel, for example DHCP options etc.


The changes in settings will apply after pressing the *Apply* button.

OpenVPN Tunnel Configuration

☐ Create 1st OpenVPN tunnel

Description *	
Protocol	UDP
UDP port	1194
Remote IP Address *	
Remote Subnet *	
Remote Subnet Mask *	
Redirect Gateway	no
Local Interface IP Address	
Remote Interface IP Address	
Ping Interval *	sec
Ping Timeout *	sec
Renegotiate Interval *	sec
Max Fragment Size *	bytes
Compression	LZO
NAT Rules	not applied
Authenticate Mode	none
Pre-shared Secret	
CA Certificate	
DH Parameters	
Local Certificate	
Local Private Key	
Username	
Password	
Extra Options *	
* can be blank	

Example of the OpenVPN tunnel configuration:

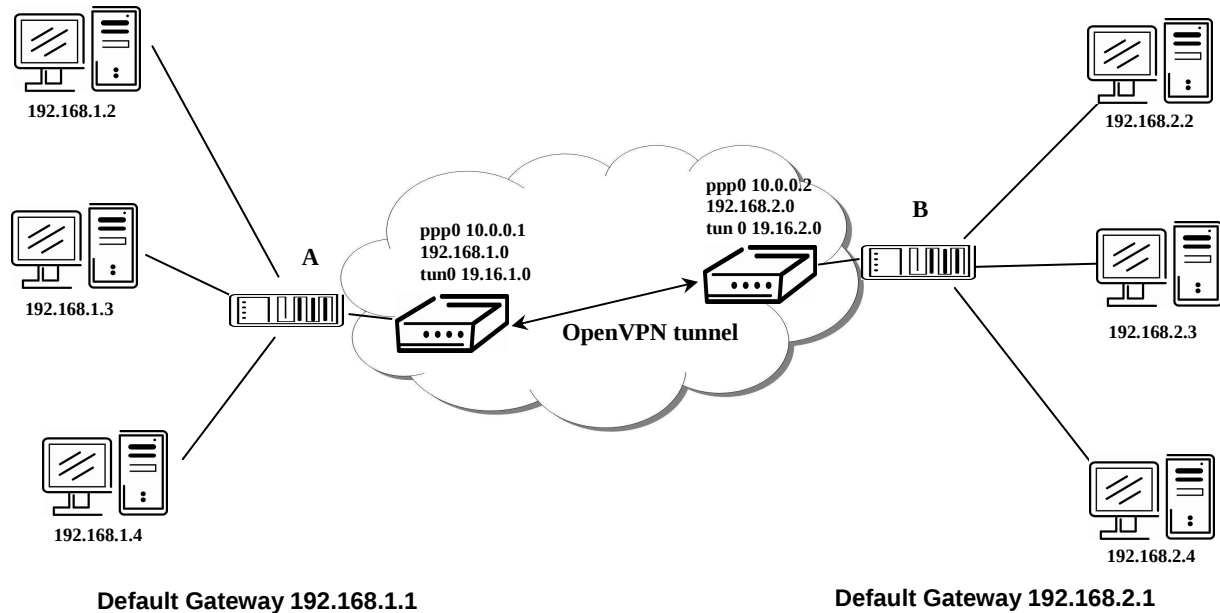

OpenVPN tunnel configuration:

	A	B
Protocol	UDP	UDP
UDP Port	1194	1194
Remote IP Address:	10.0.0.2	10.0.0.1
Remote Subnet:	192.168.2.0	192.168.1.0
Remote Subnet Mask:	255.255.255.0	255.255.255.0
Local Interface IP Address:	19.16.1.0	19.16.2.0
Remote Interface IP Address:	19.16.2.0	19.18.1.0
Compression	LZO	LZO
Authenticate mode:	none	none

4.13. Ipvsec Tunnel Configuration

Ipvsec tunnel configuration can be called up by option *Ipvsec* item in the menu. Ipvsec tunnel allows protected connection of two networks LAN to the one which looks like one homogenous. In the *Ipvsec Tunnels Configuration* window are four rows, each row for one configured IPsec tunnel. The column *Create* switches on tunnels, other columns contain values view set in the *Ipvsec Tunnel Configuration* windows; configuration is possible by the *Edit* button.

IPsec Tunnels Configuration				
	Create	Description	Remote IP Address	Remote Subnet
1st	no			Edit
2nd	no			Edit
3rd	no			Edit
4th	no			Edit

In the *Ipvsec Tunnel Configuration* windows it is possible to define the tunnel name (Description), off – side tunnel IP address or domain name (*Remote IP Address*), identification of off-side tunnel (*Remote ID*), address nets behind off – side tunnel (*Remote Subnet*), mask nets behind off – side tunnel (*Remote Subnet Mask*), identification of local side (*Local ID*), local subnet address (*Local Subnet*), local network mask (*Local Subnet Mask*), sharable key for both parties tunnel (*Pre shared Key*), service life keys (*Key Lifetime*) and service life IKA SA (*IKE Lifetime*). *Rekey Margin* specifies how long before connection expiry should attempt to negotiate a replacement begin. *Rekey Fuzz* specifies the maximum percentage by which *Rekey Margin* should be randomly increased to randomize re-keying intervals. Parameter *DPD Delay* defines time after which is made Ipvsec tunnel verification. By parameter *DPD Timeout* is set timeout of the answer. If address translation between two end points of the Ipvsec tunnel is used, it needs to allow NAT Traversal (*Enabled*). If parameter *Aggressive mode* is enabled, then establishing of Ipvsec tunnel will be faster, but encryption will set permanently on 3DES-MD5. Authentication is possible to set by parameter *Authenticate mode*, at choice are following possibilities: *Pre-shared key* or *X.509 Certificate*. Parameter *Pre-shared Key* set shared key for both off-side tunnel. At authentication by X.509 certificate it is necessary put in certificates *CA Certificate*, *Remote Certificate* and *Local Certificate* and private key *Local Private Key* and *Local Passphrase*. The certificates and private keys have to be in PEM format. As certificate it is possible to use only certificate which has start and stop tag certificate. Parameters ID contain two parts: *hostname* and *domain-name*. Items which can be blank, are used for to exact Ipvsec tunnel identification. By the help of parameter *Extra Options* it is possible to define additional parameters of the Ipvsec tunnel, for example secure parameters etc.

The changes in settings will apply after pressing the *Apply* button.


IPsec Tunnel Configuration

☐ Create 1st IPsec tunnel

Description *	
Remote IP Address *	
Remote ID *	
Remote Subnet *	
Remote Subnet Mask *	
Local ID *	
Local Subnet *	
Local Subnet Mask *	
Key Lifetime	3600 sec
IKE Lifetime	3600 sec
Rekey Margin	540 sec
Rekey Fuzz	100 %
DPD Delay *	sec
DPD Timeout *	sec
NAT Traversal	disabled ▼
Aggressive Mode	disabled ▼
Authenticate Mode	pre-shared key ▼
Pre-shared Key	
CA Certificate	
Remote Certificate	
Local Certificate	
Local Private Key	
Local Passphrase *	
Extra Options *	

* can be blank

Example of the IPsec Tunnel configuration:

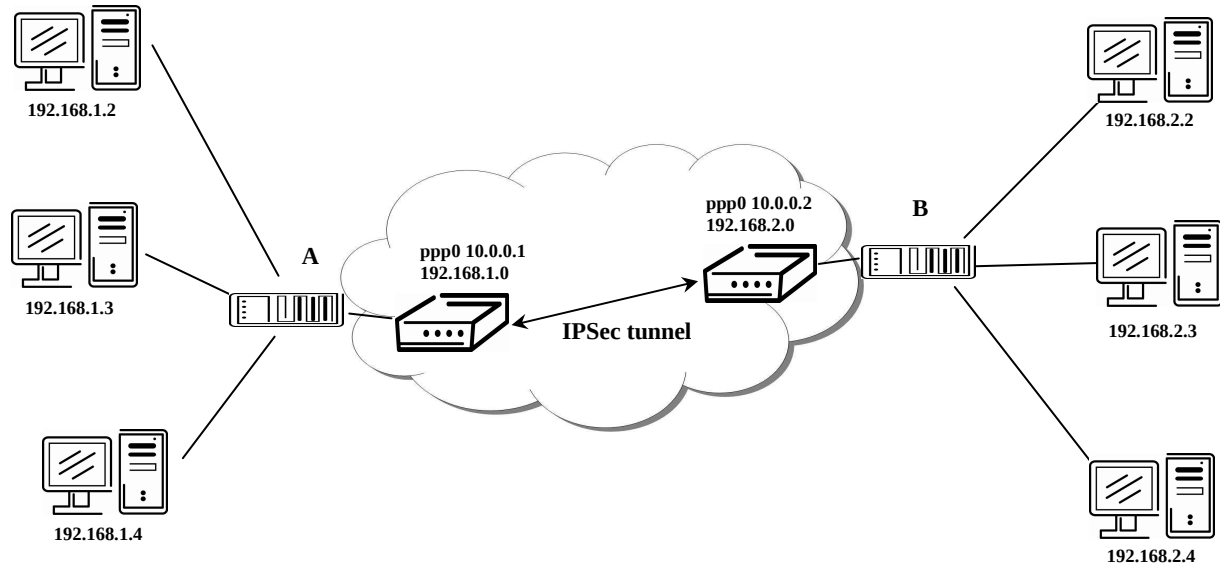

Default Gateway 192.168.1.1

Default Gateway 192.168.2.1

Ipssec tunnel configuration:

	A	B
Remote IP Address:	10.0.0.2	10.0.0.1
Remote Subnet:	192.168.2.0	192.168.1.0
Remote Subnet Mask:	255.255.255.0	255.255.255.0
Local Subnet:	192.168.1.0	192.168.2.0
Local Subnet Mask:	255.255.255.0	255.255.255.0
Authenticate mode:	pre-shared key	pre-shared key
Pre-shared key	test	test

4.14. GRE Tunnel Configuration

To enter the GRE tunnels configuration, select the *GRE* menu item. It is possible to configure up to four GRE tunnels. In the *GRE Tunnels Configuration* window are four rows, each row for one configured GRE tunnel. The column *Create* switch on tunnels, other columns contain values view set in the *GRE Tunnel Configuration* windows; configuration is possible by *Edit* button.

GRE Tunnels Configuration				
	Create	Description	Remote IP Address	Remote Subnet
1st	no			Edit
2nd	no			Edit
3rd	no			Edit
4th	no			Edit

The tunnels are active after entry of choice *Create x GRE tunnel*. In the singles window it is possible to define the IP address of the remote side of the tunnel (*Remote External IP Address*), internal IP address of the local side of the tunnel (*Local Internal IP Address*), internal IP address of the remote side of the tunnel (*Remote Internal IP Address*), address of the network behind the remote side of the tunnel (*Remote Subnet*) and the mask of the network behind the remote side of the tunnel (*Remote Subnet Mask*). The GRE tunnel is used for connection of two networks to one that appears as one homogenous. Last item (*Pre-shared Key*) defines 32b number that identifies shared key of tunnel. This code must be on both sides of same.



Attention, GRE tunnel doesn't connect itself via NAT.

The changes in settings will apply after pressing the *Apply* button.

GRE Tunnel Configuration

☐ Create 1st GRE tunnel

Description *

Remote IP Address

Remote Subnet *

Remote Subnet Mask *


Local Interface IP Address *

Remote Interface IP Address *

Pre-shared Key *

* can be blank

Example of the GRE Tunnel configuration:

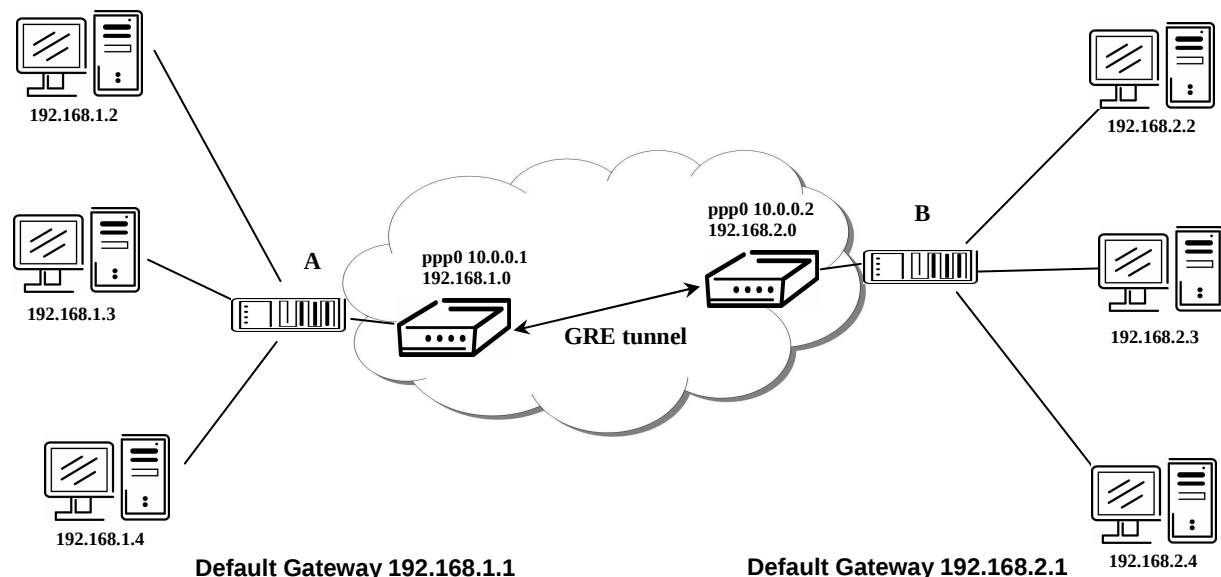

GRE tunnel Configuration:


	A	B
Remote External IP Address:	10.0.0.2	10.0.0.1
Remote Subnet:	192.168.2.0	192.168.1.0
Remote Subnet Mask:	255.255.255.0	255.255.255.0

4.15. L2TP tunnel Configuration


To enter the L2TP tunnels configuration, select the *L2TP* menu item. L2TP tunnel allows protected connection by password of two networks LAN to the one which it looks like one homogenous. The tunnels are active after enter of choice *Create L2TP tunnel*.

In the window it is possible to define L2TP tunnel mode (Mode) on the router side, in case of client IP address of server (Server IP Address), start IP address in range, which is offered by server to clients (Client Start IP Address), end IP address in range, which is offered by server to clients (Client End IP Address), IP address of the local side of the tunnel (Local IP Address), IP address of the remote side of the tunnel (Remote IP Address), address of the network behind the remote side of the tunnel (Remote Subnet), the mask of the network behind the remote side of the tunnel (Remote Subnet Mask), username for login to L2TP tunnel (Username) and password (Password).

The changes in settings will apply after pressing the *Apply* button.

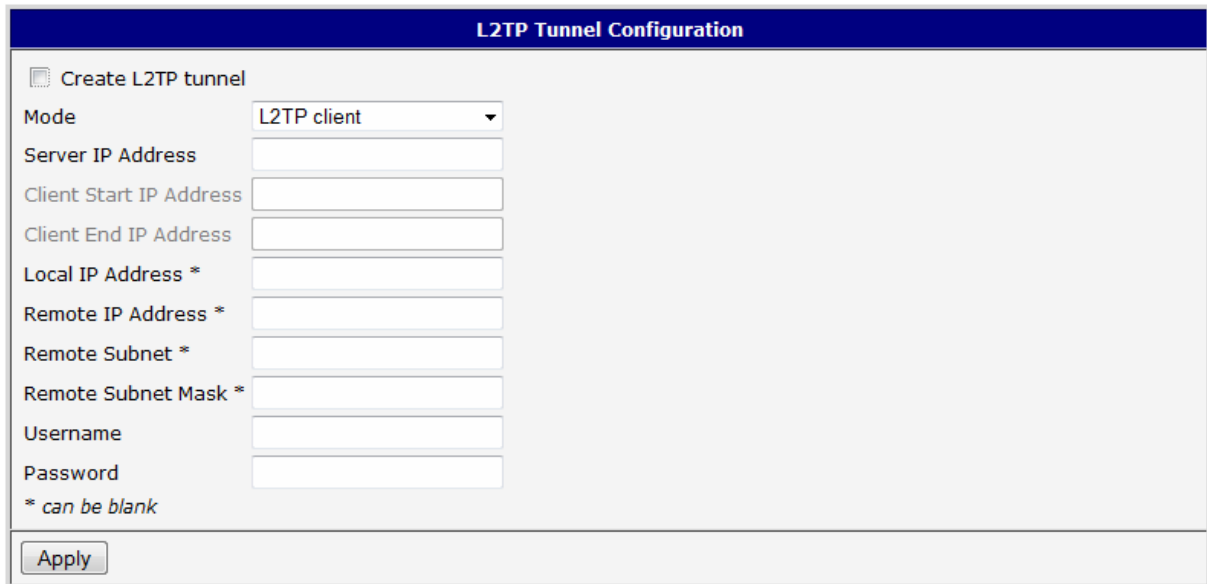A screenshot of the 'L2TP Tunnel Configuration' window. The window has a dark blue title bar with the text 'L2TP Tunnel Configuration'. Below the title bar is a light gray area with a checkbox labeled 'Create L2TP tunnel'. Underneath this are several input fields: 'Mode' (a dropdown menu showing 'L2TP client'), 'Server IP Address', 'Client Start IP Address', 'Client End IP Address', 'Local IP Address *', 'Remote IP Address *', 'Remote Subnet *', 'Remote Subnet Mask *', 'Username', and 'Password'. A note at the bottom left of the input area says '* can be blank'. At the bottom of the window is a button labeled 'Apply'.

Example of the L2TP Tunnel configuration:

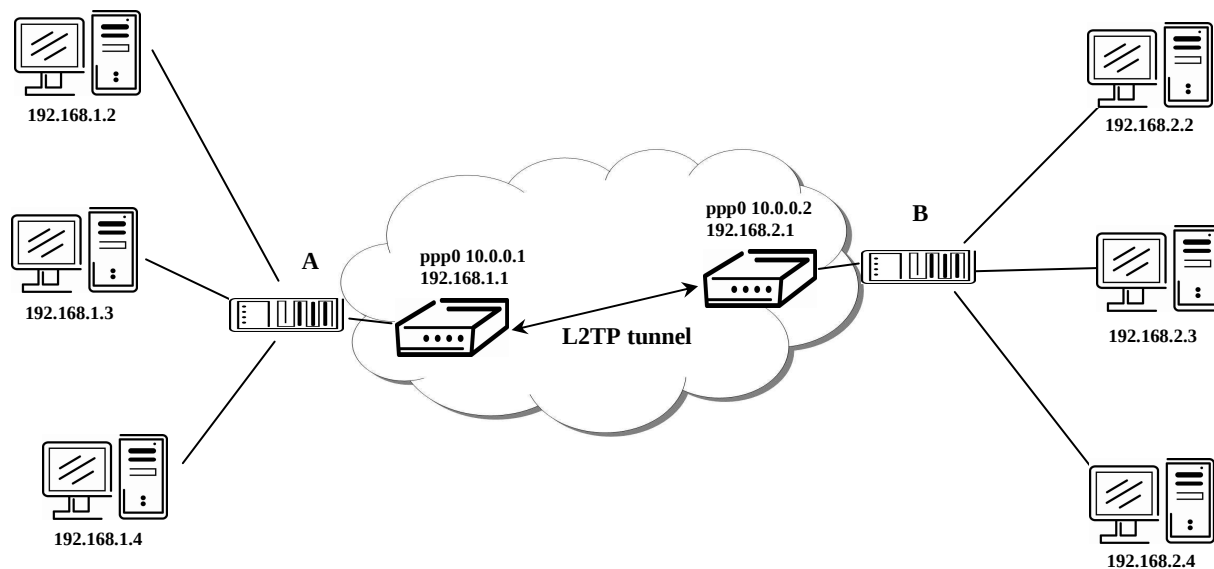

Default Gateway 192.168.1.1

Default Gateway 192.168.2.1


L2TP tunnel Configuration:

	A	B
Mode	L2TP Server	L2TP Client
Server IP Address	---	10.0.0.1
Client Start IP Address:	192.168.1.2	---
Client End IP Address:	192.168.1.254	---
Local IP Address:	192.168.1.1	---
Remote IP Address	---	---
Remote Subnet	192.168.2.0	192.168.1.0
Remote Subnet Mask	255.255.255.0	255.255.255.0
Username	user	user
Password	password	password


4.16. DynDNS Client Configuration

DynDNS client Configuration can be called up by option DynDNS item in the menu. In the window can be defined a third order domain registered on server www.dyndns.org (*Hostname*), user name (*Username*) and password (*Password*). If you want to use a different server than www.dyndns.org, fill in his address to the item server (*Server*). If this item is left blank, the default server is used.

The changes in settings will apply after pressing the *Apply* button.

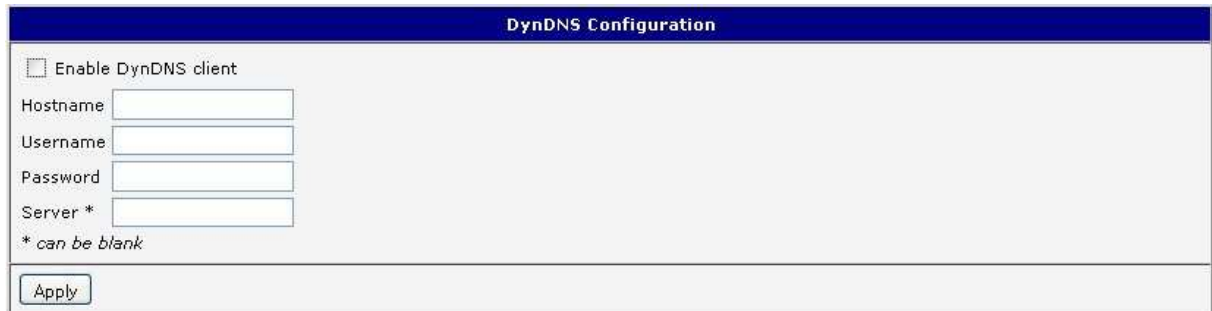

Example of the DynDNS client configuration with domain conel.dyndns.org, username conel, password conel and default server <http://members.dyndns.org>:

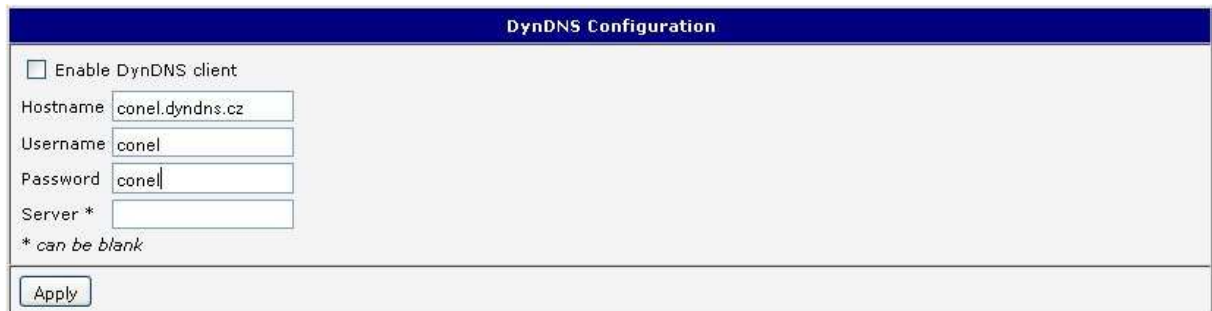

If DNS servers are not assigned by the operator, then it is possible to configure it by inserting of script into start up window:

echo "nameserver xxx.xxx.xxx.xxx" > /□et/resolf.conf, where xxx.xxx.xxx.xxx is IP address of the first DNS server,

echo "nameserver yvy.yyy.yyy.yyy" >> /□et/resolf.conf, where yvy.yyy.yyy.yyy is IP address of the □ettin DNS server.

4.17. NTP Client Configuration

NTP client Configuration can be called up by option NTP item in the menu. In the window can be defined the address prime (Primary NTP server Address) and secondary NTP server (Secondary NTP server Address), by the help of which the router, after first interface to the GPRS from make power supply, will adjust the inner clock. Example of NTP server address can be seen on ntp.isc.org/bin/view/Servers/StratumOneTimeServers. By parameter *Timezone* it is possible to set the time zone of the router. By parameter *Daylight Saving Time* is possible to define time shift.

By parameter *Enable local NTP service* it is possible to set the router in mode, that it can serve as NTP server for other devices.

The changes in settings will apply after pressing the *Apply* button.

NTP Configuration	
☐	Enable local NTP service
☐	Synchronize clock with NTP server on power up
Primary NTP Server	
Secondary NTP Server	
Timezone	GMT
Daylight Saving Time	no
Apply	

Example of the NTP configuration with set primary and secondary NTP server and with daylight saving time:

NTP Configuration	
☐	Enable local NTP service
☒	Synchronize clock with NTP server on power up
Primary NTP Server	ntp.cesnet.cz
Secondary NTP Server	tik.cesnet.cz
Timezone	GMT
Daylight Saving Time	yes
Apply	

4.18. SNMP Configuration

To enter the SNMP Configuration it is possible with SNMP agent ver.1 configuration which sends information about the router, eventually about the status of the expansion port CNT or M-BUSD.

The *Community* item defines the password for access to the SNMP agent. Item *Contact* identifies a person who manages the router together with information how to contact this person, item *Name* is the designation of the router and item *Location* describes the physical placing of the router.

By choosing *Enable XC-CNT extension* it is possible to monitor the expansion port CNT inputs status or by choosing *Enable M-BUS extension* and enter the *Baudrate*, *Parity*

and *Stop Bits* it is possible to monitor the meter status connected to the expansion port M-BUSD status.

SNMP Configuration	
☒	Enable SNMP agent
Community	public
Contact *	
Name *	
Location *	
☐	Enable XC-CNT extension
☐	Enable M-BUS extension
Baudrate	300
Parity	even
Stop Bits	1
* can be blank	
Apply	

Every monitor value is uniquely identified by the help of number identifier **OID** – *Object Identifier*. OID is finished by „9“.

For the expansion port CNT the following range of OID is used:


OID	Description
.1.3.6.1.4.1.30140.2.1.1.0	Analogy input AN1 (range 0-4095)
.1.3.6.1.4.1.30140.2.1.2.0	Analogy input AN2 (range 0-4095)
.1.3.6.1.4.1.30140.2.1.3.0	Counter input CNT1 (range 0-4294967295)
.1.3.6.1.4.1.30140.2.1.4.0	Counter input CNT2 (range 0-4294967295)
.1.3.6.1.4.1.30140.2.1.5.0	Binary input BIN1 (values 0,1)
.1.3.6.1.4.1.30140.2.1.6.0	Binary input BIN2 (values 0,1)
.1.3.6.1.4.1.30140.2.1.7.0	Binary input BIN3 (values 0,1)
.1.3.6.1.4.1.30140.2.1.8.0	Binary input BIN4 (values 0,1)

For the expansion port M-BUSD the following range of OID is used:

OID	Description
.1.3.6.1.4.1.30140.2.2.<address>.1.0	IdNumber – meter number
.1.3.6.1.4.1.30140.2.2.<address>.2.0	Manufacturer
.1.3.6.1.4.1.30140.2.2.<address>.3.0	Version – specified meter version
.1.3.6.1.4.1.30140.2.2.<address>.4.0	Medium – type of metered medium
.1.3.6.1.4.1.30140.2.2.<address>.5.0	Status – errors report
.1.3.6.1.4.1.30140.2.2.<address>.6.0	0. VIF – value information field
.1.3.6.1.4.1.30140.2.2.<address>.7.0	0. measured value
.1.3.6.1.4.1.30140.2.2.<address>.8.0	1. VIF – value information field
.1.3.6.1.4.1.30140.2.2.<address>.9.0	1. measured value
...	
.1.3.6.1.4.1.30140.2.2.<address>.100.0	47. VIF – value information field
.1.3.6.1.4.1.30140.2.2.<address>.101.0	47. measured value

The meter address can be from range 0..254 when 254 is broadcast.

Example of the MIB browser:

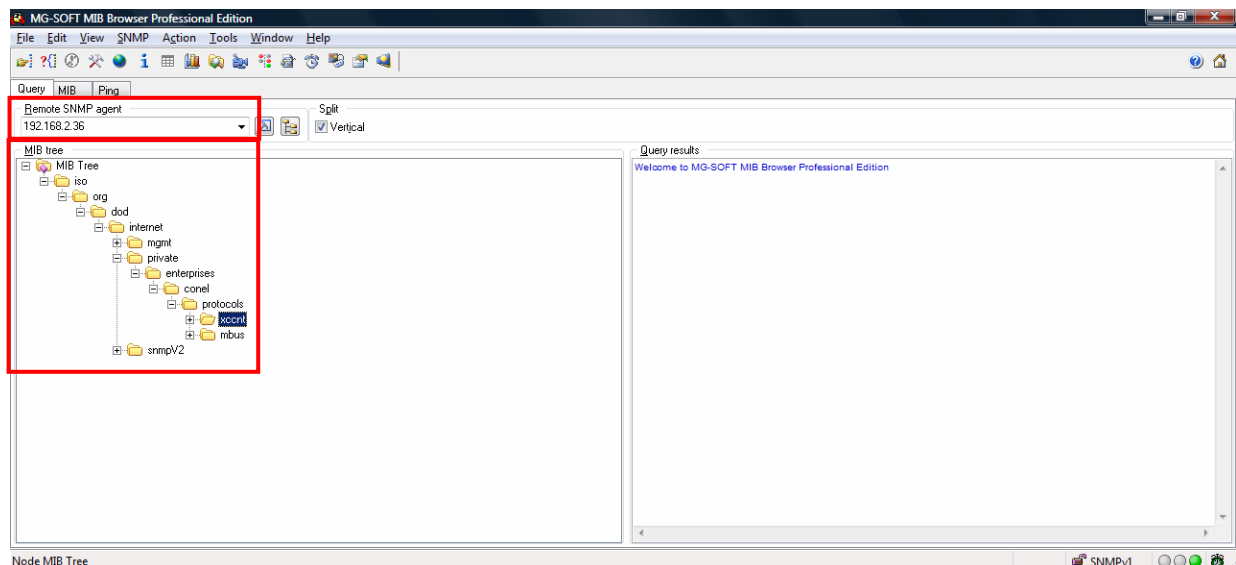

It is important to set the IP address of the SNMP agent (ER 75i) in field *Remote SNMP agent*. After enter the IP address is in a *MIB tree* part is possible show object identifier. The path to objects is:

iso->org->dod->internet->private->enterprises->conel->protocols

4.19. SMTP Configuration

Configuration of SMTP can be entered by clicking on *SMTP* menu item. In the window, there is possible to enter login values to e-mail server, from which e-mails will be sent. The required values are: address of SMTP server (Server Address), login name (Username), password and e-mail address (Email Address). It is possible to send only one file in attachment.

After that is possible to send e-mail messages by using this command:

email -T [recipient address] -S[subject] -M[message body] -A[path to attachment]

SMTP Configuration	
Server Address	
Username	
Password	
Email Address	
Apply	

Example of sending e-mail:

email -T info@conel.cz -S Test message -M The whole text of message

4.20. SMS Configuration

In the SMS Configuration menu it is possible to select automatic sending of SMS messages following power up (*Send SMS on power up*) and at the start (*Send SMS on PPP connect*) or the loss (*Send SMS on PPP disconnect*) of the PPP connection and at data limit exceeded (*Send SMS when datalimit exceeded*). With switch-on parameter Send SMS when binary input is active it is possible to define SMS for each of four binary inputs in windows BIN1-SMS, BIN2-SMS, BIN3-SMS and BIN4-SMS, which will be sent if those binary inputs are active. It is possible to send information to three telephone numbers. *Unit ID* is the name of the router that it will send an SMS message to. Unit ID may have a random form.

In the second part of the window it is possible to set function *Enable remote control via SMS*. After this it is possible to establish and close PPP connection by SMS message. This control can be configured for up to three numbers. If is set *Enable remote control via SMS*, all incoming SMS are processed and deleted. In the default settings this parameter is turned on.



If no phone number is filled in, then it is possible to restart the router with the help of SMS in the form of *Reboot* from any phone number. While filling of one, two or three numbers it is possible to control the router with the help of an SMS sent only from these numbers. While filling of sign "*" it is possible to control the router with the help of an SMS sent from every numbers.



Control SMS message doesn't change the router configuration. If the router is switched to offline mode by the SMS message the router will be in this mode up to next restart. This behaviour is the same for all control SMS messages.

It is possible to send controls SMS in the form:

SMS	Description
go online sim 1	Switch to SIM1 card
go online sim 2	Switch to SIM2 card
go online	Switch router in online mode
go offline	PPP connection termination
set out1=0	Set output on 0 on the Expansion port CNT
set out1=1	Set output on 1 on the Expansion port CNT
reboot	Router restart
get ip	Router send answer with IP address SIM card

By choosing *Enable AT-SMS protocol on external port* and *Baudrate* it is possible to send/receive an SMS on the serial port.

By choosing *Enable AT-SMS protocol on TCP port* and enter the *TCP port* it is possible to send/receive an SMS on the TCP port. SMS messages are sent by the help of a standard AT commands. More about the AT commands in reference [1].

Choices *Enable AT-SMS protocol on external port* and *Enable AT-SMS protocol on TCP port* mustn't be chosen at the same time.

SMS Configuration	
☐	Send SMS on power up
☐	Send SMS on PPP connect
☐	Send SMS on PPP disconnect
☐	Send SMS when datalimit is exceeded
☐	Send SMS when binary input on expansion port (BIN1-BIN4) is active
Phone Number 1	
Phone Number 2	
Phone Number 3	
Unit ID *	
BIN1 - SMS *	
BIN2 - SMS *	
BIN3 - SMS *	
BIN4 - SMS *	
☒	Enable remote control via SMS
Phone Number 1	
Phone Number 2	
Phone Number 3	
☐	Enable AT-SMS protocol on expansion port
Baudrate	9600
☐	Enable AT-SMS protocol over TCP
TCP port	
* can be blank	
Apply	

After powering up the router, at introduction of the telephone number comes SMS in the form of:

ER75i (Unit ID) has been powered up. PLMN:xxxxx,Cell:xxxx,Channel:xx,Level:-xxdBm.

Where PLMN is – number of mobile operator, Cell – number of cell, Channel – used channel, Level – level signal

After PPP connect, at introduction of the telephone number comes SMS in the form:

ER75i (Unit ID) has established PPP connection. IP address xxx.xxx.xxx.xxx

After PPP disconnect, at introduction of the telephone number comes SMS in the form:

ER75i (Unit ID) has lost PPP connection. IP address xxx.xxx.xxx.xxx

Configuration of sending this SMS is following:

SMS Configuration	
☒	Send SMS on power up
☒	Send SMS on PPP connect
☒	Send SMS on PPP disconnect
☒	Send SMS when datalimit is exceeded
☒	Send SMS when binary input on expansion port (BIN1-BIN4) is active
Phone Number 1	732123456
Phone Number 2	723123456
Phone Number 3	721123456
Unit ID *	Router
BIN1 - SMS *	Bin1
BIN2 - SMS *	Bin2
BIN3 - SMS *	Bin3
BIN4 - SMS *	Bin4
☒	Enable remote control via SMS
Phone Number 1	728123456
Phone Number 2	766123456
Phone Number 3	
☐	Enable AT-SMS protocol on expansion port
Baudrate	9600
☐	Enable AT-SMS protocol over TCP
TCP port	
* can be blank	
Apply	

Example of the router configuration for SMS sending via serial interface:

SMS Configuration	
☐ Send SMS on power up	
☐ Send SMS on PPP connect	
☐ Send SMS on PPP disconnect	
☐ Send SMS when datalimit is exceeded	
☐ Send SMS when binary input on expansion port (BIN1-BIN4) is active	
Phone Number 1	
Phone Number 2	
Phone Number 3	
Unit ID *	
BIN1 - SMS *	
BIN2 - SMS *	
BIN3 - SMS *	
BIN4 - SMS *	
☐ Enable remote control via SMS	
Phone Number 1	
Phone Number 2	
Phone Number 3	
☒ Enable AT-SMS protocol on expansion port	
Baudrate	9600
☐ Enable AT-SMS protocol over TCP	
TCP port	
* can be blank	
Apply	

Example of the router configuration for controlling via SMS from every phone numbers:

SMS Configuration	
☒	Send SMS on power up
☒	Send SMS on PPP connect
☒	Send SMS on PPP disconnect
☒	Send SMS when datalimit is exceeded
☒	Send SMS when binary input on expansion port (BIN1-BIN4) is active
Phone Number 1	732123456
Phone Number 2	723123456
Phone Number 3	721123456
Unit ID *	Router
BIN1 - SMS *	Bin1
BIN2 - SMS *	Bin2
BIN3 - SMS *	Bin3
BIN4 - SMS *	Bin4
☒	Enable remote control via SMS
Phone Number 1	*
Phone Number 2	
Phone Number 3	
☐	Enable AT-SMS protocol on expansion port
Baudrate	9600
☐	Enable AT-SMS protocol over TCP
TCP port	
* can be blank	
Apply	

Example of the router configuration for controlling via SMS from two phone numbers:

SMS Configuration	
☒	Send SMS on power up
☒	Send SMS on PPP connect
☒	Send SMS on PPP disconnect
☒	Send SMS when datalimit is exceeded
☒	Send SMS when binary input on expansion port (BIN1-BIN4) is active
Phone Number 1	732123456
Phone Number 2	723123456
Phone Number 3	721123456
Unit ID *	Router
BIN1 - SMS *	Bin1
BIN2 - SMS *	Bin2
BIN3 - SMS *	Bin3
BIN4 - SMS *	Bin4
☒	Enable remote control via SMS
Phone Number 1	728123456
Phone Number 2	766123456
Phone Number 3	
☐	Enable AT-SMS protocol on expansion port
Baudrate	9600
☐	Enable AT-SMS protocol over TCP
TCP port	
* can be blank	
Apply	

The SMS is possible to do for example in HyperTerminal program. After establishing connection with the router via serial interface or Ethernet, it is possible to do with SMS by the help of the next AT commands (more about AT commands see reference [1]):

AT commands	Description
AT+CMGF=1	Set the text mode for SMS writing
AT+CMGS="tel. number"	Commands enables to send SMS on entered tel. number
AT+CMGL=ALL	List of all SMS messages
AT+CMGR=<index>	Read of the definite SMS (all SMS has our index)
AT+CMGD=<index>	SMS delete according to index

For the text mode for SMS writing is used command **AT+CMGF=1**.

AT+CMGF=1 Enter

OK

The SMS message is created by the help of command **AT+CMGS=<tel. number>**. After *Enter* button is pressed is displayed mark **>**, behind this mark it is possible to write your own SMS message. The SMS message is sent by the help of **CTRL+Z** (SMS sending takes a few minutes). SMS writing is possible to cancel by pressing *Esc*.

AT+CMGS="712123456" Enter

>Hello World! CTRL+Z (keys combination)

OK

It is possible to find the new SMS by the help of command **AT+CMGL=ALL**. This command reproaches all SMS messages.

AT+CMGL=ALL Enter

+CMGL: <index>, <status>,<sender number>, ,<date>,<time>
SMS text.

+CMGL: 1,"REC UNREAD","+420721123456",,"08/02/02, 10:33:26+04"
Hello World!

Where <index> is ordinal number of the SMS,

<status> is SMS status:

REC UNREAD – SMS unread
REC READ – SMS read
STO UNSENT – stored unsent SMS
STO SENT – stored sent SMS
ALL – all SMS messages

<sender number> is tel. number from which the SMS was receive,

<date> is date of SMS received,

<time> is time of SMS received.

It is possible to read the new SMS message by command **AT+CMGR=<index>**.

AT+CMGR=1 Enter

+CMGL: <index>, <status>,<sender number>, ,<date>,<time>
SMS text.

+CMGL: 1,"REC READ","+420721123456",,"08/01/12, 9:48:04+04"
Hello World!

Received SMS is possible delete by command **AT+CMGD=<index>**.

AT+CMGD=1 Enter

OK

4.21. Expansion Port Configuration

The expansion port configuration can be called up by airbrush option External Port in menu. Inside the window can be defined *Baudrate*, number of *Data bits*, *Parity*, number of *Stop bits*, *Protocol* and *Mode*. *Split timeout* is for messages.

In mode *TCP server* it is necessary to enter the *TCP port*, on which the router will listen to incoming requests about TCP connection. In mode *TCP client* it is necessary to enter the *Server address* and final *TCP port*.


At *Check TCP connection* it activates verification of coupled TCP connection. Inside the window can be define time, after which it will carry out verification of the connection (*Keepalive Time*), waiting time on answer (*Keepalive Interval*) and number of tests (*Keepalive Probes*).

The changes in settings will apply after pressing the *Apply* button.

Expansion Port Configuration	
☐ Enable expansion port access over TCP/UDP	
Port Type	none
Baudrate	9600
Data Bits	8
Parity	none
Stop Bits	1
Split Timeout	20 msec
Protocol	TCP
Mode	server
Server Address	
TCP port	
☐ Check TCP connection	
Keepalive Time	3600 sec
Keepalive Interval	10 sec
Keepalive Probes	5
Apply	

 In case of M-BUS expansion board installed and when chosen protocol is not M-BUS or M-BUS TCP then sent data will be returned back to the device! If e.g. LINE protocol is set-up on this port, then data will return back to the source.

Example of external port configuration:

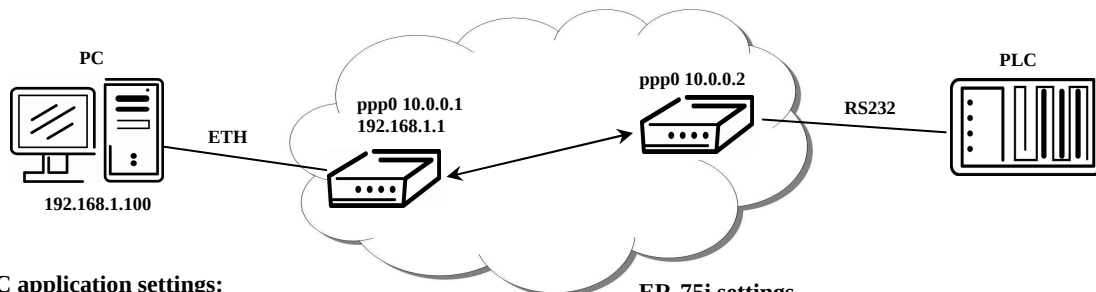


PC application settings:

TCP connection on 10.0.0.2:2000

Default Gateway 192.168.1.1

ER-75i settings

Mode:	TCP server
Server Address:	-
TCP Port:	2000

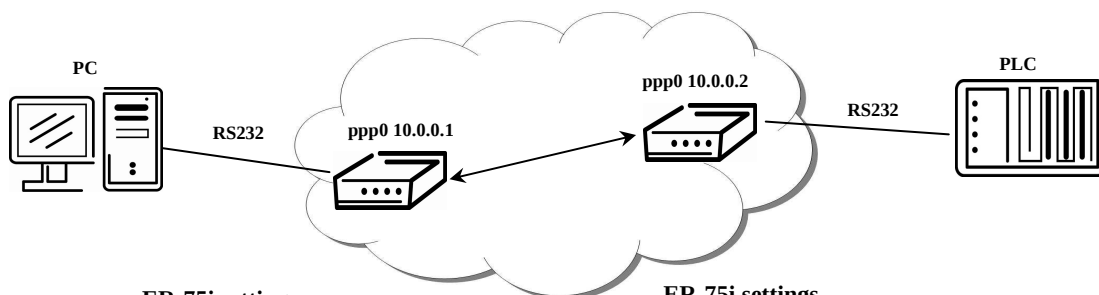

ER-75i settings

Mode:	TCP client
Server Address:	10.0.0.2
TCP Port:	2000


ER-75i settings

Mode:	TCP server
Server Address:	-
TCP Port:	2000

4.22. Start-up script

In the window *Startup Script* it is possible to create own scripts which will be executed after all initial scripts. This script is not stored or restored when using web interface backup or restore option.

The changes in settings will apply after pressing the *Apply* button.

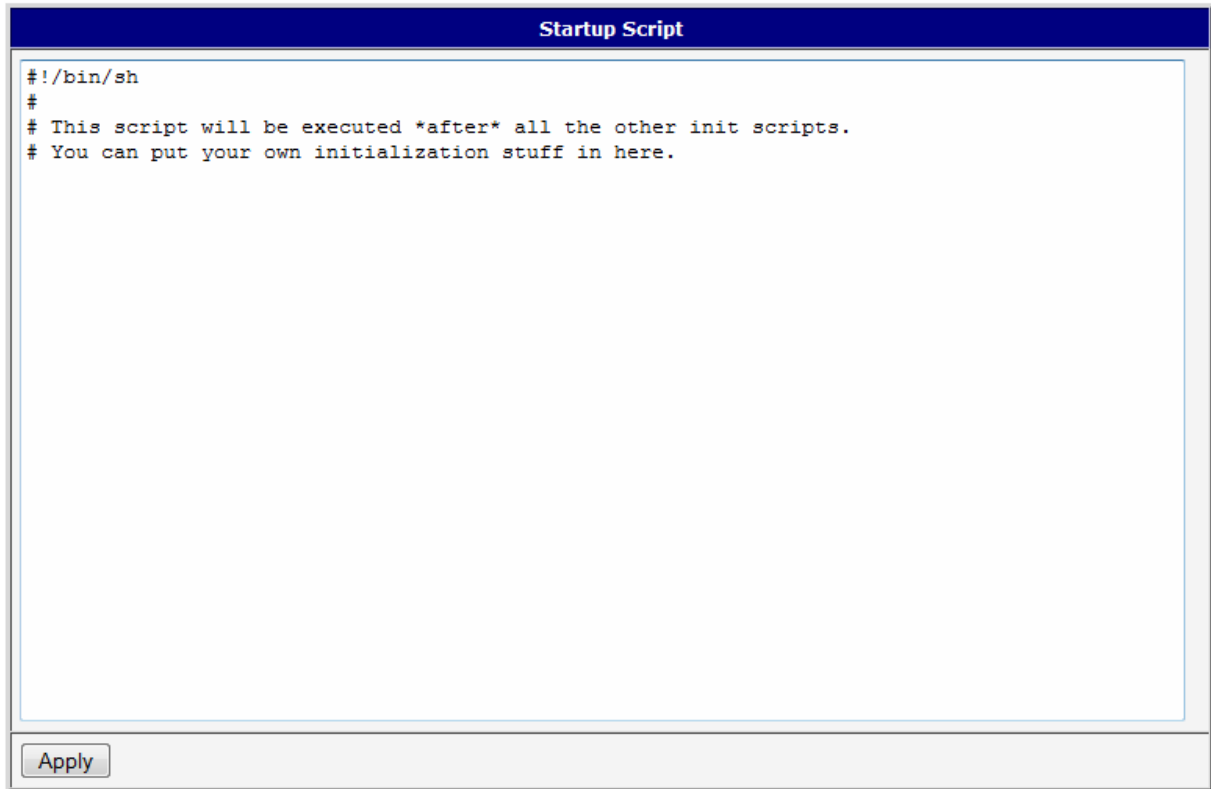A screenshot of a web interface window titled 'Startup Script'. The window has a blue header bar with the title. Below the header is a large text area containing the following text:

```
#!/bin/sh
#
# This script will be executed *after* all the other init scripts.
# You can put your own initialization stuff in here.
```

 At the bottom of the window is a button labeled 'Apply'.

4.22.1. IO program

Program "io" can be used to set binary outputs (syntax: io set out0|out1 0|1) and get state of binary inputs (syntax: io get bin0|bin1|bin2|bin3|bin4).

This is an example how to read inputs by using this program:

```
while true
do
  io get bin4
  BIN4=$?
  if [ "$BIN4" != "$OLD4" ]; then
    if [ "$BIN4" = "1" ]; then
      gsmsms 739546801 "test SMS bin4-1"
    fi
    if [ "$BIN4" = "0" ]; then
      gsmsms 739546801 "test SMS bin4-0"
    fi
    OLD4=$BIN4
  fi
  sleep 2
```


```
io get bin3
BIN3=$?
if [ "$BIN3" != "$OLD3" ]; then
    if [ "$BIN3" = "1" ]; then
        gsmsms 739546801 "test SMS bin3-1"
    fi
    if [ "$BIN3" = "0" ]; then
        gsmsms 739546801 "test SMS bin3-0"
    fi
    OLD3=$BIN3
fi
sleep 2
done
```

 Change take effect after restarting router by the help of button *Reboot* in web administration or by SMS message.

4.23. Up/Down script

In the window *Up/Down Script* it is possible to create own scripts. In the item *Up script* is defined scripts, which begins after establishing a PPP connection. In the item *Down Script* is defines script, which begins after lost a PPP connection. This script is not stored or restored when using web interface backup or restores option.

The changes in settings will apply after pressing the *Apply* button.

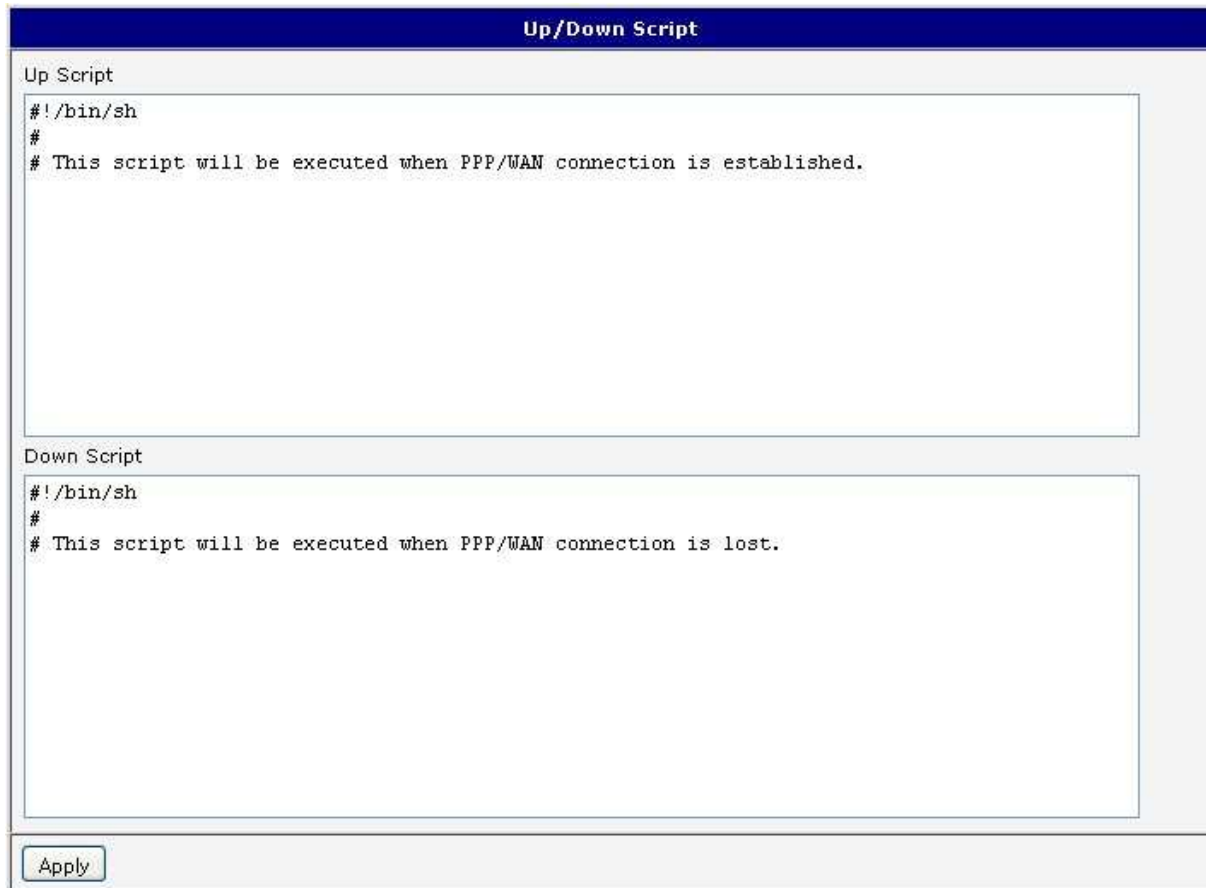

The screenshot shows a web interface window titled "Up/Down Script". It contains two text areas for script configuration. The "Up Script" area contains the following text: `#!/bin/sh`, `#`, and `# This script will be executed when PPP/WAN connection is established.`. The "Down Script" area contains the following text: `#!/bin/sh`, `#`, and `# This script will be executed when PPP/WAN connection is lost.`. At the bottom of the window is an "Apply" button.



Change take effect after restarting router by the help of button *Reboot* in web administration or by SMS message.

4.24. Automatic update configuration

In the window *Automatic update* it is possible to set automatic configuration update. This choice enables that the router automatically downloads the configuration and the newest firmware from the server itself. The configuration and firmware are stores on the server.

By *Enable automatic update of configuration* it is possible to enable automatic configuration update. By parameter *Base URL* it is possible to enter base part of the domain or IP address, from which the configuration file will be downloaded. In the case that *Unit ID* is empty, the contents of parameter *Unit ID* or MAC address is added to *Base URL*. The configuration file name is from parameter *Base URL*, hardware MAC address of ETH0 interface and *cfg* extension. Hardware MAC address and *cfg* extension is connected automatically and it isn't needed to enter this. By parameter *Unit ID* enabled it defines the

concrete configuration name which will be download to the router. When using parameter *Unit ID*, hardware MAC address in configuration name will not be used.

Automatic configuration update starts 5 minutes after turning on the router and then every 24 hours or it is possible to set the time of automatic configuration in parameter *Update Hour*. If the entered URL is different configuration than in the router then the router downloads this configuration and restarts itself.

The changes in settings will apply after pressing the *Apply* button.

Automatic Update	
☐	Enable automatic update of configuration
☐	Enable automatic update of firmware
Base URL	
Unit ID *	
Update Hour *	
* can be blank	
Apply	

4.25. Change profile

To open the dialog box for changing profile select the *Change Profile* menu item. Profile switch is making by press the button *Apply*. Change take effect after restarting router by the help of button *Reboot* in web administration or by SMS message. It is possible select the standard profile or up to three alternative profiles. It is possible to copy actual configuration to selected configuration by selecting *Copy settings from current profile to selected profile*.

Change Profile	
Profile	Standard
☐	Copy settings from current profile to selected profile
Apply	

4.26. Change password

To open the dialog box for changing the access password select the *Change Password* menu item. The new password will be saved after pressing the *Apply* button.

In basic settings of the router the password is set on default form *root*. For higher security of your network we recommend changing this password.

Change Password	
New Password	
Confirm Password	
Apply	

4.27. Set real time clock

One – shot inner clock of the router ☐etting can be called up in option *Set Real Time Clock item* in the menu. Clocks are set according to the engaged NTP server after push-button operation *Appl.*

Set Real Time Clock	
NTP Server Address	
Apply	

4.28. Set SMS service center address

In some cases it is need to set phone number of the SMS service centre because of SMS sending. This parameter cannot be set when the SIM card has set phone number of the SMS service centre. The phone number can to have formed without international prefix xxx xxx xxx or with international prefix for example +420 xxx xxx xxx.

Set SMS Service Center Address	
Service Center Address	
Apply	


4.29. Unlock SIM Card

Possibility to unlock SIM PIN is under *Unlock SIM Card* item. If the inserted SIM card is secured by a PIN number, enter the PIN to field *SIM PIN* and push-button *Apply*.

Unlock SIM Card	
SIM PIN	
Apply	

4.30. Send SMS

Sending SMS messages is possible in menu *Send SMS*. The SMS message will be sent after entering the *Phone number* and text SMS (*Message*) and by pushing button *Send*.

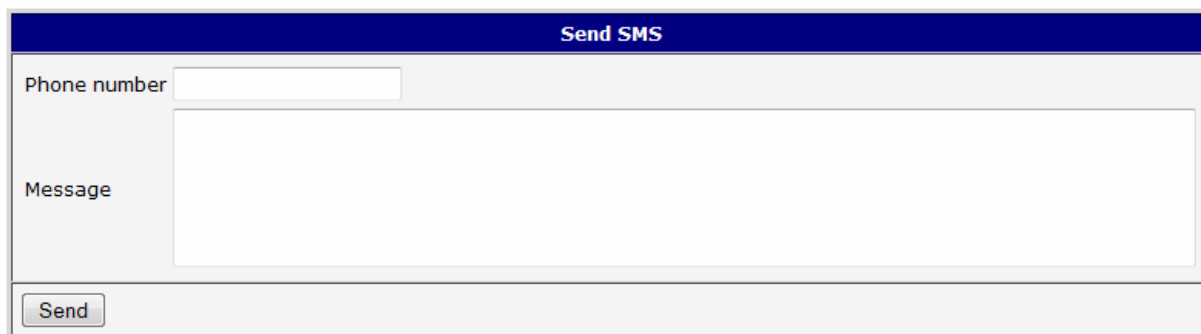A web form titled "Send SMS" with a dark blue header. It contains two input fields: "Phone number" and "Message". The "Message" field is a larger text area. At the bottom left, there is a "Send" button.

SMS message sending via HTTP request is in the form:

```
GET /send_exec.cgi?phone=%2B420712345678&message=Test HTTP/1.1
Authorization: Basic cm9vdDpyb290
```


HTTP request will be sent to TCP connection on router port 80 which sends an SMS message *Test* to phone number *420712345678*. Authorization is in the format "user:password" coded by BASE64, example is for root:root.

4.31. Backup Configuration

The router configuration is possible to save by help of the *Backup Configuration* menu item. After clicking on this menu it is possible to check a destination directory, where it will save the router configuration.

4.32. Restore Configuration

In case it is needed to restore the router configuration, it is possible in *Restore Configuration* menu item to check configuration by help *Browse* button.

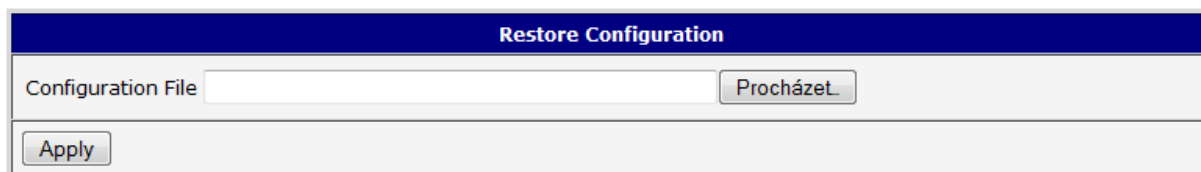A web form titled "Restore Configuration" with a dark blue header. It contains a "Configuration File" input field and a "Procházejte" button. At the bottom left, there is an "Apply" button.

4.33. Update firmware

To view the information about the firmware version and instructions for its update select the *Update Firmware* menu item. The new firmware will be checked after pressing *Browse* button and update the following pressing the *Update* button.

Update Firmware	
Firmware Version : 2.0.8 (2011-02-18)	
New Firmware	Procházet...
Update	

After successful firmware updating the following statement is listed:

Uploading firmware to RAM... ok
Programming FLASH..... ok

Reboot in progress

Continue [here](#) after reboot.

There is information about updating of the FLASH memory.

By firmware actualization from 1.1.1 version the router configuration is remains include IP address. By actualization older firmware than 1.1.1 the IP address will be set on 192.168.1.1 and all values are in defaults state. From firmware version 2.0.3 is provided simply file name check of new firmware file. Upload firmware of different device can cause damage of the router! Total update time lasts for 3 – 4 minutes. During updating of the firmware permanent power supply has to be maintained. We strongly recommend not using distant update because of possible blackout of GPRS connection.

4.34. Reboot

To reboot the router select the *Reboot* menu item and then press the *Reboot* button.

Reboot
The reboot process will take about 20 seconds to complete.
Reboot



4.35. Default settings

After green LED starts to blink it is possible to restore initial settings of the router by pressing button RST on front panel. After press button RST it is restoration of the configuration and reset (green LED will be on).

4.35.1. LAN Configuration

LAN Configuration	
IP Address	192.168.2.233
Subnet Mask	255.255.255.0
Media Type	auto-negotiation
Default Gateway	
DNS Server	
☒ Enable dynamic DHCP leases	
IP Pool Start	192.168.1.2
IP Pool End	192.168.1.254
Lease Time	600 sec
☐ Enable static DHCP leases	
MAC Address	IP Address
Apply	

4.35.2. VRRP Configuration

VRRP Configuration	
☐ Enable VRRP	
Virtual Server IP Address	
Virtual Server ID	
Host Priority	
☐ Check PPP connection	
Ping IP Address	
Ping Interval	sec
Ping Timeout	sec
Ping Probes	
☐ Enable traffic monitoring	
Apply	

4.35.3. Firewall Configuration

Firewall Configuration			
☐ Allow remote access only from specified hosts			
Source	Source IP Address *	Protocol	Target Port *
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
single address ▼		all ▼	
* can be blank			
Apply			

4.35.4. GPRS Configuration

GPRS Configuration			
☒ Create PPP connection			
	Primary SIM card	Secondary SIM card	
APN *			
Username *			
Password *			
Authentication	PAP or CHAP ▼	PAP or CHAP ▼	
IP Address *			
Phone Number *			
Operator *			
PIN *			
MRU	1500	1500	bytes
MTU	1500	1500	bytes
☒ Get DNS addresses from operator			
☐ Check PPP connection (<i>necessary for uninterrupted operation</i>)			
Ping IP Address			
Ping Interval			sec
☐ Enable traffic monitoring			
Data Limit		MB	
Warning Threshold		%	
Accounting Start	1		
Default SIM card	primary ▼		
Backup SIM card	secondary ▼		
☐ Switch to other SIM card when connection fails			
☐ Switch to backup SIM card when roaming is detected			
☐ Switch to backup SIM card when data limit is exceeded			
☐ Switch to primary SIM card after timeout			
Initial Timeout	60	min	
Subsequent Timeout *		min	
Additive Constant *		min	
☐ Enable Dial-In access			
Username *			
Password *			
☐ Enable PPPoE bridge mode			
* can be blank			
Apply			

4.35.5. NAT Configuration

NAT Configuration			
Public Port	Private Port	Type	Server IP Address
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	
		TCP v	

☒ Enable remote HTTP access on port	80
☒ Enable remote FTP access on port	21
☒ Enable remote Telnet access on port	23
☒ Enable remote SNMP access on port	161
☐ Send all remaining incoming packets to default server	
Default Server IP Address	
☒ Masquerade outgoing packets	
Apply	

4.35.6. OpenVPN Tunnel Configuration

OpenVPN Tunnels Configuration				
	Create	Description	Remote IP Address	Remote Subnet
1st	no v			Edit
2nd	no v			Edit
Apply				

OpenVPN Tunnel Configuration

☐ Create 1st OpenVPN tunnel

Description *

Protocol UDP ▼

UDP port 1194

Remote IP Address *

Remote Subnet *

Remote Subnet Mask *

Redirect Gateway no ▼

Local Interface IP Address

Remote Interface IP Address

Ping Interval * sec

Ping Timeout * sec

Renegotiate Interval * sec

Max Fragment Size * bytes

Compression LZO ▼

NAT Rules not applied ▼

Authenticate Mode none ▼

Pre-shared Secret

CA Certificate

DH Parameters

Local Certificate

Local Private Key

Username

Password

Extra Options *

* can be blank

Apply

4.35.7. Ipsec Tunnel Configuration

IPsec Tunnels Configuration					
	Create	Description	Remote IP Address	Remote Subnet	
1st	no				Edit
2nd	no				Edit
3rd	no				Edit
4th	no				Edit

IPsec Tunnel Configuration	
☐ Create 1st IPsec tunnel	
Description *	
Remote IP Address *	
Remote ID *	
Remote Subnet *	
Remote Subnet Mask *	
Local ID *	
Local Subnet *	
Local Subnet Mask *	
Key Lifetime	3600 sec
IKE Lifetime	3600 sec
Rekey Margin	540 sec
Rekey Fuzz	100 %
DPD Delay *	sec
DPD Timeout *	sec
NAT Traversal	disabled
Aggressive Mode	disabled
Authenticate Mode	pre-shared key
Pre-shared Key	
CA Certificate	
Remote Certificate	
Local Certificate	
Local Private Key	
Local Passphrase *	
Extra Options *	
* can be blank	

4.35.8. GRE Tunnel Configuration

GRE Tunnels Configuration				
	Create	Description	Remote IP Address	Remote Subnet
1st	no			Edit
2nd	no			Edit
3rd	no			Edit
4th	no			Edit

GRE Tunnel Configuration	
☐ Create 1st GRE tunnel	
Description *	
Remote IP Address	
Remote Subnet *	
Remote Subnet Mask *	
Local Interface IP Address *	
Remote Interface IP Address *	
Pre-shared Key *	
<i>* can be blank</i>	

4.35.9. L2TP Configuration

L2TP Tunnel Configuration	
☐ Create L2TP tunnel	
Mode	L2TP client
Server IP Address	
Client Start IP Address	
Client End IP Address	
Local IP Address *	
Remote IP Address *	
Remote Subnet *	
Remote Subnet Mask *	
Username	
Password	
<i>* can be blank</i>	

4.35.10. DynDNS Configuration

DynDNS Configuration	
☐ Enable DynDNS client	
Hostname	
Username	
Password	
Server *	
* can be blank	
Apply	

4.35.11. NTP Configuration

NTP Configuration	
☐ Enable local NTP service	
☐ Synchronize clock with NTP server on power up	
Primary NTP Server	
Secondary NTP Server	
Timezone	GMT ▼
Daylight Saving Time	no ▼
Apply	

4.35.12. SNMP Configuration

SNMP Configuration	
☒ Enable SNMP agent	
Community	public
Contact *	
Name *	
Location *	
☐ Enable XC-CNT extension	
☐ Enable M-BUS extension	
Baudrate	300 ▼
Parity	even ▼
Stop Bits	1 ▼
* can be blank	
Apply	

4.35.13. SMTP Configuration

SMTP Configuration	
Server Address	
Username	
Password	
Email Address	
Apply	

4.35.14. SMS Configuration

SMS Configuration	
☐ Send SMS on power up	
☐ Send SMS on PPP connect	
☐ Send SMS on PPP disconnect	
☐ Send SMS when datalimit is exceeded	
☐ Send SMS when binary input on expansion port (BIN1-BIN4) is active	
Phone Number 1	
Phone Number 2	
Phone Number 3	
Unit ID *	
BIN1 - SMS *	
BIN2 - SMS *	
BIN3 - SMS *	
BIN4 - SMS *	
☒ Enable remote control via SMS	
Phone Number 1	
Phone Number 2	
Phone Number 3	
☐ Enable AT-SMS protocol on expansion port	
Baudrate	9600
☐ Enable AT-SMS protocol over TCP	
TCP port	
* can be blank	
Apply	

4.35.15. Expansion Port Configuration

Expansion Port Configuration	
☐ Enable expansion port access over TCP/UDP	
Port Type	none
Baudrate	9600
Data Bits	8
Parity	none
Stop Bits	1
Split Timeout	20 msec
Protocol	TCP
Mode	server
Server Address	
TCP port	
☐ Check TCP connection	
Keepalive Time	3600 sec
Keepalive Interval	10 sec
Keepalive Probes	5
Apply	

4.35.16. Startup Script

Startup Script
<pre>#!/bin/sh # # This script will be executed *after* all the other init scripts. # You can put your own initialization stuff in here.</pre>
Apply

4.35.17. Up/Down Script

Up/Down Script
Up Script <pre>#!/bin/sh # # This script will be executed when PPP/WAN connection is established.</pre>
Down Script <pre>#!/bin/sh # # This script will be executed when PPP/WAN connection is lost.</pre>
Apply

4.35.18. Automatic Update

Automatic Update
☐ Enable automatic update of configuration
☐ Enable automatic update of firmware
Base URL
Unit ID *
Update Hour *
* can be blank
Apply

5. Configuration setting over Telnet



Attention! If the SIM card isn't included in the router, it is impossible for the router to operate. The Included SIM card must be activated for GPRS transmissions. Insert the SIM card when the router is switched off.


Monitoring of status, configuration and administration of the router can be performed by means of the Telnet interface. After IP address entry to the Telnet interface it is possible to configure the router by the help of commands. The default IP address of the modem is 192.168.1.1. Configuration may be performed only by the user "root" with initial password "root".

For Telnet exists the following commands:


Command	Description
cat	file contain write
cp	copy of file
date	show/change of system time
df	displaying of informations about file system
dmesg	displaying of kernel diagnostics messages
echo	string write
email	sends an e-mail
free	displaying of informations about memory
gsmat	AT commend send
gsminfo	displaying of informations about signal quality
gsmsms	SMS send
hwclock	displaying/change of time in RTC
ifconfig	displaying/change of interface configuration
io	reading/writing input/output pins
ip	displaying/change of route table
iptables	displaying/modification of NetFilter rules
kill	process kill
killall	processes kill
ln	link create
ls	dump of directory contain
mkdir	file create
mv	file move
ntpdate	synchronization of system time with NTP server
passwd	password change
ping	ICMP ping
ps	displaying of processes information
pwd	dump of actual directory
reboot	restart
rm	file delete
rmdir	directory delete
route	displaying/change of route table
service	start/stop of service
sleep	pause on set seconds number
slog	displaying of system log
tail	displaying of file end
tcpdump	monitoring of network
touch	file create/actualization of file time stamp
vi	text editor

6. Driver installation


Connect the USB cable to the router and to the PC. Windows detects router as a new USB modem, starts the *Add Hardware* wizard and requests the driver for "MC75i" or „Siemens AG WM USB Modem“. Follow the instructions of the wizard and enter the path to the "usbmodem.inf" file. Windows will copy the needed files to your computer and configure the modem by assigning a free COM port. After completion of copying the files click on the *Finish* button.

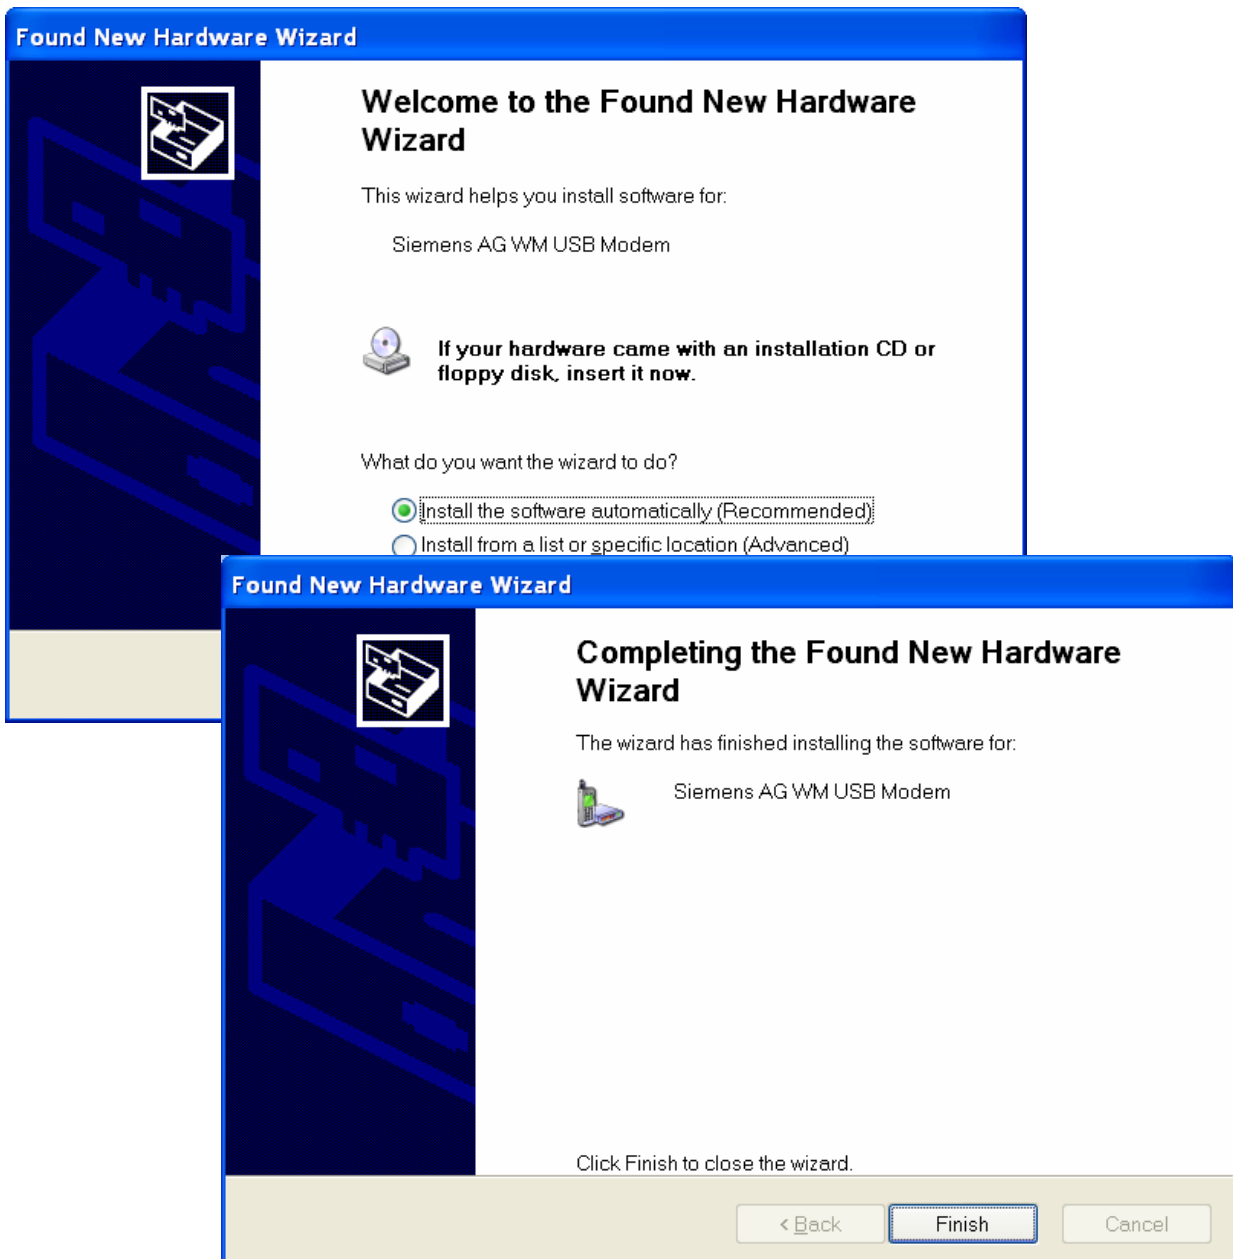

You will find the installed modem in the Phone and modem options control panel (Start | Settings | Control Panel | Phone and Modem Options | Modems).

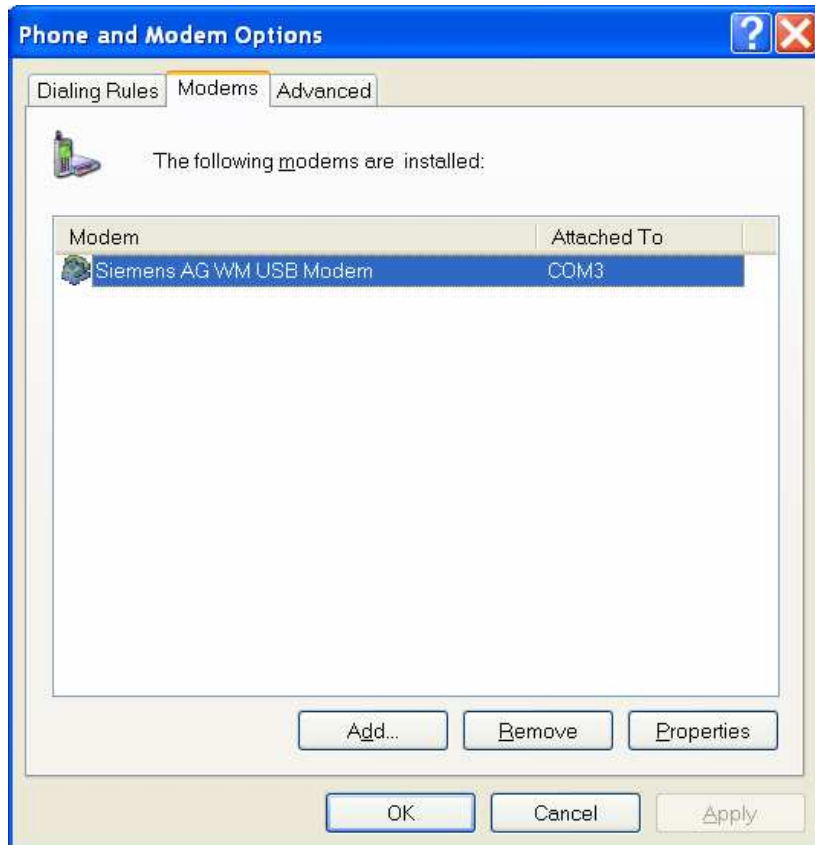

You can change the assigned COM port in the *Device Manager*. Select "Siemens AG WM USB Modem" in the installed devices list, click on *Properties*, select the *Details* tab and click on the *Advanced port settings* button. Then select the required free COM port from the *COM port number* menu. The change of COM port setting will apply only after disconnection and reconnection of the USB cable.

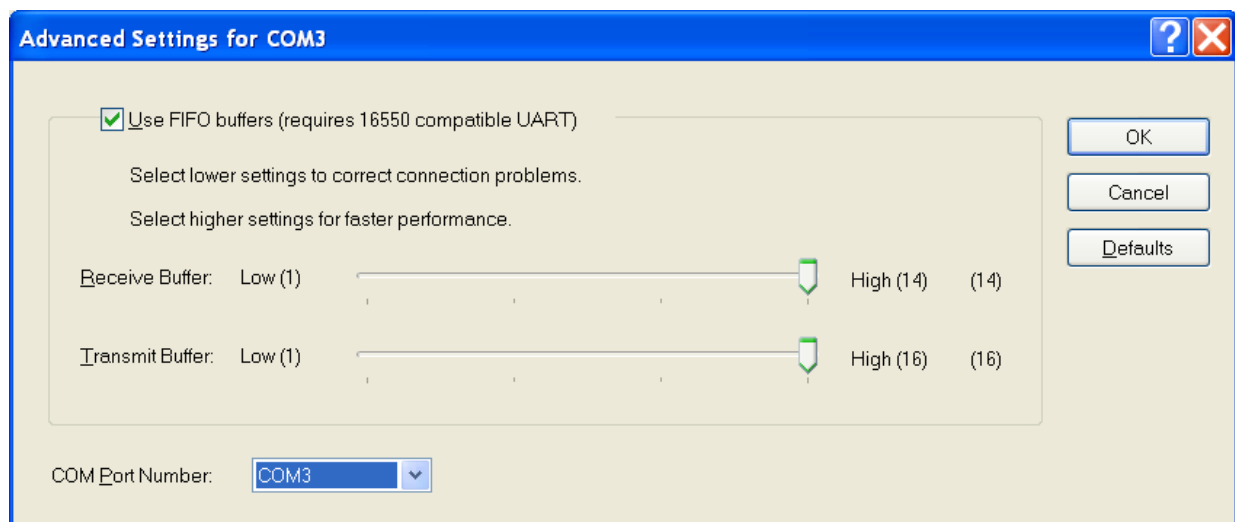



7. Control by AT commands

The router is controlled and programmed by AT commands. Structure of the AT command match used module MC75i. AT commands are possible to find on website www.siemens.com/wm.



8. Possible problems

Some network cards are able to be set in situation, when it is not possible to connect the router. It is possible to solve this problem in the following steps:

- hand by selection communication rates 10 MB/s in property network cards,
- connect router over switch,
- starts computer only after finalization start router.



9. Reference

[1] Siemens: MC75i_ATC_V00.031 – AT command Set, 2008



10. FAQ

- I can't get from internet on equipment, which is connected to router and I have NAT enabled.
 - *The device's gateway has to be configured as the router.*
- Router resets itself, connection on Ethernet fails.
 - *It is necessary to use an antenna, which will be situated far from power supply.*
- I don't get on web server at NAT.
 - *The remote http access of the router has to be disabled, default server address has to be your web server and the gateway of the web server has to be the IP of router.*
- GPRS connection fails.
 - *Check signal power. If signal power is weak, you will have to use a better antenna. If the environmental cells have a similar signal it will be necessary to use a directive antenna. Signal levels have to be in the range -50dBm and -90dBm.*
 - *It is necessary to set ping, which will check the connection and, in the case of fail ping, restart connection.*
- GPRS connection won't be established.
 - *Recheck GPRS settings - APN, name, password and IP address.*
 - *Try to enter PIN – verification if the SIM card hasn't set PIN code.*
 - *In private APN it is appropriate to switch the DNS server send off.*
 - *Switch log system on and observe where the error turns up.*
- Connection fails on Ethernet or connection isn't establishing.
 - *On ethernet interface of the router it is possible to switch auto negotiation off and set a rate and duplex by hand.*
- How is it possible to enter AT commands?
 - *It is necessary to use a USB connection, but it is impossible to connect to GPRS from the router together.*

- DynDNS not function.
 - *In private APN not functional.*
 - *If the same IP address is recorded in your canonic name as dynamically assign address, it means that the operator is using NAT or firewall.*
 - *NAT is possible to verify by the help of the ping on address of your server with static IP address and by the help of the router address verify and address in ping.*
 - *Firewall is possible to verify, for example by remote access on web interface.*
 - *The operator doesn't give out address DNS servers and without DNS server's it is impossible to connect to server dyndns.org. In log system will be this message:*
 - DynDNS daemon started
 - Error resolving hostname: no such file or directory
 - Connect to DynDNS server failed
- IPsec tunnel is establishing but communication doesn't function.
 - *Probably it is badly set up route conditionals of connected equipment or it is bad set up GW.*
- FTP doesn't function.
 - *Router doesn't support the active FTP mode, supports the passive mode only.*
- RS232 doesn't function.
 - *It is necessary to verify present the expansion port RS232.*
 - *Verify present the expansion port RS232 in router configuration in menu „external port“, or verify connection locally by the help Telnet-Hyper terminal.*
- L2TP or IPsec isn't establishing.
 - *Verify the reason in the log system.*
- How do I get to know that EDGE is functional?
 - *If download is higher than 85.6 kb/s then EDGE is functioning.*
- I switched the router to offline mode by the SMS message, but the router is in online mode after restart.
 - *Control SMS message doesn't change the router configuration. If the router is switched to offline mode by the SMS message the router will be in this mode up to next restart. This behaviour is the same for next all control SMS messages.*

11. Customer's care

Up to date information about the product are on website:

<http://www.conel.cz/>



Upkeep-advice:

The SIM-card must be handled carefully as with a credit card. Do not bend, do not scratch on this and do not expose to static electricity.

During cleaning of the modem do not use aggressive chemicals, solvents and abrasive cleaners!

Conel Company hereby declares that the modem narrated in this user's guide fits all basic demands of directive 1999/5/EC (R&TTE).



Declaration about consistency was issued and is possible get it at producer.

12. Product disposal information

The WEEE (Waste Electrical and Electronic Equipment: 2002/96/EC) directive has been introduced to ensure that electrical/electronic products are recycled using the best available recovery techniques to minimize the impact on the environment. This product contains high quality materials and components which can be recycled. At the end of its life this product **MUST NOT** be mixed with other commercial waste for disposal. Check with the terms and conditions of your supplier for disposal information.



13. Guarantee Claim Guidelines

Dear customer,

The product that you have purchased was tested by the manufacturer and, before it was sold, the product's functions were checked once more by our company's technician. However if, in spite of the above-mentioned measures, a breakdown of this product occurs during the guarantee period, which makes proper utilization of the product impossible, we ask you to observe the Guarantee Claim Guidelines when asserting a guarantee claim.

To facilitate the possible guarantee claim procedure, please, when taking over the product, make sure that the seller, who is selling you the product, has properly filled in the relevant parts of the guarantee certificate, including the date of sale, stamp and signature.

This guarantee claim procedure applies to the products that have been purchased. This guarantee claim procedure does not apply to the services that have been provided.

Guarantee periods of products

Guarantee of the purchased device, power supply unit, antenna, data cable, and possible accessories is provided, with a guarantee period of 24 months from the date of sale. The date of sale is at the same time the date of acceptance of the product by the customer.

Lodging a guarantee claim

The guarantee claim must be lodged at the seller from whom the relevant object of the guarantee claim has been purchased. When lodging the guarantee claim, the customer is to submit the properly filled-in guarantee certificate and the complete object of the guarantee claim. The object of the guarantee claim should be submitted in a state corresponding to the state at the sale.

Caution!

The seller does not guarantee that individual settings or data stored in the object of the guarantee claim will be retained.

When lodging the guarantee claim, the customer is obligated to specify the particular defect of the guarantee claim object, possibly its symptoms and, furthermore, the particular right resulting from the liability for defects that he is asserting.

Settling a guarantee claim

Depending on the circumstances, the seller shall ensure the defect removal free of charge; possibly, the seller shall exchange the object of the guarantee claim for a new product or, possibly, settle the guarantee claim in a different way which is in compliance with the Civil Code and with the Consumer Protection Act.

At the moment when the customer has lodged the guarantee claim and the object of the guarantee claim has been accepted by the seller, running of the guarantee period is interrupted. Running of the guarantee period shall continue from the date of acceptance of the repaired object of the guarantee claim or of the exchanged faultless product by the customer or, in the event that neither of the two has been accepted by the customer, from the date when the customer was obligated to accept the repaired object of the guarantee claim or the exchanged product. In the event that a guarantee claim resulting from a defect covered by the guarantee has been lodged and the defective object of the guarantee claim has been exchanged by the seller for a new product (including the exchange of the IMEI), the ownership of the original object of the guarantee claim is passed

hereupon onto the seller, and the ownership of the new product, onto the buyer. A new guarantee period starts running from the date of acceptance of the new product. In the event that the seller, upon agreement with the customer, has settled the guarantee claim by exchanging the object of the guarantee claim for a faultless product, the new guarantee of the product shall expire as follows:

1. After the expiration of a period of 12 months from the date of acceptance of the exchanged product by the customer.
2. On the date when the guarantee period of the original product (the object of the guarantee claim) would have expired if the original product had not been exchanged, whichever is later.
3. The guarantee claim is not justified if the defect being claimed has not been detected by the seller within the framework of the guarantee claim settlement, or if the guarantee does not apply to the defect of the product pursuant to Article 4 of the Guarantee Claim Guidelines.
4. If the defect being claimed has not been detected, and the functional state of the guarantee claim object has been demonstrated to the customer, the customer is obligated to refund the provable expenses incurred in connection with expert assessment of the defect being claimed.
5. If, during the process of assessment of justifiability of the guarantee claim, a defect of the product is detected which is not covered by the guarantee (a repair not covered by the guarantee), the seller shall notify of this fact the customer, and the customer shall notify the seller whether he wants to have this defect removed at a price quoted by the seller. Precise conditions of the repair not covered by the guarantee will be specified in a drawn-up report signed by the customer and seller. If the customer does not require the defect removal by a repair not covered by the guarantee under the conditions communicated by the seller, the device will be returned to the customer, after he has refunded the provable expenses incurred in connection with the expert assessment of the claimed defect.

The guarantee does not apply to the defects caused by the following:

1. Mechanical damage (e.g. by a fall, etc.).
2. Utilization of power supply units and other accessories that are not suitable, possibly, are not recommended for the particular product.
3. Interconnecting the product with non-standard accessories.
4. Installation or utilization of the product in contradiction to the operating instructions, or utilization of the product for purposes that are not usual for this type.
5. Incompetent handling, possibly intervention into the product by an unauthorized person or by a repair shop that has not been authorized by the manufacturer.
6. Damage caused by the natural elements (flooding, fire, etc.) or by other local effects (storm, mains over voltage, etc.).
7. Storage under conditions outside the temperature range.
8. Operation in a chemically aggressive environment.

Other guarantee claim conditions

The fact that the object of the guarantee claim does not correspond to parameters that have been set for other similar types of products can not be considered to be a defect. For the assessment whether a defect has occurred, the product parameters included in the technical documentation of the product are decisive.

The guarantee shall be terminated in the event of any modification of the object of the guarantee claim or in the event that the serial number of the object of the guarantee claim has been damaged or is illegible due to other reasons.

14. Guarantee certificate

Type of the device	
Serial number	
Guarantee period (in months)	
Seller	
Date of sale	
Stamp of the seller	

	1	2	3	4	5
Date of reception of the guarantee claim by the seller					
Number of the guarantee claim report					
Date of reception of the device into the repair shop					
Date of completion of the repair by the repair shop					
Number of the receipt form of the repair shop					
Guarantee repair	YES - NO	YES - NO	YES - NO	YES - NO	YES - NO
New serial number of the device (IMEI)					
Comments					
Stamp of the repair shop					