

Experts In Home Cleaning™

PEThair ERASER™

**CORDLESS
RECHARGEABLE SWEEPER**

USER'S GUIDE

7364 SERIES 220-240V

- 2 Thank You**
- 3 Safety Instructions**
- 4 Product View**
- 4-5 Assembly**
- 5 Operations**
- 6 Maintenance and Care**
- 7 Troubleshooting**
- 7 Replacement Parts**
- 8 Warranty**
- 8 Consumer Care**



 
Thanks for buying a BISSELL Pet Hair Eraser™ Sweeper

We're glad you purchased a BISSELL Pet Hair Eraser™ sweeper. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your Pet Hair Eraser™ sweeper is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your Pet Hair Eraser™ sweeper.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman & CEO

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING YOUR BISSELL PET HAIR ERASER SWEEPER.

WARNING -

To reduce the risk of fire, electric shock, or injury:

- Store indoors.
- Do not expose to rain.
- Do not immerse.
- Do not handle with wet hands.
- Do not use Pet Hair Eraser Sweeper if it has been dropped, damaged, left outdoors or dropped into water, have it repaired at an Authorized Service Center.
- Do not use with damaged cord or plug on the charger.
- Do not unplug charger by pulling on cord.
- Do not damage the charger cord. Never carry or pull the charger unit by the cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not use an extension cord. Charger should plug directly into electrical outlet.
- Do not put any object into appliance openings, use with blocked opening, or restrict air flow.
- Do not use with any opening blocked.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not pick up hot, burning or smoking objects such as cigarettes, matches or hot ashes.
- Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapours.
- Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.)
- Do not allow to be used as a toy.
- Not intended for use by young children or infirm persons without supervision.

- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use for any purpose other than described in this User's Guide.
- Use only manufacturer's recommended attachments - use of attachments not provided or sold by BISSELL may cause fire, electric shock or injury.
- Use only the charger supplied by BISSELL (packaged with your appliance) to recharge your Perfect Sweep Turbo.
- Use charger unit only in standard electrical outlet (220-240V~50/60 Hz.).
- Keep openings free of dust, lint, hair, etc.
- Unplug charger unit from outlet before maintenance or cleaning.
- Unplug by grasping the plug, not the cord.
- Be extra careful when cleaning stairs.
- Turn off all controls when finished cleaning.
- Do not charge the unit outdoors.

Your Pet Hair Eraser Sweeper contains rechargeable nickel metal hydride (NiMH) batteries. Do not incinerate batteries or they can explode when exposed to high temperatures.

Battery cell leaks can occur under extreme conditions. If battery cell contents comes in contact with the skin:

- Flush immediately with warm water for at least 15 minutes, then wash with soap and water.

If battery cell contents comes in contact with the skin:


- Flush immediately with clean water for a minimum of 15 minutes.
- Seek medical attention.

SAVE THESE INSTRUCTIONS FOR FUTURE USE.

IMPORTANT FOR OPERATION ON A 220-240 VOLT A.C. 50/60 Hz POWER SUPPLY ONLY.

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

Product view

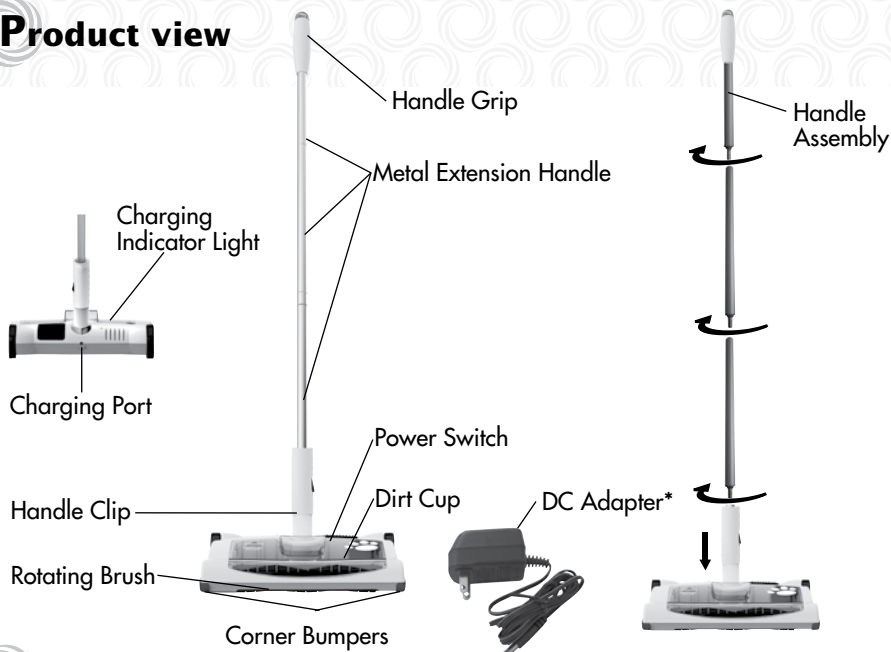

Assembly


The Pet Hair Eraser Sweeper requires very little assembly. Remove it from the box and check it against the illustration to familiarize yourself with the components listed. The exploded view drawing with part names will also be helpful if you should need to order a part at a later time.

1. Assemble the handle by screwing together two pieces of the metal extension handle. Place the colored handle grip on top of the metal extension assembly and twist clockwise until secure. Screw the handle clip into the bottom of the metal extension handle assembly.
2. Place bottom of handle clip into the opening at the top of the Pet Hair Eraser Sweeper. Push firmly until the button at the bottom "clicks" into place in the opening.
3. The Pet Hair Eraser Sweeper must be fully charged before using. To charge the unit, plug the DC adapter into a standard electrical outlet (220-240 V – 50/60 Hz); plug the opposite end into the charging port on the back side of your Pet Hair Eraser Sweeper. The charging indicator light will illuminate to red when properly connected and will change to the color green when full charged. The Pet Hair Eraser Sweeper is now full charged.

Note: The Power Switch must be in the OFF position when charging.

WARNING:

Electric/electronic appliances should not be subjected to extreme temperatures or high humidity. Do not store the Pet Hair Eraser Sweeper in bathing areas or close to stoves, furnaces or radiators.

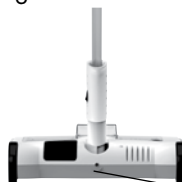

Assembly

Charging the battery

1. When completely charged, the Pet Hair Eraser Sweeper provides up to 60 minutes of full cleaning power.
2. When charging for the first time, allow to charge uninterrupted for at least 16 hours. Thereafter, charge at least 12 hours to renew the Pet Hair Eraser Sweeper battery. The charging indicator light will illuminate to red when properly connected and will change to the color green when full charged. The Pet Hair Eraser Sweeper is now full charged.

Note: The power switch must be in the OFF position when charging.

3. Decreased operating time may indicate the battery has built up a charging resistance. To recharge, first completely exhaust the battery, recharge it, then exhaust it again before recharging a second time. This procedure may be required more than once.
4. When charging is complete, be sure to unplug the Pet Hair Eraser Sweeper from the charger. Please remember your Pet Hair Eraser Sweeper contains rechargeable nickel metal hydride (NiMH) batteries. Do not incinerate batteries or they can explode when exposed to high temperatures.

Operations

Using your Pet Hair Eraser Sweeper

The Pet Hair Eraser Sweeper is a quick and easy way to clean your bare floors and carpet.

1. Tip back the handle into typical use position and gently tap the power switch on the sweeper with your foot.

Note: The unit will not turn on if the dirt cup is not secure.

2. To clean small areas, detach the handle by depressing the handle clip button where the bottom of the handle slides into the Pet Hair Eraser Sweeper and pull the entire handle assembly out. Use the Pet Hair Eraser Sweeper by holding the built-in hand grip.
3. When done, replace the handle (if detached) and store for the next use.

ATTENTION:

If your battery still fails to recharge or does not hold a charge of normal duration, call:

BISSELL Consumer Care

Listed on page 8

Or visit our website at
www.bissell.com



WARNING:

Pet Hair Eraser Sweeper will not pick up crayons, marbles, and other **large or hard objects.**



Maintenance and care

Using your Pet Hair Eraser Sweeper

1. Make sure that the Pet Hair Eraser Sweeper is in the "OFF" position.
2. With the sweeper facing toward you, lift the dirt cup out by lifting up on the scoop handle.
3. Carry the dirt cup to a waste container. Using one finger push down on either of the corner tabs on the bottom corners of the dirt bin. This dirt bin is spring loaded and will open allowing dirt to fall into waste container.
4. Close bottom of dirt cup. Replace the dirt cup by gently pressing it into the foot of the sweeper. Make sure that it fits securely.
5. Clean exterior surfaces with a soft cloth dampened with water only. Do not use a strong detergent or other cleaner – this may damage the finish. Always unplug the Pet Hair Eraser Sweeper from the electrical outlet before cleaning the surface.

2.



WARNING:

This product contains a rechargeable nickel metal hydride battery (sometimes referred to as a "NiMH" battery) pack. The average life of a NiMH battery is 5 to 7 years, depending on frequency of use. Proper removal and disposal of NiMH batteries is required.

Battery Removal and disposal

Note: It is required that the battery be removed from the Pet Hair Eraser Sweeper before it is disposed of.

1. Important: Unplug charger.
2. Remove handle and dirt cup.
3. Remove (10) Phillips head screws on the bottom cover as shown in picture.
4. Separate top and bottom cover.
5. Remove wire connectors from the battery pack.
6. Keep battery pack together – DO NOT separate individual batteries. For specific disposal instructions, please contact your local authorities for requirements and regulations on safe disposal or recycling facilities in your area.
7. Discard remainder of product.

3.



10 Screws

WARNING:

To reduce the risk of electric shock, turn power switch OFF and disconnect charger from electrical outlet before performing maintenance or troubleshooting.

Troubleshooting

No power

Possible causes

1. Pet Hair Eraser Sweeper is not charged thoroughly
2. Dirt cup is not secure in the unit

Remedies

1. Make sure Pet Hair Eraser Sweeper has been properly plugged into an outlet for the recommended amount of time. See "Charging the Battery" on page 5
2. Press down on the unit for a snug fit

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

Please do not return this product to the store.

Replacement parts – BISSELL sweeper

Item	Part No.	Part Name
1	203-2611	Charge Plug/Cord -3 pin UK plug*
2	203-2609	Metal Extension Handle with Handle Grip
3	203-1254	Handle Clip
4	203-2610	Dirt Cup

1



2



3



4



**Adapter plug varies by country of sale.*

Warranty – BISSELL Pet Hair Eraser™ Sweeper

This warranty gives you specific legal rights, and you may also have other rights which may vary from country to country. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, regular mail as described below, or contact your local in country distributor.

Limited One Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part due to manufacturer defect.

See "BISSELL Consumer Care" information below.

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL Consumer Care:

If your BISSELL product should require service or if you need information about repairs, authorized service centers in your area, replacement parts or your warranty, please contact BISSELL Consumer Care, as indicated below, or contact your local in country distributor.

For UK inquiries:

Monday - Thursday 9 am — 5 pm BST
Friday 9 am — 3:45 pm BST

BISSELL Homecare (Overseas) Inc.

Ground Floor
226 Berwick Avenue
Slough
Berkshire, SL1 4 QT
United Kingdom
Telephone: 0844-888-6644

For all other inquiries:

Monday - Friday 8 am — 4 pm EDT

BISSELL Homecare, Inc.

PO Box 1888
Grand Rapids, Michigan 49501 USA
Telephone: 01-616-453-4451
Fax: 01-616-453-1383

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.



Experts In Home Cleaning™

©2012 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 150-4031
Rev 4/12
Visit our website at:
www.bissell.com



www.bissell.com

