

BM-6280

Operation Manual

bluemedi

Version 1.2

Copyright © 2004-2005, All rights reserved. Microsoft®, MS-DOS®, and Windows are registered trademarks of Microsoft Corporation in the U.S. and other countries. Pentium® is a registered trademark of Intel Corporation. The names of actual companies and products mentioned herein may be the trademarks of their respective owners. Information in this document is subject to change without notice.

INDEX

READ ME FIRST	3
MAINTENANCE	3
CARE OF THE DISPLAY	3
NOTES ON THESE OPERATING INSTRUCTIONS	3
SUPPLIED ITEMS	3
DEVICE INITIALIZATION	4
GETTING STARTED	5
VIEW COMPONENTS	5
FRONT VIEW	5
BOTTOM VIEW	7
LEFT VIEW	8
RIGHT VIEW	9
TOP VIEW	9
USB DOCKING STATION	10
INITIAL SET-UP OF THE POCKET PC	11
STEP 1: CHARGING THE POCKET PC BATTERY	11
STEP 2: SWITCHING ON THE POCKET PC	13
STEP 3: CONNECTING TO THE COMPUTER	13
STEP 4: USING THE POCKET PC	14
WORKING WITH MEMORY CARDS	15
INSERTING MEMORY CARDS	15
REMOVING MEMORY CARDS	15
ACCESSING MEMORY CARDS	15
DATA EXCHANGE VIA CARD READER	16
RESETTING THE POCKET PC	17
SOFT-RESET	17
HARD-RESET	17
BASIC SKILLS	18
USING THE STYLUS	18
USING THE NAVIGATION PAD	18
STATUS ICONS	19
NAVIGATION	21
GPS NAVIGATION SOFTWARE	21
TIPS FOR NAVIGATION	21
GPS DIAGNOSE	21
STARTING NAVIGATION	22
FAQ	23
CUSTOMER SERVICE	25
FAULTS AND POSSIBLE CAUSES	25

READ ME FIRST

MAINTENANCE

Congratulations on purchasing the **Bluemedia** Pocket PC. Please follow the instructions in this booklet in order to ensure a long and enjoyable experience with your purchase.

- There are no self-cleanable or self-serviceable parts inside the Pocket PC.
- Always disconnect all power and cables before cleaning.
- Clean the Pocket PC only with a damp, lint-free cloth.
- Do not apply solvents, caustic or gas-based cleaners.

CARE OF THE DISPLAY

- Ensure that no traces of water remain on the screen. Water can cause irreversible discoloration.
- Use only soft, and lint-free cloth to clean the screen.
- Do not expose the screen to direct sunlight or ultraviolet radiation.
- Avoid excessive scratching of the display surface, as this can cause damage to the screen easily. It is strongly recommended to apply a replaceable display protector to avoid scratches. Please ask the nearest dealer for this accessory.

NOTES ON THESE OPERATING INSTRUCTIONS

Extensive help notes can be found on the Pocket PC as well as on the included CD-ROM.

Please read the FAQ section of this manual for answers to the frequently asked questions. The purpose of this manual is to assist you in enjoying the **Bluemedia** Pocket PC.

SUPPLIED ITEMS

Please check the integrity and completeness of the contents in your purchased Pocket PC package. The package contents include:

- Pocket PC
- AC adaptor, adaptor plug
- Microsoft Companion CD
- Instruction manual (this manual)
- Power cable for 12V cigarette lighter
- CD with navigation software
- USB docking station (charging/synchronization)*
- ActiveSync[®]-cable* for charging and synchronizing*
- Car holder of the Pocket PC with flexible neck*
- Earphones*
- Protective case and storage pocket with transparent window*
- Pre-installed memory card(s) MMC/SD*

* Optional

DEVICE INITIALIZATION

Please follow the important steps listed below upon using your **Bluemia** Pocket PC for the first time.

1. Charge the device continuously for 8 hours at least.
2. Upon completing the charging process, perform a hard reset of the **Bluemia** Pocket PC.

Note. To perform a hard reset of the **Bluemia** Pocket PC, hold down the power button and press in the reset button (as page 16) briefly.

GETTING STARTED

This chapter introduces you to the **Bluemedia** Pocket PC and guides you through the friendly setup process.

The illustrations on the following pages introduce you to the various buttons, connectors, ports and features of your Pocket PC.

 
VIEW COMPONENTS

FRONT VIEW




Ref	Component	Description
①	GPS antenna	GPS antenna
②	SD/MMC Slot	Insert an optional SD (Secure Digital) or MMC (MultiMediaCard) card for removable storage.
③	Touch Screen	Tap the screen with the stylus to select menu commands or enter information.
④	Program Button	Start screen Note: All program keys could be adapted.
⑤	Program Button	Contacts
⑥	Navigation pad	Moves up, down, left or right by pushing towards the corresponding area of the pad. Push down on the centre button to confirm your selection.
⑦	Power Button	Powers backlight Turns your Pocket PC on or off. Switches on / off the backlight if this button is pressed for approximately 3 seconds.
⑧	Microphone	Records sound and voice
⑨	Program Button	Calendar
⑩	Program Button	The programs(e.g. Navigator) can be run using the program key.

BOTTOM VIEW

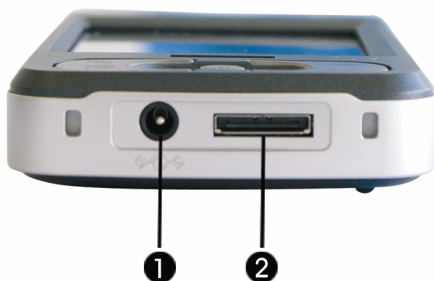

Ref	Component	Description
①	AC adaptor port	Connection to an external power supply.
②	ActiveSync® - Connector	Connects to your PC based computer for synchronizing data and charging.

 LEFT VIEW

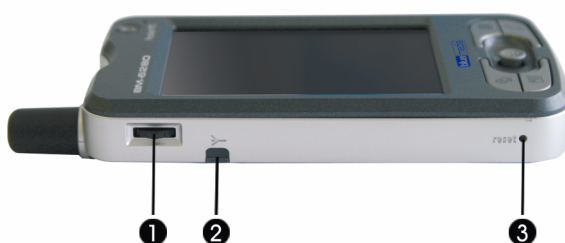


Ref	Component	Description
❶	Selection wheel	To select options in programs.
❷	Ext. antenna	To use ext. antenna.
❸	Reset Button	Restarts your Pocket PC. (Soft-Reset)

RIGHT VIEW



Ref	Component	Description
①	GPS-Button	Turns the GPS function on/off.

 TOP VIEW

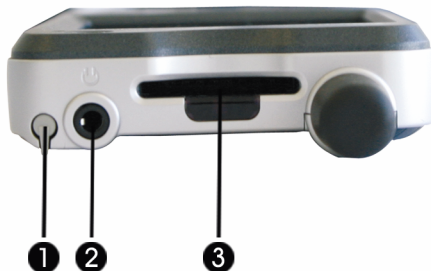

Ref	Component	Description
①	Stylus	Slide the pen outward of its compartment in order to use it, and re-insert it for storage. The stylus is required for operating the touch screen.
②	Headphone	Connects to the headphones (3,5 mm).

USB DOCKING STATION

The USB docking station is an alternate and useful option for charging and synchronizing your **Bluemedia** Pocket PC with a PC-based computer. Overview of the docking station:

- The docking station is only to be used with the supplied AC adapter (**Phihong PSC11R-050**) and the **Bluemedia** Pocket PC.



Ref	Component	Description
1	Battery Charge Indicator	Yellow light - as soon as the docking station receives power.
2	PPC Connector	Connects to your Pocket PC.

INITIAL SET-UP OF THE POCKET PC

The following section provides a friendly step-by-step guide that assist you through the initial set up of the **Bluemedi**a Pocket PC.

STEP 1: CHARGING THE POCKET PC BATTERY

The **Bluemedi**a Pocket PC can be conveniently charged with either the supplied AC adaptor or the optional USB dock.

1. Slide the adaptor plug into the guide rail at the back of the AC adaptor. Plug the AC adaptor into a wall outlet that is easily accessible.
2. The charging status display flashes green until the Pocket PC is charged. Do not interrupt the charging process before the battery is fully charged. This may take a few hours. The Pocket PC is fully charged if the charging display lights green. (Remember to charge the **Bluemedi**a Pocket PC for at least 10 hours for the first time.)
3. Leave the mains adapter connected to the Pocket PC for around 24 hours, so that the backup battery also charges-up fully.

As an alternative to the USB docking station, you can also connect the AC adaptor directly to the Pocket PC or use the optional ActiveSync[®]-cable.



Attach the USB connector (①) to an available USB port of your PC and the ActiveSync[®] connector (②) to the ActiveSync[®] port of your Pocket PC. The PC must be switched on for charging through the ActiveSync[®] cable. Installing the included active-sync Software first before connecting the ActiveSync[®] cable!

INSTALLING MICROSOFT[®] ACTIVESYNC[®]

In order to synchronize your data (e-mails, contacts, dates, etc.) between your PC and the Pocket PC, you need the **Microsoft[®] ActiveSync[®]** program.

Your Pocket PC includes a license for this **Microsoft[®] ActiveSync[®]** program which can be found on the CD.

- ✧ If you do not have **Microsoft[®] Outlook 2002** on your PC, please install Outlook 2002 following the directions above.
- ✧ **Attention:** You should **not** connect the Pocket PC to your computer **yet**.

1. Start Windows[®] and re-insert the CD supplied in order to again display the installation menu you are already familiar with.
2. Click **Install ActiveSync[®]** .

- ✧ On the right side of the window you will see more details about the **ActiveSync[®]** software and additional hints for installation.

3. Click now on Install.
4. A dialog box appears that informs you that a program now has to be installed. Click **OK**.
5. You are now asked whether you want to open the file or store it on the PC. Select the **Open** option here and follow the

instructions on the screen.

6. If testing the connection options, insert the Pocket PC in the charging/synchronization docking station.

◇ If other programs have been bundled, you will find these on your Companion CD under:

Enhance Your Experience → **Mobility** or **Entertainment**.

STEP 2: SWITCHING ON THE POCKET PC

1. Press the On/Off switch in order to start the Pocket PC. The Pocket PC will automatically starts in the initial set-up screen. The brand logo appears and a few seconds later the Pocket PC displays the Windows[®] Mobile 2003 welcome screen.
2. With the stylus, give the screen one short touch and follow the instructions that are displayed to you.
3. Select the time zone by tapping on the dateline on the start-up screen and adjust time and date.

STEP 3: CONNECTING TO THE COMPUTER

4. Start the Pocket PC, by a short press of the On/Off switch.
5. Ensure that the Pocket PC is inserted in the USB docking station.
6. Plug the USB plug into a free USB slot on your computer.

◇ The **hardware installation assistant** will now detect a new device and install a suitable driver. This may take a few minutes. Please repeat the connection attempt if the **Bluemedia** Pocket PC is not successfully recognized.

4. Follow the instructions on your screen. The program will now set up a partnership between your PC and the Pocket PC. As a result of the synchronization, your data (mail, contacts, appointments, etc.) will be automatically synchronized between the **Bluemedia** Pocket PC and your personal computer.

SYNCHRONIZATION BETWEEN POCKET PC AND PC

When you insert the Pocket PC in the charging/synchronization docking station, **Microsoft ActiveSync**[®] is automatically started.

The program checks if the Pocket PC is one with which a partnership has already been established.

If this is the case the changes that have taken place on the PC and on the Pocket PC since the last synchronization are compared and reconciled.

In the Settings menu of the **Microsoft ActiveSync**[®] program you can define precisely which rules are to be applied during synchronization.

Call up the program Help (by pressing F1) in order to see the effects of the corresponding settings.

If the Pocket PC is not recognized as a partner, restricted guest access is automatically activated that allows, for example, data to be exchanged.

If this should occur even though there is a registered partnership, remove the Pocket PC from the charging/synchronization docking station and switch it off and on again.

Re-insert the Pocket PC in the charging / synchronization docking station in order to restart the identification process. If this still does not work, repeat the process and also restart your PC.

If you have changed the device name in the Pocket PC this may be the cause of this malfunction. Please remember this if you change the name of the Pocket PC under **Start** → **Settings** .

Change the device name of the Pocket PC if necessary, if it does not correspond with the device name stored by ActiveSync[®].

STEP 4: USING THE POCKET PC

OPERATING THE POCKET PC

1. Take the Pocket PC out of the docking station.
In order to execute a function or a program,
 - Use the stylus to tap **Start** and then tap your desired operation on the drop down list.
 - Press the program keys of the Pocket PC in order to start the desired program. The underlying programs can be defined using **Start** → **Settings** → **Buttons** .
2. Explanations of the operation and functionality of the programs can be obtained from **Start** → **Help** .

WORKING WITH MEMORY CARDS

Your Pocket PC supports MMC and SD memory cards.

INSERTING MEMORY CARDS

1. Carefully take the memory card out of its packing (if included). Take care not to touch or dirty the contact points.
2. Push the memory card carefully into the card slot as shown. The side of the memory card wearing the label must point upwards. The memory card should slightly lock in place.

REMOVING MEMORY CARDS

✧ Do not remove the memory card while it is being accessed. This could result in the loss of data.

1. To remove the card press lightly on the SD card and it will eject itself.
2. Pull the card out without touching the contacts.
3. Store the memory card in the packing or in another safe location.

✧ Memory cards are very fragile. Take care **not to dirty** the contacts and **not to force** the card.

ACCESSING MEMORY CARDS

Memory cards are normally shown as **Storage Cards** in the **Windows Explorer**.

You can access the memory card like a normal drive to store, rename or delete files.

✧ The Pocket PC only supports memory cards in the FAT16/32 file format. If you insert a card prepared with a different format (e.g. in cameras, MP3 players), your Pocket PC may not recognize it and will ask you to format it again.

Warning: Formatting the memory card wipes out all data.

✧ Likewise you cannot just copy files onto the memory card. In some cases, the files must be converted by the **Microsoft® ActiveSync®** program.

DATA EXCHANGE VIA CARD READER

You can transfer or synchronize data via ActiveSync[®]. This is also the correct method, in particular, if files are to be transferred that must be converted into a Pocket PC-readable format.

However, if you wish to copy large quantities of data (MP3 files, navigation maps) to the memory card, these can also be stored directly to the memory card.

Many computers already have memory card devices. Insert the card in this and copy the data directly to the card.

Because of the direct access significantly faster transfer will be achieved.

Note: SD information update issue.

Due to Microsoft's internal design que, users need to perform the following steps in order to read the SD card information upon the removal and insertion of the SD card.

1. Tap on the "start" icon
2. Tap on "Programs" on the drop down list
3. Tap on "File Explorer"
4. Tap on the "Storage Card" tab. Users will be able to read the current information that is stored inside your SD card (if presented).

Upon the insertion/removal of the SD card, please tap on the "Storage Card" tab again, in order to get the refreshed information on your newly inserted SD card.

RESETTING THE POCKET PC

There are two options for resetting the Pocket PC.

SOFT-RESET

This option restarts the Pocket PC, without reinstallation being necessary. A soft-reset is often used in order to reorganize the memory. In doing so all programs that are running are interrupted and the working memory is reinitialized.

Choose this option if your Pocket PC is not responding or working properly.

Perform the soft-reset as follows:

1. If possible save the files that your Pocket PC has just been processing.
2. Press the tip of the stylus into the soft-reset switch opening. After a few seconds the Pocket PC displays the start screen. Your configuration and your saved files will **not** be deleted.

HARD-RESET

Warning: A hard-reset **deletes all data** on your Pocket PC and causes it to return to its initial state.

It is not necessary to install the software on your synchronization computer again, however.

Perform the hard-reset as the following:

1. If possible, back up all the files needed from your Pocket PC. To do this use the programs bundled with the Pocket PC (see online help or the manual on CD).
2. Hold down the On/Off switch and carry out a soft reset.

BASIC SKILLS

This chapter familiarizes you with the basic operations of your Pocket PC such as using the stylus, navigation button, navigation pad, menus and programs. You will also know how to enter information.

USING THE STYLUS

The stylus serves as a mouse for computers. It is used to navigate and select objects on the screen. Pull the stylus out of the slot and extend it for ease of use. Store it in the slot when not in use.

➤ **Tap**

Touch the screen once with the stylus to open items and select options.

➤ **Drag**

Hold the stylus on the screen and drag across the screen to select text and images. Drag in a list to select multiple items.

➤ **Tap and hold**

Tap and hold the stylus on an item to see a list of actions available for that item. On the pop-up menu that appears, tap the action you want to perform.



USING THE NAVIGATION PAD











With the navigation pad, you can move up, down, left and right within a menu by pressing the corresponding area of the pad. This is particularly useful for one-hand operation.

To activate the selected item, press the center of the pad.













STATUS ICONS

When the Today screen is displayed, you may see the following status icons on the Command bar or Navigation bar. In most cases, you can tap a status icon to display the associated control panel or more information related to the item. For example, tap the battery status icon to open the Power control panel.

Icon	Meaning
	Speaker is on.
	Speaker is off.
	Battery is charging.
	Battery is low.
	Battery is very low.
	Battery is fully charged.
	Connection is active.
	Connection is not active.
	One or more e-mail messages were received.
	More icons to be displayed than there is room to display them. Tap the icon to view all status icons.

The table below contains a partial list of the programs and their icons:

Icon	Program	Description
	ActiveSync	Synchronize information between your Pocket PC and desktop computer.
	Calendar	Keep track of your appointments and create meeting requests.
	Contacts	Keep track of your friends and colleagues.
	Inbox	Send and receive email messages.
	Pocket Internet Explorer	Browse Web and WAP sites and download new programs and files from the Internet.
	Notes	Create handwritten or typed notes, drawings and recordings.
	Tasks	Keep track of your tasks.
	Windows Media Player	Play digital audio and video files.
	Pocket Excel	Create new workbooks or view and edit Excel workbooks created on your desktop computer.
	Pocket Word	Create new documents or view and edit Word documents created on your desktop computer.

NAVIGATION

GPS NAVIGATION SOFTWARE

Please refer to the included "GPS Software Guide".

TIPS FOR NAVIGATION



- Do not manipulate the navigation system during driving to protect yourself and others from accidents!
- In the event that you do not understand the voice instruction or if you are in doubt of your heading, the arrow on the map of your **Bluemedia** Pocket PC will be able to provide you with a quick orientation. Only look at the display when you are in a safe driving situation!
- **Attention:** The road layout and driving rules take precedence over the instructions of the navigation system. Only follow the instructions when circumstances and driving rules permit it! The navigation system will guide you to your destination even when you have to deviate from your planned route.
- Plan routes before you leave. Never drive and operate your **Bluemedia** Pocket PC at the same time.
- In order to receive the GPS signal correctly, provide the best angle between your **Bluemedia** Pocket PC and open sky. Attach the Pocket PC to the inside of the windscreen or near the windscreen with the sucker. Try different positions in your vehicle in order to get the best reception.
- Install your carholder in the right conditions and make sure that the position of carholder will not impact your safety. Before fixing the carholder on the windshield please clean the windshield. Please check also instruction sheet of carholder. If anything is unclear ask your dealer for support.

GPS DIAGNOSE

There are two ways to turn on/off your **Bluemedia** Pocket PC's GPS function manually.

1. Thru embedded software. Users will notice the GPS icon  on

the button right of the Today screen. Tab on it will bring up a quick diagnose window, which allows the users to switch on and off the GPS function of the **Bluemia** Pocket PC manually.

2. Thru embedded hotkey operation. The GPS function of the **Bluemia** Pocket PC can be turned on/off by operating the GPS button on the right side of the **Bluemia** Pocket PC (see page 8). By holding the GPS button, the users will be able to detect the change in GPS status by the change of color of the GPS icon. The green GPS icon  represents the **Bluemia** Pocket PC is running with the GPS function turned on. The red GPS icon  represents the **Bluemia** Pocket PC is running with the GPS function turned off.

Note: Normally, the GPS function of the **Bluemia** Pocket PC will be automatically turned on by the navigation system.

STARTING NAVIGATION

1. Switch on the Pocket PC.

Start the navigation program in the program directory of your Pocket PC.

◇ **Hint:** The GPS-receiver will require **some minutes** for initialization when deployed for the first time. Even when GPS signal reception is indicated the navigation could be imprecise. In all future instances it will take about **30-60** seconds until a correct GPS-signal is available.

2. Click on **Enter a destination** to specify your destination. In order to obtain detailed information about how to use the program click on the **Help** button.

FAQ



Where can I find more information about the Pocket PC.

- ① Detailed operating instructions for navigation (optional) and operation of the Pocket PC programs can be found on the corresponding CDs, which accompany your Pocket PC.

For additional assistance use the extensive help functions that are available at the touch of a button (usually F1 on your PC) or by typing the question mark (on the Pocket PC). These help options will be made available to you when you use the computer or the Pocket PC.

Useful notes and additional help can be obtained from the Internet at www.pocketpc.com, www.royaltek.com or from corresponding forums.



What do I need the accompanying CDs for?

- ① The Companion CD contains:

- **ActiveSync**[®] for synchronization.
- The information management program **Outlook**[®] and other help programs from Microsoft[®].
- Additional programs (optional).
- A comprehensive **User manual** for operating the Pocket PC programs.



The Pocket PC is no longer responding. What should I do?

- ① Carry out a soft-reset (see page 16).



How can I adjust the lighting?

- ① 1. Manually.
2. On the Pocket PC under **Start** → **Settings** → **System** → **Backlight**.



How can I find out information on the configuration of the Pocket PC?

- ① On the Pocket PC under **Start** → **Settings** → **System** .



What sort of processor must I choose if I want to install software that has been written for various platforms?

- ① Choose ARM.

CUSTOMER SERVICE

FAULTS AND POSSIBLE CAUSES

The Pocket PC does not respond anymore.

- Press the reset button.

Elements have inadvertently been overwritten.

- In the Settings menu of the ActiveSync[®] program you can define precisely which rules are to be applied during synchronization.
Call up the program Help (by pressing F1) in order to see the effects of the corresponding settings.

The Pocket PC shows that insufficient memory is available.

- Terminate any unnecessary programs in order to free-up sufficient memory space again. In addition under **Start** → **Settings** → **Memory** → **Current programs** terminate applications that are no longer needed.

Remove unnecessary files. Check temporary Internet files. Multimedia files (MP3, AVI, BMP etc.) can be very big. Check if you still need these.

Once I have installed ActiveSync[®] I get error messages from a maintenance program.

- In the temporary folder created by the system, the program creates the WCESCOMM.LOG file which cannot be deleted. If another program tries to do this a corresponding error message appears. The GPS-receiver cannot be initialized.

The GPS receiver cannot be initialized or found.

If the GPS receiver cannot be initialized or found, and this can be caused by the following:

- The GPS receiver is configured for one of the other connectors and not for COM1 of the Pocket PC.

Solution:

1. Click on **Settings** in the **Main Menu** of the navigator.
2. Select **GPS** from the list in the window **Settings**.
3. Activate **COM1** and observe the GPS can be initialized, you

have successfully activated the COM1 port.

4. Click on **Save**.

- The GPS receiver does not start automatically.

Solution:

GPS cannot be initialized even after the configuration of the COM1 port,

1. Close the navigation program.

Check the GPS reception settings under **Start – Settings – System – GPS**. It is recommended to use the automatic start when accessing COM1. Restart the navigation program.

The display jitters / slows down, responds sluggish or the program aborts.

This may be due to reduced memory availability. Normally, The navigation software requires approximately 10-15 MB of free main memory (for swapping-out files, etc.). If this is no longer available, the stated problems may arise. The Pocket PC may also go into energy-saving mode, which can lead to the memory card no longer be recognized correctly.

Solution:

- Close down all programs.
- Delete unnecessary files (MP3, PDF etc.) or save them externally.
- Start the navigation program again.
- Carry out a soft-reset (see page 16).

ADDITIONAL SUPPORT

If the suggestions in the above section have not solved your problem, please contact your local reseller or visit **bluemedia** web site. However, before you contact your service people, please have the following information available:

- How is your computer configured?
- What additional peripherals do you use?
- What messages, if any, appear on your screen?
- What software were you using when the error occurred?
- What steps have you already undertaken to solve the problem?
- Have you upgraded or removed drivers or hardware?
- Can you manually repeat the problem?

- If you have been given a customer number previously, please give this number to the technician.

Telephone:**EasyCare - Hotline bluemedi****+49 (0) 700 – 32792273****Email: service@bluemedi-it.com****End User License Agreement for Microsoft Software**

- **You have acquired a device (“DEVICE”) that includes software licensed by MEDION from Microsoft Licensing Inc. or its affiliates (“MS”). Those installed software products of MS origin, as well as associated media, printed materials, and “online” or electronic documentation (“SOFTWARE”) are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved. SOFTWARE includes software already installed on the DEVICE (“DEVICE Software”) and MS software contained on the CD-ROM disk (“Companion CD”).**

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT (“EULA”), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT MEDION FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS

GRANT OF SOFTWARE LICENSE.

- **DEVICE Software.** You may use the DEVICE Software as installed on the DEVICE.
- **COMPANION CD.** A Companion CD is included with your DEVICE, and you may install and use the Microsoft® ActiveSync® 3.7 component on one (1) or more computers to exchange information with one (1) or more computing devices that contain a compatible version of the Microsoft® Pocket PC Software 2002 operating system. For other software component(s) contained on the Companion CD, you may install and use such components only in accordance with the terms of the printed or online end user license agreement(s) provided with such component(s). In the absence of an end user license agreement for particular component(s) of the Companion CD, you may install and use only one (1) copy of such component(s) on the DEVICE or a single computer with which you use the DEVICE.

- **Microsoft® Outlook® 2002.** If Microsoft Outlook 2002 is included with your DEVICE, the following terms apply to your use of Microsoft Outlook 2002: (i) regardless of the information contained in the "Software Installation and Use" section of the online EULA you may install one (1) copy of Microsoft Outlook 2002 on one (1) computer to use, exchange data, share data, access and interact with the DEVICE, and (ii) the EULA for Microsoft Outlook 2002 is between MEDION and the end user – not between the PC manufacturer and end user.
- **Security Updates/Digital Rights Management.** Content providers are using the digital rights management technology contained in this SOFTWARE ("DRM") to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. Portions of this SOFTWARE and third party applications such as media players use DRM to play Secure Content ("DRM Software"). If the DRM SOFTWARE's security has been compromised, owners of Secure Content ("Secure Content Owners") may request that MS revoke the DRM SOFTWARE's right to copy, display and/or play Secure Content. Revocation does not alter the DRM SOFTWARE's ability to play unprotected content. A list of revoked DRM SOFTWARE is sent to your computer whenever you download a license for Secure Content from the Internet. You therefore agree that MS may, in conjunction with such license, also download revocation lists onto your computer on behalf of Secure Content Owners. MS will not retrieve any personally identifiable information, or any other information, from your computer by downloading such revocation lists. Secure Content Owners may also require you to upgrade some of the DRM components in this SOFTWARE ("DRM Upgrades") before accessing their content. When you attempt to play such content, MS DRM SOFTWARE will notify you that a DRM Upgrade is required and then ask for your consent before the DRM Upgrade is downloaded. Third party DRM Software may do the same. If you decline the upgrade, you will not be able to access content that requires the DRM Upgrade; however, you will still be able to access unprotected content and Secure Content that does not require the upgrade.

DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS.

Speech/Handwriting Recognition. **If the SOFTWARE includes speech and/or handwriting recognition component(s), you should understand that speech and handwriting recognition are inherently statistical processes and that errors can occur in the component's recognition of your handwriting, and the final conversion into text. Neither MEDION nor its suppliers shall be liable for any damages**

- **Limitations on Reverse Engineering, Decompilation and Disassembly.** You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.
- **Single DEVICE.** The DEVICE Software is licensed with the DEVICE as a single integrated product. The DEVICE Software installed in read only memory ("ROM") of the DEVICE may only be used as part of the DEVICE.
- **Single EULA.** The package for the DEVICE may contain multiple versions of this EULA, such as multiple translations and/or multiple media versions (e.g., in the user documentation and in the software). Even if you receive multiple versions of the EULA, you are licensed to use only one (1) copy of the DEVICE Software.
- **NO RENTAL.** Except if specifically authorized by MEDION for leased hardware, you may not rent, lease, or lend the SOFTWARE.

APPROVED ADDITIONAL TEXT IF THE DEVICE IS LEASED:

terms of a lease from MEDION or MEDIONs third-party representative, the following additional terms shall apply: (i) you may not transfer the SOFTWARE to another user as part of the transfer of the DEVICE, whether or not a permanent transfer of the SOFTWARE with the DEVICE is otherwise allowed in this EULA; (ii) your rights with respect to any SOFTWARE upgrades shall be as determined by the lease you signed for the DEVICE; and (iii) you may not use the SOFTWARE after your lease terminates, unless you purchase the DEVICE from MEDION .]

- **Software Transfer.** You may permanently transfer all of your rights under this EULA only as part of a sale or transfer of the DEVICE, provided you retain no copies, you transfer all of the SOFTWARE (including all component parts, the media and printed materials, any upgrades, this EULA and, if applicable, the Certificate(s) of Authenticity), and the recipient agrees to the terms of this EULA. If the SOFTWARE is an upgrade, any transfer must include all prior versions of the SOFTWARE.
- **Termination.** Without prejudice to any other rights, MEDION or MS may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

UPGRADES AND RECOVERY MEDIA.

- **DEVICE Software.** If the DEVICE Software is provided by MEDION separate from the DEVICE on media such as a ROM chip, CD ROM disk(s) or via web download or other means, and is labeled "For Upgrade Purposes Only" you may install one (1) copy of such DEVICE Software onto the DEVICE as a replacement copy for the existing DEVICE Software, and use it in accordance with this EULA.
- **COMPANION CD.** If any software component(s) is provided by MEDION separate from the DEVICE on CD ROM disk(s) or via web download or other means, and labeled "For Upgrade Purposes Only", you may (i) install and use one (1) copy of such component(s) on the computer(s) you use to exchange data with the DEVICE as a replacement copy for the existing Companion CD component(s).

COPYRIGHT. All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and "applets," incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by MS or its suppliers (including Microsoft Corporation). You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by MS and its suppliers (including Microsoft Corporation).

EXPORT RESTRICTIONS. You acknowledge that SOFTWARE is subject to U.S. export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments. For additional information, see <http://www.microsoft.com/exporting/>.

PRODUCT SUPPORT. Product support for the SOFTWARE is not provided by MS, its parent corporation, Microsoft Corporation, or their affiliates or subsidiaries. For product support, please refer to MEDION support number provided in the documentation for the DEVICE. Should you



MULTIMEDIA AT IT'S BEST

BM-6280 User manual

have any questions concerning this EULA, or if you desire to contact MEDION for any other reason, please refer to the address provided in the documentation for the DEVICE.

NO LIABILITY FOR CERTAIN DAMAGES. EXCEPT AS PROHIBITED BY LAW, MS SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

FOR APPLICABLE LIMITED WARRANTIES AND SPECIAL PROVISIONS PERTAINING TO YOUR PARTICULAR JURISDICTION, PLEASE REFER TO YOUR WARRANTY BOOKLET INCLUDED WITH THIS PACKAGE OR PROVIDED WITH THE SOFTWARE PRINTED MATERIALS.