



WATCH LIVE TV.

LISTEN TO MUSIC.

WORK ON THE WAY.

PLAY MULTIPLAYER GAMES.

EXPERIENCE
SPRINT POWER VISIONSM

Table of Contents

Welcome	1
Getting Started	5
Your User Name	5
Launching a Data Connection	6
Net Guard	7
Data Connection Status and Indicators	8
Navigating the Web	9
Sprint Picture Mail	11
Taking Pictures	12
Creating Your Sprint Picture Mail Password	13
Recording Videos	14
Sharing Sprint Picture Mail	15
Messaging	17
Message Types	17
Accessing Sprint Mail	18
Accessing Additional Email Providers	19
Accessing Sprint Instant Messaging	20
Accessing Wireless Chatrooms	21
Sprint TV	23
Music	25
The Sprint Music Store	26
Purchasing and Downloading Music	27
Playing Music From the Sprint Music Store	28
Backing Up Your Downloaded Music Files	29
SIRIUS MUSIC	30
Streaming Music	32

Downloading Content	33
Accessing the Download Menus	34
Selecting an Item to Download	34
Downloading an Item	35
Using My Content Manager	36
Games	38
Purchasing and Downloading Games	39
Playing Games	39
Ringers	40
Purchasing and Downloading Ringers	41
Assigning Downloaded Ringers	41
Screen Savers	42
Purchasing and Downloading Screen Savers	43
Assigning Downloaded Screen Savers	43
Web	44
Using the Browser Menu	45
On Demand	49
Initializing Your On Demand Service	50
Accessing On Demand Information	50
Updating On Demand Information	52
Phone as Modem	53
Setting Up a Data Connection With Your PC	54
Index	57

Welcome to the next generation in wireless service.



This guide introduces you to all the advantages of Sprint Power Vision.

Sprint Power Vision gives you more choice and flexibility, so you can make the most of your wireless service. Enjoy the network that gives you the power to watch live Mobile Digital TV (MDTV), instantly download songs to your phone, play multiplayer games, and more, with always on broadband-like speeds, right in the palm of your hand. Watch, listen, play, and do at the speed of life.

Sprint Power Vision not only offers new and exciting services such as Sprint TVSM, the Sprint Music StoreSM, downloadable games, On Demand personalized data services, and Phone as Modem capability, it also enhances your existing data services with increased, broadband-like speed and clearer, high-quality visuals and sound. Sprint gives you the power to do more.

Sprint. Power Up.

Here are some of the exciting features available with your Sprint Power Vision service.

Sprint Picture Mail

Shoot and send high-quality pictures and video clips faster than ever with your Sprint Power Vision phone.

Messaging

Send and receive IM or email in a flash. Converse without talking by joining a Web-based chat room. Exchange information on a chosen topic or read conversations that others have posted. Even launch a one-on-one chat for a more in-depth conversation.

Sprint TVSM

Watch live Mobile Digital TV (MDTV) on the go with full-motion video and vivid sound. Use your phone to watch news, sports, weather, movie trailers, and entertainment channels. So now you can watch TV whenever you want because it's always with you on your wireless phone.

Music

SPRINT MUSIC STORESM

Wirelessly download full stereo-quality, digital tracks directly to your phone. Choose from hundreds of thousands of songs from virtually every genre. Select songs directly from your wireless phone and listen to them wherever you go.

SIRIUS MUSIC

Listen to the best in music with SIRIUS Music – enjoy content from SIRIUS Hits 1 or choose from their many individual premium channels. It's easy to use and it's built right into your wireless phone so it's always with you, wherever you go.

STREAMING MUSIC

Stream music to your phone with Music Choice.® Choose from rock, pop, hip-hop, R&B, and more. Plus, get exclusive video clips, performances, and interviews from your favorite artists.

Games

Download and play entertaining, interactive games that you'll want to play all the time. With hundreds of games to choose from, you'll find the games just right for you.

Ringers

Personalize your phone by downloading and assigning different ringers to numbers in your phone's Contacts list.

Screen Savers

Add unique images to your phone screen or assign specific images to numbers in your phone's Contacts list.

Web Browsing

Browse Web sites or download applications at high speeds, making it easier than ever to stay informed on the go.

On Demand

Set and then receive customized, up-to-date information on sports, weather, news, money, and more, on demand – the way you want it. It's easy and convenient to set preferences for the information you choose to receive.

Phone as Modem

Your Sprint Power Vision phone can be a high-speed Internet connection for your laptop computer anywhere on the Sprint National Network. Simply connect your phone using a USB cable or the built-in connection on Bluetooth-enabled phones.

Note:	For the latest information about Sprint Power Vision features, please visit us online at www.sprint.com .
--------------	---

Getting Started

With your Sprint service, you are ready to start enjoying the advantages of Sprint Power Vision. This section will help you learn the basics of using your data services, including managing your user name, launching a Vision connection, and navigating the Web with your phone.

Your User Name

When you buy your phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com." (For example, the third John Smith to sign up for the Sprint Power Vision Network might have jsmith003@sprintpcs.com as his user name.)

When you use data services, your user name is submitted to identify you to the Sprint National Network. The user name is also useful as an address for Sprint Mail, as a way to personalize Web services, and as an online virtual identity.

Your user name will be automatically programmed into your phone. You don't have to enter it.

Finding Your User Name

If you aren't sure what your user name is, you can easily find it online or on your phone.

To find your user name:

- **At www.sprint.com.** Sign on to My Sprint Wireless using your phone number and password. To display your user name, click on the **My Personal Information** menu, and then click on **Power Vision User Name**.

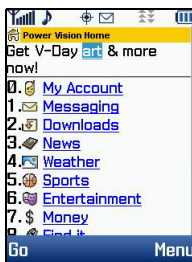 
- **On your phone.** You can find your user name under the **Phone Info** option in your phone's **Settings** menu (**Menu > Settings > Phone Info > Phone Number**).

Launching a Data Connection

To launch a data connection:

- ▶ Select **Menu > Web**. (Your data connection will start and the Sprint Power Vision home page will be displayed.)

The Sprint Power Vision Home Page



Note: If Net Guard is enabled and displayed (see page 7), select **Connect** to continue and launch the Web.

While connecting, the following message may be displayed on the screen: **Connecting....**

If you had a previous connection, the last page you visited will be displayed when you launch your browser. When this occurs, you may not see the "Connecting..." message when you launch the session.

Net Guard

When you first connect to the Web, the Net Guard will be displayed to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.

To change your Net Guard settings:

- ▶ Select **Menu > Settings > Power Vision > Net Guard**.
 - Select **On** to activate the Net Guard.
 - Select **Off** to deactivate the Net Guard.

Note:	When enabled, the Net Guard is displayed only once per session. The Net Guard will not be displayed if the phone is merely reconnecting because of a time-out.
--------------	--

Data Connection Status and Indicators

Your phone's display lets you know the current status of your data connection through indicators which are displayed at the top of the screen. The following symbols are used:



A Sprint Vision connection is active (data is being transferred); the transmit/receive symbol will blink to indicate data transmission. Incoming voice calls go directly to voicemail; outgoing voice calls can be made, but the Vision connection will terminate.



A Sprint Vision connection is dormant. (No data is being sent or received.) Though not currently active, when dormant the phone can restart an active connection quickly; voice calls can be made and received.



Your phone is not currently able to access Sprint Vision service features.



A Sprint Power Vision connection is active (data is being transferred); the transmit/receive symbol will animate to indicate data transmission. Voice calls can be made and received. When you make or receive a call, the Sprint Power Vision connection will automatically be interrupted.



A Sprint Power Vision connection is available, but no data is currently being transferred.



Your Sprint Power Vision service is dormant. (No data is being sent or received.)

If no indicator is displayed, your phone does not have a current data connection. To launch a connection, see “Launching a Data Connection” on page 6.

Navigating the Web


Navigating through menus and Web sites during a data session is easy once you've learned a few basics. Here are some tips for getting around:

Softkeys

During a data session, the bottom line of your phone's Main LCD contains one or more softkeys. These keys are shortcut controls for navigating around the Web, and they correspond to the softkey buttons (the top left and right corners of your Navigation Pad) directly below the Main LCD.

Tip:	Depending on which Web sites you visit, the labels on the softkeys may change to indicate their function.
-------------	---

To use softkeys:

- ▶ Press the desired softkey button. (If an additional pop-up menu is displayed when you press the softkey button, highlight the option and press .)

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.

To scroll line by line through Web sites:

- ▶ Press the Up or Down keys or "sweep" the Navigation Pad.


To scroll page by page through Web sites:

- ▶ Press the volume buttons on the side of the phone.

Selecting

Once you've learned how to use softkeys and scroll, you can start navigating the Web.

To select onscreen items:

- ▶ Use the navigation key to highlight the desired item, and then press the desired softkey button (or press ).

Tip:

You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "Go."


Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

To select links:

- ▶ Highlight the link and press the appropriate softkey.

Going Back

To go back one page:


- ▶ Press  on the Navigation Pad.

Note:

The **BACK** key on the phone side is used for deleting text (like a BACKSPACE key) when you are entering text.

Going Home

To return to the home page from any other Web page:

- ▶ Press and hold .
– or –
Select **Menu** (right softkey) > **Home**.

Sprint Picture Mail

With Sprint Picture Mail, you can instantly shoot, share, and print sharp, high-resolution digital pictures and take and send short video clips with your phone.

Use your phone to take full-color digital pictures or video clips with sound. Then either store the pictures and videos or send them from your phone to email addresses or other compatible phones. It's that easy.

Archive your pictures and videos at www.sprint.com/picturemail and take advantage of the Web site's advanced features, which let you crop pictures, organize your own albums, share your pictures and videos, order prints, and more.


Note: Your phone's camera and camcorder settings and menu options may differ from those outlined in this guide. Please refer to your phone's user guide for details.



Taking Pictures

Taking pictures with your phone is as simple as choosing a subject, pointing the lens, and pressing a button. For details on how to use all the camera features of your phone, please see your phone's user guide.

To take a picture:

1. From the phone's main menu, select **Pictures > Camera** to activate Camera mode.
2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
3. Press  or **Capture** (left softkey) to take the picture. (You will see "Saving" and the picture will be displayed.)
4. Press **Options** to display picture options, or press **OK** to return to Camera mode to take another picture.

Note:	The instructions in this guide may not match your phone's operation. Please refer to your phone's user guide for complete phone operation instructions.
--------------	---

Creating Your Sprint Picture Mail Password

The first time you attempt to upload or share pictures or use the Picture Mail Web site, you will need to establish a Picture Mail password through your phone. This password will also allow you to sign on to the Picture Mail Web site at www.sprint.com/picturemail, where you can access and manage your uploaded pictures.

To create your Picture Mail password:

1. When prompted, enter your four-digit password using numbers or letters and press **OK**. (To enter your password, press **Flip** [right softkey], use your keypad to enter the password, press **Done** [left softkey] to return to the Main LCD, and press **Done** [left softkey] on the Main LCD.)

Tip:

Write down your Picture Mail password in a secure place.




2. Please wait while the system creates your account.

Once you have received confirmation that your account has been successfully registered, you may upload and share pictures and access the Picture Mail Web site.

Recording Videos

Recording videos with your phone is as simple as taking a picture. For details on how to use all the video features of your phone, please see your phone's user guide.

To record a video:

1. From the phone's main menu, select **Pictures > Camcorder** and select **Video Mail** or **Long Video** to activate Video mode.
2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
3. Press  (or **Record**) to begin recording the video.
4. Press  again (or press **Done**) to stop recording. (Recording will stop automatically after a preset time, depending on your phone and its mass storage options.)
5. Press **Next** (right softkey) for additional video options (including **Send Message**, **Play**, **Upload**, **Erase**, **Post to Service**, and **Review Albums**) or press  to return to Video mode.

Tip:	For complete video option details, please refer to your phone's user guide.
-------------	---

Sharing Sprint Picture Mail

Once you've taken a picture or a video, you can instantly share it with family and friends. You can send pictures and videos to their email addresses or to their messaging-ready phones.

To share Picture Mail from your phone:

1. From the main menu, select **Pictures > My Albums > In Phone or Memory Card**.
2. Select the pictures or videos you want to send, and then select **Options > Send > To Contacts**. (A message may be displayed.)

Note: The first time you send a picture or video, you will be prompted to register your Picture Mail account. (See "Creating Your Sprint Picture Mail Password" on page 13.)

3. Select a recipient from your Contacts list or enter a wireless phone number or email address.
4. Select **Next** when you have finished selecting or entering recipients.
5. Select the desired options to include a text message or a voice recording, or to set the message priority.
6. Confirm your recipients, message, voice recording, and picture or video.
7. Press the appropriate softkey to send your picture mail.

Note: See your phone's user guide for additional details.

You can also send pictures and videos from your phone's Messaging menu.

To share Sprint Picture Mail from Messaging:

1. From the main menu, select **Messaging > Send Message > Picture Mail**.
2. Select an option to enter or select recipients for your picture mail.
3. Select **Next** when you have finished selecting or entering recipients.
4. Select a location from which to select pictures or videos to send (such as **In Phone**, **Memory Card**, or **Online Albums**).
5. Select the pictures or videos you want to send, and then select **Next**.
6. Complete steps 5–7 under “To share Picture Mail from your phone:” on page 15.

Tip:

To take and send a new picture or video, select **Take New Picture** or **Take New Video** during step 4 above.

To learn more about Sprint Picture Mail, visit www.sprint.com or go to the Sprint Picture Mail Web site at www.sprint.com/picturemail.

Messaging

You can send and receive emails and text messages and participate in Web-based chatrooms right from your phone. Messaging allows you to stay connected to friends, family, and coworkers 24 hours a day anywhere on the Sprint National Network.

Message Types

There are many types of text messaging available on your phone. These include SMS Text Messaging, Sprint Instant Messaging, Email, and Chat.





Accessing Sprint Mail

Sprint Mail allows you to perform many of the typical email functions from your phone that you can from your personal computer. You can manage your Sprint Mail account from your phone or from your personal computer at www.sprint.com.

To access Sprint Mail from your phone:

1. Select **Menu > Messaging > IM & Email > PCS Mail**.
(The browser will start and go to the PCS Mail page. If you're a first-time user, you will be prompted to set up your account by establishing a user name and password.)

Tip:

To enter any text, including your username and password, select the text entry field, press , and then press the **Flip** button to activate the Phone Display. Use the keypad to enter your information and press  to return to the Main LCD. For more information on entering text, please see your phone's user guide.

2. Select the folder you wish to view, such as **Inbox** or **Compose**.
3. Follow the onscreen instructions to read, reply to, compose, send, and manage messages in your email account.



Accessing Additional Email Providers

With Sprint Power Vision, you can use popular email services such as AOL® Mail, AIM Mail, MSN® Hotmail, and Yahoo!® Mail to keep in touch, even while you're on the go.

To access email providers from your phone:

1. Select **Menu > Messaging > IM & Email**.
2. Select an email provider, such as **AOL**, **MSN**, or **Yahoo!**. (The browser will start and go to the appropriate messaging page.)
3. Enter the required sign-in information for the selected provider, such as user name, email address, or password, and select **Sign In**. (Your mailbox for the selected provider will be displayed.)

Note: The information required to sign in will vary depending on the email provider you are accessing.

Tip: To enter any text, including your sign-in information, select the text entry field, press , and then press the **Flip** button to activate the Phone Display. Use the keypad to enter your information and press  to return to the Main LCD. For more information on entering text, please see your phone's user guide.

4. Follow the onscreen instructions to read, reply to, compose, send, and manage messages in your email account.

 

Accessing Sprint Instant Messaging

Sprint Power Vision also provides you with access to popular instant messaging (IM) clients, including AOL® Instant Messenger™, MSN® Messenger, and Yahoo!® Messenger.

To access instant messaging clients from your phone:

1. Select **Menu > Web**. (The browser will start and display the home page.)
2. From the home page, select **Messaging > Instant Messaging**.
3. Select an IM provider, such as **AOL Instant Messenger**, **MSN Messenger**, or **Yahoo! Messenger**.
4. Enter the required sign-in information for the selected provider, such as user name or password, and select **Sign In**. (Your IM screen for the selected provider will be displayed.)

Note: The information required to sign in will vary depending on the instant messaging provider you are using.

Tip: To enter any text, including your username and password, select the text entry field, press , and then press the **Flip** button to activate the Phone Display. Use the keypad to enter your information and press  to return to the Main LCD. For more information on entering text, please see your phone's user guide.

5. Follow the onscreen instructions to read, reply to, compose, send, and manage messages in your IM account.

 

Accessing Wireless Chatrooms

Sprint Power Vision gives you the ability to join wireless chatrooms from your phone. The following instructions are for “Jumbuck Chat & Flirting,” but you can also choose from additional chat providers and services.

To access Wireless Chat from your phone:

1. Select **Menu > Messaging > Chat & Dating**. (The browser will start and display the Chat & Dating menu.)
2. Select **Jumbuck Chat & Flirting**.
3. Highlight a category, such as **Power Chat**, and press **Go**.
4. Select **Enter**. You will see a disclaimer for Wireless Chat. Select **Agree** to enter the Chat menu.
5. Use your keypad to enter a nickname and select **Enter**.

Tip:

To enter any text, including your nickname, select the text entry field, press , and then press the **Flip** button to activate the Phone Display. Use the keypad to enter your information and press  to return to the Main LCD. For more information on entering text, please see your phone's user guide.

6. Highlight a chat room from the menu (for example, Singles, Over 20s, or Flirts) and press **Go**. Once in the chat room, you may scroll through the postings to read messages from other chat room participants. To update the displayed messages, select **Manual refresh**.

To post a message:

1. Select **Add Text**.
2. Enter your message. Use your right softkey to select a text entry mode.
3. Select **Send**.

To set up a private chat room:

1. Select **1->1**.
2. Select a participant with whom you'd like to launch a private chat room. A message will be sent to the person's chat screen (or to yours if someone is requesting a private chat with you):
[Nickname] requested a 1->1. Do u accept? Yes No
If the invited party accepts, a private chat room will open.

To exit a chat room:

- ▶ Select **Leave Room**.

Note:	The Chat & Dating options change frequently, so check back often to see what's available.
--------------	---

Sprint TV

With Sprint Power Vision, you can watch live TV on the go right on your wireless phone. Accessing your Sprint TV channels is as easy as using the remote control in your living room. Wherever you go on our wireless high-speed multimedia network, you can get more out of your Sprint TV service.




SPRINT TV

To access your phone's Sprint TV channels:

1. Select **Menu > Sprint TV** to launch the Media Player.



2. Select **Sprint TV** and press .
3. Select the channel you wish to watch, either from **My Channels** (a list of preview channels or channels to which you've already purchased access) or from **Available Channels** (a list of channels available for purchase).
4. If applicable, select a clip and press **Play** to view the program.

Music

Sprint Power Vision lets you use your phone as a portable personal jukebox. From the Sprint Music Store to a variety of streaming music options, you're bound to find the music you want, when you want it.




The Sprint Music Store

The Sprint Music Store enables you to purchase and download digital music files to play on your phone or PC.

 

Accessing the Sprint Music Store

You can access the Sprint Music Store right from your phone's main menu, anywhere on the Sprint National Network. When you enter the store for the first time, you will be prompted to set up your user identification and password.


To access the Sprint Music Store:

1. From the Main LCD, select **Buy Music** and press .
2. Follow the onscreen instructions to establish your User ID and password.

Tip:

To enter any text, including your User ID and password, select the text entry field, press , and then press **Flip** (left softkey) to activate the Phone Display. Use the keypad to enter your information and press  or **Done** to return to the Main LCD. For more information on entering text, please see your phone's user guide.



Your User ID for the Sprint Music Store is your 10-digit wireless phone number. The password may be any 4-digit number. The recommended password is the last four digits of your Social Security number.

3. Once you've entered your password, select **Create New Account** and press .
4. Use your keypad and navigation key to explore the store.

Purchasing and Downloading Music

Now that you're in the store, you can shop for songs to purchase and download to your phone's microSD™ card.


 
 
To find and download music files from the Sprint Music Store:

1. From the Sprint Music Store opening page, select an option to browse the store:
 - **Featured Music** offers a revolving selection of highlighted songs and artists.
 - **Categories** allows you to choose from categories such as Top 10s, New This Week, What's Hot, Songs on the Go, and specific musical genres.
 - **Search** gives you the option of searching for specific songs or artists. Just use your keypad to enter your search criteria in the available field.
2. Navigate through the various listings, highlight the song you want, and press . (The song information screen will be displayed.)
3. Select an option and press :
 - **Preview** to play an audio clip of the selected song.
 - **Buy Song** to purchase the song and download it to your phone's microSD card.
 - ◆ When you select **Buy Song**, the file will automatically download to your phone's microSD card. (If there is no microSD card installed or if there is not enough free memory space on the card, you will see an alert.)
 - ◆ Once the song has been downloaded to your microSD card, you will see options allowing you to listen to the song, add it to a playlist, or continue shopping.

Playing Music From the Sprint Music Store

The Sprint Music Store not only gives you access to great music, it also gives you a place to listen to and organize your music library.

Accessing the Music Player

1. From the Sprint Music Store opening page, use your Navigation Pad to select the **Player** tab.
2. From the Player display, select an option:
 - **All My Music** to browse through all of your downloaded music.
 - **<playlist>** to select a customized playlist you've created to organize your music.
 - **Create Playlist...** to set up a custom playlist of songs you like to hear together. Follow the onscreen instructions to create a name for the playlist, select songs by artist, genre, and title, and create an order for the playlist.
3. Once you've displayed a list of songs, you can browse through your available titles by Song, Artist, or Genre to select a specific song.
 - To play a song, select it and press .
 - To listen to a playlist, select it and press  to open the playlist, then press  again to begin playing from the selected song. (You can also highlight the playlist and use the softkey menu to begin listening.)

Backing Up Your Downloaded Music Files

When you purchase and download a music file from the Sprint Music Store, you get two versions of the song: one to download and play on your phone (file type: AAC+), and another to download from <http://musicstore.sprint.com> and play on your PC (file type: WMA). The AAC+ files downloaded to your phone can only be played on your phone and on your account, and once they have been downloaded, they cannot be downloaded again without being repurchased.

Sprint recommends you back up your AAC+ music files to your PC so you can access the files in case your microSD card is lost or damaged, or if you install a new microSD card.

To back up your downloaded music files:

1. Connect your phone using a USB cable or the built-in connection on Bluetooth-enabled phones.
2. Use your PC to navigate to the microSD card's Music folder.
3. Select and copy the music files to a folder on your PC's hard drive.

Note:	Although you can store AAC+ files on your PC, they will only be playable on your phone and on your account. If you copy the files to a new microSD card, you will need to create a folder on the card called "MUSIC" to be able to play the music files.
--------------	--

SIRIUS MUSIC

SIRIUS MUSIC channels offer a variety of great, commercial-free music that you can access directly from your phone.

To access SIRIUS MUSIC on your phone:

1. Select **Menu > Sprint TV** to launch the Media Player.



2. Select **Music & Radio > SIRIUS MUSIC**.
3. Select **Preview** to see and hear a preview of the SIRIUS MUSIC service.
– or –
Select **Buy...** to purchase a monthly subscription to SIRIUS MUSIC.

Once you have purchased access to the SIRIUS MUSIC service, you can listen to your favorite music from stations such as:

- **SIRIUS Hits 1:** Today's Top 40 Hits.
- **The Pulse:** Pop and Rock from the '90s to now.
- **'60s Vibrations:** The musical revolution of the '60s and early '70s.
- **Totally '70s:** The most popular music from the '70s.
- **Big '80s:** The hit music of the '80s.
- **Vinyl:** Classic rock of the '60s and '70s.

- **Hair Nation:** Glam rock from the '80s.
- **First Wave:** The '80s Alt-rock revolution.
- **Soul Town:** Classic soul hits.
- **Heart & Soul:** The R&B hits from the '80s, '90s, and today.
- **New Country:** Today's hottest country hits.
- **Prime Country:** Country music superstars of yesterday and today.
- **Jazz Café:** Smooth jazz instrumentals and vocals.
- **SIRIUS Blues:** Authentic blues music, from past to present.
- **Broadway's Best:** Songs from Broadway's most popular shows.
- **The Beat:** Today's biggest dance hits and remixes.
- **Area33:** Trance and progressive house dance music.
- **SIRIUS INTERVIEWS:** Interviews and performances of favorite artists.

Streaming Music

In addition to the Sprint Music Store and the SIRIUS Music channels, Sprint Power Vision offers a variety of musical options through the Music & Radio menu. Choose from rock, pop, hip-hop, and R&B, and access exclusive video clips, music industry news, performances, and interviews with your favorite artists.

To access additional Music & Radio options on your phone:

1. Select **Menu > Sprint TV > Music & Radio > [selection]**.
2. Select **Preview** to see and hear a preview of your selected channel (if available).
– or –
Select **Buy...** to purchase a monthly subscription to your selected channel.

Once you have purchased access to a music or radio channel, you can select from a variety of stations to listen to your favorite music or get caught up on what's new in music.

Downloading Content

With the Sprint Power Vision Network, you have access to a dynamic variety of Premium Service content, such as downloadable Games, Ringers, Screen Savers, and other applications. (Additional charges may apply.) The basic steps required to access and download Premium Service content are outlined on the following pages.



Accessing the Download Menus

To access the download menus:

1. Select **Menu > My Content**.
2. Select the type of file you wish to download (**Games, Ringers, Screen Savers, Applications, IM & Email, or Call Tones**), and then select **Get New**. (The browser will start and take you to the corresponding download menu.)

To access the download menus from the Web browser:



1. From the home page, select **Downloads**.
2. Select **Games, Ringers, Screen Savers, or Applications** to go to the corresponding download menu.

Selecting an Item to Download

You can search for available items to download in a number of ways:

- **Featured** displays a rotating selection of featured items.
- **Categories** allows you to narrow your search to a general category, such as Country or Pop/Rock for Ringers or For the Ladies for Screen Savers. (There may be several pages of available content in a list. Select **Next 9** to view additional items.)
- **Search** allows you to use your keypad to enter search criteria to locate an item. You may enter an entire word or title or perform a partial-word search.

Tip:

To enter search terms, select the text entry field, press , and then press the **Flip** button to activate the Phone Display. Use the keypad to enter your information and press  to return to the Main LCD for results.

Downloading an Item

Once you've selected an item you wish to download, highlight it and press **Go** (left softkey). You will see a summary page for the item including its title, the vendor, the download details, the file size, and the cost. Links allow you to view the **License Details** page, which outlines the price, license type, and length of license for the download; and the **Terms of Use** page, which details the Premium Services Terms of Use and your responsibility for payment.

To download a selected item:

1. From the information page, select **Buy**. (The item will download automatically. When the **New Download** screen is displayed, the item has been successfully downloaded to your phone.)

Note:	If you have not previously purchased an item, you will be prompted to create your purchasing profile.
--------------	---

2. Select an option to continue:
 - Select the appropriate option to assign the downloaded item (or to start, in the case of a game or an application). Your data session will end, and you will be redirected to the appropriate phone menu screen.
 - Select **Set as** to assign a ringer or screen saver to a phone function.
 - Select **Settings** to configure downloaded games or applications.
 - Select **Shop** to browse for other items to download.
 - Press **END** to quit the browser and return to standby mode.

Using My Content Manager



Whether you purchase your Premium Services content from your phone or from your online account management page at www.sprint.com, all of your purchases are stored in **My Content Manager** and may be downloaded to your phone from there.

My Content Manager is a storage area on the Sprint National Network that is assigned specifically to your account. It allows you to store all your Premium Service downloadable files. The files remain in My Content Manager until their license terms have expired – even after you have downloaded the content to your phone. This provides you with a convenient place to access information about your downloaded files without having to store the information in your phone's memory.

To access My Content Manager:

- ▶ From the home page, select **Downloads > My Content Manager**. (A list of your purchased items will be displayed.)

To download purchased content from My Content Manager:

1. From the **My Content Manager** display (see above), highlight the item you wish to download, and press . (The information page for the selected item will be displayed.)
2. Highlight **Download**, and press . (The item will download automatically. When the **New Download** screen is displayed, the item has been successfully downloaded to your phone.)

3. Select an option to continue:

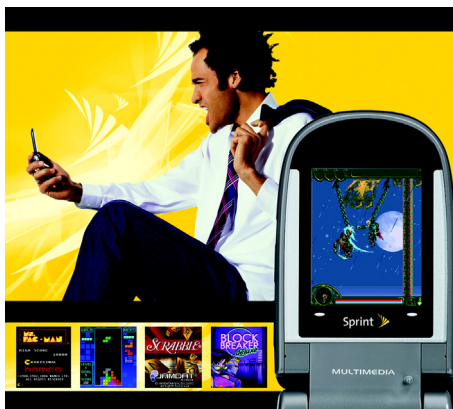 
- Select the appropriate option to assign the downloaded item (or to start, in the case of a game or an application). Your data session will end, and you will be redirected to the appropriate phone menu screen.
- Select **Set as** to assign a ringtone or screen saver to a phone function.
- Select **Settings** to configure downloaded games or applications.
- Select **Shop** to browse for other items to download.
- Press **END** to quit the browser and return to standby mode.

Tip:

You can also access My Content Manager through the phone's main menu. Select **Menu > My Content > [Games, Ringtones, Screen Savers, Applications, IM & Email or Call Tones] > My Content Manager**. The browser will open and take you to the corresponding content.

Games

Sprint has partnered with the most cutting-edge electronic gaming providers to bring you a realistic and exciting gaming experience. Advanced Sprint Power Vision phones with full-color screens, vibration, multi-chord sound, and sophisticated graphics make games from SEGA®, JAMDAT®, NAMCO®, THQ®, and Mobliss® more vivid than ever.



Purchasing and Downloading Games

Tip:

For complete instructions on downloading, see “Downloading Content” on page 33.

To purchase and download games for your phone:

1. From the home page, select **Downloads > Games**.
2. Use your navigation key to select a game you wish to download, or use the Categories or Search options to locate a game. (Once you have selected an item, the game detail page is displayed.)
3. From the game detail page, select **Buy**. (The game will download automatically. When the **New Download** screen appears, the game has been successfully downloaded to your phone.)

Playing Games

To play a downloaded game on your phone:

1. From your phone's main menu, select **My Content > Games**.
2. Select the game you wish to play. (If applicable, a prompt will display the days remaining on the game license and ask if you want to continue. Select **Yes**.)
3. Follow the onscreen instructions to play the game. (Instructions and game options can usually be accessed using your phone's softkey buttons.)
4. When you are finished, select **Exit** (or **Quit**) or press **END**. (A prompt will be displayed: “Resume the Application?”)
5. Select **Yes** to continue playing or **No** to exit.

Ringers

With the Sprint Power Vision Network, you can personalize your wireless experience by downloading unique ringers and assigning them to numbers in your Contacts list. Select from thousands of available ringers – including your favorite tunes and celebrity voice ringers – and download them to your phone.



Purchasing and Downloading Ringers

Tip:

For complete instructions on downloading, see “Downloading Content” on page 33.

To purchase and download ringers for your phone:

1. From the home page, select **Downloads > Ringers**.
2. Use your navigation key to highlight and select a ringer you wish to download, or use the Categories or Search options to locate a ringer. (Once you have selected a ringer, the ringer detail page is displayed.)
3. From the ringer detail page, select **Buy**. (The ringer will automatically be downloaded to your phone.)
4. Select an option to continue:
 - Select **Listen** to play the ringer.
 - Select **Set as** to quit your data session and assign the ringer to a phone task.
 - Select **Shop** to browse for other ringers to purchase and download.
 - Press **END** to quit the browser and return to standby mode.

Assigning Downloaded Ringers

To assign downloaded ringers to specific events, such as incoming Caller ID calls or voicemail notifications, or to associate downloaded ringers to specific callers in your phone's Contacts list, refer to your phone's user guide.

Screen Savers

With the Sprint Power Vision Network, you can personalize your wireless experience by downloading and assigning unique images for screen savers or to entries in your phone's Contacts list.



Purchasing and Downloading Screen Savers

Tip:

For complete instructions on downloading, see “Downloading Content” on page 33.

To purchase and download screen savers for your phone:

1. From the home page, select **Downloads > Screen Savers**.
2. Use your navigation key to highlight and select a screen saver you wish to download, or use the Categories or Search options to locate a screen saver. (Once you have selected a screen saver, the screen saver detail page is displayed.)
3. From the screen saver detail page, select **Buy**. (The screen saver will automatically be downloaded to your phone.)
4. Select an option to continue:
 - Select **View** to see your screen saver.
 - Select **Set as** to quit your data session and assign the screen saver to a phone task.
 - Select **Shop** to browse for other screen savers to purchase and download.
 - Press **END** to quit the browser and return to standby mode.

Assigning Downloaded Screen Savers

To assign downloaded screen savers to be displayed for specific events, such as powering on or off, or to assign downloaded screen savers to identify specific callers in your phone's Contacts list, refer to your phone's user guide.

Web

With Web access on your phone, you can browse full-color graphic versions of your favorite Web sites, making it easier than ever to stay informed while on the go. Follow sports scores, breaking news, and weather, and shop on your phone anywhere on the Sprint National Network.

In addition to the features already covered in this guide, the home page offers access to colorful, graphically rich Web categories, including **News, Weather, Entertainment, Sports, Money, Travel, Shopping,** and **Tools**, as well as useful management options including **My Account** and **Search**. Many sites are available under more than one menu – choose the one that's most convenient for you.



Using the Browser Menu

Navigating the Web from your phone using the home page is easy once you get the hang of it. For details on how to navigate the Web, select menu items, and more, see “Navigating the Web” on page 9.

Although the home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific Web sites, are not available. For these and other functions, you will need to use the browser menu. The browser menu offers additional functionality to expand your use of the Web on your phone.

Opening the Browser Menu

The browser menu may be opened any time you have an active data session, from any page you are viewing.

To open the browser menu:

- ▶ Press the right softkey. (The browser menu will be displayed in a drop-down list.)

Options available under the browser menu include:


- **Home.** Returns the browser to the home page.
- **Forward.** Returns you to a previously viewed page (after having used the **BACK** key).
- **Mark this Page.** Allows you to create new bookmarks.
- **View Bookmarks.** Allows you to bookmark the current site, access bookmarked sites, and manage your bookmarks.
- **Search.** Launches a Web search.
- **Send page to.** Allows you to send a URL you're viewing through SMS Text Messaging.

- **Go to URL....** Allows you to navigate directly to a Web site by entering its URL (Web site address).
- **History.** Keeps a list of links to your most recently visited sites. To navigate to a site, highlight it and press **OK**, and then select **Connect**.
- **Refresh this page.** Reloads the current Web page.
- **More....** Displays additional options:
 - **Show URL.** Displays the URL (Web site address) of the page you're currently viewing.
 - **Restart Browser.** Refreshes the current browser session.
 - **Script Log.** Allows you to display the script log.
 - **About Browser.** Allows you to display your browser's information.
 - **Preferences.** Allows you to configure and manage your browser settings.

Creating a Bookmark

Bookmarks allow you to store the address of your favorite Web sites for easy access at a later time.

To create a bookmark:


1. Go to the Web page you want to mark.
2. Press the right softkey to open the browser menu.
3. Select **Mark this Page** and press  twice to save the bookmark.

Note: Bookmarking a page does not store the page contents, just its address.

Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.

Accessing a Bookmark

To access a bookmark:

1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks**.
3. Scroll to highlight the bookmark you'd like to access, and press  to go to the Web site.

Deleting a Bookmark

To delete a bookmark:


1. Press the right softkey to open the browser menu.
2. Select **View Bookmarks**.
3. Scroll to highlight the bookmark you'd like to delete and select **Options** (right softkey).
4. Select **Delete**. (A confirmation will be displayed.)
5. Select **OK** to remove the bookmark.


Going to a Specific Web Site

To go to a particular Web site by entering a URL (Web site address):

1. Press the right softkey to open the browser menu.
2. Select **Go to URL....**
3. Use your keypad to enter the URL of the Web site you wish to go to and press **OK**.

Tip:

To enter the URL, select the text entry field and then press the **Flip** button to activate the Phone Display. Use the keypad to enter the URL and press  to return to the Main LCD.

4. Press  to go to the Web site.

Note:	Not all Web sites are viewable on your phone.
--------------	---

Reloading a Web Page

To reload (refresh) a Web page:

1. Press the right softkey to open the browser menu.
2. Select **Refresh this page**. (The browser will reload the current Web page.)

Restarting the Web Browser

If the Web browser seems to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.

To restart the Web browser:

1. Press the right softkey to open the browser menu.
2. Select **More... > Restart Browser**.

On Demand

With Sprint Power Vision's exclusive On Demand feature, you can personalize your phone's data services to suit your needs. The On Demand feature makes it easier than ever to retrieve the most popular Web information and categories instantly. On Demand uses the ZIP code you provide to customize the content you receive, so you can get the information you want, when you want it.

On Demand acts like a PC browser's customized home page, displaying a variety of top categories such as News, Sports, Weather, Money, Movies, and more. This information is updated throughout the day, so you'll always be up-to-date.



Initializing Your On Demand Service


To initialize your phone's On Demand service:

1. Select **Menu > On Demand**.
2. Enter your preferred ZIP code and press **Done** (left softkey). (The On Demand service will customize itself to your selected location and the On Demand menu screen will be displayed.)

Accessing On Demand Information

Finding the information you're looking for with On Demand is as easy as navigating a Web browser on your PC. (The following examples will illustrate how to access News and Movies information.)



To access News information using On Demand:

1. Select **Menu > On Demand**. (The On Demand menu screen will be displayed.)
2. From the On Demand menu screen, highlight **News** and press . (You will be presented with a list of news categories.)

Note:	When you highlight a category from the main On Demand screen, the category title will expand. For example, highlighting the News category expands the title to "Late Breaking News & Photos."
--------------	---

3. Use your Navigation Pad to scroll through the news categories or stories. If applicable, the left and right softkeys will offer additional options.

To access Movies information using On Demand:

1. From the On Demand menu screen, select **ShowBiz**.
2. Highlight **Movies** and press .
3. From the Movies display, select an option and follow the onscreen instructions. Options may include:
 - **By Theater** to select from a list of theaters in your preferred ZIP code.
 - **Listings** to view a list of all current movie titles.
 - **Showing Near Me** to view a movie's showtimes at a number or selected movie theaters in your area. Follow the onscreen instructions to purchase will call tickets (may not be available for all theaters or for all showtimes).
 - **Search** to search for a particular movie by either Title, Theater, or ZIP code.
4. Select a movie title and press .
5. From the Movie Title display, select an option and follow the onscreen instructions. Options available may include:
 - **Date** to select a date for the movie.
 - **<theater listing>** to view the movie's showtimes at a number of selected movie theaters in your area. Follow the onscreen instructions to purchase will call tickets (may not be available for all theaters or for all showtimes).

Select other categories, such as Weather, Sports, and Money, from the On Demand main screen and enjoy the feature-rich contents of On Demand.

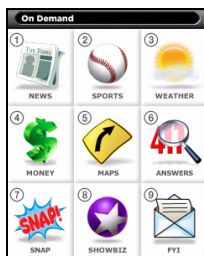 
Every category offers you the capability to customize news and information based on your preference.

Updating On Demand Information

The On Demand news and information is automatically delivered to your phone four times a day. You can also select how your phone receives updates.

To manually retrieve On Demand updates:

- ▶ From an On Demand category page (such as News), select **Update** (left softkey). (Your phone will retrieve updates for the selected category.)



Phone as Modem

Your phone's data capabilities enable you to use its high-speed data connection as a modem for your laptop computer. You'll be able to send and receive email, browse the Internet, and access your company's network anywhere on the Sprint National Network.



Note: To use this service, you are required to sign up on a Sprint Power Vision with Phone as Modem plan. Go to www.sprint.com or visit a Sprint Store for phone as modem plan details and more information.

Setting Up a Data Connection With Your PC

In order to use your phone as a modem, you'll first need to load the Sprint PCS Connection ManagerSM software on your PC. Then, use a compatible USB cable or built-in Bluetooth connection to connect your phone to your PC.

To set up your phone-to-PC data connection:

1. From your computer's traditional Internet connection, go to www.sprint.com/downloads and download the connection manager software. (The software and drivers can be downloaded free of charge.)
2. Double-click the downloaded file and follow the onscreen instructions to install the Connection Manager software and drivers to your PC.
3. Once the software has been fully installed, connect your phone to your PC using a USB cable or built-in Bluetooth connection. (Your PC will detect the connection and a status icon may appear in your system tray.)
4. Launch the Connection Manager software, select a profile, and click **Connect**.

5. Once the connection is established, launch an Internet session, check your email, or do anything else you would do using a traditional data connection.
6. When you're ready to terminate the data connection, double-click the Sprint PCS Connection Manager icon in the system tray, and then click **Disconnect** to end the session.

Note:

While your data connection is active, you will not be able to receive incoming calls; all incoming calls will be forwarded to your Sprint Voicemail. Placing an outgoing call during a data session terminates the data connection.

Sprint Vision services are available on the Sprint National Network. Sprint Power Vision services work anywhere on the Sprint National Network, but broadband-like download speeds are only available on the Sprint Mobile Broadband Network.

Index

B

- Bookmarks
 - Accessing 47
 - Creating 46
 - Deleting 47
- Browser Menu 45

C

- Chat 21

D

- Data Connection
 - Launching 6
 - Status and Indicators 8
- Downloading Content
 - 33–37

E

- Email 19

G

- Games 38–39
- Getting Started 5

I

- Instant Messaging 20

M

- Messaging 17–22
 - Chat 21
 - Email 19
 - Instant Messaging 20
 - Sprint Mail 18
- Music 25–32
 - Sirius Music 30
 - Streaming Music 32
- My Content Manager 36

N

- Net Guard 7

O

- On Demand 49–52

P

- Phone as Modem 53–55
- Picture Mail 11–16

R

- Ringers 40–41

S

- Screen Savers 42–43
- Sirius Music 30
- Sprint Mail 18
- Sprint Music Store 26–29
 - Accessing 26
 - Backing Up Music 29
 - Downloading Music 27
 - Playing Music 28
 - Purchasing Music 27
- Sprint Picture Mail 11–16
 - Password 13
 - Recording Videos 14
 - Sharing 15
 - Taking Pictures 12
- Sprint Power Vision
 - Home Page 6
 - Navigating the Web 9
- Sprint TV 23–24

U

- User Name 5

W

- Web 44–48
 - Navigating 9
- Welcome 1



GH68-14221A