

# ASK Proxima

**A1100 A1200 A1300**

## Quick Start Guide



**Regulatory models W2100 and W2106**




Please read the safety instructions booklet before setting up the projector.


1

## Unpack the box

Here's what's included:

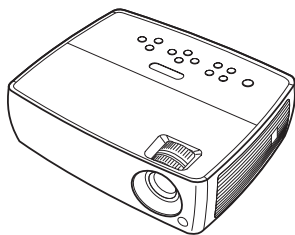


Projector

 


Remote



USB Cable

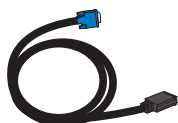

Computer Cable

 

Power Cable


Save the box and packing materials.

2


## Put batteries in the remote

The remote uses 2 AA batteries.


1

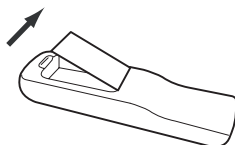

2

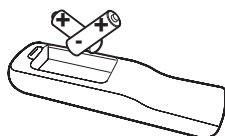

3

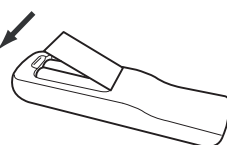

Please dispose of batteries in an environmentally proper manner.

### Status Indicator Panel

The top of your projector includes a convenient indicator panel with symbols that light up to show important status.

For details, see **Troubleshooting**.

Power/Standby

Service Required



High Temperature

Replace Lamp


# 3

## Connect source

Color-coded connections make it easy.

You can connect more than one source if needed.

### Connect to: Computer

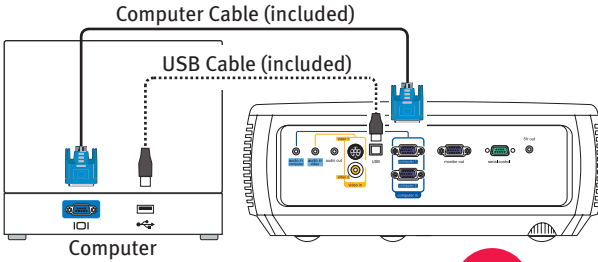

### Got an Apple computer?

You may need an adapter. For more information, see How-To Guides at [www.infocus.com/support/howto](http://www.infocus.com/support/howto)

### USB is optional

USB connection only needed for:


- Presentation control using projector remote
- Upgrading projector firmware

OR

### Connect to: DVD or VCR\* (using optional cables)

1 Connect video using either an **S-Video** or a **Composite Video** cable


2 Connect audio using a **Mini-Plug to RCA Audio Y-Cable**

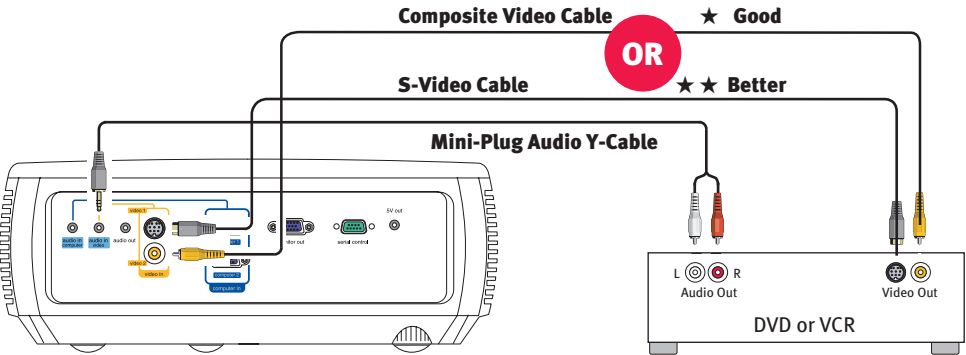

\*Also for game console or cable box.

### Want better sound?

Connect the source's audio output to a receiver/amplifier or home theater system with separate speakers.

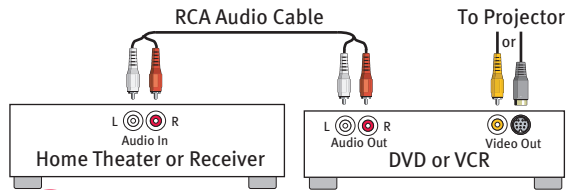


OR

### Connect to: Other kinds of sources


How-To Guides are available at [www.infocus.com/support/howto](http://www.infocus.com/support/howto)


# 4

## Turn on projector and source

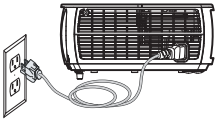

### 1 Connect the power cord to the projector and to an electrical outlet

The power light  on the projector will light amber.

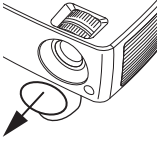

### 2 Remove the lens cap

### 3 Turn on the projector

Press **power** (on the projector or remote).  
The power light will start blinking green.


### 4 Wait for the lamp to warm up

After a few seconds, the power light will stop blinking and turn green. It can take a minute for the lamp to reach full brightness.



**Warning:** Do not look directly into the lens when the projector is turned on.

### 5 Turn on computer or other source

You may need to press a specific key combination to activate your laptop's external video port. On most laptops, hold down the **FN** key while pressing a key labeled **CRT/LCD, LCD/VGA,** a monitor icon , or similar. Key combos for popular models:

**Apple** F7

**Gateway** Fn+F3 or Fn+F4

**IBM ThinkPad** Fn+F7

**Dell** Fn+F8

**HP/Compaq** Fn+F4 or Fn+F6

**Toshiba** Fn+F5

**Fujitsu** Fn+F10


**Sony** Fn+F7



**Important:** If there is still no video, restart your computer (first make sure it's connected to the projector and the projector is turned on).

### 6 Change source if needed


If needed, press **source** (on the projector or remote) to view the source. You may have to press it more than once.

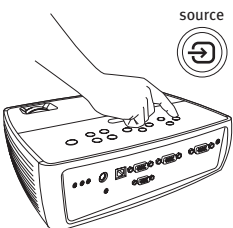

# 5


## Adjust the picture

### 1 Height

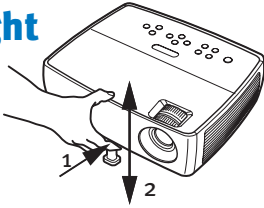


- 1 Hold down the release button under the front of the projector.
- 2 Lift the front of the projector to the desired height.
- 3 Release the button.

### 2 Keystone

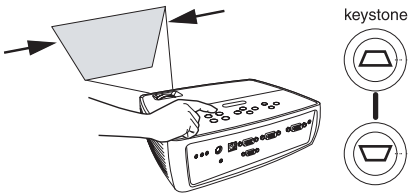

Press the **keystone** buttons to make the picture square.


### 3 Zoom and focus

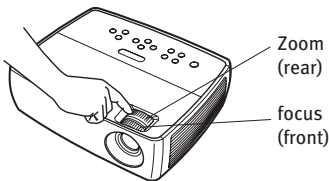

Adjust zoom first, then focus the center of the image.

### Projector Location

As distance increases, the image gets larger and moves upwards.

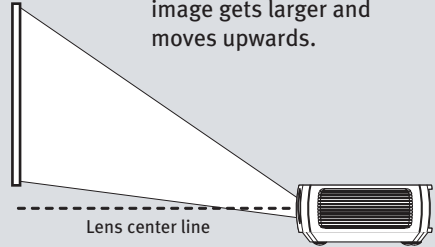

Diagonal Screen Size	Distance to Screen	
	Minimum	Maximum
60" / 1.5m	7'6" / 2.3m	8'6" / 2.6m
80" / 2m	10'2" / 3.1m	11'6" / 3.5m
92" / 2.3m	11'10" / 3.6m	13'1" / 4.0m
150" / 3.8m	19'4" / 5.9m	21'8" / 6.6m


**Interactive Screen Size and  
Distance Calculator**  
[www.askproxima.com/calculator](http://www.askproxima.com/calculator)

### Ceiling mount?

To flip the image, turn on the **Ceiling Mount** setting in the **Setup** menu.

## Using the menus

- 1 Press **menu**, then press **▼** or **▲** to review menus.
- 2 Press **select** to enter a menu, then press **▼** or **▲** to review settings.
- 3 Press **select** to change a setting. If this shows more choices, press **▼** or **▲** to update the setting, then press **select** or **menu** to save it.
- 4 Press **menu** to go back. Press it again to remove the menu.

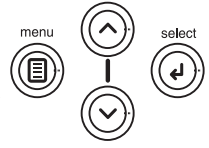


**Note:** Most picture settings are disabled (gray) unless a source is being displayed.

## Controlling your presentations

Connect the USB cable between the projector and your computer (see step 3), then press **▼** and **▲** to move through your presentation slides.

# 6

## Turn off the projector

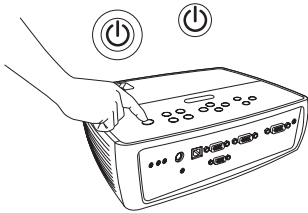

### Press the power button

The power light on the projector will blink while the fan cools the lamp. **If you need to unplug the projector**, wait until the fan stops and the power light stops blinking and stays on.

**Note:** While the power light is blinking, button presses on the projector and remote are ignored.

# 7

## Register your product

Activate your warranty to ensure eligibility for service and support. Get special offers and notifications about free product updates.

### 1 Write down your projector's serial number

It's printed on the label on the back of the projector. You'll need it to register (and if you ever need to contact support).

**Serial number:** .....

### 2 Go to [www.askproxima.com/register](http://www.askproxima.com/register)

## Optional: Read the Reference Guide

### Download it at [www.askproxima.com/support](http://www.askproxima.com/support)

The Reference Guide is available in multiple languages. It covers advanced setup and operation, including lamp replacement instructions.

# Troubleshooting

## If there is no picture or the picture is blank



**If the power light is off**, make sure the power cord is connected and plugged into a live electrical outlet. **If the power light is amber and not blinking**, press the **power** button.

**Check video source and cables.** Make sure the video source (computer, DVD player, VCR, etc.) is turned on and cables are securely connected between the source and the projector.

**Make sure your computer's video port is enabled.** Press the key combination that activates your laptop's external video port (see step 4). If there is still no image, restart your laptop.

source



**Press the Source button.** You may need to press it several times to view the correct source.

auto image



**Press the Auto Image button.**

## If "Signal out of range" is shown, or the picture looks bad

auto image



**Press the Auto Image button.** If that doesn't help (and the source is a computer), reduce your computer's display resolution or vertical refresh rate.

## If the replace lamp light is on



Turn the projector off and wait at least one minute, then turn it on again. If the replace lamp light turns on again, the lamp needs to be replaced. **For lamp replacement instructions**, see the Reference Guide, which can be downloaded at [www.askproxima.com/support](http://www.askproxima.com/support)

Only InFocus genuine lamps are tested for use in this projector.

## If the high temperature light is on



**Turn the projector off and remove anything that may be blocking the air vents on its side.** Leave the projector off for at least one minute to let it cool before turning it on again. **IMPORTANT:** Continuous operation at high temperature may reduce the lifetime of the lamp and/or projector.

## If the service required light is on



**Turn the projector off and wait at least one minute, then turn it on again.** If the service required light turns on again, the projector needs to be serviced. See below for service contact information.

**More troubleshooting options are in the Reference Guide**

Download it at [www.askproxima.com/support](http://www.askproxima.com/support)



Warning: In the unlikely event of a lamp rupture, particles may be ejected from the projector. Keep out of the area under and around the projector when it is turned on. See the safety instructions booklet for more details.

# Questions? We're here to help!

Visit us at:

[www.askproxima.com/support](http://www.askproxima.com/support)

We're here to support you with your new purchase. We can help you with...

- Determining screen sizes
- Documentation in other languages
- Connecting your sources (TV, DVD, Cable/Satellite, Game, etc.)
- Selecting optional accessories
- Product warranty protection plans

## USA, Canada, Latin America

Customer Support Telephone

**+1 (503) 685-8888**

TOLL FREE: **800-799-9911**

Mon-Fri, 7 am - 5 pm Pacific

[techsupport@infocus.com](mailto:techsupport@infocus.com)

## Asia Pacific

Customer Support Telephone

Singapore: **+65 63539449**

China: **800.828.2268**

Australia: **1300-725-295**

Australia Direct Sales: **1800-885-841**

Mon-Fri, 9 am - 5 pm SGT

[asia-support@infocus.com](mailto:asia-support@infocus.com)

## Europe, Middle East, Africa

Customer Support Telephone

**+31 (0)36 539 2820**

Mon-Fri, 08:30 - 18:00 CET

[emea.support@infocus.com](mailto:emea.support@infocus.com)

Hg - Lamp contains mercury. Manage in accordance with local disposal laws.

See [www.lamprecycle.org](http://www.lamprecycle.org)

## Declaration of Conformity

Manufacturer: InFocus Corporation, 27500 SW Parkway Ave. Wilsonville, Oregon 97070-8238 USA

European Office: Louis Armstrongweg 110, 1311 RL Almere, The Netherlands

We declare under our sole responsibility that this projector conforms to the following directives and norms: EMC Directive

2004/108/EC, EMC: EN 55022, EN 55024, EN 61000-3-2, EN 61000-3-3, Low Voltage Directive 2006/95/EC, Safety: IEC 60950-1:1st Edition.

## Trademarks

Apple, Macintosh, and PowerBook are trademarks or registered trademarks of Apple Computer, Inc. IBM is a trademark or registered trademark of International Business Machines, Inc. Microsoft, PowerPoint, and Windows are trademarks or registered trademarks of Microsoft Corporation. Adobe and Acrobat are trademarks or registered trademarks of Adobe Systems Incorporated. DLP® and the DLP logo are registered trademarks of Texas Instruments and BrilliantColor™ is a trademark of Texas Instruments. InFocus, In Focus, and INFOCUS (stylized) are either registered trademarks or trademarks of InFocus Corporation in the United States and other countries.

## FCC Warning

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment that are not expressly approved by InFocus Corp. may void the user's authority to operate the equipment.

## Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## Agency Approvals

UL, cUL

Other specific Country Approvals may apply. Please see product certification label.

**Input ratings:** 100-240Vac, 3.0A, 50-60Hz

InFocus reserves the right to alter product offerings and specifications at any time without notice.