 


USER'S MANUAL

AUDIO DISTRIBUTOR ADIS5



PROEL

UK

1. IMPORTANT SAFETY INSTRUCTIONS



CAUTION: To reduce the risk of electric shock do not remove cover (or back panel). No user serviceable parts inside. Refer servicing to qualified personnel only.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.



This symbol is intended to alert the user of the presence of uninsulated dangerous voltage within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user of the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance. Please carefully read the owner's manual.

INSTRUCTIONS:

All safety and operating instructions should be read before the product is operated.

Retain these instructions:

All safety and operating instructions should be retained for future reference. This owner's manual should be considered as a part of the product and it must accompany it every time, and delivered to the new user when this product is sold. In this way the new owner will be aware of all the installations, operating and safety instructions.

Heed all warnings:

All warnings on the product and in owner's manual should be adhered to. Heed all warnings.

Follow all instructions:

All operating and user's instructions must be followed.

Sentences preceded by  symbol contain important safety instruction. Please read it carefully.

DETAILED SAFETY INSTRUCTIONS.

Water and moisture:

This apparatus should not be used near water (i.e. bathtub, kitchen sink, swimming pools, etc.)

Ventilation:

This apparatus should be placed in a position that doesn't interfere with correct ventilation. This unit, for example, should not be placed on a bed, sofa cover or similar surfaces that could cover ventilation openings, or placed in a built-in installation, such a bookcase or a cabinet that could block air flow through ventilation openings.

Heat:

This apparatus should be placed away from heat sources, like radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

Power sources:

- This apparatus should be connected only to power source type specified in this owner's manual or on the unit.
- If the supplied AC power cable plug is different from wall socket, please contact an electrician to change the AC power plug.

Grounding or Polarization:

- All precautions must be observed in order to avoid grounding or polarization defeating.
- Unit metal parts are grounded through the AC power cord.
- If the AC power outlet doesn't have grounding, consult an electrician for outlet grounding.

Power cord protection:

The power cord should be routed in a way it will not be walked on or pinched by items placed upon or against it, paying particular attention to cords at plugs, convenience receptacles and wall outlet.

Cleaning:

- You can clean the unit with a compressed air flow or a wet cloth.
- Don't clean the unit using solvents like trichloroethylene, thinners, alcohol, or other fluids with very strong volatility and flammability.

Non use periods:

The unit AC power cord should be unplugged from the outlet if it's unused for a long period.

Objects or liquid entry inside the unit:

Be careful that no objects fall or liquid is spilled inside the unit through ventilation openings.

Safe power line use:

- Keep firmly the plug and the wall outlet while disconnecting the unit from AC power.
- If you're not going to use the unit for a long period of time, please unplug the power cord from AC power outlet.
- To avoid unit power cord damaging, please don't strain the AC power cable and don't bundle it.
- In order to avoid unit power cord damaging, please be sure that the power cord is not walked on or pinched by heavy objects.

Unit relocation:

Before any unit relocation please control the unit is turned off. The power cord must be unplugged by the wall outlet, and all the connections wires should be disconnected as well.

Don't open this unit:

Don't attempt to open or to repair this unit by yourself. For any problem solution not described in this owner's manual, please refer to qualified personnel only or consult us or your National Distributor. Any improper operation could result in fire or electric shock.

Damages requiring services:



- Don't attempt to do operations not described in this user's manual.
- In the following cases please refer to an authorized maintenance center or skilled personnel:
 - When the unit works improperly or it doesn't work at all.
 - If power cord or plug are damaged.
 - If liquid has spilled, or objects have fallen into the unit.
 - The unit has been exposed to rain.
 - The unit doesn't operate normally or it exhibits a marked change in performance.
 - If the product has dropped or it has been damaged in any way.

Maintenance:

The user shouldn't attempt maintenance operation not described in this user's manual. Every maintenance operation should be done by qualified personnel only.

IMPORTANT SAFETY INSTRUCTIONS:

- Install this unit following owner's manual instructions.
- Don't install, connect or disconnect power supply when the unit is powered, otherwise there's an high risk of electric shock.
- Don't open the unit, there are no user serviceable parts inside.
- If you detect a particular smell from the unit, please immediately turn it off and disconnect the AC power cord.
- Don't block the unit ventilation openings.
- Avoid using this unit in overload for a long period.
- Don't force commands (switches, controls, etc.)

- To obtain good speakers wire contacts, please tighten the screw terminals firmly.
-  For safety reason, don't defeat the grounding connection. Grounding is useful for user safety.
- Use only connectors and accessories suggested by the manufacturer. .
- This unit should be placed in a rack (see INSTALLATION) and kept far from:
 - Wet places
 - Direct exposure to heat sources (like sun light)
 - Non properly ventilated places
- Disconnect the power cord during storms or when the unit is not used.
-  In order to prevent fire and electric shock risks, it's necessary to keep the unit far from sprinkling and drops. Please don't put cups, vases or other object containing liquids over the unit. In case of interferences from source signal, THD value will raise over 10%. Don't place this unit in a bookshelf or in other places with small room.
- PROEL S.P.A. is not responsible for any damage that occurs due to a wrong unit installation.

Thank you for choosing one of Proel products, and for your confidence towards our brand, synonymous of professionalism, accuracy, high quality and reliability. All our products are CE approved and designed for continuous use in professional installation systems.


1. DESCRIPTION

This unit has been specifically designed for audio line distribution for P.A. systems.

FEATURES:


- Advanced design and manufacturing ed accuracy
- Very easy installation
- Two balanced independent inputs (CH1 and CH2)
- Five balanced output for each input
- Independent level controls
- Input peak level LED indicators
- Mono/stereo switch

Front panel description

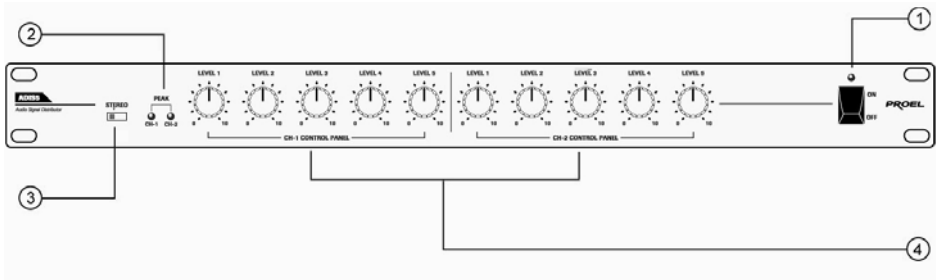

1. Power switch and LED
2. Input peak level LED indicators
3. Mono/stereo switch
4. Independent output level controls for CH1 and CH2 sections

Rear panel description

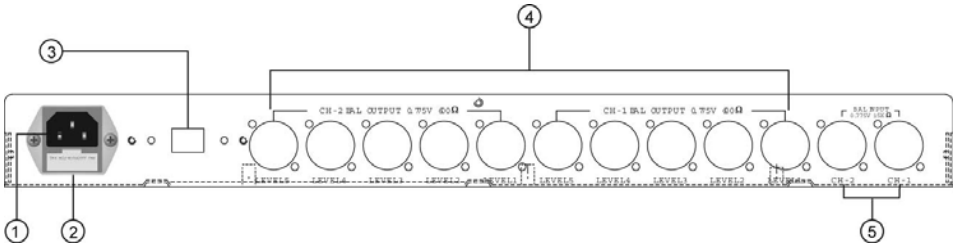

1. IEC standard AC power supply socket
2. Fuse-holder
3. AC power selector
4. Section CH1 and CH2 output connections
5. CH1 and CH2 input connections

Installation

1. AC power supply connection.
To connect this unit to AC power supply please use supplied linecord.

1. Input connections

Input connectors are two independent balanced XLR (CH1, CH2). These connectors may be used for line level signals of different sound sources (CD player, tuner, tape, etc. Each source can be independently routed to each output (OUTPUT1, 2, 3, 4, 5).

2. Output connections

There are ten independent balanced XLR output connectors, divided in two sections (CH1, CH2). Each output level control can be individually adjusted by its level control located on unit front panel (fig.1 ref.4). 5 CH1 section outputs have the same signal of CH1 input, and 5 CH2 section outputs have the same signal of CH2 input.

3. Mono/Stereo mode

With this selector (fig.1 ref.3) in STEREO position, the unit distributes CH1 input signal to 5 CH1 section outputs, and CH2 to 5 CH2 section outputs.

With this selector (fig.1 ref.3) in MONO position, the unit distributes CH1 signal **only** to 10 outputs (5 CH1 section outputs plus 5 CH2 section outputs) while the signal present in CH2 input will not be routed to any output.

4. Peak indicator LED

Each input is provided with a LED (fig.1 ref.2). This LED turns on when input signal is too high.

Operations

- a. To turn on the unit press the POWER switch ON.
- b. To turn off the unit press the POWER switch OFF.
- c. Use the selector (fig.1 ref.3) to choose the mono/stereo operational mode (see Installation point 3).
- d. If peak indicator LED is continuously lit, it means that its input signal is too high. In order to obtain a non distorted signal, please lower the sound source output level until LED turns on only during music peaks.



- e. Please move clockwise all the volume knobs to increase output levels, counter-clockwise to reduce output levels.

⚠ Warning: before connecting and/or disconnecting any sound source to this unit, in order to avoid forthcoming units damages please make sure that the output knobs are set totally counter-clockwise.

Technical Specifications

Model	ADIS5
Input connectors	2 balanced line level female XLR
Input sensitivity/impedance	0,775V/15K Ω
Output connectors	10 balanced line level male XLR
Output level/impedance	0,775V/600K Ω
Frequency response	50Hz~20KHz > -0,5dB
Signal-to-noise ratio	< 90dB
AC power supply	115-120 / 220-230V 60 / 50Hz
Power consumption	6W
Dimensions	1U standard 19"
Dimensions (WxHxD)	483x44x213 (mm) 19 in x1.75 in x 8.4 in
Weight	3 Kg. – 6.6<gd lbs



The product is in compliance with Directive 89/336/EEC (Electromagnetic Compatibility) and following modifications 92/31/EEC and 93/68/EEC, as the following standards:

EN 50082-1:1997, EN 55013:1990, EN 55020:1994

it is also in compliance with Directive 73/23/EEC (Low Voltage) and following modifications 93/68/EEC, as the following standard:

EN 60065:1998

Proel SpA pursue a policy of continuous research and development. Proel SpA reserve the right to modify product circuitry and appearance at any moment, without prior notice.



PROEL S.p.A.
(World Headquarters - Factory)
Via alla Ruenia 37/43
64027 Sant'Omero (Te) – Italy
Tel: +39 0861 811241
Fax: +39 0861 887862
E-mail: info@proelgroup.com

installation.proelgroup.com