

# eBook Reader with WiFi & 7" TouchScreen LCD

## Quick Start Guide



**AEBK08FB**

aluratek.com

qsg Q10201 Copyright © 2011 Aluratek, Inc. All Rights Reserved.

### Features

- eBook support: **TXT\*, PDF, EPUB, PDB\*, FB2\*, RTF\***
- Audio support\*: **MP3, WMA, WAV, AAC, OGG, FLAC**
- Video support: **RM / RMVB, AVI, MKV (XVID / H.264), MPG, MP4, 3GP, DAT, MOV, FLV**
- Photo support: **JPG, BMP, GIF, PNG**

\*non DRM

 
- 7" TouchScreen Color LCD
- Wireless 802.11 b/g - email & mobile browsing
- Bookmark and auto page turn function
- Adjustable font size
- Screen rotation support (portrait & landscape)
- Built-in MP3 player with background playback support
- SD card slot - up to 32GB
- Internal lithium-ion polymer battery with battery level indicator and low level warning
- 1 Year Warranty

### Package Contents


Your order has been carefully packaged and inspected. The following should be included in your package. Please inspect the contents of the package to ensure that you have received all items and that nothing has been damaged. If you discover a problem, please contact us immediately for assistance.



Libre eBook Reader

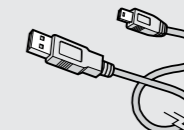

USB Cable

 

Power Adapter



Quick Start Guide





Download Guide



Warranty / Registration Card

### Product Overview

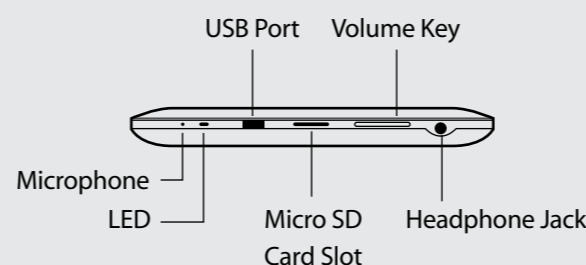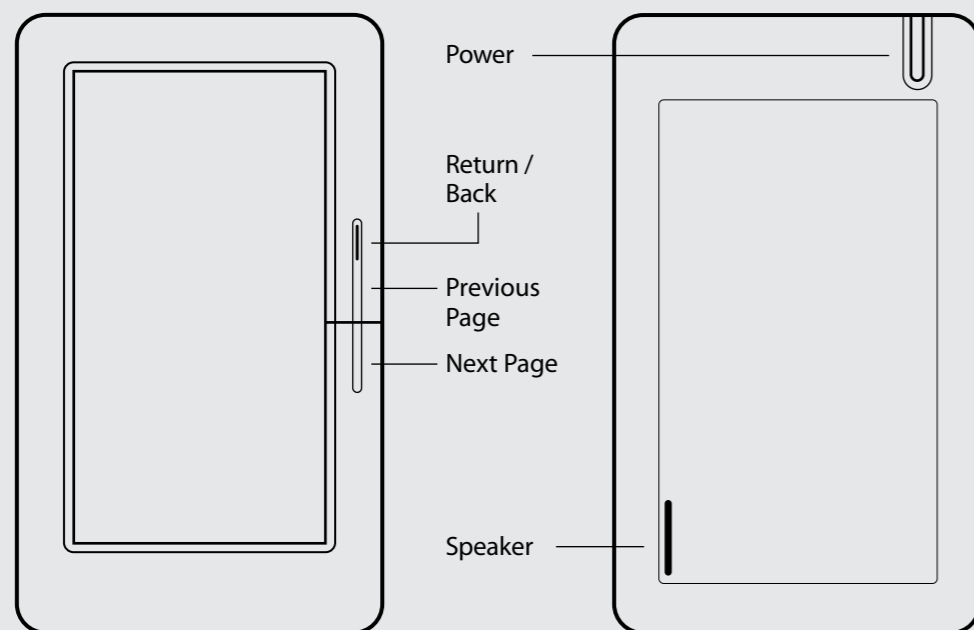  

### Operating Instructions

#### STEP 1. Charging the Battery:

The battery is not fully charged and it is highly recommended that you charge your LIBRE before you begin using it.

Note: Using the LIBRE "out of the box" will not harm the device. You will experience reduced battery life as the unit will not be fully charged.

Connect the power adapter to the LIBRE's USB port and you will see an animation of a battery charging on the LIBRE's display. Please charge the battery for a minimum of six (6) hours using the power adapter. You may also charge the battery by connecting your LIBRE to the USB port of your PC using the USB cable included with your LIBRE.

#### STEP 2. Powering on Your LIBRE:

To properly power ON your LIBRE for the first time, press and hold the POWER button for 3 seconds then release. The Main Menu should appear in approximately one minute.

To power the LIBRE ON or OFF for everyday use, simply press and release the POWER button. Please DO NOT hold down or press the POWER button repeatedly, the LIBRE will not respond properly.

To extend battery life, you can set the LIBRE to go into standby mode automatically after 15 seconds to 10 minutes. From the Main Menu, go to "Settings > Sound & Display > Screen Timeout". You may select from the following choices: Never Timeout, 15 Seconds, 30 Seconds, 1 Minute, 2 Minutes or 10 Minutes. Select your choice by using the up or down arrow keys and then press "OK".

If you have any issues powering your LIBRE ON or OFF, please RESET your LIBRE (see Resetting your LIBRE section).

#### STEP 3. Reading Books on Your LIBRE:

There are 100 books preloaded on the internal memory. To access these 100 free books. Select the desired book from the list in My Library, then press "OK". Your book should load at this time.

To turn pages use the page up / page down buttons located on the right side of the LIBRE or use the touch screen.

As you become more familiar with your Libre you will notice there are some advanced features to navigate thru the books and also bookmark. These are mainly accessed from the settings menu while you are in the book.

#### To Purchase New Books for the LIBRE:

Follow the separate step by step instruction guide included with the LIBRE titled "Guide to Purchase & Download Ebooks from Kobo Books"

This guide will walk you thru how to connect and download new books from Kobo.

#### Copying Free eBooks, Music and Photo Files to your LIBRE:

You may copy free (non-DRM-restricted) ebooks, MP3 music files and photo files directly to your LIBRE from a computer. Please power ON your LIBRE and connect your LIBRE to your PC using the USB cable. Click on START, then open MY COMPUTER or COMPUTER. Your LIBRE should show up in the MY COMPUTER or COMPUTER window as two removable drive icons: one representing the LIBRE's internal memory and the second representing the SD card slot in your LIBRE. Please note that the drive letter for the SD card slot is usually one letter higher than the internal memory's drive letter. (Note: you will only see the removable drive icon for the SD card slot if you have a SD card inserted).

Copy and paste or drag and drop the free ebooks, MP3 music and photo files from your PC to either the internal memory or the SD card removeable drive icons. You should then able to view the free eBook titles under eBooks, play the MP3 music files using the LIBRE's MP3 Player or in the background while reading an eBook or view the files by selecting photos from the menu.

Note: There are millions of free ebooks available to download. Kobo.com offers a nice selection of free ebooks as well as [www.manybooks.net](http://www.manybooks.net), [www.ebooks.com](http://www.ebooks.com), and [www.gutenberg.org](http://www.gutenberg.org). Tip – search google for “free ebooks” as many additional new sites are appearing.

We recommend for free ebooks to save and download the eBooks as “Text” (.txt) format but other formats are supported. Follow the instructions above to copy to your Libre once downloaded.

#### **Memory Card Expansion Slot:**

Your LIBRE supports Micro SD cards up to 16GB if you need additional storage capacity. The FAT or FAT32 format is preferred for Micro SD cards used with your LIBRE.

The Micro SD card slot is located at the bottom edge of the LIBRE.

If your LIBRE fails to recognize your Micro SD card when inserted, please RESET your LIBRE (see next topic).

#### **Powering Off your LIBRE:**

To properly turn off the LIBRE, press and hold the POWER button for 6 seconds. Please select “Power Off” on the menu. The LIBRE will power OFF and the display will go blank. Then power ON the LIBRE by pressing and holding the POWER button for 3 seconds. The Main Menu should display shortly thereafter.

#### **Resetting your LIBRE:**

From time to time, it may be necessary to RESET your LIBRE if it becomes unresponsive. Resetting your LIBRE does not harm the device or any data contained on the LIBRE.

To properly reset the LIBRE, press a paperclip into the reset hole on the back of the unit. The LIBRE will power OFF and the display will go blank. Then power ON the LIBRE by pressing and holding the POWER button for 3 seconds. The Main Menu should display shortly thereafter.

Resetting the LIBRE should resolve any of your technical issued but if you are still having issues please contact Aluratek technical support dept at: (866) 580-1978 toll free.

Congratulations on your purchase and enjoy your LIBRE!

### **Radio and TV Interference Statement**

**WARNING!!!** This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by whatever measures may be required to correct the interference.

### **Warranty**

Aluratek warrants this product against defect in material or workmanship for **1 Year** from the date of purchase.

This warranty becomes invalid if the factory-supplied serial number or “warranty void” sticker has been removed or altered on the product.

This warranty does not cover:

- A) Cosmetic damage or damage due to acts of God
- B) Accident, misuse, abuse, negligence or modification of any part of the product.
- C) Damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than Aluratek.
- D) Products sold AS IS or WITH FAULTS.

IN NO EVENT SHALL ALURATEK'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, IT'S ACCOMPANYING SOFTWARE, OR IT'S DOCUMENTATION.

Aluratek makes no warranty or representation, expressed, implied, or statutory, with respect to it's products, contents or use of this documentation and all accompanying software, and specifically disclaims it's quality, performance, merchantability, or fitness for any particular purpose. Aluratek reserves the right to revise or update it's product, software or documentation without obligation to notify any individual or entity.

### **Technical Support**

If you need further assistance, please contact the Aluratek support department for troubleshooting prior to returning this device.

**E-mail: [support@aluratek.com](mailto:support@aluratek.com)**

**Web: [www.aluratek.com/support](http://www.aluratek.com/support)**

**Local (Tustin, CA): 714-586-8730**

**Toll free: 1-866-580-1978**