entone

Janus HD

Janus Media Hub

User's Guide (North America Edition)

P/N: 95-86xxxx-06

COPYRIGHT

©2010 Entone, Inc. All rights reserved. This document contains proprietary information protected by copyright. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of Entone, Inc., 20863 Stevens, Creek Blvd, Suite 300, Cupertino, CA 95014, U.S.A.

DISCLAIMER

IF THIS PRODUCT DIRECTS YOU TO COPY MATERIALS, YOU MUST HAVE PERMISSION FROM THE COPYRIGHT OWNER OF THE MATERIALS TO AVOID VIOLATING THE LAW WHICH COULD RESULT IN DAMAGES OR OTHER REMEDIES.

TRADEMARKS

Entone and the tagline "Connecting the Home" are trademarks of Entone, Inc. All other trademarks or registered trademarks belong to their respective owners.

CHANGES

The material in this document is for information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Entone, Inc. assumes no liability resulting from the use of the information contained herein.

Entone, Inc. reserves the right to make changes in the product design without reservation and without notification to its users.

P/N: 95-86xxxx-06

CUSTOMER SUPPORT AND CONTACT INFORMATION

For Customer Support please call: 650.572.7000

Customer Contact Information:

Entone, Inc. 20863 Stevens Creek Blvd Suite 300 Cupertino, CA 95014 U.S.A.

Tel: 650.572.7000 www.entone.com

Table of Contents

De	claration of Conformity	2
Pre	eface	5
	TYPOGRAPHICAL CONVENTIONS	5
	OVERVIEW OF THIS USER'S GUIDE	5
1	Safety Precautions	6
	IMPORTANT SAFETY INSTRUCTIONS	6
2	Index to Parts and Controls	8
	CONTENTS IN THE BOX	8
	FRONT PANEL AND REAR PANEL	9
	REMOTE CONTROL	10
3	Janus Introduction	11
	ABOUT THE JANUS MEDIA HUB	11
4	Connecting the TV	
	CONNECTING THE TV USING COAXIAL CABLE	13
	SETTING UP TV TO USE CATV	
	CONNECTING TV USING COMPONENT	14
	CONNECTING TV USING RCA COMPOSITE OR S-VIDEO	
	CONNECTING THE TV USING HDMI	16
5	Connecting Audio System	17
6	Powering-Up Janus	18
7	Remote Controls	20
	LOADING BATTERIES	
	CONTROLLING THE JANUS USING IR	
	CONTROLLING YOUR TELEVISION AND OTHER A/V DEVICES	
8	User Menu	22
9	Specifications	23
10	Troubleshooting	25

Declaration of Conformity



To ensure proper use of this product, please read this manual carefully and retain it for future reference. Should the unit require maintenance, contact an authorized service location.



WARNING: This symbol indicates the presence of uninsulated dangerous voltage within the product's enclosure that constitutes a risk of electric shock. Do not open the product's case.



CAUTION: This symbol indicates you must take care; there is risk of damage to the equipment or to yourself.



To prevent fire or shock hazard, do not expose this product to rain or moisture. To reduce the risk of electric shock, DO NOT remove the cover or back. No user serviceable parts are inside. For servicing refer to qualified personnel.



Declaration of Conformity (United States Only)

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that
- to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instruction as documented in this manual.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IEEE 802.11b or 802.11g operation of this product in the U.S.A. is firmware-limited to channels 1 through 11.

This device is intended only for OEM integrators under the following conditions:

- 1) The transmitter module may not be co-located with any other transmitter or antenna.
- 2) For all products market in US, OEM has to limit the operation channels in CH1 to CH11 for 2.4G band by supplied firmware programming tool. OEM shall not supply any tool or info to the end-user regarding to Regulatory Domain change.

As long as 2 conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed (for example, digital device emissions, PC peripheral requirements, etc.).

IMPORTANT NOTE: In the event that these conditions can not be met (for example certain laptop configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and the FCC ID can not be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

End Product Labeling

The final end product must be labeled in a visible area with the following: "Contains TX FCC ID: RRK-WMPN12A1".

Manual Information To the End User

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module.

The end user manual shall include all required regulatory information/warning as show in this manual.



Declaration of Conformity (Europe Only)

This product is in conformity with the Council Directives:

- EMC Directive 89/336/EEC
- Low voltage Directive 73/23/EEC



Entone products are designed and tested to meet IEC60065, the standard for the Safety of Information Technology Equipment. This is the international standard for these types of products to reduce the risk of product damage and of personal injury. The standard protects against the following hazards:

- Electric shock
- Hazardous voltage levels
- Fire Overload, temperature, material flammability

- Energy Circuit with high energy or potential as burn hazards
- Heat Accessible part of the product at high temperatures
- Radiation
- Noise





Canada Certification Notice The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective operations and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The department does not guarantee the equipment will operate to the user's satisfaction. This equipment meets the applicable Industry Canada Terminal Equipment Technical Specification. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment. The Ringer Equivalence Number (REN) is 0.0. The Ringer Equivalence Number that is assigned to each piece of terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.0. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local Telecommunication Company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations. Connection to a party line service is subject to state tariffs. Contact the state public utility commission, public service commission, or corporation commission for information. If your home has specially wired alarm equipment connected to the telephone line, ensure that the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer. If you experience trouble with this equipment, do not try to repair the equipment yourself. The equipment cannot be repaired in the field and must be returned to the manufacturer. Repairs to certified equipment should be coordinated by a representative, and designated by the supplier. Users should ensure, for their own protection, that the electrical ground connections of the power utility, telephone lines, and internal, metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION: Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate.

Preface

TYPOGRAPHICAL CONVENTIONS

The following typographic conventions are used in this manual to provide visual clues as to the purpose or specific features of the Set-Top-Box (STB) application.

- **Bold** text describes menu options and selections displayed on the screen.
- Italics emphasize statements and points to reference documentation.
- Ellipses (...) indicate truncated text for long examples depicting output that is too long to be shown in its entirety.
- **NOTE/TIP:** A note or a tip describes actions or conditions that can help you obtain optimum performance from STB.
- **WARNING:** A caution or a warning describes conditions that can result in an error.
- **IMPORTANT:** An important note.

OVERVIEW OF THIS USER'S GUIDE

This User's Guide provides generic information about connecting Janus Media Hub (Janus) to your audio and video equipments. Some of the topics covered in this guide are:

- Safety and regulatory information
- Setup
- Connecting Janus to your audio and video equipment
- Connecting Janus to the network
- Powering Janus
- Using the Remote Controls
- Troubleshooting

For a full listing of all of the topics covered in this User's Guide, see the Table of Contents.

1 Safety Precautions

Before installing Janus, be sure to unplug Janus, your TV and any other audio-video equipment you are using. This precautions list will help you to prevent danger of electrical shock and damage to Janus and your equipment.

Be careful when moving your television to avoid accidental tipping or movements that might cause injury to you or those around you.

To ensure proper use of this product, please read this user manual carefully and retain for future reference. Should the unit require maintenance, contact your service provider.

IMPORTANT SAFETY INSTRUCTIONS

- WARNING: To prevent fire or shock hazard, do not expose this product to rain or moisture.
- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prongs are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects

have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- To reduce the risk of electric shock, **DO NOT** remove cover or back panel. No user serviceable parts inside. Refer servicing to qualified personnel.
- To help prevent electric shock, plug the power cable into properly grounded sources. Use only properly grounded extension cords and adaptors, if they are needed.
- The AC main plug is used as the disconnect device, the disconnect device shall remain readily operable.
- Make sure nothing is lying on any of the cables.
- Be sure the cables are located where they will not be stepped on or tripped over.
- Do not spill food or liquids onto the unit.
- Do not push any objects into the free slots. Doing so will damage the unit, can cause fire or electrical shock, and can short out interior components.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not block cooling vents.
- Do not place the equipment in a closed-in wall unit.
- When you disconnect a cable, pull on its connector or on its strain relief loop, not on the cable itself. Some cables have a connector with locking tabs; if you are disconnecting this type of cable, press in on the locking tabs before disconnecting the cables.
- When you connect a cable, make sure both connectors are correctly oriented and aligned before connecting to avoid bending connector pins.
- For PLUGGABLE EQUIPMENT, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device

2 Index to Parts and Controls

CONTENTS IN THE BOX

Item	Picture	Quantity
Janus Media Hub (Janus)	U LINK HO RECORD MENU < OK > Janua Media Hub entone	1
RF Cable (with IEC connectors) (1.8 m)		1
RJ45 Ethernet Cable (3m)		1
RCA A/V Cable (2m)		1
Component Video Cable (2m)		1
Power Supply with 1.8m power cord (100-240V, output 12V/5A)		1
WiFi 2.4GHz Antenna (Optional)		3
URC 4 Remote Control (Universal Remote Control)		1
Battery (AA-size)		2

FRONT PANEL AND REAR PANEL

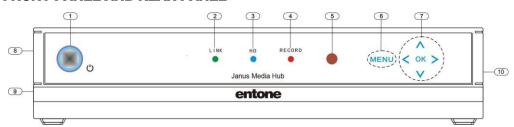


Figure 2-1 Janus Front Panel

	Part Name	Description
1.	POWER	If held for less than 5 sec, turns the Janus Media Hub ON/OFF. Lights blue when the receiver is turned on. If held for longer than 5 sec, the Janus Media Hub will be reset.
2.	LINK Indicator	Green when Ethernet connection is active
3.	HD Indicator	Blue when the output resolution is HD (720p or higher)
4.	RECORD Indicator	Red when DVR (Digital Video Recording) is recording
5.	IR reception window	IR Receiver window
6.	MENU	Display the User Menu
7.	Arrow Keys and OK	OK Button for triggering remote registration mode
	Button	Other usage according to middleware application
8.	USB	USB 2.0 port
9.	SD/MS/MMC	SD / MS / MMC memory card slot
10.	IR	Optional IR blaster jack

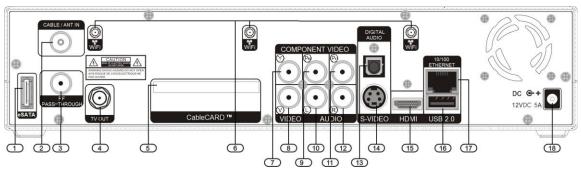


Figure 2-2 Janus Rear Panel

Part Name	Description	
1. eSATA	External Serial-ATA connector	
2. CABLE / ANT IN	IEC/F connector to cable / antenna source (tuner is optional item)	
3. RF PASS-THROUGH	IEC/F connector for cable / antenna source loop out (tuner is optional item)	
4. TV OUT	F Connector (Male) to TV coaxial connector or home coaxial network	
5. CableCARD™	CableCARD™ slot	
6. WiFi	SMA connector for WiFi antenna (WiFi is optional item)	
7. COMPONENT Y	Component Y output	
8. COMPOSITE VIDEO	Composite video output	
9. COMPONENT Pb/Cb	Component Pb/Cb output	
10. STEREO AUDIO LEFT	Composite audio output (left channel)	
11. COMPONENT Pr/Cr	Component Pr/Cr output	
12. STEREO AUDIO RIGHT	Composite audio output (right channel)	
13. DIGITAL AUDIO	S/PDIF digital optical audio TOSLINK output	
14. S-VIDEO	S-Video output	
15. HDMI	HDMI output	
16. USB 2.0	USB 2.0 port	
17. 10/100 ETHERNET	RJ45 plug for connecting to ADSL modem or network access equipment	
18. DC	DC power jack	

REMOTE CONTROL

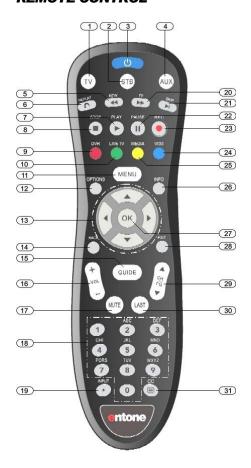


Figure 2-3 Remote Control

NOTE: *Please refer to your service operator or middleware application vendor for detailed functions and usages.

	Part Name	Description	
1.	TV	Selects to control TV	
2.	STB	Puts remote control in STB mode.	
3.	POWER	Switches the power on/off for the currently selected device. Switches STB to power on / standby mode.	
4.	AUX	Selects to control AUX device.	
5.	REW	Starts fast reverse for VOD / PVR / live channel	
6.	REPLAY	Replays the video from earlier position for VOD / DVR.	
7.	PLAY	Play button for VOD / PVR / live channel	
8.	STOP	Stop button for VOD / PVR / live channel	
9.	RED/DVR	Red color button (usage depending on middleware application)	
10.	GREEN/LIVE TV	Green color button (usage depending on middleware application)	
11.	MENU	Shows the on-screen menu.	
12.	OPTIONS	Usage depending on middleware application	
13.	ARROW KEYS	Navigates right, left, up, down in the on-screen guide.	
14.	BACK	Back button for on-screen menu (usage depending on middleware application)	
15.	GUIDE	Shows the electronic program guide.	
16.	VOL + /-	Increases or decreases volume of the currently selected device.	
17.	MUTE	Turns the volume of the currently selected device off.	
18.	NUMBER KEYS	Allows direct access to specific channels and menu items.	
19.	INPUT	Changes the current A/V input of the selected device.	
20.	FF	Starts fast forward for VOD / DVR / live channel	
21.	SKIP	Skips forward the video for VOD / DVR.	
22.	PAUSE	Pause button for VOD / DVR / live channel	
23.	REC	Records live channel.	
24.	BLUE / VOD	Blue color button (usage depending on middleware application)	
25.	YELLOW / MEDIA	Yellow color button (usage depending on middleware application)	
26.	INFO	Shows on-screen information about the current TV / VOD / DVR program.	
27.	OK	Executes the currently selected menu option.	
28.	EXIT	Exits the current menu item.	
29.	CH UP/DOWN	Changes channel up or down.	
30.	LAST	Changes channel to the most recently viewed channel.	
31.	CC	Toggles closed captioning on or off.	

3 Janus Introduction

ABOUT THE JANUS MEDIA HUB

Janus Media Hub is the latest member of Entone's cost-effective high-definition Customer Premise Equipment (CPE) solutions. Janus is a multi-functional IPTV receiver with MPEG-4 (AVC/H.264) HD capabilities that integrates easily with popular home networking and broadband services. Integrated digital video recorder (DVR) service can be offered flexibly either through pre-installed hard drive or external SATA hard drive. The comprehensive set of services enables Janus to be deployed over a wide customer base and simplified hardware management by service provider, providing long-term sustainability and cost-saving in maintenance.

Depending on the size of the hard drive connected, Janus provides typically up to 400 hours of SD content or 200 hours of HD content. Service operator can now deliver more compelling services and enhanced user experience to their subscribers.

With Janus, subscribers can blend and connect a variety of traditional DSL broadband services (FTTP) with rich media services, and extend the capabilities of their existing IP home networks. Janus supports a broad range of established home networking technologies such as HomePlug, HomePNA 3.0 and 802.11b/g to distribute video content throughout the home, including isolated locations. Janus can also connect with a home computer for more content-delivery choices.

NOTE: HomePlug, HomePNA 3.0 and 802.11b/g are Janus's optional features.

4

4 Connecting the TV

Janus offers comprehensive options for connecting audio and video to popular TV and audio equipment.

You can connect Janus to the primary TV using RCA, Component or HDMI connection. You may also connect the Janus to TVs located in other rooms using coaxial cable connection. (RF remote controls can be ordered separately to control the Janus from other rooms.)

If your TV supports 480i, 480p or 1080i pictures, use the HDMI or the component output jacks to connect to your TV. HDMI stands for High Definition Multimedia Interface. HDMI transfers digital audio and uncompressed digital video on a single cable. As a result, audio cables and video cables do not need to be connected separately. The HDMI output jack is fully compliant to HDMI 1.3 specifications.

HDMI and Component outputs support high definition video signal. They will provide the best quality video signal for HD ready TV sets.

CONNECTING THE TV USING COAXIAL CABLE

- Use the coaxial cable that comes with Janus to connect your TV's antenna input to the Janus's "TV
 OUT" connector.
- 2. Tune your TV to channel 3 or channel 4 to view the output (depending on selection of the on-screen user menu).

NOTE:

- In the TV OUT, factory set to use channel 3.
- You can change the channel ID by using the on-screen user menu. The new channel ID will take effect after restarting Janus.

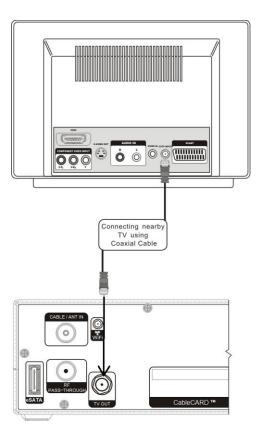


Figure 4-1 Connecting TV using Coaxial Cable

SETTING UP TV TO USE CATV

In order for the Janus to feed video signal to TV using RF TV, your TV must be configured to receive signal from CATV rather than from the antenna.

Most TVs use either a physical switch located on the rear of the TV or with on-screen programming to configure to use CATV. Consult your TV owner's manual for instruction if required.

CONNECTING TV USING COMPONENT

- 1. Acquire the required cable. Component cable comes packaged with the Janus.
- 2. Connect the Component and audio cables to the Janus.
- 3. Connect the opposite end of the video and audio cables to the matching input in the TV.
- 4. Plug in your TV and turn on the power using your TV remote control. Use your TV remote control to select the respective video input that has connected to the Janus. Consult your TV owner's manual for instructions as required.
- 5. Plug in your Janus and turn on the power.
- 6. You should now see the output from the Janus on your TV screen.

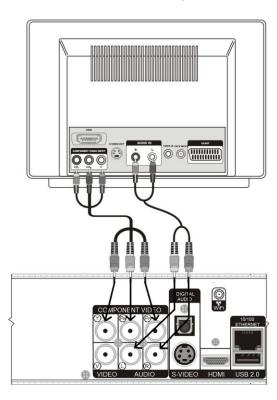
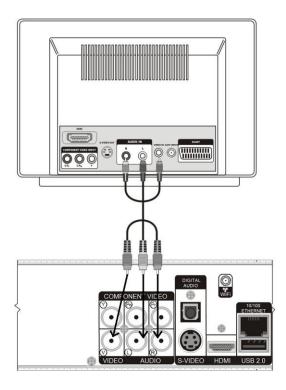


Figure 4-2 Connecting TV using Component Video and Composite audio

CONNECTING TV USING RCA COMPOSITE OR S-VIDEO

- 1. Acquire the required cable. RCA cable comes packaged with the Janus.
- 2. Connect the video and audio cables to the Janus.
- 3. Connect the opposite end of the video and audio cables to the matching input in the TV.
- 4. Plug in your TV and turn on the power using your TV remote control. Use your TV remote control to select the respective video input that has connected to the Janus. Consult your TV owner's manual for instructions as required.
- 5. Plug in your Janus and turn on the power.
- 6. You should now see the output from the Janus on your TV screen.



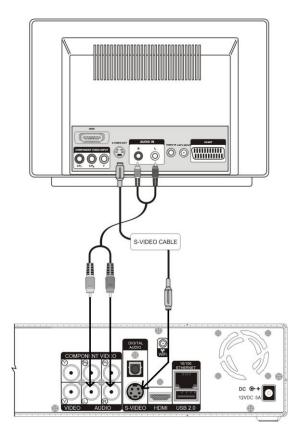


Figure 4-3 Connecting TV using RCA Composite Video/Audio

Figure 4-4 Connecting Primary TV using S-Video and Composite Audio

CONNECTING THE TV USING HDMI

- 1. Acquire the required cable. Component cable comes packaged with the Janus.
- 2. Connect the HDMI cable to the Janus. (HDMI does not require separate audio cable connection.)
- 3. Connect the opposite end of the video and audio cables to the matching input in the TV.
- 4. Plug in your TV and turn on the power using your TV remote control. Use your TV remote control to select the respective video input that has connected to the Janus. Consult your TV owner's manual for instructions as required.
- 5. Plug in your Janus and turn on the power.
- 6. You should now see the output from the Janus on your TV screen.

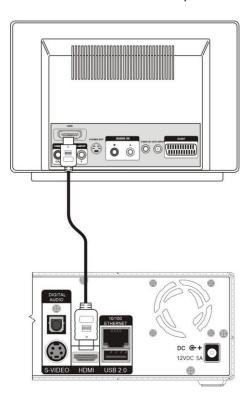


Figure 4-5 Connecting TV using HDMI

NOTE:

- When the HDMI connection cannot be verified by your TV, disconnect the HDMI cable and then connect it again, or turn off the TV and then turn it on again.
- Analog DVI is not supported. If your TV supports digital DVI but not HDMI, you can use an HDMI to DVI convector cable or adaptor to connect the Janus HDMI to the TV DVI. In this case, you need to connect the audio cable separately.
- Be sure to use an HDMI cable with the HDMI logo.
- If your TV does not support multi-channel audio, the Janus will output PCM audio only.
- Please refer to the section 8 User Menu or the usage instruction provided by your service operator to set the Component and HDMI output resolution.

5 Connecting Audio System

Your Janus supports AC-3 (Dolby Digital 5.1 channel). To enjoy multi-channel surround-sound, the content source must carry multi-channel AC-3 signal. Please refer to your service provider for availability of AC-3 5.1 programs.

You can enjoy multi-channel surround-sound such as 5.1 channels by connecting the Janus to an amplifier compatible with Dolby Digital. You can connect to your amplifier using the digital optical audio output.

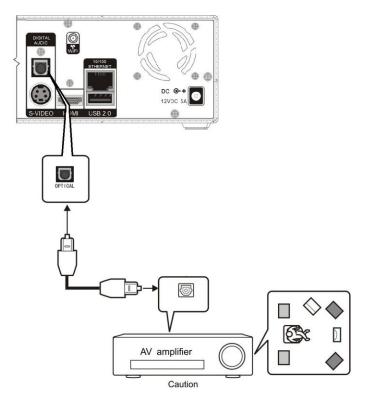


Figure 5-1 Connecting Janus to Audio System

Consult your audio system user guide for connection. Take necessary precautions when working with electric equipment. Remove the devices from wall power and be sure to use caution when moving equipment to prevent injury.

If your connected TV or A/V equipment does not support AC-3, you can disable AC-3.

Enabling or disabling AC-3 is controlled by the middleware application. For details of enabling and disabling AC-3, please refer to usage instruction provided by your service operator.

6 Powering-Up Janus

Follow these steps to power up the Janus:

1. Follow your TV/Network service provider's instruction to connect the Janus to your network modem or network access unit using the Ethernet cable.

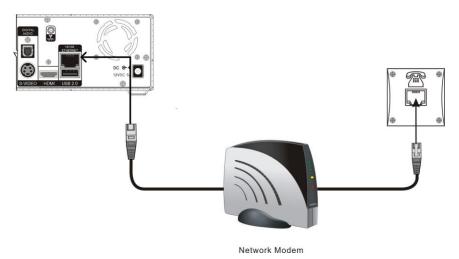


Figure 6-1 Connecting Janus (Ethernet connection)

- 2. Plug the socket end of the AC/DC adapter into the wall socket and the DC jack into the power connector on the Janus.
- 3. The Janus front panel power indicator will illuminate in blue color.
- 4. The "LINK" LED indicator will illuminate in green color

NOTE: The "HD" LED indicator will illuminate only if the output resolution is 720p or higher. The "RECORD" LED indicator will illuminate only if the (DVR) is enabled and recording assets to the hard disk drive is in progress. (Please refer to your middleware application or service provider about the DVR functionality)



Figure 6-2 Janus Starting

5. Within 60 seconds splash screen will appear on the TV.



Figure 6-3 Janus Boot-up Splash Screen

6. The total boot-up time may vary depending on the middleware application and the service provider environment.

7 Remote Controls

LOADING BATTERIES

The remote control comes with AA-size batteries, which needs to be installed when you first receive your system. When you replace old batteries, you should replace all of the batteries. Use batteries of the same kind, for example alkaline or carbon zinc, and do not mix batteries of different kinds. Alkaline batteries last longer than carbon zinc.

WARNING: Mixing old and new batteries or different types of batteries poses a fire hazard.

To load batteries to remote control:

- 1. Press down on the battery cover's top latch and slide the cover off.
- 2. If you are changing out batteries, take out all of the old batteries.
- 3. Put the new batteries in. Make sure you match the plus ("+") ends with the plus markings on the battery case.
- 4. Slide the cover back into place.

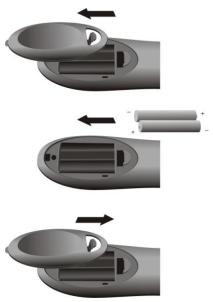


Figure 7-1 Loading Batteries to Remote Control

CONTROLLING THE JANUS USING IR

Janus uses InfraRed (IR) to receive remote control signals. IR signals travel only short distances (40 feet or less), and cannot go through walls or other solid objects. You must point the remote control to the Janus, with no objects blocking the line of sight.

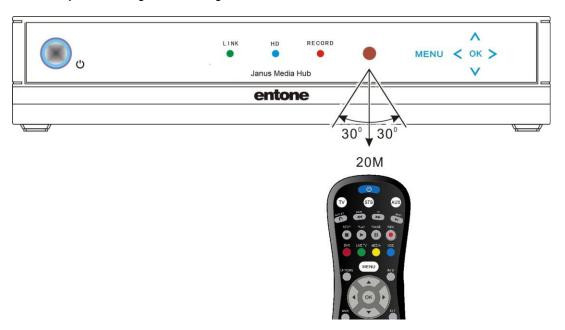


Figure 7-2 IR Reception Range

CONTROLLING YOUR TELEVISION AND OTHER A/V DEVICES

The Janus remote controls can also be used to control TVs and other A/V devices such as DVD players and recorders. The remote controls use infrared (IR) light signals to control other devices that the remote is programmed to control. IR signals travel only short distances (40 feet or less), and cannot go through walls or other solid objects. You must point the remote control directly at these devices, with no objects blocking the line of sight.

For details of how to program the Janus remote controls and the supported devices, please refer to the *Janus Quick Reference* Guide or *URC 4 User's Guide*.

8 User Menu

The Janus User Menu is an on-screen setup menu to set up your Janus features. You need to connect the TV properly before using the User Menu.

Table 8-1 User Menu Features

	Available Options
Country	■ NTSC
TV 1 Channel ID	CATV Channel ID
	■ 1080p
	■ 1080i
Resolution	■ 720p
	■ 480p
	■ 480i
Closed Captioning	■ Enable
Closed Captioning	Disable
	■ Ethernet
Network Mode	■ HPNA
	Wireless
WIFI Setting	Security Setting
Will I Setting	WLAN Scan
	HardDisk Check
HardDisk Information	HardDisk Repair
	HardDisk Format
	■ High
Fan Speed	■ Middle
i ali opeeu	■ Low
	■ Off

NOTE: The features available in User Menu may vary in different middleware application. Some of the features can also be set up through the user menu of the middleware application. The User Menu may even be not available in case all the features can also be set up through the user menu of the middleware application.

NOTE: Reboot of Janus is required for the new channel ID change to take effect.

9 Specifications

Main components		
Decoder	Single decoder	
Main CPU	MIPS 4380 class with FPU	
Memory	512MB, 1GB NAND Flash	
Software	Real-time, multi-threaded embedded OS, Java Virtual Machine with	
	MHP APIs, HTML 4.01 compliant browser with JavaScript 1.5	
Universal Remote	IR carrier frequency is 36KHz using RC6 protocol	
Control	in tosino no quanto no casta iz asing troo protess.	
Graphics		
Color	True-color OSD support (up to 1920x1080 pixels)	
	Programmable OSD scaler, flicker filter	
	Alpha blending over video	
	Picture in graphics with scaling	
	2-D graphic accelerator	
Audio and video	5 -1	
Video Input Formats	High profile up to level 4.1 H.264/AVC streams	
'	High or main profile level 3.1 H.264/AVC streams	
	VC-1 SP/MP and AP @ level 3	
	HD MPEG-2 4:2:0	
	SD MPEG-2 4:2:0	
	Still picture decode	
	MPEG4 P2 SP/ASP L5 SD Progressive/Interlaced	
	DivX 3.11, 4.1, 5.x progressive and interlaced	
	AVS1-P2 Jizhun profile level 6.0	
Video Output Formats	NTSC-M, NTSC-J	
576i/576p/720p/1080i output formats		
	Component RGB or YPrPb Output	
	Macrovision 7.1	
	HDMI with HDCP 1.2	
	S-video and composite	
Audio Input Formats	AAC LC, AAC LC+SBR Level 2, AAC+ Level 2, AAC+ Level 4	
Addio input i officials	Dolby Digital, Dolby Digital Plus	
	MPEG I Layer 1, 2, 3 (MP3)	
	Windows Media Audio (WMA)	
	WMA pro	
	AAC HE 5.1 decode plus DTS 5.1 encode SPDIF output	
Avalia Ovitovit Farms -t-	AAC HE 5.1 decode plus AC3 5.1 encode SPDIF output	
Audio Output Formats	S/PIDF output supports Dolby Digital, AAC, MPEG and DTS pass- through, 24-bit PCM	
	Dolby Digital , AAC down mixed to 2 channel PCM analog stereo	
	MPEG (ISO/IEC-11172-3) down mixed to 2 channel PCM analog stereo	
Closed Captioning		
Closed Captioning	CEA-608, CEA708	

0	4. O. C J. O. D. E. (ANT. IN JEC (D) (D. O.)		
Connectors	1 x Optional CABLE / ANT IN IEC connector (DVB-S) or F-connector		
	(ATSC / QAM / DVBS-2)		
	1 x TV OUT F-connector		
	1 x Optional RF PASS-THROUGH IEC connector (DVB-S) or F-		
	connector (DVBS-2)		
	1 x RCA composite video output		
	1 x RCA composite audio output		
	1 x Component video output		
	1 x S-Video output		
	1 x HDMI (HDMI 1.3)		
	1 x S/PDIF digital optical audio TOSLINK output		
	1 x eSATA connector		
	1 x Optional IR Blaster		
	2 x USB (USB 2.0) connector		
	3 x Optional SMA connectors		
Tuner	Optional ATSC / QAM		
Network interfaces			
Ethernet	Ethernet (10/100Base-T auto-sensing)		
Home networking	Optional HPNA 3.0 (Telephone wire / Coaxial Cable)		
	Optional 802.11b/g wireless		
Physical and mechanica			
Dimensions	260mm x 300mm x 65mm (W x L x H)		
Weight	2.2 kg		
Operating voltage	100-240V AC RMS		
Operating current	4A (Max)		
Operating frequency	50/60Hz		
Output voltage, current	12V DC, 5A		
Operating temperature	10° to 35° C (50° to 95° F) relative to non-condensing humidity		
Regulatory compliance	UL/cUL, FCC part 15, CE (Pending)		
Security controls			
Anti-Taping	Macrovision (optional)		
Parental Controls	Provided through middleware application partner integration		
·			

NOTE: Above specification for reference only.

10

10 Troubleshooting

This section describes some of the most common problems that might be encountered when installing Janus, and the solutions to those problems.

Symptom	Remedy	Reference
Remote controls	Check batteries are correctly loaded.	Section 7 – Remote
do not work	Check that new URC 4 remote control is used.	Controls
	 Check remote control is programmed to IR mode. In case of doubt, program the remote control again. 	
Remote controls cannot control the programmed devices	Device manufacturers may change their device codes or no device code can be found in the Universal Remote Control User's Guide. Try searching the device code according to the procedures listed in the Universal Remote Control User's Guide.	Janus Quick Reference Guide URC 4 User's Guide
Power indicator at the front panel not lit	 The power supply to the box is probably not working: Check that the AC/DC adapter is connected properly to the DC INPUT connector. Check that there is power from the power source. Make sure you have pressed the Power button and that the Power indicator light is green. 	Section 6 – Powering-Up Janus
Power indicator on the front panel stays red for more than 60 seconds	 Check that the ADSL cable is properly connected between the ADSL connector and the ADSL modem. The ADSL Link indicator should be orange and steady. Check that the ADSL modem is properly connected to the telephone socket. 	Section 6 – Powering-Up Janus
Power indicator turns blue; no picture on the TV	 Check that the video output connector of the Janus is properly connected to the input connector of the primary TV. "TV OUT" (coaxial connection): the TV set should be set to channel 3. Composite, Component or HDMI connection: the TV set should be set to the correct input mode for the signal. Component or HDMI connection: the resolution selected in Janus is supported by your TV. 	Section 4 – Connecting the TV
No sound	 Check that the audio cable is connected to the correct input in your device. Is the volume of the device turned down to the minimum level? If HDMI or component is used. Try disabling 	Section 5 – Connecting Audio System

	 AC-3. If HDMI is used, check the resolution and try to use the composite audio output. 	
Multi-channel sound not working	 Check with service provider that programs contain multi-channel AC-3 signal. Check that AC-3 is enabled in the Janus. Check your TV or A/V equipment for AC-3 multi-channel setup. 	Section 5 – Connecting Audio System
No sound, poor sound or popping noise on HDMI	HDMI is an evolving technology, so it is possible that some TVs may not operate properly with Janus. In case of problem, use component video output and composite audio output to connect your primary TV.	Section 4 – Connecting the TV