

LAVATHERM 86580IH

EN User manual



 **AEG**
perfekt in form und funktion

CONTENTS

1. SAFETY INSTRUCTIONS	3
2. PRODUCT DESCRIPTION	5
3. ACCESSORIES	6
4. CONTROL PANEL	7
5. BEFORE FIRST USE	8
6. PROGRAMMES	8
7. USING THE APPLIANCE	11
8. HINTS AND TIPS	13
9. CARE AND CLEANING	15
10. TROUBLESHOOTING	20
11. TECHNICAL INFORMATION	21
12. INSTALLATION	22

FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler – features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:
www.aeg.com



Register your product for better service:
www.aeg.com/productregistration



Buy Accessories, Consumables and Original spare parts for your appliance:
www.aeg.com/shop

CUSTOMER CARE AND SERVICE

We recommend the use of original spare parts.
When contacting Service, ensure that you have the following data available.
The information can be found on the rating plate. Model, PNC, Serial Number.



Warning / Caution-Safety information



General information and tips



Environmental information

Subject to change without notice.

1. SAFETY INSTRUCTIONS

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

1.1 Children and vulnerable people safety



WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction for the operation of the appliance by a person who is responsible for their safety.
- Do not let children play with the appliance.
- Keep all packaging away from children.
- Keep all detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- Cleaning and user maintenance shall not be made by children without supervision.

1.2 Installation

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean.
- Do not install or use the appliance where the temperature is less than 5°C or higher than 35°C.
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side,

where the appliance door can not be fully opened.

- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Always move the appliance vertically.
- The rear surface of the appliance must be put against the wall.
- Make sure that there is air circulation between the appliance and the floor.
- Make sure the carpet does not obstruct the ventilation openings in the base of the appliance (if applicable).
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels. (if applicable)
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used only with the appliance specified in the instructions, supplied with the accessory. Read it carefully before installation (Refer to the Installation leaflet).
- Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- The appliance can be installed as free-standing or below the kitchen counter with correct space (Refer to the Installation leaflet).
- When the appliance is put in its permanent position, check if it is fully level with the aid of a spirit level. If it is not, adjust the feet until it is.

Electrical connection



WARNING!

Risk of fire and electrical shock.

- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Always use a correctly installed shock-proof socket.

- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- This appliance complies with the E.E.C. Directives.

1.3 Use



WARNING!

Risk of fire, explosion, electric shock or damage to the appliance

- Use this appliance in a household only.
- Do not change the specification of this appliance.
- The final part of the drying cycle occurs without heat (cool down cycle) to ensure that the items will not be damaged.

If you stop the appliance before the end of the drying cycle, immediately remove and spread out all items, so that the heat can dissipate.

- If you use fabric softener or similar products, obey the instructions on the packaging.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.
- Wipe away lint that has accumulated around the appliance.
- Do not dry the damaged items which contain padding or fillings.
- Do not dry items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads..

- Before drying items that have been in contact with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers, wash them in hot water with an extra amount of detergent.
- Do not dry items in the appliance if industrial chemicals have been used for cleaning.
- Make sure that no gas lighters or matches have been left in the pockets of the clothing.
- Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on the fabric label.
- Do not dry not washed items in the appliance.
- If you have washed your laundry with a stain remover start an extra rinse cycle before you start the dryer.
- Do not drink or prepare food with the condensed water. It can cause health problems to people and pets.
- Do not sit or stand on the open door.
- Obey the maximum load volume of 8 kg (refer to the "Programme chart" chapter).
- Do not dry dripping wet clothes in the tumble dryer.

1.4 Care and Cleaning



WARNING!

Risk of injury or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

1.5 Internal light



WARNING!

Risk of injury.
Visible LED radiation, do not look directly into the beam.



The type of light bulb or halogen lamp used for this appliance, is only for household appliances. Do not use it for house lighting. To replace the internal light, contact the Service.

- Remove the door catch to prevent children and pets to get closed in the appliance.

Compressor



WARNING!

Risk of damage of the appliance.




WARNING!

Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.

- The compressor and its system in the tumble dryer is filled with the special agent which is free from fluoro-chloro-hydrocarbons. This system must stay tight. The damage of the system can cause a leakage.

2. PRODUCT DESCRIPTION

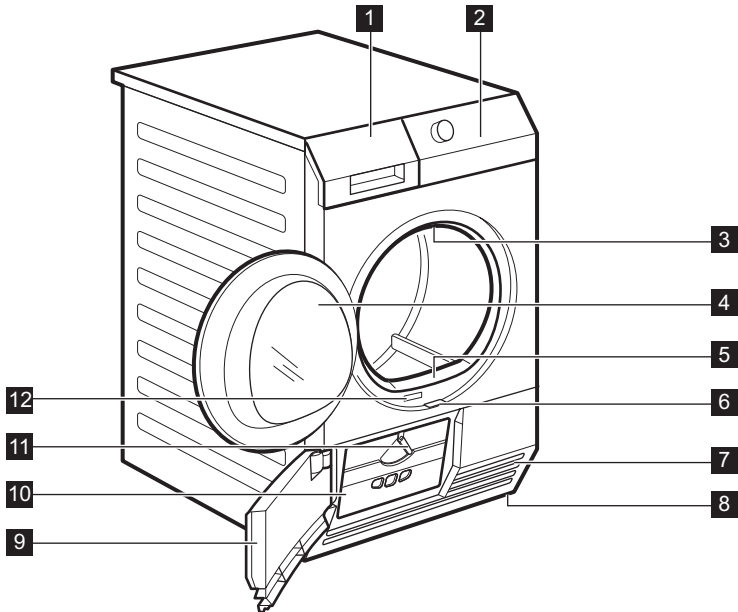

1 Water container

2 Control panel

3 Drum light

4 Load door (reversible)

5 Primary filter

6 Sliding button to open the heat exchanger door

7 Airflow slots

8 Adjustable feet

9 Heat exchanger door


10 Heat exchanger filters cover

11 Lock knob

12 Rating plate


3. ACCESSORIES

3.1 Stacking kit

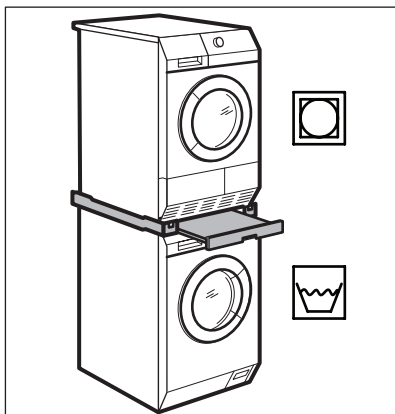

Accessory name: SKP11, STA8, STA9
Available from your authorized vendor.
Stacking kit can be used only with the washing machines specified in the leaflet. See the leaflet attached.
Read carefully the instructions supplied with the accessory.


3.2 Draining kit

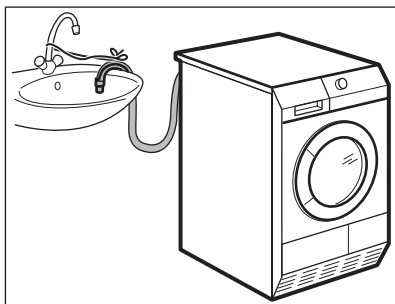

Accessory name: DK11.
It is available from your authorized vendor (can be attached to some types of the tumble dryers)
The accessory for through draining of the condensed water into a basin, siphon, gully, etc. After the installation, the water container is drained automatically. The water container must stay in the appliance.
The installed hose must be on the height from minimum of 50 cm to maximum of 1 m from floor level. The hose cannot be


in loop. Decrease the length of the hose if necessary.
Read carefully the instructions supplied with the accessory.

3.3 Pedestal with the drawer

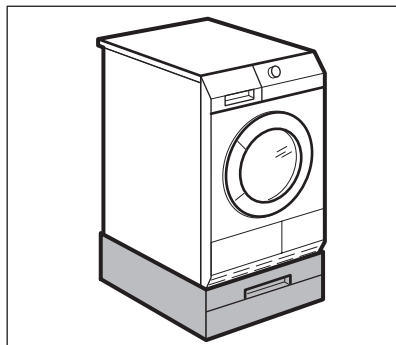

Accessory name: PDSTP10.
It is available from your authorized vendor.
To put the appliance higher at the level which helps to easy load and remove the laundry.
The drawer can be used for laundry storage e.g. : towels, cleaning products and more.
Read carefully the instructions supplied with the accessory.

3.4 Drying rack

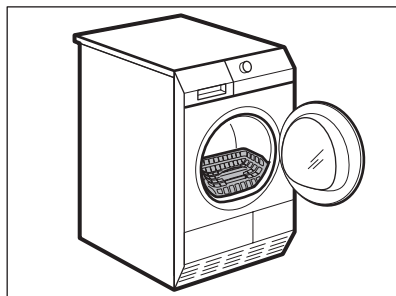

Accessory name: RA5, RA6, RA11, RA12
It is available from your authorized vendor (can be attached to some types of the tumble dryers). Do the check with the vendor or on the web site if the accessory is compatible with your appliance.

Drying rack accessory let to dry safely in the tumble dryer:


- sport shoes
- wool

- soft toys

- lingerie

Read carefully the instructions supplied with the accessory.

4. CONTROL PANEL

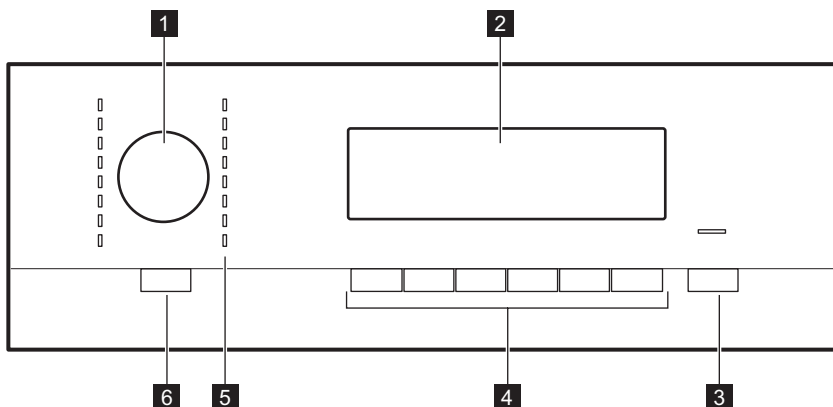

1 The programme dial

2 The display

3 The ▶|| Start/Pause push button

4 The function push buttons





 



5 Programme indicators

6 The ⏻ On/Off push button with Auto Off function

4.1 Display



Symbol	Description
	extra dryness level: minimum, moderate, maximum
	anti-crease time: default, interval (30 min. - 120 min.)
	initial laundry centrifugation (800 — 1800 rpm) default
	buzzer activated
	child lock activated

 









Symbol	Description
	time drying function activated
	drain the water container indicator
	clean the primary filter indicator
	clean the heat exchanger filters indicator
	drying cycle phase indicator
	cooling cycle phase indicator
	crease guard cycle phase indicator
	delay start activated
2.00	cycle time
10'-2.00	time programme interval (10 min. - 2h.)
30'-20h	delay start interval (30 min. - 20h.)












 



































5. BEFORE FIRST USE





 











Clean the tumble dryer drum with a moist cloth or set a short programme (e.g. 30 minutes time programme) with the load of moist cloths.
At the beginning of drying cycle (3-5 min.) there could be a slightly higher

 sound level. It is because of start of the compressor that is normal for compressor powered appliances such: refrigerators, freezers .

6. PROGRAMMES

Pro-grammes	Load 1)	Properties	Available functions	Fab-ric mark
 Cottons				
 Extra Dry	8 kg	To dry cotton pieces of clothing. Drying level: extra dry.	all except  Time Drying	
 Cup-board Dry 2)	8 kg	To dry cotton pieces of clothing. Drying level: cupboard dry.	all except  Time Drying	
 Iron Dry 2)	8 kg	To dry cotton pieces of clothing. Drying level: applicable to iron.	all except  Time Drying	


Pro-grammes	Load 1)	Properties	Available functions	Fab-ric mark
 dB Extra Si- lent	8 kg	To gently dry cotton pieces of clothing with the noise decreased to the minimum. The programme can be used at night.	all except  Time Drying	 
 Jeans	8 kg	To dry leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams).	all except  Time Drying	  
 Duvets	3 kg	To dry single or double duvet and pillows (with feather, down or synthetic fillings).	all except  Anticrease and  Time Drying	  
 Time	8 kg	To dry laundry with the time set by the user. The time value must be related to the load. To dry one item or small quantities of the laundry we recommend to use short times.	all except  Dry Plus and  Spun at RPM	  
 Ex- tra Quick Mixed	3 kg	To dry cotton and synthetic fabrics, uses low temperature.	all except  Time Drying	  
 Synthetics				
 Extra Dry	3,5 kg	To dry thick or multi-layered fabrics, e. g. pullovers, bedding, table linen.	all except  Time Drying	  
 Cup- board Dry 2)	3,5 kg	To dry thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.	all except  Time Drying	  
 Iron Dry	3,5 kg	To dry thin fabrics which are also to be ironed, e.g. knitwear, shirts.	all except  Time Drying	  
 Easy Iron	1 kg (or 5 shirts)	To dry easy care fabrics such shirts and blouses; for minimum ironing effort. The results can be different for to the different types of fabric and its finish. Put fabrics in the tumble dryer straight. After the cycle, immediately remove dried fabrics and put on a cloths hanger.	all except  Time Drying	  

  Pro-grammes	Load 1)	Properties	Available functions	Fab-ric mark
 Active Wear	2 kg	To dry outdoor pieces of clothing, technical, sports, pile fabrics, waterproof and breathable jackets, shell jacket teamed with a removable fleece or inner insulation.	all except  Anticrease and  Time Drying	
 Sports	2 kg	To dry sportswear, thin and light fabrics, microfiber, polyester, which are not ironed.	all except   Time Drying	
 Silk/Lingerie	1 kg	To dry silk/lingerie with warm air and gentle movement.	all except  Anticrease and  Time Drying	
 Wool	1 kg	<p>To dry the cloths made of wool . The cloths become soft and cosy. We recommend to remove the cloths immediately after the programme end.</p> <p>The default wool drying cycle of this tumble drying machine has been tested and approved by The Woolmark Company. The cycle is suitable to dry wool garments which are labelled "hand wash" provided that the garments are washed in a Woolmark endorsed hand washing cycle and tumble dried according to the instructions issued by the manufacturer. (M1129).</p> <p>To increase or to decrease the level of the remaining moisture of the laundry you can use the function  Dry Plus .</p>	 Dry Plus ,  Buzzer ,  Time Drying 3) ,  Delay Start	



1) maximal weight of dry clothes

2) For test institutes only:

To make a performance test use the standard programmes which are specified in the EN 61121 document. If is necessary to correct the remaining moisture level of the laundry, adjust the programme with the  Dry Plus function .
You must clean the heat exchanger filters after each 3 cycles.





3) Only with the drying rack — see chapter ACCESSORIES

7. USING THE APPLIANCE

7.1 Preparing the laundry



Dry only the laundry applicable to dry in the tumble dryer. Make sure if the laundry is applicable to dry in the tumble dryer. Do the check of the fabric mark on the clothes.

Fabric mark	Property
	Applicable to dry in the tumble dryer
	Applicable to dry in the tumble dryer at standard temperature
	Applicable to dry in the tumble dryer at decreased temperature
	Not applicable to dry in the tumble dryer

Correctly prepare the laundry:

- close zips, button up duvet covers and attach loose ties or ribbons (e.g. ribbons of aprons) - laundry can tangle
- make sure the pockets are empty - remove metal items (paper clips, safety pins, etc.).
- turn items with 2 fabric layers inside out (e.g. cotton lined anoraks, the cotton fabric layer must be external).

Dry only:

- cotton and linen with Cottons programmes
- synthetic and mixtures with Synthetic programmes
- separately the strong coloured textiles and the light coloured textiles - colours can bleed
- cotton jersey and knitwear only with the applicable programmes - items can shrink



Do not put more laundry than the maximum load which is **8kg**.

7.2 Loading the laundry

1. Pull the appliance door
2. Load loosely the laundry.

3. Close the appliance door.










CAUTION!

Do not lock the laundry in between the appliance door and rubber seal.

7.3 Switching on the appliance

Push the *On/Off* ① button to activate or to deactivate the appliance. When the appliance is on, some indications come in to the view on the display.

The function push button symbols list	
①	Auto Off
	Dry Plus
	Anticrease
	Spun at RPM
	Buzzer
	Time Drying
	Delay Start
	Start/Pause


7.4 Auto Off function

To decrease the energy consumption, the Auto Off function deactivates automatically the appliance:

- if the Start/Pause button was not pushed in the time of 5 minutes.
- after 5 minutes from the programme end.

Push the *On/Off* ① button to activate the appliance.

7.5 Setting a programme

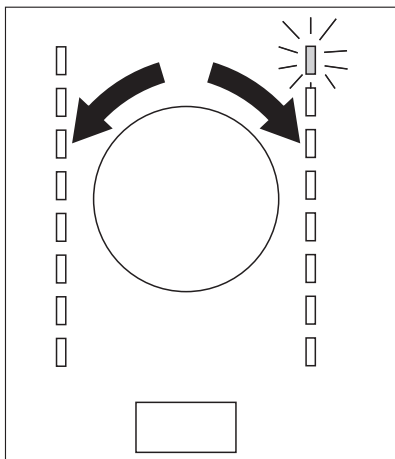

Use the programme dial to set the programme. The possible time to complete the programme come into view on the display.




The drying time you see is related to the load of 5 kg for cotton and jeans programmes. For the other programmes the drying time is related to the recommended loads. The drying time of the cotton and jeans programmes with the load more than 5 kg is longer.

7.6 Special functions

Together with the programme you can set 1 or more special functions.

To activate or deactivate the function push the applicable push button.

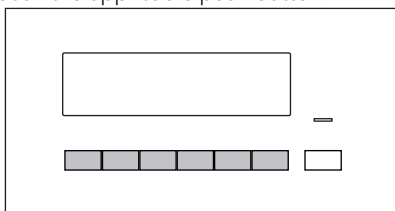

When the function is activated the applicable symbol comes into the view on the display.

7.7 The Dry Plus function

This function helps to get the laundry more dried. There are 3 possible selections:

minimum - the default selection which is related to the programme.

moderate — the selection to get the more dried laundry.

maximum — the selection to get the much more dried laundry.

7.8 The Anticrease function

Extends of 30, 60, 90 or 120 minutes the standard anticrease phase (30 minutes) at the end of the drying cycle. This function prevents the laundry from creases. The laundry can be removed during the anticrease phase.

7.9 The Spun at RPM function

This function helps to set the best condition to dry the laundry. If you know the initial spin speed when you washed you can use this function. Higher spin speed causes that the laundry contains less water.

7.10 The Buzzer function

When the buzzer function is activated you can hear the buzzer at the:

- cycle end
- anti-crease phase start and end
- cycle interruption

The buzzer function is by default always on. You can use this function to activate or deactivate the sound.

7.11 The Time Drying function

Operates only with the Time programme. Lets the user to set special time of drying programme from minimum 10 min. to maximum of 2 hours (in 10 min. steps).


7.12 The Delay Start function



Let to delay the start of a drying programme from minimum of 30 minutes to maximum of 20 hours.

1. Set the drying programme and functions.
2. Push the Delay start button again and again until the necessary time of the delay come into the view on the display (e.g. 12h if the programme has to start after 12 hours.)
3. To activate the Delay start function, push the Start/Pause button. The time to start decreases on the display.


7.13 Child lock function

The child lock can be set to prevent the children to play with the appliance. The child lock function locks all push buttons and the programme dial (this function does not lock Auto/Off button). To activate the child lock function push the Dry Plus and Anticrease buttons at the same time until the symbol  come into view on the display. To deactivate push again the above buttons until the symbol go out of view.

You can activate the child lock function:

- before you push the Start/Pause button - the appliance cannot start
- after you push the Start/Pause button - all the push buttons and the programme dial are deactivated

7.14 Starting a programme

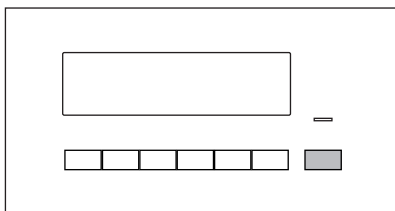


To activate the programme push the button as on the illustration. The LED above the button illuminates in red colour.

7.15 Change a programme

To change a programme, push the ① On/Off button to deactivate appliance. Push the ① On/Off to activate the appliance and then set the programme again.

7.16 At the end of programme

When the drying cycle is completed, the  symbol flashes on the display. If the Buzzer function is on, an acoustic signal sounds intermittently for one minute. To remove the laundry:

1. Push the Auto/Off button for 2 seconds to deactivate the appliance.
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.



After each drying cycle:

- clean the filter
- drain the water container
(See chapter *CARE AND CLEANING*.)

8. HINTS AND TIPS

8.1 Ecological hints

- Do not use fabric softener to wash and then dry. In the tumble dryer laundry becomes soft automatically.
- Use the condensate as distilled water, e.g. for steam ironing. If it is necessary

clean the condensate before (e.g. with a coffee filter) to remove possible small pieces of fluff.

- Always keep the airflow slots on the bottom of the appliance clear.
- Use the load volumes which are specified in the programmes chapter.


- Make sure that is good airflow in the appliance installation position.
- Clean the primary filter after each drying cycle.
- Clean the heat exchanger filters when the applicable indicator comes into the view on the control panel.
- Spin good the laundry before drying.




8.2 Water hardness and conductivity

Water hardness can be different for different locations. Water hardness has an effect on the water conductivity and the operation of the conductivity sensor in the appliance. If you know the value of the water conductivity you can adjust the sensor to dry with the better results.


To change the sensor conductivity:

 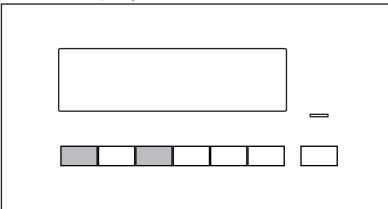1. Turn the programme dial to available programme.
2. Push at the same time 2 buttons (see the illustration). Hold down until one of the symbols come into view on the display:




-  low conductivity <300 µS/cm
-  moderate conductivity 300-600 µS/cm
-  high conductivity >600 µS/cm

3. Push the button again and again until you set necessary level (see the illustration).

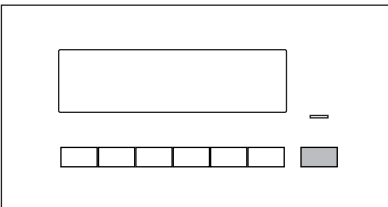


4. To memorise the setting push at the same time 2 buttons as are specified in the point 2.


 
 



8.3 Water container full — indication

By default the indication  is always on. It comes into the view at the end of the cycle or when the water container is full. When you use an external equipment to drain the container, the indication can be off.

To activate or deactivate the indication:

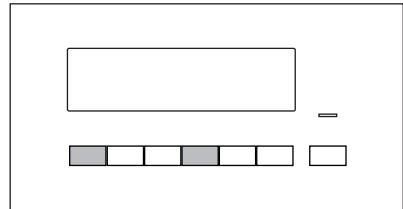
1. Turn the programme dial to available programme.
2. Push at the same time 2 buttons (see the illustration) and hold down until you see the correct setting:



- the indication  is off and the indicator  comes into the view — the indication  is permanently off
- the indication  is on and the indicator  comes into the view — the indication  is activated

9. CARE AND CLEANING


9.1 Cleaning the primary filter

At the end of each cycle the indicator  (clean the primary filter) is on to tell you that the primary filter must be cleaned.




The filter collects the fluff. The fluff occurs while the cloths are dried in the tumble dryer.


To clean the primary filter:

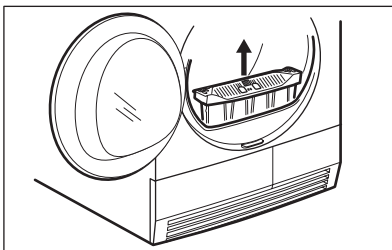

1. Open the door.
2. Pull the filter.

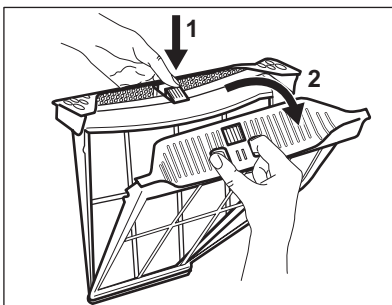

3. Open the filter.

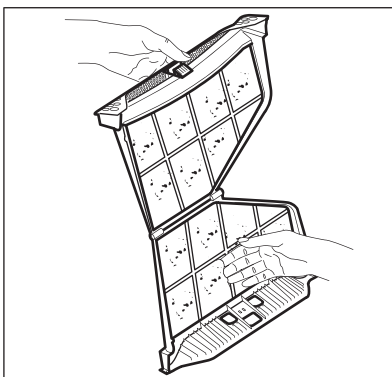

4. Use a moist hand to clean the filter.



5. If necessary clean the filter with warm water using a brush.
Close the filter.

6. Remove fluff from the filter socket. For this a vacuum cleaner can be used.
7. Put the filter inside the filter socket.




CAUTION!

Do not operate the tumble dryer without the primary filter or with damaged or blocked filter.



Clean the primary filter after each drying cycle. Clogged filter increases the cycle time and causes higher energy consumption.

If the condensed water container is full, the programme breaks off automatically and the indicator  *drain the condensed water container* is on. To continue the programme, drain the condensed water container and press the start button.




To drain the condensed water container automatically you can install draining accessory (see chapter: ACCESSORIES)


9.2 Draining the condensed water container

Drain the condensed water container after each drying cycle.

To drain the condensed water container:

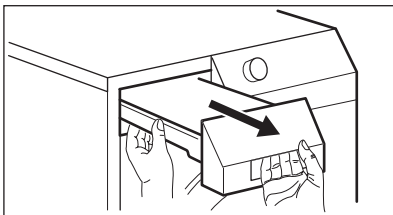

1. Pull the condensed water container and keep it in horizontal position.

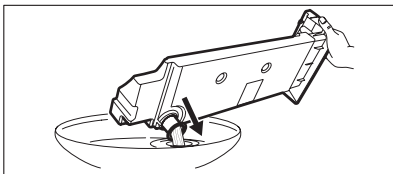

2. Move the plastic connection out and drain the condensed water container into a sink or equivalent receptacle.
3. Move plastic connection in and install water container.



WARNING!


Risk of poisoning. The condensed water is not applicable to drink or to prepare food.




The condensed water can be used as distilled water, e.g. for steam ironing. If necessary filter the condensed water (e.g. with a coffee filter) to remove possible residue and small pieces of fluff.

The frequency to clean the filters is related to the laundry type and its quantity. If you dry with the maximum load, clean the filters after each 3 cycles.


9.3 Cleaning the heat exchanger filters

If the indicator  *clean the heat exchanger filters* is on, the filters must be cleaned.


To clean the filters:

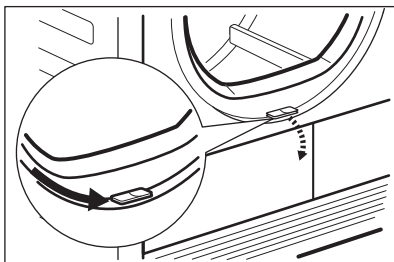


1. Open the loading door.
2. Move the release button on the bottom of the door opening and open the heat exchanger door.

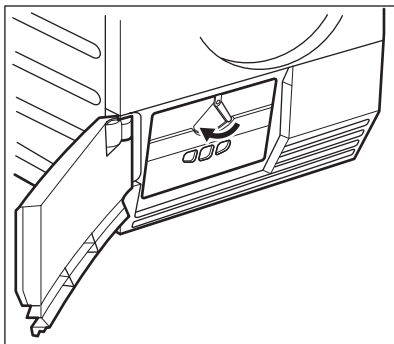


3. Turn the blockage to unlock the heat exchanger cover.

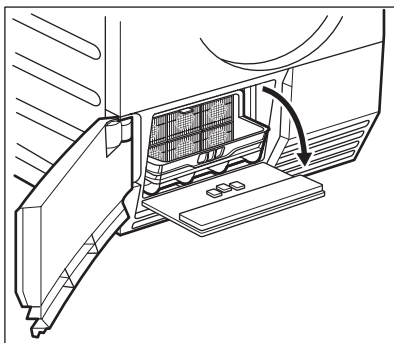


4. Lower the heat exchanger filters cover.

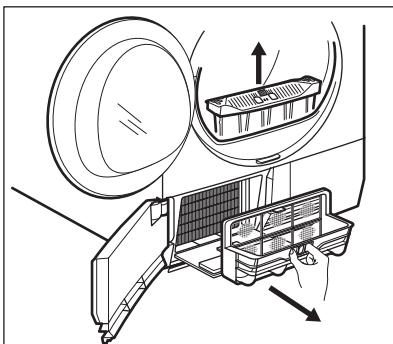


5. Lift the primary filter. Hold the heat exchanger filter and pull it out from the bottom compartment.

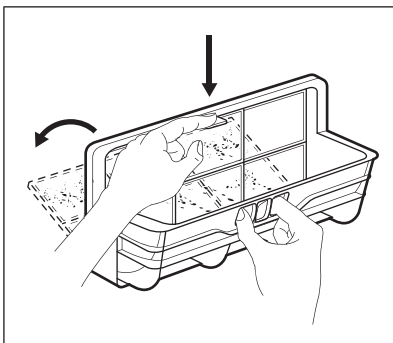


6. Push the hook to open the filter.

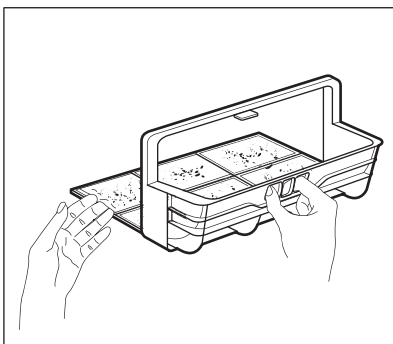

7. Use a moist hand to clean the filter. If necessary clean the filter with warm water using a brush. Close the filter.

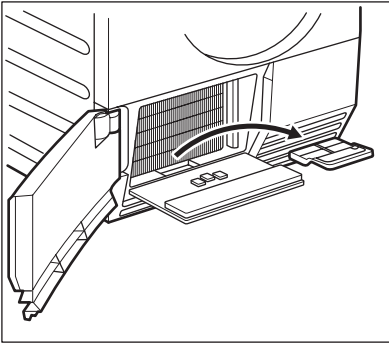

8. Clean the small filter from the base

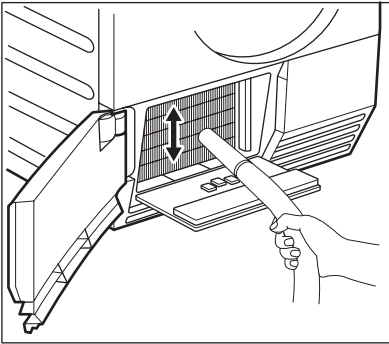

9. If necessary, one time for each 6 months, remove the fluff from the heat exchanger compartment. You can use a vacuum cleaner.

10. Put the small filter and heat exchanger filter back.
11. Close the heat exchanger cover.
12. Lock the blockage until it snaps.
13. Close the heat exchanger filters cover.
14. Close the heat exchanger door.
15. Put the primary filter.



CAUTION!

Do not operate the tumble dryer when the heat exchanger filters are blocked with fluff. This could cause the damage to the tumble dryer. This also increases energy consumption.
Do not use sharp objects to clean the heat exchanger compartment.
Do not operate the tumble dryer without the filters.



WARNING!

Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum ribs. Dry the cleaned surfaces with a soft cloth.



CAUTION!

Do not use abrasive materials or steel wool to clean the drum.

9.4 Cleaning the drum

9.5 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing. Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.



CAUTION!

Do not use furniture cleaning agents or cleaning agents which can cause corrosion to clean the appliance.

10. TROUBLESHOOTING

10.1 Troubleshooting

Problem ¹⁾	Possible cause	Remedy
The tumble dryer does not operate.	The tumble dryer is not connected to mains supply.	Connect in at mains socket. Check fuse in fuse box (domestic installation).
	The loading door is opened.	Close the loading door.
	The Auto/Off button was not pushed.	Push the Auto/Off button.
	The Start/Pause button was not pushed.	Push the Start/Pause button.
	The appliance is in the standby mode.	Push the Auto/Off button.
Unsatisfactory drying results.	Incorrect programme selection.	Do the selection of the applicable programme. ²⁾
	The filter is clogged.	Clean the filter. ³⁾
	The Dry Plus function was in minimum mode.	Change the Dry Plus function to the moderate or maximum mode.
	The heat exchanger filters are clogged.	Clean the heat exchanger filters. ³⁾
	Too high volume of the load.	Obey the maximum load volume.
	The airflow grill is clogged.	Clean the airflow grill in the bottom of the appliance.
	Dirt on the inner surface of the drum.	Clean the inner surface of the drum.
	Too high water hardness.	Set applicable water hardness ⁴⁾ .
The door does not close.	The filter not locked in the position.	Put the filter in the correct position.
	The laundry is locked between the door and the seal.	Put the load correctly in the drum.

Problem ¹⁾	Possible cause	Remedy
Err (Error) on the display.	You try to change the programme or the function after the start of the cycle.	Turn the tumble dryer off and on. Make the new selection.
	The function you try to activate is not applicable with the selected programme.	Turn the tumble dryer off and on. Make the new selection.
No drum light	Defective drum light.	Contact the service centre to replace the drum light.
Abnormally elapsing time on the display.)	The time to end is calculated on the basis of the volume and dampness of the laundry.	The automatic procedure — this is not the appliance malfunction.
Programme inactive.	The water container is full.	Drain the water container ³⁾ , push the Start/Pause button.
Drying cycle too short.	Too small laundry volume.	Do the selection of time programme. The time value must be related to the load. To dry one item or small quantities of the laundry we recommend to use short times.
	The laundry is too dry.	Do the selection of time programme or higher drying level (e.g. Extra Dry)
Drying cycle too long ⁵⁾	The filters are clogged.	Clean the filters.
	Too high volume of the load.	Obey the maximum load volume.
	The laundry not spun sufficiently.	Spin correctly the laundry.
	Very high room temperature - this is not the appliance malfunction.	If possible, lower the room temperature.

1) If there is an error message on the display (e.g. **E51**): Turn the tumble dryer off and on. Make a selection of the new programme. Push the Start/Pause button. Does not operate? - contact the service centre and give the error code.

2) follow the programme description — see *PROGRAMMES* chapter

3) see *CARE AND CLEANING* chapter

4) see section *WATER HARDNESS* in *HINTS AND TIPS* chapter

5) Note: After maximum 5 hours the drying cycle ends automatically (see *Drying cycle complete* section).

11. TECHNICAL INFORMATION



height x width x depth	850 x 600 x 600 mm (maximal 640 mm)
drum volume	118 l
maximum depth with the load door opened	1090 mm
maximum width with the load door opened	950 mm
adjustable height	850 mm (+ 15 mm - feet regulation)
the appliance weight	56 kg
maximum load volume	8 kg
voltage	230 V
frequency	50 Hz
necessary fuse	4 A
total power	900 W
energy efficiency class	A
energy consumption kWh/cycle ¹⁾	1,98 kWh
annual energy consumption ²⁾	235 kWh
left—on mode power absorption	0,5 W
off mode power absorption	0,5 W
type of use	Domestic
permitted ambient temperature	+ 5°C to + 35°C

¹⁾ 8 kg of cotton, centrifuged at 1000 rpm with reference to EN 61121

²⁾ Energy consumption per year in kWh, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used (REGULATION (EU) No 392/2012).

12. INSTALLATION


12.1 Unpacking




CAUTION!

Before use all parts of the transport packaging must be removed.
To remove the polystyrene blockages:

1. Open the load door.
2. Pull plastic hose with the polystyrene blockages out from the drum.

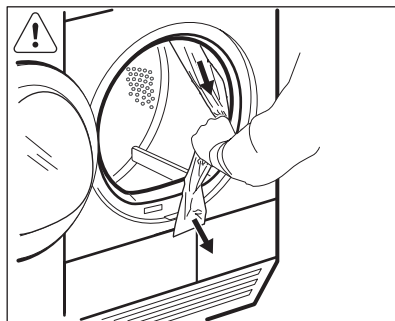


It is possible to adjust the height of the tumble dryer. To do that adjust the feet (see picture).

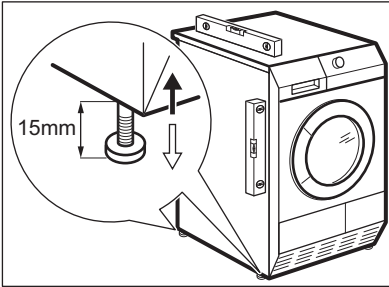

12.2 Installation under a counter

The appliance can be installed as free-standing or below the kitchen counter with correct space (see picture).

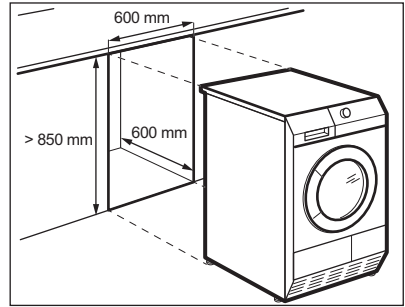


12.3 The load door reversal

The load door can be installed by the user in the opposite side. It can help to easily put and remove the laundry or if there is a limit to install the appliance. (see separate leaflet).

13. ENVIRONMENT CONCERNS

Recycle the materials with the symbol ♻️. Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic

appliances. Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.aeg.com/shop



136925350-A-042013