Operator's Manual



Chicago Pneumatic 1800 Overview Drive • Rock Hill SC • 29730 USA

CP749 Series Impact Wrench

1/2" Sq. Dr. Model "B, C & D"





A WARNING

To reduce risk of injury, everyone using, installing, repairing, maintaining, changing accessories on, or working near this tool must read and understand these instructions before performing any such task.

FOR DETAILED INFORMATION ABOUT CHICAGO PNEUMATIC AIR TOOLS AND EQUIPMENT CONTACT:

UNITED STATES

Chicago Pneumatic Tool Company 1800 Overview Drive Rock Hill, SC 29730 • USA Telephone: 1-803-817-7000 1-800-367-2442 (USA only) Fax: 1-800-228-9096

AUSTRALIA

Atlas Copco Tools Australia 3 Bessemer Street Blacktown • Australia Telephone: 02-621-9482 Fax: 02-671-5915

BELGIQUE

Chicago Pneumatic Rep. Office Avenue Sluysmans 10-4030 Liege • Belgium Tel/Fax: 04-343 8150

BRASIL

Chicago Pneumatic Brasil Av. Mascote 159 V. Sta. Catarina 04363-000 Sao Paulo/SP • Brasil Telefone: (011) 562-7314 Fax: (011) 563-9208

CANADA

Chicago Pneumatic Tool Co. Automotive Division 1800 Overview Drive Rock Hill, SC 29730 Telephone: 1-803-817-7000 Fax: 1-800-228-9096

CENTRAL AMERICA

Contact Chicago Pneumatic/USA for names of CP Authorized Distributors in this area

FRANCE

Espace Lumière Bâtiment S 57, Boulevard de la République 78403 Chatou Cédex. France Telephone: (0) 1 30 09 60 00 Fax: (0) 1 30 71 96 70

GERMANY

Desoutter GMBH Vehicle Service Edmund-Seng-Strasse 3-5 D-63477 Maintal • Germany Telephone: 49-0611-270120/22 Fax: 49-0611-270140

INDIA

Chicago Pneumatic Sales Chemtex House, First Floor Main Street Hiranadani Gardens Powai, Mumbai 400076, India Telephone: (22)25704907 (22)25708984

ITALY

Desoutter Italiana S.R.L. Viale Della Repubblica, 65 20035 Lisson (Milano)

Fax: (22)25705042

MEXICO

Chicago Pneumatic Tool Company Mexico San Francisco #223 Valle Dorado, Tlalnepantla C.P. 54020 • Mexico Telephone: 525-378-0754 Fax: 525-378-0753

SOUTH AFRICA

Chicago Pneumatic Tool Company, S.A. 20 Anvil Road PO Box 105 Isando 1600, Transvaal • South Africa Telephone: 011-9746761 Fax: 011-974-2324

SOUTH AMERICA

Contact Chicago Pneumatic/USA for names of CP Authorized Distributors in this area

SOUTHEAST ASIA

Chicago Pneumatic Tool Company Regional Office P.O. Box 1516 Unit 2103 - Citimark 28 Yuen Shun Circuit Shatin New Territories, Hong Kong Telephone: (8522) 3570963 Fax: 852-763-1875

SPAIN

Desoutter S.A. C. Serrano, 120 28006 Madrid • Spain Telephone: 91 590 31 52 Fax: 91 590 31 61

SWEDEN


Chicago Pneumatic Distributor Markets Sickla Industriväg 7 S-131 34 Nacka • Sweden Telephone: 46 8743 9329 Fax: 46-8743 9427

UNITED KINGDOM

Chicago Pneumatic Tool Company, Ltd. P.O. Box 241 Eaton Road Hemel Hempstead, Herts HP2 7DR England Domestic: 01442-847703/06 Export: 01442-232420/17 Fax: 01442-2847723

> Visit our website: http://www.cp.com



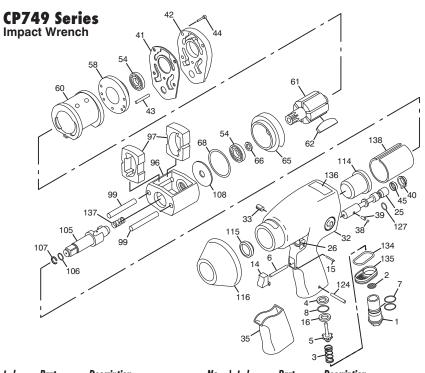


| Index No. | Part No. | Description | No. Req'd. | Index No. | Part No. | Description | No. Req′d. |
|--------------|-----------------------|--|---------------|--|----------------------|--|---------------|
| 1 | CA147022 | Bushing-Air Inlet (1/4 in. NPT) | 1 | 96 | CA155733 | Cage-Clutch | 1 |
| 2 | CA059037 | Screen-Air | 1 | 97 | CA155055 | Dog-Clutch | 2 |
| 3 | CA142464 | Spring-Throttle | 1 | 99 | CA155734 | Pin-Clutch (Model C) | 2 |
| 4 5 | CA149095 CA142460 | Spacer Valve-Throttle | 1 | 105 | CA145470 CA148609 | Pin-Clutch (Model B) | 2 |
| 6 | CA142460 CA144831 | Pin-Throttle Push | 1 | 105 | CA146609 | Shank-Anvil (CP749) (Incl: Index Nos. 106, 107) | |
| 7 | C105693 | O-Ring (-017) | 2 | l | CA148629 | Shank-Anvil (CP749-2) | 1 |
| 8 | CA149096 | O-Ring (-017) | 1 | l | <u>UA140029</u> | (Incl: Index Nos. 106, 107) | |
| 14 | CA147017 | Trigger-Throttle | 1 | 106 | P083071 | O-Ring (-011) | 1 |
| 15 | CA144836 | Pin-Trigger | 1 | 107 | CA088097 | Retainer-Socket | i |
| 16 | C139037 | Seat-Throttle | 1 | 108 | CA145569 | Washer-Clutch | 1 |
| 25 | CA147016 | Valve-Reverse | 1 | 114 | CA148611 | Bushing-Clutch | 1 |
| 26 | CA147015 | Bushing-Reverse Valve | 1 | 115 | CA148608 | Seal-Oil | 1 |
| 32 | CA148615 | Housing-Motor (Incl: Index No. 26) | 1 | 116 | CA148626 | Shield-Nose | 1 |
| 33 | S089953 | Plug-Pipe (1/16 in. NPT) | 1 | 124 | R086991 | Pin-Roll | 1 |
| 35 | 8940158432 | Handle-Cover | 1 | 127 | CA147018 | O-Ring | 1 |
| 38 | S008613 | Ball | 1 | 134 | CA148528 | Gasket | 1 |
| 39 | CA147021 | Spring-Detent | 1 | 135 | CA147023 | Deflector-Exhaust | 1 |
| 40 | CA155263 | Switch | 1 | 136 | CA155779 | Decal-Safety Warning | 1 |
| 41 | CA148613 | Gasket-Housing Cover (Model C) | 1 | 137 | CA154959 | Spring | 1 |
| | 8940158633 | Gasket-Housing Cover (Model D) | 1 | 138 | CA154960 | Sleeve - Steel | 1 |
| 42 | CA148602 | Cover-Motor Housing (Model C) | 1 | Tune-Up Kit | | | |
| 43 | 8940158632 C085245 | Cover-Motor Housing (Model D) Pin-Liner Dowel | - 1 | 8940158635(Incl: Index Nos. 7, 8, 41, 62, 66, 68, 106, 107, 115, 127 & | | | |
| 43 | CA155947 | Screw w/Lockwasher | 4 | 134) | | | |
| 45 | 8940158535 | Spacer (Model D) | 1 | Repair Kit | | | |
| 54 | C066342 | Bearing-Ball | 2 | | | | |
| 58 | KF136268 | Plate-Rear End | 1 | 8940158636(Incl: Index Nos. 7, 8, 41, 62, 66, 68, 97, 99, 105, 106, 107, 108, 115, 127, 134 & 137) | | | |
| 60 | CA148607 | Liner | i | | | | |
| 61 | CA148606 | Botor | 1 | Repair Kit | | | |
| 62 | CA148605 | Set-Rotor Blade (6) | 1 | 8940158637(Incl: Index Nos. 7, 8, 41, 62, 66, 68, 97, 99, 105, 106, 107, | | | |
| 65 | KF134665 | Plate-Front End | 1 | 108, 115, 127, 134 & 137) | | | |
| 66 | CA087513 | Seal-Oil | 1 | Conversion Kit(Model C to Model D) 8940158674(Incl: Index Nos. 41, 42 & 45) | | | |
| 68 | C087266 | O-Ring | 1 | 8940158 | 674(Incl: Index | Nos. 41, 42 & 45) | |



INSTRUCTION MANUAL

Air Supply Requirements

- Supply tool with 90 psig (6.2 bar) of clean, dry air. Higher pressure drastically reduces tool life.
- Connect tool to air line using pipe, hose, and fitting sizes shown in the diagram.

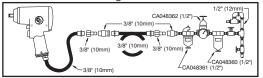

Lubrication

- Use an air line lubricator with SAE #10 oil, adjusted to two (2) drops per minute. If an air line lubricator cannot be used, add air motor oil to the inlet once a day.
- Check clutch oil once each month. Use 3/4 oz. (22ml) of SAE#30 oil or equivalent.

Operation

This impact wrench is equipped with a regulator to enable adjustment of output power. Turn the regulator knob counter-clockwise for maximum power, clockwise to reduce power.

Maintenance

- Disassemble and inspect air motor and impacting clutch every three (3) months if the tool is used every day. Replace damaged or worn parts.
- 2. High wear parts are underlined in the parts list.
- To keep downtime to a minimum, the following service kits are recommended:

Tune-Up Kit 8940158635

(Incl: 7, 8, 41, 62, 66, 68, 106, 107, 115, 127, 134)

Repair Kit 8940158636

(Incl: 7, 8, 41, 62, 66, 68, 97, 99, 105, 106, 107, 108, 115, 127, 134 & 137)

Repair Kit 8940158637

(Incl: 7, 8, 41, 62, 66, 68, 97, 99, 105, 106, 107, 108, 115, 127, 134 & 137)

Conversion Kit 8940158674 (Model C to Model D) (Incl: 41, 42 & 45)

EC DECLARATION OF CONFORMITY

We, Chicago Pneumatic Tool Company, 1800 Overview Drive, Rock Hill, SC 29730 USA, declare under our sole responsibility that the product to which this declaration relates, is in conformity with the requirements of the Council Directive of June 1998 on the approximation of the laws of the Member States relating to machinery (98/37/EC).

Machine Name CP749 Series Impact Wrench
Machine Type Assembly Power Tool for Threaded
Fasteners - No other use is permitted.

Serial No. Tools with No. 97200K or higher Technical Data

1/2" Sq. Dr.

Air pressure 90 psi (6.2 bar)

Harmonized Standards Applied EN792-6 National Standards Applied ISO 8662-7, ISO 15744-2002

Name And Position Of Issuer Stéphane Rakotoarivelo, General Manager, CP TechnoCenter, Saint Herblain, France

Signature Of Issuer

Place And Date Of Issue 44818 Saint Herblain, FRANCE, February 8, 2007

Noise & Vibration Declaration*

Sound pressure level 96 dB(A), uncertainty 3 dB(A), in accordance with ISO 15744-2002. For sound power, add 11 dB(A).

Vibration value 4.9 m/s², re. ISO 8662-7.

*These declared values were obtained by laboratory type testing in compliance with the stated standards and are not adequate for use in risk assessments. Values measured in individual work places may be higher than the declared values. The actual exposure values and risk of harm experienced by an individual user are unique and depend upon the way the user works, the workpiece and the workstation design, as well as upon the exposure time and the physical condition of the user. We, Chicago Pneumatic, cannot be held liable for the consequences of using the declared values, instead of values reflecting the actual exposure, in an individual risk assessment in a work place situation over which we have no control

Copyright 2007, Chicago Pneumatic Tool Company

All rights reserved. Any unauthorized use or copying of the contents or part thereof is prohibited. This applies in particular to trademarks, model denominations, part numbers and drawings. Use only authorized parts. Any damage or malfunction caused by the use of unauthorized parts is not covered by Warranty or Product Liability.

A WARNING

To reduce risk of injury, everyone using, installing, repairing, maintaining, changing accessories on, or working near this tool must read and understand these instructions before performing any such task.

The goal of Chicago Pneumatic is to produce tools that help you work safely and efficiently. The most important safety device for this or any tool is YOU. Your care and good judgment are the best protection against injury. All possible hazards cannot be covered here, but we have tried to highlight some of the important ones.

For Additional Safety Information Consult:

- A Your employer union and/or trade association.
- US Department of Labor (OSHA); www.osha.gov; Council of the European Communities europe.osha.eu.int.
- ▲ "Safety Code For Portable Air Tools" (B186.1) available from: www.ansi.com
- "Safety Requirement For Hand-Held Non-Electric Power Tools" available from: European Committee for Standardization, www.cenorm.be

Air Supply And Connection Hazards

- A Always shut off air supply drain hose of air n
- A Always shut off air supply, drain hose of air pressure and disconnect tool from air supply when not in use, before changing accessories or when making repairs.
- A Never direct air at yourself or anyone else.
- Mhipping hoses can cause serious injury. Always check for damaged or loose hoses and fittings.
- ▲ Do not use quick disconnect couplings at tool. See instructions for correct set-up.
- Whenever universal twist couplings are used, lock pins must be installed.
- A Do not exceed maximum air pressure of 90 psi (6.2 bar) or as stated on tool nameplate.

Entanglement Hazards

- ▲ Keep away from rotating drive.
- A Do not wear jewelry or loose clothing.
- Choking can occur if neckwear is not kept away from tool and accessories.
- Scalping can occur if hair is not kept away from tool and accessories.
- A Avoid direct contact with accessories during and after use. Gloves will reduce the risk of cuts or burns.
- ▲ Use only proper accessory retainers (see parts list). Use deep sockets wherever possible.

Projectile Hazards

- A Always wear impact-resistant eye and face protection when involved with or near the operation, repair or maintenance of the tool or changing accessories on the tool.
- A Be sure all others in the area are wearing impact-resistant eye and face protection.
- eye and face protection.

 A Even small projectiles can injure eyes and cause blindness.
- A Use only impact wrench sockets and accessories in good condition. Sockets in poor condition or hand sockets and accessories used with impact wrenches can shatter.
- A Always use the simplest hook-up possible. Long, springy extension bars and adapters absorb impact power and could break. Use deep sockets wherever possible.

- A Never operate the tool off of the work. It may run too fast and cause the accessory to be thrown off the tool.
- Serious injury can result from over-torqued or undertorqued fasteners, which can break, or loosen and separate. Released assemblies can become projectiles. Assemblies requiring a specific torque must be checked using a torque meter.

Note: So-called "click" torque wrenches do not check for potentially dangerous over-torque conditions.

Workplace Hazards

- Slip/Trip/Fall is a major cause of serious injury or death.

 Beware of excess hose left on the walking or work surface.
- High sound levels can cause permanent hearing loss. Use hearing protection as recommended by your employer or OSHA regulation (see 29 CFR part 1910).
- A Maintain a balanced body position and secure footing.
- A Be in control of the throttle at all times. Do not get caught between the tool and the work.
- ♠ Repetitive work motions, awkward positions and exposure to vibration can be harmful to hands and arms. If numbness, tingling, pain or whitening of the skin occurs, stop using the tool and consult a physician.
- A void inhaling dust or handling debris from the work process which can be harmful to your health. Use dust extraction and wear respiratory protective equipment when working with materials which produce airborne particles.
- ♠ Proceed with care in unfamiliar surroundings. Be aware of potential hazards created by your work activity. This tool is not insulated for coming into contact with electric power sources.
- ♠ Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Some examples of these chemicals are:
 - Lead from lead based paints
 - Crystalline silica bricks and cement and other masonry products
 - And Arsenic and chromium from chemically-treated rubber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as dust masks that are specially designed to filter out microscopic particles.

Additional Safety Topics

- ▲ This tool and its accessories must not be modified.
- This tool is not recommended for use in explosive atmospheres.
- ♠ Operators and maintenance personnel must be physically able to handle the bulk, weight and power of the tool.
- A For professional use only.

SAFETY INSTRUCTIONS