


Dukane Camera 445 Visual Presenter

Quick Start Guide

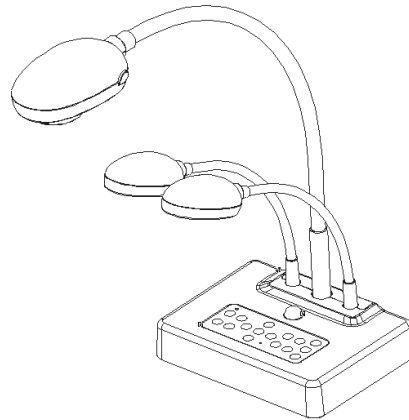

To download the latest version of Quick Start Guide, multilingual user manual, software, or driver, etc., please visit
<http://www.dukane.com/audiovisual/produ>

Dukane Audio Visual, 2900 Dukane Drive
St. Charles, IL 60174
866.280.4298 Fax: 630.584.5156

090107-Rev 1.1

1. Package Content

DC445



Base Installation Guide



 
Quick Start Guide




Remote control




User Manual



Remote Control Holder

 

Extender Adapter

 

VGA Cable




USB Cable



C-Video Cable



Power Cord

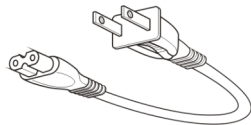

Appearance may vary with country/region.

 
Audio cable





Microscope Adapter



Accessory Pouch



2. System Diagram

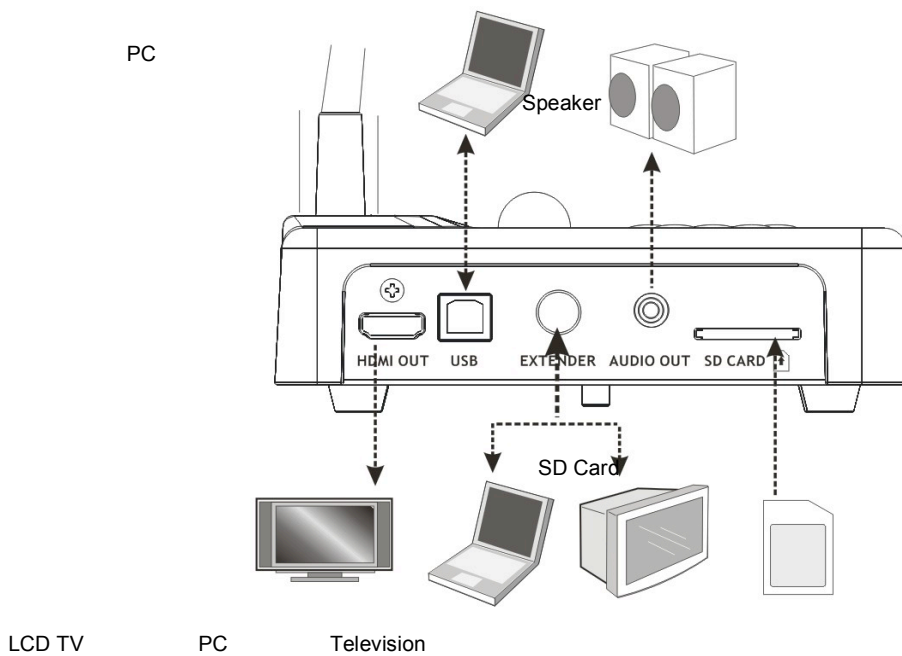
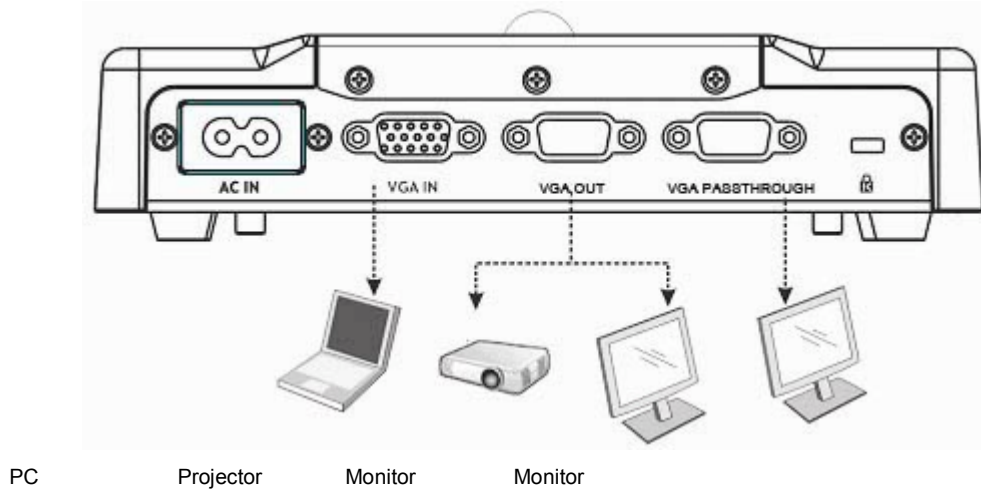


3. Mounting the Camera 445 on a Desktop Stand.

1. Please set up the DIP Switch settings first. Refer to [chapter 5 "DIP Switch Settings" in the DC265 user manual](#).
2. Please refer to the [Base Installation Guide](#) for installation instructions for all parts in the User Manual.

4. Connecting Devices

 4.1 Step 1: Plug in the Power Outlet

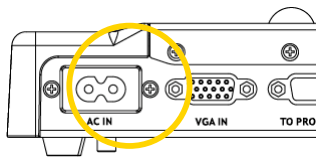

AC Outlet





<Note> Appearance of power cord may vary with countries/regions.

4.2 Step 2: Connecting the components

4.2.1 Connecting to a Projector



- Connect the VGA OUT on the 445 to the VGA IN on the projector using the VGA cable.

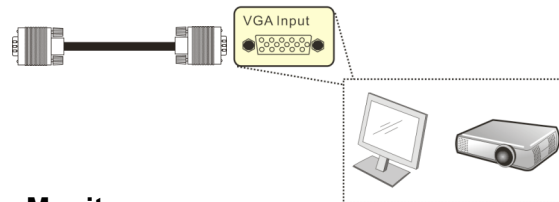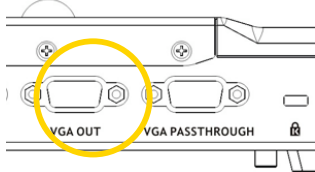

4.2.2 Connecting to a Monitor


- Connect the VGA PASSTHROUGH on the 445 to the VGA IN on the monitor using the VGA cable.

<Note> The VGA PASSTHROUGH connector only outputs VGA IN signals.

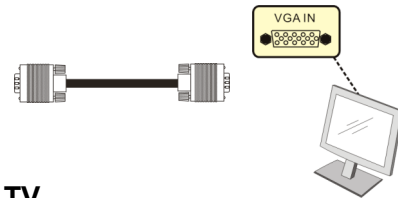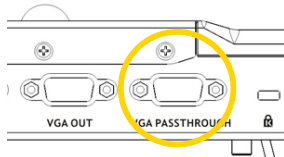


4.2.3 Connecting to a TV

1. Using EXTENDER and C-Video cable to connect EXTENDER of 445 to a C-Video of TV.

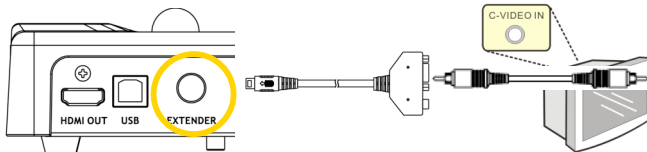


2. Adjust DIP Switch Setting

- NTSC : America, Taiwan, Panama, Philippine, Canada, Chile, Japan, and Mexico.

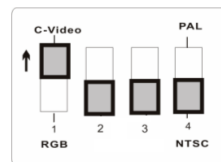

- PAL : Country/region not listed above:

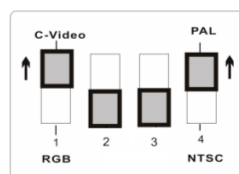


<Note> OSD is not available in C-Video. Functions such as [Menu] / [Rotate] / [PAN] / [Source] / [Record] / [Capture] / [Delete] / [PBP] / [Slide Show] are not functional on control panel and the remote control. <Note> VGA output is not supported once C-Video output is enabled.

3. DIP Switch setting will not be available until restarting the Camera 445.


4.2.4 Connecting to a LCD TV/ PDP

- Using the HDMI cable to connect a LCD TV/ PDP

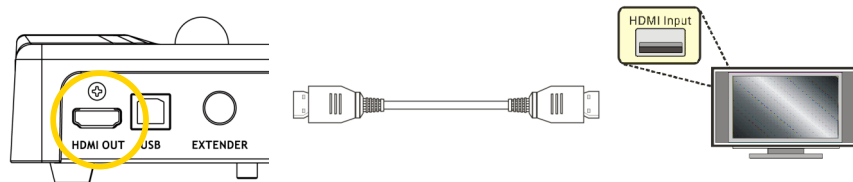


4.2.5 Connecting to a Computer

- Connecting to a computer through VGA IN

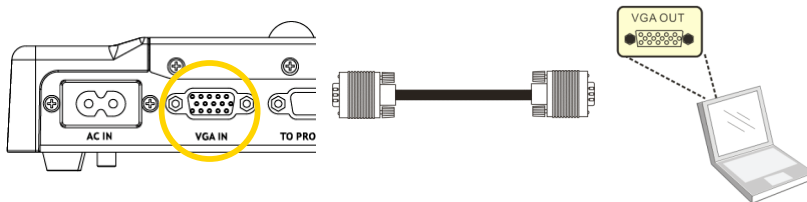


- Connecting to a computer through USB


Connect to USB port then install the supplied queue™ program. Please refer to the [Camera 445 user manual](#)

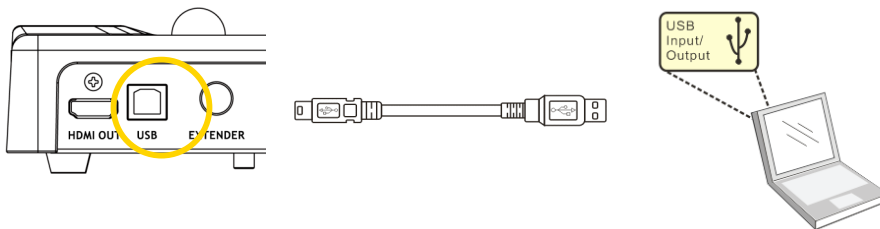

- Using the EXTENDER and RS-232 cable to connect EXTENDER of 445 to a RS-232 of computer.

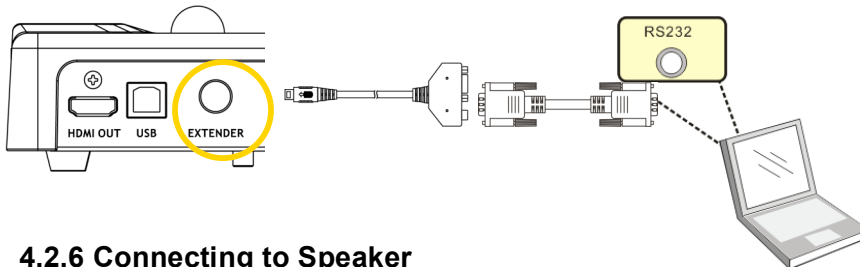


4.2.6 Connecting to Speaker

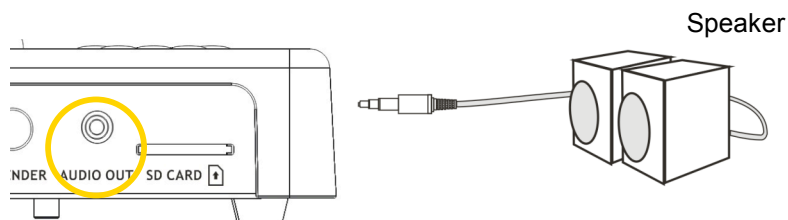

5. Start Using the Camera 445

5.1 Turn on the DC265

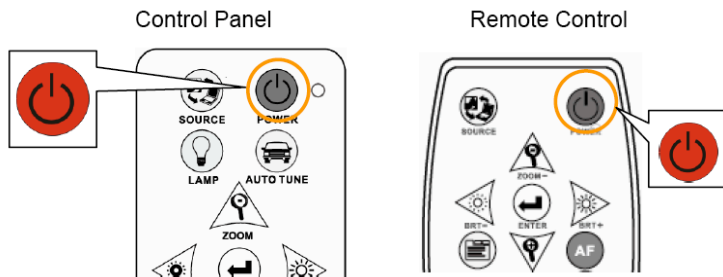

- When using the **remote control**, aim at the receptor on the Camera 445, and press the power button.
- Once Camera 445 is turned on, the LED on the **control panel** will flash a few times and stay lit. Please contact your distributor if the LED is not on.

<Note> If the password page is shown, please key in the password. If you forget it, please contact your distributor or the service center.

*For detailed menu function introduction and operation instructions, please refer to the [user manual](#).

Dukane Corporation, Audio Visual Division
2900 Dukane Drive, St. Charles, IL 60174
1.866.280.4298
Fax: 630.584-5156
www.dukcorp.com/av
www.conveyclassrooms.com
For 24-Hour Support call: 1.800.676.2487