

LX400

USER MANUAL - OPERATING GUIDE (Concise)

020-000166-02

CHRISTIE®

NOTICE for European Union members

《ENGLISH》

This is a Class A product in **European Union**.

WARNING :

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

AVIS pour les membres du Union Européenne

《FRANÇAIS》

Le présent appareil est un produit de classe A, dans **Union Européenne**.

AVERTISSEMENT :

Le présent appareil est un produit de classe A. En environnement domestique, ce produit est susceptible de provoquer des interférences radio-électriques, auquel cas l'utilisateur devra prendre les mesures adéquates.

BEACHTUNG für Europäischen Union-Mitglieder

《DEUTSCH》

Dies ist ein Produkt der Klasse A, in **Europäischen Union**.

WARNUNG :

Dies ist ein Produkt der Klasse A. Bei der Verwendung im häuslichen Bereich können Störungen des Radio- oder Fernsehempfangs auftreten. Beim Auftreten derartiger Störungen hat der Benutzer gegebenenfalls Abhilfemaßnahmen zu treffen.

AVISO para los miembros de Unión Europea

《ESPAÑOL》

Este es un producto de Clase A, en **Unión Europea**

ADVERTENCIA :

Este es un producto de Clase A. En un entorno doméstico este producto puede causar radio interferencias, en cuyo caso el usuario deberá tomar las medidas pertinentes.

DICHIARAZIONE per membri di Unione europea

《ITALIANO》

Questo è un prodotto di Classe A, negli **Unione europea**.

AVVERTENZA :

Questo è un prodotto di Classe A. In un ambiente domestico, questo prodotto potrebbe causare interferenze radio, nel cui caso l'utente è obbligato a prendere gli adeguati provvedimenti.

BEMERK for EU-medlemmer

《NORSK》

Dette er et klasse A produkt, i **EU**.

ADVARSEL :

Dette er et klasse A produkt. I et hjemmemiljø kan dette produktet forårsake radiointerferens, og i dette tilfellet anbefales det at brukeren tar tilstrekkelige forholdsregler.

OPMERKING voor de Europese Unie leden

《NERDERLANDS》

Dit is een klasse A product, in **Europese Unie**.

WAARSCHUWING :

Dit is een klasse A product. In een huiselijke omgeving kan dit product radio-interferentie veroorzaken. De gebruiker is dan verplicht om maatregelen te nemen om de interferentie te ongedaan te maken.

NOTIFICAÇÃO para sócios de União europeus 《PORTUGUÊS》

Trata-se de um produto Classe A, em União européia.

AVISO :

Trata-se de um produto Classe A. Num ambiente doméstico, este produto pode provocar interferências rádio, podendo ser necessário tomar medidas adequadas.

通知欧洲联盟成员

《中文》

本产品是 A 级产品在欧洲联盟 (EU) .

警告 :

本产品是 A 级产品。在家庭环境中, 本产品可能会导致无线电干扰, 这种情况下, 用户需采取适当的措施。

유럽 연합 (EU) 가입 회원에 대한 통지

《한국어》

이것은 유럽 연합 (EU) 에서 클래스 A 제품입니다 .

경고 :

본 제품은 클래스 A 제품입니다 . 본 제품은 거주 환경 내에서 사용자의 적절한 조치를 필요로 하는 무선 간섭을 유발할 수 있습니다 .

ANMÄRKNING för EU-medlemmar

《SVENSKA》

Detta är en klass A-produkter, i EU.

VARNING :

Detta är en klass A-produkt. I hemmiljö kan denna produkt orsaka radiostörningar mot vilka användaren måste vidta åtgärder.

ПРЕДОСТЕРЕЖЕНИЕ для членов Европейском Союзе (ЕС) 《РУССКИЙ》

Это изделие Класса А, в Европейском Союзе (ЕС).

ПРЕДУПРЕЖДЕНИЕ :

Это изделие Класса А. В бытовых условиях это изделие может стать причиной возникновения радиопомех, в случае чего пользователь должен предпринять соответствующие меры.

HUOMAA ajaksi Euroopan Unionin jäseniä

《SUOMI》

Tämä on luokan A tuote on Euroopan unionin.

VAROITUS :

Tämä laite on luokan A tuote. Kotikäytössä tämä tuote saattaa aiheuttaa radiohäiriötä. Käyttäjän on tällöin ehkä ryhdyttävä korjaaviin toimenpiteisiin.

UWAGA dla członków Unii Europejskie

《POLSKI》

Jest to produkt klasy A, w Unii Europejskiej.

ZAGROŻENIE :


Jest to produkt klasy A. W środowisku domowym może on wywoływać zakłócenia radiowe, co oznacza, że użytkownik będzie musiał podjąć odpowiednie środki zaradcze.


Projector

LX400



User Manual - Operating Guide (concise)

Thank you for purchasing this projector.

 **WARNING**

► Before using this product, be sure to read all manuals for this product. See “Using the CD manual” ( 12) to read the manuals in the CD. After reading them, store them in a safe place for future reference.

Contents





Contents of package.....	1	Lamp.....	8
Arrangement.....	2	Air filter	10
Connecting your devices	3	Internal clock battery	11
Connecting power supply	4	Using the CD manual	12
Turning on the power.....	4	Regulatory notices.....	13
Adjusting the projector’s elevator	5	Specifications	14
Remote control	5	Warranty and after-service	15
Displaying the picture	7		
Turning off the power.....	7		

Contents of package

Your projector should come with the items shown below. Check that all the items are included. Contact to your dealer immediately if any items are missing.

- (1) Remote control with two AA batteries
- (2) Power cord
- (3) RGB cable
- (4) Lens cover and Rivet and Strap
- (5) User’s manuals (Book x1, CD x1)
- (6) Security label

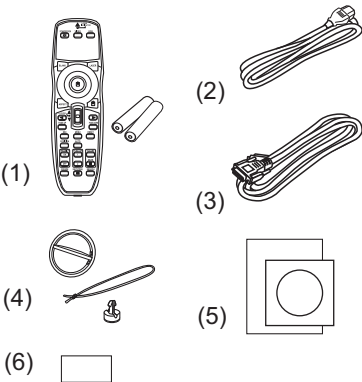

 **CAUTION**

► Keep the original packing materials for future reshipment. Be sure to use the original packing materials when moving the projector. Use special caution for the lens.

Arrangement

Please arrange the projector and the screen.

Install the projector in a stable, cool and airy place, keeping a space of 30 cm or more between the sides of the projector and other objects such as walls. Avoid the projector from a hot, humid, dusty, or smoky place.

Refer to the illustrations and tables below to determine screen size and projection distance.


The values shown in the table are calculated for a full size screen: 1024×768

(a) Screen size (diagonal)



(b) Projection distance (±10%)

(c) Screen height (±10%), when the vertical lens shift is set full upward.

On a horizontal surface

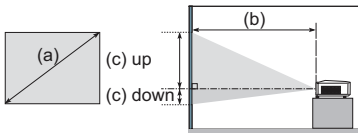

Suspended from the ceiling

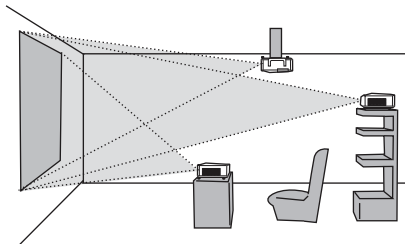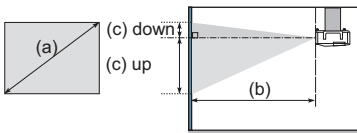

• Consult with your dealer before a special installation such as suspending from a ceiling.

(a) Screen size [inch (m)]	4 : 3 screen				16 : 9 screen			
	(b) Projection distance [m (inch)]		(c) Screen height [cm (inch)]		(b) Projection distance [m (inch)]		(c) Screen height [cm (inch)]	
	min.	max.	down	up	min.	max.	down	up
30 (0.8)	0.9 (35)	1.1 (42)	5 (2)	41 (16)	1.0 (38)	1.2 (46)	-1 (0)	39 (15)
40 (1.0)	1.2 (47)	1.4 (57)	6 (2)	55 (22)	1.3 (51)	1.6 (62)	-2 (-1)	51 (20)
60 (1.5)	1.8 (71)	2.2 (86)	9 (4)	82 (32)	2.0 (78)	2.4 (94)	-2 (-1)	77 (30)
70 (1.8)	2.1 (83)	2.6 (100)	11 (4)	96 (38)	2.3 (91)	2.8 (110)	-3 (-1)	90 (35)
80 (2.0)	2.4 (96)	2.9 (115)	12 (5)	110 (43)	2.6 (104)	3.2 (126)	-3 (-1)	103 (41)
90 (2.3)	2.7 (108)	3.3 (130)	14 (5)	123 (49)	3.0 (117)	3.6 (141)	-4 (-1)	116 (46)
100 (2.5)	3.0 (120)	3.7 (144)	15 (6)	137 (54)	3.3 (131)	4.0 (157)	-4 (-2)	129 (51)
120 (3.0)	3.7 (144)	4.4 (174)	18 (7)	165 (65)	4.0 (157)	4.8 (189)	-5 (-2)	154 (61)
150 (3.8)	4.6 (181)	5.5 (217)	23 (9)	206 (81)	5.0 (197)	6.0 (237)	-6 (-2)	193 (76)
200 (5.1)	6.1 (241)	7.4 (291)	30 (12)	274 (108)	6.7 (263)	8.0 (317)	-8 (-3)	257 (101)
250 (6.4)	7.7 (302)	9.2 (364)	38 (15)	343 (135)	8.4 (329)	10.1 (396)	-10 (-4)	322 (127)
300 (7.6)	9.2 (363)	11.1 (437)	46 (18)	411 (162)	10.0 (395)	12.1 (476)	-12 (-5)	386 (152)
350 (8.9)	10.8 (424)	13.0 (510)	53 (21)	480 (189)	11.7 (462)	14.1 (556)	-15 (-6)	450 (177)

⚠WARNING


- ▶ Install the projector in a stable horizontal position.
- ▶ Place the projector in a cool place, and ensure that there is sufficient ventilation.
- ▶ Do not place the projector any place where it may get wet.

⚠CAUTION

- ▶ Avoid placing the projector in smoky, humid or dusty place.
- ▶ Position the projector to prevent light from directly hitting the projector's remote sensor.

Connecting your devices

Before connecting devices, please read the manuals for all the devices that you want to connect with this projector, to make sure that the connection is proper and prepare the connectors needed. And connect them properly according to the manuals.

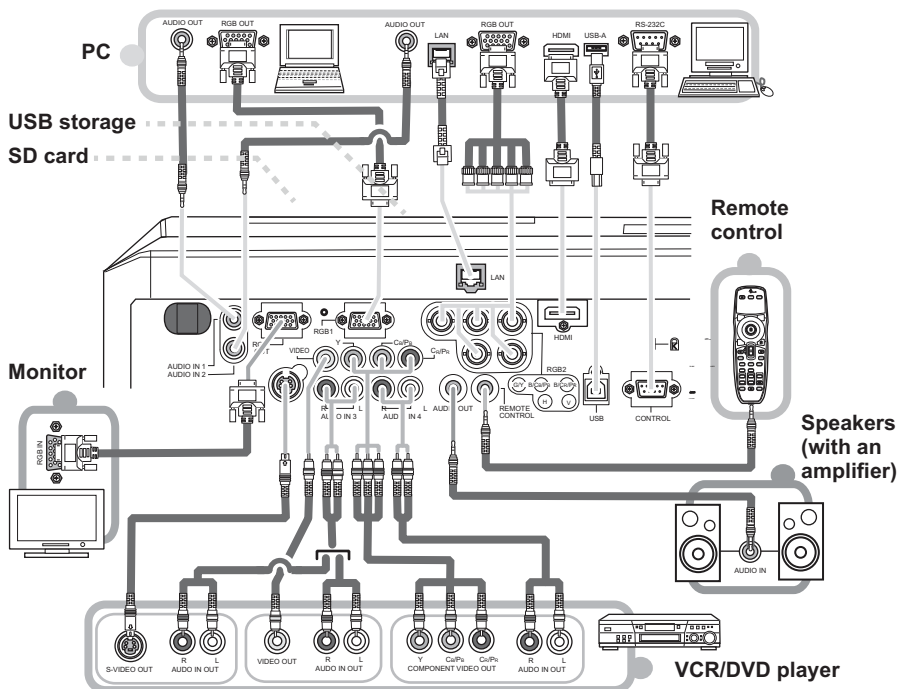

⚠ WARNING


- ▶ Do not disassemble or modify the projector and accessories.
- ▶ Be careful not to damage the cables, and do not use damaged cables.

⚠ CAUTION

- ▶ Turn off all devices and unplug their power cords prior to connecting them to projector.
- ▶ Use appropriate accessory or designated cables. Ask your dealer about non-accessory cables which may be required a specific length or a ferrite core by the regulations. For cables with a core only at one end, connect the end with the core to the projector.
- ▶ Make sure that devices are connected to the correct ports.
- ▶ For safety, do not connect the LAN port to any network that might have excessive voltage.

Connecting power supply

1. Connect the connector of the power cord to the AC inlet of the projector.
2. Firmly plug the power cord's plug into the outlet.

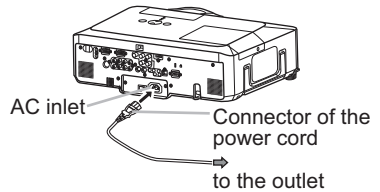

⚠ WARNING

► Please use extra caution when connecting the power cord, as incorrect or faulty connections may result in fire and/or electrical shock.


- Only use the power cord that came with the projector. If it is damaged, contact your dealer to newly get correct one.
 - Only plug the power cord into an outlet whose voltage is matched to the power cord. The power outlet should be close to the projector and easily accessible.
- Remove the power cord for complete separation.
- Never modify the power cord.

Turning on the power

1. Make sure that the power cord is firmly and correctly connected to the projector and the outlet.
2. Remove the lens cover, and set the power switch to the ON position (marked "I").
The power indicator will light up in steady orange. Then wait several seconds because the buttons may not function for these several seconds.

3. Press the STANDBY/ON button on the projector or the remote control.

The projection lamp will light up and the POWER indicator will begin blinking in green. When the power is completely on, the indicator will stop blinking and light in steady green.

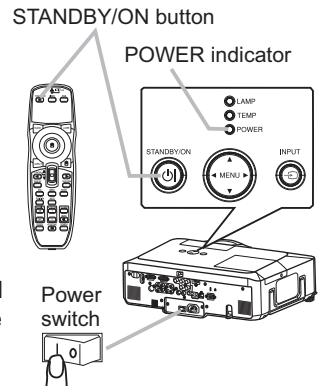

⚠ WARNING

► A strong light is emitted when the projector's power is on. Do not look into the lens of the projector or look inside of the projector through any of the projector's openings.

NOTE


 
 
• When the AUTO ON in the OPTION menu is set to the TURN ON, and the power was turned off by the power switch last time, turning the power switch on makes the projection lamp light on without pushing the STANDBY/ON button. For more information, please see the "Operating Guide" in the CD.

Adjusting the projector's elevator

Use the elevator feet to place the projector horizontally. Using the feet can also tilt the projector in order to project at a suitable angle to the screen, elevating the front side of the projector within 8 degrees.

This projector has 2 elevator feet and 2 elevator knobs. An elevator foot is adjustable while pulling up the elevator knob on the same side as it.

1. To loose an elevator foot, pull up the elevator knob on the same side as it.
2. Position the front side of the projector to the desired height.
3. Release the elevator knobs in order to lock the elevator feet.
4. To finely adjust, twist the foot.

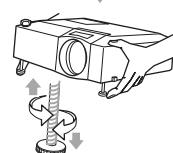


⚠ WARNING

- ▶ Do not handle the elevator knobs without holding the projector, since the projector may drop down.
- ▶ Do not tilt the projector other than elevating its front within 8 degrees using the adjuster feet. A tilt of the projector exceeding the restriction could cause malfunction or shortening the lifetime of consumables, or the projector itself.

Remote control Laser pointer

The laser beam is emitted and the LASER INDICATOR lights while the LASER button is pressed.

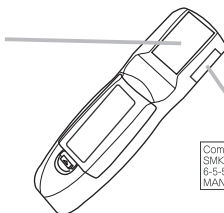

LASER INDICATOR

LASER button

The laser beam outlet



Complies with 21 CFR 1040.10 and 1040.11.
SMK CORPORATION
6-5-5 Togo-shi Shinagawa-ku, Tokyo, JAPAN 142-8511
MANUFACTURED June 2002 PLACE OF MANUFACTURE: A


⚠ WARNING

- ▶ Never hit an eye with the laser beam, and use the laser pointer except to serve as a pointer to a screen. The laser beam can cause vision problems, and also may cause radiation exposure.

Putting batteries

Please load the batteries before using the remote control.


1. Slide back and remove the battery cover.
2. Put the two AA batteries (HITACHI MAXELL, Part No.LR6 or R6P) into the holder, according to the polarity markings (+) and (-) on the holder.
3. Put the battery cover back to its former state.

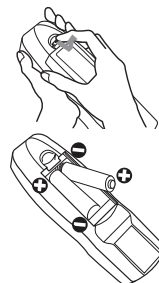

⚠ WARNING


- ▶ Always handle the batteries with care and use them only as directed. Improper use may result in battery explosion, cracking or leakage, which could result in fire, injury and/or pollution of the surrounding environment.
- Be sure to use only the batteries specified. Do not use batteries of different types at the same time. Do not mix a new battery with used one.
- Make sure the plus and minus terminals are correctly aligned when loading a battery.
- Keep a battery away from children and pets.
- Do not recharge, short circuit, solder or disassemble a battery.
- Do not allow a battery in a fire or water. Keep batteries in a dark, cool and dry place.
- If you observe battery leakage, wipe out the leakage and then replace a battery. If the leakage adheres to your body or clothes, rinse well with water immediately.
- Obey the local laws on disposing the battery.

- | | |
|--|----------------------|
| (1) VIDEO button | (2) RGB button |
| (3) BLANK button | (4) ASPECT button |
| (5) AUTO button | (6) POSITION button |
| (7) VOLUME button | |
| (8) MAGNIFY - ON button | |
| (9) MAGNIFY - OFF button | |
| (10) MUTE button | (11) FREEZE button |
| (12) KEYSTONE button | (13) SEARCH button |
| (14) MENU button | |
| (15) Lever switch : acting 3 functions as below. | |
| Cursor button ▲ : to slide toward the side marked ▲. | |
| Cursor button ▼ : to slide toward the side marked ▼. | |
| ENTER button : to push down the center point. | |
| (16) Cursor button ◀ | (17) Cursor button ▶ |
| (18) RESET button | (19) ESC button |

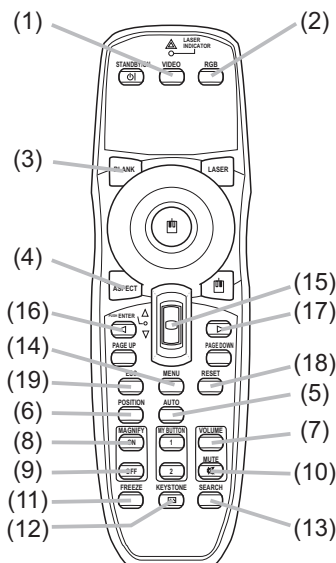

Displaying the picture

1. Make sure that the signal source is sending the signal to the projector.
2. Press the VOLUME button on the remote control. Use the ▲/▼ cursor buttons to adjust the volume.
3. Press the INPUT button on the projector.
Each time you press the button, the projector switches its input port in turn.
4. Press the ASPECT button on the remote control. Each time you press the button, the projector switches the mode for aspect ratio in turn.
5. Use the zoom ring to adjust the screen size.
6. Use the focus ring to focus the picture.
7. Use the vertical lens shift dial to shift the picture upward or downward. It is recommended to adjust the picture upward.
8. Use the horizontal lens shift dial to shift the picture left or right.

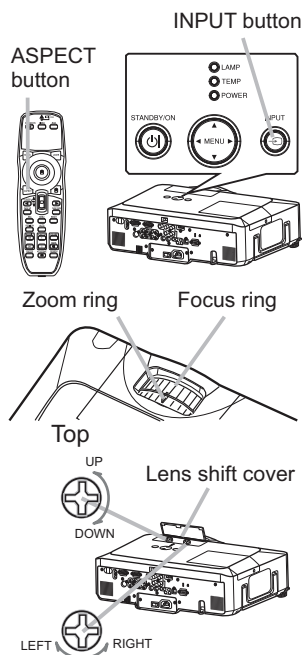


Turning off the power

1. Press the STANDBY/ON button on the projector or the remote control.
The message "Power off?" will appear on the screen for about 5 seconds.
2. Press the STANDBY/ON button on the projector or the remote control again while the message appears.
The projector lamp will go off, and the POWER indicator will begin blinking in orange.
Then the POWER indicator will stop blinking and light in steady orange when the lamp cooling is complete.
3. Make sure that the power indicator lights in steady orange, and set the power switch to the OFF position (marked "O").

The POWER indicator will go off. Attach the lens cover.

Do not turn the projector on for 10 minutes or more after turning it off. Turning the projector on again too soon could shorten the lifetime of some consumable parts of the projector.

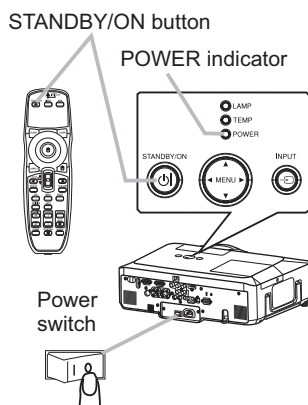

⚠ WARNING

► Do not touch around the lamp cover and the exhaust vents during use or just after use, since it is too hot.

Lamp

A lamp has finite product life. Using the lamp for long periods of time could cause the pictures darker or the color tone poor. Note that each lamp has a different lifetime, and some may burst or burn out soon after you start using them.

Preparation of a new lamp and early replacement are recommended. To prepare a new lamp, contact your dealer and tell the lamp type number.

Type number = 003-120457-01 (DT00873)

Replacing the lamp

1. Turn the projector off, and unplug the power cord. Allow the projector to cool for at least 45 minutes.



2. Prepare a new lamp.

If the projector is mounted on a ceiling, or if the lamp has broken, also ask the dealer to replace the lamp.


In case of replacement by yourself,

3. Loosen the screw (marked by arrow) of the lamp cover and then slide the lamp cover to the side to remove it.
4. Loosen the 3 screws (marked by arrow) of the lamp, and slowly pick up the lamp by the handles.
5. Insert the new lamp, and retighten firmly the 3 screws of the lamp that are loosened in the previous process to lock it in place.
6. Slide the lamp cover back in place and firmly fasten the screw of the lamp cover.
7. Turn the projector on and reset the lamp time using the LAMP TIME item in the OPTION menu.
 - (1) Press the MENU button to display a menu.
 - (2) Point at the "Go to Advanced Menu ..." in the menu using the ▼/▲ button, then press the ► button.
 - (3) Point at the "OPTION" in the left column of the menu using the ▼/▲ button, then press the ► button.
 - (4) Point at the "LAMP TIME" using the ▼/▲ button, then press the ► button. A dialog will appear.
 - (5) Press the ▲ button to select "RESET" on the dialog.It performs resetting the lamp time.

The lamp cover

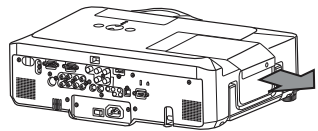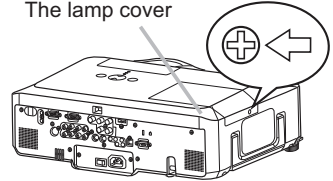



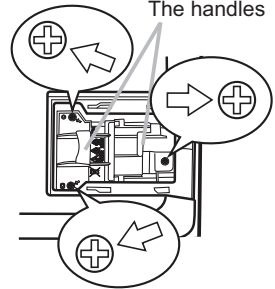



The handles



NOTE

- Please reset the lamp time only when you have replaced the lamp, for a suitable indication about the lamp.

Lamp warning

 HIGH VOLTAGE	 HIGH TEMPERATURE	 HIGH PRESSURE
<p>► The projector uses a high-pressure mercury glass lamp. The lamp can break with a loud bang, or burn out, if jolted or scratched, handled while hot, or worn over time. Note that each lamp has a different lifetime, and some may burst or burn out soon after you start using them. In addition, when the bulb bursts, it is possible for shards of glass to fly into the lamp housing, and for gas containing mercury to escape from the projector's vent holes.</p>		
 <p>Disconnect the plug from the power outlet</p>	<ul style="list-style-type: none">• If the lamp should break (it will make a loud bang when it does), Unplug the power cord from the outlet, and make sure to request a replacement lamp from your local dealer. Note that shards of glass could damage the projector's internals, or cause injury during handling, so please do not try to clean the projector or replace the lamp yourself.• Ventilate the room well, and make sure not to breathe the gas that comes out of the projector vents, or get it in your eyes or mouth.• Before replacing the lamp, turn the projector off and unplug the power cord, then wait at least 45 minutes for the lamp to cool sufficiently. Handling the lamp while hot can cause burns, as well as damaging the lamp.	
	<ul style="list-style-type: none">• Never unscrew except the appointed (marked by an arrow) screws.• Do not open the lamp cover while the projector is suspended from a ceiling. This is dangerous, since if the lamp's bulb has broken, the shards will fall out when the cover is opened. In addition, working in high places is dangerous, so ask your local dealer to have the lamp replaced even if the bulb is not broken.• Do not use the projector with the lamp cover removed. At the lamp replacing, make sure that the screws are screwed in firmly. Loose screws could result in damage or injury.	
	<ul style="list-style-type: none">• Use only the lamp of the specified type.• If the lamp breaks soon after the first time it is used, it is possible that there are electrical problems elsewhere besides the lamp. If this happens, contact your local dealer or a service representative.• Handle with care: jolting or scratching could cause the lamp bulb to burst during use.• Using the lamp for long periods of time, could cause it dark, not to light up or to burst. When the pictures appear dark, or when the color tone is poor, please replace the lamp as soon as possible. Do not use old (used) lamps; this is a cause of breakage.	
<p>► About disposal of a lamp: This product contains a mercury lamp; do not put it in a trash. Dispose of it in accordance with environmental laws.</p> <ul style="list-style-type: none">• For lamp recycling, go to www.lamprecycle.org (in the US).• For product disposal, contact your local government agency or www.eiae.org (in the US) or www.epsc.ca (in Canada). <p>For more information, call your dealer.</p>		


Air filter

Please check and clean the air filter periodically. When the indicators or a message prompts you to clean the air filter, comply with it as soon as possible. The air filter has two kinds of filters inside. Replace the filters when they are damaged or too soiled. To prepare the new filters, make contact with your dealer and tell the following type number.

Type number = 003-002119-01 (MU05661)

When you replace the lamp, please replace the air filter. An air filter of specified type will come together with a replacement lamp for this projector.

1. Turn the projector off, and unplug the power cord. Allow the projector to sufficiently cool down.
2. Use a vacuum cleaner on and around the filter cover.
3. Pull the filter cover knobs while lifting it, to take the filter unit off.
4. Use a vacuum cleaner for the filter vent of the projector and both sides of the filter unit.
If the filters are damaged or too soiled, replace them according to the following procedure number 5 to 7. Otherwise, please jump to the procedure number 8.
5. Pull the filter frame's knob up while holding the filter cover to remove the filter frame, then take the filters out.
6. Set new filters where former filters were. Put the larger meshed filter into a filter cover first. Then put the finer meshed filter on the larger meshed one.
7. Put the filter frame back where it was.
8. Put the filter unit back into the projector.
9. Turn the projector on and reset the filter time using the FILTER TIME item in the EASY MENU
 - (1) Press the MENU button to display a menu.
 - (2) Point at the "FILTER TIME" using the ▼/▲ button, then press the ► button. A dialog will appear.
 - (3) Press the ▲ button to select RESET on the dialog. It performs resetting the filter time.

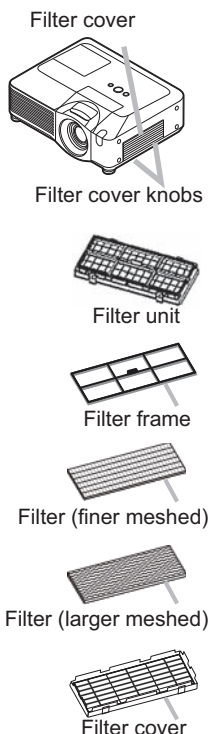

⚠ WARNING

- ▶ Before taking care of the air filter, make sure the power cable is not plugged in, then allow the projector to cool sufficiently.
- ▶ Use only the air filter of the specified type. Do not use the projector without the air filter or the filter cover. It could result in a fire or malfunction to the projector.
- ▶ Clean the air filter periodically. If the air filter becomes clogged by dust or the like, internal temperatures rise and could cause a fire, a burn or malfunction to the projector.


NOTE

- Please reset the filter time only when you have cleaned or replaced the air filter, for a suitable indication about the air filter.
- The projector may display the message such as "CHECK THE AIR FLOW" or turn off the projector, to prevent the internal heat level rising.

Internal clock battery

Consumption of the battery makes the clock not to work correctly. When the clock is wrong or it has stopped, please replace the battery according to the following procedures.

1. Turn the projector off, and unplug the power cord. Allow the projector to cool sufficiently.
2. After making sure that the projector has cooled adequately, slowly turn over the projector, so that the bottom is facing.
3. Turn the battery cover fully in the direction indicated "OPEN" using a coin or the like, and pick the cover up to remove it.
4. One of two kinds of clock battery holder, A or B shown to the right, is inside the battery cover.

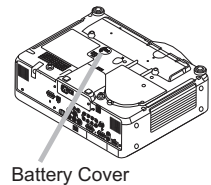

For A holder:

Pry up the battery using a flathead screwdriver or the like to take it out. While prying it up, put a finger lightly on the battery since it may pop out of the holder.


For B holder:

Press the metal claw of the battery holder putting a finger lightly on the battery since it may pop out of the holder. Then the battery will come up. Remove the battery.

5. Replace the battery with a new **HITACHI MAXELL**, Part No. **CR2032** or **CR2032H**.

Slide the battery in under the plastic claw, and push it into the holder until it clicks.

6. Replace the battery cover in place, then turn it in the direction indicated "CLOSE" using such as coins, to fix.

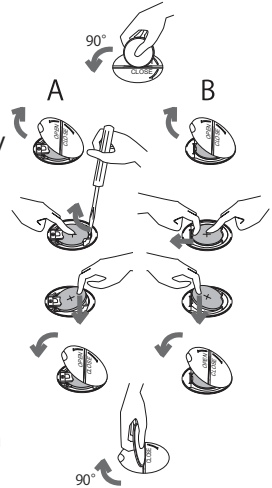

NOTE

- If the battery is inserted upside down in the B holder, it might be difficult to remove. If that happens, take following measures:

- (1) Remove the battery cover and turn the projector's upside up.
- (2) While lifting the side of the projector closer to the lens, press the metal claw of the battery holder. The battery will fall out of the holder, so be careful not to lose it.

⚠ WARNING

- ▶ Always handle the batteries with care and use them only as directed. Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire. And also improper use may result in cracking or leakage, which could result in fire, injury and/or pollution of the surrounding environment.
- Be sure to use only the batteries specified.
- Make sure the plus and minus terminals are correctly aligned when loading a battery.
- Keep a battery away from children and pets. If swallowed consult a physician immediately for emergency treatment.
- Do not short circuit or solder a battery.
- Do not allow a battery in a fire or water. Keep batteries in a dark, cool and dry place.
- If you observe battery leakage, wipe out the leakage and then replace a battery. If the leakage adheres to your body or clothes, rinse well with water immediately.
- Obey the local laws on disposing the battery.

Using the CD manual

The other manuals for this product are written into the included CD-ROM titled "User's Manual (detailed)". Before using the CD-ROM, please read the following to ensure the proper use.

System requirements

The system for using the CD-ROM requires the following.

Windows®:	OS: Microsoft® Windows® 98, 98SE, Me, 2000/XP, Windows NT®4.0, or later CPU: Pentium® processor 133MHz / Memory: 32MB or more
Macintosh®:	OS: Mac OS 10.2 or later CPU: Power PC® / Memory: 32MB or more
CD-ROM drive:	4x CD-ROM drive
Display:	256 color / 640x480 dots resolution
Applications:	Microsoft Internet Explorer4.0 or later

How to use the CD

1. Insert CD into PC's CD-ROM drive.

Windows®:	In a while, Web browser automatically starts. Start up window comes up.
Macintosh®:	(1) Double-click on the "Projectors" icon appeared on the desktop screen. (2) When "main.html" file is clicked, Web browser will start and Initial window will appear.

2. Click the model name of your projector first, and then click language you want from the displayed list. The user's manual (detailed) will open.

⚠ CAUTION

- ▶ Only use the CD-ROM in a computer CD drive. The CD-ROM is designed for PC use only. NEVER INSERT THE CD-ROM INTO A NON-COMPUTER CD PLAYER! Inserting the CD-ROM into an incompatible CD drive may produce a loud noise, which in turn MAY RESULT IN EAR AND SPEAKER DAMAGE!
- ▶ After using CD-ROM, please put it into CD case and keep it. Please keep the CD neither in direct sunlight nor in a high temperature and high humidity environment.

NOTE

- The information in the CD-ROM is subject to change without notice.
- No responsibility is taken for any obstacle and defect to hardware and software of your PC as a result of the use of the CD-ROM.
- All or Any part of the information in the CD-ROM must not be copied, reproduced or republished without notice to our company.

Regulatory notices

About Electro-Magnetic Interference

In Canada : This Class B digital apparatus complies with Canadian ICES-003.

In the US and places where the FCC regulations are applicable

Declaration of Conformity

Trade name: CHRISTIE

Model Number: LX400

Responsible Party: Christie Digital Systems USA, Inc.

Address: 10550 Camden Drive, Cypress CA 90630 U.S.A.

Telephone Number: +1-800-407-7727

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interface by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

INSTRUCTIONS TO USERS:

Some cables have to be used with the core set. Use the accessory cable or a designated-type cable for the connection. For cables that have a core only at one end, connect the core to the projector.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

About Waste Electrical and Electronic Equipment




The mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE).

The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries or accumulators as unsorted municipal waste, but use the return and collection systems available.

If the batteries or accumulators included with this equipment, display the chemical symbol Hg, Cd, or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury or more than, 0.002% Cadmium, or more than 0.004% Lead.

Specifications

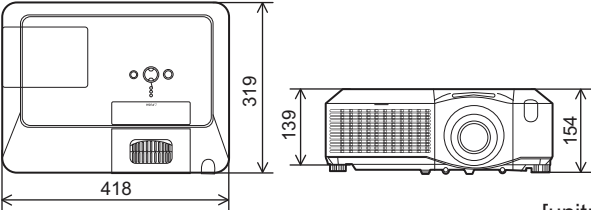Item		Specifications
Product name		Liquid crystal projector
Liquid Crystal Panel	Panel size	2.0cm (0.79 type)
	Drive system	TFT active matrix
	Pixels	786,432 pixels (1024 horizontal x 768 vertical)
Lens		Zoom lens, F=1.7 ~ 1.9, f=24 ~ 29mm (approx.)
Lamp		275W UHB
Audio output		4W x4
Power supply		AC 100-120V/5.0A, AC220-240V/2.1A
Power consumption		460W
Temperature range		5~35℃ (Operating)
Ports	RGB1 D-sub 15 pin mini x 1 RGB2 G/Y, B/C _B /P _B , R/C _R /P _R , H, VBNC x 5 S-VIDEOmini DIN 4 pin x 1 VIDEORCA x 1 Y, C _B /P _B , C _R /P _R (component video) RCA x 3 HDMI HDMI x1 AUDIO IN1 Stereo mini x 1 AUDIO IN2 Stereo mini x 1 AUDIO IN3 R/L RCA x 1 AUDIO IN4 R/L RCA x 1 RGB OUT D-sub 15 pin mini x 1 AUDIO OUT Stereo mini x 1 USB USB (B) x 1 REMOTE CONTROL Stereo mini x1 CONTROL D-sub 9 pin x 1 LAN RJ45 x 1	
Size	418 (W) x 139 (H) x 319 (D) mm (approx.)  <div>[unit: mm]</div>	
Weight (mass)	7.1 kg (approx.)	
Optional parts	Lamp: 003-120457-01 (DT00873) Air filter: 003-002119-01 (MU05661) *For more information, please consult your dealer.	

Warranty and after-service

If an abnormal operation (such as smoke, strange odor or excessive sound) should occur, stop using the projector immediately. Otherwise if a problem occurs with the projector, first refer to the “Troubleshooting” of the “Operating Guide” in the CD and run through the suggested checks.

If this does not resolve the problem, please contact your dealer or service company. They will tell you what warranty condition is applied.

Please check the following web address where you may find the latest information for this projector.

<http://www.christiedigital.com>

NOTE

- The information in this manual is subject to change without notice.
- The manufacture assumes no responsibility for any errors that may appear in this manual.
- The reproduction, transfer or copy of all or any part of this document is not permitted without express written consent.

Trademark acknowledgment

All the trademarks are the properties of their respective owners.

According to the indication on the official site of each company, we describe as follows.

- Macintosh® and Mac OS® are registered trademark of Apple Inc.
- Pentium® is registered trademark of Intel Corp.
- Microsoft® and Internet Explorer®, Windows®, Windows NT® are registered trademarks of Microsoft Corporation in the U.S. and/or other countries.
- Adobe® and Acrobat®, Reader® are registered trademarks of Adobe System Incorporated.
- PowerPC® is a registered trademark of International Business Machines Corporation.
- DVI is a trademark of Digital Display Working Group.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
-  is a trademark of SRS Labs, Inc.
- WOW technology is incorporated under license from SRS Labs, Inc.

