# FM RECEIVER KIT

# **MODEL AR-2N6K**





**Assembly and Instruction Manual** 

## **PARTS LIST**

If you are a student, and any parts are missing or damaged, please see instructor or bookstore. If you purchased this FM receiver kit from a distributor, catalog, etc., please contact Elenco™ Electronics (address/phone/e-mail is at the back of this manual) for additional assistance, if needed.

				RESIS	TORS	3				
Qty.	Symbol	Value	Color Code						Part #	
□1	R9	0Ω	Jumper Wire	(use a discard	led resist	or lead)				
□1	R15	10Ω 5% 1/4W	brown-black-black-gold12							
□2	R10, R12	1kΩ 5% 1/4W	brown-black-	red-gold					141000	
□2	R3, R7	$3.3k\Omega$ 5% 1/4W	orange-orange-red-gold1						143300	
□2	R4, R6	4.7kΩ 5% 1/4W	yellow-violet-	red-gold					144700	
□1	R8	8.2kΩ 5% 1/4W	gray-red-red-	gold					148200	
□1	R11	10kΩ 5% 1/4W	brown-black-	orange-gold					151000	
□1	R5	20kΩ 5% 1/4W	red-black-orange-gold1						152000	
□1	R2	47kΩ 5% 1/4W	yellow-violet-orange-gold1						154700	
□1	R1	68kΩ 5% 1/4W	blue-gray-orange-gold15						156800	
□1	VR2	5kΩ 20% linear	19							
□2	VR1, VR3	100kΩ knurl shaft	100k $\Omega$ knurl shaft							
	•			5 . "						
Qty.	Symbol	Value	Marking	Part #	-	Symbol	Value	Marking	Part #	
	C5	3.9pF Discap	3.9	203921	1	C10	1000pF 10% 50V	102	231035	
	C8	7pF 20% 25V	7	207000	□ 1	C2	.005μF 20% 25V	502 or .005	235025	
	C6	33pF 10% 50V Disc	33	213317	□3	C11,C13,C16	•	103	241031	
	C6A	39pF	39	213917	□ 1	C22	.047μF +80, –20% 50V	473	244780	
□ 1 	C17	51pF 10%	51K	215110	□6	C3,C4,C9	.1μF +80, –20% 50V	104	251010	
	C12	68pF 10%	68K	216816		C18,C19,C20				
	C1	120pF	121	221280	□2	C14, C21	4.7μF 50V Radial	4.7μF 50V	264747	
□1	C7	470pF 10% 50V Disc	471	224717	□1	C15	220μF 16V Radial	220μF 16V	282244	
				SEMICON	DUCT	ORS				
Qty.	Symbol	Value	Marking	Part #	Qty.	Symbol	Value		Part #	
□2	D1, D2	Diode 1N914	1N914	310914	□ 1	L4	Coil (1.5 turns coated wire	430170		
□1	U2	IC LM386N-1 Audio Amp	LM386N-1	330386	□ 1	L1	Coil (4.5 turns coated wire	430180		
□1	U1	IC MC3362P FM Receiver	MC3362P	333362	□ 1	L5	Coil (metal can yellow)		430260	
□1	U3	IC 78L05 Regulator +5V	78L05	338L05	$\Box$ 2	L2, L3	Coil (on form with core)		468752	
				000200		, -	Con (on form with core)			
				MISCELL			Con (on form with core)			
Qtv.	Symbol	Description		MISCELL	ANEC	DUS			Part #	
-	Symbol	<b>Description</b> PC Board		MISCELL Part #	ANEC		Description		<b>Part #</b> 629011	
□ 1	•	PC Board		MISCELL Part # 517021	ANEC Qty.	DUS	<b>Description</b> Alignment Tool		629011	
□1 □2	SW1, SW2	PC Board Switch Slide DPDT		MISCELL Part # 517021 541021	.ANEC Qty.	DUS	Description Alignment Tool Screw 2-56 x 1/4"		629011 641237	
□1 □2 □1	SW1, SW2 F2	PC Board Switch Slide DPDT Filter Ceramic 10.7MHz		MISCELL Part # 517021 541021 560107	. <b>ANEC</b> Qty.	DUS	Description Alignment Tool Screw 2-56 x 1/4" Screw 4-40 x 1/4"		629011 641237 641433	
1   2   1   1	SW1, SW2 F2 F1	PC Board Switch Slide DPDT Filter Ceramic 10.7MHz Filter Ceramic 455kHz		MISCELL Part # 517021 541021 560107 560455	.ANEC Qty.	DUS	Description Alignment Tool Screw 2-56 x 1/4" Screw 4-40 x 1/4" Nut 7mm Hex		629011 641237 641433 644101	
1 2 1 1	SW1, SW2 F2	PC Board Switch Slide DPDT Filter Ceramic 10.7MHz Filter Ceramic 455kHz Crystal 10.245MHz		MISCELL Part # 517021 541021 560107 560455 561024	Qty.  1 4 3 3 3	DUS	Description Alignment Tool Screw 2-56 x 1/4" Screw 4-40 x 1/4" Nut 7mm Hex Nut 2-56 Hex		629011 641237 641433 644101 644201	
1   2   1   1   1   1	SW1, SW2 F2 F1	PC Board Switch Slide DPDT Filter Ceramic 10.7MHz Filter Ceramic 455kHz Crystal 10.245MHz Battery Snap 9V		Part # 517021 541021 560107 560455 561024 590098	ANEC Qty.	DUS	Description Alignment Tool Screw 2-56 x 1/4" Screw 4-40 x 1/4" Nut 7mm Hex Nut 2-56 Hex Nut 4-40 Hex		629011 641237 641433 644101 644201 644400	
1   2   1   1   1   1   1	SW1, SW2 F2 F1 Y1	PC Board Switch Slide DPDT Filter Ceramic 10.7MHz Filter Ceramic 455kHz Crystal 10.245MHz Battery Snap 9V Battery Holder 9V		MISCELL Part # 517021 541021 560107 560455 561024 590098 590099	ANEC Qty.	DUS	Description Alignment Tool Screw 2-56 x 1/4" Screw 4-40 x 1/4" Nut 7mm Hex Nut 2-56 Hex Nut 4-40 Hex Flat Washer	I tooth	629011 641237 641433 644101 644201 644400 645101	
1	SW1, SW2 F2 F1	PC Board Switch Slide DPDT Filter Ceramic 10.7MHz Filter Ceramic 455kHz Crystal 10.245MHz Battery Snap 9V Battery Holder 9V Speaker 8Ω		MISCELL Part # 517021 541021 560107 560455 561024 590098 590099 590102	ANEC Qty.	DUS	Description Alignment Tool Screw 2-56 x 1/4" Screw 4-40 x 1/4" Nut 7mm Hex Nut 2-56 Hex Nut 4-40 Hex Flat Washer Lock Washer 5/16" internal		629011 641237 641433 644101 644201 644400 645101	
1	SW1, SW2 F2 F1 Y1	PC Board Switch Slide DPDT Filter Ceramic 10.7MHz Filter Ceramic 455kHz Crystal 10.245MHz Battery Snap 9V Battery Holder 9V Speaker 8Ω Bracket L-shaped		MISCELL Part # 517021 541021 560107 560455 561024 590098 590099 590102 613000	ANEC Qty.  1 4 3 3 4 3 4 3 3 3	DUS	Description Alignment Tool Screw 2-56 x 1/4" Screw 4-40 x 1/4" Nut 7mm Hex Nut 2-56 Hex Nut 4-40 Hex Flat Washer Lock Washer 5/16" internal Lock Washer #4 internal to		629011 641237 641433 644101 644201 644400 645101 646101 646401	
1	SW1, SW2 F2 F1 Y1	PC Board Switch Slide DPDT Filter Ceramic 10.7MHz Filter Ceramic 455kHz Crystal 10.245MHz Battery Snap 9V Battery Holder 9V Speaker 8Ω Bracket L-shaped Front Panel		Part # 517021 541021 560107 560455 561024 590098 590099 590102 613000 614107	ANEC Qty.  1 4 3 3 4 3 4 3 3 3 1 1	DUS	Description Alignment Tool Screw 2-56 x 1/4" Screw 4-40 x 1/4" Nut 7mm Hex Nut 2-56 Hex Nut 4-40 Hex Flat Washer Lock Washer 5/16" internal Lock Washer #4 internal to IC Socket 8-pin		629011 641237 641433 644101 644201 644400 645101 646101 646401 664008	
1	SW1, SW2 F2 F1 Y1	PC Board Switch Slide DPDT Filter Ceramic 10.7MHz Filter Ceramic 455kHz Crystal 10.245MHz Battery Snap 9V Battery Holder 9V Speaker 8Ω Bracket L-shaped Front Panel Nylon Clips		Part # 517021 541021 560107 560455 561024 590098 590099 590102 613000 614107 621012	ANEC Qty.  1 4 3 3 4 3 3 3 1 1 1	DUS	Description Alignment Tool Screw 2-56 x 1/4" Screw 4-40 x 1/4" Nut 7mm Hex Nut 2-56 Hex Nut 4-40 Hex Flat Washer Lock Washer 5/16" internal Lock Washer #4 internal to IC Socket 8-pin IC Socket 24-pin narrow		629011 641237 641433 644101 644201 644400 645101 646101 646401 664008 664025	
1	SW1, SW2 F2 F1 Y1	PC Board Switch Slide DPDT Filter Ceramic 10.7MHz Filter Ceramic 455kHz Crystal 10.245MHz Battery Snap 9V Battery Holder 9V Speaker 8Ω Bracket L-shaped Front Panel Nylon Clips Phono Plug		Part # 517021 541021 560107 560455 561024 590098 590099 590102 613000 614107 621012 621017	ANEC Qty.	DUS	Description Alignment Tool Screw 2-56 x 1/4" Screw 4-40 x 1/4" Nut 7mm Hex Nut 2-56 Hex Nut 4-40 Hex Flat Washer Lock Washer 5/16" internal Lock Washer #4 internal to IC Socket 8-pin IC Socket 24-pin narrow Tape Double-sided Foam	ooth	629011 641237 641433 644101 644201 645101 646101 646401 664008 664025 740004	
1	SW1, SW2 F2 F1 Y1	PC Board Switch Slide DPDT Filter Ceramic 10.7MHz Filter Ceramic 455kHz Crystal 10.245MHz Battery Snap 9V Battery Holder 9V Speaker 8Ω Bracket L-shaped Front Panel Nylon Clips Phono Plug Knob Push-on		MISCELL Part # 517021 541021 560107 560455 561024 590098 590099 590102 613000 614107 621012 621017 622009	ANEC Qty.    1   4   3   3   4   3   3   1   1   1   1	DUS	Description Alignment Tool Screw 2-56 x 1/4" Screw 4-40 x 1/4" Nut 7mm Hex Nut 2-56 Hex Nut 4-40 Hex Flat Washer Lock Washer 5/16" internal Lock Washer #4 internal to IC Socket 8-pin IC Socket 24-pin narrow Tape Double-sided Foam Wire #22 Solid Orange 84"	ooth ,	629011 641237 641433 644101 644201 645101 646101 646401 664008 664025 740004 814320	
1	SW1, SW2 F2 F1 Y1	PC Board Switch Slide DPDT Filter Ceramic 10.7MHz Filter Ceramic 455kHz Crystal 10.245MHz Battery Snap 9V Battery Holder 9V Speaker 8Ω Bracket L-shaped Front Panel Nylon Clips Phono Plug Knob Push-on Knob Large		MISCELL Part # 517021 541021 560107 560455 561024 590098 590099 590102 613000 614107 621012 621017 622009 622080	ANEC Qty.  1 4 3 3 4 3 3 1 1 1 1 1	DUS	Description Alignment Tool Screw 2-56 x 1/4" Screw 4-40 x 1/4" Nut 7mm Hex Nut 2-56 Hex Nut 4-40 Hex Flat Washer Lock Washer 5/16" internal Lock Washer #4 internal to IC Socket 8-pin IC Socket 24-pin narrow Tape Double-sided Foam Wire #22 Solid Orange 84' Cable Shielded 2-conductor	ooth ,	629011 641237 641433 644101 644201 645101 646101 646401 664008 664025 740004 814320 876090	
1	SW1, SW2 F2 F1 Y1	PC Board Switch Slide DPDT Filter Ceramic 10.7MHz Filter Ceramic 455kHz Crystal 10.245MHz Battery Snap 9V Battery Holder 9V Speaker 8Ω Bracket L-shaped Front Panel Nylon Clips Phono Plug Knob Push-on		MISCELL Part # 517021 541021 560107 560455 561024 590098 590099 590102 613000 614107 621012 621017 622009	ANEC Qty.    1   4   3   3   4   3   3   1   1   1   1	DUS	Description Alignment Tool Screw 2-56 x 1/4" Screw 4-40 x 1/4" Nut 7mm Hex Nut 2-56 Hex Nut 4-40 Hex Flat Washer Lock Washer 5/16" internal Lock Washer #4 internal to IC Socket 8-pin IC Socket 24-pin narrow Tape Double-sided Foam Wire #22 Solid Orange 84"	ooth ,	629011 641237 641433 644101 644201 645101 646101 646401 664008 664025 740004 814320	

#### THE AR-2N6

It is the goal of this project to educate the builder in all of the principles needed to design and build this kit. The radio is broken down into four blocks. Each block contains:

- Explanation of circuit to be assembled (Theory of Operation).
- Detailed assembly instructions for each circuit.


- 3. Specifications and testing procedure for each circuit.
- 4. Troubleshooting guide for each circuit.
- 5. Quiz on circuit (answers included).

A final quiz is included (with answers) to help demonstrate the overall knowledge gained by building this kit. With this in mind, let's start by defining exactly what this radio kit is.

The AR-2N6 is a <u>dual conversion narrow band</u> <u>FM radio receiver</u> designed to detect signals in the <u>2 meter</u> and <u>6 meter bands</u>.


#### **Dual Conversion**

The original radio frequency in converted first to a 10.7MHz intermediate frequency (i-f) and amplified (Block 4). The 10.7MHz signal is then converted to 455kHz and amplified (Block 3). Noise is removed and the modulated signal is recovered from the 455kHz i-f signal (Block 2). The audio signal is amplified to drive a speaker (Block 1).

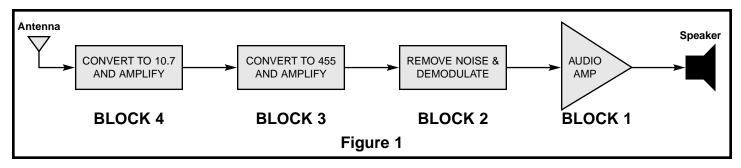


#### Why Convert Twice?

In the attempt to obtain the desired intermediate frequency (i-f) signal by mixing the local oscillator with the desired radio frequency, an unwanted output may result due to a transmission spaced one intermediate frequency (i-f) on the opposite side of the oscillator (image). By using a large i-f frequency, this image is moved further out of the band of desired frequencies. The second conversion provides the selectivity to filter out the desired narrow band transmission.

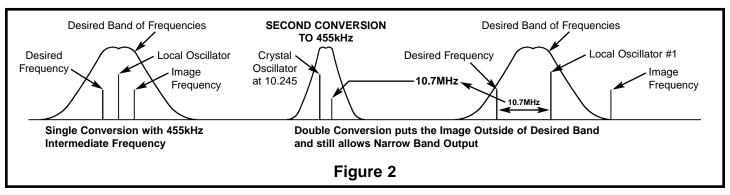


#### **Narrow Band**

The selectivity of the entire system is limited to only enough frequencies to pass voice or low frequency data. A normal FM receiver would have a bandwidth large enough to pass music and high frequency data transmissions.

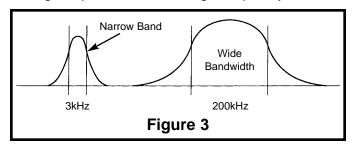

#### FM Radio Receiver

The letters "FM" stand for *Frequency Modulation*. The other popular forms of modulation are *AM* (Amplitude Modulation) and *PM* (Phase Modulation). Frequency modulation means the data or voice changes the frequency of the radio wave.

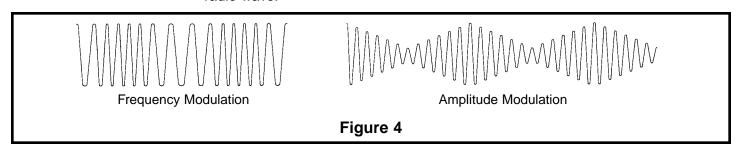


#### 2 Meter Band

If the speed of a wave (meters per second) is divided by the number of waves that pass a given point (cycles per second), the seconds cancel and you obtain the wavelength ( $\lambda$  = meters per cycle). The speed of radio waves is approximately 300,000,000 meters per second. If the frequency is 150MHz, the wavelength becomes 300,000,000/150,000,000 or 2 meters.

#### 6 Meter Band

To find the frequency in MHz, divide the speed in millions of meters per second by the wavelength in meters. A 6 meter wave has a frequency of 300/6 or 50MHz.

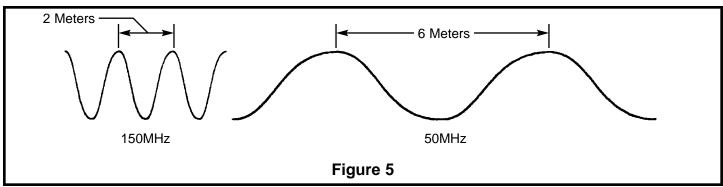

Actual bands are:

2 Meter covers 144MHz to 148MHz.

6 Meter covers 50MHz to 54MHz.

All licensees, except Novices, are allowed to use these bands.

#### **BLOCK 1 - THE AUDIO AMPLIFIER THEORY OR OPERATION**

The audio in this radio is amplified by using an integrated circuit audio power amplifier. The LM-386 specifications are as follows:

- Single supply voltage (4-12V)
- Idle current 4 milliamps
- Inputs referenced to ground
- Input resistance 50kΩ
- Self-centering output voltage
- Total harmonic distortion less than 0.2%
- Output power with 9 volt supply voltage
- Voltage gain with  $10\mu F$  from pin 1 to 8 200 or 46dB
- Voltage gain with pins 1 and 8 open 20 or 26dB
- Bandwidth with pins 1 and 8 open 300kHz

The output impedance of the amplifier is low enough to drive an  $8\Omega$  speaker directly. The coupling capacitor value is picked to pass audio signals down to 100 cycles by matching the reactance of the capacitor with the speaker impedance. In other words,  $8\Omega = 1/2\pi fC$ , where f = 100Hz. By solving for C we get:


 $C = 1/(2\pi f)(8\Omega)$ 

C = 1/(6.28)(100)(8)

C = 1/5026


 $C = 0.00019896 \text{ or } C \approx 200 \mu F \text{ (220} \mu F \text{ used)}$ 

Due to the high input resistance of the amplifier  $(50k\Omega)$ , the audio coupling capacitor C3 can be as small as 0.1µF. The equivalent resistance at the junction of R8 and VR3 is approximately  $6.6k\Omega$  (the parallel combination of R8, VR3 and the  $50k\Omega$  input impedance of the LM-386). The capacitor C2 and this equivalent resistance sets the 3dB corner used to attenuate any IF voltage at pin 13. A simple RC filter attenuates at a rate of 6dB per octave (an octave is the same as doubling the frequency). By using  $6.6k\Omega$  as the equivalent resistance and 0.005µF as the capacitance, we get a 3dB corner at approximately 4.8kHz. To get to 455kHz, you must double 4.8kHz approximately 6.6 times. equates to a reduction of the IF voltage at the R8 -VR3 junction of 39.6dB (6dB per octave times 6.6 octaves), or 95 times.

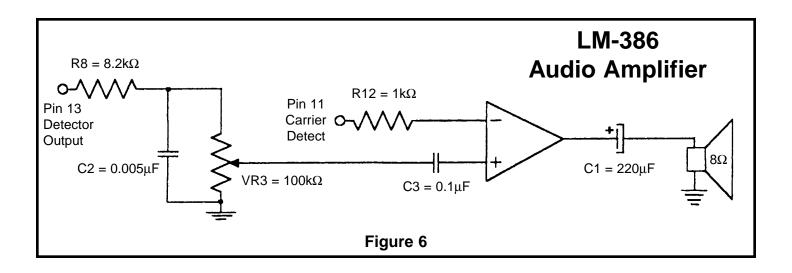


#### **ASSEMBLY INSTRUCTIONS FOR BLOCK 1**

Solder the parts to the PC board and put a check mark in the box (②) next to each step after it is completed. The parts should be similar to the sketch in each box, but will differ in size. Be sure to check each solder point for shorts and cold solder connections. Be careful to prevent static discharge when handling integrated circuits U2 and U3.

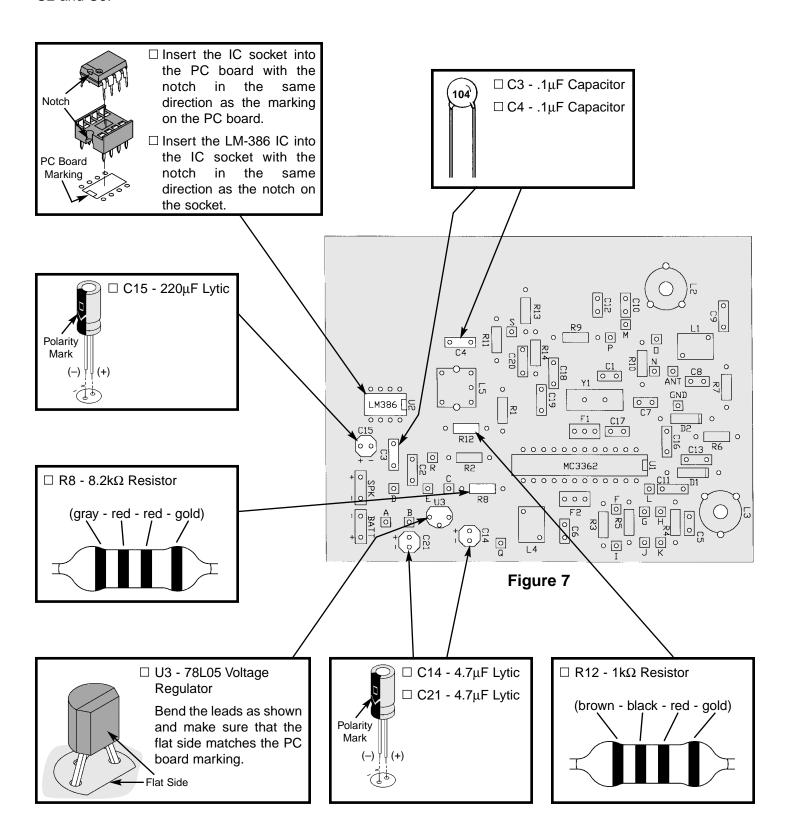

#### CONNECTING PARTS TO THE BACK SIDE OF THE PC BOARD

 $\Box$  Twist two leads of a 10 $\Omega$  resistor and a .047 $\mu$ F capacitor as shown in Figure 8a. Solder the wires close to the components and clip off any excess wire.

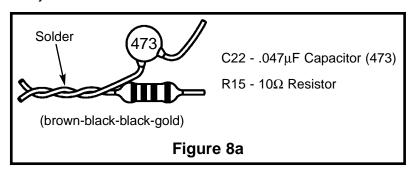

Mount the components shown in Figure 8 to the foil side of the PC board. Place a check mark in the box  $(\boxtimes)$  after each part is in place.



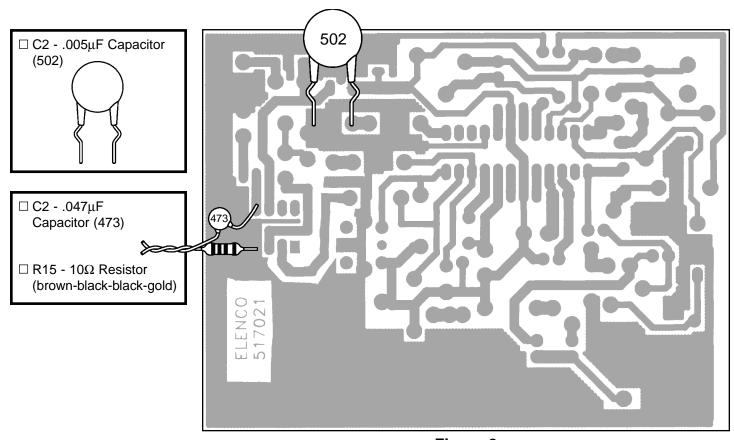


Figure 8

#### CONNECTING THE FRONT PANEL PARTS TO THE PC BOARD

Solder the parts to the PC board and put a check mark in the box (②) next to each step after it is completed. The parts should be similar to what is shown in Figure 9. To wire the speaker, pot and switch, cut the indicated length of wire from the roll of 22 gauge solid wire and strip 1/4" of insulation off of each end. Before soldering, mechanically connect the wire to the parts as shown in the figure. For the jumper wire, cut 2" of 22 gauge solid wire, strip 1/4" of insulation off of each end and solder to the points indicated.

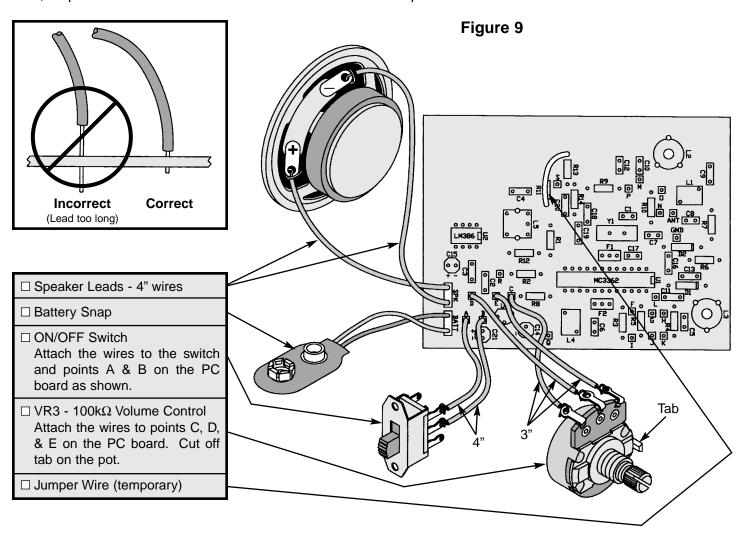

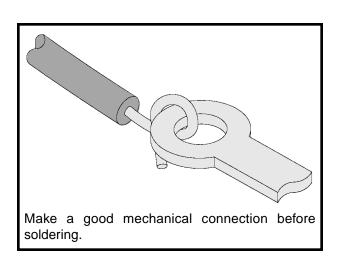

#### **TEST PROCEDURE - BLOCK 1**


#### Procedure 1

If you do not have an audio generator and multimeter, skip to procedure 2.

#### **Power Test**

Make sure that the power switch is in the OFF position (handle away from the 2 wired terminals). Connect a fresh 9V alkaline battery to the battery snap. Set the multimeter to read on the 20V scale

and connect to the circuit as shown in Figure 10. Connect the positive voltage probe to the positive lead of capacitor C4. Connect the common probe to the negative lead from the battery. Turn the power ON. The multimeter should read between 4.5V and 5.5V. If not, turn off the power and check that U3 is correctly installed. Also, check for solder shorts and unsoldered leads.

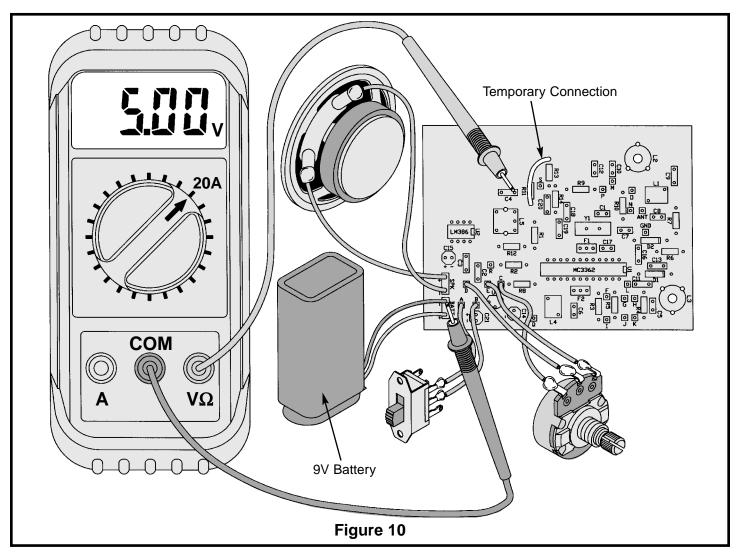


#### **Audio Gain**

Make sure that the power switch is in the OFF position. Connect the audio generator and multimeter as shown in Figure 11. Turn the volume control fully clockwise (maximum gain). Put the multimeter in the AC 20V position, turn the generator to minimum at 400Hz sine wave output, and turn the power ON. Slowly increase the generator output until the multimeter reads 2Vrms. Move the multimeter lead to the generator output as shown by the dashed lines in Figure 11. Adjust the

multimeter for the best reading and record here:

Input Voltage =

The gain is the output voltage divided by the input voltage. Since the output voltage was set at 2V, the gain is equal to 2 divided by the reading recorded above. Gain should be approximately equal to 17. If gain test fails, turn off the power and check the connections on all external parts. Check for shorts between pins on IC U2 and make sure that all of the IC pins are properly inserted in the socket. Replace the battery with a fresh alkaline battery.

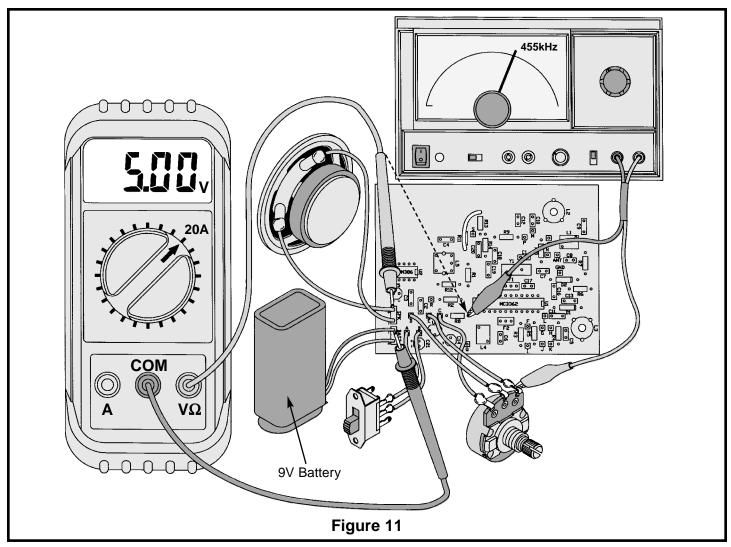

#### **Power Output**

If you do not have an audio generator and an oscilloscope, skip this test. Make sure that the power is OFF and connect the audio generator and the oscilloscope as shown in Figure 11 (replace the multimeter leads with scope leads). Set the generator to 400Hz minimum output and set the oscilloscope to read 1V/div. Put the volume control in the fully clockwise position. Turn the power ON and set the audio generator output until a waveform similar to the one shown in Figure 12 is obtained. The flat area indicates clipping. You may have to adjust the oscilloscope time base for correct comparison. Measure the peak to peak voltage at which the clipping first occurs and record here:

#### Peak to Peak Reading = \_\_\_\_\_

The power output before clipping is equal to the square of the rms voltage across the speaker divided by the speaker impedance. The rms voltage for a sine wave is equal to the peak voltage times 0.707. To get the peak voltage, divide the peak to peak reading recorded above by 2.

Multiply the peak by 0.707 and square the result. Divide by  $8\Omega$  (speaker impedance) to obtain the maximum power output before clipping distortion occurs. Maximum power output should be 1/2W or greater. If this test fails, replace the battery with a power supply capable of delivering 1/2A @ 9V or replace the battery with a fresh alkaline battery.

#### **Example**


If the peak to peak voltage - 5.66

Peak Voltage - 5.66 x 0.5 or 2.83

rms Voltage -  $2.83 \times 0.707 = 2.0$ 

rms Voltage Squared -  $2 \times 2 = 4$ 

Dividing by speaker impedance of  $8\Omega$  gives a power of 0.5W.

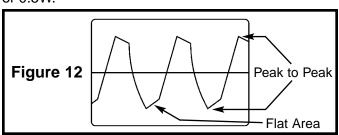

#### **Frequency Response**

If you do not have an audio generator and an oscilloscope, skip this test. Make sure that the power is OFF and connect the audio generator and the oscilloscope as shown in Figure 11 (replace the multimeter leads with scope leads). generator to 400Hz minimum output and set the oscilloscope to read 1V/div. Put the volume control in the fully clockwise position. Turn the power ON and adjust the audio generator output until a waveform similar to the one shown in Figure 13 is obtained. You may have to adjust the oscilloscope time base for correct comparison. Without changing the generator output level, slowly lower the frequency of the audio generator until the sine wave at the speaker falls to 0.707 of the original setting (3dB point or 1/2 power point). Record that frequency here:

Speaker Frequency = \_\_\_\_\_

Without changing the generator output level, slowly raise the frequency of the audio generator above the original 400Hz until the sine wave at the speaker falls to 0.707 of the original setting and record here:


Speaker Frequency = \_\_\_\_\_

During this second measurement, the voltage at the speaker may go higher than the original value due to speaker resonance. The frequency at which a speaker resonates changes with speaker size, mounting method, and speaker enclosure. The bandwidth of your audio circuit is equal to the frequency difference between these 2 half power points and should be no less than 3,000Hz. If you fail this test, check that capacitors C2, C3, and C15 are the proper values and are correctly installed.

#### **Example**

3dB Point Low Side = 100Hz 3dB Point High Side = 4,000Hz Bandwidth = 4,000 - 100Hz Bandwidth = 3,900Hz

Bandwidth = \_\_\_\_\_

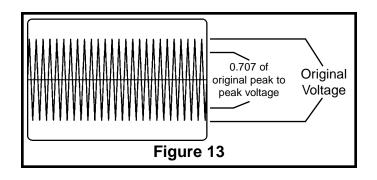


#### Procedure 2

If you do not have any test equipment, you can test the audio circuit as follows:

Make sure that the power switch is turned OFF. Connect a fresh 9V battery to the battery snap. Put the volume control in the mid position. While holding one lead of a  $0.1\mu F$  capacitor on the R8 resistor lead, place the other lead on the speaker wire marked "+" and turn the power ON (see Figure 14).

The audio should make a buzzing sound. The pitch will change if you vary the volume control setting. If this test fails, turn the power OFF and check for solder shorts between the pins on U2 (LM-386 integrated circuit). Check that all of the parts are the correct value and are installed properly. Check that regulator U3 is installed properly.

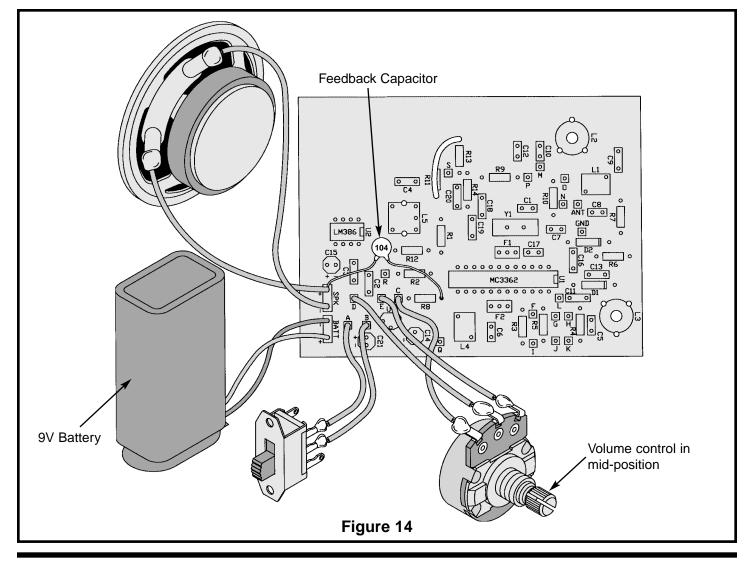

#### QUIZ 1

- 1. The impedance of a 200µF capacitor at 100Hz is: (a)  $50\Omega$  (b)  $79.6\Omega$  (c)  $2\Omega$  (d)  $7.96\Omega$
- 2. If the frequency is 150MHz, the wavelength is approximately . . .
  - (a) 20 meters (c) 6 meters
  - (b) 2 meters (d) need more information
- 3. Frequency modulation means the data or voice changes the . . .
  - (a) amplitude (c) phase
  - (b) frequency (d) power
- 4. The audio in this radio is amplified using . . .
  - (a) an IC audio power amplifier
  - (b) a discrete power amplifier
  - (c) a preamplifier
  - (d) increased bandwidth
- 5. Double conversion is used to . . .
  - (a) remove undesired image
  - (b) reduce noise
  - (c) provide greater gain
  - (d) increase bandwidth

- 6. The first IF frequency in the AR-2N6 Radio Kit is: (a) 455kHz (b) 10.7MHz (c) 150MHz (d) 50MHz
- 7. In order to get the second IF frequency, a crystal oscillator must be set at:
  - (a) 455kHz
- (c) 10.7MHz
- (b) 545kHz
- (d) 10.245MHz
- 8. The integrated circuit audio power amplifier used in the AR-2N6 Kit has an input resistance of . . .

- (a)  $50k\Omega$  (b)  $5k\Omega$  (c)  $8\Omega$  (d)  $7.96\Omega$
- 9. Resistor R8 and capacitor C2 attached to the audio volume control are used to . . .
  - (a) peak the audio
- (c) flatten audio response
- (b) provide bass boost (d) limit the bandwidth
- 10. When soldering electronic components, always use ...
  - (a) high wattage iron
- (c) rosin core solder
- (b) acid core solder
- (d) paste flux

Answers: 1. d, 2. b, 3. b, 4. a, 5. a, 6. b, 7. d, 8. a, 9. d, 10. c


#### **BLOCK 2 - RECOVERING THE DATA**

#### **Theory of Operation**

In dealing with FM receivers, there are some terms that must be defined. First, let's determine the term *deviation* as the frequency swing of the incoming FM signal. When no modulation is present, the incoming signal is a fixed frequency *carrier wave (Fc)*. *Positive deviation (Fp)* is the increase in Fc due to modulation, and *negative deviation (Fn)* is the decrease in Fc due to the modulation. The detector must be linear over the maximum total deviation (Fp max. - Fn max.) produced by the transmitter or distortion will occur.


Before the second i-f signal reaches the detector, it is applied to a *limiting amplifier* inside the

integrated circuit. A limiting amplifier is designed to remove any amplitude variations in the signal by amplifying the signal well beyond the limit of the amplifier. The frequency variations (FM) are not affected by the limiter. The limiter removes the affects of fading (driving through a tunnel) and impulse noise (lightning and ignition). These affects produce significant unwanted amplitude variations in the received signal, but minor frequency variations. Noise immunity is one of the great advantages of frequency modulation over amplitude modulation. The remaining signal contains only the frequency modulation as shown in Figure 15.

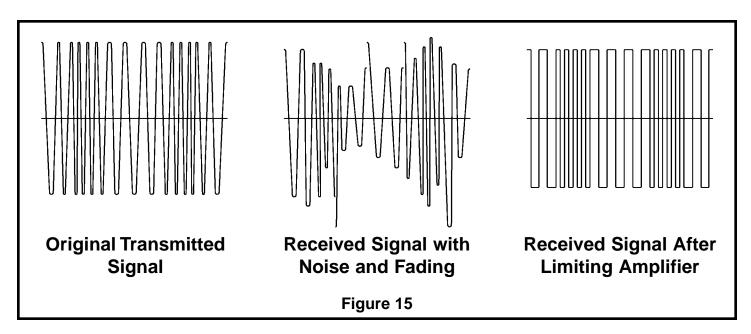

The AR-2N6 Radio Kit uses a quadrature detector to demodulate the FM signal. After the noise is removed by the limiter, the signal is internally connected to the quadrature detector. A parallel tuned circuit must be connected from pin 12 to the power supply. This circuit produces the 90° phase


needed by the quadrature detector. A resistor shunting this coil sets the peak separation of the detector. If the value of the resistor is lowered, it will increase the linearity, but decrease the amplitude of the recovered audio as shown in Figure 16.

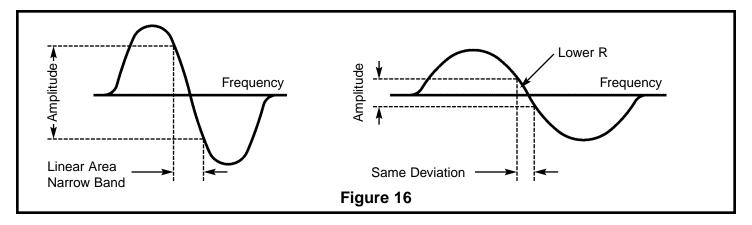

Notice how the linearity improves for a given amount of frequency deviation when the positive and negative peaks are further apart. Figure 16 also shows how the amplitude of the output would drop for the same frequency deviation on a more linear detector.


The quadrature detector combines two phases of the i-f signal that are 90° apart, or in quadrature, to recover the modulation (see Figure 17a). The shifted signal is used to gate the non-shifted signal

in a synchronous detector. When the frequency increases above the carrier frequency (positive deviation), the phase shift increases causing a decrease in the width of the gated impulse output (see Figure 17b). In a similar manner, when negative deviation occurs, the gated impulse output will widen (see Figure 17c). The gated output is then filtered to remove the pulses and recover the modulating signal.

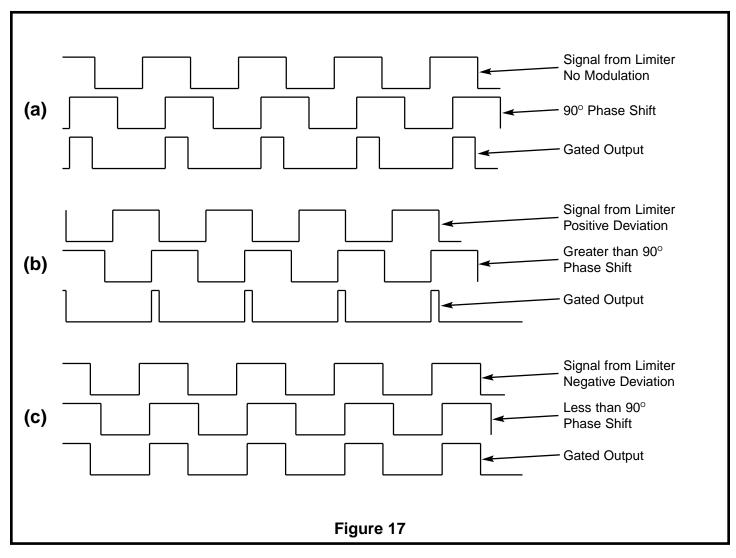

#### **ASSEMBLY INSTRUCTIONS FOR BLOCK 2**


Turn the switch OFF and remove the battery. Solder the parts to the PC board and put a check mark in the box (☑) next to each step after it is completed. The parts should be similar to the sketch in each box, but will differ in size. Be sure to check each solder point for shorts and cold solder connections. Be careful to prevent static discharge when handling the integrated circuit U1.

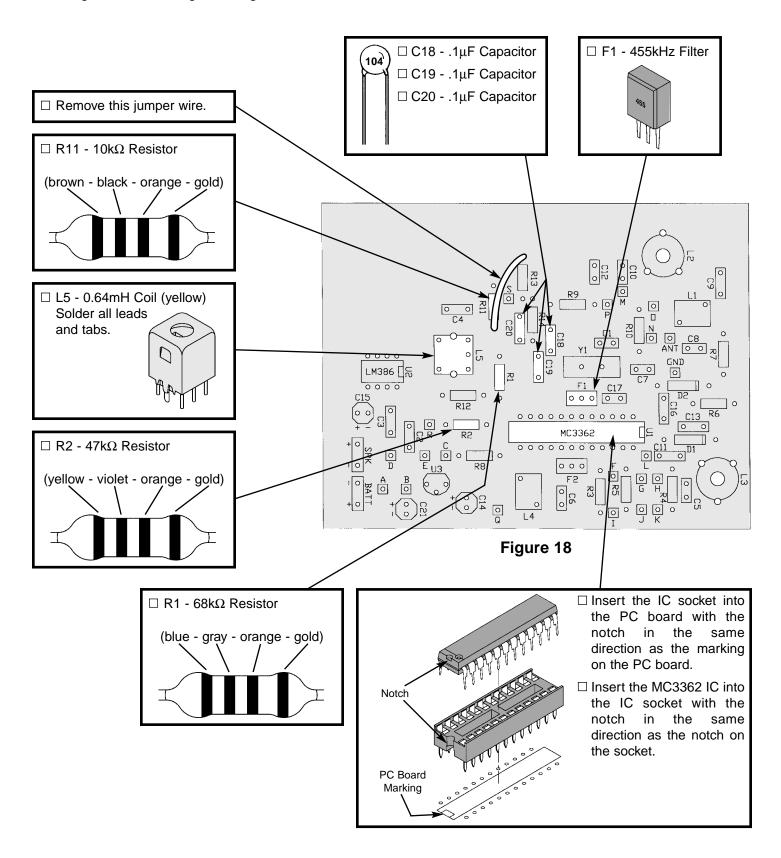

#### CONNECTING THE SQUELCH CONTROL TO THE PC BOARD

Cut two 3" pieces of wire from the roll of 22 guage soild wire and strip 1/4" of the insulation off of each end. Using these wires, solder the  $100k\Omega$  potentiometer (VR1) to the PC board and put a check mark in the box ( $\square$ ) after both wires are in

place. This part should be similar to the sketch shown in the box, but may differ in size. Be sure to mechanically connect each wire as shown in Figure 19 before soldering.

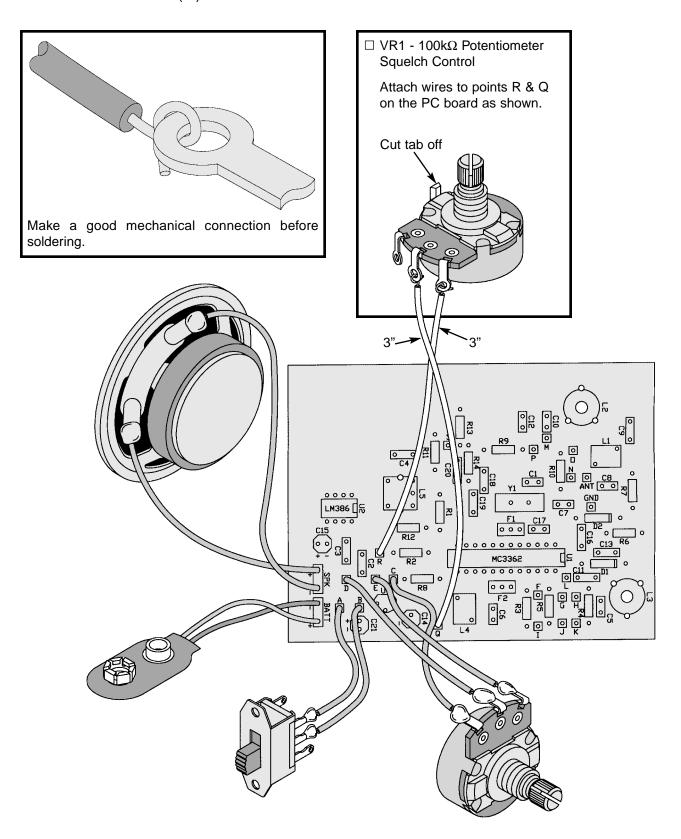

#### **TEST PROCEDURE - BLOCK 2**


#### **Procedure 3**

If you do not have a multimeter, skip to procedure 4.

#### **DC Test**

Make sure that the power switch is in the OFF position. Reconnect the 9V battery to the battery snap. Set the multimeter to read on the 20V scale and connect to the circuit as shown in Figure 20. Connect the positive voltage probe to pin 12 of the

integrated circuit U1. Connect the common probe to the negative lead from the battery. Turn the power ON. The multimeter should read between 4.5V and 5.5V. If not, turn off the power and check that coil L5 is correctly installed. Also, check for solder shorts, unsoldered leads, or an open copper run between the positive side of C14 and coil L5.

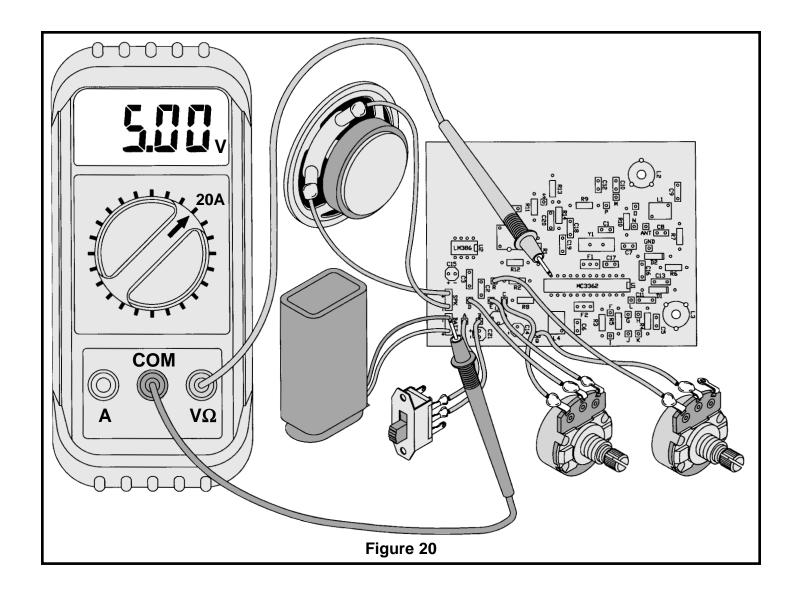


#### **AC Test**

If you do not have a signal generator, skip to procedure 4.

Make sure that the power switch is in the OFF Turn the squelch control fully position. Set the mulitmeter to read counterclockwise . 20VDC full scale and connect to the circuit as shown in Figure 21. Connect the positive voltage probe to pin 13 of integrated circuit U1. Connect the common probe to the negative lead from the battery. AC couple a generator capable of producing a 455kHz signal to pin 5 and attach the generator ground lead to the ground lead of the volume control (see Figure 21). Set the generator frequency to 455kHz and the amplitude to between 50 and 100mV peak to peak. Turn the power ON. Turn coil L5 to its maximum counterclockwise position. The multimeter should read approximately 2.4V. Turn L5 slowly clockwise. The multimeter voltage should rise to a maximum of about 3.0V, then fall to a minimum of about 1.5V and then rise again. Record the maximum (Vmax) and minimum (Vmin) voltages. Set L5 midway between Vmax and Vmin. For example, if Vmax = 2.95V and Vmin = 1.45V, set L5 to (Vmax + Vmin)/2 = (2.95 + 1.45)/2 = (4.40)/2 = 2.2V.

A small increase in generator frequency (positive deviation) should cause the DC voltage at pin 13 to drop. Likewise, a small increase in generator frequency (positive deviation) should cause the DC voltage to rise. Careful point-by-point plotting (use increments of about 1kHz) should reproduce a curve similar to the one shown in Figure 16. If not, turn the power OFF and check that the 455kHz filter F1 is installed correctly. Also check for solder shorts, unsoldered leads, and parts you may have missed in the block 2 assembly instructions.

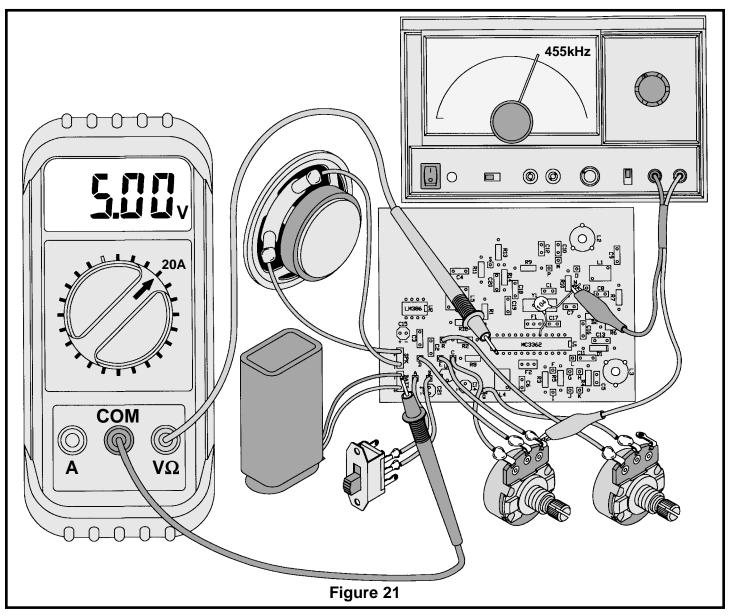

#### **Squelch Control Check**

The function of the squelch control is to eliminate static when there is no signal present. This control sets the level of passable signals. The squelch control works by raising the voltage to the (–) input to the audio amplifier and thus disabling the amplifier output.

The squelch control can be checked with the circuit shown in Figure 21. Turn the squelch control fully counterclockwise. Set the signal generator to 455kHz and the output amplitude to minimum.


Move the multimeter probe from pin 13 to pin 11 of U1. The voltage should be near 0V. Turn the squelch control clockwise until the voltage jumps to about 2.6V, disabling the audio amplifier. If the voltage does not jump, use a voltage divider to reduce the signal generator output to 5mV peak to peak and try again. If the voltage still does not jump, check the wiring to the squelch control pot. Also, be sure that the temporary jumper installed in block 1 was removed.

#### **Procedure 4**

If you do not have test equipment, it is possible to check block 2 with the following procedure:

- 1. Make sure that the ON/OFF switch is in the OFF position.
- 2. Reconnect the battery.
- 3. Turn the volume control fully clockwise.
- 4. Turn the squelch control fully counterclockwise.
- 5. Hold a  $0.1\mu F$  capacitor on pins 5 and 13 as shown in Figure 22.
- 6. Turn the power ON.

The audio should produce a hissing sound. Turning the squelch control clockwise should quiet the audio. If you do not get a hissing sound, check that the integrated circuit U1 is properly installed. Check that all of the leads installed in block 2 have been soldered and no shorts exist. If the hissing is present, but the squelch control does not remove it, check the leads going to the control and compare them to Figure 20.

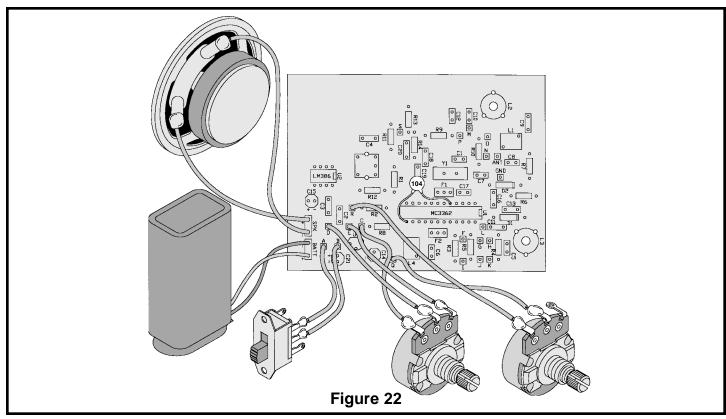

Turn the ON/OFF switch to the OFF position and remove the 9V battery. Before moving on to the next block, try answering the questions in Quiz 2 to see

if you missed an important fact about the operation of the second i-f, squelch control, or quadrature detector.

#### QUIZ 2

- 1. When no FM modulation is present, the incoming signal frequency is . . .
  - (a) DC
  - (b) fixed
  - (c) minimum
  - (d) maximum
- 2. An increase in the carrier frequency due to modulation is called . . .
  - (a) detection
  - (b) negative deviation
  - (c) positive deviation
  - (d) peaking
- 3. The amplifier known as the "limiter" is used to . . .
  - (a) remove noise
  - (b) detect FM signals
  - (c) increase audio output
  - (d) improve linearity
- 4. Lowering the value of the resistor across the quadrature coil will . . .
  - (a) reduce bandwidth
  - (b) remove noise
  - (c) improve gain
  - (d) improve linearity
- 5. Positive deviation will cause the gated output pulse to . . .
  - (a) decrease in width
  - (b) increase in width
  - (c) decrease in amplitude
  - (d) increase in amplitude

- 6. When the quadrature detector is made more linear by separating the peaks, the output . . .
  - (a) increases
  - (b) remains the same
  - (c) produces more distortion
  - (d) decreases
- 7. The function of the squelch control is to remove:
  - (a) high frequencies
  - (b) fading
  - (c) static during transmissions
  - (d) non-transmission static
- 8. A decrease in the carrier frequency due to modulation is called . . .
  - (a) detection
  - (b) negative deviation
  - (c) positive deviation
  - (d) peaking
- 9. An FM detector converts frequency changes to:
  - (a) DC changes
  - (b) resistance changes
  - (c) capacitance changes
  - (d) modulation index
- 10. The coil in the quadrature detector is used to produce . . .
  - (a) DC voltage
  - (b) phase shift
  - (c) frequency shift
  - (d) amplitude peaking

Answers: 1. b, 2. c, 3. a, 4. d, 5. a, 6. d, 7. d, 8. b, 9. a, 10. b

#### **BLOCKS 3 & 4 - CONVERTING TO 455kHz**

#### **Theory of Operation**


The first local oscillator should be set at 133.3MHz to 137.3MHz for the 2 meter band and 39.3MHz to 43.3MHz for the 6 meter band. This oscillator is free-running varactor-tuned. The first mixer converts the RF input to an i-f frequency of 10.7MHz. This i-f signal is then filtered through a ceramic filter and fed into the second mixer. If the oscillator of the second mixer is precisely set at 10.245MHz, it will produce an output containing the sum (20.945MHz) and the difference (0.455MHz or 455kHz) frequencies. This 455kHz signal is then sent to the limiter, detector, and audio circuits.

The mixers are doubly balanced to reduce spurious (unwanted) responses. The first and second mixers have conversion gains of 18 to 22dB respectively. Conversion gain is the increase in a signal after the signal has been converted to a new frequency and amplified. For both converters, the mixers are designed to allow the use of pretuned ceramic filters.


After the first mixer, a 10.7MHz ceramic bypass filter is used. This eliminates the need for special test equipment for aligning i-f circuits. The ceramic filter also has a better aging and temperature characteristic than conventional LC tuned circuits.

#### **ASSEMBLY INSTRUCTIONS FOR BLOCKS 3 & 4**

Turn the switch OFF and remove the battery. Solder the parts to the PC board and put a check mark in the box (☑) next to each part after it is installed. The parts should be similar to the sketch in each box, but will differ in size. Be sure to check each solder point for shorts and cold solder connections.

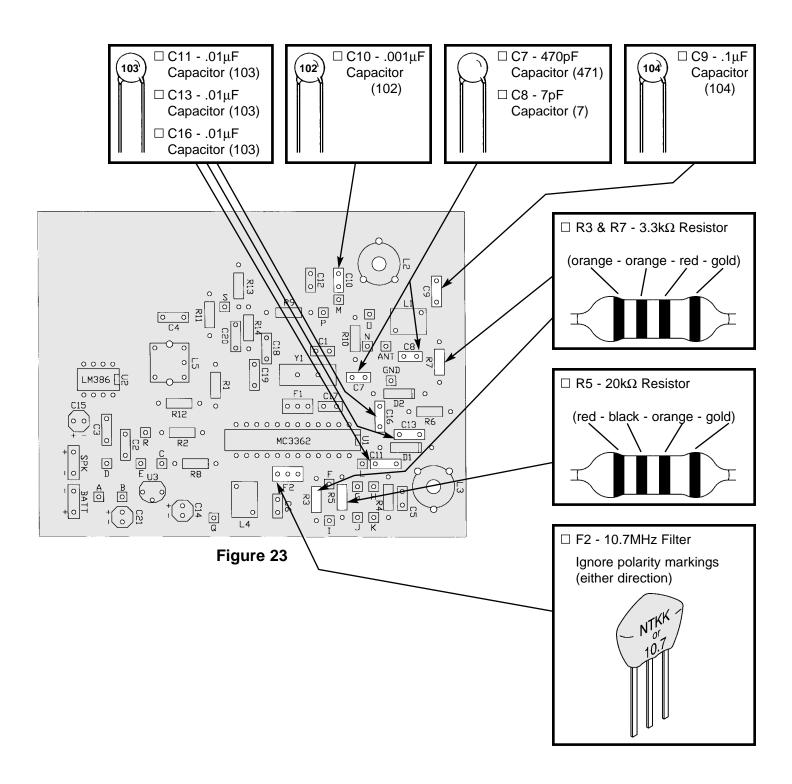


# **ASSEMBLY INSTRUCTIONS FOR BLOCKS 3 & 4 (Continued)**

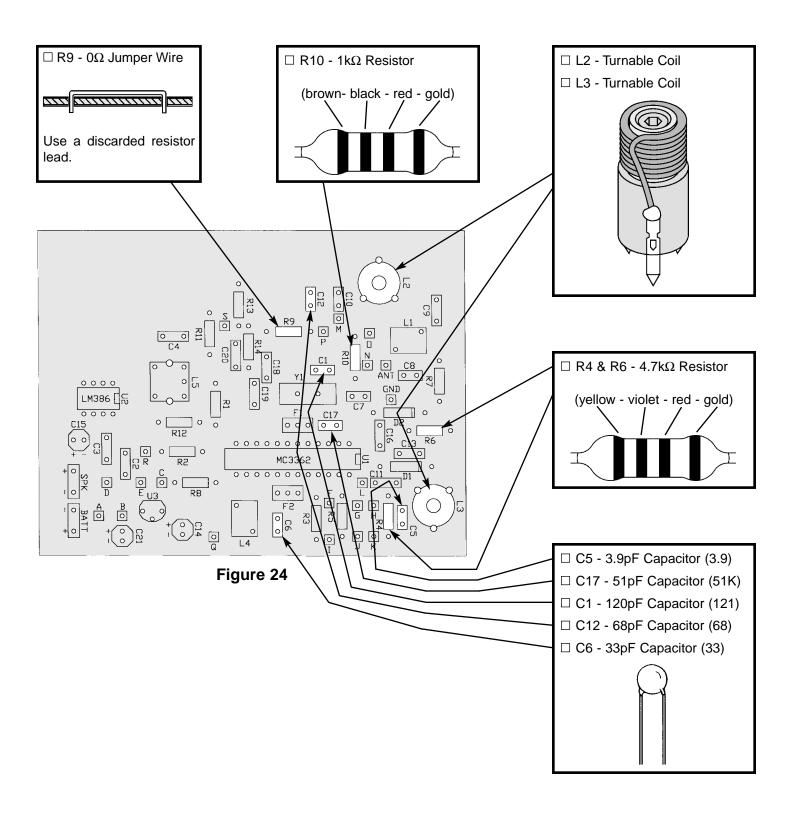


#### FINISHING PC BOARD ASSEMBLY


Cut three 3" pieces of wire from the roll of 22 gauge solid wire and strip 1/4" of insulation off of each end. Using these wires, solder the  $5k\Omega$  potentiometer (VR2) to the PC board and put a check mark in the box ( $\square$ ) after all of the wires are in place. This part should be similar to the sketch shown in the box, but may differ in size. Be sure to mechanically each wire as shown in the figure below before soldering.

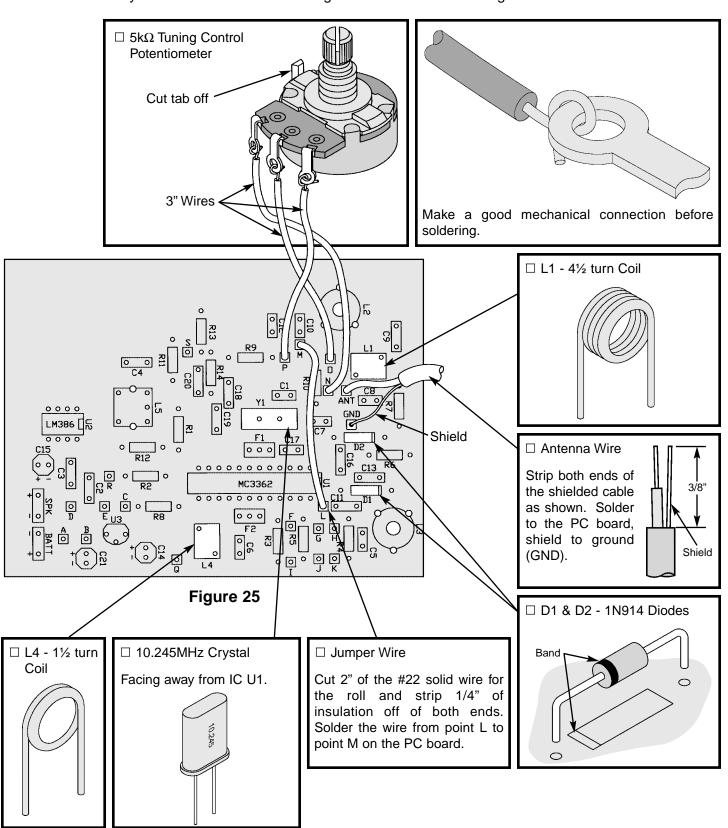

#### CONNECT COMPONENTS TO THE PC BOARD

- □ Cut six 1" pieces of 22 gauge wire and strip 1/4" of insulation off of each end. Connect the wires to the remaining DPDT switch as shown in Figure 26a.
- □ Insert the six wires into holes F through K and solder to the PC board as shown in Figure 26b.

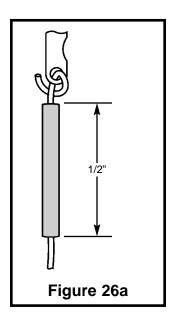


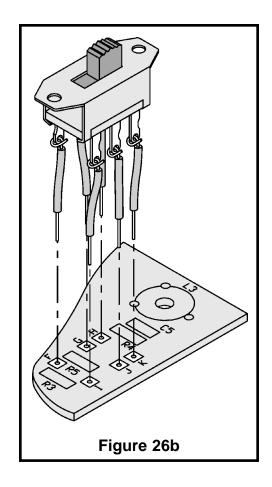



#### FRONT PANEL ASSEMBLY


- ☐ The speaker mounts behind the cluster of holes as shown in Figure 27. Using the three black 4-40 screws, 4-40 nuts and #4 internal tooth washers, mount the three small right angle brackets to the speaker mounting holes. The short side of the brackets should be against the panel. Place the speaker between the brackets with the terminals oriented as shown in Figure 28. Use a blunt tool to bend the brackets over the speaker as shown in Figure 29.
- ☐ Using the hardware shown, mount the phono jack as shown in Figure 27.
- ☐ Using the hardware shown, mount the ON/OFF switch, 2M/6M switch, Squelch pot, Volume pot, and Tuning pot to the front panel (see Figure 30). Orient the terminals as shown in Figure 28.
- □ Solder the loose end of the shielded cable to the phono jack, center conductor to the phono jack terminal and shield to the GND terminal.


- □ Peel the backing off of one side of the 1/2" wide, double-sided tape and stick it to the battery clamp as shown in Figure 31.
- ☐ Peel the backing off of the other side of the double-sided tape and stick it to the inside bottom of the plastic case as shown in Figure 28.
- ☐ With the power switch OFF, connect a 9V alkaline battery to the battery snap and put the battery into the battery clamp.
- ☐ When the final test and alignment (next section of manual) is completed, place the front plate on the plastic case and insert the four nylon plugs into the holes in each corner of the plate.

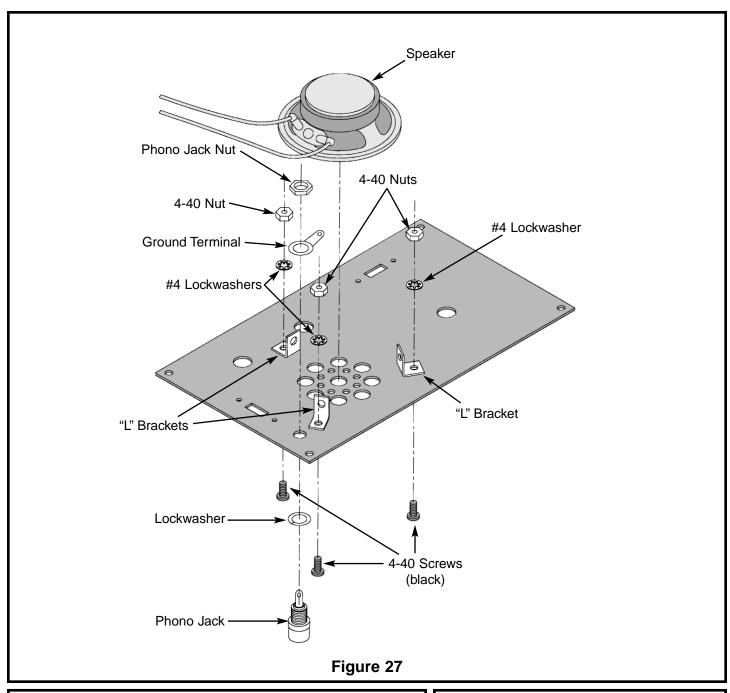

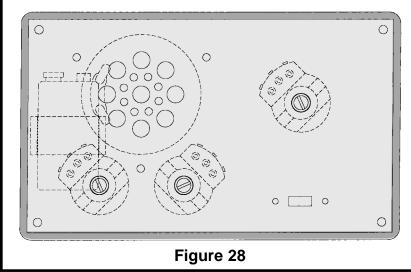

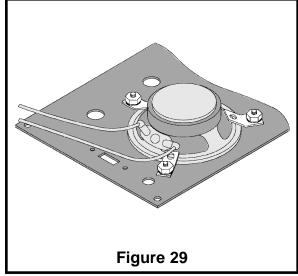

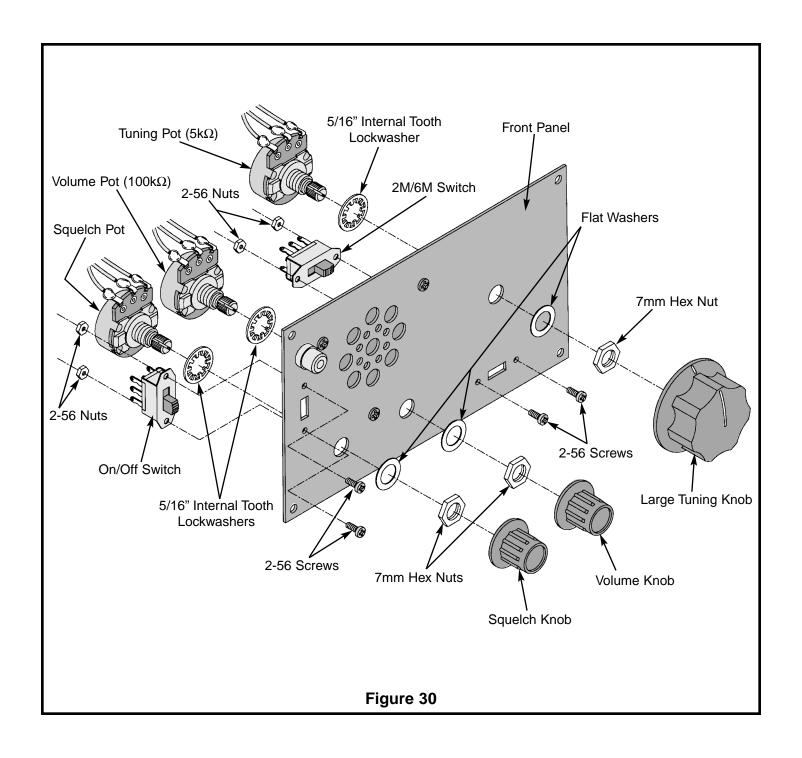

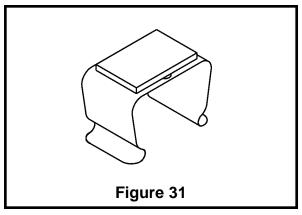

#### FINAL TEST AND ALIGNMENT

Attach a two foot or longer length of wire to the male RCA plug and connect it to the radio antenna jack. Install a fresh battery and turn the power ON. Make that the squelch control counterclockwise and the volume control is set at mid-position. A "rushing" noise should be heard from the speaker when no signal is present, which is normal. Slowly tune the radio on each band and listen for activity. Reception will only be possible if someone is transmitting. If you know someone with a 2M or 6M transmitter, you should test your receiver with known frequencies of transmission and adjust the high frequency oscillator for proper tuning of desired bands.

A calibrated RF generator may also be used to adjust the oscillators. Start with the 2 meter band. Loosely couple the output of the RF generator to the receiver input. Turn the tuning control on the receiver to the full counterclockwise position (lowest frequency). With the squelch control tuned fully counterclockwise (OFF), a "rushing" noise will be heard. Tune the RF generator until the receiver noise disappears and note the frequency on the generator dial. Next, rotate the receiver tuning control to the full clockwise position (higher frequencies). Repeat the above procedure to determine the upper frequency of your tuning range. If the range is too low, decrease L4 by spreading the turns. If the range is too high, substitute the 39pF capacitor with the 33pF capacitor in C6. Then, repeat both procedures to determine the upper and lower frequency limits. With a little perseverance, you should arrive at a range covering the 2 meter band (144 to 148MHz). Set the generator at different points (144, 145, 146, etc.) and tune the radio for quieting at each setting. Mark the dial with the appropriate values. Using the plastic alignment tool to adjust L3, follow the same procedure for the 6 meter band (50 to 54MHz).

**Note:** Before the receiver is properly adjusted, you may receive a broadcast from an FM station or TV station. These signals will be distorted because they are wide band FM transmissions and the AR-2N6 is a narrow band amateur receiver.

#### **More About Squelch**

The correct adjustment of the squelch control is to advance the control until the receiver noise is silenced. When the receiver is tuned across the band and a signal is found, the squelch will release and the transmission will be heard. As you continue tuning away from this signal, the squelch should again come into effect and "squelch" the receiver noise.

#### **Frequency Counter Measurements**

If a frequency counter is available, it can be used to measure the frequency of the local oscillator at pin 20 of U1. On the 2 meter band, the counter should read 133.3MHz to 137MHz, and on the 6 meter band, it should read 39.3MHz to 43.3MHz.

## **SCHEMATIC DIAGRAM**

