## UC-7112 Plus, UC-7112, UC-7110

## Hardware User's Manual

First Edition, May 2007

www.moxa.com/product



#### MOXA Systems Co., Ltd.

Tel: +886-2-2910-1230 Fax: +886-2-2910-1231 Web: <u>www.moxa.com</u>

#### **MOXA Technical Support**

Worldwide: <a href="mailto:support@moxa.com.tw">support@moxa.com.tw</a></a>
The Americas <a href="mailto:support@moxa.com">support@moxa.com.tw</a>

# UC-7112 Plus, UC-7112, UC-7110 Hardware User's Manual

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

#### **Copyright Notice**

Copyright © 2007 MOXA Systems Co., Ltd.
All rights reserved.
Reproduction without permission is prohibited.

#### **Trademarks**

MOXA is a registered trademark of The Moxa Group. All other trademarks or registered marks in this manual belong to their respective manufacturers.

#### Disclaimer

Information in this document is subject to change without notice and does not represent a commitment on the part of MOXA.

MOXA provides this document "as is," without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. MOXA reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, MOXA assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.

This product might include unintentional technical or typographical errors. Changes are made periodically to the information in this manual to correct such errors, and these changes are incorporated into new editions of the publication.

## **Table of Contents**

Chapter 1	Introduction	1-1
	Overview	
	Package Checklist	
	Product Features	
	Product Specifications	
	Hardware Specifications	
	Software Specifications	
	Hardware Block Diagram	
Chapter 2	Hardware Introduction	2-1
•	Appearance	
	Dimensions	
	Panel Views.	2-3
	LED Indicators	
	Internal SD Socket	
	Additional Functions.	2-4
	Reset Button	
	Real Time Clock	2-4
Chapter 3	Hardware Connection Description	3-1
•	Wiring Requirements	
	Connecting the Power	
	Grounding the UC-71xx Embedded Computer	
	Connecting Data Transmission Cables	
	Connecting to the Network	
	Connecting to a Serial Device	
	Serial Console Port	3-4
Appendix A	Service Information	A-1
	MOXA Internet Services	A-2
	Problem Report Form	A-3
	Product Return Procedure	

## Introduction

The MOXA UC-71xx series of embedded computers (UC-7112 Plus, UC-7112, and UC-7110) are mini, RISC-based, box-type computers that feature dual 10/100 Mbps Ethernet ports, two RS-232/422/485 serial ports, and an ARM9 processor. The computers come with Linux pre-installed. In addition, the UC-7112 Plus and UC-7112 have an internal SD socket for storage expansion to offer high performance communication with unlimited storage in a super-compact, palm-size box. The UC-71xx series of embedded computers are the right solution for embedded applications that call for a small computer, but that can store large amounts of memory and provide good computing performance.

In this chapter, we cover the following topics:

Overview
Package Checklist
<b>Product Features</b>
<b>Product Specifications</b>
➤ Hardware Specifications
➤ Software Specifications
Hardware Block Diagram

#### **Overview**

The UC-71xx series of mini, RISC-based communication platforms are ideal for embedded applications. All three computers in the series (UC-7112 Plus, UC-7112, and UC-7110) come with 2 RS-232/422/485 serial ports and dual 10/100 Mbps Ethernet LAN ports to provide users with a versatile communication platform.

The UC-71xx series computers use the MOXA ART ARM9 192 MHz RISC CPU. Unlike the x86 CPU, which uses a CISC design, the ARM9's RISC design architecture and modern semiconductor technology provide these computers with a powerful computing engine and communication functions, but without generating too much heat. The built-in NOR Flash ROM (16 MB for UC-7112 Plus, 8 MB for UC-7112/7110) and SDRAM (32 MB for UC-7112 Plus, 16 MB for UC-7112/7110) give you plenty of storage capacity, and the SD socket provides greater flexibility for running various applications. The dual LAN ports built into the ARM9 allow the UC-71xx computers to be used as communication platform for basic data acquisition and protocol conversion applications, and the two RS-232/422/485 serial ports allow you to connect a variety of serial devices.

The UC-7112 and UC-7110 come with the  $\mu$ Clinux operating system pre-installed, and the UC-7112 Plus comes with the Linux operating system with MMU support pre-installed. Software written for desktop PCs is easily ported to the UC-71xx computers with a GNU cross complier, so that you will not need to spend time modifying existing software code. The operating system, device drivers, and your own software can all be stored in the computers' Flash memory.

## **Package Checklist**

The UC-71xx series currently includes four models:

#### Standard Operating Temperature Models (-10 to 60°C)

#### UC-7112-LX Plus

Mini RISC-based Ready-to-Run Embedded Computer with 2 Serial Ports, Dual Ethernet, SD slot, Linux OS

#### UC-7112-LX

Mini RISC-based Ready-to-Run Embedded Computer with 2 Serial Ports, Dual Ethernet, SD slot,  $\mu Clinux\ OS$ 

#### UC-7110-LX

Mini RISC-based Ready-to-Run Embedded Computer with 2 Serial Ports, Dual Ethernet, μClinux OS.

#### Wide Operating Temperature Models (-40 to 75°C)

#### UC-7110-T-LX

Mini RISC-based Ready-to-Run Embedded Computer with 2 Serial Ports, Dual Ethernet,  $\mu$ Clinux OS, Wide Temperature

Each model is shipped with the following items:

- 1 UC-7112 Plus or UC-7112 or UC-7110
- Quick Installation Guide
- Document & Software CD
- 100 cm RJ45-to-RJ45 Ethernet cross-over cable
- 100 cm console port cable (CBL-4PINDB9F-100)

- Universal Power Adaptor
- Product Warranty Statement

#### **Optional Accessories**

• 35 mm DIN-Rail Mounting Kit (DK-35A)

NOTE: Please notify your sales representative if any of the above items are missing or damaged.

### **Product Features**

The UC-71xx series computers have the following features:

- MOXA ART ARM9 32-bit 192 MHz processor
- 32 or 16 MB RAM (about 12 MB of user programmable space)
- 16 or 8 MB Flash ROM (about 4 MB of user programmable space)
- Dual 10/100 Mbps Ethernet for network redundancy
- 2 software-selectable RS-232/422/485 ports
- Select Any Baudrate from 50 bps to 921.6 Kbps
- SD socket for storage expansion (UC-7112 Plus and UC-7112 only)
- Built-in RTC, Buzzer, WDT
- Built-in Linux Kernel 2.6 platform
- -40 to 75°C wide temperature models available (UC-7110 only)
- DIN-Rail or wall mountable
- Robust fanless design

## **Product Specifications**

## Hardware Specifications

System
--------

CPU MOXA ART ARM9 32-bit RISC CPU, 192 MHz

DRAM UC-7112 Plus: 32 MB

UC-7112: 16 MB UC-7110: 16 MB

Flash UC-7112 Plus: 16 MB

UC-7112: 8 MB UC-7110: 8 MB

Storage Expansion UC-7112 Plus: SD slot  $\times$  1

UC-7112: SD slot  $\times$  1

UC-7110: None

Console port RS-232 × 1 (TxD, RxD, GND), 4-pin header output, "115200, n, 8, 1"

Button Reset button × 1, supports "Reset to Factory Default"

Other RTC, buzzer, Watchdog Timer

OS UC-7112 Plus: Built-in Embedded Linux with MMU support, based on

Linux Kernel 2.6

UC-7112: Built-in μClinux, based on Linux Kernel 2.6 UC-7110: Built-in μClinux, based on Linux Kernel 2.6

**Network Communication** 

LAN  $10/100 \text{ Mbps RJ45} \times 2$ , auto-sensing

Protection 1.5 KV built-in magnetic isolation protection

**Serial Communication** 

Serial Port Software-selectable RS-232/422/485 DB9 male  $\times$  2

Protection 15 KV built-in ESD protection for all signals

Data bits 5, 6, 7, 8 Stop bit(s) 1, 1.5, 2

Parity None, Even, Odd, Space, Mark

Flow Control RTS/CTS, XON/XOFF, RS-485 ADDC<sup>TM</sup>

Speed 50 bps to 921.6 Kbps; ANY BAUDRATE supported

**LEDs** 

System Ready  $\times$  1

LAN 10 M/Link × 2, 100 M/Link × 2 (located on RJ45 connector)

Serial  $TxD \times 2$ ,  $RxD \times 2$ 

**Power Requirements** 

Power Input 12 to 48 VDC

Power Consumption 340 mA @ 12 VDC, 4.5 W

Mechanical

Dimensions (W $\times$ D $\times$ H) 77  $\times$  111  $\times$  26 mm (3.03  $\times$  4.37  $\times$  1.02 in)

Weight 190 g

Construction Material aluminum, 1 mm

Mounting DIN-rail, Wall-mounting

**Environment** 

Operating Temperature -10 to 60°C (14 to 140°F), 5 to 95% RH

-40 to 75°C (-40 to 167°F) for -T models

Storage Temperature -20 to 80°C (-4 to 176°F), 5 to 95% RH

-40 to 85°C (-40 to 185°F) for -T models

**Regulatory Approvals** 

EMC FCC, CE (Class A)

FCC Part 15, CISPR 22 Class A

CE Class A: EN55022 Class A, EN61000-3-2 Class A,

EN61000-3-3, EN55024

Safety TUV: IEC/EN60950

UL/cUL: UL60950, CAN/CSA-C22.2 No. 60950-00

Other RoHS, CRoHS, WEEE

Warranty 5 years

#### Software Specifications

#### Linux (UC-7112 Plus)

**Kernel Version:** 2.6.9 **Boot Loader:** Redboot

**Protocol Stacks:** TCP, UDP, IPv4, SNMP V1/V3, ICMP, IGMP, ARP, HTTP, CHAP,

PAP, SSH 1.0/2.0, SSL, DHCP, NTP, NFS, SMTP, Telnet, FTP, PPP,

PPPoE

File System: JFFS2 (on-board flash) for Kernel, Root File System (Read Only) and

User Directory (Read / Write)

System Utilities: bash, busybox, tinylogin, telnet, ftp, scp

**Supported Services and Daemons:** 

telnetd: Telnet Server daemon ftpd: FTP server daemon sshd: Secure shell server

Apache: Web server daemon, supports PHP and XML OpenVPN: Virtual private network service manager

iptables: Firewall service manager

pppd: dial in/out over serial port daemon & PPPoE

snmpd: snmpd agent daemon inetd: TCP server manager program

**Application Development Environment:** 

MOXA Linux API Library

Linux Tool Chain: Gcc, Glibc, GDB

Windows Tool Chain: Gcc, Glibc, Insight (Windows based source level

debug utility)

UC Finder: UC's LAN IP broadcast search utility for Windows and

Linux

**Device Drivers:** Watchdog Timer (WDT), UART, RTC, Buzzer, SD Card

#### μClinux (UC-7112 and UC-7110)

**Kernel Version:** 2.6.19

Protocol Stacks: TCP, UDP, IPv4, SNMP V1/V2c, ICMP, ARP, HTTP, CHAP, PAP,

DHCP, NTP, NFS, SMTP, Telnet, FTP, PPP, PPPoE

File System: JFFS2 (on-board flash) for Kernel, Root File System (Read Only) and

User Directory (Read / Write)

**System Utilities:** msh, busybox, tinylogin, telnet, ftp

**Supported Services and Daemons:** 

telnetd: Telnet Server daemon ftpd: FTP server daemon Boa: Web server daemon

pppd: dial in/out over serial port daemon & PPPoE

snmpd: snmpd agent daemon inetd: TCP server manager program

#### **Application Development Environment:**

MOXA Linux API Library Linux and Windows Tool Chain:

Arm-elf-gcc: C/C++ PC Cross Compiler


μClibe: POSIX Standard Library

UC Finder: UC's LAN IP broadcast search utility for Windows and

Linux

**Device Drivers:** UART, RTC, Buzzer, SD Card

## **Hardware Block Diagram**

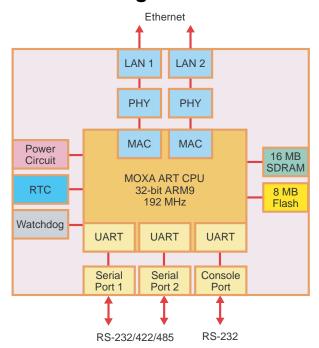

## **Hardware Introduction**

The UC-7112 Plus, UC-7112, and UC-7110 are compact, rugged embedded computers designed for industrial applications. The LED indicators on the computers' outer casing help you monitor the performance of the computers, and assist in identifying trouble spots. The hardware platform is both reliable and stable, and allows you to devote the bulk of your attention to developing your own application. In this chapter, we cover the basic hardware of the UC-71xx series embedded computers.


In this chapter, we cover the following topics:

- **□** Appearance **□** Dimensions **□** Panel Views **□** LED Indicators ☐ Internal SD Socket **□** Additional Functions ➤ Reset Button

  - ➤ Real Time Clock


## **Appearance**

The front view of the UC-7112 is shown in the following figure. The UC-7110 and UC-7112 Plus look the same, except that the UC-7110 does not have an internal SD slot.

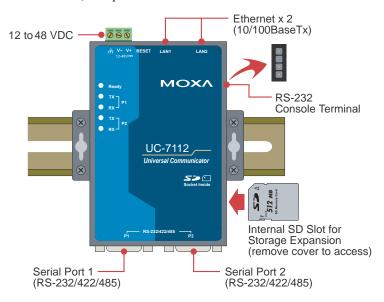


### **Dimensions**

The dimensions of UC-7112 Plus, UC-7112, and UC-7110 are exactly the same.

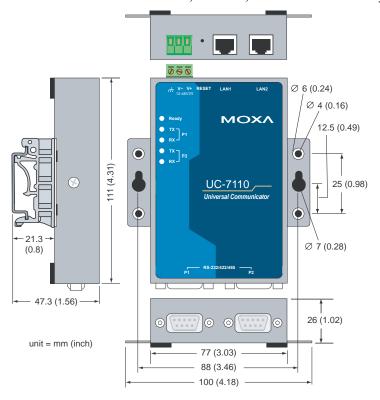

## **Panel Views**

The three main panel views of the UC-7112 Plus, UC-7112, and UC-7110 are shown below:

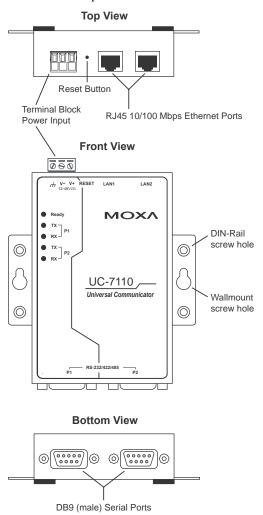

## **LED Indicators**

The following table shows the functions of the five LED indicators located on the front panel of the UC-71xx embedded computers.

LED Name	Name LED Color LED Function	
Ready	Green	Power is on and functioning normally.
P1/P2 (Tx)	Green	Serial port 1/2 is transmitting data.
	Off	Serial port 1/2 is not transmitting data.
P1/P2 (Rx) Yellow Serial		Serial port 1/2 is receiving data.
	Off	Serial port 1/2 is not receiving data.

#### Internal SD Socket

The UC-7112 Plus and UC-7112 have an internal SD socket for storage expansion. A Secure Digital (SD) memory card compliant with the SD 1.0 standard can be used to provide up to 1 GB of additional memory space. To install an SD card, first remove the outer cover of the embedded computer to access the SD slot. The internal SD slot is located on the back of the bottom board, in the slot on the right side of the UC-7112 and UC-7112 Plus, but lower than the cover screw. Plug the SD card into the socket directly and remember to "push in" the SD card first if you want to remove it.

#### **Additional Functions**

#### **Reset Button**

Press the "RESET" button continuously for more than 5 seconds to load the factory default configuration. After loading the factory defaults, the system will reboot automatically. The System Ready LED will blink for the first 5 seconds. We recommend that you only use this function if the software is not working properly. To reset the  $\mu$ Clinux system software, always use the software reboot command (reboot) to protect the integrity of data that is being transmitted. The reset button is NOT designed to Hard Reboot the UC-71xx series embedded computer.



#### **ATTENTION**

#### Restoring default settings preserves your data

Resetting the embedded computer to factory defaults will NOT cause the user directory to be reformatted, and the user's data will NOT be deleted. The reset button only causes a configuration file to be loaded. All files in the /etc directory will revert to their factory defaults, but all other user data will remain intact in the Flash ROM.

Please note that if there is a problem with the /etc directory, the embedded computer may be unable to restore the factory default settings.



#### **ATTENTION**

This function only takes effect when the user directory is working correctly. If the user directory has crashed, the kernel will automatically load the factory defaults.

#### Real Time Clock

The real time clock in the UC-71xx embedded computers is powered by a lithium battery. We strongly recommend that you get help from MOXA's technical support team to replace the lithium battery. If the battery needs to be changed, contact the MOXA RMA service team for RMA service.



#### **ATTENTION**

The battery may explode if replaced by an incorrect type. To avoid this potential danger, always be sure to use the correct type of battery.

## **Hardware Connection Description**

In this chapter, we show how to connect the UC-71xx embedded computer to the network and to various devices.

In this chapter, we cover the following topics:

#### **□** Wiring Requirements

- ➤ Connecting the Power
- ➤ Grounding UC-7112 Plus/7112/7110

#### ☐ Connecting Data Transmission Cables

- > Connecting to the Network
- > Connecting to a Serial Device
- ➤ Serial Console Port

## Wiring Requirements

This section explains how to connect the UC-71xx embedded computers to serial devices.

You should heed the following safety precautions before installing any electronic device:

 Use separate paths for power wiring and wiring for devices. If power wiring and device wiring paths must cross, make sure the wires are perpendicular at the intersection point.

**NOTE**: Do not run signal or communication wiring and power wiring in the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.

- Use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring that shares similar electrical characteristics can be bundled together.
- Keep input wiring and output wiring separate.
- It is advisable to label the wiring to all devices in the system.



#### **ATTENTION**

#### Safety First!

Be sure to disconnect the power cord before installing and/or wiring your UC-71xx embedded computer.

#### Wiring Caution!

Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size.

If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

#### **Temperature Caution!**

Be careful when handling the UC-71xx embedded computer. When plugged in, the computer's internal components generate heat, and consequently the outer casing may feel hot to the touch.

## Connecting the Power

Connect the "live-wire" end of the 12-48 VDC power adaptor to the UC-71xx's terminal block. If the power is supplied properly, the "Ready" LED will glow a solid green color after a 25 to 30 second delay.


## Grounding the UC-71xx Embedded Computer

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground wire from the ground screw to the grounding surface prior to connecting devices.



#### **ATTENTION**

This product should be mounted on a well-grounded mounting surface such as a metal panel.

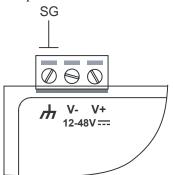

**SG**: The *Shielded Ground* (sometimes called Protected Ground) contact is the left most contact of the 3-pin power terminal block connector when viewed from the angle shown in the figure at the left. Connect the SG wire to an appropriate grounded metal surface.

## **Connecting Data Transmission Cables**

This section describes how to connect the UC-71xx to the network, to serial devices, and to a serial COM terminal.


### Connecting to the Network

Connect one end of the Ethernet cable to the UC-71xx's 10/100M Ethernet port, and the other end of the cable to the Ethernet network. If the cable is properly connected, the UC-71xx will indicate a valid connection to the Ethernet in the following ways:

- The top-right LED on the connector glows a solid green when connected to a 100 Mbps Ethernet network.
- The top-left LED on the connector glows a solid orange when connected to a 10 Mbps Ethernet network
- The LEDs will flash when Ethernet packets are being transmitted or received.

The 10/100 Mbps Ethernet LAN 1 and LAN 2 ports use 8-pin RJ45 connectors. Pinouts for these ports are given in the following diagram.

8-pin RJ45

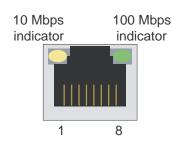


Pin	Signal	
1	ETx+	
2	ETx-	
3	ERx+	
4		
5		
6	ERx-	
7		
8		

## Connecting to a Serial Device

Connect the serial cable between the UC-71xx and the serial device(s).

The two serial ports (P1 and P2) use male DB9 connectors, and can be configured for RS-232/422/485 by software. The pin assignments are shown in the following table:

#### **Male DB9 Port**

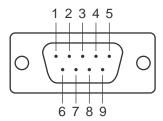

#### RS-232/422/485 Pinouts

Pin	RS-232	RS-422	RS-485 (4-wire)	RS-485 (2-wire)
1	DCD	TxDA(-)	TxDA(-)	
2	RxD	TxDB(+)	TxDB(+)	
3	TxD	RxDB(+)	RxDB(+)	DataB(+)
4	DTR	RxDA(-)	RxDA(-)	DataA(-)
5	GND	D GND GN		GND
6	DSR			
7	RTS			
8	CTS			

#### Serial Console Port

The serial console port is a 4-pin pin-header RS-232 port. It is designed for serial console terminals, which are useful for identifying the UC-71xx's boot up message.

#### **Serial Console Port & Pinouts**



Pin	Signal
1	TxD
2	RxD
3	NC
4	GND

#### **Serial Console Cable**





## **Service Information**

This appendix shows you how to contact MOXA for information about this and other products and how to report problems.
In this appendix, we cover the following topics.

- **☐** MOXA Internet Services
- ☐ Problem Report Form
- **☐** Product Return Procedure

## **MOXA Internet Services**

Customer satisfaction is our primary concern. To ensure that customers receive the full benefit of our products, MOXA's website is a good source of technical information, and provides a convenient means for contacting MOXA's technical support personnel.

#### The following services are provided

Tech support email ......support@moxa.com (Global)

## **Problem Report Form**

## MOXA UC-7112 Plus, UC-7112, UC-7110

Cı	Customer name:						
Co	Company:						
Te	l:	Fax:	Fax:				
Email:		Date:	Date:				
1. 2.	MOXA Product: ☐ UC-7112 Plus Serial Number:	□ UC-7112	□ UC-7110				
me	oblem Description: Please describe the sympssages you see. A clearly written description pedite the repair of your product.						

### **Product Return Procedure**

For product repair, exchange, or refund, the customer must:

- ♦ Provide evidence of original purchase.
- ♦ Obtain a Product Return Agreement (PRA) from the sales representative or dealer.
- Fill out the Problem Report Form (PRF). Include as much detail as possible for a shorter product repair time.
- ♦ Carefully pack the product in an anti-static package, and send it, pre-paid, to the dealer. The PRA should be visible on the outside of the package, and include a description of the problem, along with the return address and telephone number of a technical contact.