

Get *Started*

All you need to know to get going.

Samsung
GALAXY **Tab** 2
10.1



Welcome!


Sprint is committed to developing technologies that give you the ability to get what you want when you want it, faster than ever before. This booklet introduces you to the basics of getting started with Sprint and your Samsung Galaxy Tab 2 10.1.


*For more help with your new tablet, take advantage of an extensive array of resources at **sprint.com/support**. There, you'll find guides, tutorials, and more to help with basic setup, maximizing performance, and personalizing your tablet.*


Note: Available applications and services are subject to change at any time.


Using This Guide

This Get Started guide is designed to help you set up and use your new Samsung Galaxy Tab 2 10.1. It's divided into four sections to help you find the information you need quickly and easily.

 **Get Ready** — page 1 — *Find out what you need to do before you use your tablet, the first time, including activating Sprint service on your device.*

 **Android Basics** — page 4 — *Learn some basics about how to move around on your tablet, use the home screen, and enter text. If you're familiar with Android devices, you can probably skip these pages (although a refresher course never hurt anyone).*

 **Use Your Tablet** — page 13 — *Take advantage of your tablet's features and Sprint services, from the basics (Going Online) to the more advanced (using Google Play™, WiFi, and more).*

 **Tools & Resources** — page 26 — *Find useful tips for your tablet and discover resources and other helpful Sprint information. For additional information including the full User Guide, videos, tutorials, and community forums, visit sprint.com/support.*

Your Samsung Galaxy Tab 2 10.1




Get Your Tablet Ready

Charge the Battery

1. Slide the AC adapter (plug) into the charging head, and then insert the USB cable into the charging head.
2. Insert the broad end of the USB cable into the charger/accessory jack at the bottom of the tablet.
3. Plug the charging head into a standard AC power outlet.


Turn the Tablet On

- Press and hold the power button .

Unlock the Screen

- Swipe the screen with your finger to unlock it.

Turn the Screen On and Off

- To quickly turn the display screen off, press the power button  on the top left side of the tablet.
- To turn the screen on and display the unlock screen, press the power button.

Turn the Tablet Off

- Press and hold the power button  and then tap **Power off** > **OK** to turn the tablet off.

Activate Your Tablet

Activate Your Tablet

- If you purchased your tablet at a Sprint Store, it is probably activated and ready to use.
- If you received your tablet in the mail, and it is a new Sprint account or a new number, your tablet is designed to activate automatically when you first turn it on. You will see a **Hands Free Activation** screen at startup. When it's finished, tap **OK** to continue. To confirm your activation, launch the Web browser.

- If you received your tablet in the mail and it is going to be activated on an existing number (you're swapping tablets), go to sprint.com/activate and follow the instructions. When you have finished, launch the Web browser to confirm your activation.

If your tablet is still not activated or you do not have access to the Internet, contact Sprint Customer Service at **1-888-211-4727** for assistance.

Set Up Your Tablet

Once activated, your tablet guides you through various setup options, including setting up your Google™ Account.*

Complete the Setup Screens




1. When you see the **Samsung Galaxy** screen, select a language and tap **Start** to begin.
2. Follow the prompts on the next few screens to get your tablet set up. Tap **Skip** or **Next** to continue.
 - **Samsung account** - Create or sign in to a Samsung user account.
 - **Make it Google** - Create or sign in to a Google Account. Select additional Google preferences, including backup and restore, and Google Location options, as prompted.
 - **This tablet belongs to...** - Enter your name to personalize your experience.

3. Tap **Finish**. You will see the Home screen with a few helpful navigation tutorials.

** You do not need to sign up for a Google Account to use your tablet; however, to download content from the Google Play™ Store app, you must link your tablet to a Google Account.*

Sprint Connections Optimizer

During or following the initial setup, you may see a Sprint Connections Optimizer notice. Read the notice and touch **I Agree** to allow your tablet to connect automatically to the best available data network, including WiFi.

Note: You can turn off Sprint Connections Optimizer at any time. Touch  >  > **Settings**  > **More settings** > **Mobile networks** > **Connections optimizer** and uncheck the box.

Android Basics: Getting Around Your Tablet

 
Move Around Menus and Screens

Your tablet's touchscreen lets you control everything through various types of touches, or gestures.

Tap: When you want to type using the onscreen keyboard, select items such as application and settings icons, or press onscreen buttons, simply tap them with your finger. A light touch works best.

Touch and hold: To display the available options for an item simply touch and hold the item.

Flick: Move your finger in lighter, quicker strokes than swiping. This finger gesture is always used in a vertical motion, such as when flicking through contacts or a list.

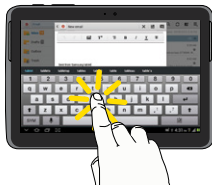

Tap



Touch and hold



Flick

Swipe: Quickly drag your finger vertically or horizontally across the screen.

Drag: Press and hold your finger with some pressure before you start to move it. Do not release your finger until you have reached the target position.

 
Rotate: Activate the auto-rotate feature to automatically change the screen orientation from portrait to landscape by turning the tablet sideways.

Slide: This feature allows you to enter text by sliding a finger from letter to letter, lifting only between words. See page 10 for instructions on using this continuous input method with the various keyboard types.



Swipe or slide,
Drag

Rotate

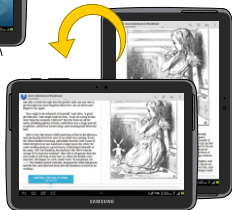


Slide



Your Home Screen

 
Viewing Your Home Screen

Your tablet's Home screen extends horizontally up to seven full screens. This gives you room to customize your tablet and put the things you need front and center, just a swipe away.

- To display the main (center) Home screen, tap  from any screen.
- To view extended screens, swipe the screen left or right. There are up to three additional screens on each side of the main Home screen.
- To display thumbnails of all available screens, pinch any home screen. Tap a thumbnail to display any screen.

Status Bar

The status bar at the bottom of the Home screen lets you quickly see both your tablet status (connections, signal strength, battery, GPS) and any current notifications.

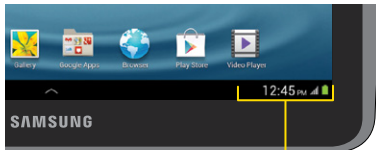

Notification and
Status area

Notifications Panel

You can expand the notification area to provide more detailed information about the current onscreen notification icons.

1. Flick the notifications panel up to see your notifications.
2. Tap a notification entry to open the associated application.



 
Add Items to Your Home Screen

1. Touch and hold an empty area on a home screen.
2. Tap an option under **Add to Home screen**.
 - **Apps and widgets** to add an app shortcut or a widget to the home screen. From the next screen, tap **Apps** and then touch and hold an app icon and drag it to the home screen to add a shortcut. Tap **Widgets** and drag a widget to the home screen to add a widget.
 - **Folder** to add a folder to the home screen. Type a folder name and tap **OK** to add the folder.
 - **Page** (if available) to add a new home screen. Your tablet can support up to seven home screens.

Buttons and Keys

Buttons and Keys

The lower left corner of your tablet contains static button icons that let you perform basic functions. In the center of the bottom row, an arrow icon lets you display a row of customizable mini-apps that you can access from any screen.

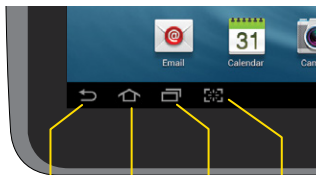

BACK
key

HOME
key



Recent
Apps

 
Screen
Capture

- **Back key** (🔍) – Tap to return to the previous screen view.
- **Home key** (🏠) – Tap to return to the main Home screen.
- **Recent apps** (📄) – Tap to open a list of recently used apps.
- **Screen Capture** (📷) – Tap to take a picture of your current screen.

***Note:** Screen capture is the default action for the fourth button icon. This icon can be customized through the settings menu as a shortcut for Screen capture, Applications, Search, or Camera. Tap 🏠 > 📱 > Settings ⚙️ > Display > Quick launch and tap an option to assign it.*


Open Apps

- If an app is on one of your Home screens, just tap it to open it.
- If an app is not available from your Home screen, tap  >  to display the apps list, and then tap the app icon from the list. You may have to scroll right or left to find the app you're looking for.

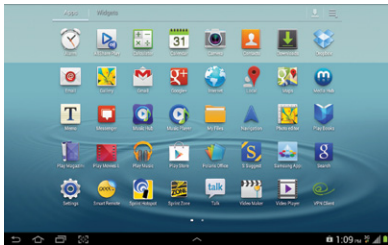

Access Recently-Used Apps

Your tablet keeps a running list of your most recently used apps.


1. Tap  to open the recently-used apps window.
2. Tap an icon to open an app.




Entering Text With the Onscreen Keyboard

Your QWERTY Keyboards


Your Samsung Galaxy Tab 2 10.1 comes loaded with two QWERTY keyboards: Samsung keyboard (default) and Swype. When you select a field that requires text or numbers, an onscreen keyboard will appear. (If you don't see the keyboard when, for instance, you're entering contact information, just touch the field you're working on to bring it up.) The tablet's onscreen QWERTY keyboards can be used in either portrait or landscape mode.

***Note:** To switch between keyboard types, tap the **keyboard icon**  in the notifications area in the lower right corner of the screen and then tap the method you want to use.*

***Note:** You can also use **Google voice typing** to enter text. This voice-to-text option lets you speak words which are then translated into onscreen text. From a text entry screen, tap  > **Google voice typing** to select it.*

Typing with Samsung Keyboard

Entering text using the traditional Samsung QWERTY keyboard is easy: just touch the letters to type the words.

1. From a screen where you can enter text, touch the input field to reveal the onscreen keyboard.
2. If needed, select a text mode option: **ABC** to enter alphabetic characters or **SYM** to enter symbols or punctuation.
3. Touch the corresponding onscreen keys to begin typing.
 - If you make a mistake, touch  to erase.

***Note:** With Samsung keyboard, you can also enter text by sliding your finger continuously over the keyboard. Select the **T9 Trace** option in the keyboard settings to enable this option.*

Using Swype to Enter Text

Swype lets you enter words by tracing over the letters in a single motion.

1. Touch an onscreen character, and then, while maintaining your finger onscreen, drag to the next character in the desired word.
2. Repeat this process until the desired characters have been drawn over. Select from an onscreen list of possible word matches (if prompted). This occurs if your current action has generated more than one possible word match.

Entering Text With the Onscreen Keyboard

Your Keyboard Settings

You can customize your onscreen keyboard settings to suit your needs:

Tap  >  > **Settings**  > **Language and input**, and tap the Settings icon  next to either of the keyboard options (**Samsung keyboard** or **Swype**).

Different keyboards will provide different options.

The **Samsung keyboard** options include the following:





- **Input languages** lets you select an input language. Default is English.
- **Predictive text** toggles on or off to let you select whether or not you want to see possible word matches when you're typing.
- **My word list** lets you add words to the list used by Predictive text.
- **T9 Trace** Check or uncheck to turn Android keyboard slide entry on or off. If it's off, you will enter text by tapping the letters one at a time as with a traditional keyboard.

- **Handwriting** lets you set handwriting options and see tutorials and guides about using handwriting on your tablet.
- **Voice input** displays or hides the voice entry button on the keyboard.
- **Auto capitalization** automatically capitalizes the first letter in a sentence.
- **Auto-punctuate** lets you enter a period and a space by tapping the space bar twice.
- **Character preview** shows an image of the character key as you're typing.
- **Key-tap sound** turns sound on or off when typing.
- **Tutorial** provides an overview of text entry options on your Galaxy Tab 2 10.1.
- **Reset settings** lets you return all keyboard settings to factory defaults.




Use Your Tablet: Contacts



Your tablet's Contacts function lets you access and manage contacts from a variety of sources, including Google and Corporate email accounts, contacts synced from your computer, and old-fashioned contacts entered by hand.

Add a New Entry to Contacts

1. Tap  >  > **Contacts** .
2. Tap .
3. Select an account for the contact. Select **Google** to save the contact to your Google Account, which will update automatically across all your Google devices. Select **Device** to save the contact to your tablet only.
4. Tap any field and use the onscreen keyboard to enter the name, phone number, and other contact details.
5. Add more data fields or a picture if desired, and tap **Save**.

Edit a Contact Entry

1. Tap  >  > **Contacts**  > [contact you'd like to edit].

2. Tap .
3. Tap an option:
 -  to assign a picture to the entry.
 - **Name** to edit the current name.
 - **Phone** to add or delete a phone number.
 - **Email** to add or delete an email address.
 - **Address** to enter a physical address for the contact. Choose from **Home**, **Work**, **Other**, or **Custom**.
4. Tap **Save** to save your updates.

***Note:** To add a phone number, email address, or other field to an existing contact, tap **Add another field** at the bottom of the entry and select a data type.*






Your tablet's Email applications let you access and manage multiple email accounts simultaneously in one convenient location. Although there is a separate Gmail application, the main email application can manage both Internet-based email services (Gmail™ and Yahoo™) and Corporate Work Email (Outlook®). The tablet can also be manually configured to connect to other email systems.

Set Up a Gmail Account






1. Tap  >  > Gmail .
2. Follow the instructions to set up or sign in to a Gmail account.

***Note:** Although you need a Gmail account to use certain features such as Google Play™, you do not have to use Gmail as the default account for your tablet.*

Set Up a POP3/IMAP Email Account






1. Tap  >  > Email .
2. If another email account is already set up, tap  > Settings  > Add Account.
3. Enter the **Email address** and **Password** for the email account.
4. Tap **Next** and follow the onscreen instructions.

Set Up a Microsoft Exchange ActiveSync Account

1. Tap  >  > Email .
2. If another email account is already set up, tap  > Settings  > Add Account.
3. Enter your **Email address** and **Password** information and then tap **Manual setup**.
 - Contact your Exchange Server administrator for required sign-in information.
4. Tap **Microsoft Exchange ActiveSync**.









5. When prompted to provide additional detailed information, scroll down the screen and tap **Next**.
6. Enter a **Domain\user name**, **Password**, and **Exchange server** information.
7. Read the onscreen activation disclaimer and, if prompted, tap **Next**.
8. Configure your **Email check frequency**, **Amount to synchronize** (days to synchronize between your tablet and server), and activate any other email settings, and then tap **Next**.
9. Identify your new account with a unique name and provide the outgoing name text then tap **Done**.

Access Email Messages

1. Tap  >  > **Email**  or **Gmail** .
- If necessary, tap the selection arrow () and tap the email account you want to use.

2. From the inbox, tap the message you want to view.





Send an Email Message

1. Tap  >  > **Email**  or **Gmail** .
2. If necessary, tap the selection arrow () and tap the email account you want to use.
3. Tap .
4. Enter an email address in the **To:** field.
5. Enter a subject and a message.
 - To add attachments, tap  (on the top of the screen) and select an attachment.
6. Tap .








Camera & Camcorder








Take a Picture

1. Tap  >  > Camera .
2. Using your display as a viewfinder, aim the camera lens at your subject, and tap .

View Pictures

1. Tap  >  > Gallery  to view the Camera folders.
2. Tap a picture and then tap  to explore other options. For sharing photos, tap  at the top of the screen.

Record a Video

 
1. Tap  >  > Camera , and then toggle the control from camera  to camcorder .
2. Using the tablet's display screen as a viewfinder, aim the lens at your subject, and tap  to begin recording.
3. Tap  to stop recording.

View videos

1. Tap  >  > Gallery .
2. Tap a video icon to view the video.



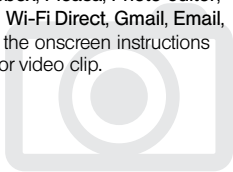

Share Pictures and Videos

1. Tap  >  > Gallery .
2. Tap **Camera** to reveal your pictures and videos, and then press and hold a picture or video to send.
3. Tap  and select any of several methods such as **Group Cast**, **Dropbox**, **Picasa**, **Photo editor**, **Google+**, **Bluetooth**, **Wi-Fi Direct**, **Gmail**, **Email**, or **Facebook**. Follow the onscreen instructions to send your picture or video clip.



Find sports scores, news, and weather. Shop online. On-the-go access lets you browse full-color versions of your favorite websites.

Go Online

1. Tap  >  > **Internet** .
2. From the opening page, tap the address bar and enter a website address.
 - Tap a link to open it.
 - For more options, tap  from any page. Options may include **New tab**, **New incognito tab**, **Add shortcut to home screen**, **Share page**, **Find on page**, **Desktop view**, **Save for offline reading**, **Downloads**, **Print**, and **Settings**.
 - To scroll, slide your finger up or down the page.
 - To zoom in or out, pinch the screen.

Downloading Apps From the Web




You can download Apps while browsing the Web, but you must first set permissions in settings to allow applications from unknown sources. Applications downloaded from the Google Play Store app (see page 19) do not require additional permissions.

1. Tap  >  > **Settings**  > **Security**.
2. Tap the **Unknown sources** check box.
3. When the Attention dialog box opens, read the disclaimer and tap **OK**.


Connect to a Wi-Fi Network

When you're in range of an available Wi-Fi network you can use your tablet's Wi-Fi feature to access the Internet and other data services.

***Note:** You may already have signed in to Wi-Fi during the tablet's setup process.*

1. Tap  >  > **Settings** .
2. Tap the icon next to **Wi-Fi** and slide to the "on" position to turn Wi-Fi on.
3. Tap **Wi-Fi** and then tap **Scan** to display a list of available networks.

4. Tap a Wi-Fi network to connect. If necessary, enter the security key (password) and tap **Connect**.

- When you're connected to a Wi-Fi network, you'll see the Wi-Fi icon () in the status bar.






***Note:** To quickly toggle Wi-Fi on or off, flick the Notifications panel up from any screen and tap **Wi-Fi**. You can also toggle **Bluetooth**, **GPS**, **Sync**, and **Screen rotation** from the panel menu.*



Google Play™ Store App

Google Play™ is the place to go to find new Android apps, books, movies, and music for your tablet.




Download Apps and Games

1. Tap  >  > Play Store .
2. The first time you visit the Google Play Store app, tap **Accept** to accept the Terms of Service.
3. To find what you want quickly:
 - Browse through featured apps and games. Scroll through the options or browse by categories within **Apps, Music, Magazines, Movies & TV, Books, or Games**.
 - Search for an app or game. Tap  at the top of the Google Play Store app home screen, enter the name or key word, and then tap  in the dropdown list.
4. Tap an app or game to read a description and user reviews.

5. Tap **Install** (for free apps) or the price (for paid applications) and follow the onscreen prompts.











***Note:** You must have a Google (Gmail) Account set up on your tablet to purchase and download applications from the Google Play Store app.*

Opening Installed Apps and Games






- Tap  > . Locate the downloaded item and tap it to launch. You can also launch from **Play Store** >  > **INSTALLED** tab > [app] > **Open**.

Google™ Mobile Services





Your Galaxy Tab 2 10.1 provides easy access to a variety of Google services including Gmail™, Google Talk™, Google Maps™, Google Navigation, and YouTube™.

- **Gmail** – The Google mail service. Your Gmail account lets you access many Google-related services as well as the Google Play™. (See “Set Up a Gmail Account” on page 14.)
- **Google Talk** – Google’s instant messaging service. Tap  >  > **Talk**  to begin using the service. (If you’re signed in to your Gmail account, you are already signed in to Google Talk.)
- **Google Maps** and **Google Navigation** – The Google location programs let you track your current location, view real-time traffic situations, and receive detailed directions to your destination. They also provide search tools where you can locate places of interest or an address on a vector or aerial map, or view locations in street level. Tap  >  > **Maps**  or **Navigation**  to begin using the services.
- **YouTube** – View and share videos on one of the Web’s most popular video sites. Tap  >  > **YouTube**  to browse through and view available videos. Sign in with your Gmail account to upload your own videos.

Pair and Connect With a Bluetooth®-Capable Device

1. Verify your Bluetooth is active. (Tap  >  > **Settings**  > **Bluetooth** and tap the ON/OFF slider to ON to turn on Bluetooth.)
2. From the Bluetooth settings page, tap the check box next to your tablet's name to make it discoverable by other devices. Your tablet must be visible to successfully pair with an external device.
3. Tap **Scan**. (Your tablet will display a list of discovered in-range Bluetooth devices.)
4. Tap a device from the list to initiate pairing.
5. Enter the passkey or PIN code, or verify the shared key, and tap **OK**.
6. The external device will then have to also accept the connection and enter your tablet's PIN code.
7. Once you're paired with a device, your connection should launch. The  or  show your current connection status.

Share Contacts, Files, or Pictures Using Bluetooth

1. Open the application containing the file you want to share (for example, tap  >  > **Contacts** ).
2. Locate the file or entry you want to share.
 - You can send pictures and videos directly from the camera or from Gallery, Calendar events, Contacts (as vCards), music tracks, and voice recordings. Not all devices will be able to receive all file types.
3. Depending on the application, tap  > **Bluetooth** or press and hold the file and select **Share** (or **Send**) > **Bluetooth**.
4. Tap the name of the device to which you're sending the file. (If prompted, tap **Yes** to turn Bluetooth on.)




Adding Music to Your Music Folder

Before you can listen to music with the **Music** application on your tablet, you will need to load songs into your Music folder.

1. Use the supplied USB cable to connect your tablet to an available USB port on your computer.
2. When you see the USB icon in the Notifications status, flick open the Notifications panel and make sure **Connected as a media device** is the selected mode.
3. On your computer, locate the your tablet's internal storage, and open or create the Music folder.
4. Copy music files from your computer to the music folder.

5. When you are done, follow your computer's procedures to safely remove the drive, and then disconnect the tablet from the USB cable.

Listening to Music

1. Tap  >  > Music Player .
2. Tap **Songs, Playlists, Albums, Artists, Genres, Folders, Composers, Years, or Music square.**
3. Tap a song to begin playing.
 - Use the controls at the bottom or the side to play, pause, or skip songs.




***Note:** Your tablet includes additional music playing options, including Google Play™ Music (**Play Music**) and Sprint Music Plus (see page 24).*

Social Networking: Facebook, Twitter & More



You can set up and access all your favorite social media apps on the go.

Set Up Social Networking Accounts

Before using your social networking accounts, you may need to download them from the Google Play Store app.

1. Tap  >  > Play Store .
2. Browse or search for the app you want to download, for example **Facebook**, **Twitter**, or **Instagram**.
3. Touch the app and then touch **Install**. Follow the prompts to download and install the app.

Use Social Networking Accounts

1. Tap  >  > Facebook (or Twitter, Instagram, etc.).
2. Follow the onscreen instructions to sign into your account, for example, by entering a user name and password.
3. Update your status, post pictures, follow your favorite tweets, and more, all on your Galaxy Tab 2 10.1.

***Note:** Tap the application's menu icon to access settings for the app, depending on the account type.*




***Tip:** You can add Home screen widgets for many social networking apps. Touch and hold an empty space, touch **Apps and widgets**, tap **Widgets**, and then drag the widget to the empty space.*

Sprint Applications

Access additional exclusive Sprint features right from your tablet.

Sprint Zone





Enhance your Sprint experience. The free Sprint Zone application makes it a snap to manage your account, get tips and tricks for your tablet, find recommended apps, and more.

1. Tap  >  > **Sprint Zone** .
2. From the Sprint Zone Web page, scroll up or down and tap an item to check your account, read the latest news about your tablet, load an application, and more.




Sprint Music Plus


In addition to the Music application (see page 22), your tablet offers Sprint Music Plus, an all-in-one music store and player for full songs, ringtones, and ringback tones.

Get Sprint Music Plus

1. Tap  >  > **Play Store** .
2. Tap **Apps** > **Sprint** > **Sprint Music Plus**  and follow the prompts to download and install the app.

Use Sprint Music Plus




- ▶ Tap  >  > **Sprint Music Plus** .
- Tap **My Library** to access all your music, including items you have purchased or loaded onto your tablet's microSD card.
- Tap **Downloads** to access your list of downloaded music.
- Tap **Music Store** to access the music store, where you can search for, sample, and purchase DRM-free music.

- Tap **Ringtone Store** or **Ringback Tone Store** to find and purchase new ringtones and ringback tones for your tablet.
- For more information, tap  and tap **More > Help & About**.



Scout™

Scout™ by Telenav is a daily personal navigator that helps you get where you're going. It lets you see and hear turn-by-turn directions and it can provide important, personalized information about traffic and alternate routes.

Get Scout

1. Tap  >  > **Play Store** .
2. Touch **Apps > Sprint > Scout** and follow the prompts to download and install the app.

Use Scout

1. Tap  >  > **Scout**.
2. Follow the onscreen instructions to access, launch, and use.


***Note:** Before using any navigation programs, make sure your tablet is set to allow location detection, and then select which sources you want to use.*

*Tap  >  > **Settings**  > **Location services**. Select **Use wireless networks** and/or **Use GPS satellites** for location sources.*

Tools & Resources: Settings

Explore ways to customize your tablet, set permissions, update your tablet, and more in the Settings menu.

Accessing Settings

1. Tap  >  > Settings .
2. Select the settings you want to change. To select or clear check boxes (a common setting method), tap the check box.







Settings may include:

- Wi-Fi
- Bluetooth
- Data usage
- More settings
- Sound
- Display
- Wallpaper
- Power saving
- Storage
- Battery
- Application manager
- Accounts and sync
- Location services
- Security
- Language and input
- Back up and reset
- Accessory
- Date and time
- Accessibility
- Developer options
- Activate this device
- System Update
- About device

For detailed information about settings, please see the User Guide at sprint.com/support.

Battery-Saving Tips

Manage the Display Brightness and Screen Timeout

- Tap  >  > **Settings**  > **Display** > **Brightness** to modify the backlight setting as desired.
- To turn off the screen, press the Power button. The tablet will continue to function.
- Turn on Power saving mode. Tap  >  > **Settings**  > **Power saving**, slide the option to **ON**, and select additional power saving options.

Manage Your Tablet's Wireless Functions

Disable the Wi-Fi, Bluetooth, and GPS functions of the tablet when you're not using them.

- Use the toggle options in the Notifications panel to turn these off when not in use. Flick the Notifications panel up and tap **Wi-Fi**, **Bluetooth**, or **GPS** to toggle these options on or off.

For more useful tips about battery care and safety, see the ***User Guide*** at www.sprint.com/support.




Online: www.sprint.com

- make a payment, see your bills, enroll in online billing
- check minute usage and account balance
- see or modify the details of your Sprint service plan
- get detailed instructions and download content

On any Phone

- Sprint Customer Service:
Dial 1-888-211-4727
- Business Customer Service:
Dial 1-888-788-4727

Resources For Your Tablet

- This *Get Started Guide* to get you up and running.
- **Web** – Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your Samsung Galaxy Tab 2 10.1.
- **SprintZone** – Tap  >  > **SprintZone**  to access account services, Sprint news, device information, suggested applications, and more.

Responsibility

At Sprint, environmental responsibility is more than talk. We're continuously working to reduce our carbon footprint and decrease our use of natural resources.

So where is my user guide?

To support our increased responsibility efforts, we've put expanded instructional materials online for you. Just visit sprint.com/support from any computer to access your complete user guide and other support materials.

What else has Sprint been doing?

Plenty. To find out just what we've been up to, visit sprint.com/responsibility.

This guide is printed with soy inks and contains up to 30% post consumer paper.

Survey

We are interested in your initial impressions of this new Sprint device.

Within two weeks of your device purchase, please go to the website <http://labs.sprint.com/sprintphonesurvey> to complete a brief survey. Your feedback will help us provide the wireless features and services you want most.

Thank you for choosing Sprint.

Index

A

- Activate 2
- Applications 9

B

- Battery 1
- Battery Saving Tips 27
- Bluetooth 21
- Buttons 8

C

- Camera 16
- Contacts 13

D

- Drag screen 5

E

- Email 14-15

G

- Games 19
- Gestures 4-5
- Gmail 14

- Google 20
- Google Play Store 19
- GPS Navigation 20

H

- Home Screen 6

I

- Internet 17

K

- Keyboards 10-12
- Keys 8

M

- Maps 20
- Microsoft Exchange
ActiveSync 14-15
- Music 22

N

- Navigation 20

P

- Phone Number 13
- Pictures 16
- Play Store 19
- Predictive Text 12

Q

- QWERTY Keyboards
10-12

R

- Resources 28
- Responsibility 29

S

- Settings 26
- Screen 1
- Shortcuts 7
- Slide 5
- Sprint Applications 24-25
- Sprint Customer Service 28
- Sprint Zone 24, 28
- Status Bar 6

T

- Tap 4
- T9 Trace 10, 12

U

- Unlock Screen 1

V

- Videos 16

W




- Web 17
- Widgets 7
- Wi-Fi 18

Y

- YouTube 20

The services described in this guide may require a subscription to a service plan and/or may incur additional charges. Not all services will work on all devices. See sprint.com/coverage for more details.

Portions of this guide are reproductions of work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

Important Privacy Message. This tablet is capable of determining its/your geographical location. To set controls for access and use of your location information by others, tap  >  > **Settings**  > **Location services**. Select **Use wireless networks**, **Use GPS satellites**, and/or **Location and Google search** for location options. Follow any applicable prompts. These settings for the use of location information can be turned on and off. For some applications and services you select, a device must be turned on and set to allow collection of location information in order to function.

Please be advised that if you use a third party application, the application may collect your personal information or require Sprint to disclose your customer information, including location information (when applicable), to the application provider or some other third party. Sprint's policies do not apply to these third party applications. Please carefully review the application's terms of use and/or the application provider's policies for more information about how the application will collect, access, use or disclose your information before using a third-party application. Terms of use and other policies usually are available on the application provider's website.

©2012 Sprint. Sprint and the logo are trademarks of Sprint. Samsung and Galaxy Tab 2 10.1 are trademarks of Samsung Electronics America, Inc. and/or its related entities. Gmail, Google Talk, Google Maps, YouTube, Android, Android Market, Google, Picasa, Google Maps Navigation Beta, Google Books, Google Mobile Services, and Google Play are trademarks of Google, Inc. Other marks are property of their respective owners. Other marks are property of their respective owners. Screen images simulated.

Printed in China

GH68-37410A