

PORTABLE DVD

with TV - FM - USB SLOT - CARD READER - GAME function
Swivel screen and rechargeable battery



USER'S MANUAL



Please read this User's Manual carefully before use

● Notice

Thank you for your purchase of this DVD player. Please read this manual carefully and keep it properly for future reference.

Notice

Note: This DVD player is equipped with the laser system. Please make sure to get familiar with the instructions of this manual to help you master how to use this player properly. In case of requiring repair, please contact the distributor or our technical service center. Please refer to the troubleshooting for details. Do not open the cabinet so as to avoid the direct radiation of the laser. Do not stare at the laser beam in case of any visible laser radiation when the cabinet is opened or the interlock mechanism is unlocked.

Note: In order to avoid the electric shock, please use wide blade plug to match with wide groove connector and make sure the secure connection.

Note: In order to avoid fire or electric shock, do not expose this player in the rain or has dangerous environment. Do not open the player cover since this player has dangerous high voltage accessory inside. Please make sure to consign qualified repair personnel for repair.

Warning: We will not acknowledge or provide after service for any change, refit or disassembly to the player, unless they are specifically approved by our company or our authorized units.

Battery specification

The built-in high capacity rechargeable batteries, no permission to install or remove battery must be replaced by professionals.

- a) Do not put a battery into the fire, explosion
- b) Battery In use or uncharged battery, please don't be removed
- c) Do not put the battery + - a direct connection, It will cause damage to the battery
- d) Do not put a battery into the water or other liquids, the store when not damp battery
- e) Do not appear, we freed on the cell or battery violence and other team on the impact
- f) Do not open the battery, please do not to change battery structure
- g) If you want rest or sleep or a long time not use the machine, please take the power machine and switch off the power to prevent a rechargeable cell or damage caused by an unexpected accident
- h) Use cells play when suggestions will be volume of sound, (small battery power could save) can prolong battery time, the better for your journey.

Method of use battery

- 1. First time you use battery, must recharge the battery tried to completely full until.
- 2. Use in temperature -5°C~40°C.

● Important safety information

Buy the machines later please read carefully and all the operations and other illustrative issues,

The content help you to safely use your portable visual DVD. be sure to comply with the random provide material illustrating DVD and properly preserved using these data.

User notice

Dvd personal portable electrical equipment for the power cord, the power adapter and other parts there maybe potential security risks,especially the errors use may lead to personal injury or property losses.

Handbook, the security risk assessment for the following two levels :

※Dangerous:

Are likely to lead to personal injury or death of the risks

※Attention:

 
Are likely to cause damage to property or minor personal risk

In order to prevent harm and make you safe use DVD,be sure to follow the following security.

Unpacking:

Check the crust and power adapter (especially the parts of the existence of damage.)

※Dangerous:



mark part of internal there a danger of voltage, current and enough.

The working area



Do not like to use the bathroom and humid DVD to ensure its accessories DVD from liquid

※Dangerous:

Into the liquid can cause electric shock!



Don't use the DVD in thunderand lighnying conditions.

※Attention:

Thunder and lightning may even damage DVD shock.



Keep DVD and other parts of the work in a good environment

※Dangerous:

Will run DVD and other parts of put on the bed, sofa, or other soft surface may be wall of ventilation, ventilation, causing DVD and other components is too hot, even fire

About use

Just use the power line, adaptor and battery module which accompanied with the items, please don't use any other model's parts.

Be sure that the power socket is suitable for power line and also offer the right voltage and power source.



※Dangerous:

Unsuitable power source may do damage to the DVD, even electric and flood.

Please don't use the power socket, power line, power adaptor and battery module which may have already damaged and aged.



Please don't use the same power source with high power motor electrical equipment. If use wiring board, please note that the connected load don't over the limited power motor of the wiring board. When the DVD have unusual sound and smell such as splintering and pop, please switch off the power line as soon as possible.

※Dangerous:

If the power line load is too high will arouse the unstable of the voltage and do damage to the DVD, data, and also the equipment which is circumscribed, even result in fire hazard.



Please don't bind the power line to power adaptor or any other items. Please don't squeeze the power line or put weight goods on its surface.

※Attention:

Pulling the power line will arouse the wire wear down, rupture or crimp, result in unsafe.



Please don't fall, strike, scratch the LCD screen or put weight things on its surface.

※Attention:

Avoid touch the liquid crystal material which arouse by the splintered LCD screen directly. If your body touch it directly, please use a lot of water to wash the place you had touched the materials at least 15 minutes.

Service and promotion



If not allowed by the center of service or the attached document, please don't amend the DVD yourself.

※Attention:






Please don't diagnosis the DVD yourself, contact the center of the service and get the more information.

※note: A. adjust the volume in the middle during the use of the earphone. It may damage the audition when listening to high volume music for a long time.

B. Do not stare at the laser beam so as to do damage to your eyes.

● Function Introduction

1. High resolution color TFT LCD full screen display.
2. Super electronic shock resistance(3 seconds for DVD,10 seconds for CD/VCD and 90 seconds for MP3).
3. Compatible with most DVD.SVCD.VCD.CD.MP3.MP4.DIVX discs etc
4. TV receiving function(PAL.NTSC and SECAM systems).
5. Built-in super power polymer lithium battery for up to 2 hours continuous play .
6. Built-in DOLBY decoder supporting MPEG-4 video decoding.
7. Support VGA function. (Optional)
8. Support USB Disc,SD card,MS card and MMC card direct play.
9. Equipped with infrared remote control.
10. Switch regulated power supply adapter AC100V~240V.
11. Personalized adjustment of TFT display.
12. Delicate and super-design to show excellent personal life taste.
13. With FM function.
14. Support MP4. MP3. WMA. MPG. AVI. VOB. DIVX. JPEG formats.
15. The apparatus shall not be exposed to dripping or splashing and that no subjects filled with liquids,such as vases ,shall be placed on the apparatus.
16. The device is with replaceable battery,It will be very dangrous if the replacement is not proper.Only the same model or similar model battery can be used .
17. The battery can not be put in over-hot condition.
18. The mains plug or an appliance coupler is used as the disconnect device,the disconnect device shall remain readily operable .

 CAUTION 	Attention: Don't open the cover in order to avoid the perforation or electric shock. Please make sure to consult qualified repair personnel for repair.
	Risk of electric shock
	Operations and other notions after purchasing this player
 CLASS 1 LASER PRODUCT	Low power laser light, no harmful radiation outside of machine

● Disc Type & Notice

Disc Introduction

Disc Type	Disc Symbol	Record Contents	Disc Dimension	Play Time
DVD	DVD	Audio+Video (Dynamic Display)	12CM	Approximent 2 hrs(SS-SL: Single-Side Single-Layer Disc)
				Approximent 2 hrs(DS-SL: Double-Side Single-Layer Disc)
			8CM	Approximent 80 mins(DS-SL: Double-Side Single-Layer Disc)
				Approximent 160 mins (DS-DL: Double-Side Double-Layer Disc)
Super VCD	Super VCD	Audio+Video (Dynamic Display)	12CM	Approximent 74 mins
VCD	VCD1.1/2.0	Audio+Video (Dynamic Display)	8CM	Approximent 20 mins
CD	CD	Audio	12CM	Approximent 74 mins
			8CM	Approximent 20 mins
MP3		Audio	12CM	Approximent 600 mins

Note:The play time of some DVD,VCDand Super VCD discs may subject to the special regulations of the software producer,which may be different from the values indicated in above table.

Special Notice

It can appreciate the music as well as the Images (motion pictures) for the VCD discs without PBC function (Version 1.1)

Besides the image play function as VCD V1.1 discs,the Super VCD,VCD 2.0 AND VCD V3.0 discs with PBC function can also play interative software by means displayed on the TV screen(PBC Play).

Meanwhile,it also can play in high resolution in case the discs include still images.

Disc Notice

Disc Use

- *Please hold the edge of the disc instead of the surface during disc handing so as to prevent the damage to the digital signal of disc surface.
- *Do not stick paper or tape on the disc.
- *Do not expose the disc to the direct sunshine or the heat source.
- *Please keep the disc properly after play.

Disc Cleaning

- *Please clean the disc with clean flannelette from the middle towards outer fringes before play.
- *Do not use the solvents such as volatile gasoline, thinner, market detergent or anti-static spraying agent for plastic discs.



● Player Keys & Connector Illustration

Note: different model of buttons panels different, not necessarily all the functions that contains the following keys.

Keys function instruction

1	LCD MENU	Short press the "menu" button pop-up image parameters function.
2	CH+	Short time press "channel +" can realize channel add function, some models in the "Settings" composite state of the function of upward menu, or simultaneously composite realize choice one song functions.

3	CH-	Short time press "channel -" can realize channel minus function, some models in composite "" set "menu state the function, or simultaneously downward compound realize one song selection function.
4	VOL-	Short time press "volume -" can realize the volume decreases function. Some models in the LCD screen of composite function of state of the menu to the left, or simultaneously composite realize choose retreat quickly function.
5	VOL+	Short time press "volume +" can realize the volume increase function. Some models in the LCD screen menu compound to the right of the state, or simultaneously composite function realization choice quickly into function.
6	SETUP	Short time press the "set" pop-up menu;; System Settings/language setting/audio Settings/video setting/speaker setting/ Dolby digital set; Again according to the direction key realization through short cut each function.
7	MODE	Short time press "mode" button can be pop-up mode menu DVD/TV/video input function screen.
8	◀◀	In DVD playback, can retreat quickly, in order to search for specific target broadcast; Some models and compound the "Settings" menu under the function of state to the left.
9	▶▶	In DVD playback, can quickly into play to search for specific objectives; Some models and compound the "Settings" menu under the state to the right function.
10	⏮	In DVD playback, can press on a paragraph or last program, to search for specific objectives; Some models and compound the "menu" under the function of state upward


11		In DVD playback, can press a paragraph or the next program, to search for specific objectives; Some models and compound the "Settings" menu under the state to the right function.
12		Short time press "play/pause" can play/pause functions switch; Press this button can confirm select menu content or start playing disc; Meanwhile compound in "Settings" menu state the function. OK confirm
13	COPY	Use machine read CD content, and put USB disk into USB jack, Press copy button, operation according to display, put the disc contents copies to USB disk.
14	POWER	Short time press "POWER" backlight function can realize shut out.
15	USB/SD	DVD playback condition for disc playback/USB/SD switch button.
16	R/L	Short time press "track" can undertake: left single voice/right single voice/stereo/mixed track function switching.
17	STOP	Short time press "stop" can realize in play when stop function.
18	MENU/PBC	Short time press "PBC/menu" can realize DVD ~ title/VCD ~ menu functions switching
19	OPEN	Clicked CD door switch, open CD door put CD.

Interfaces with lights:

1	GAME	Game handle socket.
2	ANT	Match machine antenna or cable TV signal input.
3	DC-IN	Power input seats. Note: when not in use, please draw power DC adapter, and will power adapter plucked from the socket.
4	ON/OFF	The power switch. Note: when not in use, please dial shut OFF 'to'.
5	AV IN	External video signal input
6	AV OUT	This machine video signal output
7	Ω EARPHONE	Headset input or output/external earphone
8	SD/MMC/MS	SD/MMC/MS Card socket
9	USB socket	USB Equipment socket
10	GAME	Game handle socket. Note: the game handle quantity and interface position according to specific models and decide.
11	Rechargeable lights	Because of different model; Charging instructions have the following kinds, light color differ. A) Charging, red light; full of charging green light. B) Charging, lamp shining; and full of charging, long bright. C) Charging, the lamp bright, full of charging, lamp power off
12	Remote control receiving window	Receive a remote control signals.
13	On indicator	Turn on the power, turn indicator light yellow lights, red light off. Different model the light of color differs somewhat.
14	VGA port	Surport VGA function

● Remote Control Function Illustration

※ Note: TV/FM/GAME FUNCTIONS ARE OPTIONAL

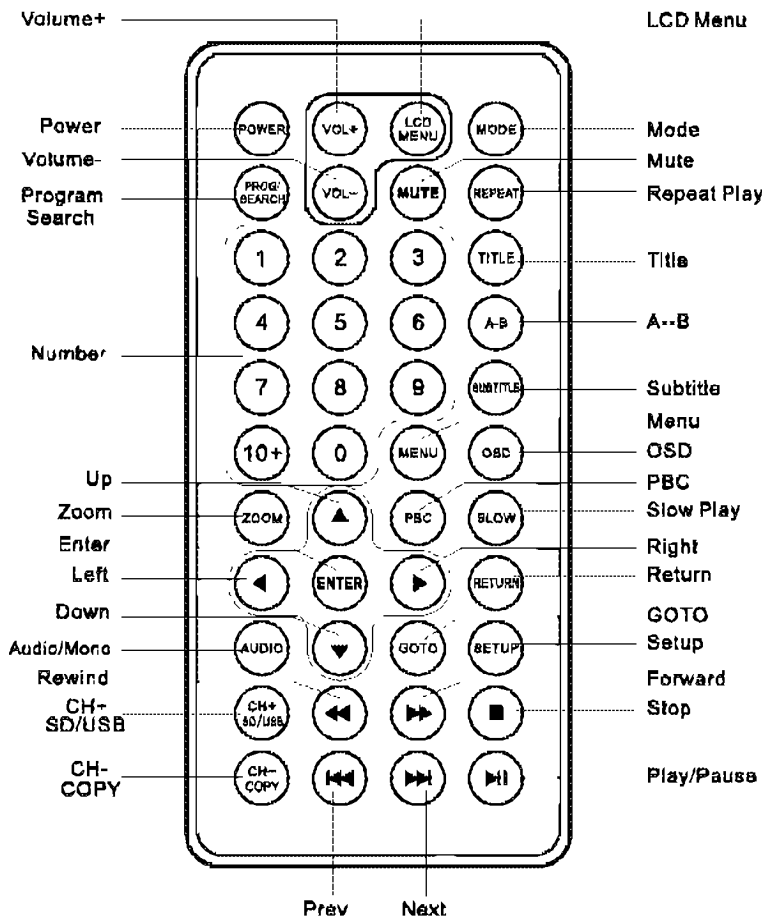

● BASIC FUNCTION OPERATION

Operation (I) Before Operation

1. DVD connect to an electric socket.


a. AC power adapter to push together firmly connect the AC power adapter DVD jack

b. The AC power adapter into a outlet (exchange 100 ~ 240V) and wait for five seconds, the bright red light means power, gave the machine is used for

2. The "power" switch to "on", on the indicator is blue, wait a moment on the screen was light.

Note : not in use. please unplug the AC power adapter, and the "power" switch back to "off"

3. Links with the TV set, please put the TV set in a state of AV

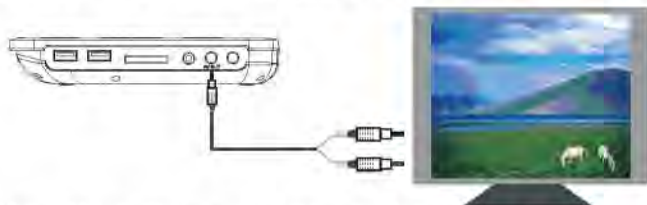

Note : AV line with his head for video signal. a red for audio signal.

Operation (II) Place Disc

1. Press "OPEN" key to open the disc cover.

2. Hold the edge of the disc and buckle the disc slightly on the pivot.

3. Close the disc cover till one click.

Operation (III) Play/Pause

1. This player will automatically play once the disc is loaded.

2. Press (⏸) key to pause the play.

3. Press (⏸) key once more to resume play.

Operation (IV) On-Screen Display(OSD)

Press "OSD" key to display disc information and operation function prompts and press once again to turn off the display.

Operation (V) DVD Disc Menu Play

Some DVD discs are recorded with title menu or chapter menu.

When "MENU" key on the remote controller is pressed, the screen will display the menu at your choice. Press direction keys to adjust and press "ENTER" key to confirm and press number keys to select. Press "MENU" key again to return root menu. Press "TITLE" key once to return title menu.

Operation (VI) Direct Chapter Play by Number Key

Press number keys to directly select the chapter to play once the player finished the disc reding.

1. Press number keys 1~9 for the chapters with the number less than 10.
2. For the chapters with the number above 10, press 10+ key (It switches to 20+, 30+...when pressed in succession) , before pressing number key 0~9.

Operation (VII) PBC Play

It can enjoy PBC interactive function during play for the Super VCD and VCD2.0 discs with PBC function.

Operation (VIII) Play USB

Insert the USB into the USB port and switch the mode to DVD status. Close the disc cover and press DISC/CARD switch key and this player will play after a while.

Operation (IX) Play SD/MS/MMC Card

Insert the SD/MS/MMC card into the SD/MS/MMC port and switch the mode to DVD status. Close the disc cover and press DISC/CARD switch key and this player will play after a while.

(Note: In case of no disc in the disc compartment, the system will automatically switch to SD/MS/MMC card play status without pressing of DISC/CARD switch key.)

operation (X) use of AC power supply and battery

1. charging steps :

From Factory, the provision of a module not have sufficient electricity, DVD is connected to the AC power adapter DC plugs and adapters in ac outlet (110 ~ 220v), when will be automatically recharging batteries.

(The battery indicator is red, to charge for green) saturated

Charging that has long, green with electricity. i congratulate you (travel) can use battery play

Note :support player and charge function, convenience, use your needs.

2. battery disposal

If replacement wrong type of charging, the existence of danger. the explosion Battery modules contained in a small number of hazardous substances.

In order to avoid the potential for personal injury and damage the environment, please note that some:

a. In order to protect the quality, suggest that, if the battery after recharging batteries discharge a very short or charging a moment it shows that go well, this cell to its service life, i suggest you to the service sector to replace the battery

(to stay inside the machine caused the leakage, and even lead to a security vulnerability)

b. Because the battery for environmental damage caused destruction, In accordance with local laws or regulations, and the safety standards for battery

● FUNCTION SETUP

Function Setup (I) DVD Setup Menu

Depending on the disc recording information and the plug-in equipment, it can achieve best play effects by performing following function setup to the DVD player.

Function Setup

1. General Setup: You can setup common use of the system such as Viewing Angle, OSD Language, Caption lock, Screen savers, Last memory, LCD parameter.


A. TV type: When this player is connected with common TV, 4: 3 full scene, 4: 3 mail box, 16: 9 wide screen or wide squeeze can be chosen to display in the entire screen (This adjustment depends on the video mode of discs).

B. Viewing Angle: It can be chosen on or off. Choosing on, you can watch different angle if the DVD has multi-angle function. Choosing off, you can't switch to different angle even the DVD disc has multi-angle video.

C. OSD language: The OSD language can be chosen Chinese, English or Russian. The system language will appear the chosen language

D. Captions : on/off

E. Screen saver: The screen saver can be set on or off. When the screen saver is on, a moving picture will appear on if the DVD player doesn't begin new items. When the screen saver is off, the picture of the last item will stay static if no new item begins in 3 minutes.

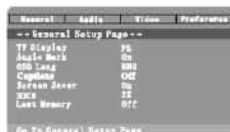

F. HD CD: 1X 2X OFF

3. Last Memory: The last memory can be set on or off. When the electricity is cut suddenly and the last memory is on, the system will resume after getting electricity through again. When the electricity is cut suddenly and the last memory is off, the system will work from the beginning.





2. Audio setup: SPEAKER SETUP/EQUALIZER

A: SPEAKER SETUP:

Downmix LT/RT
Stereo
V SURR

B: Equalizer:

EQ Type None
Rock
Pop
Live
Dance
Techno
Classic
Soft

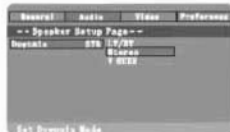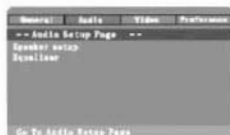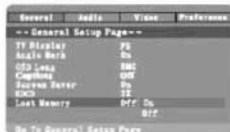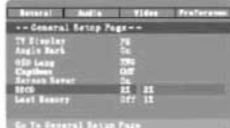

3. Video setup: Video setup can adjust the picture of LCD system, including LCD picture.



A: Sharpness: Sharpness adjustment

High
 Medium
 Low


B: Brightness: Brightness adjustment

C: Contrast: Contrast adjustment



4. DVD system setup: Set the subsidiary functions when playing discs, including TV system, PBC, Audio language, Subtitle language, Menu language, Rating and Default.

A. TV type: To select PAL, NTSC or AUTO depend on the color system of the connected TV. If choosing the wrong the TV system, the there will be no picture or color on the screen.

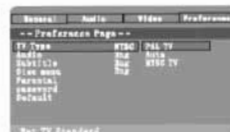

B. Audio : This item will work with the multi audio languages discs.

Optional: English French
 Spanish Chinese
 Japanese Korean
 Russian Thai
 Others



C. Subtitle language: This item will work with the multi subtitle languages discs. Optional:

English French
 Spanish Chinese
 Japanese Korean
 Russian Thai
 Others



D. Disc Menu : This item will work with the multi menu languages discs. Optional:

English French
 Spanish Chinese
 Japanese Korean
 Russian Thai
 Others



E. Parental: Different rating setup is available



F. Password setup: This item will work with rating discs, including password setup and password revise.



a. Password setup: The password setup can be set on or off. The password is required to perform the disc password setup. The original password is 1234. It can play the rating discs with on and can not play with off.



b. Password change: Includes old password, new password and confirm. If want to change the password, first input the right old password, Then input the new one twice. Password change is finished after confirm.



G. Default: Select Restore, all item of the system will restore original status.




● TFT IMAGES ADJUSTMENT


Press MENU button on the LCD screen, TFT adjustment menu will display on the screen. Press MENU again to select among Image, Function, System and Preset menu options, select a menu option by pressing▲▼ button, then press◀▶ button to set the menu option

(1) PICTURE


- a. BRIGHT: Brightness Adjustment
- b. CONTRAST: Contrast Adjustment
- c. COLOR: Hue Adjustment

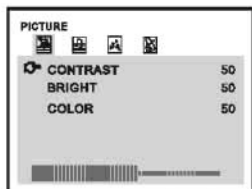


(2) Audio Adjust the volume

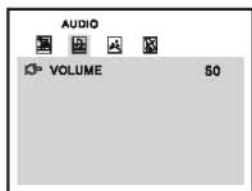

(3) OPTION: S-COLOR SLEEP ENGLISH ZOOM RESET

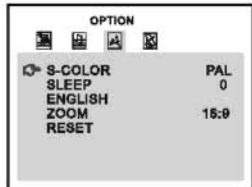

(4) PRESET: AUTO-SEARCH SEARCH FINE BAND S-SYS POSITION SKIP

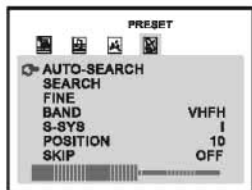

Note: Before searching TV program, please Set up proper TV color and sound system as Local signal, otherwise can not watch TV normally

● Multi Types of Disc Play

Audio Track Selection

*You may select the required language when playing DVD or Super VCD discs with multi languages.

*During the play of DVD and Super VCD

Press AUDIO key to switch the language type (depending on the discs).

*You may select mono L, mono R or stereo for the CD or VCD with multi audio tracks.

For instance, for the VCD discs with mono L music and mono R for songs, you may select mono L to listen the music.

*During the play of VCD discs, Press AUDIO key to select mono L, mono R or stereo.


Fast Play

During the disc play, it may fast forward or rewind to search specific target.

*Press (FF) key to enter into fast forward status.

Every press of (FF) key will display in circulation:

FF2X — FF4X — FF8X — FF16 — FF32X — Play

 


*Note: FF = Fast Forward.

*Press (RR) key to enter into fast rewind status.

Every press of (RR) key will display in circulation:

FF2X FF4X FF8X FF16 FF32X Play




Slow Play

It can appreciate slow motion video in accordance with following steps.

*Press SLOW play key to enter into slow play status.

Every press of SLOW play key will display in circulation:

 SF1/2 SF1/4 SF1/8 SF1/16 Play



Turn Off PBC Function

*Press "PBC" key and the on-screen display shows "PBC Off", i.e. PBC is turn off. Press once again and the PBC is turned on.

Repeat Play

It can select title repeat and chapter repeat function during playing DVD discs.

1. Chapter Repeat

Press "REPEAT" key till the screen displays "REP:[CHAPTER]" .

2. Title Repeat

Press "REPEAT" key till the screen displays "REP:[TITLE]" .

3. Cancel Repeat

Press "REPEAT" key till the screen displays "REP:[OFF]" .

It can select Repeat One and Disc Repeat function during playing super VCD, DVD and CD discs.

1. Repeat One

Press "REPEAT" key till the screen displays "Repeat One" to repeat play the playing chapter.

2. Disc Repeat

Press "REPEAT" key till the screen displays "Disc Repeat" to repeat play all chapters in the disc.

3. Cancel Repeat

Press "REPEAT" key till the screen display disappears.

Note: The Super VCD, VCD 2.0 and VCD 3.0 discs can only be operated under the PBC Off status as the VCD 1.1 and CD discs can be operated directly.

Certain Portion Repeat

During disc plays, you may press "A—B" key to appreciate your favorite portion again and again.

1. Press "A—B" key at the beginning point of the contents to be repeated and the screen will display "Repeat A—" to set the start point A.
2. Press "A—B" key at the end point of the contents to be repeated and the screen will display "Repeat A-B" to set the end point B. After that, this player will play the contents between point A and point B again and again..
3. Press "A—B" key once again and the on-screen display will disappear, then the repeat play will be cancelled.

Subtitle Selection (Only effective to DVD and SVCD)

You may select one subtitle display for the recorded DVD and Super VCD discs with multi subtitles.

1. Press "SUBTITLE" key to select one subtitle display.
2. Cancel subtitle display: press "SUBTITLE" key till the screen displays "OFF" .

Note: Subtitle cancel function depends on the discs.

Subtitle languages depend on the discs.

If the disc recorded subtitle is non-selectable, then it's void to press SUBTITLE key.

Chapter Search, Time Search

Press "GOTO" key during disc play and press direction keys to select among the following options:

1. Title: To display current title. It can input the title number to be played.
2. Chapter: To display current playing chapter. It can input the chapter number to be played.

Zoom Function[Only effective to DVD, SVCD and VCD]

To zoom in or zoom out the certain motion pictures or still image.

1. During disc play, press ZOOM key to zoom in to 2X.
2. Press ZOOM key in turn to zoom in to 3X, 4X and zoom out to 1/2X, 1/3X and 1/4X.
3. When resuming to original image, press ZOOM key to disappear the display.

Mp3 Disc Play

1. Place the disc, This player will display disc menu and automatically play at the same time after disc reading.
2. Directory Selection: Press ◀ key to move the cursor to the directory area (the left side of the LCD screen), press ▲ or ▼ to select one folder and press ENTER key to confirm the selection.
3. Chapter Selection: Press ▶ key to move the cursor to chapter area (the right side of the LCD screen), press ▲ or ▼ or press number keys to select one chapter and press ENTER key. Then this player will start play from this chapter.

Mp4 Disc play

- 1.Place the disc. This player will automatically start play after disc reading.
- 2.In case desiring to select one chapter . Press RETURN key to display disc menu .At that time,it can perform chapter selection with the selection method same with the one of Mp3

JPG Picture play

- 1.Place the disc .This player will display as follows after disc reading .The upper side of the LCD screen displays the picture name and file format under playing , the left side is picture preview window as the right side is directory area. Pressing ► key can play the pictures in succession.
- 2.Selective play
After pressing ▲ or ▼ key to select the pictures to be played. Press ENTER key to play the selected pictures. The pictures also can be selected by pressing number keys.
- 3.Picture Flip
Press ▲ key to vertically flip the playing picture for 180.
Press ▼ key to horizontally flip the playing picture for 180.
Press ► key to clockwise flip the playing picture .Each press of ► key will flip the picture for 90.
Press ◀ key to anticlockwise flip the playing picture. Each press of ◀ key will flip the picture for 90.

MP3/CD Discs Copy Function

This function is suitable of MP3/CD discs only.

1. Copy MP3 file

When it is playing MP3 discs, insert USB devices, press “COPY” button, the following picture will appear on the screen.

 


Press “ENTER” button to select songs, then move cursor to “Copy” item, press “ENTER” to start copy.

If need to copy all files in the MP3 disc, please move cursor to “All Select” item, press “Enter”

2. Copy CD file

When it is playing CD discs, insert USB devices, press “COPY” button, the following picture will appear on the screen.

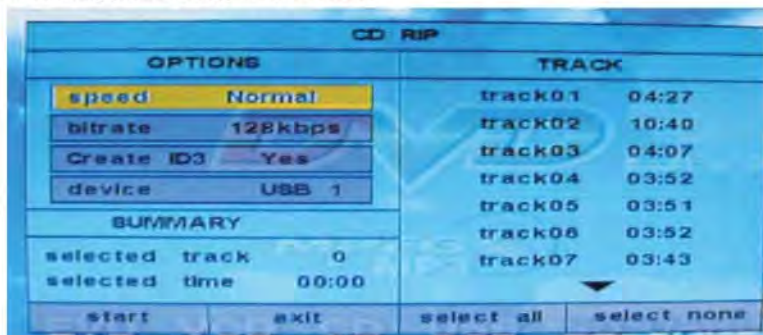

Press “ENTER” button to select songs, then move cursor to “Start” item, press “ENTER” to start copy.

If need to copy all files in the MP3 disc, please move cursor to “Select all” item, press “ENTER”

● Receiving TV/FM Programs/Troubleshooting

※ Note: TV/FM/GAME FUNCTIONS ARE OPTIONAL

Before Receiving TV

1. Plug in the CATV adapter or antenna.
2. Press "MODE" key to switch the mode to TV status.

Channel Auto Search

1. Press "MENU" key to display system menu, press keys on the player or press "▲ ▼ ◀ ▶" on the remote controller to select corresponding TV system.
2. Press "◀" or "▶" key access into the auto program search status directly.
3. The auto search will complete in several minutes. All searched channels will be automatically saved to the memory.
4. When using the whip antenna, it can achieve best receiving effects by adjusting the antenna direction and angle.

Channel Selection

1. Press number key 1~10 select channel 1~10. The channel above 10 can be selected by pressing two number keys within two seconds. For example: channel 25, press 2 and 5 swiftly within two seconds.
2. Press "▲/CH+" or "▼/CH-" key to select next or previous channel.

Receiving FM programs

1. plug in the antenna.
2. press "MODE" key to switch the mode to FM status.

Channel Auto search

1. Press "SEARCH" on the remote controller Key to receive the FM program
2. the auto search will Complete in several minutes. all searched channels will be automatically saved to the memory.
3. When using the whip antenna, it can achieve best receiving effects by adjusting the antenna diredion and angle .

Channel Selection

1. Pres number key1~10 select channel 1~10. The channel above 10 can be selected by pressing Two number keys within two seconds. |
2. Press "▲/CH+" or "▼/CH-" key to select next or previous channel.

Troubleshooting

Press refer to this chapter in case you encounter following troubles during the use of this player.

***No Voice**

1. Check for secure connection of this player.
2. Listen with earphone and check if the earphone volume is adjusted to min position.
3. Check if the TV or audio amplifier function normally(when connect with TV).
4. Check if the sound system is correct under TV status.

***No Image**

1. Check if the LCD ON/OFF key is switched to OFF position.
2. Check for secure connection of this player.
3. Check if the TV setup is correct (when connect with TV).

***Rolling Image or Without Color(when connected with TV)**

The color system setup of this player may not match with the TV system.
Please select the color system matching to your TV.

***Disc Not Play**

1. Check if the disc is placed correctly.
2. The disc shall be placed onto the disc tray with the label surface facing upward.
3. Please clean the disc in case of dirt on disc.
4. Check the disc for cracks or serious scratches.

***Remote controller Not Work**

1. Remove the obstacle between the remote controller and this player.
2. Point the remote controller towards the remote controller receiving window of this player.

***SD/MS/MMC Card Not Play**

1. Check SD/MS/MMC card for reverse insertion.
2. Check for correct operation(refer to Basic Function Operation).

Troubleshooting

***Poor TV Receiving Effects**

1. During wireless receiving, adjust the whip antenna angle and direction until receiving better effects.
2. During wired receiving, Please check if the external antenna is in quality contact.
3. When receiving poor TV signal, the received images will be unstable with snow noise. This is normal situation.

● DVD/TV Part Technical Specification

DVD Part Technical Specification	
Video System	PAL/AUTO/NTSC
Audio Response	20HZ—20KHZ
Audio S/N Ratio	50dB
Frequency Distortion+Noise	-70dB
Channel Isolation	55dB
Dynamic Range	85dB
Audio Output (Simulation Audio)	Output Level: 2Vp-p, Load Impedance: 10K Ω
Output Video Output & Terminal Output(N/A)	Output Level: 1Vp-p, Load Impedance: 75 Ω , non-equilibrium Negative-polarity output level: Brightness(Y): 1Vp-p, chromaticity(C): 0.28Vp-p, Load Impedance: 75 Ω
Power	AC100—240V Input
Allowable Action Temperature	0~40 $^{\circ}$ C
Power Consumption	\leq 10W
Dimension	
Unit Weight	
TV Receiving Part Technical Specification	
TV System	PAL/NTSC/SECAM System
Receiving Channel	VHF1—12Channels, UHF13—69Channels, CATV
Display Part Technical Specification	
Contrast	250: 1
Screen Dimension Ratio	16:9

※ Note: TV/FM/GAME FUNCTIONS ARE OPTIONAL

● Accessory Table

AV Cable (Yellow, Red and White Plug)	1 set
Remote Controller RE—40E	1 pc
Manual	1 pc
Switch Regulated Power Supply Adapter	1 pc
Earphone	1 pc
Antenna (OPTIONAL)	1 pc
Car Adapter	1 pc
Game Joystick (OPTIONAL)	1 pc
Game disc (OPTIONAL)	1 pc
VGA Cable (OPTIONAL)	1 set

※ Note: TV/FM/GAME FUNCTIONS ARE OPTIONAL