

Unison™ 6 - 3 - E Programming Guide


GETTING READY TO PROGRAM BTE HEARING AIDS:

- BTE hearing aids are Quick Fit to a 40 dB flat hearing loss
- Remove battery during programming
- Lift port cover below program button and insert cable
- Connect other end of the cable to the Hi-Pro box or NOAHlink
- Program button and manual volume control are deactivated during programming






GETTING READY TO PROGRAM CUSTOM HEARING AIDS:

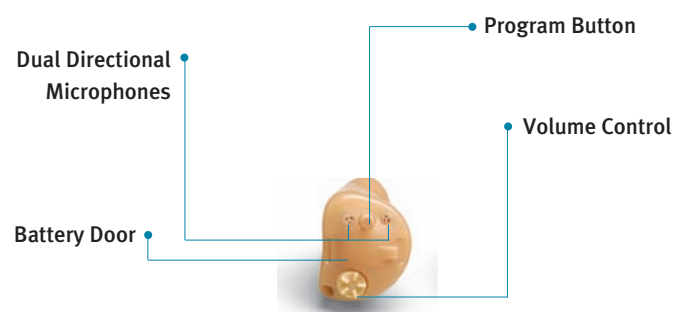- Custom hearing aids are Quick Fit if an audiogram is supplied
- Hearing aids with a manual volume control must be turned on
- Remove battery door and insert appropriate right or left cable
- Connect other end of the cable to the Hi-Pro box or NOAHlink
- Program button and manual volume control are deactivated during programming







Hearing Instrument Selection Screen

To detect the hearing instruments:






1. Select **Hi-Pro** or **NOAHlink** to select your programming interface.
2. Beside Detect, select the icon for left , right , or both  hearing aids.
3. Fitting range overlays on the audiogram indicate if the detected hearing aids are appropriate for the degree of hearing loss.

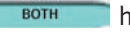Note: When Moda™ 10A BTE or Directional (No VC) BTE is selected, the overlay alternates between fitting ranges for slim tube and earmold.

To simulate a fitting:

1. Select the **Simulate** button to enter simulation mode.
2. Select the desired product.
3. Choose the desired shell style(s).
4. Click the right , left , or both  hearing aids icon to assign the hearing aids to the appropriate ears.
5. Select the desired model from the product list provided. Note: The **Brand**, **Model**, **Matrix** and **Style** buttons can be used to sort the list as needed.
6. The chosen product will appear below the product list. A note above the selected product will further indicate available options such as WiFi Mic or slim tube availability. Use the eraser button  to remove a selection if desired.
7. Fitting range overlays on the audiogram indicate if the selected hearing aids are appropriate for the degree of hearing loss.

Select the following icons to access additional tools:

	Product Spec data for the selected hearing aid
	Programming Information
	Support Materials for all Unitron Hearing products
	Unitron Hearing's regional office contact information
	Unitron Hearing web site



8. Once the hearing aids have been detected or chosen for simulation, click on the navigation bar to the left and choose either:
 - **In Situ** (optional) – allows pure tone threshold measurement through the Unison™ hearing aid(s).
 - **Fitting** – proceeds directly to the fitting screens for Unison.

In Situ Audiogram Screen

If you chose **In Situ** in step 8, the in situ audiogram screen will load and a pop-up window will appear reminding you to:

1. Plug the vent in the hearing aid or earmold.
2. Use the appropriate earhook for BTE products:
 - Use a filtered earhook for Moda BTEs.
 - Use an unfiltered earhook for all other BTEs.
3. Also be sure the hearing aids fit properly in the client's ear. If there is already an audiogram saved in the Noah or Standalone database, it will appear on the screen in grey. The white displayed area will show the test range for the in situ audiogram.



To perform an in situ audiogram:

The in situ audiogram can be performed in one of two modes: Autoplay or Manual.

To use Autoplay Mode (default):


1. Move the mouse to the desired point in the audiogram (R or L) and click. The tone will be generated automatically.
2. Repeat at each frequency to obtain all desired in situ data.

To use Manual Mode:

1. Turn off the Autoplay checkbox.
2. Use the mouse to “point and click” on the audiogram display or use the drop down boxes to select the desired test frequency and intensity.
3. Use the  icon or  icon to present the tone.

Note: To use the new In Situ audiogram data for the fitting calculation, check the box “Use In Situ audiogram for fitting”. Leaving this checkbox blank will cause Unifit™ to revert to the original Noah (or Standalone) audiogram for the fitting calculations.

When leaving the In Situ screen, you will be prompted to save the new in situ audiogram to the database. Select **OK** to save the in situ audiogram.

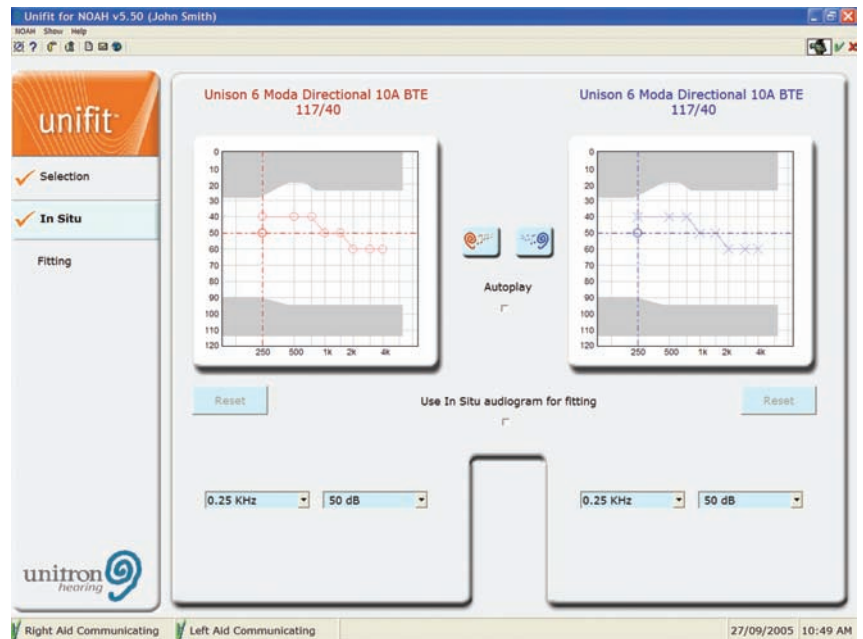

Quick Fit Screen

To Quick Fit the hearing instrument:

1. Select **Quick Fit** from the left navigation bar. Unifit will automatically ask whether to read the settings from the hearing aid(s).
2. Select **Yes** for Unifit to read the settings stored in the Unison hearing aids or select **No** for a new fitting or to load a previous fitting stored in the database.

*Note: Selecting **No** for a new fitting results in Unifit automatically quick fitting to the default settings while selecting **No** for previous fittings stored in the database prompts Unifit to load stored settings into the hearing instruments.*


3. Select the appropriate setting in the **User Profile** based on the client's hearing aid history.
4. Under Earhook (BTE fittings only), select **Filtered** or **Unfiltered**.

5. Under Venting, select the appropriate amount for each hearing aid/earmold from the drop-down list.

Note: Occluded represents no vent with average fit and some slit leakage, while Tight represents no vent with tight fit and virtually no slit leakage.

6. To choose the desired fitting formula, select the NL-1 or DSL icon **NL-1 DSL** from the tool bar or select the desired formula from the **Formula** menu. If desired, measured RECDs (NL-1 DSL) or REUGs (NL-1) can be entered into the software using the DSL or NL-1 data entry tables to further individualize the fitting targets.

Note: The User profile, earhook, venting and formula selections will not automatically adjust the current settings of the hearing aid(s). It is necessary to re-quick fit if any of these settings are adjusted.

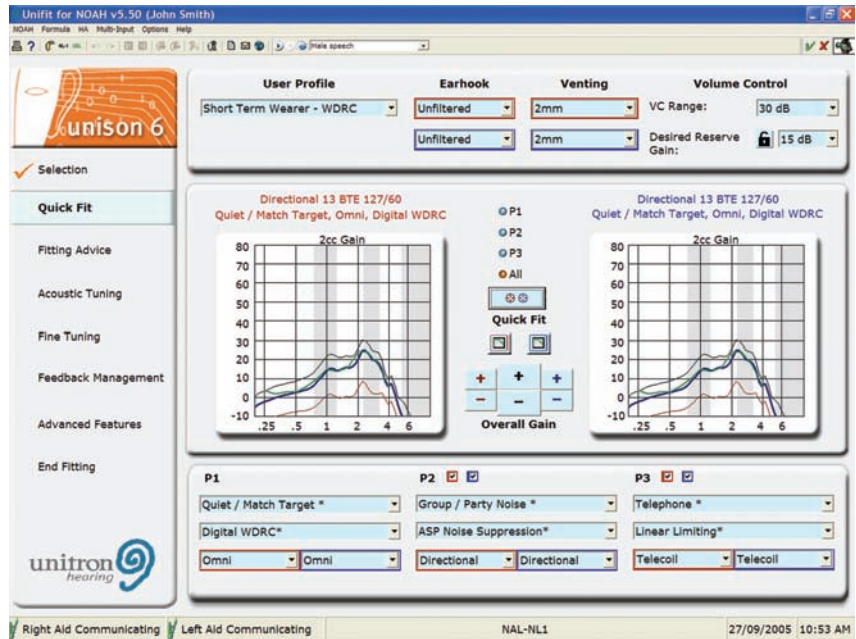





Unison Programming Guide

- For **Moda slim tube fittings**, select the **Slim Tube** checkboxes below the User Profile. Unifit will automatically set the Venting and Earhook options and account for the acoustic changes caused by the slim tubes.

- For hearing aids with manual volume control, select the desired volume control information for both **VC Range** and **Desired Reserve Gain**.

*Note: To disable the manual volume control, select **Off** in the VC Range drop-down list.*



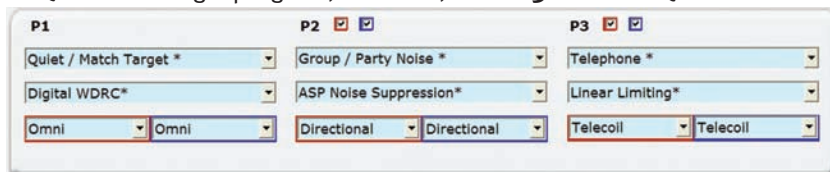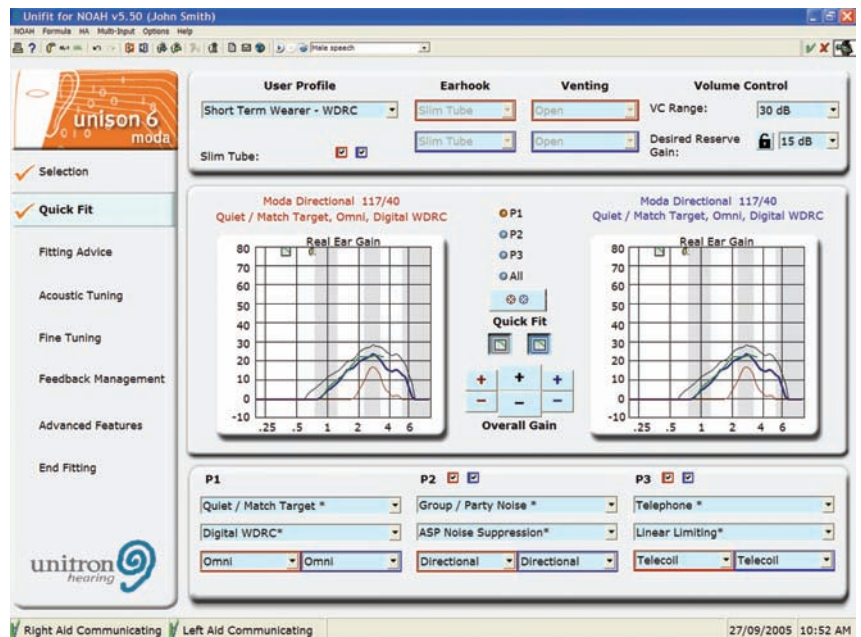

- Select the **Volume Control Lock** button  to ensure the Desired Reserve Gain is maintained during fitting. This will restrict the maximum use gain that can be achieved.
- If desired, click the **High Frequency Hearing Loss Correction Tool**  button to apply the high frequency hearing loss adjustment to the fitting.
- To Quick Fit all programs, select **All** and then **Quick Fit**.
- To Quick Fit a single program, select **P1**, **P2** or **P3** and then **Quick Fit**.




- Make appropriate selections across the bottom of the screen to choose environment, processing strategy and input method for each program using the drop-down lists. Unifit will automatically Quick Fit each program as you make changes to these selections. Enable or disable programs for each hearing aid independently by selecting the check boxes beside **P2** & **P3**.
- Use the **Overall Gain** adjustment buttons for one or both aids to raise or lower the overall volume or improve binaural balance.
- To move to the next screen in the fitting process, select the appropriate heading from the left navigation bar.



Fitting Advice Screen

To access Fitting Advice:

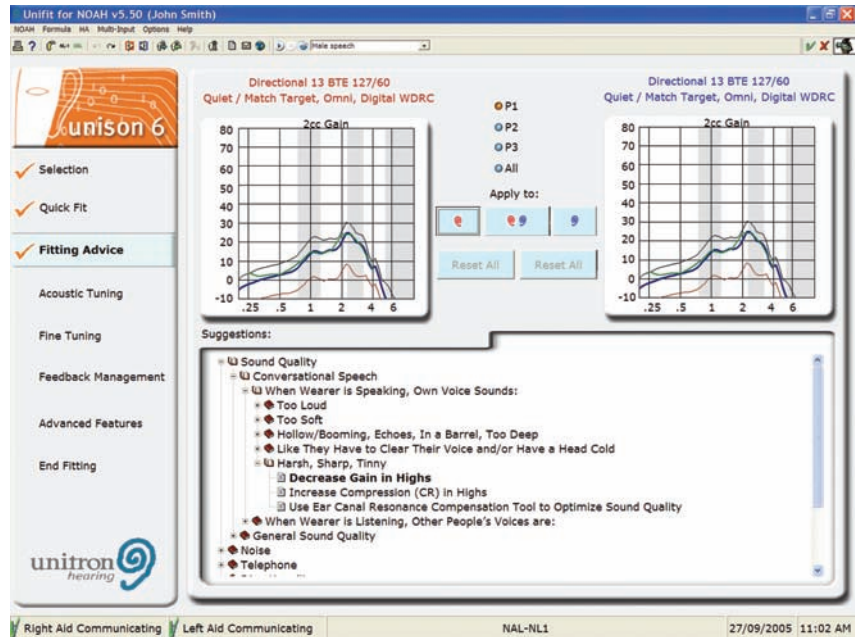1. Select **Fitting Advice** from the left navigation bar.
2. Under the Suggestions section, click on the applicable folders until a list of suggestions appears.
3. Highlight the desired adjustment suggestion, then select **P1**, **P2**, **P3** or **All** to apply the change to one or all programs.
4. Under Apply to: choose the left ear , right ear , or both ears  button. If the ear or program buttons are not active or highlighted, the suggestion is not available for that selection.
5. To undo your last change, select the Undo icon  from the top toolbar.
6. Select **Reset All** to remove all unsaved changes applied since entering the Fitting Advice screen.
7. To move to the next screen in the fitting process, select the appropriate heading from the left navigation bar.




To access sound files:

1. Select the **Sound Files**  icon from the top toolbar.
2. Choose **Sound Setup**  to select the sounds you want to have available for fittings. The drop-down menu allows you to choose which sound file you wish to play during your hearing aid fitting.
3. Select **Play/Pause** as appropriate to start or pause a sound file playback.

Note: The sound files should be calibrated so they are set to an appropriate volume. If you have a sound level meter, play the 'Calibration noise 70 dB(A)' file from the pull-down menu and adjust the sound level until the volume measures 70 dB(A) at the listening position. If you do not have a sound level meter, play the 'Male Speech' file and adjust the volume so that it is medium loud (normal conversational loudness) at the listening position.

To adjust the sound file volume during calibration:



1. If your computer has a soundcard, double-click the **Volume** icon  from the bottom taskbar to adjust the volume or go to Control Panel > Sounds and Audio Devices > and select the Volume tab to adjust the Device Volume.
2. If your computer has external speakers, adjust the sound level by turning the volume control or go to Control Panel > Sounds and Audio Devices > and select the Volume tab to adjust the Speaker Volume.

Acoustic Tuning Screen


The Acoustic Tuning screen is designed to optimize Unison fittings if there are general sound quality issues after the initial Quick Fit:

- **Ear Canal Resonance Compensation Tool** - customizes the peak frequency and amplitude of the hearing aid frequency response.

To apply the Ear Canal Resonance Compensation Tool:

1. Mute the non-test ear by clicking on the  or  icon.
2. Adjust the **Frequency** slider control one step at a time while providing a speech stimulus to the client (live voice or recorded).
3. Determine which of the four settings the client prefers based on subjective sound quality judgments.
4. If further tuning is required, leave the Frequency control at the preferred setting and adjust the **Amplitude** slider control to determine the preferred setting.
5. Repeat the **Frequency** and **Amplitude** adjustments on the other ear.


Note: It is recommended that adjustments with the ear canal resonance compensation tool be made one ear at a time.

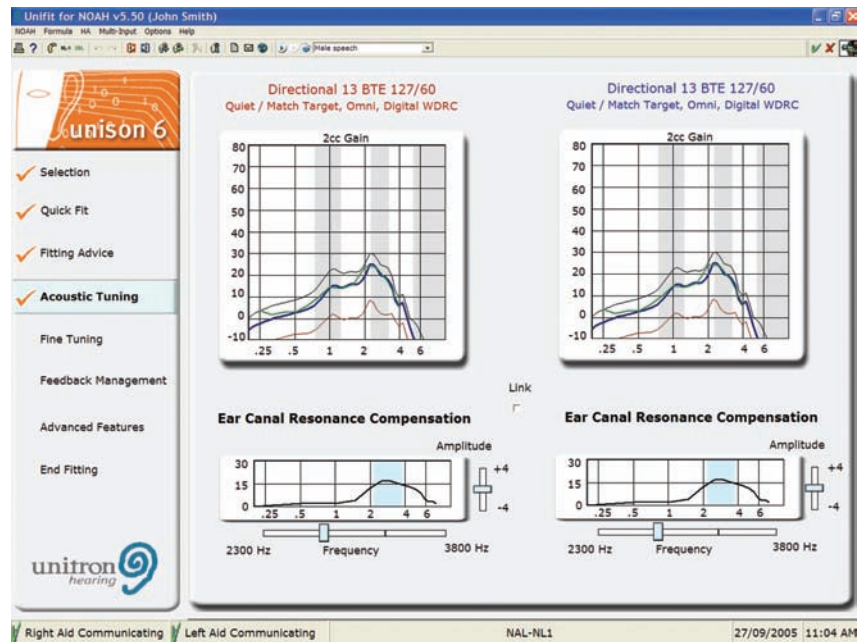

Manual Fine Tuning Screen

Fine tuning allows adjustment of the output characteristics of Unison hearing instruments.

- To view a different graph or I/O function for the hearing aid, select the appropriate graph from the drop-down list at the top of the frequency response display.
- If you want to select or deselect the HFHL correction tool, click on the High Frequency Hearing Loss correction button and re-Quick Fit the selected program.
- In programs with microphone + telecoil (MT), microphone + direct audio input (M-DAI) or microphone + WiFi transmitter (HA-Tx), a balance slider control is provided to adjust the output of the hearing aid microphone relative to the other input.

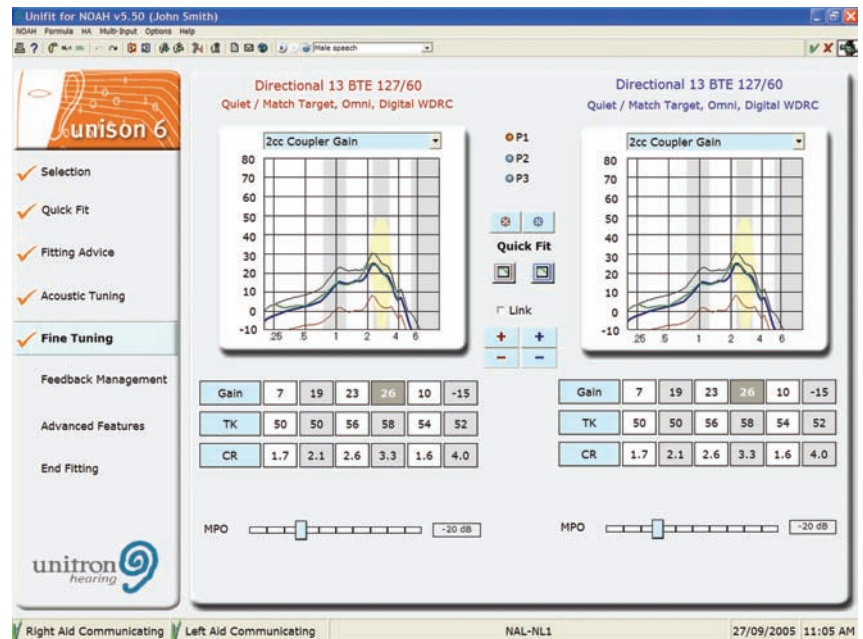





To fine tune the hearing instrument:

1. Select **Fine Tuning** from the left navigation bar.
2. Select the program to be adjusted (i.e. **P1**, **P2**, or **P3**).
3. To make changes to both hearing aids simultaneously, select the **Link** check box.



4. Depending on the processing strategy selected, controls are offered for:

Parameter	Adjusts
Gain	Gain for all inputs in selected frequency region
TK	Compression threshold for selected frequency region
CR	Compression ratio for selected frequency
MPO	Maximum output of the hearing instrument
ASP strength	Amount of low frequency attenuation as input level increases
ASP range	Frequency range over which ASP strength control has effect (ASP frequency transition point)

Note: With digital WDRC processing, a Basic Fine Tuning view can be selected from the Options menu which provides Soft, Loud and MPO fitting controls.

5. Click on the parameter to be adjusted. Your selection will appear in dark grey. To adjust the selected parameter, use the   and   buttons.
6. To re-Quick Fit the frequency response for any of the programs, select **P1**, **P2**, or **P3** and then **Quick Fit** for either the left or right hearing aid.
7. To move to the next screen in the fitting process, select the appropriate heading from the left navigation bar.


To conduct real ear measurements with non-speech signals:

1. Select the **Real Ear Measurement** mode  icon from the top toolbar. The adaptive features of the hearing aid will be disabled.
2. Use the Manual Fine Tuning screen to make your adjustments with the adaptive features turned off.
3. After finishing adjustments, click the  icon again to disable REM mode and re-enable all adaptive features.

Feedback Management Screen

During fitting, the adaptive feedback canceller (Unison 6, 3) is enabled by default. Even though the client may not hear feedback during the fitting, there may be fit-related feedback present which is being controlled by the adaptive feedback canceller.

To check for fit-related feedback and ensure optimal performance of the adaptive feedback canceller:

1. Click the **Check for Feedback**  button. This turns off the adaptive feedback canceller.
2. Listen for feedback.
3. If no feedback is present, select **No** and move to the next screen in the fitting process by selecting the appropriate heading from the left navigation bar. If feedback is present, instruct the client to sit quietly and select **Yes** to automatically start the Feedback Optimization test.

Note: The room must be quiet for the test to run successfully.



4. Review results of the Feedback Optimization test:

Curve Description	Represents:
Black curves	Programmed gain of hearing aid prior to performing feedback optimization
Blue curves	Maximum stable gain achieved without feedback when adaptive feedback canceller is disabled
Thick lines	Use-gain settings of the hearing aid
Thin lines	Full-on gain for hearing instruments with manual volume controls

5. Choose to **Accept**, **Re-run** or **Cancel** the results of the Feedback Optimization.

- If you choose **Accept**, the frequency response of the hearing aid is altered to reflect the new response suggested by the software and the adaptive feedback canceller will be re-enabled automatically.
- If you choose **Cancel**, the frequency response of the hearing aid will go back to levels set before the Feedback Optimization test, and the adaptive feedback canceller will be re-enabled automatically.
- If there is still feedback, choose **Re-run**.

6. To move to the next screen in the fitting process, select the appropriate heading from the left navigation bar.

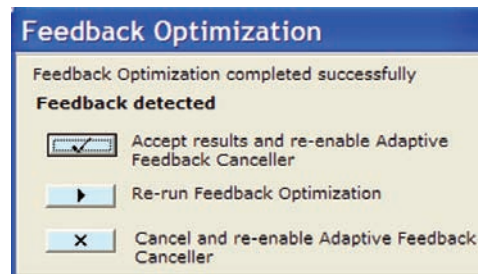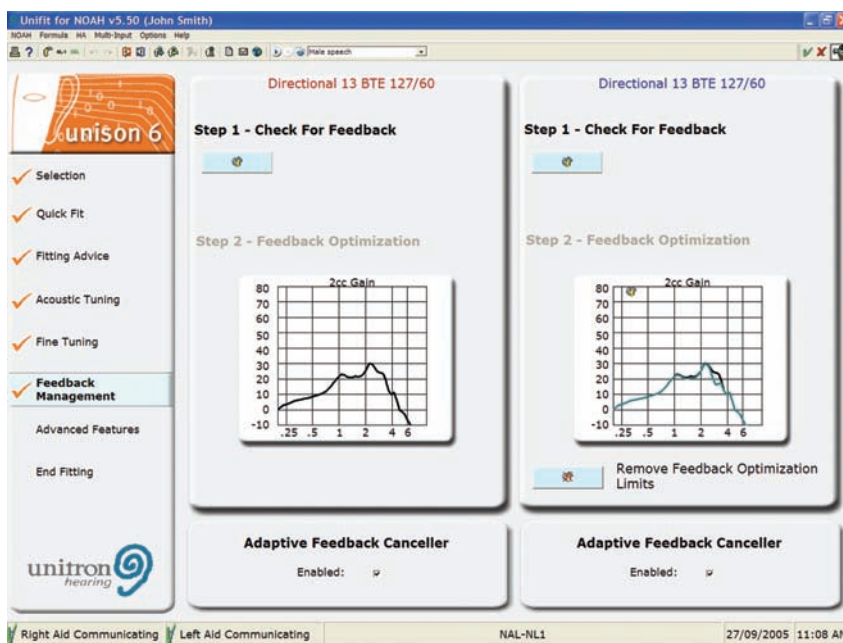


Advanced Features Screen

In the Advanced Features screen you can review the settings for Noise Reduction, Quiet Mode Expansion, Input, and Directional Roll-Off (when a directional microphone is selected). These settings will automatically default to suggested values based on the selected program environments.


*Note: If you want to apply changes to only one ear, deselect the **Link** checkbox.*

1. Choose the program you wish to adjust by selecting **P1, P2** or **P3**.
2. Choose the desired **Noise Reduction** setting: **Off, Mild, Moderate**, or **Maximum**.
3. Choose the desired **Quiet Mode Expansion** setting: **On** or **Off**.
4. Choose the desired **Input**: **Omni, Directional, Telecoil, Mic+Telecoil, DAI** or **DAI+Mic**, **CROS** or **BiCROS** (exact choices will depend on actual product and the chosen listening environment).
5. If **Directional** is chosen as the input, you can also adjust the **Directional (low frequency) Roll-Off slider**. Available choices are: **Minimum, Moderate**, or **Maximum**.

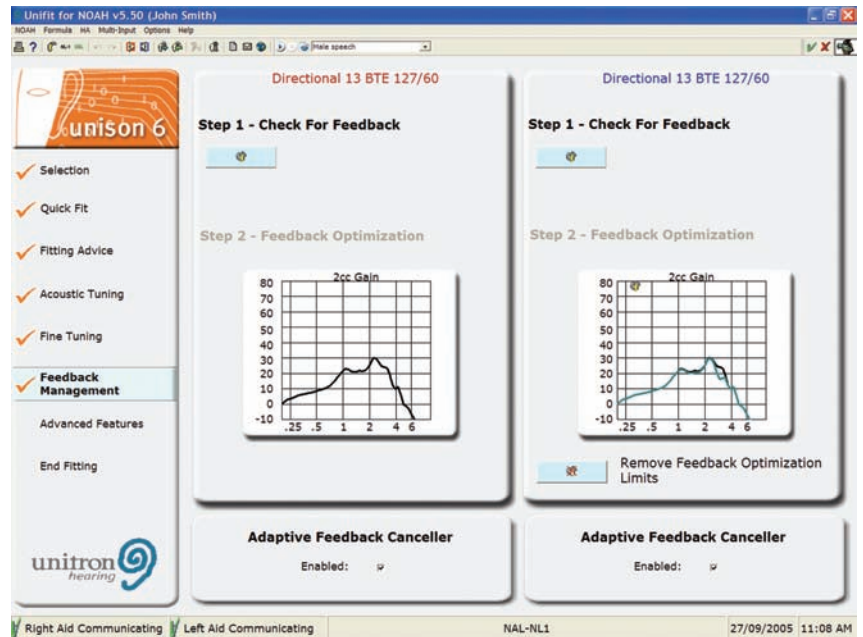

End Fitting Screen

To configure the End Fitting settings:

1. Use the slider controls to adjust the frequency (**Beep Hz**) and intensity (**Beep dB**) of the beeps if required. Select **Test** to demonstrate the beeps.
2. Turn on or turn off **program beeps, low battery beeps, ideal volume indicator** and **start up mute** by selecting or deselecting the appropriate check boxes.
3. For hearing aids with a manual volume control, **Volume Control** information is displayed: VC Range, Desired Reserve Gain, Actual Reserve Gain, and VC Position.
4. Once the hearing aids are disconnected, match the manual volume control position to the VC position shown on the End Fitting screen to achieve the desired amount of gain. This position is indicated by the ideal volume indicator beep.
5. If desired, hearing aid serial numbers can be entered for record keeping purposes by clicking in the field under **Serial Number**.
6. Select **Print** to print a client report, blank hearing aid order form and/or a Getting Started Guide for the wearer.
7. To exit, select **Exit** or the green check  at the top right of the screen. You will be prompted to save settings to the hearing aids and/or to the database.



8. Select **OK**.

