MENDOTA "SEABROOK" DIRECT VENT GAS FIREPLACE INSERT

Model D-30 Flat or Bay

(Bay unit not shown)



INSTALLATION & OPERATING INSTRUCTIONS



We recommend that our gas hearth products be installed and serviced by professionals who are certified in the U.S. by the National Fireplace Institute® (NFI) as NFI Gas Specialists.





WARNING: THIS APPLIANCE TO BE USED ONLY AS AN INSERT IN SOLID FUEL BURNING FIREPLACES.

<u>AVERTISSEMENT:</u> Cet appareil a etre employe seulment comme un inserer dans lecarburant solide brulant des cheminees.

NOTE: FOR INSTALLATION AS A NATURAL VENT (B-VENT) INSERT, SEE PAGE 13. ORDER THE 4" NATURAL VENT KIT FOR SINGLE FLEX LINER (#AA-11-388).

FOR YOUR SAFETY: DO NOT STORE OR USE GASOLINE OR OTHER	POUR VOTRE Sécurité: Ne pas entreposer ni utiliser d'essence ni d'autre vaperures ou li-
FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY	quides inflammables dans le voisinage de cet appareil ou de tout autre appareil.
OTHER APPLIANCE.	
FOR YOUR SAFETY: WHAT TO DO IF YOU SMELL GAS:	<u>POUR VOTRE Sécurité:</u> Que faire si vous sentez une odeur de gaz:
1. OPEN WINDOWS.	1. Ne pas tenter d'allumer d'appareil
2. DON'T TOUCH ELECTRICAL SWITCHES.	2. Ne touchez à aucun interrupteur. Ne pas vous servir des télé phones se trouvant dans le
3. DO NOT USE ANY PHONE IN YOUR BUILDING	batiment ou vous vous trouvez.
4. EXTINGUISH ANY OPEN FLAME	3. Evacuez la pièce, le bâtiment ou la zone.
5. IMMEDIATELY CALL YOUR GAS SUPPLIER FROM A NEIGHBOR'S	4. Appelez immédiatement votre fournisseur de gaz depuis un voisin. Suivez les instructions du
PHONE.	fournisser.
6. FOLLOW THE GAS SUPPLIERS INSTRUCTIONS.	5. Si vous ne pouvez rejoindre le fournisseur de gas, appelez le service dos incendies.
7. IF GAS SUPPLIER IS UNAVAILABLE, CALL YOUR FIRE DEPARTMENT.	
WARNING: IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION,	AVERTISSEMENT: Une installation, un réglage, une modification, un entretien ou une main-
SERVICE OR MAINTENANCE CAN CAUSE INJURY OR PROPERTY	tenance incorrects peuvent entrainer des dommages matériels, des lésions corporelles ou la perte
DAMAGE. REFER TO THIS MANUAL. FOR ASSISTANCE OR	de vies humaines. Consuter le manuel des usagers fourn avec ce generateur d'air chaud.
ADDITIONAL INFORMATION, CONSULT A QUALIFIED INSTALLER,	
SERVICE AGENCY, OR THE GAS SUPPLIER.	

MISE EN GARDE: Installation, réglage, modification, entretien ou depannage non appropriés pourront causer des blessures ou des dommages materiels. Réferéz-vous au manuel du proprietaire fourni avac cet appariel. Pour assistance ou renseignements complémentaires, veuillez consulter un installateur expérimenté, une agence dé depannage/entreitien ou cotre compagnie gaziére. Pour utilisation avec les portes en verre certifiée l'appareil suelement. Ne pas opérer avec le verriére enlever, craquelure, brise.

NOTE: FOR INSTALLATION AS A NATURAL VENT (B-VENT) INSERT, SEE REPLACEMENT MANUAL INCLUDED WITH THE 4" NATURAL VENT KIT FOR SINGLE FLEX LINER (#AA-11-388).

TABLE OF CONTENTS

GENERAL INFORMATION	3
SPECIFICATIONS & CLEARANCES	4
INSTALLATION INSTRUCTIONS	6
FLUE VENTING	7
RAISED HEARTH SPECIFICATIONS	15
GAS SUPPLY REQUIREMENTS	16
GAS PRESSURE REQUIREMENTS	17
INSTALLATION CHECK OFF LIST	18
LIGHTING INSTRUCTIONS	19
LOG INSTALLATION	20
WALL SWITCH, REMOTE CONTROL OR THERMOSTAT OPERATION	25
BLOWER AND WIRING INSTALLATION OPERATION	26
CUSTOMER INFORMATION AND TROUBLE-SHOOTING	28
TROUBLE SHOOTING	29
MAINTENANCE	.30
PARTS LIST	31
NATURAL TO LP CONVERSION	32
INTERTEK TESTING GAS LABEL	34
WARRANTY	35

SPECIFICATIONS

MODEL D-30

High Fire - Adjustable to - Low Fire

BTUH.	NAT. GAS	30,000	19,900
BTUH.	L.P. GAS	29,000	16,200

NOTE: LP CONVERSION KIT #HA-28-00194 MUST BE PURCHASED SEPARATELY. – SEE PG. 28 FOR INSTALLATION INSTRUCTIONS.

MAIN ORIFICE:	#35 NAT., #52 LP		
OVERALL EFFICIENCY	EXCEEDS D.O.E.	EFFICIENCY F	REQUIREMENTS (A.F.U.E.)
FLUE VENT LINERS	CO-LINEAR - 4" D	IAMETER EX	HAUST & 4" DIAMETER INLET or
	CO-AXIAL - 4" DI	AMETER EXH	AUST & 6" DIAMETER INLET
TOTAL WEIGHT	175#		
SAFETY	AGA CERTIFIED	PILOT GENER	ATOR, MILLIVOLT SYSTEM
	ACTIVATED WIT	H SWITCH, RH	EMOTE CONTROL OR THERMOSTAT.
GAS REQUIREMENTS	<u>SUPPLY PRESSUR</u>	<u>RE</u> : GAS INL	LET: 3/8" N.P.T.
	NAT. GAS:	7" W.C.	[5.0" W.C. MIN., 11" W.C. MAX.]
	L.P. GAS:	11" W.C.	[11" W.C. MIN., 13" W.C. MAX.]
ELECTRICAL REQUIREMENTS	. 120 VOLT		

LISTINGS....INTERTEK TESTING SERVICES TESTED TO: ANSI Z21.11.1-1993 & CAN1-2.1 M89 "GAS-FIRED VENTED ROOM HEATERS" & CAN/CGA 2.17-M91 "GAS-FIRED APPLIANCES FOR USE AT HIGH ALTITUDES", ANSI Z21.44-1995 "GAS-DIRECT VENT WALL FURNACES" AND CGA INTERIM REQUIREMENT #41-M91 "DIRECT VENT GAS FIREPLACES" AND UL307B "MOBILE HOME, APPROVED EXCEPT RECREATIONAL VEHICLES"

Gas appliances must be tested and certified by a nationally recognized testing and certification agency to American National Standards Institute - ANSI Gas Appliance Safety Standards. For more information see Pg. 34. The Mendota Gas Fireplace Insert has been tested and certified by Intertek Testing Services. 8431 Murphy Drive, Middleton, WI 53562.

INSERT INCLUDES HEARTHGLO COMBUSTION SYSTEM, DUAL HOT AIR BLOWERS, 6 CERAMIC FIBER LOG MODULE & COALS, NEO-CERAM GLASS, PIEZO IGNITER AND AGA CERTIFIED SAFETY SYSTEM.

OPTIONS: BLACK OR GOLD PLATED GRILL SETS, BLACK OR GOLD FILIGREE FRONTS, BLACK ARCHED DOOR KITS (ANDOVER), FEDERAL & CONTEMPORARY TRIM KITS, 3 SIZES OF SURROUNDS & 2 SIZES OF VENTING KITS.

CONGRATULATIONS!

You are the owner of a world class heat producing gas fireplace insert.

This elegant, highly efficient insert will be a constant source of comfort and fascination. It will be the focal point of beauty and interest in your home.

The Mendota Gas Fireplace Insert is a true heating appliance incorporating the traditional aesthetics of fireplace fire viewing with the controllability and fuel efficiency of a home gas furnace. Of particular interest is the low fuel consumption and brilliant fire viewing afforded by the patented realistic HearthGlo wood firelike combustion system.

Carefully read the following instructions prior to actual installation. Proper Mendota Gas Fireplace Insert installation and operation will give you years of safe trouble free comfort and enjoyment.

If you have any questions regarding installation or operation of your Mendota Fireplace Insert please contact your local dealer.

.....CAUTION.....

FOR YOUR SAFETY do not install or operate your Mendota Gas Fireplace Insert without first reading and understanding this manual. Any installation or operational deviation from the following voids the Mendota Gas Fireplace Insert Warranty and may prove hazardous:

Due to high temperatures, the Fireplace in which the Insert is to be installed should be located out of traffic and away from furniture and draperies. Children and adults should be alerted to the hazards of high surface temperature and should stay away to avoid burns or clothing ignition. Young children should be carefully supervised when they are in the same room as the Mendota Gas Fireplace Insert.

Clothing or other flammable material should not be placed on or near the Insert.

Mendota Inserts are designed for installation only in vented non-combustible fireplaces. Any fireplace in which an Insert is to be installed <u>MUST</u> be vented to the outside in accordance with the latest addition of Natural Fuel Gas Code. Do not connect this appliance to a chimney flue serving a separate solid fuel burning appliance. Any grill, panel or glass removed for servicing the Insert <u>MUST</u> be replaced prior to operating the Insert.

The Mendota Gas Insert is a powerful, efficient heating unit. It has been designed as a major source of supplemental heat. It should not take the place of, or be used as, a whole house heating system.

Installation and repair should be done by a qualified service person. The Insert should be inspected before use and at least annually by a professional Mendota approved service person. More frequent cleaning may be required due to excessive lint from carpeting, bedding material, etc. It is imperative that control compartments, burners and air passageways be kept clean.

DO NOT use this insert if any part has been under water or exposed to moisture corrosion. Immediately call a qualified service technician to inspect the Fireplace Insert and replace any part of the control system and any gas control, which has been under water. DO NOT use this insert if burner does not light <u>immediately</u>. If burner does not light promptly, turn off unit and call your Mendota dealer.

It is Johnson Gas Appliance Company's policy that no responsibility is assumed by the Company or by any of its employees or representatives for any damages caused by an inoperable, inadequate, or unsafe condition, which is the result, either directly or indirectly, of any improper operation or installation procedures.

INSTALLER: THESE INSTRUCTIONS ARE TO REMAIN WITH HOMEOWNER.

GENERAL INFORMATION

Your Mendota Gas Fireplace Insert has a state-of-the-art direct vent, sealed combustion system. This advanced, highly efficient system brings in outside air for combustion, has a separate exhaust vent and efficiently heats and re-circulates room air. The Mendota system maintains high air quality, maximizes efficiency and assures proper operation.

SAFETY AND STRUCTURAL CONCERNS:

The D-30 Fireplace Insert must be installed and serviced by a Mendota approved service person. Any adjustments to burner, pilot, logs or coal bed <u>must</u> be made by a Mendota approved service person. Pilot flame must be checked with volt meter. Pilot flame <u>must</u> register a <u>minimum</u> of 450 on (DC) millivolt meter. If pilot goes out, always wait five (5) minutes before relighting pilot. ALWAYS REMOVE THE GLASS WHEN LIGHTING THE PILOT. The burner <u>must</u> light immediately and the flame must travel promptly and smoothly around "curve" and light entire burner. The flame must <u>not</u> "lift" off the burner. <u>NEVER BLOCK OFF UPPER OR LOWER GRILLS. ALWAYS USE MENDOTA GRILLS, MENDOTA VENT SYSTEMS AND MENDOTA APPROVED VENT CAPS.</u>

A non-combustible hearth protector is required and must extend a minimum of 16" in front of the glass face of the fireplace.

VENTING REQUIREMENTS:

Use only Mendota specified vents and vent caps when installing your fireplace insert. All vent pipe sections must be tight and leak proof.

HEATING PERFORMANCE

The Mendota D-30 Fireplace Insert is a true, high efficiency gas heater. With a heat output of 23,500 BTUH, the Mendota Insert will usually heat a large area of your home if situated to maximize heat circulation. **NOTE:** The Mendota Insert is designed as a supplemental heat source. It should <u>not</u> be used as a whole house heating system. Supplemental air movement considerations for maximizing heat circulation are: through-the-wall grills, floor grills, ceiling fans, or the continuous operation of central heating and cooling blowers. The most EFFICIENT and successful method for overall heat distribution is a ceiling fan. Additional information on heat is given on Pg. 28 "Customer Information". The heat output of the Insert can be reduced by up to 10,000 BTUH by slowly turning the Hi/Lo temperature knob on the front of the gas valve counterclockwise from "Hi" to "Lo". The blowers can also be turned down to reduce heat output.





ELECTRICAL REQUIREMENTS

A 120 volt electrical service must be supplied at the fireplace location at the time of installation. The supplied blower power cord plug must be connected to this 120 volt electrical receptacle.

The blowers must be electrically grounded in accordance with local codes or in the absence of local codes, with the National Electric Code ANSI/NFPA 70-1987. The blowers are equipped with a three-prong (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle. **DO NOT CUT OR REMOVE THE GROUNDING PRONG FROM THIS PLUG!** If an optional thermostat is installed, thermostat wire should be run from desired thermostat location (or "on/off" switch) to the gas control (located behind lower grill) — see optional thermostat installation section. Inlet holes are provided on left and right sides for electrical and gas connections.

MENDOTA GAS DIRECT VENT FIREPLACE INSERT SPECIFICATIONS & CLEARANCES





CO-LINEAR VENT ADAPTER

MENDOTA GAS DIRECT VENT FIREPLACE INSERT SPECIFICATIONS & CLEARANCES



C	U-1	AVIAL	VEINI	ΑD	AF	EK	
-			_			-	

D-30 Surround Dimensions				
	Α		В	
	Inches	mm.	Inches	mm.
No Brass Trim	24	610	36	915
	27	686	40	1016
	31	788	44	1118
With Brass or	24 3/32	612	36 3/16	919
Black Trim	27 3/32	688	40 3/16	1021
	31 3/32	790	44 3/16	1122

rocid i b co barroana bintensions	FIGURE 2:	D-30	Surround	Dimensions
-----------------------------------	-----------	-------------	----------	------------

INSTALLATION INSTRUCTIONS

CAUTION: Each installation must conform to all local, state and national codes. Refer to the national fuel gas code and local zoning and code authorities for details on installation requirements. The Mendota Inserts must be vented to the outside in accordance with the latest edition of the National Fuel Gas Code. In the absence of local codes, the installation must conform to National Fuel Gas Code ANSI Z223.1 (NFPA 54), or Canadian Code CAN1-B149 or most current edition, also known as NFPA 54. Do not connect this Insert to a chimney flue serving a separate solid fuel or gas burning appliance.

- 1. Remove glass doors, metal fire screens, etc. from existing fireplace. Be sure there is 12" minimum distance from top of upper grill to bottom of mantel; see Specifications [Pg.4 & 5], and a 16" minimum non-combustible hearth extension in front of the glass surface if a raised hearth is not supplied. (See pg. 15 for "Raised Hearth").
- 2. Remove any additional framework or other obstructions in the existing fireplace opening and burning area. Also remove any chimney cap from top of chimney so that vent liner can be installed freely.
- 3. Before Insert is installed, have gas supplier or contractor run gas line to the existing fireplace. <u>Be sure</u> gas plumbing instructions [see Pg. 16 & 17] are carefully followed. Gas supply may enter fireplace on either side or back of fireplace, whichever is most convenient and accessible. Electrical service (120 volt) should also be supplied [See electrical requirements on Pg. 3 and blower instructions on Pg. 26].
- 4. The entire chimney should be swept to remove creosote, soot and any obstructions (bird nests, etc.).
- 5. Open fireplace damper. If damper opening is large enough to accept 4" and 6" flue liners, permanently secure damper in "open" position NOTE: *Massachusetts requires that the flue damper must be removed or permanently welded in the "open" position*.
- 6. If damper opening is too small for the 4" & 6" flue liners, it will be necessary to remove the damper handle and the damper plate. Some damper plates are held in place by a pinned hinge, which can be released easily by tapping out the pin with a hammer and punch. Others may be held in place by a screw or bolt, or pivots may be cast into the damper housing. The latter types may be harder to get out and may require sawing or breaking out. [NOTE: if flue size is 6" (127 mm) or less, or if severe offsets occur, or a significant mortar slop is evident between the liners, try to snake liner down the chimney to the top of the damper housing before breaking out damper plate and housing.]

CAUTION: If 4" & 6" flue liners cannot be installed in an extremely tight chimney <u>DO NOT</u> proceed with installation.

7. If damper opening is narrower than 4-1/2" to 5" (114 mm to 127 mm) and if local code authorities allow, loosen and remove mortar behind back side of damper housing in the center of the opening enough to get the gripping teeth of a pipe wrench over the flange of the damper housing (for cast iron housings). Tighten the wrench snugly, and kick down on the wrench handle to break out a half moon shaped piece of the damper housing, enough to easily fit the flex liner through it. If the opening is wide enough, the break out is not necessary.

8. INSTALL INSERT ONLY IN CHIMNEY HEIGHTS OF 12' (MINIMUM) TO 35' (MAXIMUM) -- AS MEASURED IN STEP 9 BELOW.

9. Measure the chimney height from the top of the chimney (or the existing flue liner) to a point 20" (508 mm) above the floor of the fireplace hearth. [See FIGURE pg. 8] It may be necessary to drop a rope and measure the rope itself. Be sure to allow for all offsets in existing chimney. Cut the 4" diameter flex liner (s) to this measured length.

FLUE VENTING

10. The D-30 Insert must be vented vertically to the outside and must use the Mendota flexible ducting system. There are two methods for venting Mendota Direct Vent Inserts: 1) Co-Axial and 2) Co-Linear







NOTE: THE INSERT IS DESIGNED, TESTED & LISTED FOR OPERATION ONLY WITH MENDOTA INSERT VENTING COMPONENTS AS LISTED IN FIGURES 3 & 4 AND THE DRAWING ABOVE.

11. (See FIGURE 4) The vent kits include a trimable flashing. Measure, trim and shape flashing to fit the existing flue liner. This flashing prevents water and small animals from entering area between the chimney liner and flue liner. Plan for 1" to 1-1/2" (25 mm to 38 mm) overlap on each side. Center the flashing and mark it about 3" (75 mm) larger in each dimension than the existing chimney. Trim the notch with snips and bend edges with had seaming tool, metal break or pliers.





FIGURE 4: Chimney Flashing and cap

12. Attach a sheet metal strap loop to the flex end of the liner(s) and tie a rope to it. Two installers should proceed to the roof and drop the rope (with weight on the end to make sure it goes all the way down) and insert the liner(s) past the flexible portion, into the existing chimney [See FIGURE 5].

NOTE: Repeat this step for second liner on chimneys 9" and larger.





13. One installer should then return to the fireplace opening and pull the rope to guide the liner(s) into place through the smoke shelf and the damper opening to a point 20" (508 mm) above the fireplace hearth [See FIGURE 5]. It may be necessary for the person on the roof to turn the liner slightly to avoid mortar chinks and misaligned tiles. The person below should wear leather gloves during this process to avoid being cut.

CAUTION: WHEN USING FLEX ALUMINUM LINER, USE EXTREME CAUTION WHEN STRETCHING LINER AROUND OFFSETS SO AS NOT TO RUPTURE LINER.

14. TYPICALLY FOR FACTORY BUILT ZC FIREPLACES, REFER TO PAGE 7.

Use Mendota Co-Axial Vent Kit -- # AA-11-00378

4" <u>exhaust</u> flex pipe extends full length of chimney - from vent boot adapter to vent cap. 6" <u>inlet</u> flex pipe extends from vent boot adapter to existing chimney, above damper area (approx. 4 - 5 ft.). Tightly secure flex vents with clamps provided. Seal vent cap/flashing to top of chimney with weatherproof sealer. Seal area between 6" flex pipe and chimney, at damper area, with unfaced fiberglass insulation.

NOTE: In Canada, it is required that the 6" *air inlet flex pipe extend up to the vent cap.*

15. TYPICALLY FOR MASONRY FIREPLACES, REFER TO PAGE 7.

Use Mendota Co-Linear Vent Kit -- # AA-11-00377

4" <u>exhaust</u> flex pipe extends full length of chimney - from vent boot adapter to vent cap. 4" <u>inlet</u> flex pipe extends from vent boot adapter to existing chimney, above damper area (aprox.4-5 ft.). Tightly secure 4" flex pipes using clamps provided. Seal vent cap/flashing to top of chimney with weatherproof sealer. Seal area between 4" flex pipes and existing chimney, at damper area, with unfaced fiberglass insulation.

NOTE: In Canada, it is required that the 4" air inlet flex pipe extend up to the vent cap.

16. You are now ready to install the Mendota Gas Insert.

A. Lift Insert vertically from carton/pallet.



FIGURE 6 Glass Door Removal

- 17. Remove 5/16" nut and locking u-clamp from vent boot adapter (See Pg. 13).
- 18. You are now ready to hook up the Insert to gas supply. Be sure gas plumbing instructions [Pg. 16 & 17] and all state and local codes have been carefully followed. Be sure all items on Installation Check-Off List [Pg. 18] have been completed.

NOTE: AGA APPROVED FLEX LINES ARE APPROVED FOR USE WITH MENDOTA INSERTS.

19. Carefully slide the Insert into place in the fireplace opening. At this time, check that Insert is level and plumb with the fireplace opening and positioned in the middle of the opening. If Insert is unsteady or needs leveling, the unit may be leveled by "shimming" body with non-combustible bricks or steel washers.



FIGURE 7: Draft Diverter Installation

- 20. VENT BOOT ADAPTER INSTALLATION:
 - A. Remove 2 sheet metal screws inside top of firebox at front edge.
 - B. Remove exhaust baffle by dropping front edge downward and lifting rear edge off ledge. Set aside baffle for later re-installation.
 - C. Reach up through firebox opening and pull vent boot adapter downward until threaded rod is visible.

NOTE: Co-Linear vent boot adapter may be rotated 360° as required.

21. FINAL VENT BOOT ADAPTER INSTALLATION

- A. Place u-clamp over threaded rod. Thread clamping nut on threaded rod and tighten firmly.
- B. Reinstall exhaust baffle by placing rear edge on ledge, swinging front edge upward and reinstalling two (2) sheet metal screws. **CAUTION: The exhaust baffle <u>must</u> be reinstalled before operation.**





CO-AXIAL

NATURAL VENT (B-VENT) SYSTEM INSTALLATION



22. The proper Insert surround can now be placed in position. Assemble surround by following instructions supplied with surround kit. Surround kits are available for use with each model Mendota Insert. Select the size of the surround to fill the area between the Insert and existing fireplace opening. (Fig.2, pg. 5)

D-30 GRILL INSTALLATION



FLAT FRONT

BAY FRONT

FIGURE 8

.....IMPORTANT.....

NOTE: INSTALLATION, SERVICING AND REPAIR MUST BE DONE BY A QUALIFIED SERVICE PERSON. THE INSERT SHOULD BE INSPECTED AT LEAST ANNUALLY BY A PROFESSIONAL SERVICE PERSON. MORE FREQUENT CLEANING MAY BE REQUIRED DUE TO EXCESSIVE LINT FROM CARPETING, BEDDING MATERIAL, ETC. IT IS IMPERATIVE THAT THE CONTROL COMPARTMENT BURNERS AND CIRCULATING AIR PASSAGEWAYS OF THE INSERT BE KEPT CLEAN.

RAISED HEARTH SPECIFICATIONS





In most installations, a 16" non-combustible protector is required in front of the glass surface of the unit on the floor or raised hearth. This protection can be any non-combustible material such as 24 gauge sheet metal, tile, brick, concrete board, etc. If replacing a wood-burning insert with this gas insert, the existing and approved hearth protection will provide adequate floor protection.

If a raised hearth extends less than 16", refer to the diagram above and the following procedure to see if additional floor protection is required.

Project a line (using string or a tape measure) from the top of the lower grill to the edge of the raised hearth, continuing on to the floor. If the point of intersection with the floor is beyond 16" from the Insert, then no further floor protection is required. If the intersection is less than 16" from the Insert then additional non-combustible floor protection is required to meet the minimum 16".

For installations where the fireplace is raised 16" or more (from the top of the lower grill) above the floor or if the floor is non-combustible (stone, brick, etc.), a non-combustible protector is not required.

GAS SUPPLY REQUIREMENTS

CORRECT GAS PRESSURE AND PROPER GAS SUPPLY LINE SIZING IS IMPERATIVE TO THE SUCCESSFUL PERFORMANCE OF YOUR MENDOTA GAS FIREPLACE INSERT. BE SURE THE GAS SUPPLIER OR PLUMBER CAREFULLY CHECKS FOR CORRECT GAS PRESSURE AND GAS LINE SIZING WHEN INSTALLING THE FIREPLACE INSERT.

IT IS CRITICAL TO CAREFULLY CHECK FOR GAS LEAKS WHEN HOOKING UP THE FIREPLACE INSERT -- CHECK WITH SOAP & WATER SOLUTION.

BE SURE TO INSTALL FLEX GAS LINE WITH BRASS-TO-BRASS FITTINGS TO PREVENT GAS LEAKS AT CONNECTIONS.

GAS SUPPLY PIPING MUST INCLUDE A DRIP LEG TO ELIMINATE THE POSSIBILITY OF CONTAMINANTS ENTERING THE GAS TRAIN. ADHERE STRICTLY TO LOCAL AND NATIONAL CODES.

GAS SUPPLY LINE SIZING

The Mendota Gas Insert comes equipped with a 3/8" N.P.T. [1.0 cm] inlet on the main gas valve. Gas supply piping may enter the cabinet from either the left or right side.

The proper gas line diameter must be selected to run from the supply regulator to the Insert. Refer to the following table for proper gas pipe diameters.

PIPE LENGTH [FEET]	SCHEDULE 40 PIPE INSIDE DIA.		TUBING, TYPE L OUTSIDE DIA.	
	NAT.	<i>L.P.</i>	NAT.	<i>L.P</i> .
0-10	1/2" [1.3 cm]	3/8" [1.0 cm]	1/2" [1.3 cm]	3/8" [1.0 cm]
10-40	1/2" [1.3 cm]	1/2" [1.3 cm]	5/8" [1.6 cm]	1/2" [1.3 cm]
40-100	1/2" [1.3 cm]	1/2" [1.3 cm]	3/4" [2.0 cm]	1/2" [1.3 cm]
100-150	3/4" [2.0 cm]	1/2" [1.3 cm]	7/8" [2.3 cm]	5/8" [1.6 cm]
150-200	3/4" [2.0 cm]	1/2" [1.3 cm]	7/8" [2.3 cm]	3/4" [2.0 cm]
NOTE: Some areas allow copper tubing or galvanized pipe - check with local approval agencies and codes NEVER use plastic pipe.				

GAS PRESSURE CHECKING REQUIREMENTS

A pressure tap for checking gas pressure is located on the main gas valve. A qualified installer should use this fitting for setting the correct gas pressure during initial installation. [See Gas Pressure Chart Pg. 17].

If supply gas pressures exceed 1/2 PSIG [3.5KPA], the appliance must be isolated from its supply with an approved manual shutoff cock. This manual shut-off cock must be closed during any supply line pressure testing. Check with your gas supplier or plumber.

Figure 10



FIGURE 11: Piping Detail

GAS PRESSURE REQUIREMENTS

A MAJOR CAUSE OF OPERATING PROBLEMS WITH GAS APPLIANCES CAN BE IMPROPER GAS PRESSURE!

Such problems as changes in flame color or configuration, gas pilot or burner outages, intermittent operation, changes in heat output, excessive burner noise, etc. are nearly always the result of changes in gas pressure or improper gas pressure at the time of the installation. The most important item to check during the installation and the first thing to check when problems occur is gas pressure!

Gas supplies normally enter a residence at 1/2 PSI [13" - 15" W.C.] [3. KPA]. A regulator is then placed inside the residence, which drops this pressure to 7" W.C. [1.8 KPA] [Nat. Gas]. This "inches to inches" regulator is of adequate capacity to service the gas appliances (such as dryer, furnace, etc.). If this regulator's capacity is not sufficient to add the Gas Insert, an additional "inches to inches" regulator must be installed for the Insert. EXCEPTION: Some codes allow 2 PSI [1.4KPA] supplies to enter the residence, in which case "pounds to inches" regulators are used.

The following table provides information on correct gas pressure requirements. <u>Be sure your gas supplier or plumber</u> <u>carefully follows this table</u>.

GAS PRESSURE REQUIREMENTS

	DESIRED INLET PRESSURE	MINIMUM INLET PRESSURE	MAXIMUM INLET PRESSURE	MANIFOLD OUTLET PRESSURE	AIR SHUTTER POSITION
NATURAL GAS	7.0'' W.C. (1.75 kPa)	5.0" W.C. (1.12 kPa)	11.0" W.C. (2.61 kPa)	3.5" W.C. (0.87 kPa)	1/8" - 1/4" OPEN (7 mm)
L.P. GAS	11.0'' W.C. (2.75 kPa)	11.0" W.C. (2.75 kPa)	13.0" W.C. (3.24 kPa)	10.0" W.C. (2.5 kPa)	1/2" OPEN (14 mm)

TURN GAS VALVE KNOB TO "HIGH" POSITION. GAS PRESSURES MAY VARY PLUS OR MINUS 5%

1/8" Brass pressure tap fittings are located on the main gas valve. Manifold pressure <u>must</u> be taken at the "OUT" tap and the inlet pressure at the "IN" tap **with the burner operating** by a qualified installer.

[See FIGURE 11 Pressure Test Port].



FIGURE 12: Pressure Test Port

L.P. AND NATURAL GAS SUPPLIES

The Mendota Gas Insert is available for either L.P. or Natural Gas. A Natural Gas to LPG conversion kit is supplied with the unit.

INSTALLATION CHECK OFF LIST

The following check list must be completed prior to initial lighting of the Fireplace Insert, or manufacturer's warranty and liabilities will be voided:

Venting system must be installed by a Mendota approved person according to Figure 3, Pg. 7 with clamps securely in place and all joints leak proof.
Electrical supply and gas supply must be properly installed and must conform to National and Local Codes.
Check that correct fuel supply is connected to appliance. Check correct gas pres- sure, correct size gas lines and for gas leaks.
Proper clearances to combustibles must be maintained.

LIGHTING CHECK OFF LIST

Be sure to check these items before final operation of the Fireplace Insert

All items on "Installation Check Off List" must be completed.
Connect Rocker Switch, Wall Switch, Remote Control or Thermostat to main valve.
Carefully follow all lighting and log installation instructions.
Take system millivolt readings [See Pg. 30] Be sure pilot flame has a minimum of 450 millivolts.
Make certain that burner lights immediately and flame runs promptly around "curve" in burner and lights entire burner. DO NOT proceed with operation unless burner cycles "on/off" without delays and that the flame is "stable" and <u>not</u> "lifting" off burner.
Caution: If pilot goes out be sure to wait a <u>minimum</u> of <u>5 minutes</u> before relighting. Always light pilot with glass and logs <u>removed</u> .

LIGHTING INSTRUCTIONS

IMPORTANT: Be sure all items on "LIGHTING CHECK OFF LIST" [Pg. 17] have been completed!

CAUTION: If the pilot goes out, be sure to wait a minimum of five minutes before relighting - be sure to <u>always</u> remove the glass before relighting the pilot. (See Pg. 10)

- 1. Remove Glass. <u>ALWAYS LIGHT PILOT WITH GLASS REMOVED</u>! (see Fig. 6 pg. 10)
- 2. Make sure any gas supply shut-off cocks are open and On-Off Switch is "OFF".
- Push in Gas Cock Dial slightly and turn clockwise to "OFF". NOTE: Dial cannot be turned from "PILOT to "OFF" unless dial is pushed in slightly. DO NOT FORCE!
- 4. Wait five [5] minutes to allow gas, which may have accumulated in main burner compartment to escape. If you smell gas STOP!



FIGURE 13: Gas Valve

- 5. Turn Gas Cock Dial Counterclockwise to "PILOT" position [See FIGURE 13].
- 6. Depress Gas Cock Dial and push in red Piezo igniter button. Once pilot ignites, continue depressing dial for about 1/2 minute. If pilot does not remain ignited, repeat operation allowing a longer period before releasing Gas Cock Dial.

IMPORTANT: After pilot is lit, system Millivolt readings and gas pressure should be taken by qualified installer. **Pilot flame must register a minimum of 450 millivolts (See pg.** Error! Bookmark not defined.).

Note: The Honeywell Gas Valve is equipped with a safety lockout feature. If gas flow is interrupted to the pilot light before the thermocouple is adequately heated to maintain a standing pilot, the pilot flame will go out and the Gas Valve will go into a Lockout mode. You will not be able to turn the Gas/Pilot Knob in either direction during this lockout phase. Wait 30 seconds to let the thermocouple cool down and reset the Gas Valve before attempting to light the pilot light again. Gas/Pilot knob function will resume after the 30 seconds.

7. After pilot is lit and <u>before</u> installing logs, turn Gas Dial and Rocker Switch to "ON" and "cycle" the burner on/off to make certain it ignites promptly and that the flame runs smoothly around entire burner.

Note: Logs will produce a strong acrid odor on initial contact with flames (about 2 hours).

- 8. With pilot operating, install logs and coals. With logs/coals in place, "cycle" the burners again to make sure of prompt ignition of burner. NOTE: Flames may not come through coals until glass is installed and logs are "hot" (approx. 10 Min.). To make final flame color adjustment wait 15-20 minutes, with glass installed. [See Pg. 29].
- 9. Reinstall glass. In daily operation, always light burner with glass in place.
- 10. When heat or a log fire is desired, turn Gas Dial counterclockwise to "ON". Rocker Switch, Thermostat or Remote Control must also be turned "ON".
- 11. Main burner should now light <u>IMMEDIATELY</u> and flame should not "lift" off burner. If there is any delay in ignition or if flame is "lifting off" burner, turn off burner and carefully check for proper installation of logs/coals, vent system and proper pilot flame impingement on burner and thermopile. Logs or coals must <u>not</u> block pilot flame or main burner flame. Vent system must be leak proof.

DO NOT PROCEED WITH OPERATION UNLESS BURNER "CYCLES" ON/OFF WITHOUT DELAYS!

- 12. To reduce heat output, turn Hi/Lo Knob counterclockwise to desired temperature. NEVER "over fire" by increasing BTUH above nameplate specifications. NEVER turn down pilot flame below the required 450 millivolts.
- 13. Open windows for first 2 hours of operation and provide adequate cross ventilation in the room.

NOTICE: Initial fireplace start-up will cause some NON-TOXIC "off gassing" of adhesive, gasket binders, paint and other materials. Most nuisance odors will be eliminated after the first two hours of operation; however, slight amounts may be present during the first 24 hours of operation.

SHUT DOWN PROCEDURE:

- 1. Turn Rocker Switch, Remote Control or Thermostat to "OFF". Pilot will remain lit for return to normal service.
- 2. For complete shutdown turn Rocker Switch and Gas Cock Dial to "OFF".

LOG INSTALLATION

- 1. Carefully unpack 6-piece log set and bag of coals. NOTE: Logs are very fragile, handle with care.
- 2. Before installing glass door or logs, light pilot (See pg. 19) and cycle burner to make sure burner lights promptly and that the flame runs smoothly around burner curve and lights entire burner.
- 3. With pilot operating, follow LOG INTALLATION STEPS 1-9, below.
- 4. Place coals on front coal tray <u>ONLY</u>! Be sure to "fill" entire front tray with coals for true "realistic" wood log fire appearance. <u>Coals must not block pilot or burner flame</u>! (Additional coals may be scattered on firebox floor for realism). Placement of coals has a big effect on front burner flame appearance and "glow" of coals. More coals = less flame and more glow. Fewer coals = more flame, less "glow".
- 5. Cycle on main burner to insure the flame smoothly runs around the curved section of the burner and lights front burner with no delays. If there are any delays in ignition or flame movement it will be necessary to check for correct positioning of logs and coals (coals or logs must <u>not</u> block pilot flame or burner flame) and to check pilot flame with millivolt meter (See Pg.30). Pilot flame <u>must</u> register a minimum of 450 millivolts. Check that flame is "stable" and not "lifting" off burner. DO NOT proceed with operation unless entire burner lights <u>immediately</u> and flame is not "lifting" off burner.
- 6. Reinstall glass. You can now proceed with normal daily operation. <u>In daily operation main burner should always</u> be lit with Insert glass in place.
- 7. Heat can be reduced by turning Hi/Lo Knob on Gas Valve counterclockwise to desired gas input. Blowers can also be turned down to reduce heat output.

NEVER "over fire" by increasing BTUH above nameplate specifications. NEVER turn down pilot flame below required 450 millivolts.

NOTE: The Mendota Gas Fireplace Insert is designed to limit combustion air for maximum heating efficiency. Because of this high efficiency design the realistic "orange" flame color may take 15-30 minutes to appear. When the Fireplace Insert is first turned on the flame will be transparent or slightly "bluish". After about 15-30 minutes of operation the logs will heat up and the gas flame will become a realistic yellow-orange color. (See "Air Shutter Adjustment" page 29)



LOG INSTALLATION STEP 1











LOG INSTALLATION STEP 6







WALL SWITCH, REMOTE CONTROL OR THERMOSTAT OPERATION

The Insert comes with an "ON-OFF" Rocker Switch located in the lower right hand corner of the surround. An optional Wall Switch, remote control or thermostat may be purchased to substitute for the Rocker Switch. A thermostat should be placed in the same room as the fireplace, approx. 4-5 ft. off the floor. <u>Do Not</u> place thermostat near the fireplace. Thermostat <u>must</u> be 450 to 750 Millivolt rated. An on-off wall switch or remote control may be used if Insert is not used primarily as a supplementary heat source. When installed in a sleeping area, a thermostat is required.

NOTE: If thermostat is located over 25 ft. from the fireplace the pilot flame may need to be increased.

CAUTION: BURNER SHOULD LIGHT IMMEDIATELY AFTER TURNING WALL SWITCH OR THERMOSTAT "ON". IF BURNER DOES NOT COME ON IMMEDIATELY TURN THE THERMOSTAT/WALL SWITCH OFF AND WAIT 60 SECONDS BEFORE TURNING ON AGAIN. IF BURNER DOES NOT COME ON IMMEDIATELY AFTER SECOND TRY RECHECK COMPLETE INSTALLATION OF LOGS, PILOT, ETC. TO INSURE PROPER PILOT FLAME IMPINGEMENT ON THE THERMOPILE AND PROMPT BURNER IGNITION. NEVER TURN BURNER ON & OFF "QUICKLY" - ALWAYS WAIT 60 SECONDS!

When using remote control be sure to hold in button firmly until Insert lights. <u>DO NOT</u> push button and release quickly before Insert lights. Insert should light <u>IMMEDIATELY</u> and then button can be released. If Insert does not light immediately release button, wait 60 seconds and repeat lighting procedure.

Use two-wire, copper lead wire per chart and install as follows:



RECOMMEN	RECOMMENDED MAXIMUM					
LEAD LENG	TH (TWO-WIRE)					
WHEN USING W	ALL THERMOSTAT					
(CP-2	SYSTEM)					
WIRE SIZE	MAX. LENGTH					
14 GA.	100 FT.					
16 GA.	64 FT.					
18 GA.	40 FT.					
20 GA.	25 FT.					
22 GA.	18 FT.					

[FIGURE 14]

WALL SWITCH/ THERMOSTAT/ REMOTE WIRING DIAGRAM

NOTE: Thermostat Must Be 450-750 Millivolt Rated

CAUTION: THIS CONTROL IS A MILLIVOLT SYSTEM. NO ADDITIONAL POWER SUPPLY CAN OR SHOULD BE USED.

BLOWER OPERATION AND WIRING

The D-30 Mendota Gas Inserts are equipped with hot air dual blowers. A 120 volt electrical service must be supplied for these blowers at the fireplace at the time of installation.

These specially designed Blower Kits include an automatic snap switch that automatically turns the blowers "On" after heat up (12- 20 min.) and "Off" after the unit cools (approx. ½ hr.). A variable speed rheostat is also included that allows the operator to fully adjust the blower hot air output.

The low profile centrifugal blowers are made of special high temperature rated ABS for constant high-speed operation at high temperatures. Blowers are equipped with long-life, maintenance-free ball bearings that ensure quiet operation and maximum airflow.

The blowers are ideal for owners who wish to maximize the heating capacity and efficiency of Mendota Gas Fireplaces. The blowers greatly increase total heating capacity by forcefully moving hot air away from the fireplace and mantel area and out into the room. The blowers increase the overall efficiency of the Mendota units by up to 5%.



FIGURE 15

WARNING: LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING CONTROLS. WIRING ERRORS CAN CAUSE IMPROPER AND DANGEROUS OPERATION. VERIFY OPERATION AFTER SERVICING.



FIGURE 16

BLOWER (S) REMOVAL

- 1. Refer to FIGURE 16. Disconnect power to fireplace and blowers.
- 2. Turn main gas supply valve to gas insert to OFF position.
- 3. Remove door assembly, logs and coals.
- 4. Disconnect gas supply piping/ tubing from gas valve.
- 5. Disconnect electrical connection at the Snapdisk thermostat by carefully pulling off wires connected to the Snapdisk thermostat.
- 6. Disconnect wiring connection between gas valve and ON/OFF switch or thermostat wires.
- 7. Remove two sheet metal screws that hold down the burner tube weldment, and remove burner.
- 8. Remove all sheet metal screws from Removable Burner Pan. Remove entire Burner Pan carefully and set aside.
- 9. Remove two (2) metal screws that secure blower assembly to unit floor. Blower(s) can then be removed through the rectangular access hole.

Once blowers have been replaced or serviced, reassemble in reverse order.

NOTE: Seal access plate with stove cement or 600°F RTV sealant before assembling in place.

CUSTOMER INFORMATION AND TROUBLE-SHOOTING

MAXIMUM ALLOWABLE SURFACE TEMPERATURE

Mendota Inserts/Fireplaces comply with UL Standards for maximum surface temperatures on exposed combustible surfaces adjacent to the Insert. The Maximum allowable surface temperature is 117° F. over ambient (room) temperature. Thus, if a room is $70^{\circ} - 80^{\circ}$ the exposed combustible surfaces immediately surrounding the Insert can have a surface temperature as high as 187° F. -200° F. (too hot to touch).

OVER FIRING/UNDER FIRING OF BURNER

NEVER "over fire" units by adjusting gas pressure or enlarging main orifice size to increase BTUH above nameplate specifications. Over firing can cause permanent damage to firebox and deterioration of parts and void warranty.

NEVER "reduce" pilot flames below the required 450 millivolts.

PILOT OUTAGE AND RE-LIGHTING

If pilot goes out, be sure to wait a minimum of five minutes before re-lighting. Be sure to always remove glass before lighting pilot.

CLEANING VIEWING GLASS

The viewing glass should be cleaned periodically. Exterior glass may be cleaned with cleaner as desired. Interior glass - use soap and water. NEVER USE ABRASIVE CLEANERS, NEVER CLEAN GLASS WHILE OPERATING, OR WHEN GLASS IS HOT.

NOTE: Additives that are put in gas (both natural and propane) to make it smell can be harmful to glass and can leave a white film deposit on the glass. This deposit can be removed with cleaners such as KEL KEM "Polish Plus" (See your dealer).

In some cases (especially propane) additives can cause "crazing" or etching on the glass. Although this is not normal, it is not covered under the warranty. The solution may be to change propane suppliers.

<u>Sooting</u> is caused by improper installation or operation. At the first sign of "sooting" (usually a thin black film on the Fireplace viewing glass) the unit <u>must</u> be <u>immediately turned off</u> and the local Mendota dealer promptly informed. Mendota products are designed and tested to operate without producing any "sooting" when installed and operated correctly. Mendota dealers will correct "sooting" problems, but Mendota and their dealers are <u>not</u> responsible for damage caused by excessive sooting that has not been immediately brought to their attention.

AGA/ANSI APPROVAL

Gas appliances must be tested and certified by a nationally recognized testing and certification laboratory to ANSI [American National Standards Institute] gas appliance safety standards.

The Mendota Gas Fireplace Insert has been tested and certified by Intertek Testing Services. 8431 Murphy Drive, Middleton, Wisconsin 53562.

The Mendota Gas Fireplace Inserts have met all necessary AGA/ANSI Standards and are fully certified for installation in any community.

TROUBLE SHOOTING MENDOTA GAS FIREPLACE INSERT

<u> </u>	SYMPTOM	DDODADLE CAUSES	CODDECTIVE ACTION
	SYMPTOM	PROBABLE CAUSES	CORRECTIVE ACTION
1.	Thin black coating [soot] forms on viewing glass.	A. Incorrect gas pressure	Have gas supplier check for correct gas pressure [7" W.C. Nat. Gas; 11" W.C. LP Gas].
		B. Not enough combustion air	If sooting continues open-air shutter on burner [see "Gas Flame Adjustment" below]. If sooting still continues, call a Mendota dealer
			NOTE: To clean glass - remove glass and wipe glass with cloth or paper towel.
2.	Humming or whistling coming from Fireplace In- sert.	A. Normal operating noise.	Some noise is normal. It is caused by the gas supply flow- ing through the gas orifice. It is expected from any gas fireplace. The noise can be reduced by turning the Hi/Lo Knob on the control. Turning down the flame will reduce the heat output of the Insert.
3.	A change in flame appear- ance or burner operation.	A. A change in gas pressure.	Have your gas supplier check for correct gas 7" W.C. Nat. Gas; 11" W.C. LP Gas]. If flame still needs adjustment see
		B. Carbon dirt or lint.	Clean out carbon, spider webs, lint, etc. from shutter area. NEVER BLOCK AIR INTAKE OR OUTLET VENTS.

GAS FLAME ADJUSTMENT



FIGURE 17: Air Shutter Adjustment

During the initial installation, a qualified person should check the air shutter opening to make certain that the shutter is set correctly at 1/8" to 1/4" open for natural gas and full open for L.P. gas. NOTE: For altitudes above 5,000 ft., some variations may be required. Furthermore, deration of gas input may be required. Contact your gas supplier for appropriate information on derating this appliance for high altitude installations.

Be sure burner and logs are properly installed (see pgs. 20-24). After burner has been properly installed and operated for 2-3 hours, small additional adjustments to the air shutter may be necessary for final flame appearance. These small shutter adjustments can be made by the following procedure:

[NOTE: Very small changes in shutter settings make <u>major</u> changes in flame appearance.]

- 1. Air shutter control is located behind the lower grill.
- 2. If flame is too "blue," push air shutter knob in (close) in small 1/8" increments until flame turns desired realistic "orange."
- 3. If flame is too "orange" or is causing sooting on viewing glass, pull air shutter knob out (open) in approx. 1/8" increments until sooting stops. IF SOOTING DOES NOT STOP, TURN OFF UNIT AND CALL YOUR MENDOTA SERVICE PERSON.

IMPORTANT: Try each new shutter setting approx. ½ hr. before making additional changes. NOTE: Changes in front burner flame can be made by re-arranging the coals. (See pg. 20)

CAUTION: Any changes in pilot flame must be made by qualified person and checked with volt meter.

MAINTENANCE

- 1. ANNUAL MAINTENANCE OF MENDOTA UNITS IS REQUIRED. The following procedures <u>must</u> be performed each year by a Mendota approved service person. NOTE: Any adjustments to burner, pilot or logs <u>must</u> be done by a qualified Mendota service person.
 - A. Clean all lint and dust build-up around the control. Inspect the condition of any wiring under the burner for melting or damage.
 - B. Remove logs & coals and clean away any foreign matter (lint, carbon, etc.) on the burner and logs. Be sure the burner ports are "open". Clean the pilot and under side of the logs for any carbon deposits. NOTE: Logs should be visually checked for carbon "build-up:. If carbon deposits are visible on logs, unit should be turned off and Mendota service person contacted.



- C. Make sure hot air outlet grills are free from lint and other obstructions. Never block or obstruct grill openings. Check condition of gaskets, gaskets must be tight, replace if necessary.
- D. Check that chimney flue and outlet are open and free of blockage.
- E. Before re-installing glass, have qualified service person check the operation of the pilot with a millivolt meter and cycle the burner per LIGHTING INSTRUCTIONS (see Pg. 19).

2. COMBUSTION SYSTEM MILLIVOLT READING:

Millivolt readings must be taken by a qualified installer at the time of installation and after any interruption in burner operation. These readings will establish proper thermopile Millivolt generation and assure trouble-free burner operation. Readings must be taken with: a.] Pilot ONLY operating. b.] Main Burner operating.

A. PILOT ONLY OPERATING - Thermostat "OFF" - Minimum Millivolts 450

Using a Millivolt Meter a millivolt reading should be taken by attaching Meter leads to terminals #1 and #2 on the main gas valve. The Meter must read a <u>minimum of 450 millivolts</u> with the Pilot Light operating, Thermostat turned "OFF" and Main Burner "OFF". To increase or decrease millivolts, (and pilot flame) adjust pilot screw on control. (See below)

B. MAIN BURNER OPERATING - Rocker Switch "ON" - Minimum Millivolts 100.

Using a Millivolt Meter, a millivolt reading should be taken by attaching Meter leads to terminals #2 and #3 on the millivolt panel on the main gas valve. The Meter must read a <u>minimum of 100 millivolts</u> with the Gas Cock Dial turned "ON", Rocker Switch "ON" and Main Burner operating.

R	METER READING SHOULD BE	THERMOSTAT CONTACTS	CONNECT METER LEADS TO TERMINALS	TO TEST	CHECK TEST
	100MV OR MORE	CLOSED	2 & 3	COMPLETE SYSTEM	А
	GREATER THAN 450 MV	OPEN	1 & 2	THERMO- PILE OUTPUT	В
	LESS THAN 80 MV	CLOSED	1 & 3	SYSTEM RESISTANCE	С
PILOT GAS LINE	BETWEEN 120-30 MV	OPEN	1 & 2	AUTO/ PILOT DROPOUT	D

HI LO HI LO REGULATOR HI LO PRESSURE TAP INLET PRESSURE TAP INLET PRESSURE TAP ON/OFF GAS CONTROL KNOB

FIGURE 19: Millivolt Readings

3. **THE VIEWING GLASS SHOULD BE CLEANED PERIODICALLY.** Exterior glass may be cleaned with cleaner as desired. Interior glass - use <u>KEL KEM</u> "Polish Plus", part # 65-06-00455.

WARNING: NEVER CLEAN GLASS WHEN UNIT IS HOT. DO NOT USE ABRASIVE CLEANERS. BREAKAGE AND SCRATCHES MAY RESULT.

REPLACEMENT PARTS LIST MENDOTA GAS FIREPLACE INSERT - MODEL D-30

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
HA-28-00040	Flat Glass Door Assy	HA-28-00193	Valve Assy – NG-SIT
65-06-00449	Flat Glass	05-02-00306	SIT VALVE NAT. GAS
HA-28-00050	Bay Door Assy	HA-28-00194	L.P. Kit-SIT
65-06-00581	Bay Glass	05-02-00290	L.P. Regulator
HA-27-00073	Flat Door Gasket	HA-27-00015	Main Orifice Natural Gas #35
HA-27-00154	Bay Door Gasket	HA-27-00016	Main Orifice LP Gas #52
2 required	On the following 2 items		
HA-27-00152	Bay Glass Horizontal Gasket	05-02-00284	Hi / Low extension knob
HA-27-00153	Bay Glass Vertical Gasket	05-02-00283	On /Off extension knob-SIT
	-	05-04-00035	Pilot Assy complete
35-01-00296	TimberFire Log Set	05-04-00036	L.P. Pilot orifice
35-01-00240	Bag of Coal	05-07-00061	Thermopile
35-01-00239	Glowing inswool	05-07-00067	Thermocouple
35-01-00294	Klinker Firebrick Kit		-
35-01-0029	Klinker Bay Door Brick		
65-06-00602	Black Paint		
10-01-00046	Rheostat	10-10-00104	On / Off switch
15-02-00064	Blower w/ Motor (RH)	65-06-00149	Piezo Igniter
15-02-00065	Blower w/ Motor (LH)		C C
05-01-00157	Thermo-Disc (Snap Disc)		

WARNING

Use only authorized parts and materials obtained from Johnson Gas Appliance Company when replacing defective or damaged glass. Do not cut or use glass from other suppliers.

DO NOT substitute other manufacturer's materials or components.DO NOT operate unit with cracked, broken or missing glass.DO NOT FORCE STRIKE OR SLAM GLASS DOOR ASSEMBLY

NATURAL TO LP GAS CONVERSION HA-28-00194

This conversion must be made by a qualified service technician.

- 1. Turn off gas supply at the appliance service valve. Identify the Pressure Regulator on the Valve Body, see Figure 19 on Page 30.
- 2. Using a ¹/₄" flat blade screwdriver, remove 3 screws that secure the NG Pressure Regulator to the gas valve body and remove NG Pressure Regulator as shown on PAGE 33. Identify the pressure regulator spring that is located in the center of the black rubber gasket. Discard both the black rubber gasket and spring.
- 3. Install the new LP Pressure Regulator onto the gas valve body in the same position and orientation as the NG Pressure Regulator you removed in Step 2, above. The LP Pressure Regulator can only be mounted in one position. Secure the LP Pressure Regulator in place using the 3 screws you removed in Step 2. Tighten down using a ¼" flat blade screwdriver.
- 4. Install main burner orifice #HA-27-00016 (#52 drill) see pg. 27 for location. Orifice is removed and installed with a ¹/₂" deep well socket and ratchet.
- 5. Install pilot orifice thimble #05-04-00036 (.014") see Figure below for location. Remove and install pilot hood with 7/16" open-end wrench. (Pilot orifice thimble is located inside pilot hood base).









''LABEL REPRESENTATION'' LISTED GAS-FIRED DIRECT VENT ROOM HEATER POÊLE AU GAZ HOMOLOGUE', A AÉRATION DIRECTE MODEL: D-30

CERTIFIED FOR CANADA

HOMOLOGUÉ POUR LE CANADA

Also for use in mobile (manufactured) homes after first sale of home. Convenant également pour installations dans des maisons mobiles.

Tested to (Testé aux normes) ANSI Z21.11.1-1993, CAN1-2.1-M89, CAN/CGA 2.17-M91, ANSI Z21.44-1995 and CGA I.R. #41-M91.

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury, or loss of life. Refer to the owner's information manual provided with this appliance. Installation and service must be performed by a qualified installer, service agency or the gas supplier. Use only glass assemblies certified for use with this appliance. Do not operate with glass panel(s) removed, cracked, or broken.

MISE EN GARDE: Installation, réglage, modification, entretien ou depannage non appropriés pourront causer des blessures ou des dommages materiels. Réferéz-vous au manuel du proprietaire fourni avac cet appariel. Pour assistance ou renseignements complémentaires, veuillez consulter un installateur expérimenté, une agence dé depannage/entreitien ou cotre compagnie gaziére. Pour utilisation avec les portes en verre certifiée l'appareil suelement. Ne pas opérer avec le verriére enlever, craquelure, brise. NOT FOR USE WITH SOLID FUEL (NE DOIT PASÉ UTILISÉ AVEC UN COMBUSIBLE SOLIDE)

	NATURAL GAS	PROPANE GAS
	(Gaz Naturel)	(Gaz de petrole liquefie (GPL))
Input Rating (Btu/hr) 0-1370 m (Entrée nominale)	30,000	29,000
Min. Input Rating (Btu/hr) 0-1370 m (Mininale Entrée nominale)	19,900	16,200
Orifice (DMS))-1370 m (Orifice)	35	52
Maximum output (Btu/hr) (Sortie maximale)	23,300	23,100
Manifold Pressure (in w.c./kPa) (Pression au collecteur)	3.5/0.87	10.0/2.5
Manifold Pressure, low (in w.c./kPa) Pression d'entree minimale)	1.7/0.42	3.6/0.90
Minimum Inlet Pressure (in w.c./kPa) (Pression d'entrée minimale)	5.0/1.25	11.0/2.75

This appliance must be installed in accordance with local codes if any; If not, follow ANSI Z223.1 or CAN/CGA-B149. Mobile (Mfd.) home installations must adhere to Title 24 CFR, Part 3280, or CSA Z240.4. Cet appareil sera installé conformémént avec les codes locaux, le cas écheant. Si aucun code n'existe, suivez la norme ANSI

MINIMUM CLEARANCES FROM COMBUSTIBLE CONSTRUCTION

Z223.1 ou la norme CAN/CGA (ACNOR)-B149.

Unit to sidewall16 in.Unit top to mantle21 in.Unite en cote405 mmUnité en manteau de cheminée535 mmCAUTION: Hot while in operation. Do not touch. Keep children, clothing, furniture, and flammable liquids or vapors away.ATTENTION: L'appareil est chaud lorsqu'il fonctionne. Ne pas toucher l'appareil. Survieller les enfants. Garder les vétements, les meubles, l'essence ou autres liquides a capeur inflammables loin de l'appareil.

Electrical Rating (Courant nominal): 120 volts 60 Hz Less than 1 Ampere

Manufactured by (Fabriqué par):

é par): JOHNSON GAS APPLIANCE CEDAR RAPIDS, IOWA DO NOT REMOVE OR COVER THIS LABEL VEILLEZ Á NE JAMAIS ENLEVER NI DISSIMULER CETTE ÉTIQUETTE WH#

MENDOTA WARRANTY QUALIFICATION & SERVICE REFERENCE FORM

As a part of Mendota's on-going program of customer satisfaction, this Form verifies proper installation and operation. It is important as a reference for future service. It insures long life and trouble-free operation of Mendota fireplaces & stoves and qualifies the owner for Mendota's lifetime limited warranty. Owner should sign Form when completed. Optionally, please register your product at our website at: WWW.JOHNSONGAS.COM/MENDOTA-REGISTRATION.ASP

HOME OWNER:	DEALER:
ADDRESS:	ADDRESS:
CITY/STATE/ZIP:	CITY/STATE/ZIP:
SIGNATURE:	PHONE:
MODEL #: D-30 SERIAL #:	DATE INSTALLED:
GAS NAT or L.P.	

Mendota Fireplace Inserts are sophisticated, hi-tech gas appliances. All installation and operating instructions <u>must</u> be carefully followed. The DXV fireplace <u>must</u> be installed and serviced by a qualified Mendota approved service person.

REF: MENDOTA GAS FIREPLACE INSERT

	APPROVED	VENT PIPES AND	VENT CAP INSTALLED	- Per Manual and manufacturer's s	pecifications
--	----------	----------------	--------------------	-----------------------------------	---------------

- CHECK FOR PROPER CLEARANCES TO COMBUSTIBLES Per pipe manufacturer's specifications
- INSTALL PROPER SIZE GAS LINES CHECK FOR GAS LEAKS Per Manual
- CHECK FOR CORRECT GAS PRESSURE AT MANIFOLD Per Manual
 - a. 3.5 Inches Water Column Maximum Nat. Gas
 - b. 10.5 Inches Water Column Maximum L.P. Gas
- TAKE COMBUSTION SYSTEM MILLIVOLT READINGS [See Manual Pg. 26]
 - a. Pilot only [Minimum Millivolts 450]

b. Main burner operating - [Minimum Millivolts 155]

- CYCLE BURNERS ON/OFF FOR PROMPT IGNITION Per "LIGHTING INSTRUCTIONS" Burner <u>must</u> light IMMEDIATELY - Flame <u>must</u> travel promptly around "curve" & light burner.
- INSTALL LOGS AND ADJUST FLAME Per Manual
- Proper pilot flame impingement on thermopile & burner Air shutter opening: 1/8" 1/4" Nat. Gas 1/2" LP
 BRIEF OWNER ON OPERATION AND MAINTENANCE OF UNIT
 - Light Pilot

Operate Burner

Explain blower "delay" operation

Reading: _ Reading: _

WARRAI	NTY REGISTRATIO	DN
Your Name		
Address		
City	State	Zip
Dealer (Place of Purchase)		
City	State	Zip
Date of Purchase	Serial Number	
Purchaser's Signature		
MENDOTA FIREPLACE INSERT, D-30		

CUT OUT PAGE AND MAIL TO: JOHNSON GAS APPLIANCE CO., 520 E AVE. N.W., CEDAR RAPIDS, IOWA 52405 OR REGISTER YOUR NEW INSERT AT : WWW.JOHNSONGAS.COM/MENDOTA-REGISTRATION.ASP

TAPE SHUT

POSTAGE NEEDED

JOHNSON GAS APPLIANCE COMPANY 520 E AVENUE N.W. CEDAR RAPIDS, IA 52405

MENDOTA EXTENDED LIFETIME PROTECTION AND LIMITED WARRANTY

MENDOTA GAS FIREPLACE INSERT MODEL: D-30 NAT. & L.P.

Mendota Division of Johnson Gas Appliance Company, 520 E Avenue N.W. Cedar Rapids, Iowa 52405, extends this <u>Extended Lifetime Protection and</u> <u>Limited Warranty</u> to the original purchaser of a Mendota Gas Fireplace Insert, Serial Number, which is limited and used under normal home conditions.

STANDARD WARRANTY:

JOHNSON GAS APPLIANCE CO., MENDOTA DIVISION, WARRANTS THAT YOUR NEW MENDOTA GAS FIREPLACE INSERT IS FREE FROM MANUFACTURING AND MATERIAL DEFECTS FOR A PERIOD OF ONE YEAR FROM THE DATE OF INSTALLATION, SUBJECT TO THE FOLLOWING CONDITIONS AND LIMITATIONS:

EXTENDED LIFETIME WARRANTY:

THE HEAT EXCHANGER, THE BURNER TUBE, AND THE COMBUSTION CHAMBER OF THE MENDOTA GAS FIREPLACE INSERT ARE WARRANTED FOR THE LIFETIME OF THE ORIGINAL OWNER, SUBJECT TO PROOF OF PURCHASE AND THE FOLLOWING CONDITIONS AND LIMITATIONS:

 This new Mendota Fireplace Insert must be installed and serviced by a competent, authorized service contractor. It must be installed and operated at all times in accordance with the installation and operating instructions furnished with the Fireplace. All adjustments to logs, coals or burner must be made by an authorized Mendota Service person.

This limited warranty does not cover the cost of service calls, the cost of labor to remove or install parts covered by this limited warranty, freight or other transportation expenses, which may be incurred in connection with obtaining performances under this limited warranty. The remedy for damages as the result of any defects in this product which have been warranted herein is limited to replacement parts and does not include any incidental, indirect or consequential damages or expenses sustained in connection with the products, including damages to property, except as provided by law.

2) This warranty is non-transferable and is made to the original retail purchaser only and provided that the purchase was made through an authorized Mendota dealer.

Mendota is not responsible for any damage to or malfunction of the Insert unless caused by a defect in material or workmanship from normal home use. Damage caused by abuse, improper installation or operation, installation by unqualified personnel or breach of the conditions of this limited warranty will excuse Mendota from performance of any part of the limited warranty. This warranty does not cover glass or log breakage. Logs and embers are warranted against "burn out".

Mendota has the right to investigate and inspect the exact original fireplace and entire installation without any alteration or tampering, in the event a claim is made, to determine whether the claimed damage or malfunction was caused by abuse, improper installation or other cause outside this warranty. Mendota is not responsible for any repairs or material purchases that have not received prior written approval from Mendota.

NOTE: Minor warping of certain parts or discoloration is normal and is not a defect covered by this limited warranty. Major warping of parts can be caused by over-firing of your Mendota Fireplace Insert. Over-firing above rated nameplate specifications is contrary to the manufacturer's instructions and will void this warranty.

This warranty may not be extended by our representatives in any manner. The company neither assumes, nor authorizes any third party to assume, on its behalf, any other liabilities with respect to the sale of this Mendota product.

- 3) Mendota may at its discretion, fully discharge all obligations of this warranty by refunding the wholesale price of the defective part(s).
- 4) All other warranties expressed or implied with respect to the product, its components and accessories, or any obligation/liabilities on the part of the company are hereby expressly excluded. Products made by other manufacturers, sold with the Fireplace or thereafter, are not covered by this limited warranty... The use of unauthorized components will make this warranty null and void.

This warranty shall be effective only if the original purchaser of the Mendota appliance is registered with Mendota Division within thirty (30) days of the date of purchase. This warranty with its conditions and limitations shall be the only procedure for obtaining any rights against the manufacturer and expresses the sole obligation and responsibilities of the manufacturer which are offered to the original purchaser and accepted upon purchase of the appliance.

Mendota Division, reserves the right to make changes at any time without notice, in design, material, specifications, prices and the right to discontinue styles and products.

Some states do not allow the exclusions of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.



Johnson Gas Appliance Company 520 E Avenue N.W. - Cedar Rapids, IA 52405 Website: <u>www.johnsongas.com</u>

Part #85-03-00687