

5) **DECALCIFYING** (chapter 18 of Operating Instructions). For different water hardness levels see chapter 14a. The water hardness is set at level 2 and the decalcifying monitor is active. Decalcify when the MESSAGE light and the DECALCIFYING light illuminate.

You need to order special decalc tablets (see section M "Supplies"). You can still make coffee.

**Important:** Keep Access door open during the program.

**Important:** Once started, do not interrupt the program!

- Push and hold the DECALCIFYING button until its light blinks. Now the EMPTY TRAY light blinks, also.

- Remove and empty the drawer and used coffee container and replace complete assembly.

- **Please note:** You must remove the drawer for 20 seconds even if it is empty. Replace complete drawer.

1. The FILL WATER light blinks.

2. Remove the water tank and make sure it is empty.

3. Dissolve 3 white square tablets in 16 oz. of water, pour the mixture into the water tank and replace tank.

4. The SELECTOR light blinks.

5. Remove the Dual Frother Plus.

6. Place a container (at least 16 oz.) under the Steam nozzle.

7. Turn the SELECTOR to the Water symbol. The C5 pumps the mixture through the nozzle in intervals. During this procedure the SELECTOR light is on. When the cycle ends the C5 stops pumping and the SELECTOR light blinks.

8. Turn the SELECTOR to the Cup symbol. Now the C5 continues to pump the mixture through the internal brew chamber into the used coffee container. The C5 stops pumping the solution and the EMPTY TRAY light blinks.

9. Remove the container from under the frother.

10. Carefully lift and remove the drawer, empty and thoroughly rinse all parts and replace.

11. Now the FILL WATER light blinks.

12. Remove the tank, rinse, fill with cold water and replace.

13. Place a container (at least 16 oz.) under the nozzle.

14. The SELECTOR light blinks.

15. Turn the SELECTOR to the Water symbol. The C5 will pump fresh water through the nozzle in intervals. During this procedure the SELECTOR light is on. When this cycle ends, the pumping stops and the SELECTOR light blinks.

16. Turn the SELECTOR back to the Cup symbol. Now the C5 continues to pump fresh water through the internal brew chamber into the used coffee container. The C5 stops pumping, the EMPTY TRAY light blinks.

17. Remove the container from under the frother.

18. Carefully lift and remove the drawer. Empty and thoroughly rinse all parts and replace.

19. The decalcifying procedure is complete. The RINSE symbol blinks indicating that the C5 is heating up.

20. The C5 will remind you when it's time to decalcify again.

21. Replace the Dual Frother.

The C5 is ready to brew coffee again.

## L) Installing and Activating the Clearyl Blue Water Filter

The machine comes with one Clearyl Blue Water Filter Cartridge. The Clearyl Blue cartridge...

- Reduces the water hardness up to 75%.
- Removes (if present) up to 85% chlorine, 90% lead, 95% copper and 67% aluminum.

- Cleans the water through an upward current principle just before the brewing cycle starts, ensuring freshly filtered water every time you make coffee.

- Lasts for ~2,000 oz. of water or up to two months.

- Eliminates decalcifying except when using very hard water (30 grains or higher), (see chapter 14a). In this case we recommend decalcifying once or twice a year.

- To reorder cartridges, see section M "Supplies".

1. Rinse cartridge under running water. Insert cartridge into water tank reception and close the cartridge holder.

2. Fill tank with cold water.

### Activating:

You must activate the cartridge for the C5 to monitor it.

Otherwise the C5 is in decalcifying mode.

The C5 is turned off, but in **stand-by mode**. Only the ON symbol is visible.

3. Open the Access Door and push and hold the CLEARLYL button until its light is on.

4. Turn DIAL right until all three DIAL lights are on.

5. Push DIAL to confirm the activation process. The three DIAL lights begin to blink.

6. Place a 20 oz. container under the steam nozzle.

7. Turn the SELECTOR to the Water symbol. The C5 pumps water through the steam nozzle for 60 seconds. The water may have a slight discoloration. The C5 will stop.

**Please note:** To empty the container during this process you can stop the water flow by turning the SELECTOR to the Cup symbol. Then replace the container, turn the SELECTOR to the Water symbol and let the program finish.

8. Turn the SELECTOR back to the Cup symbol.

The C5 will return to stand-by mode. From now on the C5 will monitor the flow of water. After approx. 60 liters (~2,000 oz.) of water use the C5 will remind you to replace the filter (see chapter 15b of Operating Instructions).

**Please note:** As long as the filter is activated, the water hardness setting is automatically turned off.

## M) SUPPLIES can be ordered through:

Customer Service, Mail Order Form or [www.cappresso.com](http://www.cappresso.com)

- Clearyl Blue Water Filter: #67879

- Cleaning Tablets: #62205

- Decalcifying Tablets: #61848

## JURA-CAPRESSO CUSTOMER SERVICE:

1-800-220-5701 M-F 9AM - 9PM; Sat. 9AM - 5PM EST

FAX: 201-767-9684; email: [contact@jura-cappresso.com](mailto:contact@jura-cappresso.com)








*jura*

## Impressa C5 Quick Reference Guide

This Guide does not replace the Operating Instructions.

For details and Cautions please read Operating Instruction Manual

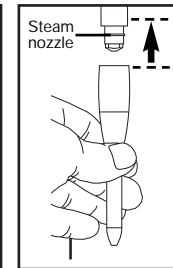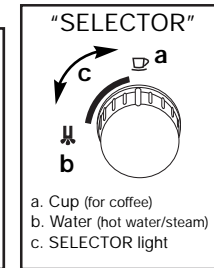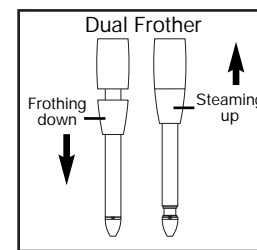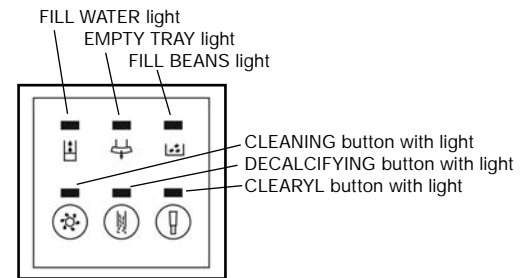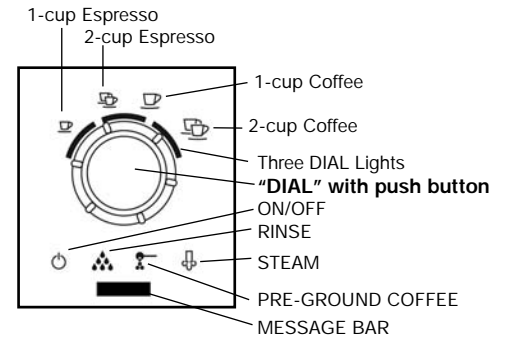

Traces of Coffee Grounds in New Machine?  
This is normal! Grinder was tested during assembly with beans. Despite cleaning, traces of ground coffee may be found.

## A) First Time Preparation

Place machine on a flat, hard surface. Open the Access Door (below DIAL).

1. Fill water in tank (left) and beans in bean container (right).

2. DO NOT install the Clearyl Blue Filter Cartridge now!

3. Remove Sticker around the DIAL.

4. Switch on Main Power Switch in the back of machine.

The "ON" symbol illuminates, indicating that the main power

switch is on. The C5 is in **stand-by mode**.

5. Push the DIAL to turn on C5. The SELECTOR light blinks.
6. Place a cup under the frother.
7. Turn the SELECTOR to the Water symbol. The C5 fills the system and stops. The SELECTOR light blinks.
8. Turn the SELECTOR to the Cup symbol. The RINSE symbol blinks, the C5 heats up.
9. Place a large cup under the coffee spouts and push the DIAL. The C5 rinses and pre-warms the coffee spouts with warm water and stops. All eight symbols around the DIAL are now visible.
10. The 1-cup Espresso Symbol is highlighted. This is the **Coffee Ready Mode**.
11. Push the DIAL. The 1-cup Espresso symbol blinks, the C5 starts grinding and makes coffee.
12. Push again to make two cups of coffee and discard.

## B) Daily Preparation

1. Fill fresh water in tank and check bean container. The C5 is in stand-by mode.
2. Push the DIAL. The RINSE symbol blinks.
3. When the RINSE symbol stops blinking, place a cup under the coffee spouts and push the DIAL. The C5 rinses and stops. All eight symbols around the DIAL are now visible, the 1-cup Espresso symbol is highlighted = **Coffee Ready Mode**. Empty the cup.

## C) Auto-Off

The C5 will turn off 2 hours after last use. It rinses hot water through the coffee spouts and enters stand-by mode.

## D) Factory Settings / Changing Cup Sizes

For all factory settings see chapter 5 of Operating Instructions. The C5 has four coffee settings producing approx.:

- 1 cup espresso: 5 seconds grinding and 1.5 oz. of coffee
- 2 cup espresso: 9 sec. grinding and 1.5 oz of coffee per cup
- 1 cup coffee: 5 sec. grinding and 5 oz. of coffee
- 2 cup coffee: 9 sec. grinding and 5 oz. of coffee per cup

All cup sizes can be re-programmed to your personal preferences (chapter 9d).

## E) Brewing Coffee / Espresso

### **Coffee Ready Mode**

Turn DIAL to highlight one of the cup symbols to brew coffee. Place one or two cups under the spouts and push the DIAL. After grinding and brewing the C5 goes back into Coffee Ready Mode. You can brew more coffee.

**Note:** you can always push the DIAL to stop the brewing.

**Stronger Coffee for 1 cup settings:** during grinding turn the DIAL clockwise until all three DIAL lights are on (= 9 seconds grinding).

**Hotter Coffee:** Pre-warm cups with the Hot Water feature (see "Using Hot Water" section H).

## F. CHANGING THE CUP SIZE PERMANENTLY

All four Cup symbols can be customized to your personal cup size. The machine is in **Coffee Ready Mode**.

- Place a cup under the coffee spouts. Highlight the cup symbol to re-program, e.g. the 1-cup Coffee symbol.
- Push and hold the DIAL until the left DIAL light starts blinking. During brewing the left segment keeps blinking, indicating that the machine is in programming mode.
- Once the cup is filled with the desired amount push the DIAL to stop. Now the machine will produce this cup size for this symbol. You can re-program all four Cup symbols in the same way. The C5 will keep the information, even if it is unplugged. You can change the cup size again at any time.

## G) Changing the Grinder Fineness

**Important:** You can only adjust the fineness during the actual grinding process.

- Open the bean container lid and turn the dial while grinding: thicker bars: coarser grind; thinner bars: finer grind.
- For darker, oily beans – grind somewhat coarser. For lighter beans – grind somewhat finer.

## H) Using Hot Water

### **Coffee Ready Mode**

- Place a cup under the frother.
- Turn the SELECTOR to the Water symbol.
- Turn the SELECTOR to the Cup symbol to stop the flow.

## I) Frother – Steam – Cappuccino - Espresso

**Important:** frother parts must be tightly connected and clean.

- **Cappuccino:** One shot espresso plus ~ 4 oz. of steamed and frothed milk. Metal frother sleeve DOWN.
- **Latte:** One shot espresso plus ~ 4 to 5 oz. of steamed milk. Metal frother sleeve UP: steaming only (no frothing).

### **Steaming and Frothing**

1. Fill half a pitcher with cold milk (i.e. 5 oz. in a 10 oz. pitcher).
2. Turn the DIAL to highlight the STEAM symbol, then push it.
3. The STEAM symbol blinks. When the SELECTOR light turns on, immerse the frother into the milk and turn the SELECTOR to the Water symbol. Steam pushes into the milk.
4. When the milk is hot enough and has enough froth, turn the SELECTOR to the Cup symbol to stop the steam. As long as the SELECTOR light blinks, you can continue to steam/froth more milk.

**Tip:** Try steaming/frothing directly into your cappuccino cup.

**HOTTER MILK?** After frothing the milk, use the steaming position (Frother sleeve UP) to increase the milk temperature.

5. Then place the cup under the coffee spouts and add a shot of espresso.

## J) Cleaning the Frother

Within 10 min. after last use, place a cup under the frother. Turn the SELECTOR to the Water symbol for 5 seconds. For thorough cleaning see page 16 of Operating Instructions.

## K) Monitoring and Messages

1) **FILL WATER** (chapter 16a Operating Instructions) MESSAGE light and the FILL WATER light blink; no coffee can be made until the water container is filled.

2) **EMPTY TRAY** (chapter 16b Operating Instructions) MESSAGE light and the EMPTY TRAY light blink; no more coffee can be made.

- Carefully lift and remove drawer since there is water in it. **Important:** Do not unplug the C5 while you are emptying the coffee grounds.
- Empty the used coffee container and the drawer.
- Replace coffee container, tray, grid and drawer.

3) **FILL BEANS** (chapter 16c Operating Instructions). MESSAGE light and FILL BEANS light blink. Open bean container lid and add beans. **Please note:** The message will disappear after making the next cup of coffee.

## 4) CLEANING WITH SPECIAL TABLET

After 200 coffees both MESSAGE and CLEANING lights illuminate. This cleaning program removes coffee oils inside the C5. It takes about 15 minutes.

2 tablets come with the C5. You can still make coffee.

**Important:** Only use this cleaning tablet!

**Important:** Once started, do not interrupt the program!  
**Important:** Keep Access door open during cleaning.

1. Push and hold the CLEANING button until its light blinks. Make sure the water tank is at least half full.
2. Now the EMPTY TRAY light blinks, too.
3. Remove and empty the drawer and used coffee container and replace complete assembly.
4. **Please note:** You must remove the drawer for 20 seconds even if it is empty. Replace complete drawer.
5. The CLEANING light stops blinking.
6. Place a cup (at least 12 oz.) under the coffee spouts.
7. Push the CLEANING button. The C5 will disperse some water through the coffee spouts. Then the PRE-GROUND COFFEE symbol blinks.
8. Open the ground coffee lid, drop in one white cleaning tablet and close lid.
9. Push the CLEANING button. The cleaning program will dispense foamy water in intervals through the coffee spouts. This will take a few minutes.
10. Then the EMPTY TRAY light blinks.
11. Lift and remove the drawer. Empty the used coffee container and drawer and replace.
12. The RINSE symbol blinks indicating that the C5 is heating up. The C5 reminds you when it's time to repeat the tablet cleaning cycle again. The C5 is ready to brew coffee again.