

FCC Information

EN

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

If this equipment does cause interference to radio or television reception (which you can determine by turning the equipment off and on), try to correct the interference by one or more of the following measures:

 
- Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions.

Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug will not go into the outlet completely, turn the plug over and try to insert it the other way. If it still will not fit, contact a qualified electrician to change the outlet, or use a different one.



Do not attempt to bypass this safety feature.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Technical Specification

Product: Spacemaker

Brand: GE

Model: 7-5295

Electrical Consumption

Power Supply: 120V~60Hz

Power Consumption: 72 Watts

IMPORTER

Comercializadora Thomson de México, S.A. de C.V.



Miguel de Cervantes Saavedra 57

Col. Ampliación Granada

C.P. 11529 Mexico D.F.

Telefono: (55)25 81 53 20

RFC: CTM-980723-KS5

 <p>THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.</p>	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

FCC Information

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty at the end of the User's Manual.

For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:

Model No.:

Date of Purchase:

Place of Purchase:

Serial No.:

EN

Table of Content

FCC Information

First Things First 1

- Tools Required 1
- Parts Packed with Your Unit 1
- Before Mounting 1
- Mounting Procedure 2

Before Plug-In 4

- Automatic Time Set 4
- Daylight Saving Time (DST) 4
- U.S. Time Zone (Figure 1) 4
- Canadian Time Zone (Figure 2) 5

Battery Backup Operation 5

- Installing Backup Battery 5

General Controls 6

- Main Unit 6
- Side Views 6
- In Battery Compartment 6
- The Remote Control 7

Display 7

Using the Countertop

Light 8

- Replacing the Bulb 8

Setting Clock 8

- Setting the Time 8

Setting the Countdown Timer 8

Using the Radio 9

- Turning On the Radio 9
- Turning Off the Radio 9
- Adjusting Volume 9
- Selecting Radio Band 9
- Tuning to a Station 9
- Automatic Station Search 9
- Radio Frequency Memory 9
- Memory Recall 9

Using the CD Player 10

- Selecting CD Player 10
- Loading CD Disc 10
- Play and Pause Playback 10
- Skip and Search Tracks 10
- End Playback 10
- Repeat and Random Playback 10
- Bass Sound 10

Care and Maintenance 11

- Troubleshooting Tips for the Remote Control 11
- Precaution 11

U.S. Warranty 12

Canadian Warranty 14

First Things First

 
EN

Under Cabinet Mounting Instructions

Tools Required

- Drill and $\frac{1}{4}$ " Drill Bit
- Ruler or Tape Measure
- Nail or Awl
- Scissors
- Screwdriver - Phillips
- Countersink (Optional)
- Masking Tape
- Safety Glasses

Parts Packed with your Unit

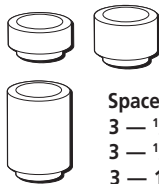


Spacers
3 — $\frac{1}{4}$ "
3 — $\frac{1}{2}$ "
3 — 1"




3 — Washers

 USE:
3 — $2\frac{3}{4}$ " Phillips head screws
or
3 — $1\frac{5}{8}$ " Phillips head screws



2 — Cord hooks

 1 — Mounting template

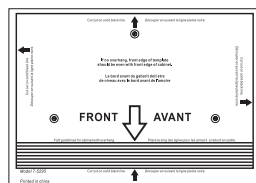


Before Mounting

Empty contents of the selected cabinet under which the unit will be mounted and thoroughly clean the underside of the cabinet to remove any grease residue which might be present. We recommend the unit be mounted at the front edge of the cabinet.

Important: For secure mounting, the screws must go into the radio to a depth of at least $\frac{3}{8}$ ". If the overall length from the bottom of the cabinet shelf to the bottom of the overhang is more than $1\frac{3}{4}$ ", then a wood shim will be necessary. A shim can be made from a sheet of plywood, using the Template to locate the central lines for drilling the $\frac{1}{4}$ " mounting holes. The shim can be located between the cabinet shelf bottom and spacers. Make sure the wood is at least as thick as the excess over $1\frac{3}{4}$ ". If a shim is necessary, longer screws are required. Longer screws (Type #10-32) are available at most local hardware stores.


 
Cut out the Template on the line indicated. The Template size and screw hole positions are identical to the top of the clock radio.

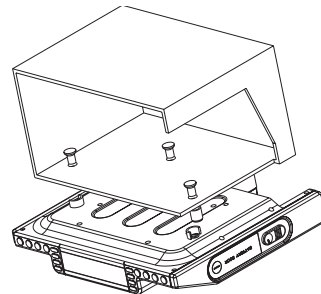

First Things First

Mounting Procedure

  
1. **If your cabinet does not have an overhang:**
 - (a) Position Template in desired location on underside of cabinet, flush with front edge.
 - (b) Then tape Template in place, and go to Step 2 (Read "Caution").

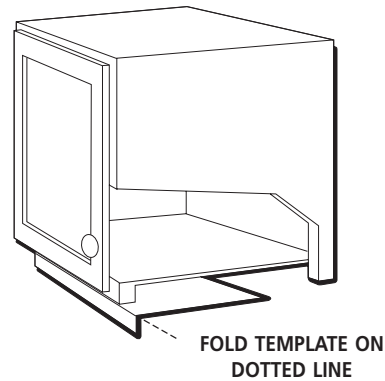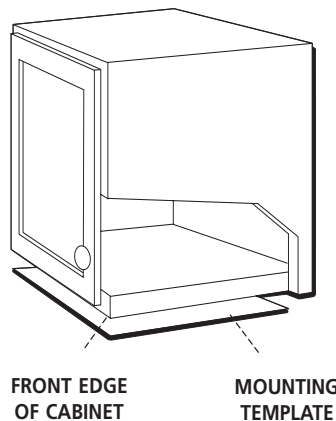

NOTE: If your cabinet has glue blocks or other obstructions, cut out corresponding areas on the Template to clear them. Do not cut out or cut through the screw holes indicated on the Template.

CAUTION: It is recommended that safety glasses be worn while drilling screw holes to prevent the possibility of eye injury.

 - If your cabinet has an overhang:**
 - (a) Measure the thickness of the overhang.
 - (b) Fold front of Template downward along the printed guideline that is closest to the thickness of your cabinet.
 - (c) Tape fold-down portion to backside of overhang, Tape Template to cabinet underside.

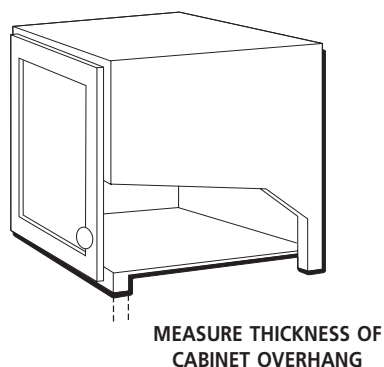

2. Drill $\frac{1}{4}$ -inch diameter holes through the underside of the cabinet bottom shelf using the **three** points marked on the Template.

Helpful Hints:

On wooden cabinets you may want to mark and start the drill holes with a nail or an awl. Be sure to hold the drill very firmly against the cabinet to reduce "walking" of the drill bit from the markings.

Use masking tape above the hole locations on inside of wooden cabinet shelf to help reduce splintering.

 
If installing the unit under a wood cabinet, you may wish to countersink the drilled hole from the **INSIDE** of the cabinet if a countersink attachment for your drill is available. This will eliminate the use of washers and allow the screw heads to be flush with the floor of your cabinet. If you cannot countersink the holes, use the supplied washers.

EN

First Things First


EN

3. Remove Template and clean drill shavings from inside and underside of cabinet.
4. **If your cabinet does not have an overhang**, go to Step 5.
If your cabinet has an overhang, select the spacer or combination of spacers that is equal to or longer than the cabinet overhang.
8. Extend cord towards electrical outlet and secure by using the Cord Hooks to hold cord out of the way. For most attractive appearance, place Cord Hooks at back edge of cabinet (on or next to wall) directly over outlet to be used. To attach Cord Hooks, peel off adhesive back and attach to a clean, dry surface on underside of cabinet or back wall. Plug Cord into 120-volt AC electrical outlet.
We recommend that the line cord be fully extended for best FM reception.

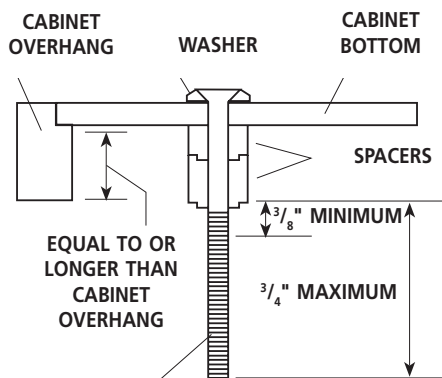

SELECTED SCREWS WHICH MEET MINIMUM, BUT DO NOT EXCEED MAXIMUM LENGHT.

 5. Insert screws FROM INSIDE THE CABINET. The washers must be used on metal cabinets, and on wood cabinets if you did not countersink the drilled holes. Position washers, flat side down, and place screws into the holes.
If your cabinet does not have an overhang, go to Step 7.
6. Hold screw heads down while you push the selected spacers onto the screws under the cabinet. Be sure to push up spacers until they are firmly against the cabinet bottom and/or fully nested (if more than one is used).
7. Align radio under the screws. Hold the screw holes in the top of the clock radio against the mounting screws and partially tighten the screws.
Do not fully tighten until all 3 screws have been started. (The top front edge of the clock radio should clear the overhang.)

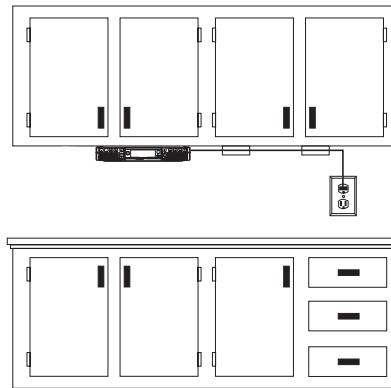


 
Before Plug-In

Automatic Time Set

Selecting Time Zone

The Time Zone switch is located in the battery compartment on the side of the unit.

Open the compartment door by rotating the lock in the direction of the arrow .



TIME ZONE - Slide the switch to select time zone.

Refer to Figure 1 for U.S. Time Zone details.

Refer to Figure 2 for Canadian Time Zone details.

Select 1 for Eastern Daylight Time

Select 2 for Central Daylight Time

Select 3 for Mountain Daylight Time

Select 4 for Pacific Daylight Time

Daylight Saving Time (DST)

After selecting time zone and plugging in your unit, daylight saving time must be activated for those areas observing such change.

Press and hold **DAYLIGHT SAVING**  until the icon lights on the display.

To disable daylight saving time, press and hold again until the icon no longer lights.

WARNING: Please avoid playing with these buttons after entering the Clock set mode.

 
U.S. Time Zone (Figure 1)



Before Plug-In

EN

Canadian Time Zone (Figure 2)

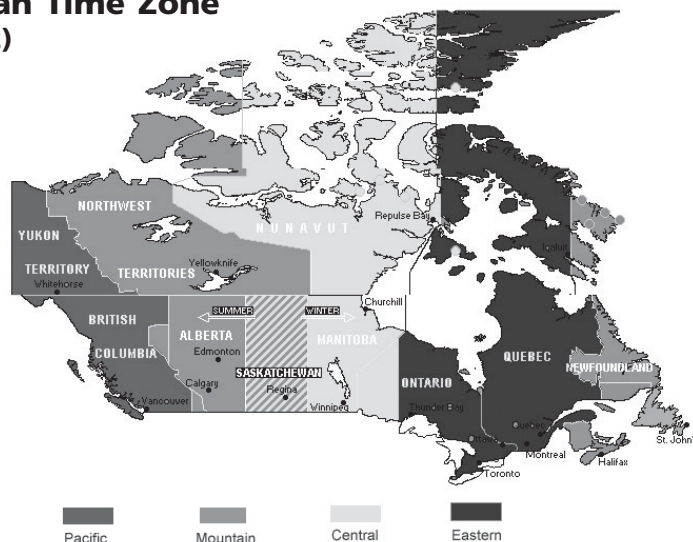

Battery Backup Operation

This clock radio is equipped with a memory holding system that can be powered with 2 "AAA" batteries (included). The power failure protection circuit will not operate unless battery is installed.

When normal household power is interrupted, or AC line cord is unplugged, the batteries will power the Spacemaker to keep track of time and timer setting programmed into memory. When the battery backup functions, the digital display will not light. Normal operation will resume after AC power is restored so you will not have to reset the time.


Power Failure Indicator


The display blinks when AC power is interrupted for more than 2 seconds. You need to reset the clock time to stop the display from blink.

Installing Back up Battery:

1. The compartment door is located at the side of the Spacemaker.



Rotate the lock in the direction of the  arrow until it is released. Remove the compartment door.

 
2. Before inserting the batteries, observe the polarities (that is, + and -) of the batteries, then relate the polarities to the engraved diagram inside the battery compartment. Now insert the batteries.
3. Replace the battery compartment door. Lock the door in place by pushing down on the lock and rotating it in the opposite direction  (clock wise).

Note: It is advised that the batteries be replaced every 3 years.

General Controls

The Main Unit

EN

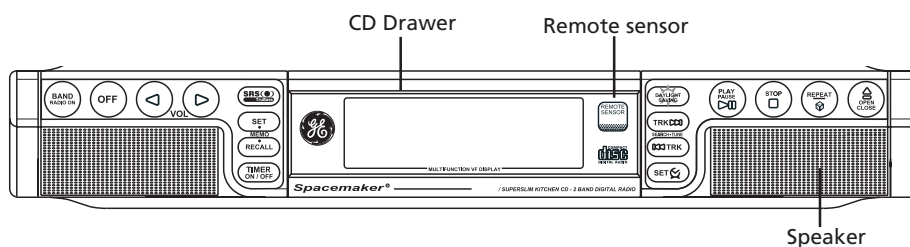

BAND RADIO ON - Turns on radio mode, selects radio bands.

OFF - Turns the unit off.

VOL ◀ / ▶ - Adjusts volume.

SRS - Turns on/ off BASS sound.

MEMO SET - Sets radio preset stations.

MEMO RECALL - Recalls preset radio stations.

TIMER ON/OFF - Turns on/ off timer.

DAYLIGHT SAVING ☀ - Enable and disable Daylight Saving Time in areas observing/not observing such time change.

TRK (SEARCH•TUNE) ⏮ - Tunes down radio frequency, selects previous CD disc tracks, searches backwards through a track.

TRK (SEARCH•TUNE) ⏭ - Tunes up radio frequency, selects next CD disc tracks, searches forward through a track.

SET ⌚ - Sets the clock time.

PLAY PAUSE ⏮⏭ - Turns on CD mode, starts CD playback, pauses CD disc playback

STOP ⏹ - Stops CD disc playback.

REPEAT / ⏮⏭ - Selects repeat or random playback.

OPEN CLOSE ⏮⏭ - Opens/Closes CD disc tray.

Side View



BATTERY COMPARTMENT - Opens battery compartment.

LIGHT (HI / LO / OFF) - Slide the switch to OFF to switch off countertop light, slide to LO for dimmer light, and slide to HI for brighter light.

In Battery Compartment

TIME ZONE - Slide the switch to select time zone. (Refer to the back of the battery compartment door for selection details.)

Select 1 for Eastern Daylight Time

Select 2 for Central Daylight Time

 
Select 3 for Mountain Daylight Time

Select 4 for Pacific Daylight Time

Refer to Figure 1 and Figure 2 on page 4 and 5 for time zone information in the United States and Canada.

General Controls

EN The Remote Control

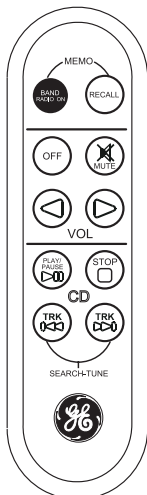

BAND RADIO ON - Turns on the radio, selects radio bands (AM/FM)

MEMO RECALL - Recalls preset radio stations.

OFF - Turns off the unit.

MUTES - Mutes sound.

VOL - Adjusts volume

PLAY/PAUSE - Starts and Pauses disc playback.

STOP - Stops disc playback.

TRK (SEARCH•TUNE) - Tunes down radio frequency, selects previous CD disc tracks, searches backwards through a track.

TRK (SEARCH•TUNE) - Tunes up radio frequency, selects next CD disc tracks, searches forward through a track.

Inserting Batteries into Remote Control

The remote control must be inserted with 2 "AAA" batteries prior use. Follow the steps below to ensure correct installation.

1. Slide the battery compartment lid open by pushing it in the direction shown by the arrow on the back of the remote control.
2. Before inserting the batteries, observe the polarities (that is, + and -) of the batteries, then relate the polarities to the engraved diagram inside the battery compartment. Now insert the batteries.
3. After installation of the batteries, replace and fit the lid to cover the batteries. You should hear a small "CLICK" sound when the lid is locked in place.

Display

Playback modes:

Shuffle, repeat track, repeat disc

 
In CD mode, shows

track number;

In tuner mode,

shows memory

location.

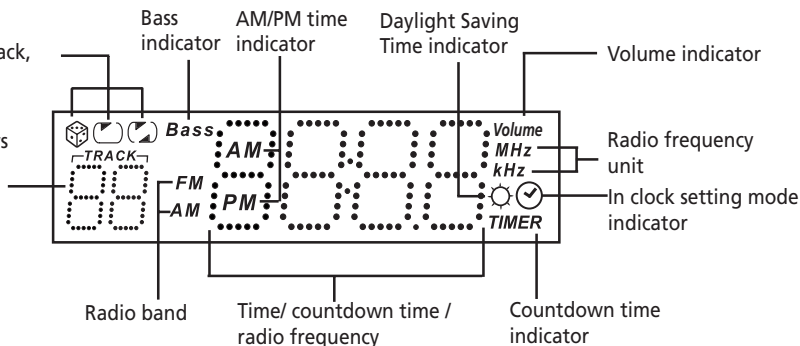

Using the Countertop Light

 
The countertop light switch is located on the side of the unit, and has three settings: HI, LO, and OFF.



- For dimmer light, move the light switch to the LO position.
- For more illumination, switch to HI.
- To turn the light off, place Light switch to OFF.

Replacing the Bulb

1. Unplug the unit cord from the AC power outlet.
2. Unlatch the cover to open it.
3. Unscrew and remove the bulb.
4. Install the replacement bulb.
5. Swing the cover up and snap it in place.
6. Plug the cord into the AC outlet, and reset the clock.

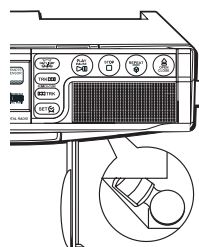

CAUTION: Use only appliance-type bulb with a maximum of 40-watt or equivalent for replacement. To prevent hazard, do not operate light without the cover.

EN

Setting Clock

Setting the Time

The time display has a 12-hour format with AM and PM indicator. To set the time:

1. Press **SET** to enter time setting mode. The red Clock icon will appear on the display.
2. To set clock time, use the **TRK (SEARCH•TUNE)** / buttons to select the correct time. Press and hold to fast forward or fast reverse clock time.
3. Press **SET** again to save clock time. The red Clock icon will turn off.

Setting the Countdown Timer

1. Press **TIMER ON/OFF** to enter timer setting mode. The red **TIMER** icon will flash on the display.
2. To select countdown time, use the **TRK (SEARCH•TUNE)** / buttons to select the correct time. Press and hold to fast forward or fast reverse countdown time.
3. Press **TIMER ON/OFF** again to activate the timer. The unit will beep twice to indicate countdown has started. The red **TIMER** icon will remain lit during countdown.
4. Press **TIMER ON/OFF** to turn timer off at any time or after it has sounded.

NOTE: The radio or CD player is muted when alarm turns on.

Using the Radio

EN

Turning on the Radio

Press **BAND RADIO ON** to turn on the radio.

Turning off the unit

Press **OFF** to turn off the radio.

Adjusting Volume

Press **VOL** ◀ to decrease volume level.

Press **VOL** ▶ to increase volume level.

Selecting Radio Band

Press **BAND RADIO ON** to select between FM and AM band.

Tuning to a station

Press **TRK (SEARCH•TUNE)** ⏮ to tune down radio frequency.

Press **TRK (SEARCH•TUNE)** ⏭ to tune up radio frequency.

NOTE: The display will return to the clock time after displaying the station frequency for a few seconds. To view the current station frequency, press **TRK (SEARCH•TUNE)** ⏮ or ⏭.

Automatic Station Search

 
Press and hold **TRK (SEARCH•TUNE)** ⏮ or ⏭ for more than 1 second and release to start automatic station search in the direction selected.

Search will stop once a station is found.

Tip: Press any key to quite automatic station Search.

Radio Frequency Memory

1. Follow steps in "Selecting Radio Band" and "Tuning to a Station" to tune to the station you want to store into memory.
2. Press **MEMO SET** to assign the next available memory location to the selected station. P will flash with the next available memory location light on the display



If you wish to assign another memory location or overwrite a previously set memory, press **MEMO RECALL** repeatedly to select the memory location.

3. Press **MEMO SET** again to confirm selection.

Tip: A Maximum of 10 preset memory locations are available.

Memory Recall


 
Press **MEMO RECALL** repeatedly to recall preset stations.

Using the CD Player

Selecting CD Player

Press **PLAY PAUSE**  to select CD player.

Loading CD Disc

1. Press the **OPEN CLOSE**  button to open the disc tray.
2. Insert CD disc with label side facing up.
3. Press **OPEN CLOSE**  again to close the disc tray.

Play and Pause Playback

Press **PLAY PAUSE**  to start playback.

Press again to pause. The track number will flash when in pause mode.

Press again to resume.

Note: If no disc is in the disc compartment nd will show on the display.

Skip and Search Tracks


Press **TRK (SEARCH•TUNE)**  to go to the previous track.

Press and hold to quick search backwards through a track.


Press **TRK (SEARCH•TUNE)**  to go to the next track.

Press and hold to quick search forward through a track.

End Playback


Press **STOP**  to end playback.

 
Repeat and Random Playback

Press **REPEAT** /  repeatedly to select among playback modes.


 - Repeat track

 - Repeat disc

 - Random playback

 - Repeating all tracks on the disc in random order



Bass Sound

Press **SRS**  for bass to toggle on/off sound.

EN

Care and Maintenance

EN Troubleshooting Tips for the Remote Control

- *Is the unit plugged into a working AC outlet?*
Try plugging it into one that you know will work.
- *Is the unit on?*
Press **BAND RADIO ON / PLAY PAUSE**  to turn the unit on.
- *Have you selected the correct function when pressing on the buttons?*
For example, if the unit is in CD mode and you try tuning to a particular radio frequency, the remote control is not going to look like it's working. In such cases, press **BAND RADIO ON** to select radio or **PLAY PAUSE**  to select CD function first, then press on the buttons.
- *Are the batteries weak?*
Try replacing old batteries with some fresh ones.
- *Are you pointing the remote control directly at the unit while pressing the buttons?*
You should be, because the remote control sensor at the unit is right at the center of the display.
- *Are you too far from the unit when using the remote control?*
The remote control sensor can only sense signals (from the remote control) within a limited distance. So move closer towards the unit.
- *Are there any obstacles between the remote control and the unit?*
If there are, move all objects standing in the way between the remote control and the unit.

Precautions

- Never open the cabinet under any circumstances. Any repairs or internal adjustments should be made only by a trained technician.
- Warning: Never operate this product with the cabinet removed.
- The CD player of this unit uses a laser to read the music on the disc. The laser mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pick-up lens, it is completely safe when operated according to directions.
- Discs rotate at high speed inside the player. Do not use damaged, warped or cracked discs.
- Do not touch the pick-up lens which is located inside the disc compartment. Also, to keep dust from collecting on the pick-up lens, do not leave the compartment door open for an extended period of time.

Cleaning the Exterior

Prior to cleaning the exterior, be sure to unplug the power cord from the AC power outlet. Wipe the exterior with a soft, clean, and slightly water-dampened cloth.

Handling Compact Discs

- Do not touch the signal surfaces. Hold by the edges, or by one edge and the hole.
- Do not affix labels or adhesive tape to the label surfaces. Also, do not scratch or damage the label.
- Discs rotate at high speeds inside the player. Do not use damaged (cracked or warped) discs.

Cleaning Compact Discs

- Dirty discs can cause poor sound quality. Always keep discs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
- If a disc becomes dirty, wet a soft cloth in water, wring it out well, wipe the dirt away gently, and then remove any water drops with a dry cloth.
- Do not use record cleaning sprays or anti-static agents on discs. Also, never clean discs with benzene, thinner, or other volatile solvents which may cause damage to the disc surface.

CD Lens Care

When your CD lens gets dirty it can also cause the unit to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality. For instructions on cleaning the CD lens, refer to the ones accompanying the lens care.

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages.



U.S. Warranty

EN

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year from date of purchase.

The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

Thomson Inc.

Product Exchange Center
11721 B Alameda Avenue
Socorro, Texas 79927

- Insure your shipment for loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you freight prepaid.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating Instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.



U.S. Warranty

EN

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.



Canadian Warranty

EN

Thomson multimedia Ltd. warrants to the purchaser or gift recipient that if any manufacturing defect becomes apparent in this product within 1 year from the original date of purchase, it will be replaced free of charge, including return transportation.

This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries.

Should your product not perform properly during the warranty period, either:

1. Return it to the selling dealer with proof of purchase for replacement,

OR

2. Remove the batteries (where applicable), and pack product complete with accessories in the original carton (or equivalent). Mail prepaid (with proof of purchase) and insured to:

Thomson multimedia Ltd.
6200 Edwards Blvd.,
Mississauga, Ontario,
L5T 2V7
Canada

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson Inc.
P.O. Box 0944
Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE

NAME OF STORE