
RC8061

Pan/Tilt Camera



Setup Guide

P/N: 956YM80001 Document Version: 1.07

Copyright 2010. All Rights Reserved.

All trademarks and trade names are the properties of their respective owners.

Package Contents

The following items should be included: If any of these items are damaged or missing, please contact your service provider immediately.

1. Pan/Tilt Camera



2. 6 feet long Power adapter



3. Mounting Bracket



4. Three (3) Mounting Screws



5. Three (3) Mounting Anchors



6. Ethernet Cable



Chapter 1

Introduction



This Chapter provides details of the Pan/Tilt Camera's features, components and capabilities.

Overview

The Pan/Tilt Camera has an Integrated Microcomputer and a high quality Image Sensor, enabling it to display high quality live streaming video.

Using enhanced MPEG4 technologies, the Pan/Tilt Camera is able to stream high quality video and audio. The high compression capabilities of MPEG4 reduce network bandwidth requirements to amazingly low levels.

With built-in Passive Infrared sensor and White Light LEDs, the Pan/Tilt Camera can provide home security and illumination up to approximately 16 feet under low light conditions in a simple, economical manner.

Features

- **Standalone Design:** The Pan/Tilt Camera is a standalone system with built-in CPU and Video encoder. It requires only a power source and a connection to your Router.
- **Dual Video Support:** The Pan/Tilt Camera can support both MPEG4 and MJPEG video for different image compression.
- **Wired and Wireless Network Support:** The Pan/Tilt Camera supports either wired or wireless transmission.
- **PIR (Passive Infrared Sensor) Enhanced Motion Detection:** The Pan/Tilt Camera is embedded with a PIR Sensor, which senses infrared light radiating from moving objects within its field of view. Motion detection for large objects, which are undetectable by the PIR Sensor, is achieved by built-in software that compares consecutive video frames for changes. When motion is detected, an alert can be sent, or some other action may be triggered. .
- **White Light LEDs Support:** The Pan/Tilt Camera has 4 white light LEDs. The LEDs can provide illumination up to approximately 16 feet that can help to output a better video quality while under low-light conditions such as indoors, on cloudy days, or in the morning or evening. The white light can be used to deliver warning as well.

Wireless Features

- **Standards Compliant:** The Pan/Tilt Camera complies with the IEEE802.11g (DSSS) specifications for Wireless LANs.
- **Supports both 802.11b and 802.11g Standards:** The Pan/Tilt Camera supports both 802.11b and 802.11g standards.
- **Speeds up to 54Mbps:** All speeds up to the 802.11g maximum of 54Mbps are supported.
- **Security Support:** Full WEP (64/128 Bit), WPA and WPA2 Personal standards are supported on the Wireless interface, allowing advanced encryption of wireless data.

Chapter 2

Basic Setup

2

This Chapter provides details on how to install and configure the Pan/Tilt Camera.

You can also refer to details about assembly of this device in the online setup wizard at <http://monitoringcontrol.verizon.com>

System Requirements

- To use the Wired Interface, a standard router and network cable are required.
- To use the Wireless interface on the wireless model, other Wireless devices must be compliant with the IEEE802.11b or IEEE802.11g specifications. All Wireless stations must use compatible settings.

Physical Details - Pan/Tilt Camera

Front Panel - Pan/Tilt Camera

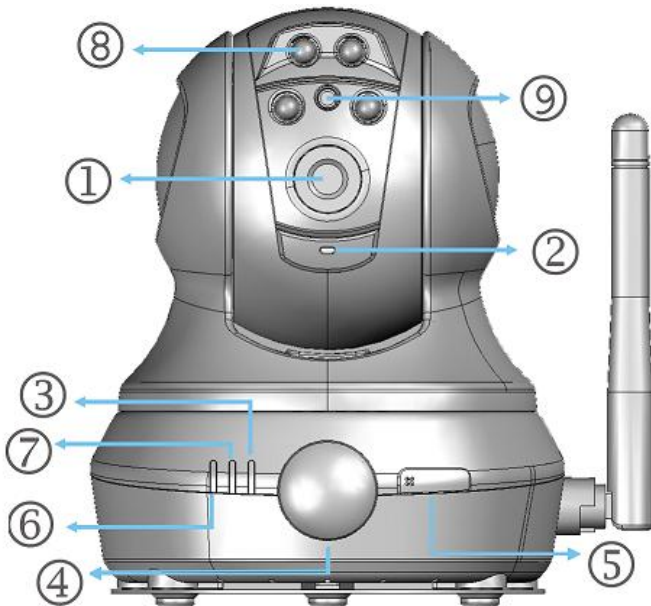 


Figure 1: Front Panel – Pan/Tilt Camera

1. **Lens** No physical adjustment is required or possible for the lens, but you should ensure that the lens cover remains clean. The image quality is degraded if the lens cover is dirty or smudged.
2. **Microphone** (Not currently supported) The Pan/Tilt Camera comes with a built-in microphone.
3. **Power LED** **On** - Powered on
Off - No power
Blinking - The Power LED blinks during start up. This can take up to 20 seconds
4. **Passive Infrared (PIR) Sensor** The PIR sensor is designed for human body detection.
5. **Privacy Button** When the privacy feature is enabled, live video cannot be accessed.
On (Green) - The privacy feature is activated
Off - The privacy feature is not in use
6. **Network LED** The Network LED displays the current status of the Pan/Tilt Camera's connection to the Network via either the Wired or Wireless interface.
On (Green) – Pan/Tilt camera is connected to Network
Off - Pan/Tilt Camera is not connected to the Network
Blinking (Green) - Data is being transmitted
On (Amber) - If the LED is on for 5 seconds, the WPS is not processing successfully
Blinking (Amber) - WPS function is being processed successfully
7. **Active LED** **Off** - No user is viewing the camera
Blinking - User(s) is viewing the camera
8. **White Light LEDs** The White Light LEDs are designed for the supply of backlight under low-light environment.
9. **Echo Eliminator** Echo Eliminator can reduce background noise to provide better voice quality.

Rear Panel - Pan/Tilt Camera

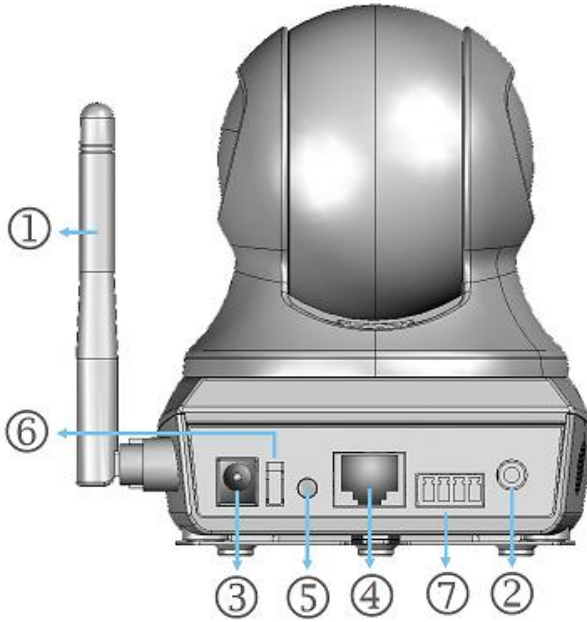 


Figure 2: Rear Panel – Pan/Tilt Camera

- 1. Antenna** The antenna is adjustable; best results are usually obtained with the antenna positioned vertically.
- 2. Speaker Out (Not currently supported)** An external speaker can be plugged in here.
- 3. Power Port** The supplied 5V power adapter plugs in here to power on the Pan/Tilt Camera.
Note: Do not use any other power adapters since doing so may damage the Camera.

4. **Ethernet Port** The supplied Ethernet cable plugs in here enabling you to connect your Pan/Tilt Camera to your router.
- Note:**
- Plugging in the Ethernet cable will disable the Wireless interface. Only one (1) interface can be active at any time.
 - The Ethernet cable should only be connected or disconnected when the camera is powered OFF. Attaching or detaching the Ethernet cable while the camera is powered on does NOT switch the interface between wired and wireless.
 - Detaching the Ethernet cable when the camera is powered ON will disconnect the camera from the network.
5. **Reset Button** This button is recessed; a pin or paper clip can be used to press it. It can be activated at any time when the camera is powered up.
- **Reset to default manufacturer values and reboot.** When pressed and held for over 10 seconds, the settings of Pan/Tilt Camera will be set to their default manufacturer values.
 - **Note:** After this procedure is completed, all LEDs will blink three times to confirm that the reset was successfully completed.
6. **WPS Button** (Not currently supported) The WPS feature when used with other WPS enabled wireless devices automatically creates an encryption-secured wireless connection. The gateway is not enabled for WPS connectivity.
7. **IO Ports** (Not currently supported) The terminal block includes two (2) GND ports, one (1) input port and one (1) output port.

 
Setup the Pan/Tilt Camera

Please follow the steps below to assemble and connect your camera. Once complete, you have the option to utilize your camera in a wired or wireless fashion.

Using the wired interface is recommended for initial setup. After that, please visit <http://monitoringcontrol.verizon.com> to view steps to enable the wireless interface and add your camera to the Home Control Network.


Step 1: Check the Antenna

- a. Ensure the antenna is attached to the Pan/Tilt Camera.
- b. Put the antenna in the upright position to improve wireless reception

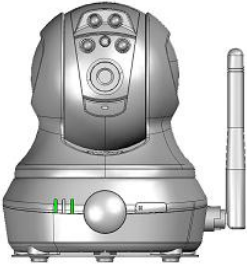


Step 2: Connect the Ethernet Cable

 - a. Plug one end of the Ethernet cable into the Ethernet port on the back of the Pan/Tilt Camera. At this time, please do not connect the power adapter.

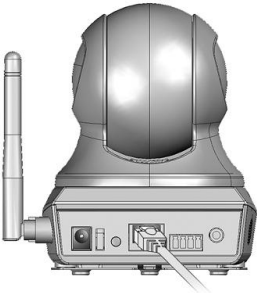

 - b. Plug the other end of the Ethernet cable into an available port on your router

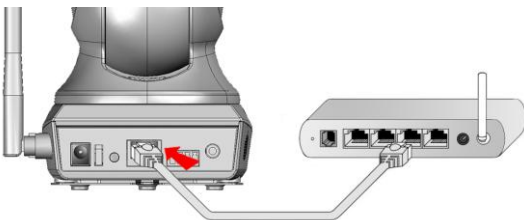




This will enable the Wired interface. Wireless and Wired interfaces cannot be used simultaneously. Using the Wired interface is recommended for initial configuration. After you configure the Wireless settings of the Pan/Tilt Camera via the setup wizard and ensure they are correct, you can unplug the Ethernet cable and power off the camera. The camera will be in Wireless interface when you power on the camera again.

Step 3: Connect the Power Adapter

- a. Plug one end of the power adapter into the power port on the back of the Pan/Tilt camera.
- b. Plug the other end into a power outlet.



 Only use the power adapter provided. Using a different adapter may cause hardware damage.

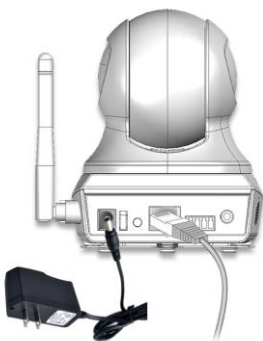

Step 4: Visit the Online Setup Wizard

- a. Visit <http://monitoringcontrol.verizon.com> and follow the simple steps provided in the online setup wizard. This will enable you to add your device to the Home Control network

 
* Optional: Mount the Pan/Tilt Camera

***Note:** The Pan/Tilt Camera can also be placed on a table using the stand provided.


Note: Please ensure the Pan/Tilt camera is configured and added to the network before permanent mounting.

Step 1: Install Mounting Bracket


- a. Drill three holes in the ceiling, in the formation shown below, where you would like to install the Pan/Tilt Camera.

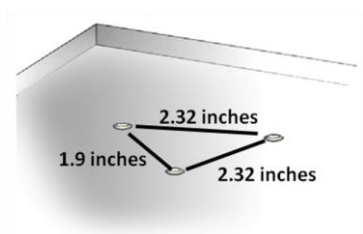

 - b. Push the mounting anchors into the drilled holes

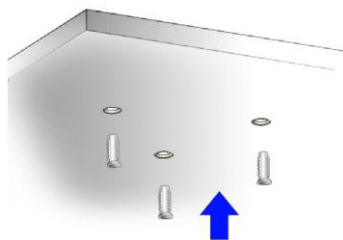


 - c. Screw the three mounting screws through the mounting bracket into the mounting anchors.

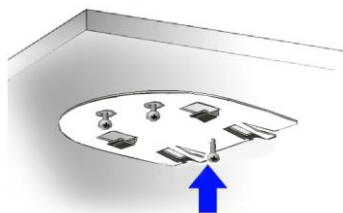

Step 2: Mount the Camera

 Slide the Pan/Tilt Camera into the bracket and secure it firmly.

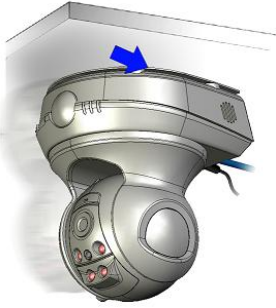

Appendix A

Specifications



Pan/Tilt Camera

Model	Pan/Tilt Camera
Dimensions	90mm (W) * 35mm (H) * 90mm (D)
Built-in Speaker (Not Currently Supported)	8 ohm, 0.5W
Built-in Microphone (Not Currently Supported)	6mm, -40 dB+3db, >55dB
Light Sensor	Min low lux trigger value: 0.5 lux
PIR Sensor	Sensitivity distance: 5 meters Angle degree: 100°(cone) Focus distance: 6~9 meters
Pan & Tilt	<ul style="list-style-type: none"> • Pan (320° / 4 seconds): left 160°, right 160° • Tilt (120° / 0.8 second); up 90°, down 30°
Image Sensor	Omni Vision OV7725 1/3.75" CMOS Sensor
Lens	F4.57mm @F2.0 Fixed Focus lens (board lens, 2P2G)
Operating Temperature	0° C to 40° C
Storage Temperature	-20° C to 70° C
Network Protocols	TCP/IP, DHCP, SMTP, NTP, HTTP, FTP, RTP, RTSP, UPnP (Discovery/Traversal)
Network Interface	1 Ethernet 10/100BaseT (RJ45) LAN connection
Wireless interface (Wireless Model Only)	IEEE 802.11b/802.11g compatible, Infrastructure/Ad-hoc mode, WEP/WPA Personal/WPA2 Personal security support, roaming support
LEDs	Ready (green) Active (green) Network (green)
Power Adapter	5V/2A DC External

Regulatory Approvals

CE Approvals

The Pan/Tilt Camera and the Ethernet Pan/Tilt Camera meet the guidelines of the European Union and comply with the 99/5/EEC and RTTE 99/5EG directives, including the following standards:

- EN60950
- EN300 328-2
- EN301 489-1
- EN301 489-17

This is a Class B product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.