

# magicolor® 2450 Reference Guide

4139-7748-01A 1800773-001A

#### **Copyright Notice**

The digitally encoded software and publication included with your printer are Copyrighted © 2005 by KONICA MINOLTA BUSINESS TECHNOLOGIES, INC., Marunouchi Center Building, 1-6-1 Marunouchi, Chiyoda-ku, Tokyo, 100-0005, Japan. All Rights Reserved.

This software may not be reproduced, modified, displayed, transferred, or copied in any form or in any manner or on any media, in whole or in part, without the express written permission of KONICA MINOLTA PRINTING SOLUTIONS U.S.A., INC. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of KONICA MINOLTA. The information contained in this guide is intended for use with the KONICA MINOLTA magicolor 2450 printers only.

#### About the GPL (General Public License)

This driver is written for Linux, which is written and distributed under the GNU GPL. The printing system CUPS adopted to run on the Linux is published by ESP (Easy Software Products) under the GPL. All source codes that we write must be available to the general public.

#### **Trademarks**

KONICA MINOLTA, the KONICA MINOLTA logo, and PageScope are trademarks or registered trademarks of KONICA MINOLTA HOLDINGS, INC.

magicolor is a trademark or registered trademark of KONICA MINOLTA PRINTING SOLUTIONS U.S.A., INC.

#### Notice

KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. reserves the right to make changes to this guide and to the equipment described herein without notice. Considerable effort has been made to ensure that this manual is free of inaccuracies and omissions. However, KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. makes no warranty of any kind including, but not limited to, any implied warranties of merchantability and fitness for a particular purpose with regard to this manual. KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. assumes no responsibility for, or liability for, errors contained in this manual or for incidental, special, or consequential damages arising out of the furnishing of this manual, or the use of this manual in operating the equipment, or in connection with the performance of the equipment when so operated.

#### SOFTWARE LICENSE AGREEMENT

This package contains the following materials provided by Konica Minolta Business Technologies, Inc. (KMBT): software included as part of the printing system, the digitally-encoded machine-readable outline data encoded in the special format and in the encrypted form ("Font Programs"), other software which runs on a computer system for use in conjunction with the Printing Software ("Host Software"), and related explanatory written materials ("Documentation"). The term "Software" shall be used to describe Printing Software, Font Programs and/or Host Software and also include any upgrades, modified versions, additions, and copies of the Software

The Software is being licensed to you under the terms of this Agreement.

KMBT grants to you a non-exclusive sublicense to use the Software and Documentation, provided that you agree to the following:

- 1. You may use the Printing Software and accompanying Font Programs for imaging to the licensed output device(s), solely for your own internal business purposes.
- In addition to the license for Font Programs set forth in Section 1 ("Printing Software")
  above, you may use Roman Font Programs to reproduce weights, styles, and versions of
  letters, numerals, characters and symbols ("Typefaces") on the display or monitor for your
  own internal business purposes.
- 3. You may make one backup copy of the Host Software, provided your backup copy is not installed or used on any computer. Notwithstanding the above restrictions, you may install the Host Software on any number of computers solely for use with one or more printing systems running the Printing Software.
- 4. You may assign its rights under this Agreement to an assignee of all of Licensee's right and interest to such Software and Documentation ("Assignee") provided you transfer to Assignee all copies of such Software and Documentation Assignee agrees to be bound by all of the terms and conditions of this Agreement.
- 5. You agree not to modify, adapt or translate the Software and Documentation.
- You agree that you will not attempt to alter, disassemble, decrypt, reverse engineer or decompile the Software.
- Title to and ownership of the Software and Documentation and any reproductions thereof shall remain with KMBT.
- 8. Trademarks shall be used in accordance with accepted trademark practice, including identification of the trademark owner's name. Trademarks can only be used to identify printed output produced by the Software. Such use of any trademark does not give you any rights of ownership in that trademark.
- 9. You may not rent, lease, sublicense, lend or transfer versions or copies of the Software that the Licensee does not use, or Software contained on any unused media, except as part of the permanent transfer of all Software and Documentation as described above.
- 10. In no event will KMBT or its licensor be liable to you for any consequential, incidental INDI-RECT, PUNITIVE or special damages, including any lost profits or lost saving, even if KMBT has been advised of the possibility of such damages, or for any claim by any third party. KMBT or its licensor disclaims all warranties with regard to the software, express or implied, including, without limitation implied warranties of merchantability, fitness for a particular purpose, title and non-infringement of third party rights. Some states or jurisdictions do not allow the exclusion or limitation of incidental, consequential or special damages, so the above limitations may not apply to you.

- 11. Notice to Government End Users: The Software is a "commercial item," as that term is defined at 48 C.F.R.2.101, consisting of "commercial computer software" and "commercial computer software documentation," as such terms are used in 48 C.F.R. 12.212. Consistent with 48 C.F.R. 12.212 and 48 C.F.R. 227.7202-1 through 227.7202-4, all U.S. Government End Users acquire the Software with only those rights set forth herein.
- 12. You agree that you will not export the Software in any form in violation of any applicable laws and regulations regarding export control of any countries.

#### **About Adobe Color Profile**

ADOBE SYSTEMS INCORPORATED COLOR PROFILE LICENSE AGREEMENT

NOTICE TO USER: PLEASE READ THIS CONTRACT CAREFULLY. BY USING ALL OR ANY PORTION OF THE SOFTWARE YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS SOFTWARE YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT. IF YOU DO NOT AGREE WITH THE TERMS OF THIS AGREEMENT, DO NOT USE THE SOFTWARE.

- DEFINITIONS In this Agreement, "Adobe" means Adobe Systems Incorporated, a Delaware corporation, located at 345 Park Avenue, San Jose, California 95110. "Software" means the software and related items with which this Agreement is provided.
- 2. LICENSE Subject to the terms of this Agreement, Adobe hereby grants you the worldwide, non-exclusive, nontransferable, royalty-free license to use, reproduce and publicly display the Software. Adobe also grants you the rights to distribute the Software only (a) as embedded within digital image files and (b) on a standalone basis. No other distribution of the Software is allowed; including, without limitation, distribution of the Software when incorporated into or bundled with any application software. All individual profiles must be referenced by their ICC Profile description string. You may not modify the Software. Adobe is under no obligation to provide any support under this Agreement, including upgrades or future versions of the Software or other items. No title to the intellectual property in the Software is transferred to you under the terms of this Agreement. You do not acquire any rights to the Software except as expressly set forth in this Agreement.
- 3. DISTRIBUTION If you choose to distribute the Software, you do so with the understanding that you agree to defend, indemnify and hold harmless Adobe against any losses, damages or costs arising from any claims, lawsuits or other legal actions arising out of such distribution, including without limitation, your failure to comply with this Section 3. If you distribute the Software on a standalone basis, you will do so under the terms of this Agreement or your own license agreement which (a) complies with the terms and conditions of this Agreement; (b) effectively disclaims all warranties and conditions, express or implied, on behalf of Adobe; (c) effectively excludes all liability for damages on behalf of Adobe; (d) states that any provisions that differ from this Agreement are offered by you alone and not Adobe and (e) states that the Software is available from you or Adobe and informs licensees how to obtain it in a reasonable manner on or through a medium customarily used for software exchange. Any distributed Software will include the Adobe copyright notices as included in the Software provided to you by Adobe.

EDNord - Istedgade 37A - 9000 Aalborg - telefon 96333500

- 4. DISCLAIMER OF WARRANTY Adobe licenses the Software to you on an "AS IS" basis. Adobe makes no representation as to the adequacy of the Software for any particular purpose or to produce any particular result. Adobe shall not be liable for loss or damage arising out of this Agreement or from the distribution or use of the Software or any other materials. ADOBE AND ITS SUPPLIERS DO NOT AND CANNOT WARRANT THE PER-FORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SOFTWARE. EXCEPT FOR ANY WARRANTY, CONDITION, REPRESENTATION OR TERM TO THE EXTENT TO WHICH THE SAME CANNOT OR MAY NOT BE EXCLUDED OR LIMITED BY LAW APPLICABLE TO YOU IN YOUR JURISDICTION, ADOBE AND ITS SUPPLIERS MAKE NO WARRANTIES, CONDITIONS, REPRESENTATIONS OR TERMS, EXPRESS OR IMPLIED. WHETHER BY STATUTE. COMMON LAW. CUSTOM, USAGE OR OTHER-WISE AS TO ANY OTHER MATTERS. INCLUDING BUT NOT LIMITED TO NON-INFRINGEMENT OF THIRD PARTY RIGHTS, INTEGRATION, SATISFACTORY QUALITY OR FITNESS FOR ANY PARTICULAR PURPOSE. YOU MAY HAVE ADDITIONAL RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION. The provisions of Sections 4, 5 and 6 shall survive the termination of this Agreement, howsoever caused, but this shall not imply or create any continued right to use the Software after termination of this Agreement.
- 5. LIMITATION OF LIABILITY IN NO EVENT WILL ADOBE OR ITS SUPPLIERS BE LIABLE TO YOU FOR ANY DAMAGES, CLAIMS OR COSTS WHATSOEVER OR ANY CONSEQUENTIAL, INDIRECT, INCIDENTAL DAMAGES, OR ANY LOST PROFITS OR LOST SAVINGS, EVEN IF AN ADOBE REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSS, DAMAGES, CLAIMS OR COSTS OR FOR ANY CLAIM BY ANY THIRD PARTY. THE FOREGOING LIMITATIONS AND EXCLUSIONS APPLY TO THE EXTENT PERMITTED BY APPLICABLE LAW IN YOUR JURISDICTION. ADOBE'S AGGREGATE LIABILITY AND THAT OF ITS SUPPLIERS UNDER OR IN CONNECTION WITH THIS AGREEMENT SHALL BE LIMITED TO THE AMOUNT PAID FOR THE SOFTWARE. Nothing contained in this Agreement limits Adobe's liability to you in the event of death or personal injury resulting from Adobe's negligence or for the tort of deceit (fraud). Adobe is acting on behalf of its suppliers for the purpose of disclaiming, excluding and/or limiting obligations, warranties and liability as provided in this Agreement, but in no other respects and for no other purpose.
- 6. TRADEMARKS Adobe and the Adobe logo are the registered trademarks or trademarks of Adobe in the United States and other countries. With the exception of referential use, you will not use such trademarks or any other Adobe trademark or logo without separate prior written permission granted by Adobe.
- TERM This Agreement is effective until terminated. Adobe has the right to terminate this
  Agreement immediately if you fail to comply with any term hereof. Upon any such termination, you must return to Adobe all full and partial copies of the Software in your possession
  or control.
- 8. GOVERNMENT REGULATIONS If any part of the Software is identified as an export controlled item under the United States Export Administration Act or any other export law, restriction or regulation (the "Export Laws"), you represent and warrant that you are not a citizen, or otherwise located within, an embargoed nation (including without limitation Iran, Iraq, Syria, Sudan, Libya, Cuba, North Korea, and Serbia) and that you are not otherwise prohibited under the Export Laws from receiving the Software. All rights to use the Software are granted on condition that such rights are forfeited if you fail to comply with the terms of this Agreement.

- 9. GOVERNING LAW This Agreement will be governed by and construed in accordance with the substantive laws in force in the State of California as such laws are applied to agreements entered into and to be performed entirely within California between California residents. This Agreement will not be governed by the conflict of law rules of any jurisdiction or the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. All disputes arising out of, under or related to this Agreement will be brought exclusively in the state Santa Clara County, California, USA.
- 10. GENERAL You may not assign your rights or obligations granted under this Agreement without the prior written consent of Adobe. None of the provisions of this Agreement shall be deemed to have been waived by any act or acquiescence on the part of Adobe, its agents, or employees, but only by an instrument in writing signed by an authorized signatory of Adobe. When conflicting language exists between this Agreement and any other agreement included in the Software, the terms of such included agreement shall apply. If either you or Adobe employs attorneys to enforce any rights arising out of or relating to this Agreement, the prevailing party shall be entitled to recover reasonable attorneys' fees. You acknowledge that you have read this Agreement, understand it, and that it is the complete and exclusive statement of your agreement with Adobe which supersedes any prior agreement, oral or written, between Adobe and you with respect to the licensing to you of the Software. No variation of the terms of this Agreement will be enforceable against Adobe unless Adobe gives its express consent, in writing, signed by an authorized signatory of Adobe.

## ICC Profile for TOYO INK Standard Color on Coated paper (TOYO Offset Coated 2.0)

This ICC Profile (TOYO Offset Coated 2.0) characterizes Japanese offset press on Coated paper and is fully compatible with ICC profile format.

About "TOYO INK Standard Color on Coated paper"

This is the standard for color reproduction of sheet-fed offset press on Coated paper made by TOYO INK MFG.CO., LTD. ("TOYO INK").

This standard is made from printing test with using TOYO INK's sheet-fed offset printing inks and TOYO INK's own printing conditions.

"TOYO INK Standard Color on Coated paper" is compatible with "JAPAN COLOR".

#### Agreement

- The reproduction of images on a printer or a monitor using this ICC Profile do not completely match the TOYO INK Standard Color on Coated paper.
- Any and all copyrights of this ICC Profile shall remain in TOYO INK; therefore you shall not transfer, provide, rent, distribute, disclose, or grant any rights in this ICC Profile to any third party without the prior written consent of TOYO INK.
- 3. In no event will TOYO INK its directors, officers, employees or agents be liable to you for any consequential or incidential, either direct or indirect, damages(including damages for loss of business profits, business interruption, loss of business information, and the like)arising out of the use or inability to use this ICC Profile.
- 4. TOYO INK shall not be responsible for answering any question related to this ICC Profile.

All company names and product names used in this document is the trademarks or registered trademarks of their respective holder.

This ICC Profile made by GretagMacbeth ProfileMaker and granted TOYO INK certain license to distribute by GretagMacbeth AG.

TOYO Offset Coated 2.0 © TOYO INK MFG. CO., LTD. 2004

## **OpenSSL Statement**

#### **OpenSSL License**

Copyright (c) 1998-2000 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- All advertising materials mentioning features or use of this software must display the following acknowledgment:
  - "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (http://www.openssl.org/)"
- 4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.
- Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
- 6. Redistributions of any form whatsoever must retain the following acknowledgment:

"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (http://www.openssl.org/)"

THIS SOFTWARE IS PROVIDED BY THE OPENSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OPENSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

EDNord - Istedgade 37A - 9000 Aalborg - telefon 96333500

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

#### Original SSLeay License

Copyright (c) 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved.

This package is an SSL implementation written by Eric Young (eay@cryptsoft.com). The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code.

The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- All advertising materials mentioning features or use of this software must display the following acknowledgement:

"This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)"

The word 'cryptographic' can be left out if the rouines from the library being used are not cryptographic related :-).

4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement:

"This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]

EDNord - Istedgade 37A - 9000 Aalborg - telefon 96333500

## **Contents**

1	Operation on Mac OS X	
	System Requirements for the Printer Driver	2
	Installing the Printer Driver 3	
	Installing the magicolor 2450 Printer Driver	3
	Printer Setup Utility Settings 6	
	When Using a USB Connection 6	
	When Using a Network Connection 9	
	AppleTalk Setting 9	
	IP Printing Setting 12	
	Selecting Print Options 15	
	Specifying Page Setup Settings 17	
	Page Attributes Options 18	
	Custom Paper Size Options 19	
	Summary 20	
	Specifying Print Settings 21	
	Print Dialog Box 22	
	Common buttons 23	
	Copies & Pages 24	
	Layout 25	
	Output Options 26	

Contents i

	Scheduler 27 Paper Handling 28 ColorSync 29 Cover Page 29 Error Handling 30 Paper Feed 31 Quality Adjustment Settings 32 Image 33 Graphics 34 Text 35 Simulation 36 Summary 37		
	Summary 37 Troubleshooting 38		
2	Operation on Mac OS 941		
	System Requirements for the Printer Driver 42		
	Installing the Printer Driver 43 Selecting the Printer in the Chooser 45		
	Specifying Page Setup Settings 47		
	Page Attributes Options 47		
	Specifying a Custom Paper Size 48		
	Specifying Print Settings 50		
	Print Dialog Box Options 51		
	Common buttons 52		
	General Options 53		
	Background Printing 54		
	Color Matching 55		
	Cover Page 56		
	Font Settings 57		
	Job Logging 58		
	Layout 59		
	Save as File 60 Watermark 61		
	Job Retention 62 Quality Adjustment Settings 63		
	Image 64		
	Graphic 65		
	Text 66		
	Simulation 67		
	Checking Print Jobs 68		
	Troubleshooting 69		

3	System Requirements for the Printer Driver 72
	Installing PPD File From the Command Line 73
	Adding the Printer 74
	Specifying Printer Driver Settings 76
	Displaying the Settings Page 76
	Printer Driver Settings 77
	Basic Features 77
	Details 78
	Installed Options 79
	Banners 80
	PS Binary Protocol 80
	Printing a Document 81
	Example Using LPR Command 81
	Example Using OpenOffice 82
	Checking Print Jobs 85
	Troubleshooting 86
4	Printer Management Utilities87
	Installing Printer Management Utilities on Windows 88
5	Understanding the Ethernet Configuration Menus91
	Ethernet Menu 92
	Location within the Configuration Menu 92
	Accessing the Ethernet Menu 93
	Using the Ethernet Menu Options 94
	TCP/IP 94
	IPX/SPX 96
	EtherTalk 96
	Ethernet Speed 97
6	Network Printing99
	Network Connection 100
	Theory 100
	Making the Connection 101
	Ethernet Interface 101
	Using DHCP 101
	Setting the Address Manually 102
	Network Printing 106
	BOOTP 106
	DHCP 106
	HTTP 107
	IPP 107
	LPD/LPR 107
	SLP 107
	SNMP 108

Contents iii

	Port 9100 108 SMTP 108 Printing via IPP (Internet Printing Protocol) – Windows Server 2003/XP/ 2000 109 Adding an IPP Port using Add Printer Wizard 109  Troubleshooting 111
7	Using PageScope Web Connection
	Determining the Printer Web Page 116  Setting Up Your Browser Software 116  Internet Explorer (version 6.0 for Windows) 117  Netscape Navigator (version 7.1) 118  Safari (version 1.1) 118
	Understanding the PageScope Web Connection Window 119 Navigation 119 Current Status 120 User Mode 120
	Administrator Mode 120  Configuring the Printer 121  System Page 121  Summary (shown above) 121
	Operator Control 123 Paper Handling 123 Tray Mapping 128 Color Matching & Quality 130
	Supplies Status 132 Administration 133 Startup Options & Resets 133 Localization Languages 136 E-Mail Configuration 138
	Date & Time 140 Security 141 Online help 143 Print System Pages 145
	Configuration Page 146 Statistics Page 147 Disk Operations 148 Job Page 150
	Job Listing (shown above) 150 Print Stored Job 151 Direct Printing 152 Capture Print Job 153

iv Contents

Print Page 154 Local Interface 154

> Default Setting 155 Download Font/Form 161

Network Page 165

Ethernet 165

Request a certificate 179

Certificate Signing Request Data 181

Install a Certificate 182

Encryption Strength 183

Remove Certificate 184

SSL/TLS Mode 185

Accounting Page 186

Printer-based Job Accounting (shown above) 186

Printer-based Error Accounting 188

Contents

# Operation on Mac OS X

1

## **System Requirements for the Printer Driver**

Before installing the printer driver, make sure that your system meets the following system requirements.

Computer	Apple Macintosh computer with a PowerPC G3 or later processor (PowerPC G4 or later is recommended)
Connecting the computer and printer	USB connection, network connection (10Base-T/100Base-TX/1000Base-T)
Operating system	Mac OS X 10.2 or later (We recommend installing the newest patch.)
	Mac OS X Server 10.2 or later
RAM	More than OS recommendation (128 MB or more is recommended)
Available disk space	256 MB or more (for storing images)

## **Installing the Printer Driver**



You must have administrator privileges in order to install the printer driver.



Before proceeding with the installation, be sure to exit all running applications.

### Installing the magicolor 2450 Printer Driver



The procedure for installing the printer driver on Mac OS X 10.3 is described below. The following procedure or some steps may be different depending on the version of the operating system being used. Complete the installation according to the instructions in the dialog boxes that appear.

- 1 Insert the magicolor 2450 Software Utilities CD-ROM in the CD/DVD drive of your Macintosh.
- 2 Double-click the CD icon on the desk top, drivers folder, mac folder, OSX folder, and then double click the mc2450PS Installer icon.



The installer for the printer driver starts up.




For the following languages, use the corresponding installer.

- Korean: mc2450PS Installer ko
- Simplified Chinese: mc2450PS Installer chs
- Traditional Chinese: mc2450PS Installer cht



When using Mac OS X, start up the Classic environment before installing the printer driver.

3 Check the details of the License Agreement, and click Accept if you agree to the terms of the license.

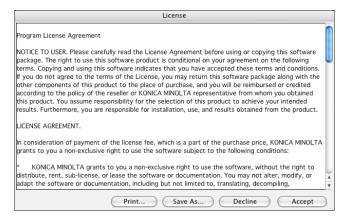


4 Click Install Software.



The Install 2450 dialog box appears.

## 5 Click Install.

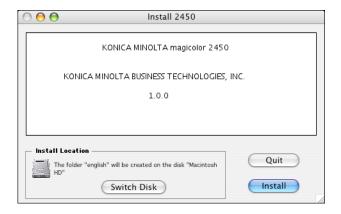


Installation starts.


## **Printer Setup Utility Settings**

## When Using a USB Connection


- 1 Use a USB cable to connect the printer to your computer.
- 2 Check that the printer is turned on, and then restart the computer.
- 3 Open Printer Setup Utility, which can be accessed by clicking Macintosh HD, then Applications, then Utilities.
- 4 In the Printer List, click Add.

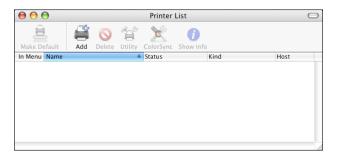


5 Select **USB** from the pop-up menu.

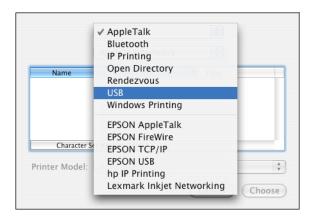

6 Select magicolor2450 in the Product list.

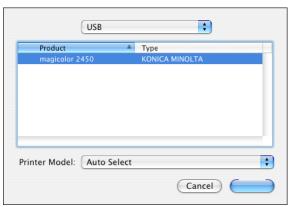


- If magicolor2450 does not appear, check that the printer is turned on and the USB cable is connected, and then restart the computer.
- Select KONICA MINOLTA from the Printer Model pop-up menu.
- Select KONICA MINOLTA mc2450 PPD from Model Name list.

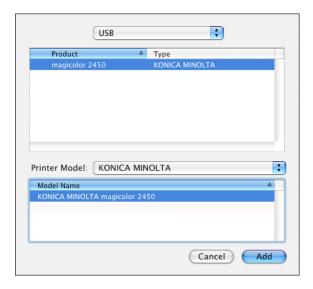

## 9 Click Add.

The new printer appears in the Printer List screen.

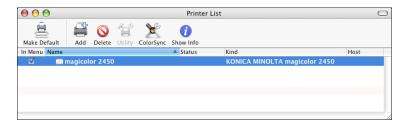

## When Using a Network Connection


The network connection settings can be specified in one of two ways: AppleTalk Setting and IP Printing Setting.

## **AppleTalk Setting**

- 1 Connect the printer to an Ethernet network.
- 2 Open **Printer Setup Utility**, which can be accessed by clicking Macintosh HD, then **Applications**, then **Utilities**.
- 3 Click Add in the **Printer List**.




4 Select AppleTalk from the pop-up menu.

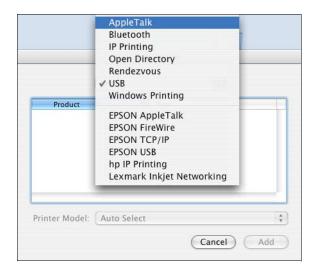


The AppleTalk screen appears.

5 Select magicolor2450 from the Name list.

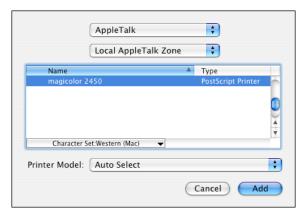

6 Select KONICA MINOLTA from the Printer Model pop-up list.

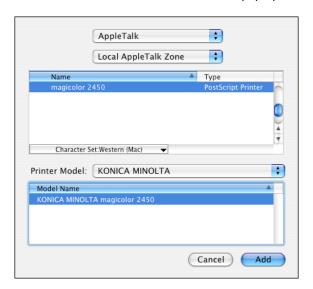


## 7 Click Add.




The new printer appears in the Printer List screen.

## **IP Printing Setting**


- 1 Connect the printer to an Ethernet network.
- 2 Open **Printer Setup Utility**, which can be accessed by clicking Macintosh HD, then **Applications**, then **Utilities**.
- 3 Click Add in the Printer List.

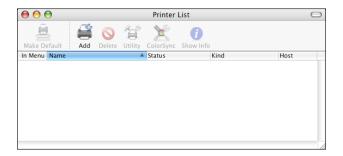


4 Select **IP Printing** from the pop-up menu.

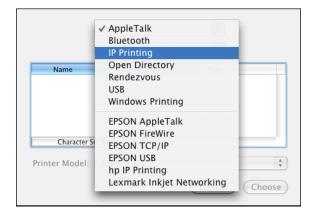

The IP Printing screen appears.

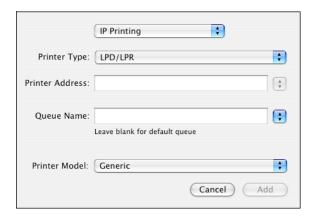


- 5 Select LPD/LPR from the Printer Type pop-up menu.
- 6 Enter the IP address for the printer in the **Printer Address** text box.
- 7 Enter "lp" in the **Queue Name** text box.

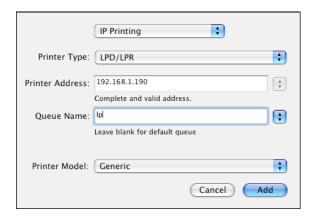


8 Select KONICA MINOLTA from the Printer Model pop-up menu.

## 9 Select KONICA MINOLTA mc2450 PPD in the Model Name list.

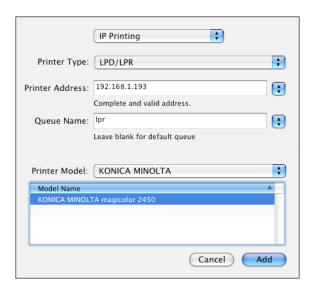


## 10 Click Add.

The new printer appears in the Printer List screen.

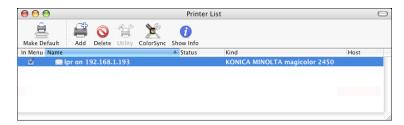


## **Selecting Print Options**

- 1 Open **Printer Setup Utility**, which can be accessed by clicking Macintosh HD, then **Applications**, then **Utilities**.
- 2 Select this printer in the **Printer List**, and then select **Show Info** from the **Printers** menu.

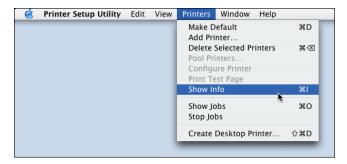

3 Select Installable Options from the pop-up menu.

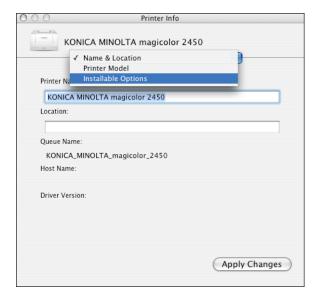

4 Select the appropriate settings in the Tray 2, Optional Hard Disk,
Optional Duplexer check boxes according to your printer setup, and then
click Apply Changes.




5 Close the **Printer Info** dialog box.

## **Specifying Page Setup Settings**

The following dialog box appears when **Page Setup...** is selected from the **File** menu in the application being used.

- Select Page Setup... from the File menu. The Page Setup dialog box appears.
- 2 Select this printer in the Format for pop-up menu.

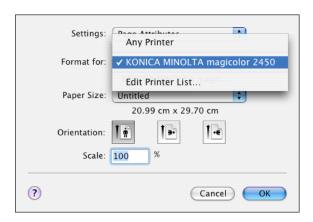


You can select the following sections from the **Settings** pop-up menu.

Section	Description
Page Attributes	This is used to specify the settings for the paper size, scaling, and print orientation.
Custom Paper Size	This is used to specify a custom paper size.
Summary	This is used to check the current settings.
Save As Default	This is used to save the new settings as the defaults.

## **Page Attributes Options**

The **Page Attributes** section is used to specify the settings for the paper size, scaling, and print orientation.

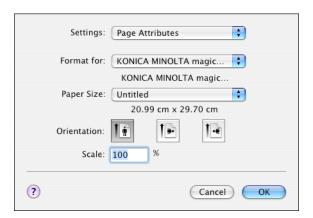


- Paper Size Select the desired paper size from the Paper Size pop-up menu.
- Orientation Select either a vertical or horizontal page orientation for printouts.
- Scale If you want to enlarge or reduce the size of the printout, enter the scale ratio here (1-400%)



Regardless of which paper size is selected, the printer does not print within 0.157" (4 mm) of the edge of the paper.

### **Custom Paper Size Options**

The **Custom Paper Size** section is used to specify the dimensions for a custom paper size.

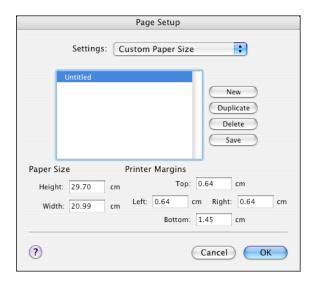


- New Click this button to create a new custom paper size.
- Duplicate
   Click this button to duplicate (copy) the settings of an existing custom paper size and create a new custom paper size based on those settings.
- Delete
   Click this button to delete a custom paper size.
- Save Click this button to save the settings for the selected custom paper size.
- Paper Size Enter the dimensions of the paper height and width for the custom paper size.

**Height**: 5.9 - 14.0" (148 - 356 mm) **Width**: 3.6 - 8.5" (92 - 216 mm)

■ Printer Margins
Enter the dimensions for the top, left, right, and bottom margins.

## **Summary**

The **Summary** is used to check the currently selected Page Attributes settings.

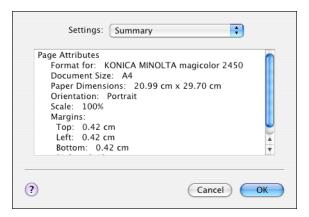


# **Specifying Print Settings**

The following dialog box appears when **Print...** is selected from the **File** menu in the application being used.

- 1 Select **Print...** from the **File** menu. The **Print** dialog box appears.
- 2 Select this printer in the **Printer** pop-up menu.

  The Print dialog box is used to specify the following print options.

### **Print Dialog Box**

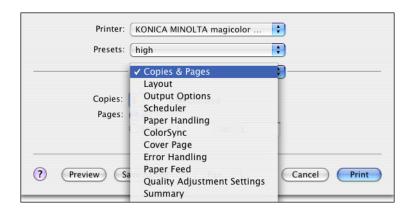

Section	Description
Copies & Pages	This section contains options for the number of copies to be printed and the range of pages to print.
Layout	This section contains options for specifying the page layout when printing and the setting for double-sided printing.
Output Options	This section contains options for saving the print image as a file and for the format of saved data.
Scheduler	This section contains options for specifying the print timing and priority of jobs.
Paper Handling	This section contains options for specifying the pages to be printed and their printing order.
ColorSync	This section contains options for specifying ColorSync settings.
Cover Page	This section contains options for specifying cover page settings.
Error Handling	This section contains options for specifying how an error is reported.
Paper Feed	This section contains paper feed options.
Quality Adjustment Set- tings	This section contains options for print quality settings.
Summary	This is used to check the current settings.




No warning message will be displayed if options cannot be used together are selected.

### Common buttons

- ? (Help button) This displays help information about the Print dialog box.
- Preview Click this button to view a preview image of the printout, to check that the print options are set correctly.
- Save As PDF... Click this button to save the print output as a PDF file.
- FAX Click this button to apply the changes to the settings and to send a fax.
- Cancel Click this button to close the Print dialog box without applying any of the settings.
- Print Click this button to print using the selected print options.

### **Copies & Pages**

The **Copies & Pages** section is used to specify the number of copies to print and the range of pages to print.

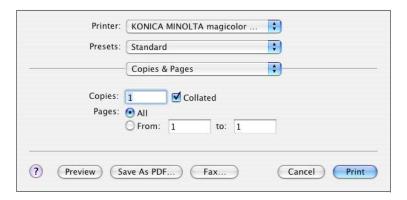

### ■ Copies

This specifies the number of copies to be printed. If the **Collated** check-box is selected, all pages in the documents are printed as sets of printouts.

For example, if 5 is entered for **Copies** and **Collated** is selected, the document is printed five times from the first page to the last page.


### Pages

All: Prints all pages in the document.

From, to: Specifies the range of pages to be printed.

### Layout

The **Layout** section is used to specify the page layout when printing and the setting for double-sided printing.

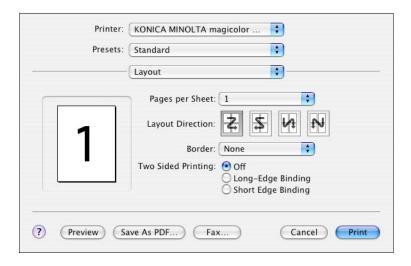

- Pages per Sheet
  Specifies the number of pages to be printed on one sheet of paper. For example, if 2 is selected, two pages are printed on one sheet of paper.
- Layout Direction If you are printing more than one page per sheet, this specifies the direction and order the pages should be arranged on each sheet of paper.
- Border This prints a border around the image for each of the pages printed on one sheet of paper when more than one page is printed on one sheet of paper.
- Two Sided Printing Select the desired setting for double-sided printing when the optional duplexing unit is installed.

**Off**: Double-sided printing is not performed.

Long-Edge Binding: Double-sided printing is performed with the bind-

ing along the long edge of the paper.

Short-Edge Binding: Double-sided printing is performed with the bind-

ing along the short edge of the paper.




To print on both sides of the paper, **Duplex Option** must be selected under **Installable Options** (p. 15).

The **Long-Edge Biding** check box or **Short-Edge Biding** check box can be selected even when the **Duplex Option** is not installed. However, in this case, the print job will be cancelled.

### **Output Options**


The **Output Options** section is used to specify whether or not to save the print output as a file, and the data format to use when saving the data.

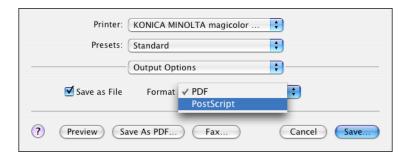

- Save as File Select this option to save the print output as a file.
- Format
  Select the data format to be used when saving the print output as a file.

### **Scheduler**

The **Scheduler** section is used to specify the timing and priority for printing jobs.

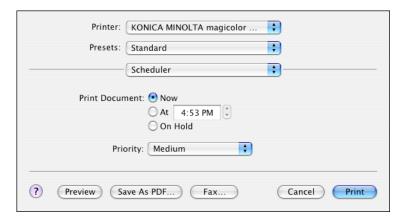

Print Document

**Now**: Select this option to begin printing immediately.


**At**: Specify the time to begin printing.

On Hold: Select this option to hold the print job.

PrioritySelect the priority for printing jobs that are being held.

### **Paper Handling**

The **Paper Handling** section is used to specify the pages that are to be printed and the order in which the pages are printed.

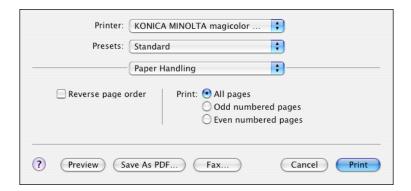

- Reverse page order
   Select this check box to print in the reverse page order.
- Print

**All pages**: Select this option to print all pages.

Odd numbered pages: Select this option to print only the pages with

odd page numbers.

Even numbered pages: Select this option to print only the pages with

even page numbers.

### ColorSync



- Color Conversion
   Allows you to select host-based color matching or printer-based color matching.
- Quartz Filter
   Allows you to select Quartz Filter.


### **Cover Page**



- Print Cover Page
   Allows you to set cover page before or after document.
- Cover Page Type
   Allows you to select cover page type.

Billing Info Allows you to set billing information printed on cover page.


### **Error Handling**

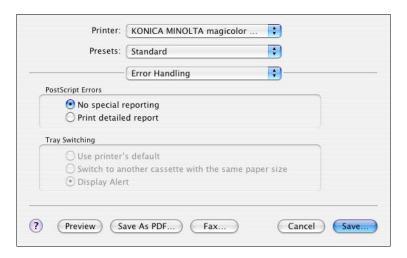

- PostScript Errors
   Allows you to select whether or not a report is outputted when a Post-Script error occurs.
- Tray Switching
   This feature is not available with this printer.


### **Paper Feed**

The **Paper Feed** section is used to specify the paper feed setting.

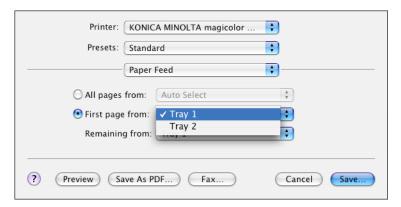


- All pages from All pages in the document are printed using the paper in the specified paper tray.
- First page from

  The first page of the document is printed on paper from a paper tray different from the tray used to print the rest of the document.
- Remaining from The rest of the document is printed from the specified paper tray when the first page is to be printed on paper from a different tray.

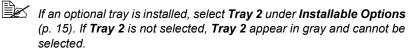


### **Quality Adjustment Settings**

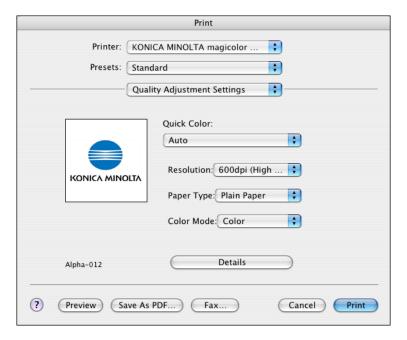

- Quick Color Allows you to select a color preset.
- Resolution Allows you to select the resolution to be used when printing a document.
- Paper Type Allows you to select the type of paper on which the print image will be printed.
- Color Mode
   Allows you to select the color space.
- Details Click this button to display detailed settings tabs.

### **Image**

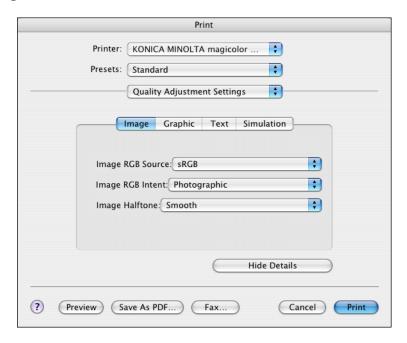


- Image RGB Source
   Allows you to select RGB color profiles for images.
- Image RGB Intent Allows you to select RGB intent for images.
- Image Halftone Allows you to select halftone for images.
- Hide Details Click this button to hide the Detailed Settings tabs and display the Quality Adjustment Settings pane.

### **Graphics**



- Graphics Setting
   Allows you to select settings for text.
- Hide Details
  Click this button to hide the Detailed Settings tabs and display the Quality
  Adjustment Settings pane.

### **Text**

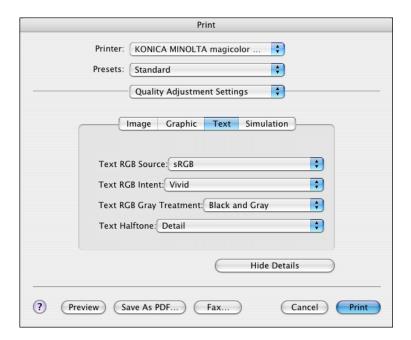


- Text RGB Profile
   Allows you to select RGB color profiles for text.
- Text RGB Intent Allows you to select RGB intent for text.
- Text RGB Gray Treatment
   Allows you to select RGB gray treatment for text.
- Text Halftones
  Allows you to select halftone for text.
- Hide Details

  Click this button to hide the Detailed Settings tabs and display the Quality

  Adjustment Settings pane.


### **Simulation**

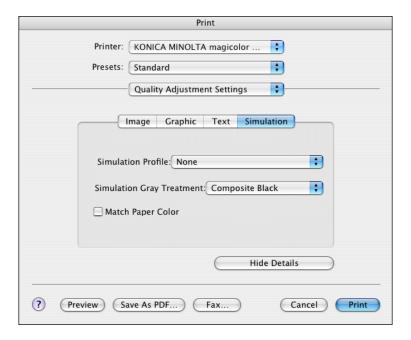

- Simulation Profile
   Allows you to select Source Profile for simulation.
- Simulation Gray Treatment Allows you to select Simulation gray treatment.
- Match Paper Color
   Allows you to set Match Paper Color.
- Hide Details Click this button to hide the Detailed Settings tabs and display the Quality Adjustment Settings pane.

### Summary

The **Summary** is used to check the currently selected print settings.

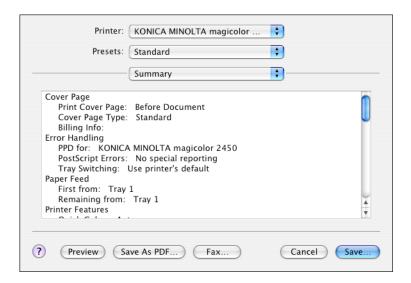

# **Troubleshooting**

Symptom	Solution
The setting in the saved presets are not applied.	Depending on the functions selected for the printer, some preset settings are not saved.
Media type error appears.	If a media type, such as "Transparency," is specified for Tray 1 or Tray 2, a media type error appears and the printer stops. Be sure to specify a media type supported by Tray 1 and Tray 2.
The printer stops responding.	Depending on the operating system, some paper size and paper type combinations are not permitted. If the job was sent with an incorrect combination of settings, the printer stops responding. Be sure to print with the correct combination of paper size and paper type settings.
Checking the version number of the printer driver.	Click the following files, and then select <b>Get Info</b> from the <b>File</b> menu.
	■ For Mac OS X 10.3: /Library/Printers/KONICAMINOLTA/PDEs/ KONICA MINOLTA mc2450 Color.plugin
	■ For Mac OS X 10.2: /Library/Printers/PPD Plugins/KONICA MINOLTA mc2450 Color.plugin
The dialog box displays incorrectly after you select another manufacture's printer and then select the magicolor 2450 again.	Close the Print dialog box, and then open it again.
The custom paper size is different from the size that was set.	Depending on the operating system, the custom paper size settings may change slightly (for example, 5.80" may change to 5.79").
When printing 2 pages on a single sheet of paper, the pages are not centered on the paper.	Depending on the operating system, the pages are not centered on the paper when printing two pages on a single sheet of paper with the following paper sizes.
	Legal, Letter Plus, Foolscap, Government Legal, Statement, Folio

Symptom	Solution
When printing multiple copies of multiple pages on a single sheet of paper with <b>Collated</b> selected, the pages are printed continuously.	When printing multiple copies of multiple pages on a single sheet of paper, <b>Collated</b> cannot be selected.
While printing from Acrobat Reader, the pages are not correctly collated or the print job is cancelled.	If a printing error occurs with Acrobat Reader, print using the Preview application provided by the operating system.

# Operation on Mac OS 9



# **System Requirements for the Printer Driver**

Before installing the printer driver, make sure that your system meets the following system requirements.


Computer	Apple Macintosh computer with a PowerPC G3 or later processor (PowerPC G4 or later is recommended)
Connection between computer and printer	USB connection  Network connection
	(10Base T/100Base TX/1000Base T)
Operating system	Mac OS 9.1 or later Mac OS X Classic mode (9.2.2 or later)
	When using the Classic environment of Mac OS X, Mac OS X 10.2.6 or later is required.
RAM	More than OS recommendation (128 MB or more is recommended)
Available disk space	256 MB or more is recommended (for storing images)

# **Installing the Printer Driver**


- 1 Insert the magicolor 2450 Software Utilities CD-ROM in the CD/DVD drive of your Macintosh.
- 2 Double-click the mc2450PS Installer icon.



The installer for the printer driver starts up.

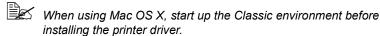

3 Check the details of the License Agreement, and click **Accept** if you agree to the terms of the license.

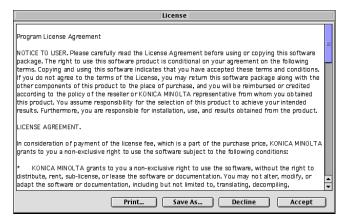

4 The following screen appears.



- 5 Click Install Software.
  - The Install 2450 dialog box appears.
- 6 Click Install.

The installer installs the printer driver.



Installation starts.

7 After the installation has been completed, click Quit.



This completes the installation of the magicolor 2450 printer driver.

# Selecting the Printer in the Chooser

- 1 Connect the printer and computer.
  - If you are using a USB connection, use the USB cable to connect the printer and your computer.
  - If you are using a network connection, use an 10Base-T/100Base-TX/ 1000Base-T cable to connect the printer to a Ethernet network.
- 2 Select **Chooser** from the Apple menu.





When using Mac OS X, the Apple menu is available with the icon for the Classic environment in the menu bar.




To display the Classic status in the menu bar, select the "Show Classic status in menu bar" check box in the Classic dialog box. 3 Select the LaserWriter 8 icon from the icons on the left side of the Chooser.

The printer name appears in the **Select a printer** section on the right side of the Chooser.



- 4 Select the printer.
- 5 Click Create.

The printer setup dialog box appears.

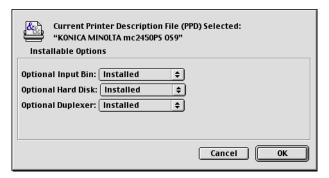

 $6\,$  Select the options that are installed, and then click  $\mbox{ok}.$ 

The icon for the magicolor 2450 appears on the desktop.


- With a USB connection, **2450** appears.
- With a network connection, **KONICA MINOLTA magicolor2450** appears.
- In the Classic environment, no icon appears on the desktop.

# Specifying Page Setup Settings

The Page Setup dialog box appears when Page Setup... is selected from the File menu.

### **Page Attributes Options**

The Page Attributes section is used to specify the options for the Paper Size, scaling, and page orientation.

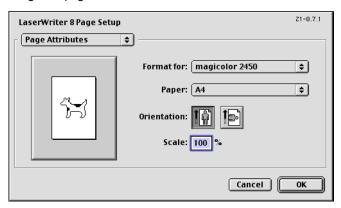

- Paper Select the desired Paper Size from the **Paper** pop-up menu.
- Scale (%) If you want to enlarge or reduce the size of the printout, enter the scale ratio (25%-400%) here.
- Orientation Select either a vertical or horizontal page orientation for printouts.




Regardless of which paper size is selected, the printer does not print within 0.157 inch (4 mm) of the edge of the paper.

### **Specifying a Custom Paper Size**

You can also specify a paper size that is not listed in the **Paper Size** pop-up menu.


1 Select Custom Paper Sizes... from the pop-up menu, in the Page Setup dialog box.

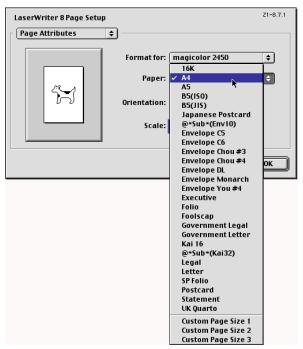

The **Edit Paper Sizes** dialog box appears.

### 2 Click New.

The following dialog box appears.

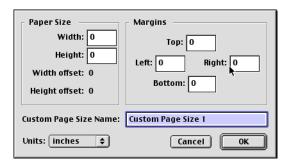

 ${f 3}$  Enter a name for the custom paper size in the Custom Page Size Name field, enter the dimensions in the Width and Height fields, enter the margins in Margins fields, and then click OK.



The default units used for the dimensions for Width, Height and Margins is inches. To specify the unit of dimensions, select cm or pts from the **Units** pop-up menu.

4 To add several different custom paper sizes, click **New** and repeat step 3.




To delete an existing custom paper size, select the custom paper size from the list on the center of the dialog box, and then click Delete.

- 5 The custom paper size setting is saved, and the name of the custom paper size can now be selected from the **Paper** pop-up menu.
- 6 After you have finished entering the settings, click **Done**.

# **Specifying Print Settings**

The following dialog box appears when **Print...** is selected from the **File** menu in the application being used.

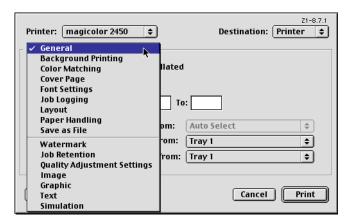

You can specify the following options from the Print dialog box.

### **Print Dialog Box Options**

Section	Description
General	This section contains options for the number of copies to be printed, the paper source, and the range of pages to be printed.
Background Printing	This section contains options for spooling the print data for background or foreground printing and the document printing time.
Color Matching	This section contains options for Color Matching.
Cover Page	This section contains for specifying cover page settings.
Font Settings	This section contains options for Font Documentation and Font Down loading.
Job Logging	This section contains options for creating a job log.
Layout	This section contains options for the number of pages per sheet of paper and other duplex printing.
Paper Handling	This section contains options for specifying the pages to be printed and their printing order.
Save as File	This section contains options for saving the print image as a file and for the format of saved data.
Watermark	This section contains options for watermark settings.
Job Retention	This section contains options for Job Retention.
Quality Adjustment Set- tings	This section contains options for print quality adjustment.
Image	This section contains advanced color options for Images.
Graphic	This section contains advanced color options for Graphics.
Text	This section contains advanced color options for Text.
Simulation	This section contains options for Simulation Profile.




No warning message will be displayed if options that cannot be used together are selected.

### **Common buttons**


- Preview Click this button to view a preview image of the printout, to check that the print options are set correctly.
- Cancel Click this button to close the Print dialog box without applying any of the settings.
- OK Click this button to print using the selected print options.
- Save Settings Click this button to save configuration changes made in the print dialog. These changes remain as the default settings until the configuration items are changed again.

### **General Options**

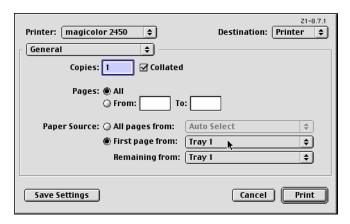

- Copies
   Allows you to specify how many copies of the print job you want printed.
- Collated If this item is selected, your print job is collated (one complete copy of the document is printed before the next copy is printed). Left unselected, the printing is uncollated.
- Pages Select All to print all pages in the open document. To print a specific range of pages, select From, and then enter the beginning page number in the From text box and the ending page number in the To text box.
- Paper Source
  Allows you to select the tray that the printer uses for the print job and to choose a different tray for the first page of the document, if you have more than one tray installed.

### **Background Printing**

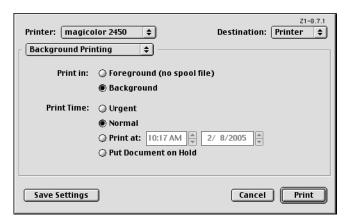


#### ■ Print In

Allows you to choose between printing in foreground and printing in background. Printing in background creates a spool file that is temporarily saved on your computer until the print job is ready to be processed. This allows you to continue working in your applications while the print job is processing. If you don't have enough free file space on your computer to process a spool file, select Foreground printing.

### ■ Print Time


Allows you to assign a priority status to the print job and specify a particular time that the print job should be printed.

### **Color Matching**

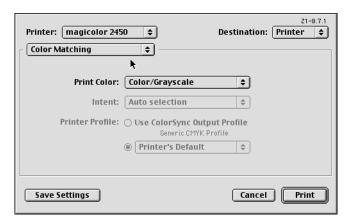


- Print Color Allows you to choose from the color configurations available on your computer.
- Intent
   Allows you to specify the color matching configuration or allow for automatic configuration. This item is disabled (grayed out) unless ColorSync Color Matching is the selected Print Color setting.
- Printer Profile
   Allows you to select from the printer profiles that are available.

### **Cover Page**

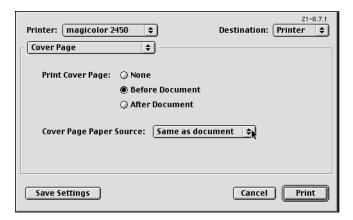


- Print Cover Page
  Lets you choose whether to print a cover page, and specify Page the placement of the cover page in relation to the remaining pages of the print job.
- Cover Page Paper Source
  Allows you to select the paper tray containing the cover Paper Source
  page media. The Cover Page contains information about the print job
  such as: user name, application, document name, date, time, printer, and
  number of pages. This option is disabled (grayed out) if **Print Cover Page**is set to **None**.

#### **Font Settings**

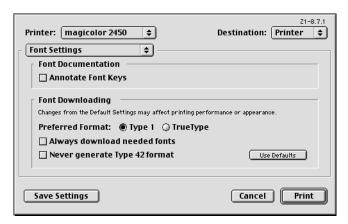


- Font Documentation
  - Annotate Font Keys:
     Allows you to determine if the font keys are annotated.
- Font Downloading
  - Preferred Format:
     Allows you to select the preferred font format.
  - Always download needed fonts:
     If selected, fonts should always be downloaded to the printer. Printer fonts are not used.
  - Never generate Type 42 format:
     If selected, Type 42 fonts are not generated.
  - Use Defaults: Restores factory default settings for font downloading.

#### **Job Logging**

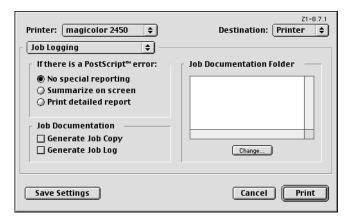


- If there is a PostScript error Allows you to select whether or not a report is outputted when a Post-Script error occurs.
- Job Documentation Allows you to specify generating a job copy in the folder specified as the Job Documentation Folder, and generating a job font log following the completion of the print job.
- Job Documentation Folder Allows you to select the location of the Job Documentation Folder. The folder selected holds a copy of the print jobs or job information of print jobs that are configured for job documentation. Use the **Change** button to browse to and select a different folder.

#### Layout

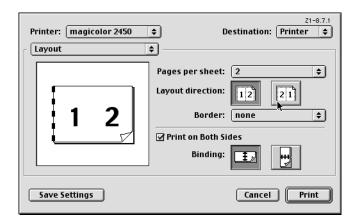


- Pages Per sheet
   Allows you to set the number of logical pages per physical sheet.
- Layout direction Lets you identify either left-right or right-left logical page direction on the physical sheet.
- Border Allows you to select a border to surround each logical page.
- Print on Both Sides
   Allows you to configure the print job for duplex printing.
   This setting is disabled (grayed out) unless an optional duplex unit is installed.
- Binding Determines the orientation of the logical pages on the physical sheet so the printed media is oriented for binding on the short edge or long edge of the media.

#### Save as File

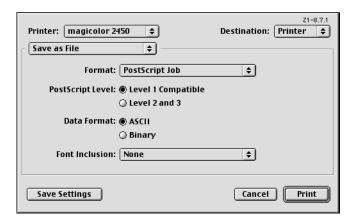


- Format Select the file format of the output file.
- PostScript Level Allows you to select from available PostScript levels.
- Data Format Sends the print job data to the file in either ASCII or Binary format.
- Font Inclusion Allows you to choose the fonts that are included with the Inclusion print job as it is saved to a file.

#### Watermark

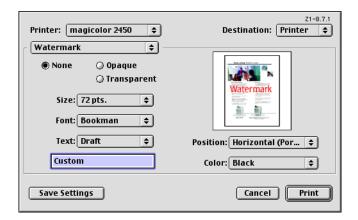

- None Allows you to disable the watermark function.
- Opaque The watermark text will be solid. The page content beneath the watermark will not be visible.
- Transparent
  The watermark text will be semi-transparent. The page content beneath the watermark will be visible.
- Size Allows you to select watermark font size.
- Font Allows you to select watermark font type.
- Text Allows you to select watermark text.
- Position Allows you to select watermark position.
- Color Allows you to select watermark font color.

#### Job Retention

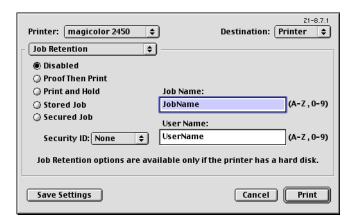

- Job Retention Select type of job.
  - Disabled: The job is printed normally.
  - Proof then Print: Printer prints 1 copy without the panel operation. You
    can then print the rest of the copies through the panel. The job is
    deleted after the whole copies are printed.
  - Print and Hold: Printer prints all of multicopy print job, and then holds the print job in the printer's hard disk for printing additional copies. The job isn't deleted until it is intentionally deleted or the held job timeout occurs.
  - Stored Job: Printer dose not print the job without the panel operation.
    You can print desired copies through the panel. You can print additional copies through the panel later. If you stored the job with security ID, you have to input it every time print job. Printer keeps the job until it is deleted intentionally.
  - Secured Job: Printer dose not print the job without the panel operation. Printer prints the job when you input Security ID correctly. The job is deleted after all copies are printed.



For details on each printing procedure, refer to the magicolor 2450 User's Guide.

- Job Name Allows you to set Job Name.
- User Name Allows you to set User Name.


Security ID Select a Security ID to a Job.



To use Job Retention feature, the optional Hard Disk must be installed on the printer.


In addition, the printer must be set up with the Chooser to use the Hard Disk. For details on selecting the Hard Disk with the Chooser, refer to "Selecting the Printer in the Chooser" on page 45.

#### **Quality Adjustment Settings**

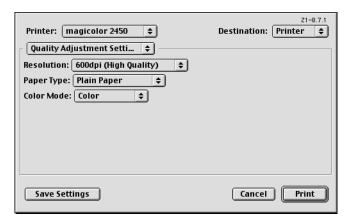


- Resolution
   Allows you to select the resolution of the image.
- Paper Type Allows you to select Paper Type.
- Color Mode
   Allows you to select the color model that the printer uses for color printing.

#### **Image**

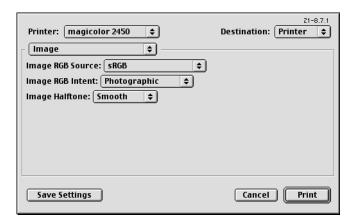


- Image RGB Source Allows you to select RGB color profiles for images.
- Image RGB Intent Allows you to select RGB intent for images.
- Image Halftone Allows you to select halftone for images.

#### **Graphic**

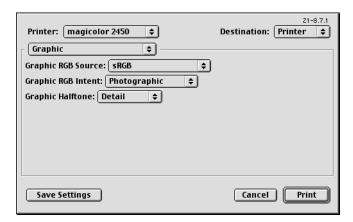


- Graphic RGB Source Allows you to select RGB color profiles for graphics.
- Graphic RGB Intent
   Allows you to select RGB intent for graphics.
- Graphic Halftone
   Allows you to select halftone for graphics.

#### **Text**

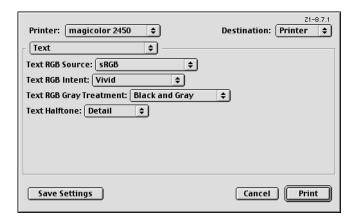

- Text RGB Source Allows you to select RGB color profiles for text.
- Text RGB Intent Allows you to select RGB intent for text.
- Text RGB Gray Treatment
   Allows you to select RGB gray treatment for text.
- Text Halftone Allows you to select halftone for text.

#### **Simulation**

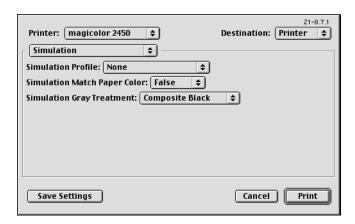

- Simulation Profiles
  Allows you to select RGB color profiles for simulation.
- Simulation Match Paper Color Allows you to set Match Paper Color.
- Simulation Gray Treatment Allows you to select Simulation gray treatment.

# **Checking Print Jobs**

To check the progress of print jobs, double-click the magicolor 2450 desktop printer icon.





In the Classic environment, Print Monitor automatically starts up, and the icon appears in the Dock. Click the Print Monitor icon to check the status of print jobs.

# **Troubleshooting**

Symptom	Action
When printing on both sides of paper with a custom size, an error occurs.	Both sides of paper with a custom size cannot be printed on. In addition, there are limitations on the media types that can be selected. Refer to the User's Guide (CD-ROM) provided with the printer.
When printing from a Web browser, each frame is printed on a separate page.	Depending on the Web browser being used, each frame will be printed on a separate page. Try printing from a different Web browser. You can confirm it using the "preview" function of the print dialog.
Double-sided printing cannot be selected.	If the printer is connected by USB, select the installed options with the Chooser. For details
Tray 2 cannot be selected.	on selecting options with the Chooser, refer to "Selecting the Printer in the Chooser" on page 45. In addition, there are limitations on the media types that can be selected. Refer to the User's Guide (CD-ROM) provided with the printer.
The error was cancelled, but the error message appeared again.	Occasionally, the error message appears a few times, even though the error was cancelled.

# Operation on Linux

3

# System Requirements for the Printer Driver

Before installing the printer driver, make sure that your system meets the following system requirements.

CPU	Intel IA-32
Operating systems	Red Hat Linux 9.0 (CUPS 1.1.15 or later), SuSE Linux 8.2 (CUPS 1.1.15 or later)
Applications	OpenOffice 1.0.1 or later
Connecting the computer and printer	USB connection, Parallel connection, Network connection (10Base-T/10Base-TX/1000Base-T)
RAM	More than OS recommendation (128 MB or more is recommended)
Network	LPR (queue: lp, LP, default, DEFAULT)
	AppSocket/HP JetDirect
Available hard disk space	256 MB or more



This printer driver can also be used with Linux versions other than those listed above if CUPS 1.1.15 or later is installed.



As an example, the descriptions of the operations for Red Hat 9.0 are provided in this chapter.

# **Installing PPD File From the Command Line**



Before proceeding with the installation, be sure to exit all running applications.



Root privileges are required in order to install ppd file.

1 Copy the ppd file from the CD-ROM to the "/usr/share/cups/model/ KONICA MINOLTA/" on the computer.



A ppd file for each language is available in the corresponding "drivers/linux/ppd/<language>" folder on the Software Utilities CD-ROM. Use the appropriate ppd file for the language.



When printing from OpenOffice, use km2450-open.ppd. Otherwise, use km2450np.ppd.

For details on the procedure for printing from OpenOffice, refer to "Example Using OpenOffice" on page 82.

- 2 From the Main Menu, select System Tools, then Terminal.
- Enter the command "/etc/init.d/cups restart".



4 Quit Terminal.

## **Adding the Printer**

- After copying the PPD file, be sure to restart CUPS.
- 1 Start up the Web browser.
- 2 Enter the URL "http://localhost:631", and then click **Manage Printers**. *The CUPS Administration Web page appears*.



3 Click Add Printer.
A pop-up window appears.



- 4 Enter the user name and password for using root privileges, and then click **OK**.
- 5 Enter the printer name, location, and description, and then click **Continue**.



6 Select a Device Port from the **Device** list, then click **continue**.

TCP/IP: AppSocket/HP Jet-Direct

USB: USB Printer #1 (KON-ICA MINOLTA magicolor 2450)

Parallel: Parallel Port #1



7 For a USB or parallel connection, skip to step 8. Enter the device URI in the following form: socket://<Printer IP or Printer Hostname>[:port].



### Example:

Using Printer IP - socket:/ /192.168.1.190:9100 Using printer Hostname socket://Hostname:9100

Hostname may be substituted by IP Address, and Port is optional.

Admin


Device URI for mc2450

- 8 Click Continue.
- Select KONICA MINOLTA. click Continue.



Device URI: socket://192.168.1.193:9100/ Examples

10 Select KONICA MINOLTA mc2450 PPD (en), then click Continue.

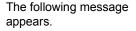





# **Specifying Printer Driver Settings**

#### **Displaying the Settings Page**

- 1 Start up the Web browser.
- 2 Enter the URL "http://local-host:631", and then click Manage Printers.

  Printer on localhost.local-domain window appears.



3 Click Configure Printer. The printer driver settings page appears.



#### **Printer Driver Settings**

#### **Basic Features**

Parameters	Settings
Auto Tray Switching	Specifies tray switching behavior as <b>Enabled</b> , <b>Disabled</b> .
	■ The default setting is <b>Disabled</b> .
Collate	If <b>Yes</b> is selected, all pages in the documents are printed as sets of printouts.
	■ The default setting is <b>Disabled</b> .
Color Mode	Specifies color mode as Color, Grayscale.
	■ The default setting is Color.
Duplex Options	Specifies the duplex print binding position as Long Side, Simplex, or Short Side.
	■ The default setting is Simplex.
Paper Size	Specifies the paper size. An irregular paper size cannot be selected.
Paper Source	Specifies the paper source as <b>Tray 1</b> , <b>Tray 2</b> , or <b>Auto</b> .
	■ The default setting is Tray 1.
Paper Type	Specifies the paper type as Printer Default, Plain Paper, Thick, Transparency, Letter- head, Label, Postcard, Envelope, or Glossy.
	■ The default setting is Printer Default.
Resolution	Specifies the resolution of the image as 600dpi (High Quality), 600dpi (Standard).
	■ The default setting is <b>600dpi (High Qual-ity)</b> .

#### **Details**

Parameters	Settings
Graphic Halftone	Specifies the halftone for graphic as <b>Detail</b> or <b>Smooth</b> .
	■ The default setting is <b>Detail</b> .
Graphic RGB Intent	Specifies RGB intent for graphic as Photographic, Vivid, Relative Color, or Absolute Color.
	■ The default setting is <b>Vivid</b> .
Graphic RGB Source	Specifies RGB source for graphic as None, sRGB, Adobe RGB (1998), Apple RGB, ColorMatch RGB, or Blue Adjust RGB.
	■ The default setting is <b>sRGB</b> .
Image Halftone	Specifies the halftone for image as <b>Detail</b> or <b>Smooth</b> .
	■ The default setting is <b>Smooth</b> .
Image RGB Intent	Specifies RGB intent for image as Photographic, Vivid, Relative Color, or Absolute Color.
	■ The default setting is <b>Photographic</b> .
Image RGB Source	Specifies RGB source for image as None, sRGB, Adobe RGB (1998), Apple RGB, ColorMatch RGB, or Blue Adjust RGB.
	■ The default setting is <b>sRGB</b> .
Simulation Gray Treatment	Specifies simulation gray treatment as Composite Black, Black and Gray, or Black Only.
	■ The default setting is Composite Black.
Simulation Match Paper Color	Specifies Match Paper Color as <b>On</b> or <b>Off</b> .
	■ The default setting is <b>Off</b> .
Simulation Profile	Specifies the simulation profile as None, SWOP, EuroScale, Commercial Press, DIC, or TOYO.
	■ The default setting is <b>None</b> .

Parameters	Settings
Text Halftone	Specifies the halftone for text as <b>Detail</b> or <b>Smooth</b> .
	■ The default setting is <b>Detail</b> .
Text RGB Gray Treatment	Specifies the RGB Gray Treatment as Composite Black, Black and Gray, or Black Only.
	■ The default setting is Black and Gray.
Text RGB Intent	Specifies RGB intent for text as Photographic, Vivid, Relative Color, or Absolute Color.
	The default setting is <b>Vivid</b> .
Text RGB Source	Specifies RGB source for text as None, sRGB, Adobe RGB (1998), Apple RGB, ColorMatch RGB, or Blue Adjust RGB.
	■ The default setting is <b>sRGB</b> .

#### **Installed Options**

Parameters	Settings
Disk	Select <b>Installed</b> if the optional Hard Disk for the printer has been installed.
	■ The default setting is <b>Not Installed</b> .
Duplexer	Select <b>Installed</b> if the optional duplexing unit for the printer has been installed.
	■ The default setting is <b>Not Installed</b> .
Input Bin	Select <b>Installed</b> if the optional trays for the printer have been installed.
	■ The default setting is <b>Not Installed</b> .

#### **Banners**

Parameters	Settings
Starting Banner	Specifies the starting banner as none, classified, confidential, secret, standard, topsecret, or unclassified.
	■ The default setting is <b>None</b> .
Ending Banner	Specifies the ending banner as none, classified, confidential, secret, standard, topsecret, or unclassified.
	■ The default setting is <b>None</b> .

#### **PS Binary Protocol**

Parameters	Settings
PS Binary Protocol	Specifies the binary communications protocol (BCP) as <b>None</b> or <b>BCP</b> .
	■ The default setting is <b>None</b> .


# **Printing a Document**

The contents and available options that appear in the print dialog box may vary depending on the application being used.

#### **Example Using LPR Command**

With applications other than OpenOffice, the following print dialog box appears.

1 Click **Properties** in the Print dialog box.

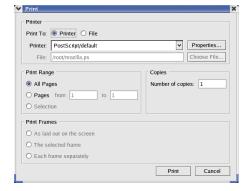

2 The Print Properties dialog box appears.



- 3 Enter the command "lpr -P" followed by the name of the printer, and then click **OK**. The Print dialog box appears again.
- 4 Click **Print** to print the document.

#### **Example Using OpenOffice**



The procedure for printing on Red Hat 9 with OpenOffice 1.0.2 is described below. The following procedure or some steps may be different depending on the version of the operating system being used.



First, use km2450-open.ppd to add the printer to the system. For details on adding a printer to the system, refer to "Adding the Printer" on page 74.

1 From the main menu, select Office, then OpenOffice.org Printer Setup. The printer Administration


dialog box appears.



2 Click New Printer. The Add Printer dialog box appears.




3 Check that Add a printer is selected, and then click Next. The printer selection list appears.

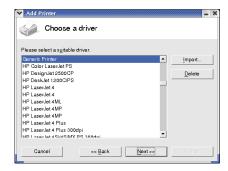

4 Click Import.


Driver Installation dialog box appears.

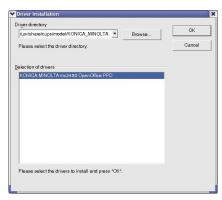

- 5 Enter "/usr/share/cups/model/KONICA\_MINOLTA/" in the driver directory.
- 6 In the Selection of drivers list, select KONICA MINOLTA mc2450 OpenOffice PPD.
- 7 Click ok.

The Add Printer dialog box appears again.

- 8 Select KONICA MINOLTA mc2450 OpenOffice PPD, and then click Next.
- 9 In the command line, enter "lpr -P" followed by the name of the printer added first, and then click **Next**.

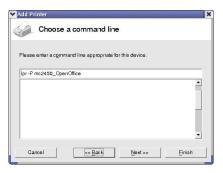

10 Change the printer name.



- 11 Click Finish. The Printer Administration dialog box appears again.
- 12 Click Close.
- 13 From the main menu, select **Office**, then **OpenOffice.org Writer**.
- 14 Click **Print** in the **File** menu. The Print dialog box appears.



15 Select the name of the printer specified in the OpenOffice printer settings.



16 Click OK.

# **Checking Print Jobs**

You can check the status of print jobs from a Web browser.

Start up the Web browser.

Enter the URL "http://localhost:631".

> The CUPS Administration Web page appears.



3 Click Manage Jobs. A list of the currently active print jobs appear.



To check the status of completed print jobs, click Show Complete Jobs.



# **Troubleshooting**

Symptom	Action
The printer stops because of a paper size error or a paper type error.	The job may have been sent with a prohibited combination of settings (for example, for the paper size and media type). Printing is not possible with postcards or overhead projector transparencies if <b>Plain Paper</b> is selected.
Printing does not continue with a custom paper size.	Printing with custom paper sizes is not possible directly from the printer driver. This can only be performed from the command line. Specify the following command to print data.
	lpr -P [printer_name] -o media=Custom. [WIDTHxLENGTH] [file_name]
	Format of Custom. [WIDTHxLENGTH]:     Custom.150x200 mm, Custom.8x11 in,     Custom.15x20 cm, or Custom.612x782     (postscript points)
	The specified file must be a PS, PDF or JPEG file.
Printing cannot be completed correctly from OpenOffice or any other Office application (such as, Kword).	Applications running under Linux have their own print settings. Some of these functions may not be supported by this printer. Observe the following for best printing results.
	Settings made within the application: Paper size and orientation
	■ Settings made with the printer driver (kprinter): Settings other than those specified above (for example, paper type, tray, and resolution)
When printing from Acrobat Reader, part of the image is printed in solid black or the job is interrupted.	There is a compatibility problem between Ghostscript and Acrobat Reader. Try using a different PDF application.
Watermarks cannot be printed from Kword.	This is a bug with Kword. Use Overlay instead.

# Printer Management Utilities

4

#### **Installing Printer Management Utilities on** Windows



You must have administrator privileges in order to install the Printer Management Utilities.



Before proceeding with the installation, be sure to exit all running applications.

The following procedure describes how to install the Printer Management Utilities.


- Crown Print Monitor+
- Management Information Base
- Status Monitor
- Download Manager Utility
- PageScope Network Setup
- 1 Insert "magicolor 2450 Software Utilities" CD-ROM in your CD/DVD-ROM drive.
- 2 Select Next from the Introduction dialog.



3 From the Main Menu dialog, select Additional Software.




- 4 After reviewing and accepting the license agreement, choose the installation directory (or use the default directory setting).
- 5 Select Custom, then click Next.

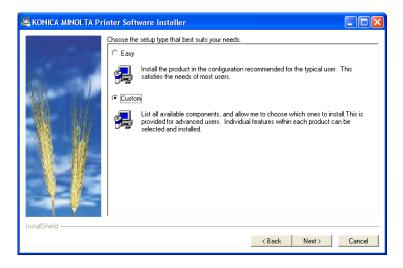

Click Easy to install all printer management utilities.

6 Select KONICA MINOLTA Printer Management Utilities from the Product list, and select Custom from Setup Type pull down list, then click Next.

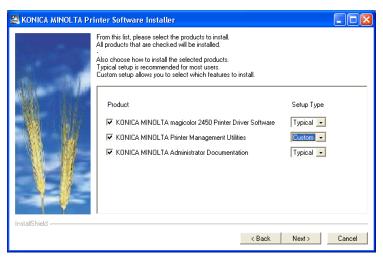


- 7 From the **Product Installation** list, select the check boxes for the software to be installed, and then click **Next**.
- **8** Follow the onscreen instructions to complete the installation.
- 9 When the Information message box appears, select Finish.
- 10 After the installation is complete, remove the Software Utilities CD-ROM from your CD-ROM drive and store it in a safe place.

# Understanding the Ethernet Configuration Menus

#### **Ethernet Menu**

#### **Location within the Configuration Menu**

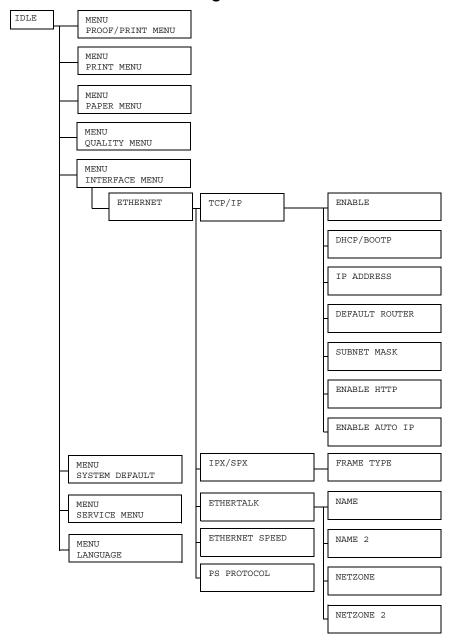

92 Ethernet Menu

# **Accessing the Ethernet Menu**

Use the following series of keystrokes at the printer to access the Ethernet menu options on your printer. This menu provides access to all of the configurable network items.

Press this key	(until) the message window reads
★ Menu Select ↓	MENU PROOF/PRINT MENU or if no optional hard disk is installed: MENU PRINT MENU
$\triangleright$	MENU INTERFACE MENU
★ Menu Select ↓	
★ Menu Select ↓	



Restart the printer after changing settings in the ETHERNET menu.

# **Using the Ethernet Menu Options**

If the printer is connected to a network, the following settings should be specified. For details about each setting, contact your network administrator.



When manually setting the IP address, Subnet Mask, and Gateway turn off DHCP first.

#### TCP/IP

#### **Enable**

Purpose	Enables or disables TCP/IP.
	If YES is selected, TCP/IP is enabled.
	If NO is selected, TCP/IP is disabled.
Options	YES
	NO
Default	YES

#### DHCP/BOOTP

Purpose	If there is a DHCP or BOOTP server on the network, specifies whether the IP address and other network information is automatically assigned by the DHCP or BOOTP server.
Options	YES
	NO
Default	YES

#### IP Address

Purpose	Sets the IP address of this printer on the network.
Range	0–255 for each xxx triplet
	Use the Up and Down keys to increase or decrease each number; use the Left and Right keys to move between triplets.
Default	192.168.001.002

#### **Default Router**

Purpose	Sets the address of the router/gateway if a router/gateway is used on your network and you allow users outside your network environment to print on your printer.
Range	0–255 for each xxx triplet  Use the Up and Down keys to increase or decrease each number; use the Left and Right keys to move between triplets.
Default	000.000.000

#### **Subnet Mask**

Purpose	Sets the subnet mask value of the network. The subnet mask allows you to limit access to your printer (for example, according to departmental divisions).
Range	0–255 for each xxx triplet  Use the Up and Down keys to increase or decrease each number; use the Left and Right keys to move between triplets.
Default	000.000.000

# **Enable HTTP**

Purpose	Specify whether or not HTTP is used.
Range	YES
	NO
Default	YES

# **Enable Auto IP**

Purpose	Select whether or not the IP address is automatically acquired when DHCP/BOOTP and PING, ARP are not functioning or when there is no response.
Range	YES
	NO
Default	NO

# IPX/SPX

# Frame Type

Purpose	Set the protocol to use for NetWare IPX/SPX.
Range	AUTO
	802.2
	802.3
	ETHER II
	SNAP
Default	AUTO

#### **EtherTalk**

#### Name

Purpose	Printer Name to find/locate printer on EtherTalk.
Range	Up to 16 characters
Default	MAGICOLOR 2450

#### Name 2

Purpose	Extension of EtherTalk Name to additional 16 characters, making a total of 32 characters, if required.
Range	Up to 16 characters
Default	[Blank]

#### Netzone

Purpose	Set the Zone Name for EtherTalk.
Range	Up to 16 characters
Default	ETHERTALK ZONE

# Netzone 2

Purpose	Extention of Netzone to additional 16 characters, making a total of 32 characters, if required.	
Range	Up to 16 characters	
Default	[Blank]	

# **Ethernet Speed**

Purpose	Specifies the transmission speed for the network and the transmission method for bi-directional transmission.	
Range	AUTO	
	100 FULL DUPLEX	
	100 HALF DUPLEX	
	10 FULL DUPLEX	
	10 HALF DUPLEX	
Default	AUTO	

#### **PS Protocol**

Purpose	Configures the port to process PostScript jobs as binary or quoted (tagged) binary.
Range	Binary
	Quoted Binary
Default	Binary

# **Network Printing**




# **Network Connection**

# **Theory**

To connect your printer in a TCP/IP network environment, you must make sure that the internal network addresses in the printer have been set.



In many cases, you have to enter only a unique IP address. However, you may also have to enter a subnet mask and/or a gateway (router) address, depending on your network configuration requirements.

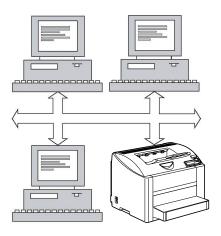

# Making the Connection

#### **Ethernet Interface**

An RJ45 connector can be used as the Ethernet interface for this printer.

When connecting your printer to an Ethernet network, the tasks you perform depend on how you plan to set the printer's IP (Internet Protocol) address. Printers are shipped with a preset IP address, subnet mask, and gateway.

- IP Address—A unique identifier for each device on a TCP/IP network.
- **Subnet Mask**—A filter used to determine what subnet an IP address belongs to.
- Gateway—A node on a network that serves as an entrance to another

Since the IP address for each PC and printer on your network must be unique, you usually need to modify this preset address so it doesn't conflict with any other IP address or your network or any attached network. You can do this in one of two ways. Each is explained in detail in the following sections.

- Using DHCP
- Setting the address manually

# **Using DHCP**

If your network supports DHCP (Dynamic Host Configuration Protocol), the printer's IP address will be automatically assigned by the DHCP server when you turn on the printer. (Refer to "Network Printing" on page 106 for a description of DHCP.)



If your printer is not automatically assigned an IP address, verify that DHCP is enabled on the printer (MENU PRINT MENU/CONFIGU-RATION). If it is not enabled, you can enable it in the MENU INTER-FACE MENU/ETHERNET/TCP/IP/DHCP/BOOTP menu.

- 1 Connect your printer to the network.
  - When using an Ethernet cable, plug the RJ45 connector into the Ethernet interface port of the printer.
- 2 Turn on your PC and printer.
- $3\,$  When the printer's message window displays <code>IDLE</code>, install the printer driver and utilities.

# **Setting the Address Manually**

You may also manually change the printer's IP address, subnet mask, and gateway by using the following instructions. (See chapter 5, "Understanding the Ethernet Configuration Menus" for more information.)



When the IP address is changed, add a new port or reinstall the printer driver.

# CAUTION

You should always notify your network's administrator before changing the printer's IP address.

- 1 Turn on your PC and printer.
- 2 When the printer's message window displays <code>IDLE</code>, set the IP address.

Press this key	(until) the message window reads
	IDLE
★ Menu Select ↓	MENU PROOF/PRINT or if no optional hard disk is installed: MENU PRINT MENU
$\triangleright$	MENU INTERFACE MENU
★ Menu Select ↓	TCP/IP
★ Menu Select	
$\triangleright$	IP ADDRESS

Press this key	(until) the message window reads	
★ Menu Select ↓	IP ADDRESS 192.168.001.002	
Use the $\triangleright$ and $\triangleleft$ keys to move to each of the four number triplets.  Use the $\triangle$ and $\bigvee$ keys to increase or decrease each number.		
★ Menu Select	IP ADDRESS xxx.xxx.xxx	

 ${f 3}$  If you don't want to set the subnet mask or gateway, go to step 5.

If you don't want to set the default rooter, but you do want to set the subnet mask, go to step 4.

If you want to set the default rooter, follow these steps.

Press this key	(until) the message window displays	
	DEFAULT ROOTER 192.168.001.001	
★ Menu Select	DEFAULT ROOTER 192.168.001.001	
Use the $\triangleright$ and $\triangleleft$ keys to move to each of the four number triplets.  Use the $\triangle$ and $\bigvee$ keys to increase or decrease each number.		
★ Menu Select ↓	DEFAULT ROOTER xxx.xxx.xxx	

4 If you don't want to set the subnet mask, go to step 5.

If you want to set the subnet mask, follow these steps.

Press this key	(until) the message window displays	
	SUBNET MASK 255.255.255.000	
★ Menu Select	SUBNET MASK 255.255.255.000	
Use the $\triangleright$ and $\triangleleft$ keys to move to each of the four number triplets.  Use the $\triangle$ and $\bigvee$ keys to increase or decrease each number.		
★ Menu Select	SUBNET MASK <u>x</u> xx.xxx.xxx.xxx	

5 Save your configuration changes and make the printer ready for printing again.

Press this key	(until) the message window displays	
$\triangle$	Press the △ key 4 times to return to READY	

6 Print a configuration page to verify that the correct IP address, subnet mask, and gateway have been set.

Press this key	(until) the message window displays	
	IDLE	

★ Menu Select ↓	MENU PROOF/PRINT or if no optional hard disk is installed: MENU PRINT MENU		
$\triangleright$	MENU PRINT MENU		
★ Menu Select	CONFIGURATION		
★ Menu Select			

 $<sup>7\,</sup>$  When the printer's message window displays <code>IDLE</code>, install the printer driver and utilities.

# **Network Printing**

The magicolor 2450 supports the following network protocols:

- BOOTP
- DHCP
- HTTP
- IPP
- LPD/LPR
- SLP
- SNMP
- Port9100
- SMTP

This chapter defines each of these protocols and then explains how to print via IPP.

#### **BOOTP**

BOOTP (Bootstrap Protocol) is an Internet protocol that enables a diskless workstation to discover (1) its own IP address, (2) the IP address of a BOOTP server on the network, and (3) a file that can be loaded into memory to boot the workstation. This enables the workstation to boot without requiring a hard or floppy disk drive.

#### **DHCP**

DHCP (Dynamic Host Configuration Protocol) is a protocol for assigning dynamic IP addresses to devices on a network. With dynamic addressing, a device can have a different IP address every time it connects to the network. In some systems, the device's IP address can even change while it is still connected. DHCP also supports a mix of static and dynamic IP addresses. Dynamic addressing simplifies network administration because the software keeps track of IP addresses rather than requiring an administrator to manage the task. This means that a new computer can be added to a network without the hassle of manually assigning it a unique IP address.

#### HTTP

HTTP (HyperText Transfer Protocol) is the underlying protocol used by the World Wide Web. It defines how messages are formatted and transmitted, and what actions web servers and browsers should take in response to various commands. For example, when you enter a URL in your browser, this actually sends an HTTP command to the Web server directing it to fetch and transmit the requested web page.

#### **IPP**

IPP (Internet Printing Protocol) is a protocol for end users' most common printing situations over the Internet. It allows users to find out about a printer's capabilities, submit print jobs to a printer, determine the status of the printer or print job, and cancel a previously submitted print job.

For more information on using IPP, See "Printing via IPP (Internet Printing Protocol) – Windows Server 2003/XP/2000" on page 109.

#### LPD/LPR

LPD/LPR (Line Printer Daemon/Line Printer Request) is a platform-independent printing protocol that runs over TCP/IP. Originally implemented for BSD UNIX, its use has spread into the desktop world and is now an industry standard.

#### SLP

Traditionally, in order to locate services on the network, users had to supply the host name or network address of the machine providing the desired service. This has created many administrative problems.

However, SLP (Service Location Protocol) simplifies the discovery and use of network resources such as printers by automating a number of network services. It provides a framework that allows networking applications to discover the existence, location, and configuration of networked services.

With SLP users no longer need to know the names of network hosts. Instead, they need to know only the description of the service they are interested in. Based on this description, SLP is able to return the URL of the desired service.

#### Unicast, Multicast, and Broadcast

SLP is a unicast and a multicast protocol. This means that messages can be sent to one agent at a time (unicast) or to all agents (that are listening) at the same time (multicast). However, a multicast is not a broadcast. In theory, broadcast messages are "heard" by every node on the network. Multicast differs from broadcast because multicast messages are only "heard" by the nodes on the network that have "joined the multicast group."

For obvious reasons network routers filter almost all broadcast traffic. This means that broadcasts that are generated on one subnet will not be "routed" or forwarded to any of the other subnets connected to the router (from the router's perspective, a subnet is all machines connected to one of its ports). Multicasts, on the other hand, are forwarded by routers. Multicast traffic from a given group is forwarded by routers to all subnets that have at least one machine that is interested in receiving the multicast for that group.

#### SNMP

SNMP (Simple Network Management Protocol) is actually a set of protocols for managing complex networks. SNMP works by sending messages to different parts of a network. SNMP-compliant devices, called agents, store data about themselves in Management Information Bases (MIBs) and return this data to the SNMP requesters.

#### Port 9100

When printing through a network, TCP/IP port number 9100 can be used to send raw data.

#### **SMTP**

SMTP (Simple Mail Transfer Protocol) is a protocol for sending e-mail.

This protocol was originally used to send e-mail between servers; however, currently client e-mail software use it to also send e-mail to servers using POP

# Printing via IPP (Internet Printing Protocol) – Windows Server 2003/XP/2000

## Adding an IPP Port using Add Printer Wizard

- For Windows Server 2003/XP: Click **Start**, select **Printers and Faxes**, and then click **Add Printer**.
- For Windows 2000: Click Start, point to Settings, click Printers, and then click Add Printer.
- 1 In the second dialog box select the **Network Printer** radio button and then choose **Next**.

#### Windows Server 2003/XP



#### Windows 2000



- 2 In the URL field in the next dialog box enter the printer's network pathname in one of the following formats and then choose **Next**:
  - http://ipaddress/ipp

#### Windows Server 2003/XP



#### Windows 2000




- Windows Server 2003/XP—"Windows cannot connect to the printer. Either the printer name was typed incorrectly, or the specified printer has lost its connection to the server. For more information, click Help."
- Windows 2000—"Could not connect to the printer. You either entered a printer name that was incorrect or the specified printer is no longer connected to the server. Click Help for more information."

# **3** Windows Server 2003/XP—Go to step 4.

**Windows 2000**—If you entered a valid path in the previous step, the following message displays: "The server on which the KONICA MINOLTA magicolor 2450 printer resides does not have the correct printer driver installed. If you want to install the driver on your local computer, click **OK**." The reason for this is that you do not yet have a printer driver installed. Choose **OK**.

4 Choose **Have Disk**, locate the directory on the CD-ROM where the printer driver files are located (for example, drivers\windows 2000, XP, 2003\ps\english), and then choose **OK**.

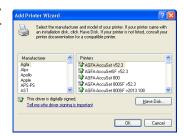

5 Finish installing the printer driver.

# **Troubleshooting**

Symptom	Action
SMB printing cannot be performed well.	Follow the procedure described below to re-install the printer on a local computer.
	Delete the printer icon from the printer folder.
	Delete the printer driver and SMB port from the system.
	3. Use the Add Printer Wizard to install the printer as a local printer. At this time, create a new local port, and specify the SMB port name.
Some client functions are not available with the Point and Print feature when the server is running Windows XP/Server 2003/2000 and the client computer is running Windows NT 4.0.	Install the printer driver directly on the client computer.


# Using PageScope Web Connection



# About PageScope Web Connection

This chapter provides information on PageScope Web Connection, an HTTP (HyperText Transfer Protocol)-based web page that resides in your printer and that you can access using your Web browser.

This page gives you instant access to printer status and the most frequently used printer configuration options. Anyone on your network can access the printer using their web browser software. In addition, with the proper password, you can change the configuration of the printer without leaving your PC.

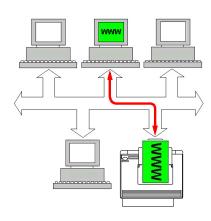



Users who are not given passwords by the administrator can still view the configuration settings and options but are not able to save or apply changes.

# **Display Language**


The language used in the PageScope Web Connection screens is specified from the printer's control panel. For details on specifying the display language, refer to the User's Guide (CD-ROM) provided with the printer.

In addition, the language can be selected in the System/Administration/ Localization Languages page in PageScope Web Connection.

# Requirements

To use PageScope Web Connection, the following is required:

- Windows Server 2003/XP/2000/Me/98SE/NT4.0, MacOS 9/X 10.2 and later. Linux
- Microsoft Internet Explorer version 5.5 or later Netscape Navigator version 7.1 or later Safari version 1.0 or later

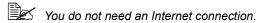

- TCP/IP communication software (used by PageScope Web Connection) installed on your PC
- A network, to which both your PC and the printer are connected



You cannot access PageScope Web Connection using a local (USB or Parallel) connection.

# **Setting Up the Printer Web Page**

Setting up the printer web page to run on your network involves two basic steps:

- Determining the name or address of your printer
- Setting up the "no proxy" preferences in your browser software

# **Determining the Printer Name**

The printer web page can be accessed in two ways:



The printer names can also be determined via WINS if the network supports it.

■ Through the assigned name of the printer—This name comes from the IP host table (the filename is **hosts**) on the computer system and is usually assigned by the system administrator (for example, magicolor 2450). It may be more convenient for you to use the printer name than the IP address.

#### Location of the Host Table on the PC

Windows Server 2003/XP \windows\system32\drivers\etc\hosts

 Windows Me/98SE \windows\hosts

 Windows 2000/NT4.0 \winnt\system32\drivers\etc\hosts

■ Through the printer's IP address—The IP address of your printer is a unique number and, therefore, may be the preferred identification to enter, especially if you have more printers active in your network. The printer's IP address is listed on the configuration page.

#### Location of the Configuration Page in the Printer's Configuration Menu

MENU PRINT MENU/CONFIGURATION

# **Setting Up Your Browser Software**

Since your printer resides on your intranet and is not accessible beyond the firewall of your network, you must set up the proper "preferences" in your browser software. Your printer name or IP address must be added to the "no proxy" list in the preferences dialog box of the browser.



You need to do this procedure only once.


The sample screens below may be different from yours depending on software versions and operating systems in use.



Our examples represent the IP address of the printer with: xxx.xxx.xxx.xxx. Always enter your printer's IP address without leading zeros. For example, 192.168.001.002 should be entered as 192.168.1.2.

# **Internet Explorer (version 6.0 for Windows)**

- 1 Start Internet Explorer.
- 2 From the **Tools** menu choose Internet Options.
- 3 Select the Connections tab on the dialog box.
- 4 Choose the LAN Settings button to display the Local Area Network (LAN) Settings dialog box.
- 5 Select **Advanced** in Proxy server to open the Proxy Settings dialog box.
- 6 In the Exceptions text box, type a comma after the last entry and then type the printer name or the IP address of your printer.

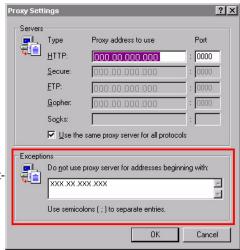


- Choose **OK** three times to return to the main browser window.
- Enter the printer's IP address in the URL Address box to access the printer home page.



# **Netscape Navigator (version 7.1)**

- Start Netscape Navigator.
- 2 From the **Edit** menu choose Preferences.
- 3 Select the Advanced/Proxies directory from the left pane of the dialog box.
- 4 Select the Manual Proxy Configuration radio button.
- 5 In the No Proxy for: text box, type a comma after the

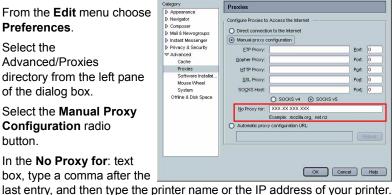

- 6 Choose **ok** to return to the main browser window.
- Enter the printer name or IP address in the URL Location box to access the printer home page.




# Safari (version 1.1)

- From the Apple menu, choose Location, and then click Network preferences.
- 2 Click the **Proxies** tab in the Network preferences dialog box.
- 3 In the Bypass proxy settings for these Hosts & Domains list, type in the name or IP address of the printer.
- 4 Click Apply Now.
- 5 In the URL address bar, type in the name or IP address of the printer to access the printer's Web page.

# Understanding the PageScope Web **Connection Window**

The illustration below identifies the navigation and configuration areas of the windows that you see in PageScope Web Connection windows.

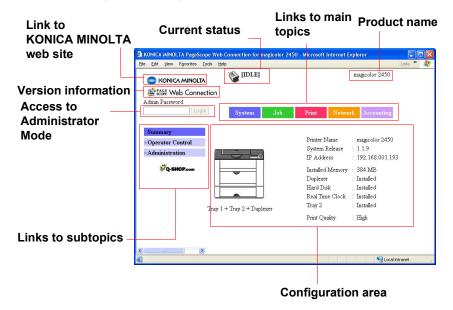

# **Navigation**

Selecting the main topic and subtopic displays the configuration area for the printer options (parameters) associated with your selections.

To change a current setting, click on the current setting and then select from the available choices or enter the new value.



In order to apply or save any changes made to the configuration settings, PageScope Web Connection must be logged in from Administrator Mode. (For details, refer to "Administrator Mode" on page 120.)

#### **Current Status**

The current status of the printer is displayed at the top of all PageScope Web Connection windows. The icon displays the type of status being displayed.

lcon	Status	Description	Examples
	Ready	The printer is online and either ready to print or printing.	IDLE WARMING UP PRINTING
<u></u>	Warning	The printer needs attention, but printing continues.	C TONER LOW
*	Error	The printer needs attention before printing can resume.	PUT A4 PLAIN TRAY 1 REPLACE C TONER PAPER JAM TRAY 2
*	Caution	The printer must be rebooted. If that doesn't fix the error, service is required.	SERVICE CALL 04

#### **User Mode**

You automatically enter User Mode whenever you enter PageScope Web Connection. In User Mode you can view configuration settings but not change them.

## Administrator Mode

In order to change any configuration settings through PageScope Web Connection, you must first enter Administrator Mode:



By default, security is set to Disabled. If PageScope Web Connection is accessed while security is Disabled, all users can view and change or submit settings on the printer. When security is set to Enabled. users have to login to submit any changes.

Type the password in the **Admin Password** text box.



The default password is "SYSADMIN"; however, once you have logged on in Administrator Mode, the password can be specified in the System/Administration/Security window.


2 Choose the **Login** button.

If you type an incorrect password, the following message displays: "Invalid Password Please check your input and try again!" Retype the password.

# **Configuring the Printer**

The Configuration page allows you to view and change the configuration settings of the printer.

# **System Page**

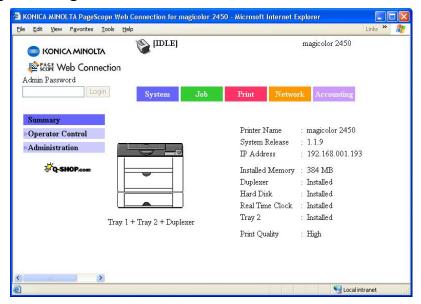

# Summary (shown above)

The **System/Summary** window provides the following information:

Item	Description
Printer Name/Status	Shows the name assigned to your printer, and displays the current status of the printer-just as it's displayed on the printer's control panel message window.
	The status display allows you to remotely identify possible printer problems, such as out of paper and out of toner.
Device Status (Product image)	Identifies the type of printer that you are browsing.
	The printer is pictured in the illustration with all installed options.


Item	Description
10111	Description
System Release	Displays the release version of the system code.
IP Address	Identifies the IP address of the printer.
Installed Memory	Displays the amount of memory installed in the printer.
Duplexer	Identifies whether the duplex option is "Installed" or "Not Installed."
Hard Disk	Identifies whether the optional Hard Disk is "Installed" or "Not Installed."
Real Time Clock	Identifies whether the Real Time Clock is "Installed" or "Not Installed."
Tray 2	Identifies whether the optional Tray 2 is "Installed" or "Not Installed."
Print Quality	Displays the current Print Quality setting.



All of the information displayed on the System Page/Summary is read-only, however, some of the items (such as the media type), are configurable on other pages.

# **Operator Control**

# **Paper Handling**

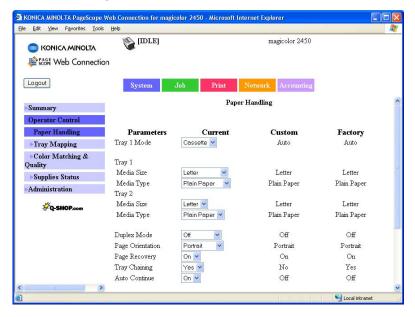

The **System/Operator Control/Paper Handling** window allows you to view and change the current paper handling option settings. The settings are arranged in 3 columns: Current, Custom, and Factory.

Item	Description
Tray 1 Mode	Configures Tray 1 to be defined by the settings on the keypad in CASSETTE mode or to be automatically overridden by the driver in AUTO mode.
	Choices: Auto, Cassette Default: Auto Configuration Menu Equivalent:     MENU PAPER MENU/INPUT TRAY/     TRAY 1 MODE


Item	Description
Tray 1	
Media Size	Identifies the media size currently set in the media tray.
	Configuration Menu Equivalent:
	MENU PAPER MENU/INPUT TRAY/
	TRAY 1 MODE/MEDIA SIZE
Media Type	Identifies the media type currently set in the media tray.
	Configuration Menu Equivalent:
	MENU PAPER MENU/INPUT TRAY/
T . 0	TRAY 1 MODE/MEDIA TYPE
Tray 2	T
Media Size	Identifies the media size currently set in the media tray.
	Configuration Menu Equivalent:
	MENU PAPER MENU/INPUT TRAY/
	TRAY 1 MODE/MEDIA SIZE
Media Type	Identifies the media type currently set in the media tray.
	Configuration Menu Equivalent:
	MENU PAPER MENU/INPUT TRAY/ TRAY 1 MODE/MEDIA TYPE
Duplex Mode	Duplex printing allows you to print on both sides of the media. Choices are
	■ Off: Prints simplex pages.
	Shortedge: Prints duplex pages so pages can be bound at the short edge.
	Longedge: Prints duplex pages so pages can be bound at the long edge.
	Choices: Off, Shortedge, Longedge Default: Off Configuration Menu Equivalent:  MENU PAPER MENU/DUPLEX
	A duplex unit must be installed to use the duplex feature.

Item	Description
Page Orientation	Identifies the page orientation that the printer should use. Choices are
	■ Portrait: Vertical orientation (longest side of media vertical)
	■ Landscape: Horizontal orientation (longest side of media horizontal)
	Choices: Portrait, Landscape Default: Portrait Configuration Menu Equivalent: MENU PAPER MENU/ORIENTATION
Page Recovery	When this feature is enabled (On), following the clearing of a media jam the printer reprints any pages that did not progress to the output bin when the media jam occurred.
	Choices: Off, On Default: On Configuration Menu Equivalent:  MENU PAPER MENU/PAGE RECOVERY
Tray Chaining	Tray Chaining allows the printer to switch from one paper source to another when the initial paper source is empty. You can turn Tray Chaining on by selecting Yes. Selecting No turns Tray Chaining off.
	Choices: No, Yes Default: Yes Configuration Menu Equivalent:  MENU PAPER MENU/INPUT TRAY/ TRAY CHAINING
	The optional Tray 2 must be installed to use this setting. Both trays should also have the same media size and media type installed (unless Auto Continue is used - see Auto Continue for more information).

Item	Description
Auto Continue	Configures the printer for automatically continuing printing if the media tray has a different media size or media type than what the print job requests.
	If Off is selected, the Auto Continue feature is disabled. When the requested tray empties, printing will stop until you've identified the media to be used to complete the print job.
	If On is selected, the Auto Continue feature is enabled. When the requested tray empties, the printer will automatically adjust for the media installed (or for the media installed in the second tray if tray chaining is active) and continue printing.
	Choices: On, Off Default: Off Configuration Menu Equivalent:  MENU PAPER MENU/INPUT TRAY/ AUTO CONTINUE
Custom Paper Size Det	aults
Width	Sets the width measurement for custom paper sizes.
	Range: 3.62 - 8.50" (92 - 216 mm)  Default: 3.62" (92 mm)  Configuration Menu Equivalent:  MENU PAPER MENU/INPUT TRAY/  CUSTOM/WIDTH
Height	Sets the height measurement for custom paper sizes.
	Range: 5.83 - 14.02" (148 - 356 mm)  Default: 5.83" (148 mm)  Configuration Menu Equivalent:  MENU PAPER MENU/INPUT TRAY/  CUSTOM/LENGTH
Submit button	Saves and applies any changes made.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

Item	Description
Save Custom button	Saves the Current values of the parameters as the Custom settings. Using the <b>Restore Custom</b> button, you can change the parameter settings back to the Custom settings after changes are made.
Restore Custom button	Changes all settings to the Custom values.
Restore Factory button	Changes all settings to the Factory values.

## **Tray Mapping**

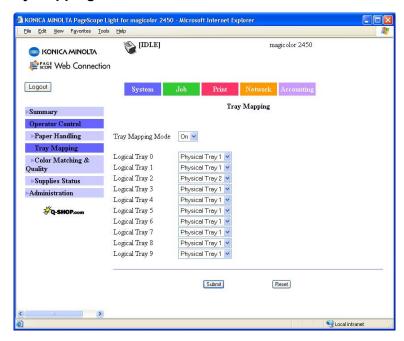


The **System/Operator Control/Tray Mapping** window allows you to view and change the current tray mapping options. Tray mapping lets you assign logical mapping numbers to physical media trays.

Item	Description
Tray Mapping Mode	Used to turn tray mapping on and off.
	Choices: On, Off
	Default: On
	Configuration Menu Equivalent:
	MENU PAPER MENU/INPUT TRAY/
	MAP/MODE
Logical Tray 0 - 9	Identifies the physical tray for each logical tray number.
	Configuration Menu Equivalent:
	MENU PAPER MENU/INPUT TRAY/
	MAP/LOGICAL TRAY 0 - 9
Submit button	Saves and applies any changes made.

Item	Description
	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

## **Color Matching & Quality**

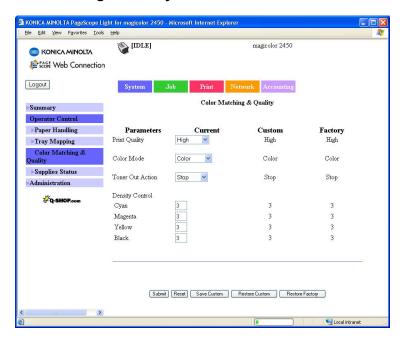


The **System/Operator Control/Color Matching & Quality** window allows you to view and change the current paper handling options. The settings are arranged in 3 columns: Current, Custom, Factory.

Item	Description
Print Quality	Used to select the printing resolution. Choices are
	■ Standard: 600 × 600 dpi (dots per inch) color
	■ High: 600 × 600 dpi with contone imaging
	■ Default: High
	Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/PRINT  QUALITY

Item	Description
Color Mode	Sets the mode to use color or monochrome output.
	Choices: Color, Grayscale Default: Color Configuration Menu Equivalent:
Toner Out Action	Determines if the printer continues accepting jobs sent to it when a low toner condition occurs.
	Choices: Stop, Continue Default: Stop Configuration Menu Equivalent:
Density Control	Adjusts toner (color) density of each color (cyan, magenta, yellow, and black). The higher the value, the higher the density of the color.
	Range: 1-5 Default: 3 Configuration Menu Equivalent:
Submit button	Saves and applies any changes made.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.
Save Custom button	Saves the Current values of the parameters as the Custom settings. Using the <b>Restore Custom</b> button, you can change the parameter settings back to the Custom settings after changes are made.
Restore Custom button	Changes all settings to the Custom values.
Restore Factory button	Changes all settings to the Factory values.

## **Supplies Status**

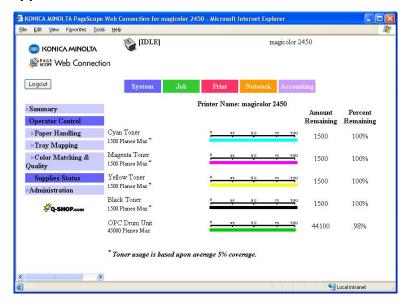


The **System/Operator Control/Supplies Status** window provides the following information:

Item	Description
Consumable items	Identifies the type of consumable that is being monitored.
Status bars	Graphically represent the remaining life of the identified consumable item.
Amount Remaining	Describes the remaining life of the consumable item in plane or face counts.
	Plane counts are based on 5% toner coverage for each page. If your pages average more than 5% coverage, the remaining life is less than the plane count displayed.
Percent Remaining	Describes the amount of remaining life for the consumable using a percentage of total life based on plane or face counts.

### Administration

### **Startup Options & Resets**

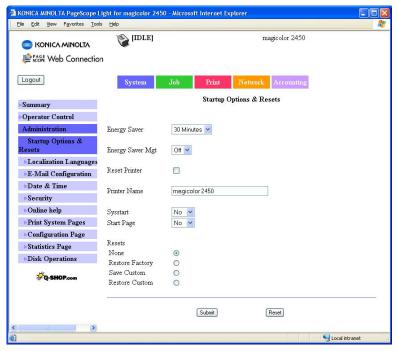


The **System/Administration/Startup Options & Resets** window provides the following parameters for configuration:

Item	Description
Energy Saver	If no print jobs are sent to the printer for the time specified by this parameter, the printer's Energy Saver feature is activated.
	Choices: 15 Minutes, 30 Minutes, 1 Hour, 2 Hours Default: 30 Minutes Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/ENERGY SAVER
	2 Hours is available on the model for America only.
	The energy saver feature is disabled and enabled from the Energy Saver Mgt. parameter described next.
Energy Saver Mgt.	Sets energy saver management on or off.
	If On is selected, Energy saver settings are active.
	If Off is selected, Energy saver settings are ignored.
	Choices: On, Off Default: On Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/ENERGY SAVER MGT
	Only available in models for the Americas.
Reset Printer	Reboots the printer.
Printer Name	Sets the printer name.
	Default: magicolor 2450

Item	Description
Sysstart	If you have an optional hard disk installed and 'Sysstart' is enabled (Yes), the controller checks the optional hard disk for a PostScript file named Sys/ Start and executes this file.
	Choices: Yes, No Default: No Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/STARTUP OPTIONS/SYSSTART
Start Page	Sets the printer to print a startup page when the printer is powered on.
	Choices: Yes, No Default: No Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/STARTUP OPTIONS/STARTUP PAGE
Resets	If None is selected, no action is performed.
	If Restore Factory is selected, restores the factory default settings of the printer.
	If Save Custom is selected, saves any changes to the printer parameters as the Custom settings.
	If Restore Custom is selected, restores the Custom settings of the printer.
	Choices: None, Restore Factory, Save Custom, Restore Custom  Default: None Configuration Menu Equivalent: MENU SYSTEM DEFAULT/RESTORE/ SAVE
Submit button	Saves and applies any changes made.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

## **Localization Languages**

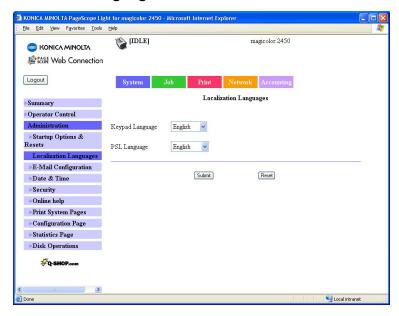


The **System/Administration/Localization Languages** window provides the following parameters for configuration:

Item	Description
Keypad Language	Identifies the language of the keypad located on the printer.
	The language selections appear in the message window in the corresponding language, for example, GERMAN appears as DEUTSCH.
	Choices: Czech, English, French, German, Italian, Portuguese, Spanish Default: English Configuration Menu Equivalent: MENU LANGUAGE

Item	Description
PSL Language	Identifies the language displayed in the PageScope Web Connection windows.
	The language selections appear in the message window in the corresponding language, for example, GERMAN appears as DEUTSCH.
	Choices: Czech, English, French, German, Italian, Portuguese, Spanish, Simplified Chinese, Traditional Chinese, Russian Default: English
Submit button	Saves and applies any changes made.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

# **E-Mail Configuration**

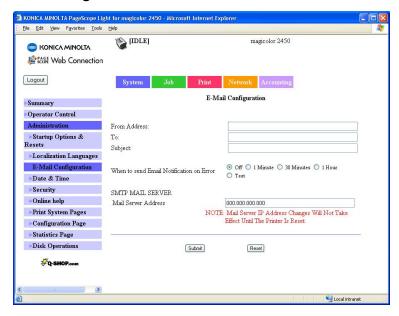


The **System/Administration/E-Mail Configuration** window provides the following parameters for configuration:

Item	Description
From Address	Identifies the From address that appears on email generated by the printer. Default: [Blank]
	The value entered for this parameter must comply with RFC formatting standards: name@domain_name Commas, semicolons, colons, and spaces are not allowed.
То	Identifies the destination address of email generated by the printer. Default: [Blank]
Subject	Identifies the subject text that appears on email generated by the printer. Default: [Blank]

Item		Description
When to Send Email Notification on Error		Identifies how long the printer waits after an error condition before generating and sending an email message. Choices: Off, 1 Minute, 30 Minutes, 1 Hour, Test Default: Off
SMTP MAIL SERVER	Mail Server Address	Identity of your mail server. Default: 000.000.000.000  Change to this field requires a reboot of the printer before it will work.
Submit but	ton	Saves and applies any changes made.
Reset butto	on	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.


### **Date & Time**

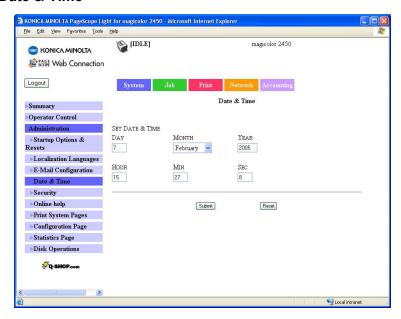

The **System/Administration/Date & Time** window provides the following parameters for configuration of printer's with an installed hard disk:

Item	Description
Day, Month, Year	Sets the current day, month, and year. Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/DATE & TIME
Hour, Min, Sec	Sets the current hour, minute, and second. Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/DATE & TIME
Submit button	Saves and applies any changes made.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

# **Security**

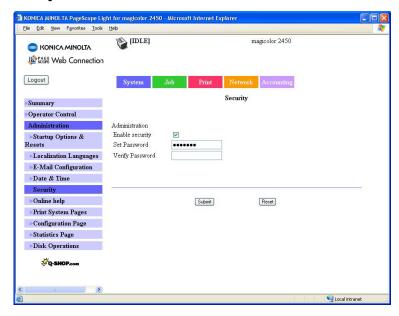


The **System/Administration/Security** window provides the following parameters for configuration:

Item	Description
Enable Security	When selected, enables the printer's security feature, which requires users to enter the password to access or change printer information and configuration.  Default: [Not checked]  Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/ SECURITY/CONFIG/ENABLE
Set Password	Sets the printer password. Range: Up to 16 characters Default: SYSADMIN Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/ SECURITY/CONFIG/SET PASSWORD

Item	Description
Verify Password	Verifies the password entered in the above field. If the password entered in this field doesn't match the text entered in the Set Password field, the password is not set when the <b>Submit</b> button is selected. Range: Up to 16 characters Default: [Blank]
Submit button	Saves and applies any changes made.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

# Online help

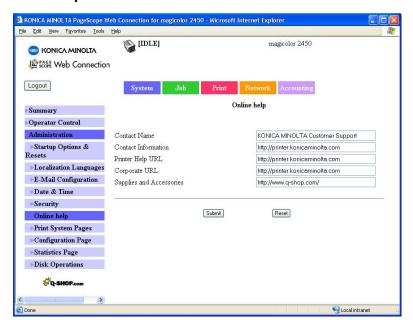


The **System/Administration/Online Help** window provides the following parameters for configuration:

Item	Description
Contact Name	Identifies the organization that provides assistance with the printer. Range: Up to 64 characters Default: KONICA MINOLTA Customer Support
Contact Information	Phone number. Range: Up to 128 characters Default: http://printer.konicaminolta.com
Printer Help URL	Help website address. Range: Up to 128 characters Default: http://printer.konicaminolta.com
Corporate URL	The KONICA MINOLTA website address. Range: Up to 128 characters Default: http://printer.konicaminolta.com
Supplies and Accessories	Phone number. Range: Up to 128 characters Default: http://www.q-shop.com/

Item	Description
Submit button	Saves and applies any changes made.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.


## **Print System Pages**

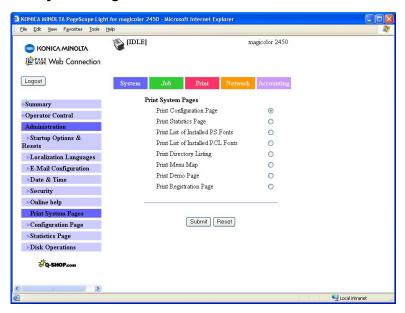

The **System/Administration/Print System Pages** window allows you to select and print any of the printer's built-in system pages.

Item	Description
Print System Pages	The system pages available in your printer are displayed in the list. Select the page you would like to have printed, and then select the <b>Submit</b> button.  After the Submitted message appears, select <b>OK</b> .  Configuration Menu Equivalent:  MENU PRINT MENU/  CONFIGURATION
	The Reset button clears the selection indicator from the list.


### **Configuration Page**

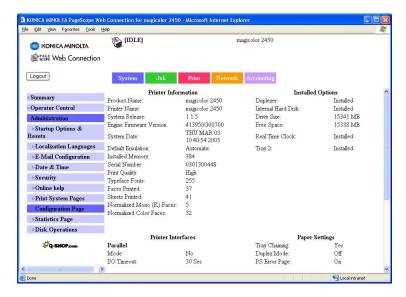

The **System/Administration/Configuration Page** window provides the following information:

Item	Description
Printer Information	Displays the basic printer properties, as well as page counts to date.
Installed Options	Displays all printer options and identifies which options are installed in the printer.
Printer Interfaces	Displays Parallel, USB, and Resident NIC (Network Interface Card) information.
Paper Settings	Displays Tray configuration, duplex setting, and Special Pages information.


### **Statistics Page**

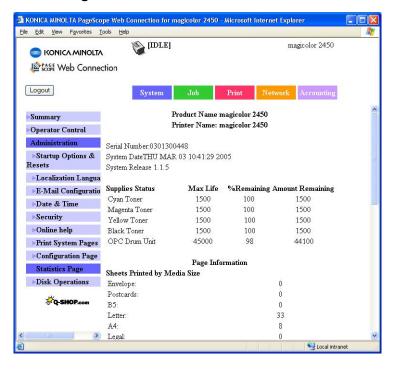

The **System/Administration/Statistics Page** window provides the following information:

Item	Description
Supplies Status	Displays the statistics of consumable items in the printer.
Page Information	Displays printer statistics grouped by Sheets Printed by Media Size, Sheets Printed by Media Type, Total Normalized Counts, and Normalized Coverage Information.

# **Disk Operations**

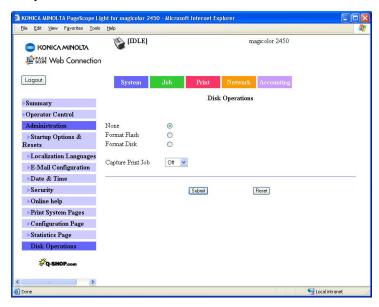

The **System/Administration/Disk Operations** window provides the following parameters for configuration of printer's with an installed hard disk:


Item	Description
None	No disk operation is performed.
Format Flash	Clears the Flash memory of the printer. Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/FORMAT/ FOMRMAT FLASH
Format Disk	Formats the printer's internal hard disk, erasing all data previously stored on the disk.  Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/FORMAT/ FOMRMAT DISK

Item	Description
Capture Print Job	Captures a print job on the optional Hard Disk.  If On is selected, the job is saved on the hard disk, but is not printed.  If Print is selected, the job is saved on the hard disk and a single copy is printed.  Choices: Off, On, Print  Default: Off  To use Capture Print Job feature, the optional Hard Disk must be installed on the printer.
Submit button	Click this button to perform the selected operation.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

### **Job Page**

This window allows you to view the status and history of print jobs, print stored jobs, use direct printing and retrieve captured jobs from Hard Disk.


### Job Listing (shown above)

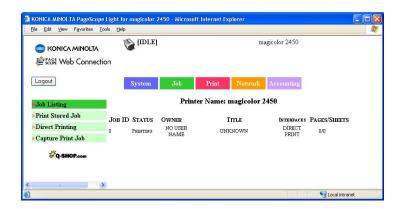

The **Job/Job Listing** window provides the following information about recent print jobs:

Item	Description
JOB ID	Each job that the printer receives is assigned a unique identification number.
STATUS	Displays the current status of the print job.
OWNER	If known, displays the owner of the print job.
TITLE	If known, displays the title of the print job.
INTERFACES	Displays the printer interface that was used to process the incoming print job.
PAGES/SHEETS	Indicates the number of pages in the print job.

### **Print Stored Job**

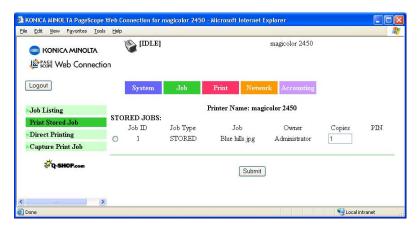




The printer must have the optional hard disk to use the Stored Job parameters described below.

The Job/Print Stored Job window provides the following parameters for configuration:

Item	Description
JOB ID	Displays the Job ID of the stored job.
JOB	Displays the name of the stored job.
OWNER	If known, displays the owner of the stored job.
COPIES	Displays the number of copies that the stored print job has been configured to print. Displays the list of specified settings.
PIN	Password field that is required on secured print jobs.
Submit button	When clicked, prints the selected stored job.

# **Direct Printing**

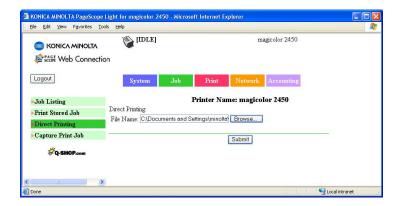


The **Job/Direct Print** page allows you to print a file directly from the printer without starting up the application.

The following file formats can be printed using direct printing: PDF, TIF and JPEG

Item	Description
File Name	Contains the name of the file to be printed.
Browse button	This button allows you to locate the file that you want to print. After selecting a file, the file name appears in the <b>File Name</b> text box.
Submit button	Clicking this button sends the chosen file to the printer for printing.

## **Capture Print Job**

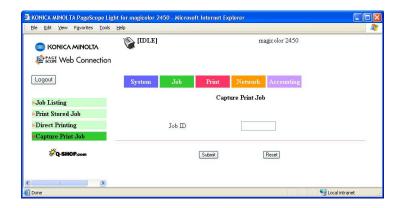

The **Job/Capture Print Job** page allows you to save jobs saved on a hard disk as a file on the computer.

To use this function, Capture Print Job on the System/Disk Operation page must be set to On or Print.

Item	Description
Job ID	Sets the job ID that appeared in the <b>Job/Job Listing</b> page.
Submit button	Click this button to display a confirmation message. Then, click the <b>UPLOAD</b> button to save the job as a file.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

# **Print Page**

The **Print** page allows more detailed printer settings to be specified.



### **Local Interface**


#### **USB** (shown above)

The **Print/Local Interface/USB** window provides the following parameters for configuration:

Item	Description
Enable USB	If selected, enables the parameter settings for USB. Default: [Checked] Configuration Menu Equivalent:  MENU INTERFACE MENU/USB/ ENABLE
Job Timeout	Sets the number of seconds the interface waits for further data from the host before terminating a spooled print job. Range: 0 - 999 (in seconds) Default: 60 Configuration Menu Equivalent:  MENU INTERFACE MENU/USB/JOB TIMEOUT
Submit button	Saves and applies any changes made.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

### **Default Setting**

#### General

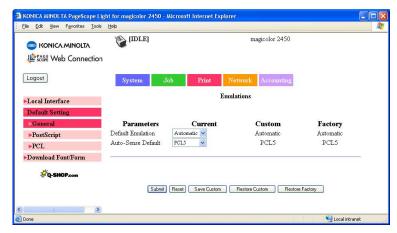


The **Print/Default Setting/General** window provides the following parameters for configuration. The settings are arranged in 3 columns: Current, Custom, Factory.

Item	Description
Default Emulation	Assigns the selected emulation as the default emulation. The default emulation is used whenever a print job without emulation identification is received. Choices: Automatic, Postscript, PCL5, PCL XL, Hex Dump, PDF Default: Automatic Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/ EMULATIONS/DEFAULT
Auto-Sense Default	When Auto is selected as the Default Emulation (see above), the printer samples the incoming print job to try to determine the correct emulation to use for the job. If the printer is unable to discern the emulation of an incoming print job, the setting for this parameter is used as the emulation.  Choices: PCL5, Postscript Default: PCL5 Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/ EMULATIONS/AUTO DEFAULT
Submit button	Saves and applies any changes made.

Item	Description
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.
Save Custom button	Saves the Current values of the parameters as the Custom settings. Using the <b>Restore Custom</b> button, you can change the parameter settings back to the Custom settings after changes are made.
Restore Custom button	Changes all settings to the Custom values.
Restore Factory button	Changes all settings to the Factory values.


#### **PostScript**

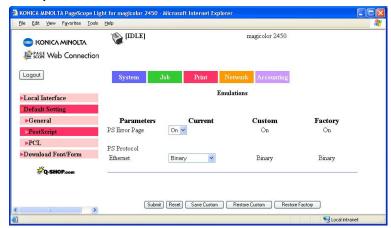

The **Print/Default Setting/PostScript** window provides the following parameters for configuration. The settings are arranged in 3 columns: Current, Custom, Factory.

Item	Description
PS Error Page	Print an error page if the print job cannot be printed or creates an error. Choices: On, Off Default: On Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/ EMULATIONS/POSTSCRIPT/ERROR PAGE
PS Protocol Ethernet	Sets the binary communications protocol (BCP). Choices: Binary, Quoted Binary Default: Binary Configuration Menu Equivalent: MENU INTERFACE MENU/ ETHERNET/PS PROTOCOL
Submit button	Saves and applies any changes made.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

Item	Description
Save Custom button	Saves the Current values of the parameters as the Custom settings. Using the <b>Restore Custom</b> button, you can change the parameter settings back to the Custom settings after changes are made.
Restore Custom button	Changes all settings to the Custom values.
Restore Factory button	Changes all settings to the Factory values.

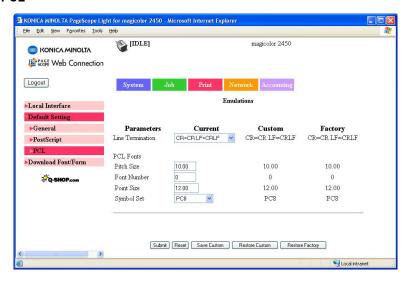


The **Print/Default Setting/PCL** window provides the following parameters for configuration. The settings are arranged in 3 columns: Current, Custom, Factory.

Item	Description
Line Termination	Sets the line termination value. Choices: CR=CR LF=CRLF, CR=CR LF=LF, CR=CRLF LF=LF, CR=CRLF LF=CRLF Default: CR=CR LF=CRLF Configuration Menu Equivalent: MENU SYSTEM DEFAULT/ EMULATIONS/PCL/LINE TERMINATION
PCL Fonts Pitch Size	Controls the font pitch in characters per inch (cpi). Range: Up to 4 characters (0.44 - 99.99) Default:10.00 Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/ EMULATIONS/PCL/FONT/PITCH SIZE

Item		Description
	Font Number	Identifies the PCL font number. Range: Up to 5 characters (0 - 32767) Default: 0 Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/ EMULATIONS/PCL/FONT/FONT NUMBER
	Point Size	Controls the height (in points) of the default font. Range: Up to 5 characters (4.00 - 999.75) Default: 12.00 Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/ EMULATIONS/PCL/FONT/POINT SIZE
	Symbol Set	Sets the symbol set to be used.  Default: PC8 Configuration Menu Equivalent:  MENU SYSTEM DEFAULT/  EMULATIONS/PCL/FONT/SYMBOL  SET
Submit button		Saves and applies any changes made.
Reset button		If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.
Save Custom button		Saves the Current values of the parameters as the Custom settings. Using the <b>Restore Custom</b> button, you can change the parameter settings back to the Custom settings after changes are made.
Restore Custom button		Changes all settings to the Custom values.
Restore Factory button		Changes all settings to the Factory values.

#### **Download Font/Form**

#### **List Fonts/PS Fonts**

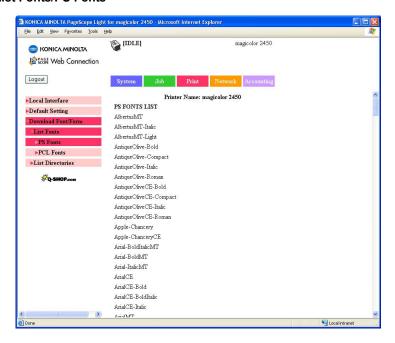


The **Printer/Download Font/Form/List Fonts/PS Fonts** window displays a list of PostScript fonts installed on the printer.

Configuration Menu Equivalent:

MENU PRINT MENU/FONT LIST/POSTSCRIPT

#### List Fonts/PCL Fonts

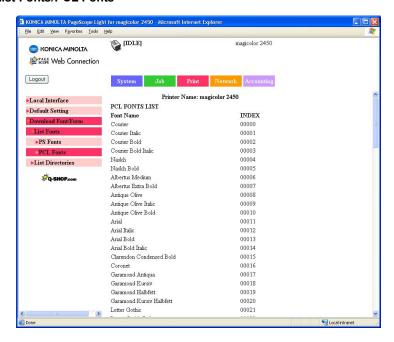


The **Printer/Download Font/Form/List Fonts/PCL Fonts** window displays a list of PCL Fonts installed on the printer and also the Index values of each font.

Configuration Menu Equivalent:

MENU PRINT MENU/FONT LIST/PCL

#### List Directories/Disk Drive

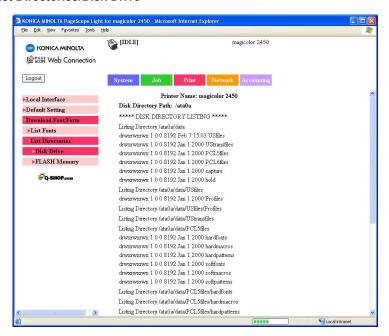

The Printer/Download Font/Form/List Directories/Disk Drive window displays the list of files currently installed in the printer's hard disk.


Configuration Menu Equivalent:

MENU PRINT MENU/DIRECTORY LIST



A Hard Disk Not Installed message appears if no optional hard disk is installed in the printer.

#### **List Directories/FLASH Memory**

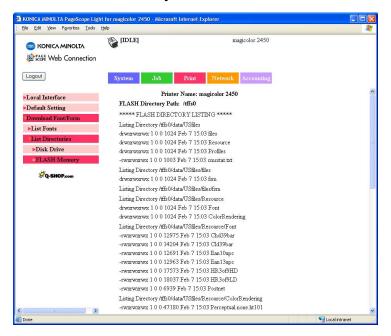


The **Printer/Download Font/Form/List Directories/FLASH Memory** window displays the list of files currently installed in the printer's flash memory.

Configuration Menu Equivalent:

MENU PRINT MENU/DIRECTORY LIST

# **Network Page**

The Network page allows you to configure network settings. For more information on these protocols, see chapter 6, "Network Printing".

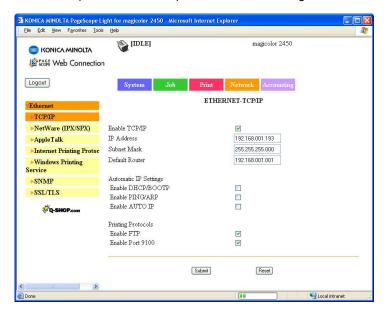

#### **Ethernet**


#### TCP/IP (shown above)

The **Network/Ethernet/TCP/IP** window provides the following parameters for configuration:

Item	Description
Enable TCP/IP	Enables the settings for TCP/IP.
	Default: [Checked]
	Configuration Menu Equivalent:
	MENU INTERFACE MENU/ETHERNET/
	TCP/IP/ENABLE
IP Address	Sets the IP address.
	Default: 192.168.1.2
	Configuration Menu Equivalent:
	MENU INTERFACE MENU/ETHERNET/
	TCP/IP/IP ADDRESS

Item		Description
Subnet Mask		Sets the subnet mask address.  Default: 000.000.000.000  Configuration Menu Equivalent:  MENU INTERFACE MENU/ETHERNET/  TCP/IP/SUBNET MASK
Default Ro	uter	Sets the default router IP address.  Default: 000.000.000.000  Configuration Menu Equivalent:  MENU INTERFACE MENU/ETHERNET/  TCP/IP/DEFAULT ROUTER
Automatic IP Settings	Enable DHCP/ BOOTP	Selecting this check box enables DHCP.  Default: [Checked]  Configuration Menu Equivalent:  MENU INTERFACE MENU/ETHERNET/  TCP/IP/DHCP/BOOTP
	Enable PING/ ARP	Selecting this check box enables PING/ARP. Default: [Checked]
	Enable AUTO IP	Selecting this check box enables automatic IP detection.  Default: [Not checked]  Configuration Menu Equivalent:  MENU INTERFACE MENU/ETHERNET/  TCP/IP/ENABLE AUTO IP
Printing Protocols	Enable FTP	Selecting this check box enables FTP. Default: [Checked]
	Enable Port 9100	Selecting this check box enables Port 9100. Default: [Checked]
Submit but	ton	Saves and applies any changes made.
Reset butto	on	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

### NetWare (IPX/SPX)

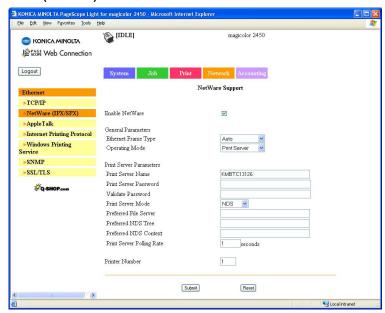


The **Network/Ethernet/NetWare (IPX/SPX)** window provides the following parameters for configuration:

Item		Description
Enable Ne	tWare	When selected, enables the NetWare settings. Default: [Checked]
General Parame- ters	Ethernet Frame Type	Sets the Ethernet Frame Type. Choices: Auto, Ethernet 802.2, Ethernet 802.3, Ethernet II, Ethernet SNAP Default: Auto Configuration Menu Equivalent:  MENU INTERFACE MENU/ ETHERNET/IPX/SPX/FRAME TYPE
	Operating Mode	Sets the operating mode. Choices: Print Server, Remote Printer Default: Print Server

Item		Description
Print Server Parame- ters	Print Server Name	Sets the print server name. Range: Up to 64 characters Default: KMBTxxxxxx (Where x's are last 6 digits of MAC Address of the printer).
	Print Server Password	If the print server requires a password, enter the password in this field. Range: Up to 64 characters Default: [Blank]
	Validate Password	Used to validate the password entered in the <b>Print Server Password</b> field. Range: Up to 64 characters
	Print Server Mode	Sets the print server mode. Choice: Bindery, Both, NDS Default: NDS
	Preferred File Server	Sets the name of the preferred file server. Range: Up to 47 characters Default: [Blank]
	Preferred NDS Tree	Identifies the NDS tree. Range: Up to 48 characters Default: [Blank]
	Preferred NDS Con- text	Identifies the NDS context. Range: Up to 191 characters Default: [Blank]
	Print Server Polling Rate	Sets the time interval (in seconds) that passes between print server pollings. Range: 1 - 65535 (in seconds) Default: 1
	Printer Number	Allows you to assign a printer number for identification purposes. Range: 0 - 254 Default: 1
Submit but	ton	Saves and applies any changes made.
Reset butto	on	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.


# **AppleTalk**

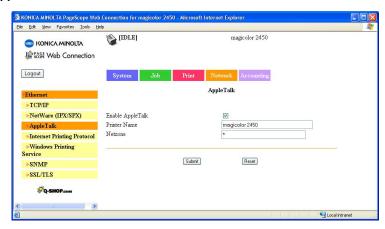

The **Network/Ethernet/AppleTalk** window provides the following parameters for configuration:

Item	Description
Enable AppleTalk	When selected, enables the parameter settings for AppleTalk. Default: [Checked]
Printer Name	Identifies the printer name. Range: Up to 32 characters Default: magicolor 2450
Netzone	Identifies the zone where the printer is located. Range: Up to 32 characters Default: *
Submit button	Saves and applies any changes made.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

#### **Internet Printing Protocol**

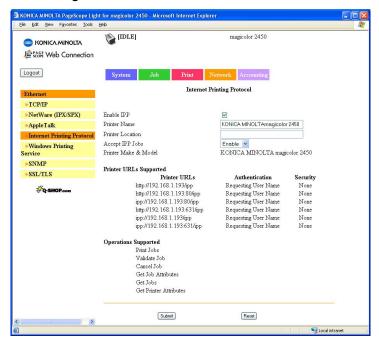

The **Network/Ethernet/Internet Printing Protocol** window provides the following parameters for configuration:

Item	Description
Enable IPP	When selected, enables the parameter settings for IPP. Default: [Checked]
Printer Name	Identifies the printer name. Range: Up to 128 characters Default: KONICA MINOLTAmagicolor 2450
Printer Location	Identifies the location of the printer. Range: Up to 128 characters Default: [Blank]
Accept IPP Jobs	When Enable is selected, allows the printer to process incoming IPP jobs. Choices: Enable, Disable Default: Enable
Printer Make & Model	Identifies the printer manufacturer and printer model. This text is read-only.

Item	Description
Printer URLs Supported	Displays the URLs supported by the printer. This text is read-only.
Operations Supported	This read-only text lists the operations supported.
Submit button	Saves and applies any changes made.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.


### **Windows Printing Service**



The **Network/Ethernet/Windows Printing Service** window provides the following parameters for configuration:

Item	Description
Enable Windows Printing Service	If selected, enables the parameter settings for Windows printing service. Default: [Checked]
WorkGroup Name	Sets the workgroup name. Range: Up to 15 characters Default: WORKGROUP
Host Name	Sets the host name. Range: Up to 15 characters Default: KMBTxxxxxx (Where x's are last 6 digits of MAC Address of the printer).
Printer Name	Sets the printer name. Range: Up to 13 characters Default: MC2450
Printer Description	Sets the printer description. Range: Up to 32 characters Default: Windows Printing Service
Submit button	Saves and applies any changes made.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

#### **SNMP**

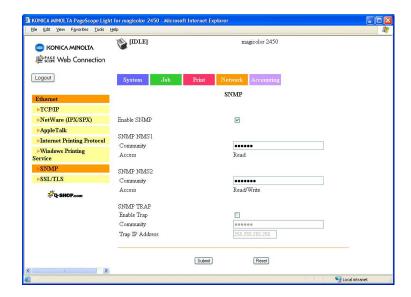

The **Network/Ethernet/SNMP** window provides the following parameters for configuration:

Item		Description
Enable SN	MP	If selected, enables the parameter settings for SNMP. Default: [Checked]
SNMP NMS1	Community	Sets the IP community of the printer. Range: Up to 32 characters Default: public
	Access	Identifies Read or Write access.
SNMP NMS2	Community	Sets the IP community of the printer. Range: Up to 32 characters Default: private
	Access	Identifies Read or Write access.

Item		Description
SNMP TRAP	Enable Trap	If this check box is selected, the Trap parameters (below the check box) are enabled.  Default: [Not checked]
	Community	Sets the community of the printer. Default: public
	Trap IP Address	Sets IP address of the printer. Default: 255.255.255.255
Submit but	ton	Saves and applies any changes made.
Reset butto	on	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

### SSL/TLS Setting




The **Network/SSL/TLS/SSL/TLS Setting** page allows you to select the following SSL/ TLS settings that appear.



As a default, SSL/TLS is not installed. Select Create a self-signed Certificate and click Submit to create a certificate and specify the SSL settings.

Item		Description
SSL/TSL Create a self-signed Certificate	Displays the Self-signed Certificate Setting page.	
	Request a Certificate	Displays the Request Certificate Setting Page.
	Install a Certificate	Displays the Install Certificate Setting Page.
	Set encryption strength	Displays the Encryption Strength Setting Page.  Only available if a certificate is currently installed.
	Remove Certificate	Displays the Remove Certificate Setting Page.  Only available if a certificate is currently installed.
	SSL/TSL Mode	Displays the SSL/TLS Mode Setting Page.  Only available if a certificate is currently installed.
Back butto	n	Returns to the previous screen.
Submit but	tton	Click to display the selected page.
Reset butte	on	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

#### **Self-Signed Certificate Setting**

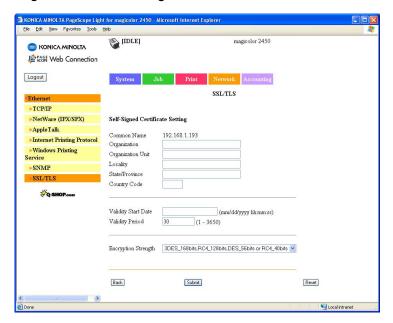


The **Network/SSL/TLS/Self-Signed Certificate Setting** page allows you to create a certificate and specify SSL settings.

Item	Description
Common Name	Identifies the IP address of the printer.  This text is read-only.
Organization	Specify the name of the group or organization. Range: Up to 64 characters Default: [Blank]
Organization Unit	Specify the name of the post. Range: Up to 64 characters Default: [Blank]
Locality	Specify the name of the municipality. Range: Up to 128 characters Default: [Blank]
State/Province	Specify the name of the state or province. Range: Up to 128 characters Default: [Blank]

Item	Description
Country Code	Specify the name of the country as a country code regulated by ISO03166. Range: Up to 2 characters Default: [Blank]
Validity Start Date	Specifies the start date of the Self-Signed Certificate.
Validity Period	Specify the period of validity. Range: 1 - 3650 Default: 30
Encryption Strength	Specify the encryption level. Choices: ■ 3DES_168bits, RC4_128bits, DES_56bits or RC4_40bits
	■ RC4_128bits, DES_56bits or RC4_40bits
	■ DES_56bits or RC4_40bits
	Default: 3DES_168bits,RC4_128bits, DES_56bits or RC4_40bits
Back button	Returns to the previous screen.
Submit button	Creates the self-signed certificate.
	A few minutes are needed in order to create the certificate.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

# Request a certificate

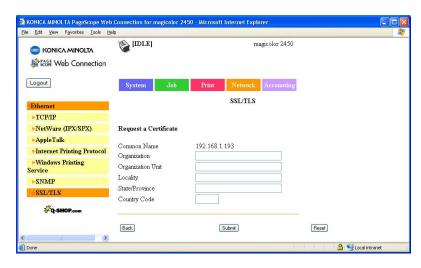


The Network/SSL/TLS/Request a Certificate page provides the following parameters for configuration:

Item	Description	
Common Name	Displays the IP Address of the printer.	
Organization	Specifies the name of the group or organization.	
	Range: Up to 64 characters Default: [Blank]	
Organization Unit	Specifies the name of the post.	
	Range: Up to 64 characters Default: [Blank]	
Locality	Specifies the name of the municipality.	
	Range: Up to 128 characters Default: [Blank]	
State/Province	Specifies the name of the state or province.	
	Range: Up to 128 characters Default: [Blank]	
Country	Specify the name of the country as a country code regulated by ISO03166.	
	Range: Up to 2 characters Default: [Blank]	

Item	Description
Submit button	Click to create data for requesting that a certificate be issued.
Back button	Click to return to the <b>Network/SSL/TLS/SSL/TLS Setting</b> page.
Cancel button	Resets all configuration settings to previous values.
Logout button	Logs out of Administrator Mode and returns to User Mode.


# **Certificate Signing Request Data**

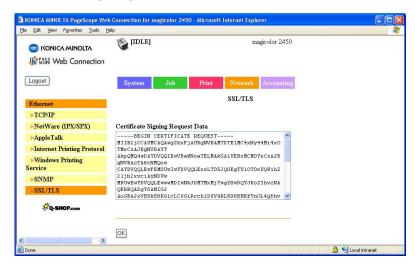

The Network/SSL/TLS/Certificate Signing Request Data page displays the data that will be submitted to the certificate authority to request that a certificate be issued.

Item	Description
Certificate Request	Displays the data that will be submitted to the certificate authority to request that a certificate be issued.
OK button	Click to return to the <b>Network/SSL/TLS/SSL/TLS Setting</b> page.
Logout button	Logs out of Administrator Mode and returns to User Mode.


### Install a Certificate

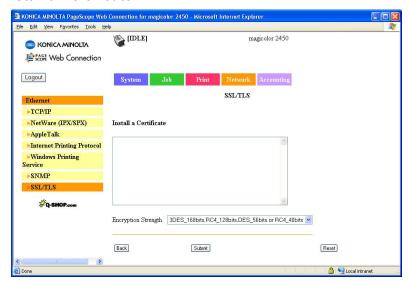

The **Network/SSL/TLS/Install a Certificate** page allows you to install the certificate issued by the certificate authority.

Item	Description
Install a Certificate	Attaches the CSR (certificate signing request) in the text format sent from the certificate authority.
Encryption	Specifies the encryption level.
Strength	Choices:
	■ 3DES_168bits, RC4_128bits, DES_56bits or RC4_40bits
	■ RC4_128bits, DES_56bits or RC4_40bits
	■ DES_56bits or RC4_40bits
	Default: 3DES_168bits,RC4_128bits, DES_56bits or RC4_40bits
Submit button	Click to install the certificate.
Back button	Click to return to the <b>Network/SSL/TLS/SSL/TLS Setting</b> page.
Reset button	If you made changes to any of the parameter set-tings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.
Logout button	Logs out of Administrator Mode and returns to User Mode.


# **Encryption Strength**

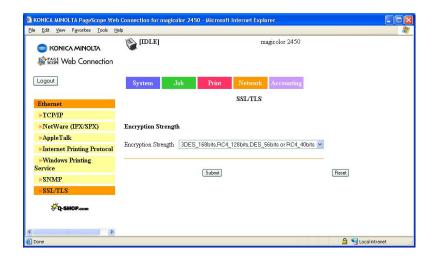

The **Network/SSL/TLS/Encryption Strength** page allows you to specify the encryption level.

Item	Description
Encryption Strength	Specifies the encryption level.
	Choices:
	■ 3DES_168bits, RC4_128bits, DES_56bits or RC4_40bits
	■ RC4_128bits, DES_56bits or RC4_40bits
	■ DES_56bits or RC4_40bits
	Default: 3DES_168bits,RC4_128bits, DES_56bits or RC4_40bits
Submit button	Click to specify the encryption level.
Reset button	Click to return to the <b>Network/SSL/TLS/SSL/TLS Setting</b> page.
Logout button	Logs out of Administrator Mode and returns to User Mode.

### **Remove Certificate**

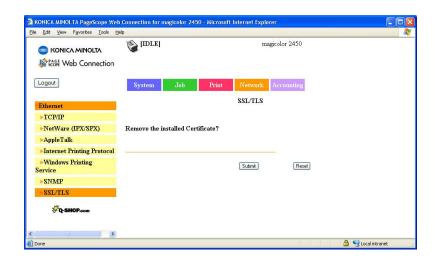

The **Network/SSL/TLS/Remove Certificate** page allows you to delete the installed certificate.

Item	Description
Submit button	Click to display a confirmation message. Click <b>Submit</b> in the confirmation message to delete the certificate.
Reset button	Click to return to the <b>Network/SSL/TLS/SSL/TLS Setting</b> page.
Logout button	Logs out of Administrator Mode and returns to User Mode.

# **SSL/TLS Mode**




The **Network/SSL/TLS/SSL/TLS Mode** page allows SSL to be enabled or disabled.

Item	Description
SSL/TLS Mode	If Enable is displayed, SSL is enabled. If Disable is selected, SSL is disabled. Choice: Enable, Disable
Submit button	Saves and applies any changes mode.
Cancel button	Click to return to the <b>Network/SSL/TLSL/SSL/TLS Setting</b> page.
Logout button	Logs out of Administrator Mode and returns to User Mode.

# **Accounting Page**

If the optional hard disk is installed in the printer, the **Accounting** window allows you to view accounting reports and reset the Accounting file.

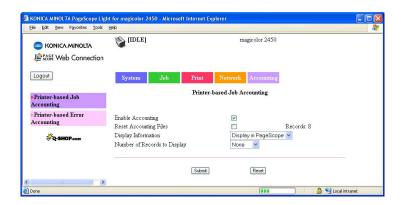


# Printer-based Job Accounting (shown above)

The **Accounting/Printer-based Job Accounting** page allows you to check details of print jobs.

Item	Description
Enable Accounting	If selected, enables the parameter settings for Accounting. Default: [Checked]
Reset Accounting Files	Resets the accounting file located on the printer's internal hard disk. Default: [Not checked]
Display Information	Sets where the accounting records are to be displayed for your review. Choices: Upload to Host, Display in PageScope Default: Display in PageScope
Number of Records to Display	Sets the number of accounting file records that are to be displayed when <b>Display in PageScope</b> is selected in the Display Information field (described above). Choices: All, Last 10, Last 50, Last 100, Last 250, Last 500, None Default: None

Item	Description
Submit button	Saves and applies any changes made.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

# **Printer-based Error Accounting**

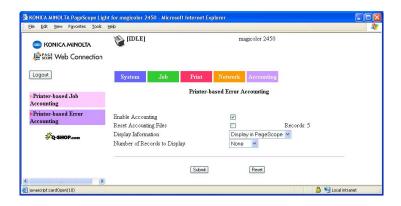

The **Accounting/Printer-based Error Accounting** page allows you to check details of print errors.

Item	Description
Enable Accounting	If selected, enables the parameter settings for Accounting. Default: [Checked]
Reset Accounting Files	Resets the accounting file located on the printer's internal hard disk. Default: [Not checked]
Display Information	Sets where the accounting records are to be displayed for your review. Choices: Upload to Host, Display in PageScope Default: Display in PageScope
Number of Records to Display	Sets the number of accounting file records that are to be displayed when <b>Display in PageScope</b> is selected in the Display Information field (described above). Choices: All, Last 10, Last 50, Last 100, Last 250, Last 500, None Default: None
Submit button	Saves and applies any changes made.
Reset button	If you made changes to any of the parameter settings but don't wish to apply the changes, selecting this button restores the last submitted parameter settings.

# Index

# A

# Accounting, PageScope Web Connection 186

Printer-based Error Accounting 188 Printer-based Job Accounting 186

Administrator mode, PageScope Web Connection 120

AppleTalk 9

AppleTalk, PageScope Web Connection 169

Auto IP 95

# B

**BOOTP** 94, 106

# C

Capture Print Job, PageScope Web Connection 153

Certificate request, PageScope Web Connection 179

Certificate Signing Request Data,
PageScope Web Connection 181

Chooser 45

Color Matching, PageScope Web Connection 130

Configuration

Network settings 92

Configuration Page, PageScope Web Connection 146

**Crown Print Monitor+** 88

D	1
Date & Time, PageScope Web Connection 140	Install a certificate, PageScope Web Connection 182
Default Router 95	Installing
<b>DHCP</b> 94, 101, 106	Certificate 182
Direct Printing, PageScope Web	Crown Print Monitor+ 88
Connection 152	Download Manager Utility 88
Disk Operations, PageScope Web	Management Information Base 88
Connection 148	PageScope Network Setup 88
Download Manager Utility 88	Printer driver 3, 73
• •	Printer Management Utility 88
E	Status Monitor 88
E	Internet Printing Protocol,
E-Mail Configuration, PageScope	PageScope Web Connection 170
Web Connection 138	IP address 94, 101
Encryption strength, PageScope Web	
Connection 183	Manual setting 102
Ethernet interface 101	IPP 107, 170
Ethernet menu 92	Printing via 109
Accessing 93	<b>IPX/SPX</b> 96, 167
Auto IP 95	
	J
Default Router 95	
DHCP/BOOTP 94	Job Listing, PageScope Web
Ethernet Speed 97	Connection 150
EtherTalk 96	Job, PageScope Web Connection 150
Gateway 95	Capture Print Job 153
IP address 94	Direct Printing 152
IPX/SPX 96	Job Listing 150
PS Protocol 97	Print Stored Job 151
Subnet mask 95	
Using options 94	1
EtherTalk 96	<b>-</b>
	Linux
C	Adding the printer 74
G	Checking print jobs 85
<b>Gateway</b> 95, 101	PPD file, installing 73
Manual setting 102	Print settings 81
General, PageScope Web Connection	Printer driver settings 76
155	System requirements 72
	Troubleshooting 86
u l	List Directories/Disk Drive,
н	PageScope Web Connection 163
Host table 116	List Directories/FLASH Memory,
HTTP 107	
• • •	PageScope Web Connection 164

190 Index

List Fonts/PCL Fonts, PageScope Web Connection 162 List Fonts/PS Fonts, PageScope Web Connection 161 Localization Languages, PageScope Web Connection 136 LPD/LPR 107

# M

#### Mac OS 9

Chooser 45 Options 45

Page setup settings 47 Printer driver, installing 43 System requirements 42 Troubleshooting 69

#### Mac OS X

Options 15

Page setup settings 17 Print settings 21 Printer driver, installing 3 Printer setup utility settings 6 System requirements 2 Troubleshooting 38

**Management Information Base** 88

# N

**NetWare** 96, 167 NetWare (IPX/SPX), PageScope Web Connection 167

Network connection 100

Address setting 102 Ethernet interface 101 Making connections 101

Theory 100

Using DHCP 101

Network menu

Overview 92

**Network printing 106** Network setting 92

Network, PageScope Web

Connection 165 AppleTalk 169

Certificate Request 179

Certificate Signing Request Data 181

Encryption strength 183 Install a certificate 182

Internet Printing Protocol 170 NetWare (IPX/SPX) 167 Remove certificate 184 Request a certificate 179 Self-Signed Certificate Setting 177 **SNMP 173** SSL/TLS Mode 185

SSL/TLS Setting 175

TCP/IP 165

Windows Printing Service 172

Online help, PageScope Web Connection 143

# P

Page setup settings 17, 47

Custom paper size options 19, 48 Page attributes options 18, 47 Summary 20

PageScope Network Setup 88 PageScope Web Connection 114

Administrator mode 120 AppleTalk 169

Capture Print Job 153 Certificate request 179

Certificate Signing Request Data 181

Color Matching & Quality 130

Configuration Page 146

Current status 120

Date & Time 140

Direct Printing 152

Disk Operations 148

Display language 114

E-Mail Configuration 138

Encryption strength 183

General 155

Install a certificate 182

Internet Printing Protocol 170

Job Listing 150

List Directories/Disk Drive 163

List Directories/FLASH Memory 164

List Fonts/PCL Fonts 162

List Fonts/PS Fonts 161

Localization Languages 136

Navigation 119	Print, PageScope Web Connection
NetWare (IPX/SPX) 167	154
Online help 143	General 155
Paper Handling 123	List Directories/Disk Drive 163
Password 120	List Directories/FLASH Memory 164
PCL 159	List Fonts/PCL Fonts 162
PostScript 157	List Fonts/PS Fonts 161
Print Stored Job 151	PCL 159
Print System Pages 145	PostScript 157
Printer-based Error Accounting 188	USB 154
Printer-based Job Accounting 186	Printer name 116
Remove certificate 184	Printer setup utility 6
Request a certificate 179	AppleTalk 9
Requirements 114	IP printing setting 12
Security 141	Network connection 9
Self-Signed Certificate Setting 177	USB connection 6
SNMP 173	Printer-based Error Accounting,
SSL/TLS Mode 185	PageScope Web Connection 188
SSL/TLS Setting 175	Printer-based Job Accounting,
Startup Options & Resets 133	PageScope Web Connection 186
Statistics Page 147	Protocols, network
Summary 121	BOOTP 106
Supplies Status 132	DHCP 106
TCP/IP 165	HTTP 107
Tray Mapping 128	IPP 107
USB 154	LPD/LPR 107
User mode 120	SLP 107
Window 119	SMTP 108
Windows Printing Service 172	SNMP 108
Paper Handling, PageScope Web	
Connection 123	R
Password, PageScope Web	
Connection 141	Remove certificate, PageScope Web
PCL, PageScope Web Connection	Connection 184
159	Request a certificate, PageScope
Port 9100 108	Web Connection 179
PostScript, PageScope Web	
Connection 157	S
Print Center 6	Safari 118
Print jobs	Security, PageScope Web
Checking 68, 85	Connection 141
Print Stored Job, PageScope Web	Self-Signed Certificate Setting,
Connection 151	PageScope Web Connection 177
Print System Pages, PageScope Web	SLP 107
Connection 145	SMTP 108
	SNMP 108
	J. 100

SNMP, PageScope Web Connection 173

SSL/TLS Mode, PageScope Web Connection 185

SSL/TLS Setting, PageScope Web Connection 175

Startup Options & Resets,

PageScope Web Connection 133

Statistics Page, PageScope Web
Connection 147

**Status Monitor** 88

Subnet mask 95, 101

Manual setting 102

Summary, PageScope Web Connection 121

Supplies Status, PageScope Web Connection 132

System requirements

Linux 72

Mac OS 9 42 Mac OS X 2

System, PageScope Web Connection

Color Matching & Quality 130

Configuration Page 146

Date & Time 140

Disk Operations 148

E-Mail Configuration 138

Localization Languages 136

Online help 143

Paper Handling 123

Print System Pages 145

Security 141

Startup Options & Resets 133

Statistics Page 147

Summary 121

Supplies Status 132

Tray Mapping 128

# т

TCP/IP, PageScope Web Connection 165

Tray Mapping, PageScope Web Connection 128

**Troubleshooting** 

Linux 86 Mac OS 9 69 Mac OS X 38



USB, PageScope Web Connection 154

User mode, PageScope Web Connection 120



Web page, printer 116

Browser 116

Printer name 116

Windows Printing Service,

PageScope Web Connection 172