

# User Guide

BT FREELANCE XD 1500 & XD 1550



# Welcome...

to your BT Freelance XD 1500/1550
Digital Cordless Telephone Answering Machine

- 50 Name and number phonebook for storing your most frequently used numbers.
- Digital answering machine for high quality message recording
- Caller Display shows you who's calling before you answer the phone\* and keeps a list of your last 40 callers. You can also dial numbers direct from the Calls list.
- Handsfree lets you make and receive calls using the built-in handset loudspeaker so your hands are free for other tasks during a call.
- Redial up to 10 of the last numbers called.
- Use up to 5 handsets with your BT Freelance XD 1500/1550 base.
- Make internal calls and transfer external calls between handsets.
- Choose from 10 different ringtones for internal and external calls as well as numbers stored in the phonebook
- Clock/Alarm built into charger (BT Freelance XD 1550 only).

<sup>\*</sup> Requires subscription to your network's Caller Display service.



This User Guide provides you with all the information you need to get the most from your phone.

Before you make your first call you will need to set up your phone. Follow the simple instructions in 'Getting Started', over the next few pages.

## • Need help?

If you have any problems setting up or using your BT Freelance XD 1500/1550 please contact the Helpline on **0870 605 8047**.

Alternatively, you may find the answer in 'Help' at the back of this guide.

#### **Hearing aid?**

Please note that the BT Freelance XD 1500/1550
works by sending radio signals between the base and
handset. These signals may interfere with some
hearing aids, causing a humming noise.

### Got everything?

- BT Freelance XD 1500 or 1550 handset
- BT Freelance XD 1500 or 1550 base
- 2 x AAA NiMH rechargeable batteries
- Mains power adaptor (Item code: 005391)
- Telephone line cord
- Belt clip

In addition, if you have purchased a BT Freelance XD 1500 or 1550 multipack you will also have the following for each additional handset:

- BT Freelance XD 1500 or 1550 charger
- 2 x AAA NiMH rechargeable batteries
- Mains power adaptor (Item code: 021299)
- Belt clip

# In this guide

Getting started	Rediai a number
Location7	Delete a number from the redial list19
Connect the base to mains power7	Delete the entire redial list19
Preparing your handset 8	Copy a redial number to the phonebook .20
Connect to the telephone line 9	Keypad lock
Set the answering machine day	Paging
and time	
Attach the belt-clip (optional)11	Using the phonebook
Handset date and time	Add an entry to the phonebook 21
	Dial from the phonebook
Getting to know your phone	Edit an entry
Handset buttons	Delete an entry23
Handset display icons	
Using the menu	Internal calls 24
Menu map	Make an internal call24
Answering machine base and charger15	Receive an internal call24
Charger/alarm clock	Transfer an external call
(BT Freelance XD 1550 only) 16	3-Way call
Using your phone	Caller Display & the Calls list
Switch the handset on/off17	Caller Display26
Make a call	Calls list
Preparatory dialling	View the Calls list27
End a call	Dial a number in the Calls list27
Receiving calls	Copy a number to the phonebook 28
Secrecy	Delete an entry28
Handsfree	Delete the entire Calls list28
Adjusting the volume 19	

Using the answering machine	Language4
Switch the answering machine on/off29	Keypad beep on/off4
Listening to your messages29	Battery low warning beep on/off42
Outgoing messages (OGMs)31	Out of range warning beep on/off42
Record your own OGM31	Keypad lock via the menu42
Check your current OGM	Auto answer43
Select the OGM	Set the date4
Re-instate the pre-recorded OGM32	Set the time43
Answer delay	Set the alarm44
Record a memo	
Call screening	Base settings
Memory full	Base ringer volume45
Remote access34	Base ringer melody
Operating your answering machine	Change base PIN code
from another phone	Dial mode
Set the security PIN code	Reset
Check security code	Emergency default
Alarm clock (BT Freelance XD 1550 only)	Additional handsets and bases
Setting the clock	Register a new handset to base 48
Setting the alarm	Register a different manufacturer's
Silence the alarm	handset to your base 49
	Selecting a base49
Handset settings	De-register a handset50
Handset ringer volume40	
Handset ringer melody40	<b>Help</b>
Handset name	

# 6 In this guide

General Information
Safety
Cleaning55
Environmental55
Connecting to a switchboard56
Dialling mode56
Flash duration56
Access code and entering a pause56
Guarantee
Technical information58
R&TTE
BT Accessories and Replacement Items59

#### Location


You need to place your BT Freelance XD 1500/1550 within 2 metres of the mains power socket and telephone socket so that the cables will reach.

Make sure it is at least 1 metre away from other electrical appliances to avoid interference.

Your BT Freelance XD 1500/1550 works by sending radio signals between the handset and base. The strength of the signal depends on where you site the base. Putting it as high as possible can help to provide the best signal.

#### Connect the base to mains power

1. Plug the jack of the mains power adaptor into the socket marked no the underside of the base and plug the other end to the mains power wall socket. The green Power/In Use light comes on.

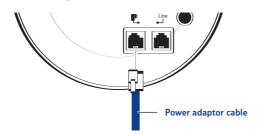

#### WARNING

Do not place your BT Freelance XD 1500/1550 in the bathroom or other humid areas.

#### Handset range

Your BT Freelance XD 1500/1550 has a range of up to 300m outdoors when there is a clear line of sight between the base and the handset. When there is no clear line of sight between the handset and the base, e.g. the base is indoors and the handset is either indoors or outdoors, the range could be reduced to 50m. Thick stone walls will severely affect the range.

#### Signal strength

The poicon on your handset display indicates when you are in range of the base. When it flashes and you hear a warning beep, you are out of range and will need to move closer to the base.

#### IMPORTANT

Do not connect the telephone line until the handset is fully charged.

The base station should be plugged into the mains power socket at all times.

#### WARNING

Never use non-rechargeable batteries. Only use the approved batteries. Using unapproved batteries will invalidate your guarantee and may damage the telephone.

#### Talk/Standby time

Under ideal conditions, the handset batteries should give about 10 hours talk time or 200 hours standby on a single charge. (This does not mean you can unplug the base or leave it for this length of time without charge.)

Please note that new NiMH rechargeable batteries do not reach full capacity until they have been in normal use for several days.

See 'Battery performance' on the following page.


#### **Battery low warning**

If the TD icon is flashing in the display and you hear a warning beep every minute during a call, you will need to recharge your handset before you can use it.

The charging light will be lit when the handet is in the base or charger – even when the batteries are fully charged.

#### Preparing your handset

 2. Insert the 2 x AAA rechargeable batteries supplied, taking note of the polarity markings inside the battery compartment, then slide the battery compartment shut.



3. Place the handset on the base to charge. The red charging light comes on. You should let the batteries charge continuously for at least 24 hours. The batteries and case may become warm during charging, this is normal.

# BT Freelance XD 1500/1550 multipack users only:

Place each BT Freelance XD 1500/1550 charger within reach of a mains power wall socket.

#### Connect the charger(s) and charge the handset(s)


 Plug the mains power adaptor into the power socket on the underside of the charger and plug the other end to the mains power wall socket.

- ii. Insert the 2 x AAA rechargeable batteries supplied, taking note of the polarity markings inside the battery compartment, then slide the battery compartment shut.
- iii. Place the handset on the charger. The red charging light comes on. You should let the batteries charge continuously for at least 24 hours.

The display will show the time and the handset number e.g. -2 -, to show it is registered to the base.

## Connect to the telephone line

Plug the telephone line cord into the socket marked line on the underside of the base and plug the other end into the telephone wall socket.

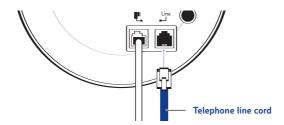

Your phone is now set up to make and receive calls. Please note that the answering machine is already switched on and is ready to answer incoming calls.

#### **Battery performance**

To keep the batteries in the best condition, leave the handset off the base for a few hours at a time. Running the batteries right down at least once a week will help them last as long as possible.

After charging your handset for the first time, subsequent charging time for the batteries is approximately 6–8 hours.

The charge capacity of rechargeable batteries will reduce with time as they wear out, thus reducing the talk/standby time. Eventually they will need replacing.

New batteries are available from the BT Freelance XD Helpline on 0870 605 8047.

To switch the answering machine *off* press on the base. The machine announces "Answer Off". See page 29 for more information about your answering machine.

## V-----

Your answering machine will automatically add the day and time each message is received.

- 5. At the answering machine:
- i. Press . The current day and time setting is announced.


Set the answering machine day and time

- ii. Press *and hold* . The day only is announced. Press to select the correct day.
- iii. Press again. The day and hour are announced. Press or to select the correct hour 1-24.
- iv. Press the day, hour and minute is announced. Press or to select the correct minute. The machine will automatically select AM or PM accordingly.
- v. The machine announces the day and time setting.

The default day and time setting is Saturday 12.01 pm.

### Attach the belt-clip (optional)

Press the belt clip onto the back of the handset until it clicks into place.

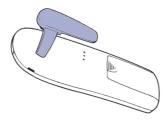

### Handset date and time


If you have subscribed to your network's Caller Display service, the day and time will be set on the handset automatically. To set the handset day and time manually, see *page 43*.

However, the correct day can only be set manually, see *page 43*.

Your BT Freelance XD 1500/1550 is now ready for use.


# Getting to know your phone

#### **Handset buttons**

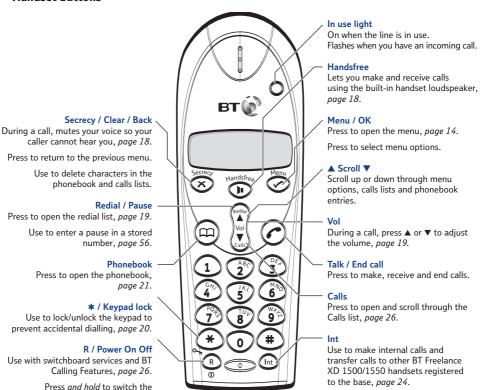

handset on/off, page 17.

#### Standby screen

 

### Handset display icons

EXT Flashes to indicate an incoming external call

Flashes to indicate an incoming internal call

Internal call in progress

X Way call in progress

Indicates signal strength
Flashes when handset is not registered to the base

Menu open

Phonebook open

Handsfree speaker on

New number(s) in Call list

Answered call (when viewing the Calls list)

Unanswered call (when viewing the Calls list)

Keypad locked

◆ The displayed number is longer than 12 digits

Battery charge full

Battery charge medium

Battery charge low

Flashing - Battery charge nearly empty

<sup>\*</sup> This features requires subscription to your network provider's Caller Display service.

#### 14 Getting to know your phone

# Using the menu

All your phone's functions and settings can be accessed through the main menu. The menu map below shows all menu options you can choose from.

Press  $\bigcirc$  to enter the menu. The  $\Rightarrow$  icon is displayed.

Press or to scroll through the menu options. When you reach the end of the list, the first option is displayed again.

To select an option, press .

To return to the previous menu display, press .

#### Menu map

Quick exit a menu If you want to exit a menu or

cancel an operation at any time you can press and hold to

return to the standby screen.



Modify entry Delete entry Base Melody Delete handset PIN code Dial mode Default


Internal ringer volume External ringer volume Internal ringer melody External ringer melody Auto answer Name

Language Kev lock

Clock set Alarm set Register base


#### Answering machine base and charger


See page 29 for more detailed information about your answering machine.

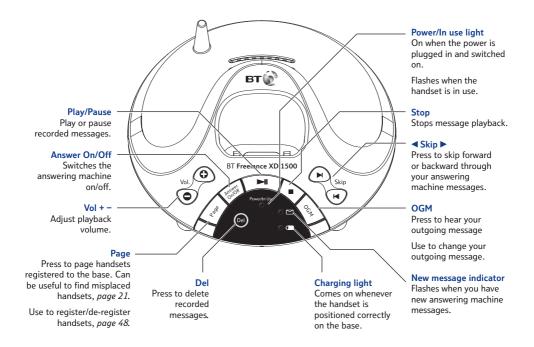

# 16 Getting to know your phone

## Charger/alarm clock (BT Freelance XD 1550 only)

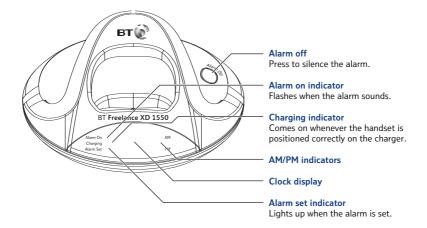

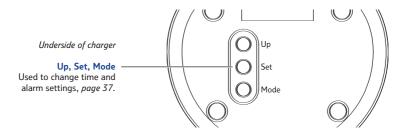

# Using your phone

#### Switch the handset on/off

- 1. To switch off, press *and hold* until the display goes off.
- 2. To switch the handset on, press and hold .

#### Make a call

 Press . When you hear the dial tone, dial the phone number.

## **Preparatory dialling**

- 1. Enter the phone number first. The number is shown in the display.
- 2. Press **a** to dial the number.

## End a call

1. Press , or place the handset back on the base/charger.

#### Receiving calls

1. When the phone rings, press to answer the call, or if the handset is on the base or charger, simply lift it to answer the call. If you would rather press after lifting the handset to receive a call, you will need to switch Auto-answer off. see page 43.

#### Dialling numbers quickly

Numbers can also be dialled direct from the phonebook (page 22), the calls list (page 27), or the redial list (page 19).

If you make a mistake as you enter the number, press to delete a digit.

#### Call timer

After the first 15 seconds of your call, the call timer is displayed. At the end of your call, the total duration is shown for 5 seconds.

#### Caller Display

If you have subscribed to your network's Caller Display service, the caller's number (or name, if an exact number match is found in the phonebook) will also be displayed, see page 26.

# 18 Using your phone

### Secrecy

You can stop your caller from hearing you while you talk to someone else close by.

- 1. During a call, press . The handset microphone is muted and the display shows MUTE.
- 2. Press again to resume your call.

# Handsfree

Handsfree switches on the handset loudspeaker so you can talk to your caller without holding the handset. It also enables other people in the room listen to both sides of your conversation.

#### Make a handsfree call

- 1. Press You will hear a dial tone and the display shows the ☐ icon. Dial the phone number. Your call can be heard over the handset's loudspeaker.
- 2. Press **a** to end the call.

#### Answer a handset call handsfree

1. When the phone rings, press handsfree.

Press to switch between the handset earpiece and handsfree during a call.

#### Adjusting the volume

You can adjust the earpiece or loudspeaker volume.

During a call, press to increase or to decrease the volume.

# Redial

The last 10 numbers dialled are stored in the redial list.

- 1. Press to open the redial list. The most recently dialled number is displayed. If the number matches an entry stored in the handset phonebook, the name is displayed.
- 2. Scroll or at to the number or name you want.
- 3. Press **a** to redial the entry displayed.

#### Delete a number from the redial list

- 1. Press then scroll or to the entry you want.
- 2. Press **※**. *□ELETE ?* is displayed, press **⊘**.

#### Delete the entire redial list

- Press not to open the redial list, then press and hold .
   Display shows DELETE RLL ?.
- 2. Press to confirm or to cancel.

Each number saved in the redial list can be up 32 digits long.

Display the name or number When name is displayed, you can switch between the name and number by pressing .

#### 20 Using your phone

## Copy a redial number to the phonebook

- 1. Press then scroll or or through the list to the entry you want.
- 2. Press . The displays shows RDD?. Press again.
- 3. Use the keypad to enter or edit the name, then press .



- 4. Edit the number if necessary, then press . MELODY 1 is dispayed.
- 5. Scroll and and to select a ringtone and press to confirm. The entry is stored.

#### **Keypad lock**

You can lock the handset keypad to prevent accidental dialling while carrying it around.

You do not need to unlock the keypad to answer a call, just press or lift the handset as normal.

- 1. To lock the keypad press and hold until the display shows the  $o \rightarrow$  icon.
- 2. To unlock the keypad press any button, the display shows PRESS \*.
- 3. Press within 3 seconds.

### **Paging**

You can alert handset users that they are wanted or locate a missing handset. Paging calls cannot be answered by a handset.

1. Press Page on the base. All handsets registered to the base will ring. To stop the ringing, press any button on a handset or press Page again on the base.

# Using the phonebook

You can store up to 50 name and number entries on each BT Freelance XD 1500/1550 handset registered to your base.

Each name can be up to 12 characters long and each number up to 20 digits long.

You open the phonebook with the button.

#### Add an entry

For each entry you store, you can select one of 10 different ringtones. For example, you can assign one ringtone to friends and family and another ringtone to other callers.

1. Press . The displays shows PHONE BOOK. Press .

To assign a ringtone to a specific caller you must subscribe to a Caller Display Service from your network provider. For more information, see page 26.

#### 22 Using your phone

#### **Entering names**

Use the keypad to enter the letters shown on each button.

For example to store TOM:

Press  $^{89}$  once to enter T.

Press three times to enter 0.

Press once to enter [].

If the next letter you want to enter is on the same button, wait a moment then press the button.

Press to delete an incorrect character or digit.

To enter a space press 1.



#### Display the name or number

When name is displayed, you can switch between the name and number by pressing .

- 2. The displays shows RDD ENTRY. Press .
- 3. The displays shows NRME ?. Use the keypad to enter the name and press .
- 4. The displays shows NUMBER ?. Use the keypad to enter the phone number and press . It's best to enter the full number, including the area code (see 'Caller Display' on page 26).
- 5. Press or to select the ringtone you want.
- 6. Press ot to confirm. ADD ENTRY is displayed. You can now enter your next name and number or press twice to return to standby.

### Dial from the phonebook

- 1. Press (a) to open the phonebook. The III icon is displayed.
- 2. Scroll or to the entry you want.

Or, search alphabetically by entering the first letter of the name. The first name that starts with this letter or the nearest letter in the alphabet will be displayed. You can 

3 Press **a** to dial or **t** to return to standby.

### **Edit an entry**

- 1. Press . The displays shows PHONE BOOK. Press again.
- 2. Scroll to ۩ODIFY ENTRY and press ✓.
- 3. Scroll or to the entry you want edit, or search alphabetically and press .
- Press to delete the name if required, then enter the new name and press .
- 5. Press **⊗** to delete the number if required, then enter the new number and press **⋄**.
- 6. If required, select a new melody then press ot to confirm.
- RDD ENTRY is displayed. You can now enter your next name and number or press twice to return to standby.

#### **Delete an entry**

- 1. Press ♣ The displays shows PHONE BOOK. Press ✔ again.
- 2. Scroll 

   to □ELETE ENTRY and press 
   ...
- 3. Scroll or to the entry you want delete, or search alphabetically.
- 4. Press **◆**. Display shows *CONFIRM* ?.
- 5. Press to confirm or to cancel.

## 24 Using your phone

See *page 48* for more information on registering and using additional handsets with your BT Freelance XD 1500/1550 base.

The handset number is displayed on standby screen of each handset, eg. *HS 1*.

# Internal calls

If you have more than one handset registered to your base, you can:

- make internal calls between handsets.
- transfer an external call from one handset to another
- hold a conference call between two internal handsets and an external call
- make an internal call between two handsets while a third is on an external call

You can have up to 5 handsets registered to your BT Freelance XD 1500/1550 base.

#### Make an internal call

Press then enter the handset number (1-5) you want.
 The f<sub>NT</sub> icon is displayed to indicate an internal call.

#### Receive an internal call

- The INT icon is displayed to indicate an internal call and the number of the handset calling you.
  - Press **a** to answer the call.

#### Transfer an external call

You can transfer an external call to another handset registered to your base.

- 1. During an external call, press . Your caller is put on hold.
- 2. Enter the number of the handset you want to transfer the call to.
- 3. When the other handset answers press to transfer the call. If the other handset does not answer, press to speak to your external caller again.

#### 3-Way call

You can hold a three-way conversation between an external caller and another handset user.

- 1. During an external call, press . Your caller is put on hold.
- 2. Enter the handset number you want to invite.
- When the handset answers, press and hold to connect all three callers. The icon is displayed to indicate a 3-way call.
- 4. If the other handset does not answer, press to return to your external caller.
- 5. Press **a** to end the call.

# If the other handset user does not answer:

You can reconnect to your external caller by pressing (iii).

Or, if the other handset user does not answer after 30 seconds you will be automatically reconnected to your external caller.

# Caller Display & the Calls list

For more information on Caller Display and BT's other Calling Features, call BT on Freefone 0800 800 150.

During a call, the caller's details are replaced by the call timer after 15 seconds. To review the calls list after the call, press and then press to switch between the caller's details and call timer.

#### Caller information

The display can show the first 12 characters of phone numbers and names. For this feature to work you must subscribe to a Caller Display Service.

With some incoming calls, the telephone number of the caller is not available and cannot therefore be displayed. In this case some explanatory information will be displayed.

**WITHHELD** The caller has withheld their number.

UNAVAILABLE The number is unavailable.

RINGBACK Ringback call.

INT NATIONAL International call.

OPERATOR Call from operator

PRYPHONE Call from a payphone

# Caller Display

Caller Display shows who is calling and if the caller's number matches an entry stored in the phonebook, the name will be displayed as well.

To use Caller Display you must first subscribe to your network provider's Caller Display service. A quarterly fee is payable.

Caller Display information contains the full telephone number, including the area code. So when storing numbers in the phonebook remember to include the area code, otherwise the caller's number will not match.

# Calls list

The Calls list stores details of your last 40 calls received, including the phone number and date and time of the call.

The Calls list also alerts you to unanswered calls. When you have unanswered, or 'new calls', the 🕾 icon flashes in the display.

The list is shared between all handsets registered to the base. When the Calls list is full, the most recent calls received automatically replace the oldest calls.

You open the Calls list with the M button.

#### View the Calls list

- 1. Press to open the Calls list. If there are no calls in the list, the display shows ENPTY.
- 2. Press or to scroll through the list. When the icon is displayed, this call was *answered*; when the icon is displayed, the call was *unaswered*. When you reach the end of the list, the handset will beep.

If the caller's number exactly matches an entry stored in the handset phonebook, the display will alternate between the name and the number.

Press to see the caller's number.

Press again to see the time and date of the call.

Pressing again will give you the option to add this entry in the phonebook if it's not already stored. (See following page).

#### Dial a number in the Calls list

- 1. Press then scroll or through the list to the entry you want.
- 2. Press **c** to dial the displayed entry.

If the telephone number is longer then 12 digits, the ▶ icon is displayed. Press again to see the complete number.

### Caller Display & the Calls list

28

### Copy a number to the phonebook

- 1. Press then scroll or or through the list to the entry you want.
- 2. Press . The displays shows RDD?. Press again.
- 3. Use the keypad to enter or edit the name, then press .



- 4. Edit the number if necessary, then press .
- 5. Scroll and to select a ringtone and press to confirm. The entry is stored.

#### **Delete an entry**

- 1. Press then scroll or through the list to the entry you want.
- 2. Press **※**. Display shows □ELETE ?.
- 3. Press \(\text{\text{\$\sigma}}\) to confirm or press \(\text{\text{\$\sigma}}\) to cancel.

#### Delete the entire Calls list

- 1. Press ...
- 2. Press and hold **S**. Display shows □ELETE RLL ?.
- 3. Press to confirm or press to cancel.

# Using the answering machine

Your BT Freelance XD 1500/1550 can digitally record up to 11.5 minutes of messages. As well as recording incoming messages, you can record memos for other users.

You can operate your answering machine from:

- · the base:
- or remotely, from any other Touchtone<sup>™</sup> telephone, see page 34.

You will need to set the correct day and time (if you have not already done so) so that you will know when each message was received, see page 10.

#### Switch the answering machine on/off

Press . The machine announces the setting, for example "Answer Off".

# Listening to your messages

1. Press . The number of messages is announced, and the oldest message is played first.

To check current day and time setting
Press the button.

#### Ready to record

The answering machine is pre-set to ON.

## Using the answering machine

30

## Play new messages only

1. Press and hold until you hear "You have 'n' new messages." Your new messages will be played.

During playback:

Press , to pause a message. You will hear a beep every 10 seconds.

Press again to resume playback.

Press **t** o play the next message.

Press once to repeat the current message.

Press w *twice* to play the previous message.

Press to delete the current message. You will hear, 'Message deleted'.

Press and hold to play messages at 1.5 times normal speed. Release the button to continue playback at normal speed.

Press to return to the current answering machine mode On or Off.

At the end of playback:

You will hear 'End of messages. To delete all messages, press delete'. You then have 8 seconds in which you can:

a. Press of to delete all messages, you will hear 'All'

#### Adjust the speaker volume

You can adjust the base loudspeaker volume from low to high.

Press • to increase the volume, or • to decrease the volume.

If you select a message to be deleted, it will be deleted at the end of playback after the 8 second countdown and confirmation tone.

messages deleted'.

 Press to cancel message deletion. This will also save any messages you have selected individually for deletion.
 Any messages not deleted will be saved.

You will hear a beep to confirm when 8 seconds has elapsed.

# Outgoing messages (OGMs)

The outgoing message is the message a caller first hears when the answering machine picks up their call.

Your BT Freelance XD 1500/1550 has two pre-recorded outgoing messages, Answer & Record or Answer Only, and you can also record your own.

#### Record your own OGM

This will replace the pre-recorded or your own previous outgoing message. However, you can re-instate the pre-recorded OGM at any time by deleting your own recorded OGM.

At the base:

- Press and hold of until prompted to select which type of OGM you want to record.
- 2. Press and keep holding to select Answer & Record

#### **Answer and Record**

The pre-set Answer and Record outgoing message, that allows your caller to leave a message, is "Hello, your call cannot be taken at the moment, so please leave your message after the tone".

#### **Answer Only**

With Answer Only selected, your caller will hear an announcement only and will not be able to leave a message. The pre-set Answer Only outgoing message is "Hello, your call cannot be taken at the moment and you cannot leave a message. So please call later".

If recording your own Answer Only message, remember to advise your caller that they will not be able to leave a message.

To reinstate either pre-recorded message, delete your own message.

## 32 Using the answering machine

or **(a**) to select Answer Only. The machine announces "Please speak after the tone".

- 3. Whilst still holding or speak your message slowly and clearly, close to the base.
- 4. To end recording, release the or button.

### **Check your current OGM**

 Press on the base. The machine announces the type of OGM and plays it.

### Select the OGM

- 1. Press and hold on the base until prompted to select your type of OGM.
- 2. Press to select Answer & Record or to select Answer Only. The message you select is played.

#### Re-instate the pre-recorded OGM

You can delete your own outgoing message and return to the pre-recorded outgoing message.

- 1. Press om on the base.
- 2. While your message is being played, press 📵.

You cannot delete the pre-recorded OGMs

# Answer delay

Answer delay sets the number of times your BT Freelance XD 1500/1550 will ring before the answer machine picks up your call and starts playing the outgoing message.

You can change this setting to between 2-9 rings or Time Saver. The default setting is 6 rings.

 Press and hold the button and release after the number of rings required.

# Record a memo

You can record memo messages for other users and can be played back just like a normal message. Memo's can only be recorded through the answer phone base.

- 1. Press and hold .
- 2. Record your memo. Release the button to end recording.

# Call screening

When the answering machine is on and takes a call, you can use the loudspeaker to listen to the caller leaving a message.

#### Time saver

When you call from another phone to access your messages remotely, if your answering machine is set to time saver and you have new messages it will answer after 2 rings, if you do not have any new messages, it will answer after 6 rings. This means you can hang up after 3 rings knowing you have no new messages, saving you time and the cost of the call. Your handset will automatically return to standby if no button is pressed for 15 seconds or more.

### Using the answering machine

34

# Your BT Freelance XD 1500/1550 can store up to a maximum of 12 minutes recording or 59 messages.

# Memory full

If there is less than 35 seconds recording time left in the memory, the caller will hear, "Please complete your call within 35 seconds", after the outgoing message and before recording tone.

If the memory becomes full during recording the machine announces, "Thank you for calling", and ends the call.

When the memory is full, the machine automatically switches to the Answer Only outgoing message.

# Remote access

You can operate your answering machine from any Touchtone™ phone by calling your BT Freelance XD 1500/1550 and entering a 3 digit security PIN code.

The default PIN setting is 000. To change it, see 'Set the security PIN code' on page 36. Using a PIN code prevents other people from accessing your machine without permission.

# Operating your answering machine from another phone

 Dial your telephone number. When you hear your outgoing message, press \*. The machine announces, "Please enter your security code".

- 2. Enter your 3-digit PIN (default setting 000) within 8 seconds. You will hear, 'You have 'n' new messages' and they will be played back.
- 3. If you have no new messages, you will hear, "You have no new messages, to hear main menu press 1". If you do not press 1 within 8 seconds, the machine hangs up.

When you press 1, you will hear the main menu. Simply follow the instructions as announced:

'To play all messages press 2'.

'To play new messages press 3'.

'To skip back during messages press 4'.

'To delete during messages press 5'.

'To skip forward during messages press 6'.

'To set answer on or off press 7'.

'To hear the outgoing message menu press 8'.

'To set a new security code press 9'.

'To hear main menu again press 1'.

'To set day and time press 0'.

When the last message is played you will hear, "End of messages".

If you enter the incorrect PIN code you will be allowed one further attempt, if it is still incorrect you will hear 'Incorrect security code, thank you for calling' and your BT Freelance XD 1500/1550 will hang up.

During playback, press  ${\bf 2}$  to pause and resume messages. You have up to  ${\bf 1}$  minute to resume playback or the machine hangs up.

# Using the answering machine

36

#### Set the security PIN code

At the base:

- 1. Press and hold on until the machine announces, "Security code setting. First digit".
- 2. Press or until the first digit you want is announced.
- 3. Press the machine announces "Second digit" and starts counting.
- 4. Press when the number you want is announced.

  The machine announces "Third digit" and starts counting.

#### Check security code

1. Press on at the base. The security code is announced.

## Alarm clock (BT Freelance XD 1550 only)

The BT Freelance XD 1550 Additional Handset Charger has a built in alarm clock.

The alarm rings at the handsets and the handset display shows *RLRRII ON*. The alarm ring is the standard internal call ring.

## Setting the clock

There are 3 buttons on the underside of the charger **Mode**, **Set** and **Up**.

- 1. On the underside of the charger, press **Mode**. The hour flashes in the display.
- Press Up until the correct hour is shown (1–12).
   Then press Set to confirm. The minutes display flashes.
- Press Up until the correct minute is shown. Then press Set to confirm.
- 4. Press **Up** to select AM or PM and press **Set** to confirm.
- 5. Press **Mode** *twice* to display the clock.

### 38 Alarm clock

Once set and switched to On, the alarm will go off at the same time each day.

To prevent the alarm going off every day, switch the setting to Off.

## Setting the alarm

At the charger:

- Press Mode twice. The hours flash and the Alarm Set light comes on.
- Press Up until the correct hour is shown (1–12).
   Then press Set to confirm. The minutes display flashes.
- Press Up until the correct minute is shown. Press Set to confirm.
- 4. Press **Up** to select AM or PM and press **Set** to confirm.
- 5. Press **Up** to turn the alarm On or Off.

When switched On, the Alarm On light on the charger will flash.

6. Press Mode to confirm.

At the handset:

- 1. Press ♠ scroll ♠ to #RNDSET and press ✔.
- 2. Scroll to RLARM SET and press .
- 3. Press or to select ON or OFF and press .

If you selected ON

Scroll **™** to *CLOCK SET* and press **▽**.

Use the keypad to set the time you want the alarm to go off using the 24 hour format, e.g. **0730** for 7.30 am.

4. Press oto confirm.

#### Silence the alarm

Press on the top of charger.

Or, press any button on the handset to silence the alarm.

If no button is pressed, the alarm will stop automatically after 60 seconds.

If the alarm sounds while you are on a call, you will hear beeps. Press any button to stop the alarm.

If the phone is ringing when the alarm goes off, you will not hear the alarm ring.

# Handset settings

While the phone is ringing you can adjust the ringer volume by pressing or ...

Calls from numbers stored in the phonebook will ring using the ringtone set when storing the entry.

#### Handset ringer volume

You can adjust the ring volume and set different levels for internal and external calls. Choose from 5 levels and Off.

- 1. Press ♠, scroll ♠ to HRNDSET and press ✔.
- 2. Scroll to INT RING VOL or EXT RING VOL and press .
- 3. Press  $\bigcirc$  or  $\bigcirc$  to select the volume (1–5 or OFF).
- 4. Press to confirm or to return to the previous menu.

## Handset ringer melody

You can set different ringer melodies for internal and external calls. Choose from 10 different melodies.

- 1. Press , scroll  $\bullet$  to *HRNDSET* and press  $\bullet$ .
- 2. Scroll to EXT MELODY or INT MELODY then press .
- 3. Press or to select the ringer melody (1 to 5).
- 4. Press 🕜 to confirm or to 🐼 return to the previous menu.

Calls from numbers stored in the phonebook will ring using the ringer melody set when storing the entry.

#### Handset name

You can give your handset a name according to use, eg. Kitchen or Michael. The name appears in the display.

- 1. Press , scroll to HRNDSET and press .
- 2. Scroll **™** to *NAME* and press **●**.
- Enter the new handset name and press to confirm.
  The handset name will only be displayed for approximately 5 seconds.

### Language

- 1. Press , scroll to HRNDSET and press .
- 2. Scroll  $\coprod$  to LANGUAGE and press  $\checkmark$ .
- 3. Scroll up to select your preferred language and press to confirm.

## Keypad beep on/off

Whenever you press a button on the handset keypad, the handset gives a beep. You can switch these beeps on or off.

- 1. Press ♠, scroll ♠ to HRNDSET and press ✔.
- 2. Scroll 

  to BEEP and press 

  ...
- 3. Scroll **⚠** to KEYTONE and press **⊘**.
- 4. Press or to select ON or OFF and press to confirm.

If you make a mistake press  $\bigotimes$  to delete an incorrect character or digit.

See 'Entering names' on page 22 for help on entering names.

Your language options are:

ENGLISH FRANCAIS ESPANOL ITALIANO DEUTSCH NEDERLANDS PORTUGUES DANSK SUOMALAINEN SVENSKA NORGE EAVHUIKA PYCCKUM

## 42 Handset settings

### Battery low warning beep on/off

- 1. Press , scroll to HRNDSET and press .
- 2. Scroll 

  to BEEP and press 

  ✓.
- 3. Scroll  $\blacksquare$  to LOW BRTTERY and press  $\bigcirc$ .

## Out of range warning beep on/off

- 1. Press ♠, scroll ♠ to HRNDSET and press ✔.
- 2. Scroll to *BEEP* and press .
- 3. Scroll 

   to □UT RANGE and press 
   ...

## Keypad lock via the menu

You can use the menu to lock the keypad.

- 1. Press ♠, scroll ♠ to HANDSET and press ✔.
- 2. Scroll to KEY LOCK ? and press to confirm. The display shows the o→ icon.

To unlock the keypad, press any button on the keypad, then press within 3 seconds.

See also 'Keypad lock' on page 20 for quick lock and unlock settings.

#### **Auto answer**

Your phone is set to answer calls by lifting the handset off the base or charger. You can switch this feature off so that calls always have to be answered by pressing .

- 1. Press , scroll to HANDSET and press .
- 2. Scroll 

  to RUTO RNSWER and press 

  ✓.
- 3. Press or to select ON or OFF and press to confirm.

#### Set the date

- 1. Press  $\stackrel{\text{Meno}}{\bullet}$ , scroll  $\stackrel{\text{L}}{\bullet}$  to DRTE-TIME and press  $\checkmark$ .
- 2. Display shows DRTE SET, press ✔.
- 3. Use the keypad to enter the date, e.g. 12--08 for 12th August.
- 4. Press to confirm.

#### Set the time

- 1. Press , scroll to DRTE-TIME and press .
- 2. Scroll to CLOCK SET and press ◆.
- 3. Use the keypad to set the time in the 24 hour format, e.g. 18--30 for 6.30 pm.
- 4. Press **t**o confirm.

If you have subscribed to your network's Caller Display service, the day and time will be set on the handset automatically.

## 44 Handset settings

#### To silence the alarm

When the alarm goes off, press any button to turn it off.

#### Set the alarm

- 1. Press ♠, scroll ♠ to DRTE-TIME and press ✔.
- 2. Scroll to RLRR۩ SET and press ...
- 3. Press ♠ or ♠ to select ♠ or ♠ and press ✔.
- 4. Use the keypad to enter the time you want to alarm to go off, e.g. 07--30 for 7.30 am.

# Base settings

## Base ringer volume

You can choose from 5 volume levels and Off.

- 1. Press ♠ scroll ♠ to SETUP and press ✔.
- 2. Display shows *BRSE VOLUME*, press **⊘**.
- 3. Press  $\bigcirc$  or  $\bigcirc$  to select the volume (1–5 or OFF).
- 4. Press ot to confirm or to return to the previous menu.

## Base ringer melody

Choose from 5 different base ringer melodies.

- 1. Press ♠ scroll ♣ to SETUP and press ✔.
- 3. Press or to select the ringer melody (1 to 5).
- 4. Press ot to confirm or to return to the previous menu.

## 46 Base settings

#### IMPORTANT

If you change the base PIN, make sure you keep a record of the new number on *page 51*.

## Change base PIN code

Some functions are protected by a 4 digit PIN code which must be entered if you want to change the settings. The default PIN is 0000.

- 1. Press , scroll to *SETUP* and press .
- 2. Scroll ♣ to PIN CODE and press ✔.
- Enter the *current* 4 digit PIN code (default: 0000) and press
- 4. Enter your *new* 4-digit PIN and press .
- 5. Re-enter the new PIN again and press ot to confirm.

#### Dial mode

Your BT Freelance XD 1500/1550 is set to Tone dialling. In the UK, you should only need to change this if connected to an older type of switchboard/PBX which requires Pulse dialling.

- 1. Press , scroll to SETUP and press .
- 2. Scroll to DIRL MODE and press ◆.
- 3. Press or to select TONE DIAL or PULSE and press .

#### Reset

You can reset your phone to its default settings.

- 1. Press ♠ scroll ♠ to SETUP and press ✔.
- 2. Scroll 

  to □EFRULT and press 

  .
- 3. Enter the 4 digit PIN code (default: 0000) and press .
- 4. Display shows *CONFIRMP*. Press ✓ to confirm or ▼ to return to the previous menu.

The handset will switch itself off and back on again. All settings will be reset to their default.

## **Emergency default**

If you have lost your PIN code you can still restore your Freelance XD 1500/1550 to its default settings.

- 1. Remove and replace the batteries from the handset.
- 2. Press and hold while inserting the batteries back in. The display shows DEFRULT. Press •.

#### WARNING

Resetting your phone to its default settings will delete any entries in the Phonebook, Redial and Calls list and will reset the clock and alarm settings.

#### Default settings

## Additional handsets and bases

#### Please note

Handsets that were supplied with your BT Freelance XD 1500/1550 base are already registered to it as *H5-1*. *H5-2* etc.

Each *additional* handset you buy must be registered with the base.

#### **IMPORTANT**

Before registration, make sure the handset batteries are *fully charged* and that you are close to the base.

Up to 5 handsets can be registered and operated from the BT Freelance XD 1500/1550 base.

Each handset can be registered with up to four bases.

If you buy new handsets to use with your BT Freelance XD 1500/1550 they will have to be registered to the base before you can use them.

## Register a new BT Freelance XD 1500/1550 handset to your BT Freelance XD 1500/1550 base

- 1. At the base: Press *and hold* Poor 3 seconds until you hear two beeps. You now have *90 seconds* to register the handset.
- 2. At the handset: press , scroll to REGISTER and press .
- 3. Scroll 

  to REG BRSE and press 

  ...
- 4. Enter the base number (1–4). The numbers flashing are already in use.
- 5. Press . When the handset finds the base signal, the base identification number is displayed.
- The display will ask for the PIN to be entered. Enter the PIN (the default setting: 0000). You will hear a beep. The handset is now registered.

#### Additional handsets and bases

If the base is not found after a few seconds, the handset returns to standby. Try registering again.

When a handset is registered to a base, it is automatically assigned a number which is displayed on the handset and must be used for internal calls.

If registration does not work:

- Try again selecting a different base number.
- Make sure there is no other electrical equipment very close by that may interfere with the registration signal.

## Register a different make of handset to your BT Freelance XD 1500/1550 base.

- 1. At the base: Press *and hold* Page for 3 seconds until you hear two beeps. You now have *90 seconds* to register the handset.
- 2. At the handset: Follow the registration instructions given in your handset's user guide.

## Selecting a base

When your handset is registered to more than one base, for example, one at work and one at home, you can select the base you want it connected to.

#### Naming additional handsets

Once you have registered additional handsets you may wish to give them a different name, see page 41.

#### IMPORTANT

DECT GAP Profile only guarantees that basic calling-functions will work correctly between different makes/types of handset and base. There's a possibility that certain services such as Caller Display will not work correctly.

Handsets can be registered with up to 4 bases

#### Additional handsets and bases

50

If you select *RUTO*, your handset will automatically search for and connect with the base with the strongest signal.

- 1. Press  $\stackrel{\text{Men}_U}{\rightleftharpoons}$ , scroll  $\stackrel{\text{Men}_U}{\rightleftharpoons}$  to *REGISTER* and press  $\checkmark$ .
- 3. Enter the PIN code (default setting: 0000).
- 4. Scroll or to display the base you want or AUTO. The currently selected base number flashes.
- 5. Press to confirm or to cancel.

## De-register a handset

You can use one handset to de-register another handset. You cannot de-register the handset you are using.

- 1. Press  $\stackrel{\text{\tiny Menu}}{\bullet}$ , scroll  $\stackrel{\text{\tiny A}}{\bullet}$  to SETUP and press  $\checkmark$ .
- 2. Scroll 

   to DEL HANDSET and press 

  .
- 3. Enter the PIN code (default setting: 0000) and press .
- Enter the handset number. You will hear a confirmation beep and the display will return to the DEL HANDSET menu.

## Help

Most problems are caused by the telephone and mains power cables being incorrectly connected, not connected at all, or by the power being turned off.

If you are experiencing a problem with your BT Freelance XD 1500/1550, check the following:

- That the mains power supply is correctly connected at both the base and at any chargers, and that the power is switched on at the wall socket.
- That the telephone line cord is correctly connected.
- That the handset batteries are installed correctly and charged.

## No display

- Check that the batteries are correctly inserted into the handset and fully charged.
- Check that the handset is switched on. Press <sup>®</sup>.



## No dial tone

- Check that the telephone line cord is properly connected.
- Another handset may be using the line. Wait for the other handset to hang up.

#### **Customer Helpline**

If you experience any difficulties please call the BT Freelance Helpline on 0870 605 8047.

Lines are open 9am - 5.30pm. Monday to Friday and 9.30am -2.30pm on Saturdays.

#### For your records

Date of purchase:

Place of purchase:

Serial number:

For guarantee purposes proof of purchase is required so please keep your receipt.

Enter your phone's base PIN code here:

For more information on your PIN code, see page 46.

## 52 Help

## icon flashing

- Handset is out of range. Move closer to the base.
- Check the mains power is connected and switched on.
- Handset not registered to the base. To register a handset, see page 48.

## Base or handset does not ring

 Check that the ringer volume has not been set too low or Off, see page 40.

## Keypad does not seem to work

- Check that the keypad lock is not on, see *page 20*.
- Try removing the batteries and putting them back again.

# Incoming caller's number is not displayed even though you have Caller Display

• Caller has to allow their number to be sent. It has been withheld or is unavailable.

## When connected to a switchboard you cannot transfer a call

- The Flash duration is too short.
- Change the Flash duration, see page 56.

## Answering machine will not record new messages

- Is the recording memory full? Play and delete messages, see pages 29-30.
- Is the OGM set to Answer Only? Change the OGM to Answer & Record, see *page 31*.

## **General Information**

#### **IMPORTANT**

This equipment is not designed for making emergency telephone call when the power fails. Alternative arrangements should be made for access to emergency services.

This product is intended for connection to analogue public switched telephone networks and private switchboards in the United Kingdom.

## Safety

- Only use the power supply suitable for the BT Freelance XD 1500/1550 range. Using an
  unauthorised power supply will invalidate your guarantee and may damage the telephone.
- For the handset, use only AAA NiMH batteries with a minimum capacity of 550mAh.
- Never use other batteries or conventional alkaline batteries as this could lead to a short circuit or destroy the battery casing.
- Do not open the handset (except to replace the handset batteries). This could expose you to high voltages or other risks.
- Radio signal transmitted between the handset and base may cause interference to hearing aids.
- It is recommended that advice from a qualified expert be sought before using this product in the vicinity of emergency/intensive care medical equipment.
- It is recommended that if you have a pacemaker fitted you check with a medical expert before using this product.
- Never dispose of batteries in a fire. There is a serious risk of explosion and/or the release of highly toxic chemicals.

## Cleaning

- Simply clean the handset and base with a damp (not wet) cloth, or an anti-static wipe.
- Never use household polish as this will damage the product. Never use a dry cloth as this
  may cause a static shock.

#### **Environmental**

- · Do not expose to direct sunlight.
- The product may become warm when the batteries are being recharged. This is normal.
   We recommend that you do not place the product on antique/veneered wood to avoid damage.
- Do not stand your product on carpets or other surfaces which generate fibres or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- Do not expose your product to fire, explosive or other hazardous conditions.
- There is a slight chance your phone could be damaged by and electrical storm.
   We recommend that you unplug the power and telephone line cord during an electrical storm.

## 56 General information

## Connecting to a switchboard

This telephone may be connected to most types of switchboard, however in the event of any difficulties, consult your switchboard Service Provider.

## Dialling mode

Your BT Freelance XD 1500/1550 is set to Tone dialling. Some older switchboards may require Pulse dialling. To change the dialling mode, see Dial Mode, *page 46*.

#### Flash duration

Your BT Freelance is set to a Flash duration of 100ms (RECALL 1) If you are having problems transferring calls when connected to a switchboard, change this to 600ms (RECALL 2).

### Access code and entering a pause

Some internal switchboards may require you to enter an access code (e.g. 9) to get an outside line. So that the switchboard has time to pick up an outside line before the rest of the number is dialled, you may need to add a pause in the dialling sequence. For example: 9 **P** 0870 605 8047.

After the access code, press to insert a pause before entering the telephone number.
The display shows P.

## Guarantee

Your BT Freelance XD 1500/1550 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the BT Freelance XD 1500/1550, or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is required.
- The equipment is returned to BT or its agent as instructed.
- This guarantee does not cover any faults or defects caused by accidents, misuse, fair
  wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or
  repair other than through approved agents.
- This guarantee does not affect your statutory rights.

### Within the 12 month guarantee period

If you experience difficulty using the product, prior to returning your product, please read the Help section beginning on *page 51*, or contact the BT Freelance XD 1500/1550 Helpline for assistance on 0870 605 8047.

## 58 General information

In the unlikely event of a defect occurring, please follow the Helpline's instructions for replacement or repair.

## Outside of the 12 month guarantee period:

If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network. We recommend that you contact BT's approved repair agent, on 0870 240 5029 or a local qualified repairer.

## Technical information

### How many telephones can you have?

All items of equipment have a Ringer Equivalence Number (REN) which is used to calculate the number of items that may be connected to any one telephone line. The BT Freelance 1500/1550 has a total REN of 1, i.e. for a base and up to 6 handsets. Any other instrument provided by BT may be assumed to have a REN of 1 unless stated otherwise.

A total REN of 4 is allowed per telephone line. (For example, if the BT Freelance 1500/1550 is used in conjunction with three extension telephones, each with a REN of 1, then the total = 4.)

#### **R&TTE**

This product is intended for use within the UK for connection to the public telephone network and compatible switchboards.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive (1999/5/EC). In demonstration with the Essential Requirement for efficient use of the radio spectrum, the product complies with EN301 406. For a copy of the Declaration of Conformity please contact the BT Freelance XD 1500/1550 Helpline on 0870 605 8047.

## **BT Accessories and Replacement Items**

For a full range of accessories and replacement items for BT products please call 0870 240 5522 or visit us at www.bt.com.



## Visit us at www.bt.com



#### Offices worldwide

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2005. Registered Office: 81 Newgate Street, London EC1A 7AJ. Registered in England No. 1800000. BT Freelance XD 1500/1550 (09/05) Issue 2 Edition 2 Designed and produced by The Art & Design Partnership Ltd. Printed in China

